



91400

Illustrated Parts List

Model Series

91400

TYPE NUMBERS
0120, 0130.

TABLE OF CONTENTS

Air Cleaner	4
Blower Housing	5
Cams	2
Carburetor	3
Controls	4
Crankcase Cover/Sump	3
Crankshaft	2
Cylinder	2
Flywheel	5
Governor Spring	4
Head	2
Ignition	4
Kits/Gaskets-Carburetor	3
Kits/Gaskets-Valve/Engine	2
Piston	2
Rewind	5
Valves	2


BRIGGS & STRATTON



PRINTED IN U.S.A.







COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.





91400

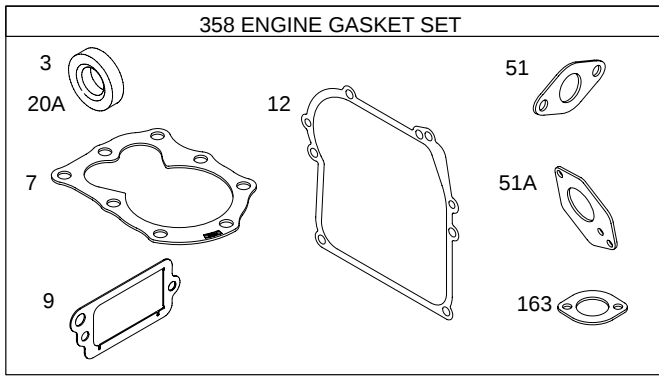


1058 OWNER'S MANUAL

1330 REPAIR MANUAL

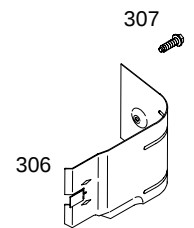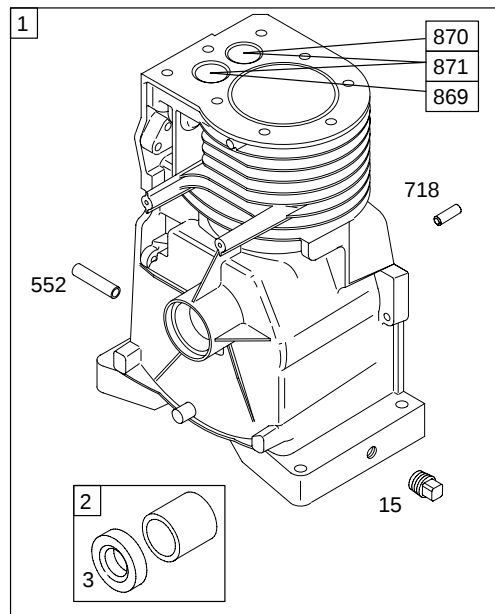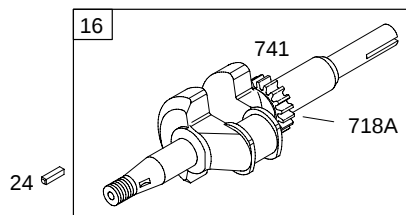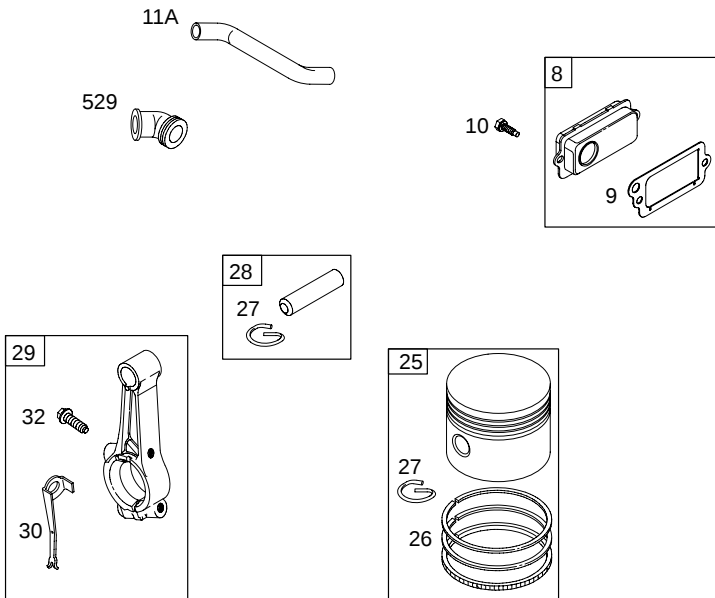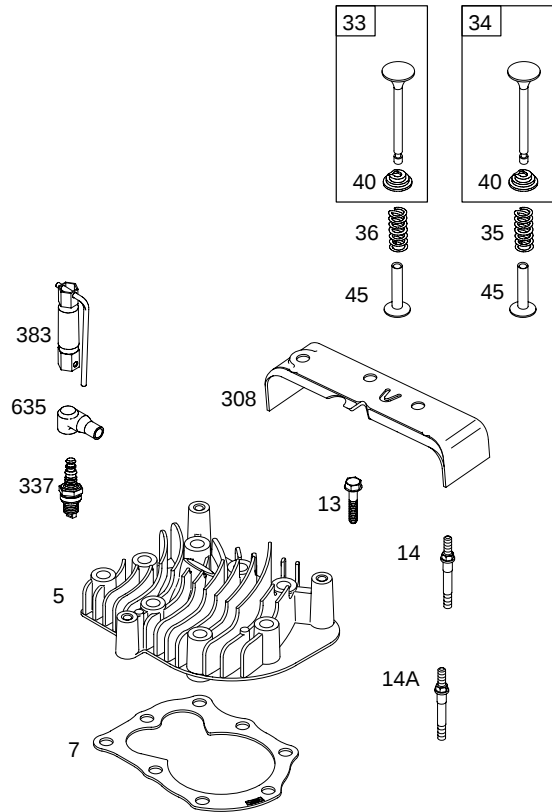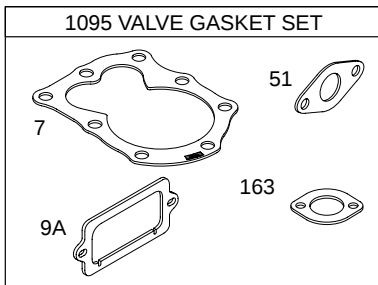

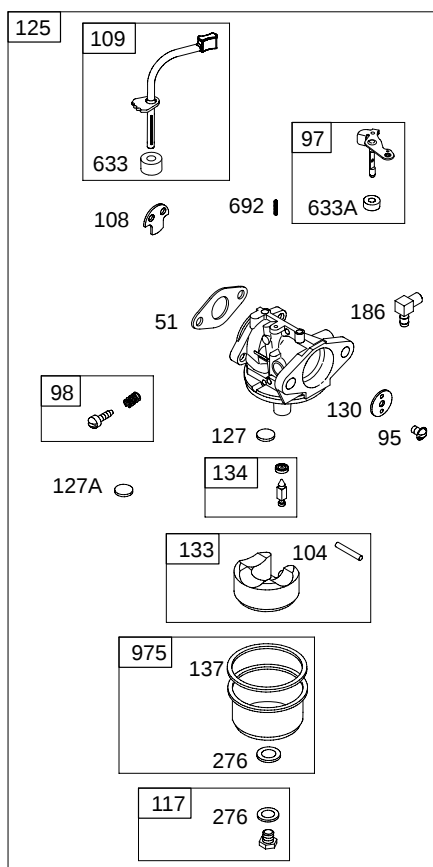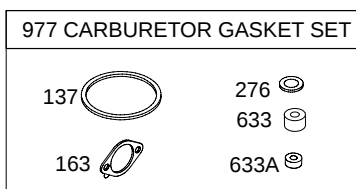
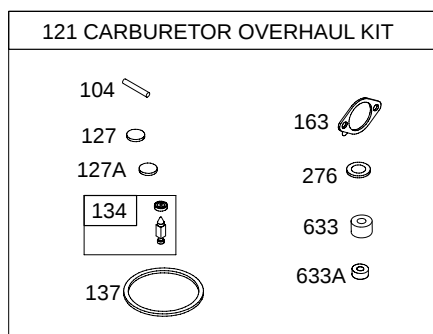
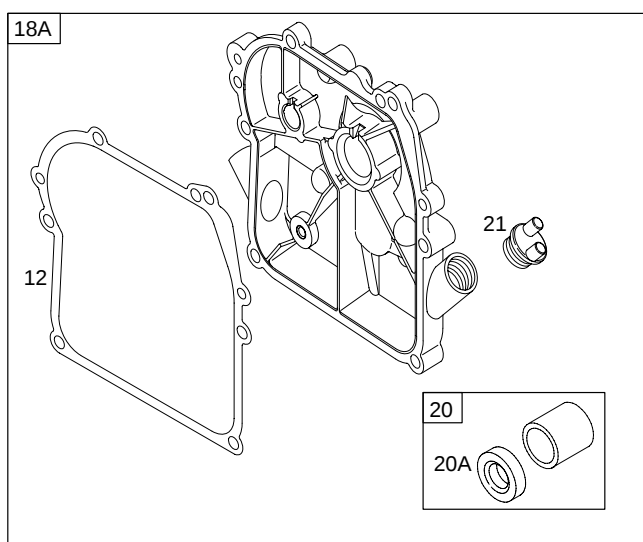


91400

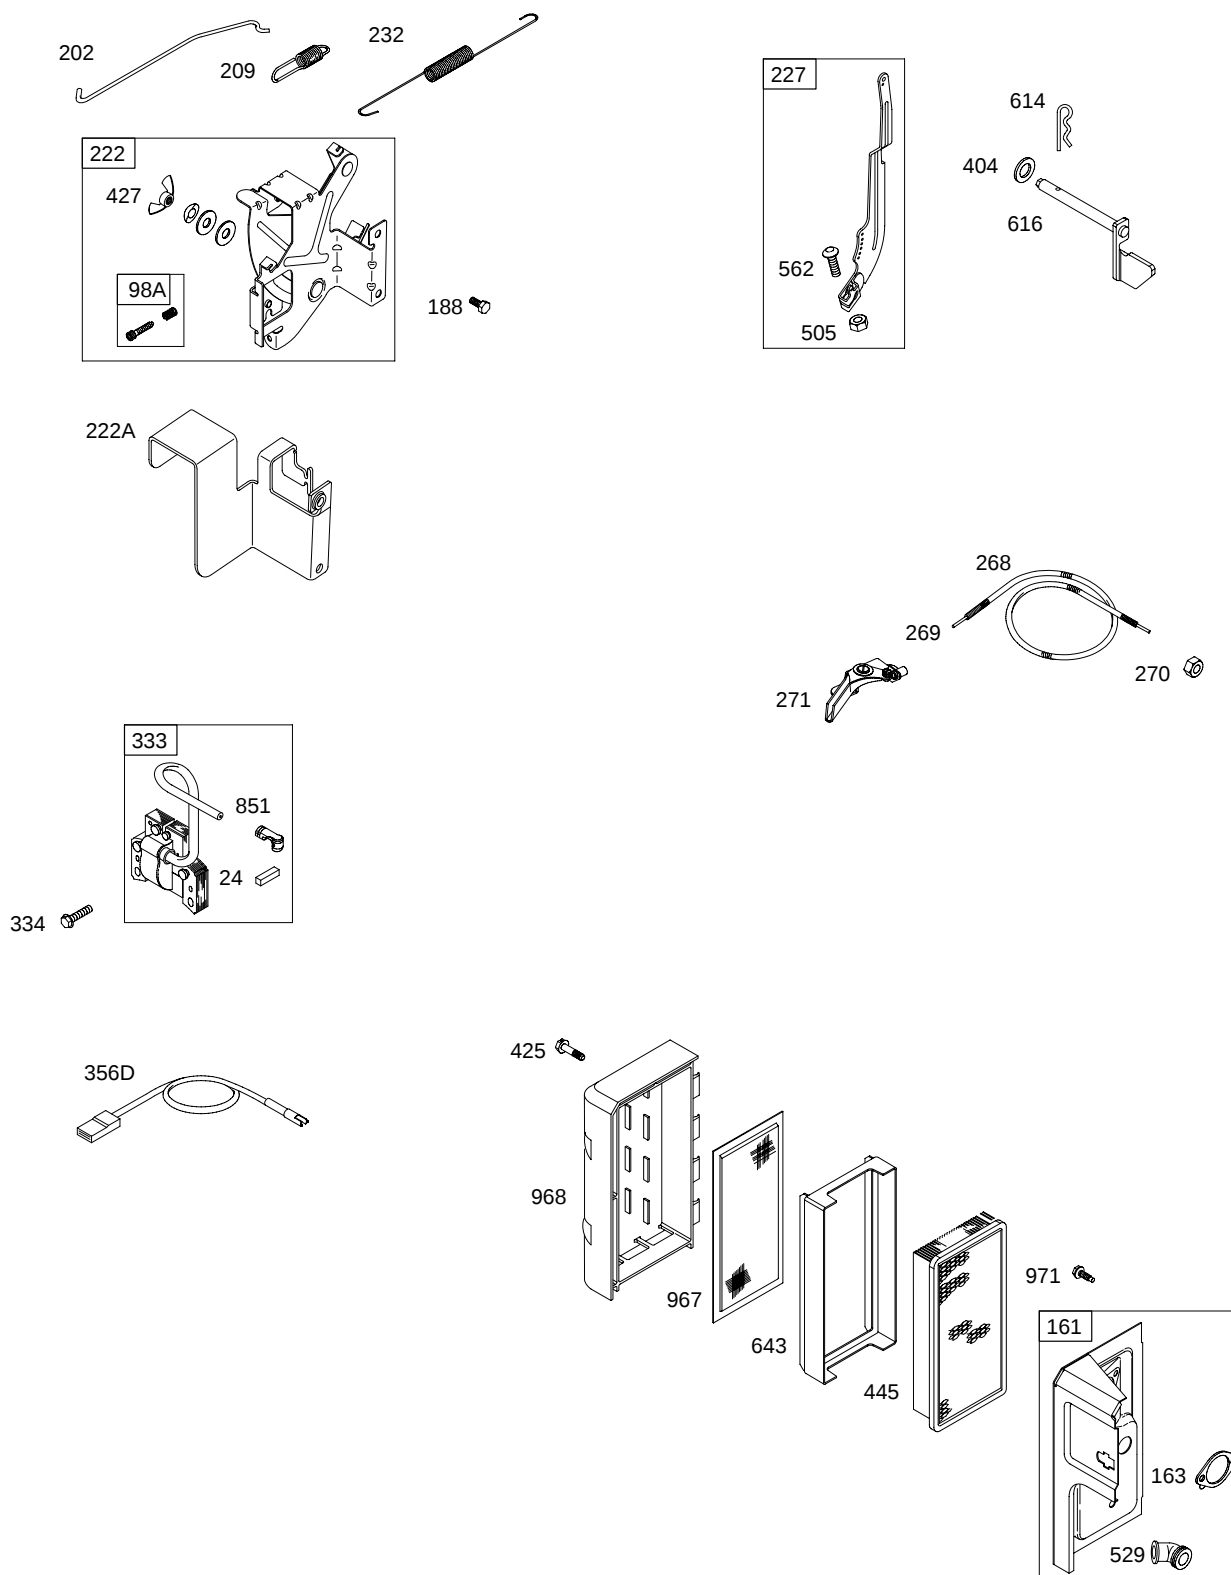

1019 LABEL KIT

1036 EMISSIONS LABEL

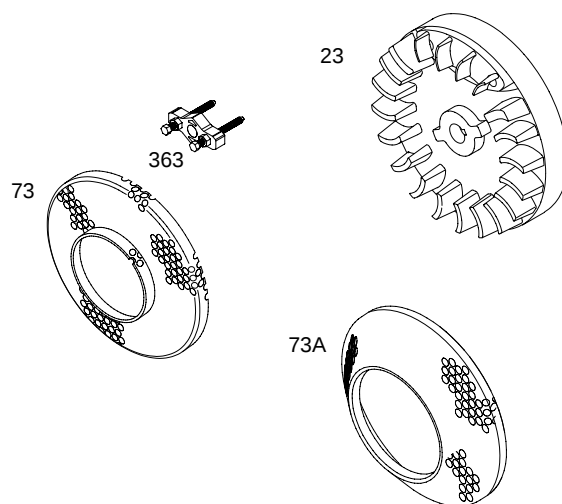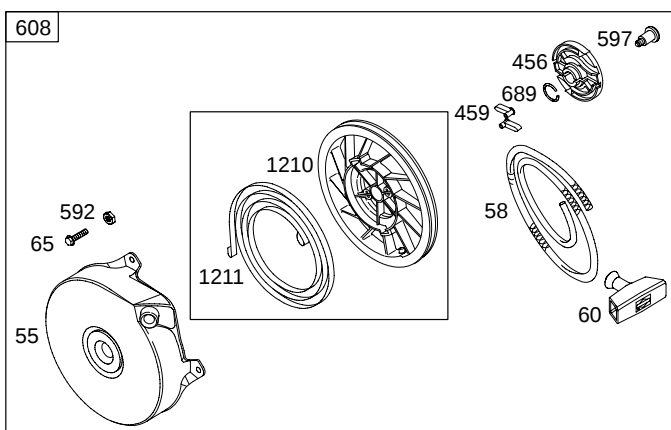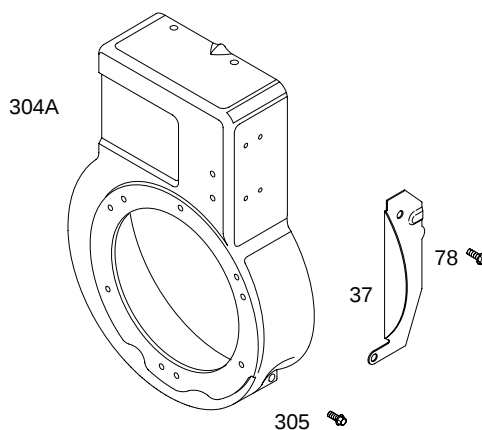

91400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	694161	Cylinder Assembly	23	692009	Flywheel	29	699655	Rod-Connecting (Standard)
2	399269	Kit -Bushing/Seal (Magneto Side)	24	222698	Key-Flywheel			(Used After Code Date 05051800).
3	★299819	Seal-Oil (Magneto Side)	25	790908	Piston Assembly (Standard)			----- Note -----
5	790169	Head-Cylinder			(Used After Code Date 05051800).			294367 Rod-Connecting (Standard)
7	★Ø698717	Gasket-Cylinder Head			----- Note -----			(Used Before Code Date 05051900).
8	699448	Breather Assembly			498668 Piston-Assembly (Standard)	30	691719	Dipper-Connecting Rod
9	695890	Gasket-Breather (Used After Code Date 03031900).			(Used Before Code Date 05051900).	32	691664	Screw (Connecting Rod)
9A	★Ø27549	Gasket-Breather (Used Before Code Date 03032000).	26	790909	Ring Set (Standard)	33	497871	Valve-Exhaust
10	691666	Screw (Breather Assembly)			(Used After Code Date 05051800).	34	296677	Valve-Intake
11A	691246	Tube-Breather			----- Note -----	35	690520	Spring-Valve (Intake)
12	★692218	Gasket-Crankcase (.015" Standard)			695169 Ring Set (Standard)	36	690520	Spring-Valve (Exhaust)
		----- Note -----			(Used Before Code Date 05051900).	37	690463	Guard-Flywheel
		★270895 Gasket-Crankcase (.005")			695172 Ring Set (.020" Oversize)	40	692194	Retainer-Valve
		★270896 Gasket-Crankcase (.009")			(Used Before Code Date 05051900).	45	691762	Tappet-Valve
13	691640	Screw (Cylinder Head)	27	691588	Lock-Piston Pin	46	691998	Camshaft
14	690361	Stud (Cylinder Head) (Used in Positions 6 and 8)	28	699659	Pin-Piston (Standard)	50	691922	Manifold-Intake
					(Used After Code Date 05051800).	51	★Ø692283	Gasket-Intake
					----- Note -----	51A	★273113	Gasket-Intake
14A	690361	Stud (Cylinder Head) (Used in Positions 4, 6 and 8) Used on Type No(s). 0130.			298909 Pin-Piston (Standard)	54	691689	Screw (Intake Manifold)
					(Used Before Code Date 05051900).	55	692144	Housing-Rewind Starter
15	691686	Plug-Oil Drain			298908 Pin-Piston (.005" Oversize)	58	691921	Rope-Starter
16	791473	Crankshaft			(Used Before Code Date 05051900).	60	691915	Grip-Starter Rope
18A	496903	Cover-Crankcase				65	690837	Screw (Rewind Starter)
20	★691356	Seal-Oil (PTO Side)				73	694018	Screen-Rotating (Used Before Code Date 04032900).
20A	★299819	Seal-Oil (PTO Side)				73A	699850	Screen-Rotating (Used After Code Date 04032800).
21	281658	Cap-Oil Fill				78	690364	Screw (Flywheel Guard)
22	691129	Screw (Crankcase Cover) (1 1/4" Long)						
		----- Note -----						
		693732 Screw (Crankcase Cover) (Used in Positions 1 and 6) (7/8" Long) Used on Type No(s). 0120, 0130.						

★ Engine Gasket Set-Reference 358
 ● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
 Ø Valve Gasket Set-Reference 1095

91400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
95	691636	Screw (Throttle Valve)	232	691846	Spring-Governor Link	592	690800	Nut (Rewind Starter)
97	496861	Shaft-Throttle	268	691072	Casing-Control Wire (Cut To Required Length)	597	691696	Screw (Pawl Friction Plate)
98	398185	Kit-Idle Speed (Carburetor)	269	691026	Wire-Control (Cut To Required Length)	608	499706	Starter-Rewind
98A	493280	Kit-Idle Speed (Control Bracket)	270	691027	Nut (Control Wire Casing)	614	691620	Pin-Cotter
104	691242	Pin-Float Hinge	271	691028	Lever-Control	616	692016	Crank-Governor
108	692567	Valve-Choke	276	691716	Washer-Sealing (Float Bowl)	633	693867	Seal-Choke/Throttle Shaft (Choke)
109	496860	Shaft-Choke	304A	694144	Housing-Blower	633A	691321	Seal-Choke/Throttle Shaft (Throttle)
117	498981	Jet-Main (Standard)	305	692198	Screw (Blower Housing)	635	66538	Boot-Spark Plug
118	494870	Jet-Main (High Altitude)	306	690461	Shield-Cylinder	643	691908	Retainer-Air Filter
121	695157	Kit-Carburetor Overhaul	307	691660	Screw (Cylinder Shield)	689	691855	Spring-Friction
125	496863	Carburetor	308	690462	Cover-Cylinder Head	692	690572	Spring-Detent
127	691739	Plug-Welch (5/16" Diameter)	332	690662	Nut (Flywheel)	718	690959	Pin-Locating (Cylinder)
127A	694468	Plug-Welch (3/8" Diameter)	333	496914	Armature-Magneto	718A	499047	Pin-Locating (Crankshaft)
130	691181	Valve-Throttle	334	691061	Screw (Magneto Armature)	741	791124	Gear-Timing
133	398187	Float-Carburetor	337	802592	Plug-Spark	851	493880	Terminal-Spark Plug
134	693981	Kit-Needle/Seat	356D	696030	Wire-Stop	869	691701	Seat-Valve (Intake)
137	691393	Gasket-Float Bowl	358	496865	Gasket Set-Engine	870	691702	Seat-Valve (Exhaust)
161	272948	Base-Air Cleaner	363	19069	Puller-Flywheel	871	262001	Bushing-Valve Guide
163	692317	Gasket-Air Cleaner	365	691688	Screw (Carburetor)	967	492889	Filter-Pre Cleaner
186	691637	Connector-Hose	383	89838	Wrench-Spark Plug	968	691327	Cover-Air Cleaner
188	692351	Screw (Control Bracket)	404	691691	Washer (Governor Crank)	971	690370	Screw (Air Cleaner Base to Carburetor)
202	691858	Link-Mechanical Governor	425	690670	Screw (Air Cleaner Cover)	975	493640	Bowl-Float
209	496786	Spring-Governor (Yellow) Used on Type No(s). 0120, 0130.	427	690355	Nut (Control Bracket)	977	695156	Gasket Set- Carburetor
219	691724	Gear-Governor	445	494511	Filter-Air Cleaner Cartridge	1019	496905	Kit-Label
220	691411	Washer (Governor Gear)	455	691236	Cup-Flywheel	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)
222	698681	Bracket-Control Used on Type No(s). 0120.	456	692299	Plate-Pawl Friction	1058	MS5888	Owner's Manual
222A	691412	Bracket-Control Used on Type No(s). 0130.	459	281505	Pawl-Ratchet	1095	498525	Gasket Set-Valve
227		Lever-Governor Control	505	691251	Nut (Governor Control Lever)	1210	499901	Pulley/Spring Assembly (Pulley)
			529	692187	Grommet (45 Degree)	1211	499901	Pulley/Spring Assembly (Spring)
			552	690508	Bushing-Governor Crank	1330	270962	Repair Manual
			562	92613	Bolt (Governor Control Lever)	1058	MS5888	Owner's Manual
						1095	498525	Gasket Set-Valve

★ Engine Gasket Set-Reference 358
 ● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
 ☼ Valve Gasket Set-Reference 1095

7152-7

Assemblies include all parts shown in frames.

09/02/2005