



94300

Illustrated Parts List

Model Series

94300

TYPE NUMBERS
0100.

TABLE OF CONTENTS

Air Cleaner	4
Blower Housing	5
Camshaft	2
Carburetor	3
Controls	4
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	2
Exhaust System	4
Flywheel	5
Fuel Supply	3
Gasket Set-Engine	2
Gasket Set-Valve	2
Governor Spring	4
Ignition	4
Kits-Carburetor Overhaul	3
Piston, Rings, Connecting Rod	2
Rewind Starter	5
Valves	2


BRIGGS & STRATTON





PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

94300

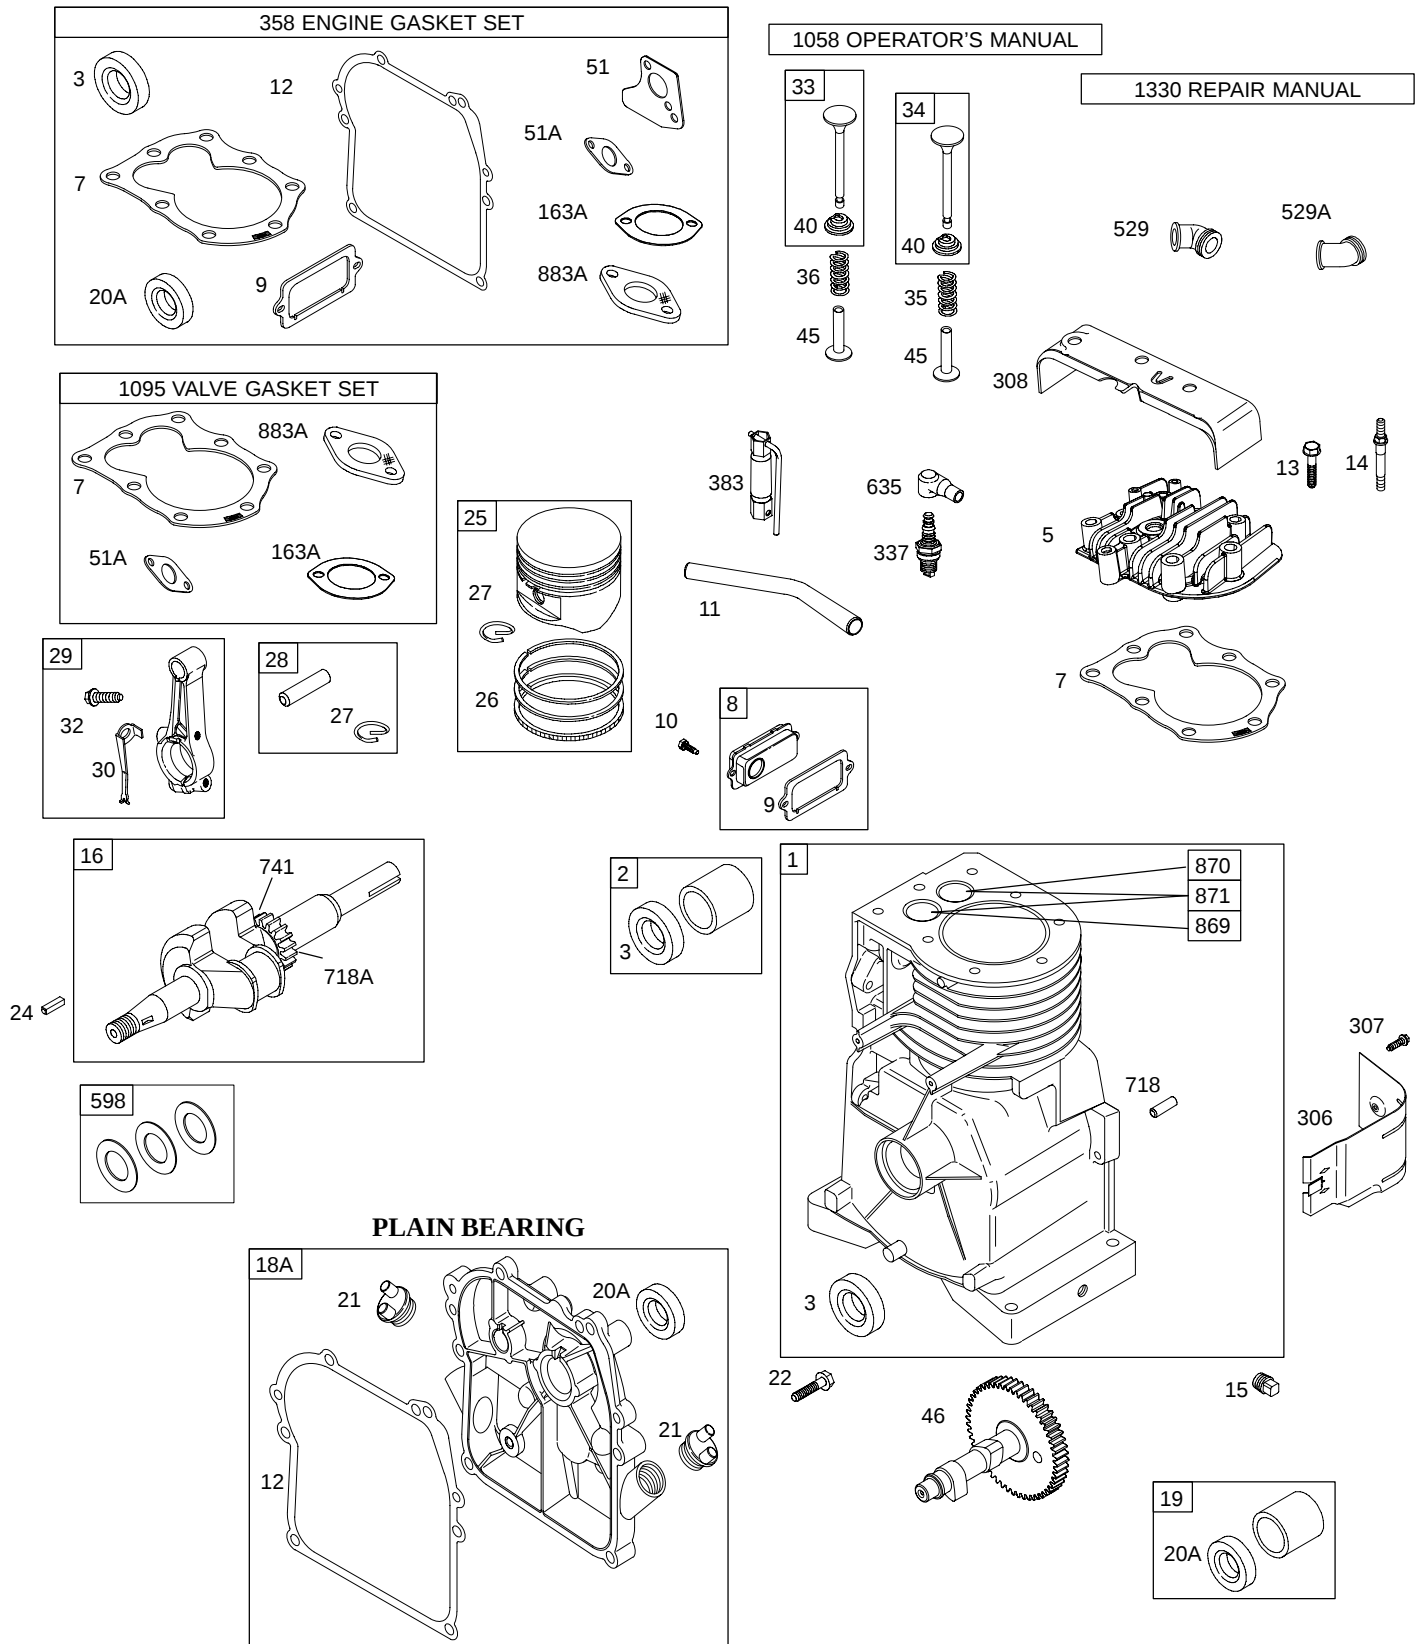


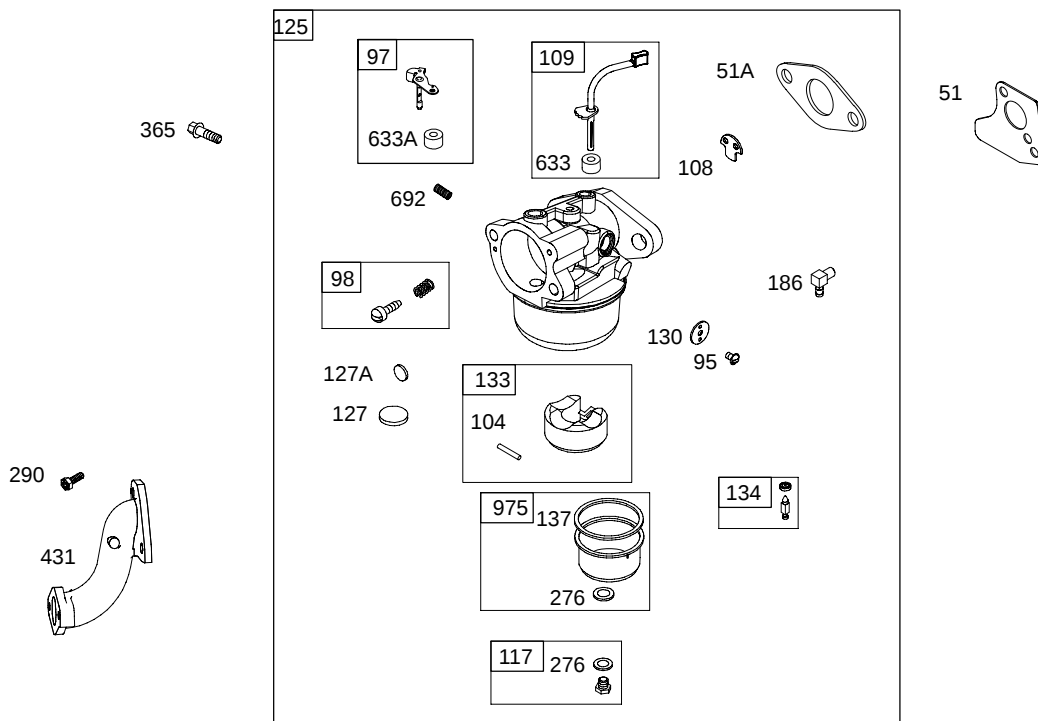
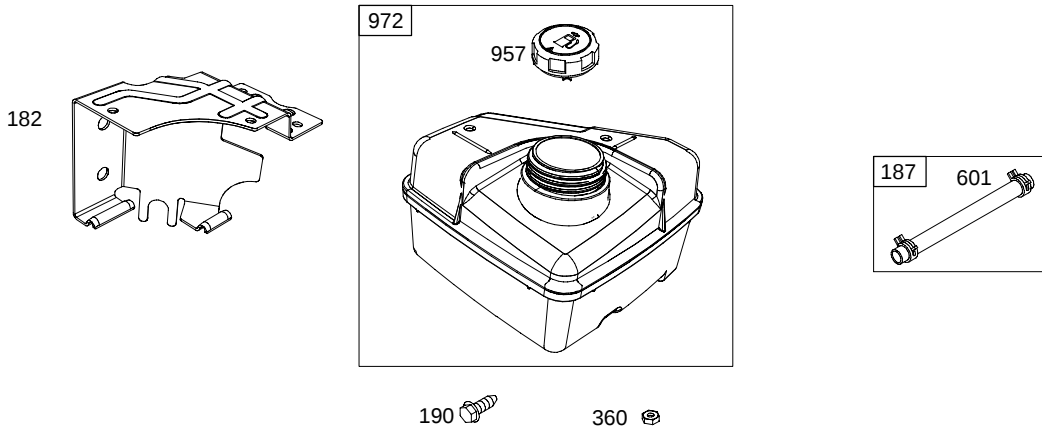


977 CARBURETOR GASKET SET			
137	276	633	
163A		633A	

121 CARBURETOR OVERHAUL KIT			
51	127	137	276
51A	127A	163A	633
104		134	633A

94300


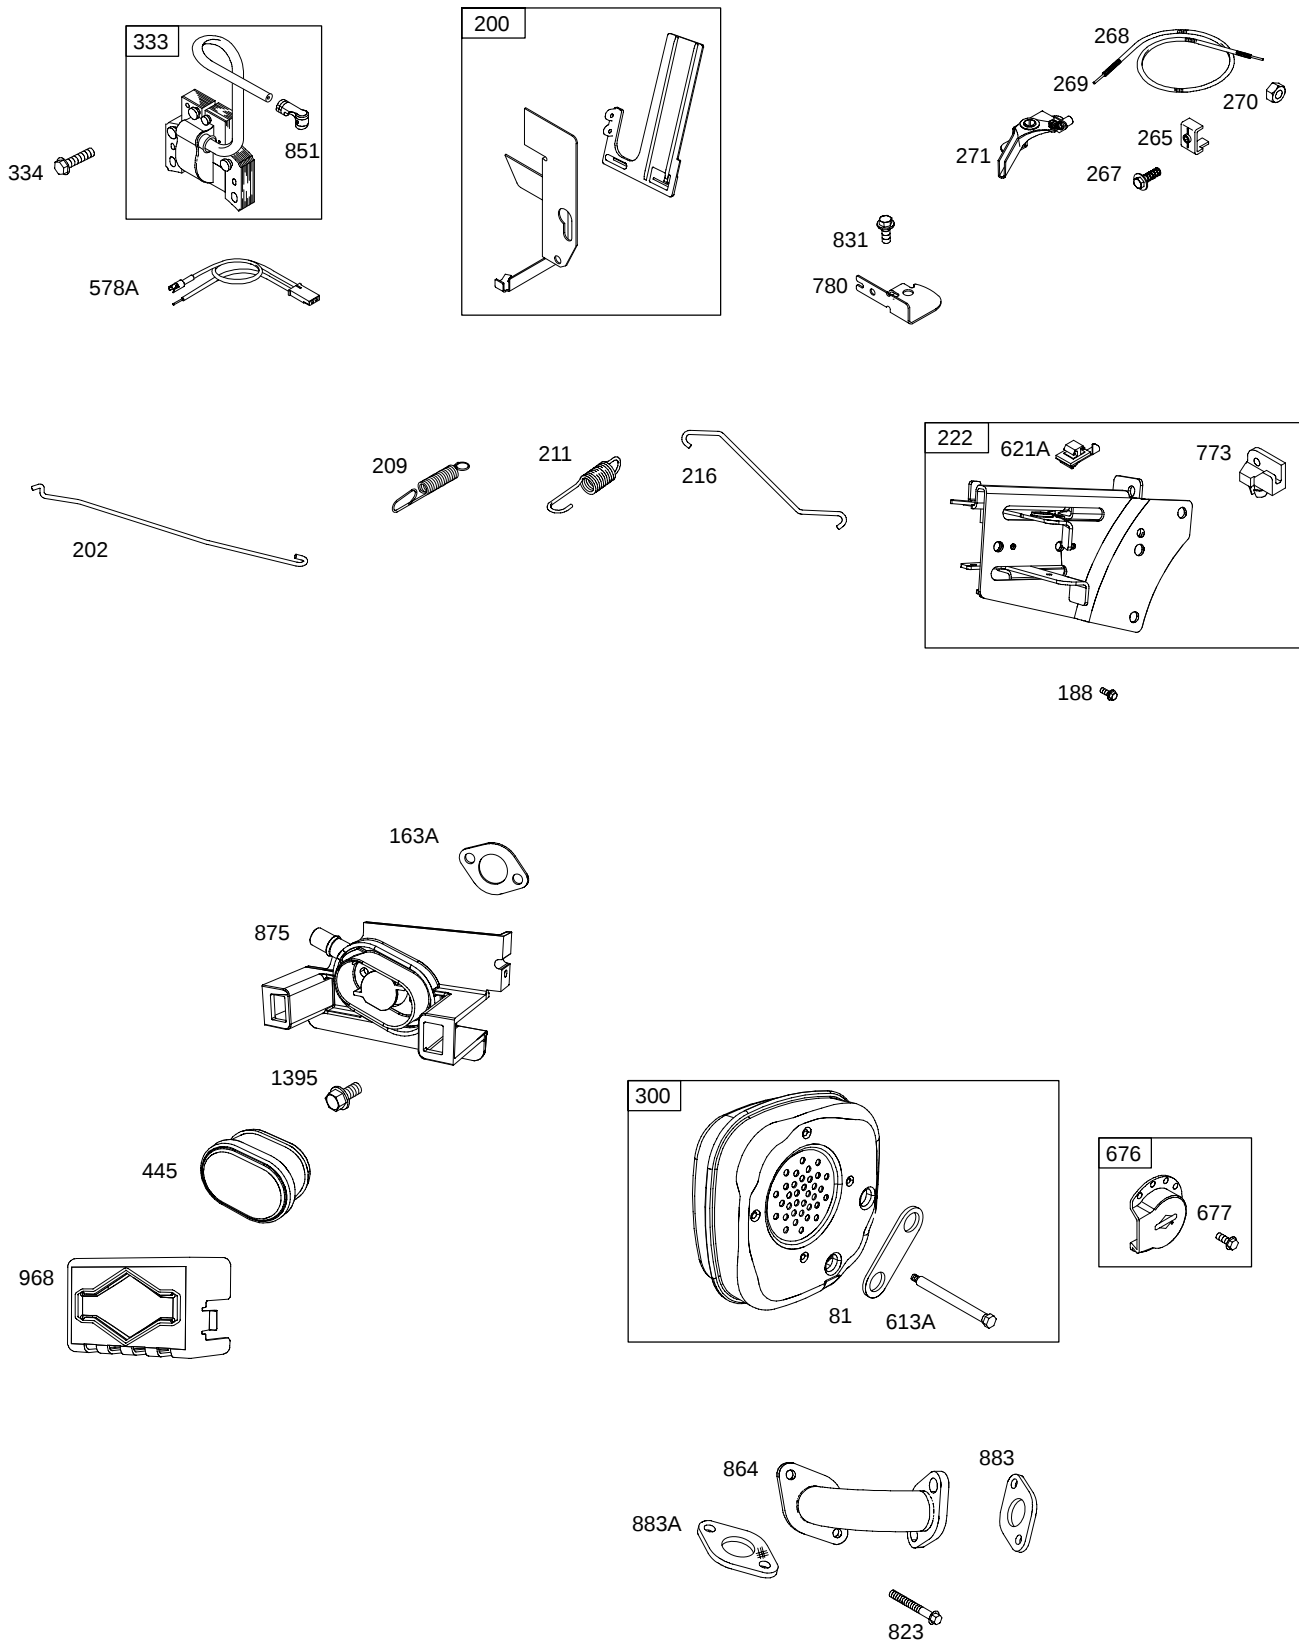


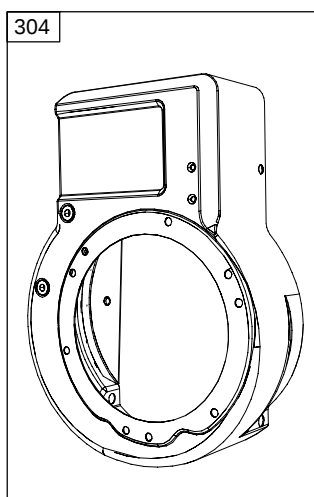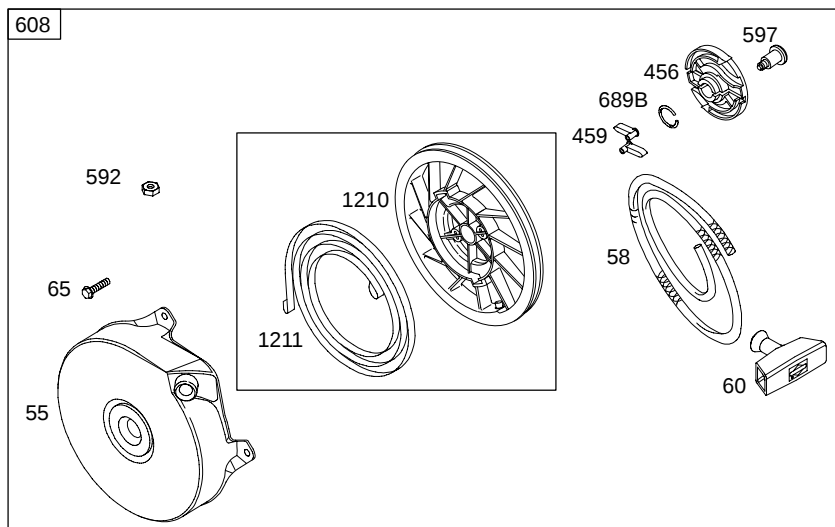

1019 LABEL KIT

1036 EMISSIONS LABEL

305

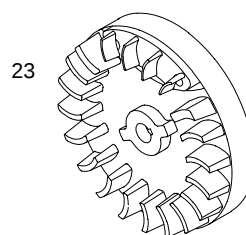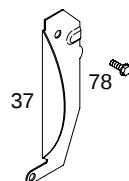

73



332



94300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	494549	Cylinder Assembly	25	790908	Piston Assembly	30	691719	Dipper-Connecting
2	399269	Kit-Bushing/Seal			(Standard)			Rod
		(Magneto Side)			(Used After Code Date	32	691664	Screw
3	299819	Seal-Oil			05051800).			(Connecting Rod)
		(Magneto Side)			----- Note -----	33	296676	Valve-Exhaust
5	790169	Head-Cylinder			498668 Piston	34	296677	Valve-Intake
7	698717	Gasket-Cylinder Head			Assembly	35	690520	Spring-Valve
8	699448	Breather Assembly			(Standard)			(Intake)
9	695890	Gasket-Breather			(Used Before Code	36	690520	Spring-Valve
10	691666	Screw			Date 05051900).			(Exhaust)
		(Breather Assembly)	26	790909	Ring Set	37	690463	Guard-Flywheel
11	790162	Tube-Breather			(Standard)	40	692194	Retainer-Valve
12	692218	Gasket-Crankcase			(Used After Code Date	45	691762	Tappet-Valve
		(.015" Thick)			05051800).	46	691998	Camshaft
		(Standard)			----- Note -----	51	273113	Gasket-Intake
		----- Note -----			695169 Ring Set	51A	692283	Gasket-Intake
		★ 270895 Gasket-			(Standard)	55	692144	Housing-Rewind
		Crankcase			(Used Before Code			Starter
		(.005")			Date 05051900).	58	691921	Rope-Starter
		★ 270896 Gasket-			695172 Ring Set	60	691915	Grip-Starter Rope
		Crankcase			(.020" Oversize)	65	690837	Screw
		(.009")			(Used Before Code			(Rewind Starter)
13	691640	Screw			Date 05051900).	73	699850	Screen-Rotating
		(Cylinder Head)	27	691588	Lock-Piston Pin	78	690364	Screw
14	690361	Stud	28	699659	Pin-Piston			(Flywheel Guard)
		(Cylinder Head)			(Standard)	81	691729	Lock-Muffler Screw
15	691686	Plug-Oil Drain			(Used After Code Date	95	691636	Screw
16	791414	Crankshaft			05051800).			(Throttle Valve)
		(Use Reference 741			----- Note -----	97	790270	Shaft-Throttle
		Timing Gear)			298909 Pin-Piston	98	398185	Kit-Idle Speed
18A	699406	Cover-Crankcase			(Standard)	104	691242	Pin-Float Hinge
		(Plain Bearing Cover)			(Used Before Code	108	692567	Valve-Choke
19	399269	Kit-Bushing/Seal			Date 05051900).	109	790307	Shaft-Choke
		(PTO Side)			298908 Pin-Piston	117	494870	Jet-Main
20A	299819	Seal-Oil			(.005" Oversize)			(Standard)
		(PTO Side)			(Used Before Code	121	695157	Kit-Carburetor
21	281658	Cap-Oil Fill			Date 05051900).			Overhaul
22	691129	Screw	29	699655	Rod-Connecting	125	790268	Carburetor
		(Crankcase			(Standard)	127	691739	Plug-Welch
		Cover/Sump)			(Used After Code Date			(5/16" Diameter)
23	690843	Flywheel			05051800).	127A	694468	Plug-Welch
24	222698	Key-Flywheel			----- Note -----			(3/8" Diameter)
					294367 Rod-	130	691181	Valve-Throttle
					Connecting	133	398187	Float-Carburetor
					(Standard)			
					(Used Before Code			
					Date 05051900).			

- ★ Engine Gasket Set—Reference 358
- Carburetor Overhaul Kit—Reference 121

- ◆ Carburetor Gasket Set—Reference 977
- △ Valve Gasket Set—Reference 1095

3276-6

Assemblies include all parts shown in frames.

09/06/2005

94300

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
134	398188	Kit-Needle/Seat	308	690462	Cover-Cylinder Head	718A	499047	Pin-Locating (Crankshaft)
137	693981	Gasket-Float Bowl	332	690662	Nut (Flywheel)	741	791124	Gear-Timing
163A	272948	Gasket-Air Cleaner	333	496914	Armature-Magneto	773	697325	Retainer
182	790174	Bracket-Fuel Tank	334	691061	Screw (Magneto Armature)	780	691211	Anchor-Spring
186	692317	Connector-Hose	337	802592	Plug-Spark	823	699554	Screw (Muffler Adapter) (5/8" Long)
187	791766	Line-Fuel (Cut To Required Length) (Used After Code Date 05063000).	358	496865	Gasket Set-Engine	831	691099	Screw (Spring Anchor)
		----- Note -----	360	691105	Nut (Fuel Tank Bracket)	851	493880	Terminal-Spark Plug
	691050	Line-Fuel (Cut To Required Length) (Used Before Code Date 05070100).	363	19069	Puller-Flywheel	864	790273	Adapter-Muffler
188	691637	Screw (Control Bracket)	365	691688	Screw (Carburetor)	869	691701	Seat-Valve (Intake)
190	690708	Screw (Fuel Tank)	383	89838	Wrench-Spark Plug	870	691702	Seat-Valve (Exhaust)
200	791125	Blade-Governor	431	790170	Elbow-Intake	871	262001	Bushing-Valve Guide (Exhaust)
202	790168	Link-Mechanical Governor	445	790166	Filter-Air Cleaner Cartridge			----- Note -----
209	790356	Spring-Governor (White) Used on Type No(s). 0100.	455	691236	Cup-Flywheel		63709	Bushing-Valve Guide (Intake)
211	790308	Spring-Governed Idle	456	692299	Plate-Pawl Friction	875	790171	Base-Air Cleaner
216	790271	Link-Choke	459	281505	Pawl-Ratchet	883	691881	Gasket-Exhaust (Between Adapter and Muffler)
222	790164	Bracket-Control	529	692189	Grommet (90 Degree)	883A	★691880	Gasket-Exhaust (Between Adapter and Cylinder)
265	691024	Clamp-Casing	529A	692187	Grommet (45 Degree)	957	493988	Cap-Fuel Tank
267	693675	Screw (Casing Clamp)	578A	696031	Wire Assembly	968	790172	Cover-Air Cleaner
268	691025	Casing-Control Wire (Cut To Required Length)	592	690800	Nut (Rewind Starter)	972	790173	Tank-Fuel
269	691026	Wire-Control (Cut To Required Length)	597	691696	Screw (Pawl Friction Plate)	975	493640	Bowl-Float
270	691027	Nut (Control Wire Casing)	598	791387	Shim-Endplay (Used After Code Date 05013000).	977	695156	Gasket Set-Carburetor
271	691028	Lever-Control			(For Pump Applications Only)	1019	699456	Kit-Label
276	271716	Washer-Sealing	601	95162	Clamp-Hose	1036		Label-Emissions (Available from Authorized Briggs & Stratton Service Dealer)
290	690953	Screw (Intake Elbow)	608	499706	Starter-Rewind	1058	276346	Operator's Manual
300	790272	Muffler	613A	691413	Screw (Muffler)	1095	498525	Gasket Set-Valve
304	790165	Housing-Blower	621A	692310	Switch-Stop	1210	499901	Pulley/Spring Assembly (Pulley)
305	692198	Screw (Blower Housing)	633	693867	Seal-Choke/Throttle Shaft (Choke)	1211	499901	Pulley/Spring Assembly (Spring)
306	690461	Shield-Cylinder	633A	691321	Seal-Choke/Throttle Shaft (Throttle)	1330	270962	Repair Manual
307	691660	Screw (Cylinder Shield)	635	66538	Boot-Spark Plug	1395	692523	Screw (Air Cleaner Base)
			676	494423	Deflector-Muffler			
			677	690661	Screw (Muffler Deflector)			
			689B	691855	Spring-Friction (Rewind Starter)			
			692	690572	Spring-Detent			
			718	690959	Pin-Locating (Cylinder)			

★ Engine Gasket Set-Reference 358
 ● Carburetor Overhaul Kit-Reference 121

◆ Carburetor Gasket Set-Reference 977
 Δ Valve Gasket Set-Reference 1095

3276-7

Assemblies include all parts shown in frames.

09/06/2005