


1100
Air Cleaner & Carburetor

Page 1 of 64

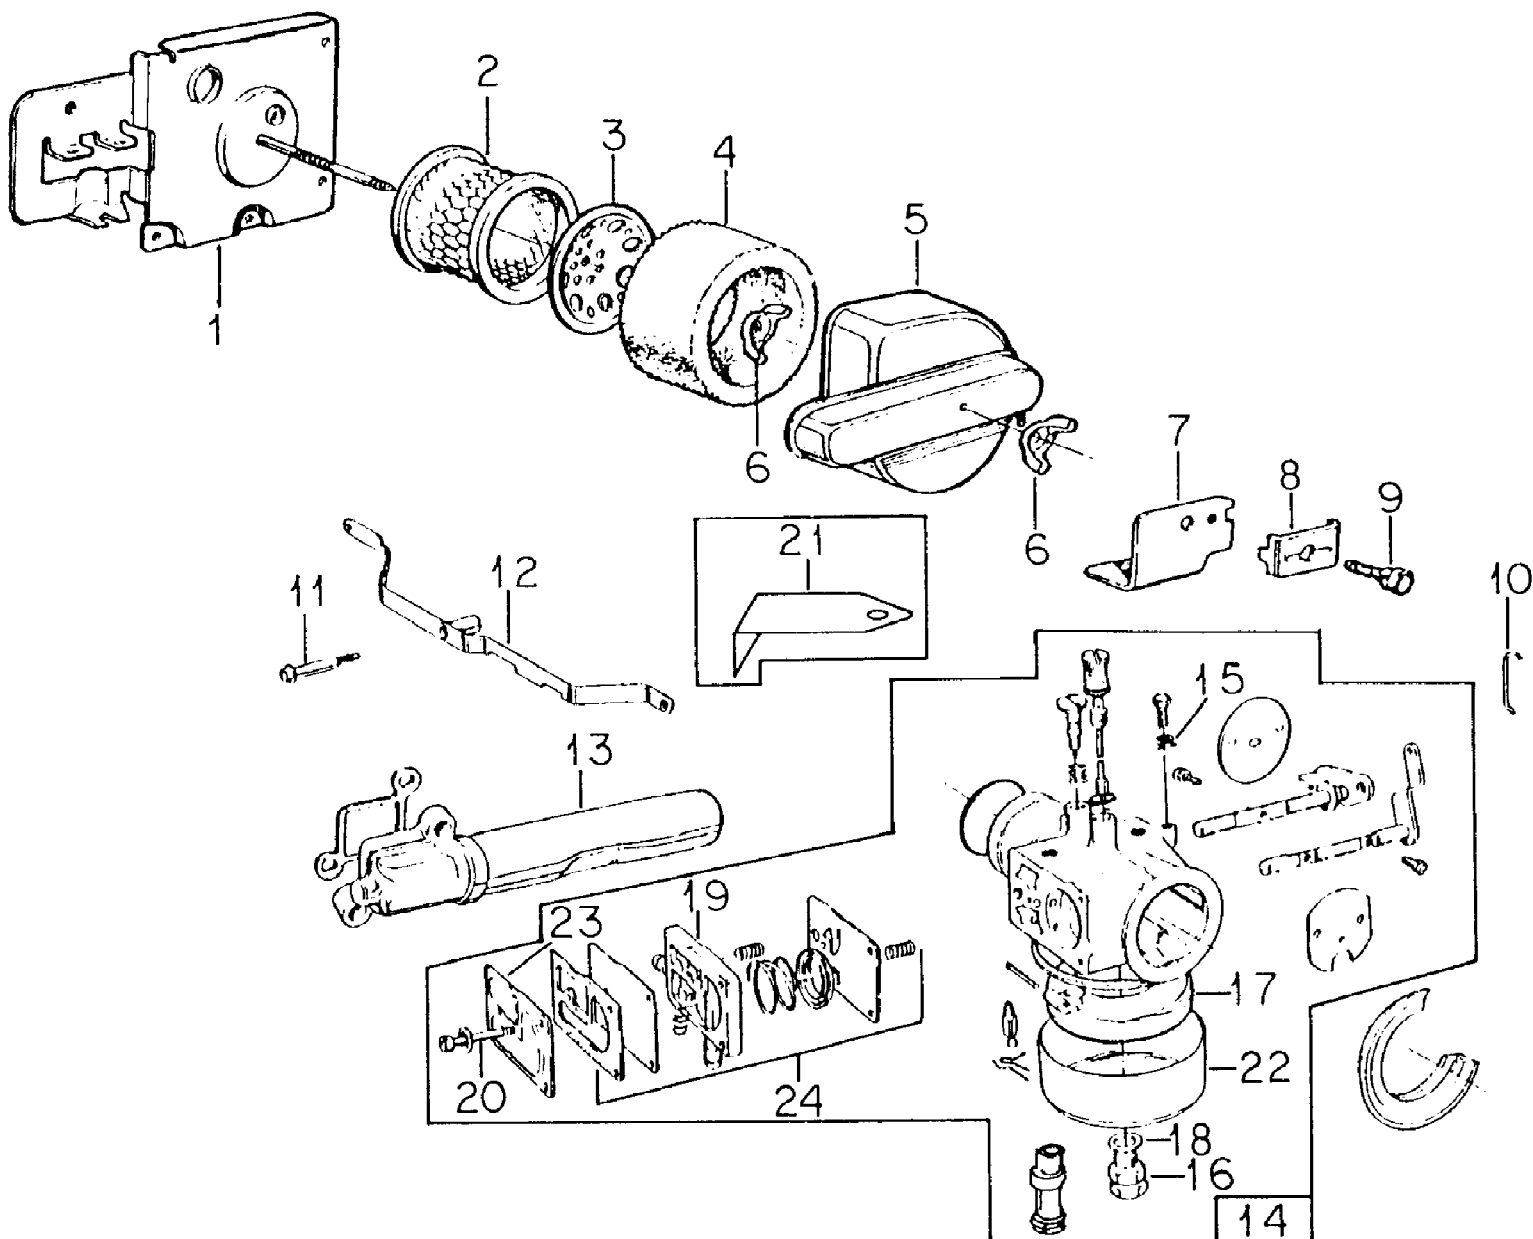

1100


Page 2 of 64

Air Cleaner & Carburetor

Ref #	Part Number	Qty	S/P/F	Description
1	IH-76632-C1	1		Plate Assy, Air Cleaner Mounting
	710-0118	4	S	Bolt, 5/16 X 3/4 Type 5
	710-3049	2		Bolt, 1/4 X 9/16 Type 5
2	BS-392286	1	/P	Cartridge, Air Cleaner
3	IH-76620-C1	1		Cup, Air Cleaner
4	BS-270973	1	/P	Element, Air Cleaner
5	BS-392288	1		Cover, Air Cleaner
6	712-3044	2		Nut, 1/4-20 Znp Wing
7	IH-76587-C1	1		Bracket, Choke Control
8	BS-221535	1	S	Clamp, Casing
9	BS-93496	1	S	Screw, Clamp
10	BS-261339	1		Link, Throttle
11	BS-93838	1		Bolt, Shoulder
12	BS-392292	1		Lever, Linkage
13	IH-76618-C1	1		Manifold, Intake
		2		Screw, 1/4 X 1-1/4 Znp Fil/Hdcr Mach (Common Hardware, Purchase Locally)
14	BS-392690	1		Carburetor Assy
15	BS-260575	1		Spring, Throttle Adjusting
16	IH-76573-C1	1		Screw, Float Bowl Mounting
17	BS-299707	1	/P	Float Assy
18	BS-222014	1	S	Washer, Float Bowl
19	BS-280162	1		Pump, Body
20	BS-93829	1		Screw, Pump Cover
21	IH-140233-C1	1		Bracket, Carburetor Support (Tractor w/Serial No. 646219 & below)
22	BS-221995	1	/P	Bowl, Float
23	BS-222615	1		Cover, Pump
24	BS-393397	1	/P	Kit, Pump Repair
	BS-393544	1	/P	Kit, Carburetor Overhaul (Consists of Ref No. 24, gaskets, valves & jet screws)

1100
Battery, Switches, Cables & Clips

Page 3 of 64

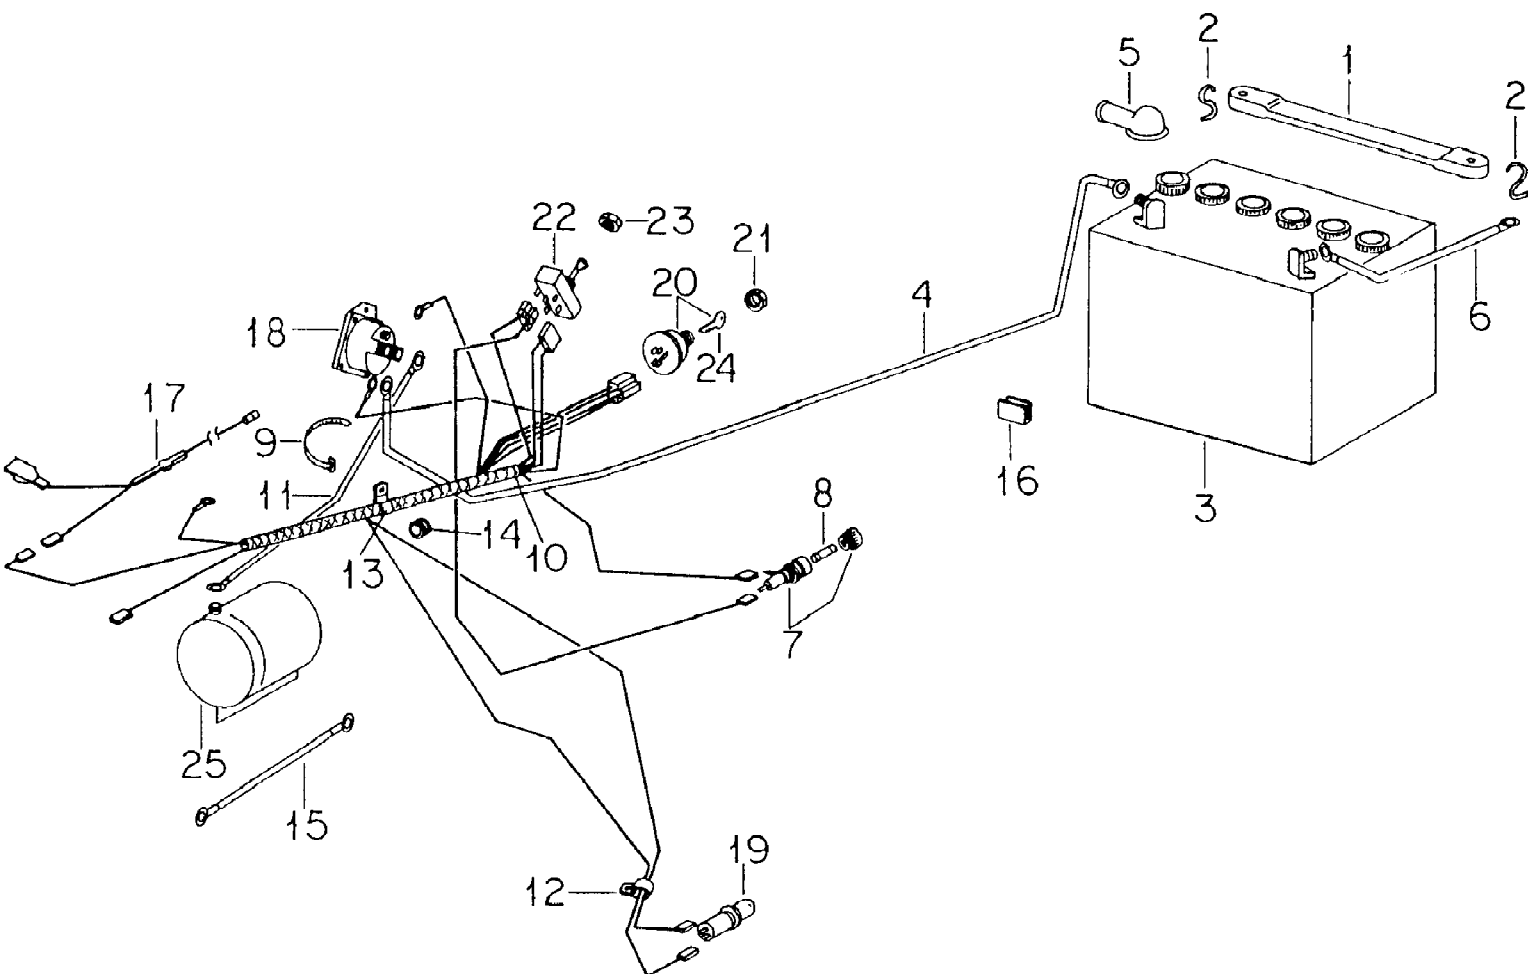

1100


Page 4 of 64

Battery, Switches, Cables & Clips

Ref #	Part Number	Qty	S/P/F	Description
1	703-0017	1	S	Strap Assy, Battery
2	747-3006	2		Hook, Battery Strap
3	IH-PRLU	1	S	Battery, IH Low-Maintenance, 12 Volt
4	IH-132306-C1	1		Cable, Battery, Positive
	710-0451	1	/P	Bolt, 5/16 X 3/4 Crg Type 1
	712-0267	1	S	Nut, 5/16 Type 5
5	725-3007	1	S	Cover, Battery Terminal
6	725-0978	1	S	Cable, Battery Negative Terminal to Ground
		1		Bolt, 1/4 X 3/4 Crg Type 1 (Common Hardware, Purchase Locally)
	712-3006	1	/P	Nut, 1/4 Type 5
	736-3007	1		Washer, 5/16 Ext-Int Tooth Lock
7	725-3011	1	S	Holder Assy, Fuse
	IH-356445-R91	1	/P	Knob, Fuse Holder
8	725-3012	1	S	Fuse, 10 Amp
9	726-3011	2		Strap, Cable Lock
10	~NLA	1		Harness Assy, Cable
11	~NLA	1		Cable, Magnetic Switch to Cranking Motor
12	~NLA	1		Clip, Cable (Steering)
13	726-3007	2		Clip, Cable PTO Clutch & Frame Rear
	712-0798	1	/P	Nut, 3/8 Type 5
	710-3000	1	S	Bolt, 3/8 X 3/4 Type 5
14	IH-549293-R1	3		Grommet, Frame Edge
15	IH-135314-C1	1		Cable, Engine to Ground
	712-3006	1	/P	Nut, 1/4 Type 5
16	~NLA	1		Grommet, Seat Support Edge
17	725-3014	1	S	Diode Assy, Tri Circuit
18	725-3001	1	S	Switch, Magnetic
	712-0267	2	S	Nut, 5/16 Type 5
	712-0349	1	/P	Nut, No. 10-NF Mach Screw Type 1
		2		Nut, 1/4 Pln Type 5 (Common Hardware, Purchase Locally)
19	725-3060	1	S	Switch, Neutral Start
20	725-3004	1	S	Switch Assy, Battery Ignition Key
21	712-3013	1	/P	Nut, Battery Ignition Switch
	736-0156	1	/P	Washer, .656 X 1.000 X .105
22	725-3022	1	S	Switch, PTO
	736-0160	1	S	Washer, .531 X 1.000 X .056
23	712-3014	1	/P	Nut, Switch
24	IH-131313-C1	1	S	Key, Ignition Switch
25		1		Starter Motor (For list of components see starter motor listing)

1100
Brakes & Connections

Page 5 of 64

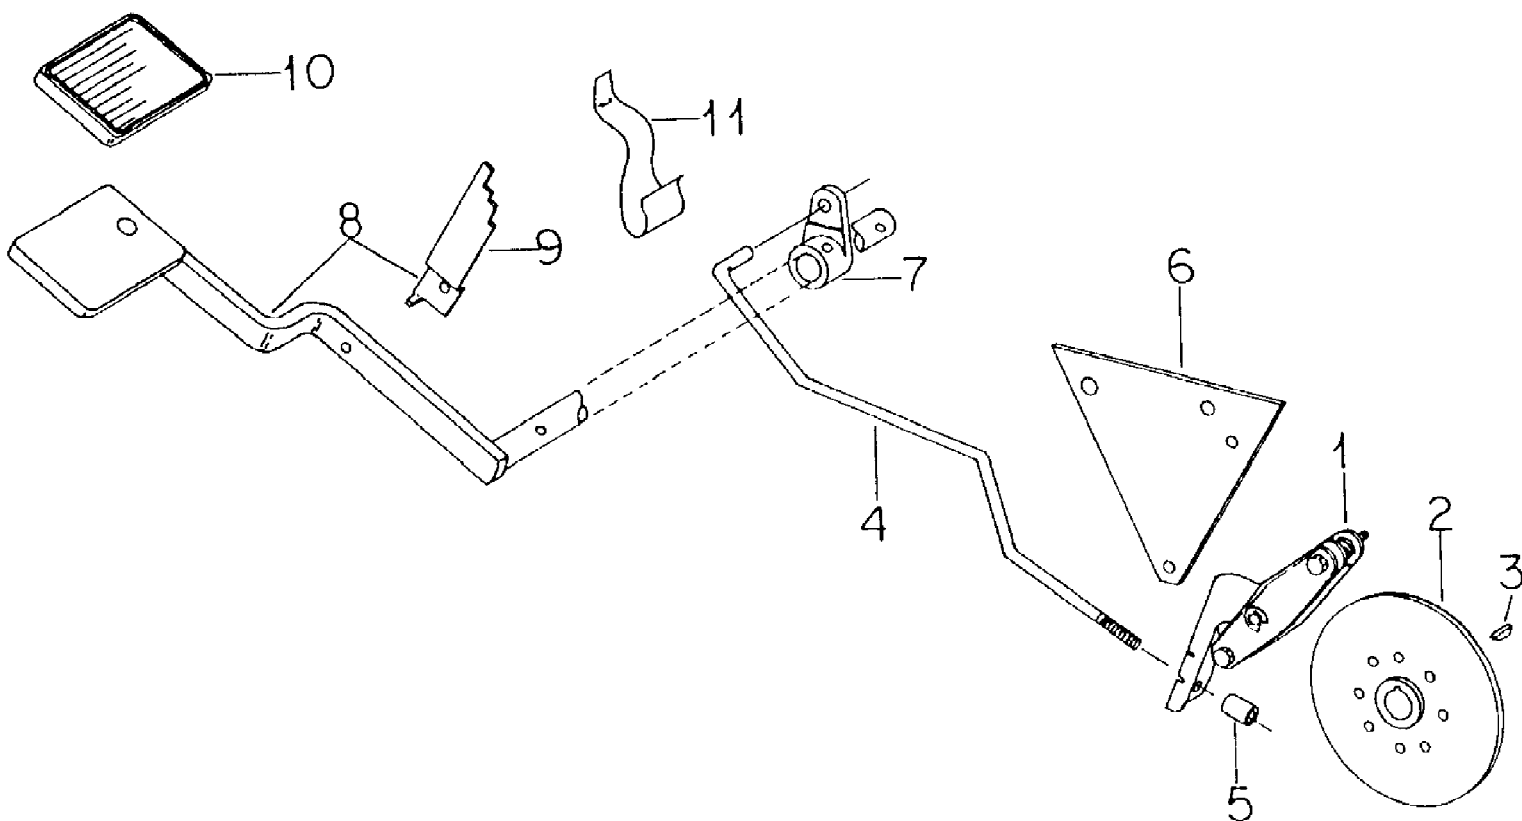


1

1100
Brakes & Connections

Page 6 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	761-3000	1		Brake Assy, Caliper (Refer to caliper brake assy for list of components)
	712-0107	2	S	Nut, 1/4-20 Znd Hex Lock
	750-3008	2		Washer, .281 X .750 X .105
	736-0463	2	S	Washer, .281 X .625 X .051
2	761-3001	1		Disc & Hub
3	714-0868	1	S	Key, 3/16 X 3/4 Woodruff 9
4	747-3000	1		Rod, Brake
5	750-3024	1		Spacer, .493 X .675 X 1.00 Pipe
	736-0140	1	S	Washer, .406 X .812 X .051
	712-0375	1	/P	Nut, 3/8 Cad P/T Lock Type 1
	714-0474	1	S	Pin, 1/8 X 3/4 Pln Cot
6	~NLA	1		Support, Plate Brake (Spacer)
	710-3000	2	S	Bolt, 3/8 X 3/4 Type 5
	712-0798	1	/P	Nut, 3/8 Type 5
7	759-3010	1	S	Lever, Brake Rod
8	759-3110	1		Pedal Assy, Clutch
9	703-0006	1		Ratchet
	~NLA	1		Rivet, 1/4 X 11/16 F/Hd Solid
	736-3001	1	/P	Washer, Spring
10	724-3000	1	S	Pad, Pedal
11	732-3000	1	S	Spring, Switch Operating
	715-3018	4	S	Pin, 1/4 X 1-3/8 Med Pln Coil Spring
	726-3000	1	/P	Nut, Spring Retaining

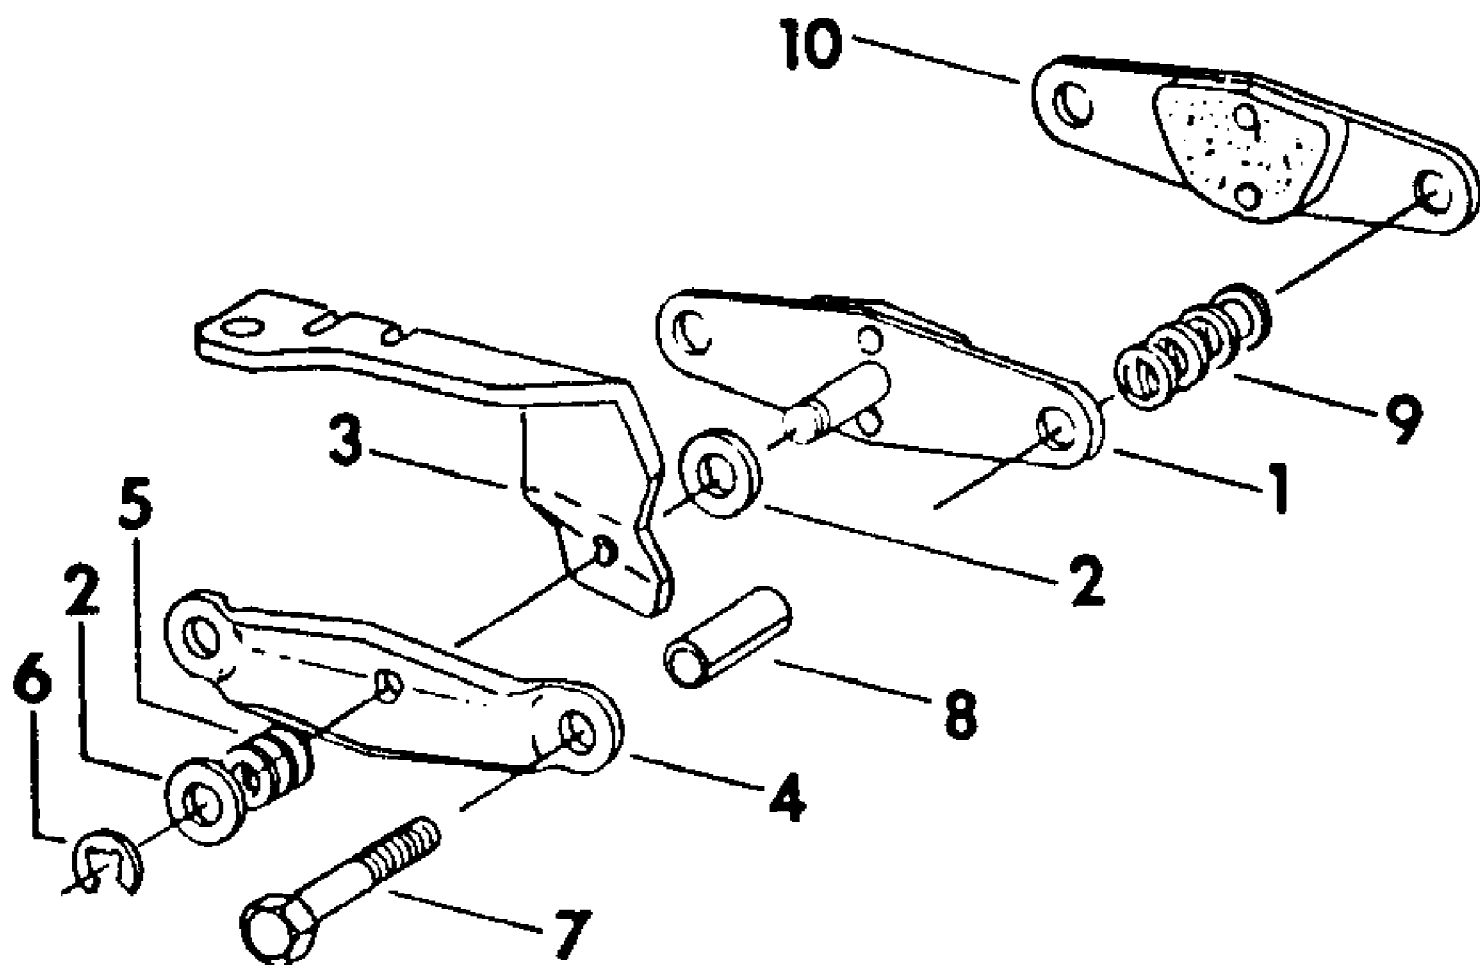


1100
Caliper Brake Assembly

Page 8 of 64

Ref #	Part Number	Qty	S/P/F	Description
	761-3000	1		Brake Assy, Caliper
1		1		Plate Assy, Stud (Order brake pad kit 759-3393)
2	HH-03-03017	2		Washer, Thrust
3	HH-C-18-02434	1		Cam
4	HH-C-14-03286	1		Plate, Actuator
5	HH-A-06-03031	1		Spring, Compression
6	716-0108	1	S	Ring, Retaining
7	HH-01-03443	2	S	Bolt, 1/4 X 2 Type 5
8		1		Bushing, Split (Order brake pad kit 759-3393)
9	HH-A-06-03314	2		Spring, Return
10		1		Plate Assy, Rib (Order brake pad kit 759-3393)
	759-3393	1	/P	Pad Kit, Brake [Includes Ref No. 1, 8 (Qty 2) & 10]

1100
Clutch & Controls

Page 9 of 64

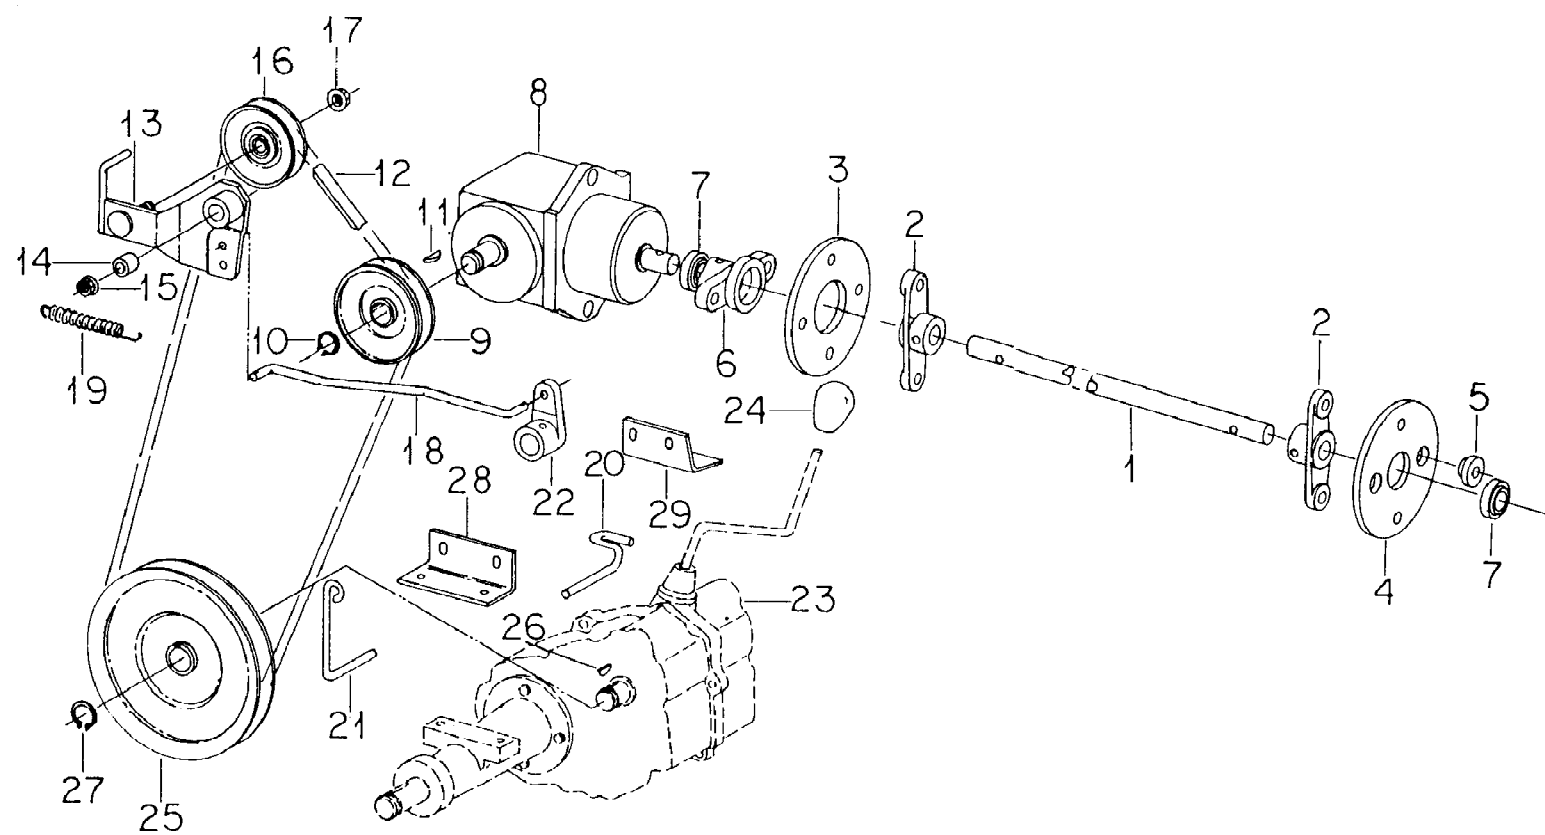

1100
Clutch & Controls

Page 10 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	IH-132444-C1	1		Shaft, Drive
2	748-3001	2	/P	Arm, Coupling
3	722-3000	1	/P	Disc, Flexible Coupling
4	722-3001	1	S	Disc, Flexible Coupling
5	711-3001	2		Bushing
	710-3005	6	/P	Bolt, 3/8 X 1-1/4 Type 5
	710-0520	2	/P	Bolt, 3/8 X 1-1/2 Type 5
	736-0140	8	S	Washer, .406 X .812 X .051
	712-3000	6	S	Nut, 3/8 Cad P/T Lock Type 5
	715-3000	3	S	Pin, 1/4 X 1-3/8 Hvy Cld Spr
6	703-0794	1	S	Coupler, Driveshaft
7	741-3004	2	S	Bushing, Self Aligning Ball
8	TC-794233	1		Drive, Right Angle (Refer to right angle drive for list of components)
	710-3005	2	/P	Bolt, 3/8 X 1 Type 5
	712-0798	2	/P	Nut, 3/8 Type 5
9	756-3000	1	/P	Pulley, Drive
	710-3006	1	/P	Screw, Set
10	716-0115	1	S	Ring, Retaining
11	714-0868	1	S	Key, 3/16 X 3/4 Woodruff 9
12	754-3000	1	S	Belt, Clutching
13	703-0011	1		Arm Assy, Clutch
14	750-3001	1		Bushing, Clutch Arm
	710-0805	1	/P	Bolt, 5/16 X 1-1/2 Type 5
15	712-3004	1	S	Nut, 5/16 Flange Lock
16	IH-61176-C92	1	/P	Pulley, Drive Idler
	736-0140	1	S	Washer, .406 X .812 X .051
17	712-3005	1	S	Nut, 3/8 Flange Lock
	736-0275	1	S	Washer, .344 X .688 X .051
18	IH-132005-C1	1	S	Rod, Clutch
	714-0474	2	S	Pin, 1/8 X 3/4 Pln Cot
	736-0275	2	S	Washer, .344 X .688 X .051
19	732-3003	1	/P	Spring, Clutch
	712-0798	1	/P	Nut, 3/8 Type 5
	736-0140	1	S	Washer, .406 X .812 X .051
	710-3000	1	S	Bolt, 3/8 X 3/4 Type 5
20	747-3004	1	/P	Guide, Belt
21	747-3005	1		Guide, Belt
	710-3000	2	S	Bolt, 3/8 X 3/4 Type 5
	736-0140	2	S	Washer, .406 X .812 X .051
	712-0798	1	/P	Nut, 3/8 Type 5
22	719-3001	1	S	Lever, Neutral Return
23	717-3001	1		Transaxle (Refer to tranaxle for list of components)
24	720-3000	1	S	Knob, Shifter
25	756-3002	1	/P	Pulley, Transaxle
26	714-0868	1	S	Key, 3/16 X 3/4 Woodruff 9
27	716-0101	1	S	Ring, Ret
	710-3006	1	/P	Screw, Set
28	IH-132008-C1	1		Bracket, Trans Mtg
	710-0520	3	/P	Bolt, 3/8 X 1-1/2 Type 5
	710-3000	6	S	Bolt, 3/8 X 3/4 Type 5



1100
Clutch & Controls

Page 11 of 64

Ref #	Part Number	Qty	S/P/F	Description
29	712-3000	7	S	Nut, 3/8 Cad P/T Lock Type 5
	IH-132292-C1	1		Bracket, Trans LH
	736-0140	4	S	Washer, .406 X .812 X .051

1100
Electric Lighting Attachment

Page 12 of 64

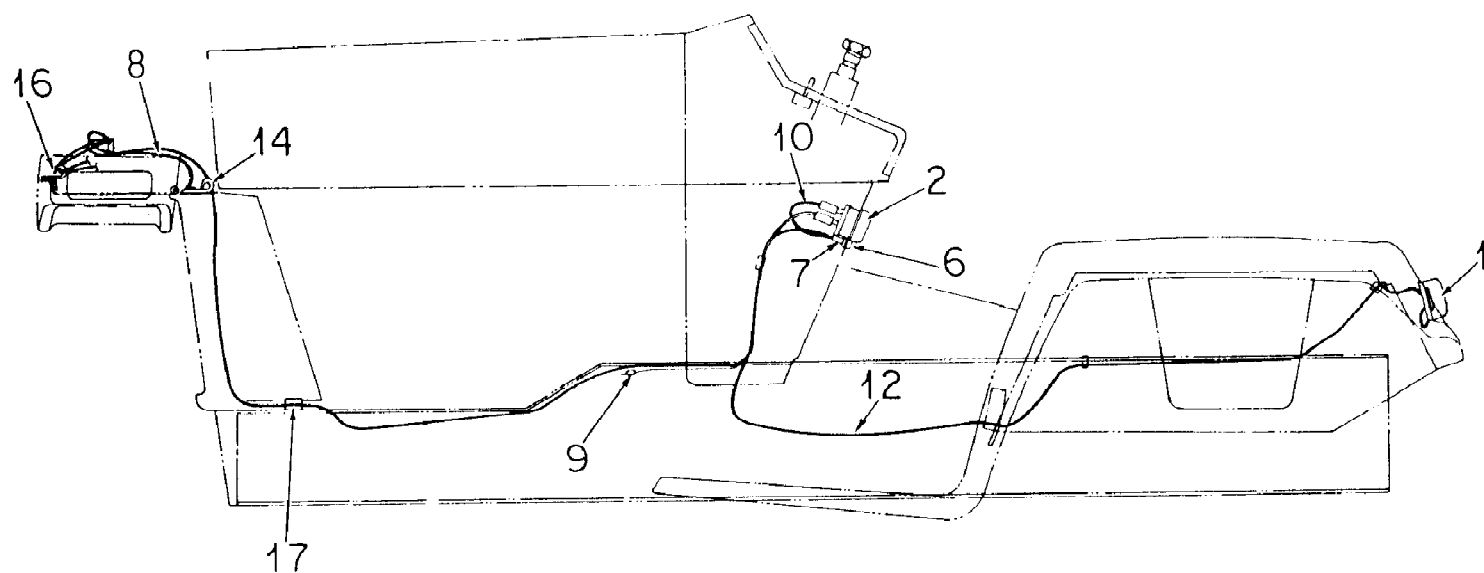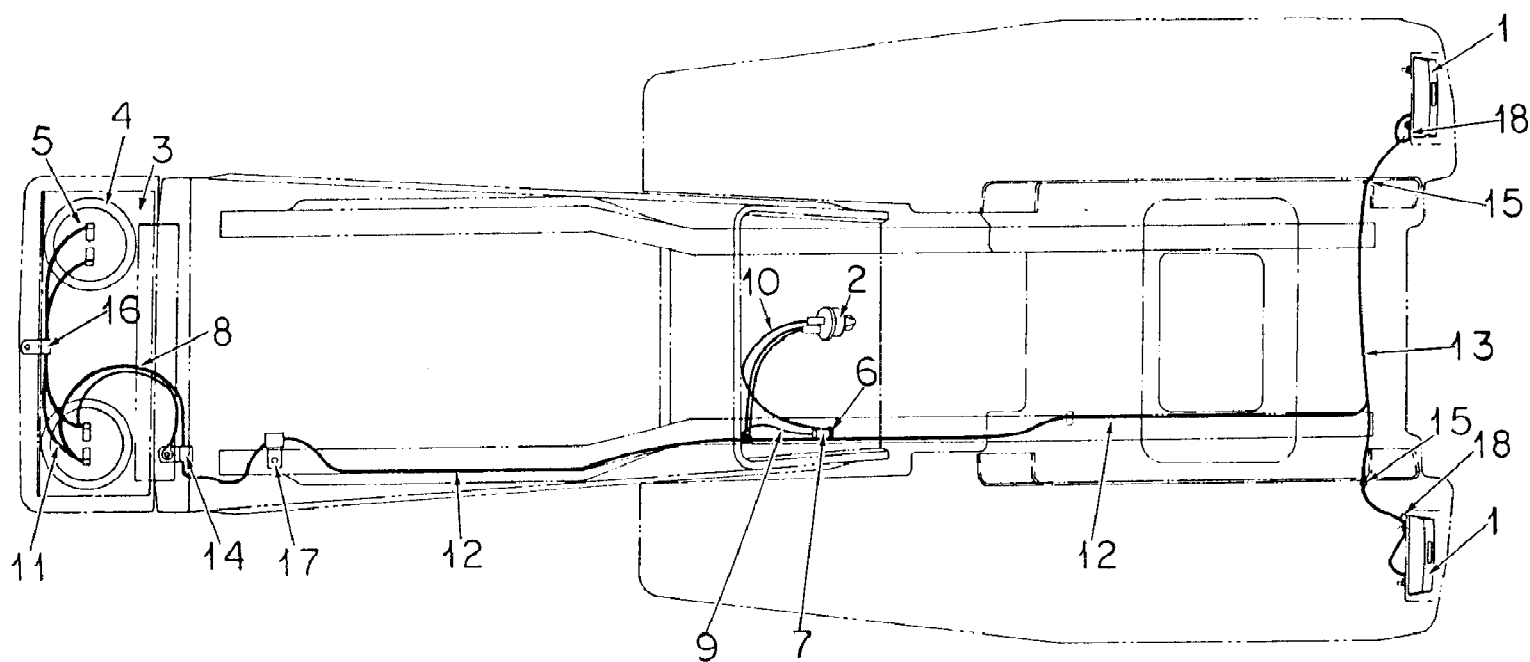

1100


Page 13 of 64

Electric Lighting Attachment

Ref #	Part Number	Qty	S/P/F	Description
1	IH-62181-C94	1		Electric Lighting Parts Accessory
	IH-545616-R1	2		Taillight Assy
	IH-55186-C1	1		Base
	IH-9417863	1	S	Lamp, No. 1895
	IH-55187-C1	1		Lens
		4		Screw, 8 X 3/4 Znp P/Hdcr Mach (Common Hardware, Purchase Locally)
		4		Washer, No. 8 Ext Tooth Lock (Common Hardware, Purchase Locally)
	712-0142	4	/P	Nut, No. 8 Mach Screw Type 1
	IH-127934	1		Lamp, Taillight
2	IH-394771-R92	1	S	Switch, Lighting
3	IH-61419-C1	1	S	Panel, Headlight Mounting
4	IH-107277-C1	2	S	Rim, Headlight Mounting
5	725-0222	2	S	Unit Assy, Headlight Sealed Beam
6	725-3011	1	S	Holder, Fuse
7	725-3012	1	S	Fuse, 10 Amp
8	IH-545724-R1	1		Cable, Headlight to Ground
9	IH-135537-C1	1		Cable, Diode to Fuse
10	IH-106716-C1	1		Cable, Fuse to Lighting Switch
11	IH-106278-C2	1		Cable, Lighting
12	IH-62316-C1	1		Cable, Headlight
13	IH-545726-R1	1		Cable, Taillight
14	726-3025	1	S	Clip, Cable
15	~NLA	3		Clip, Cable
16	726-3025	1	S	Clip, Cable
17	726-3015	1	S	Clip, Cable
18	726-3015	2	S	Clip, Taillight

1100
Engine

Page 14 of 64

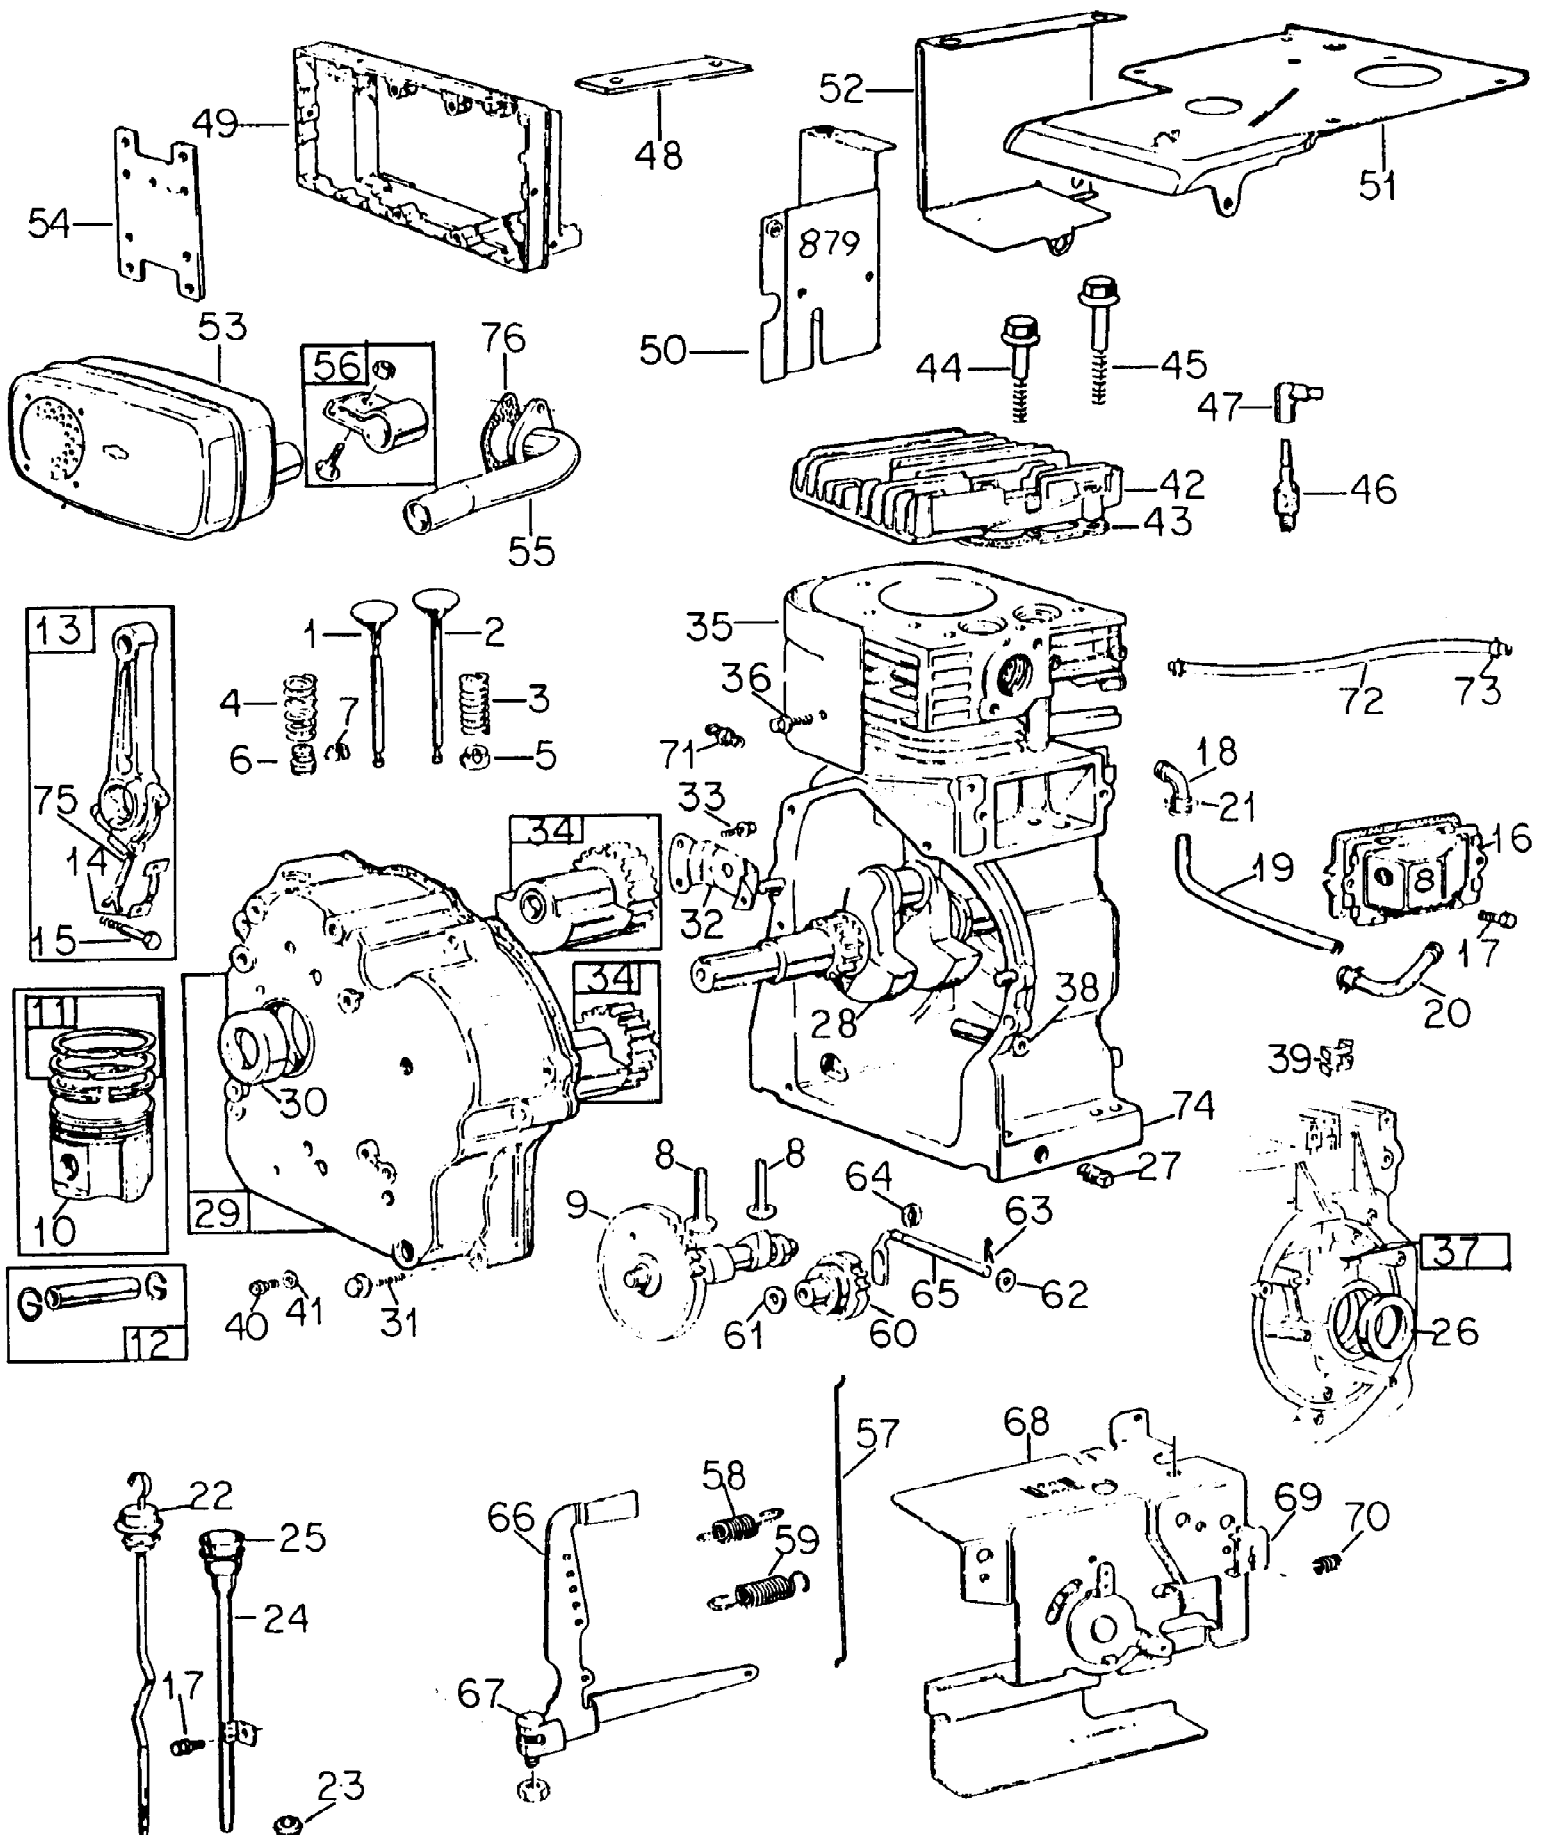

1100
Engine

Page 15 of 64

Ref #	Part Number	Qty	S/P/F	Description
		1		Engine Assy, Short Block NLA
1	BS-261185	1		Valve, Exhaust
2	BS-261462	1		Valve, Intake
3	BS-65906	1	/P	Spring, Intake Valve
4	BS-26828	1	S	Spring, Exhaust Valve
5	BS-221596	1	S	Retainer, Intake Valve
6	BS-292260	1	S	Retainer, Exhaust Valve
7	BS-93630	2	S	Keeper, Exhaust Valve
8	BS-261183	2		Tappet, Valve
9	BS-212897	1		Camshaft & Gear
10	BS-391285	1		Piston Assy, Standard
11	BS-391780	1	S	Set, Piston Ring, Standard
12	BS-299691	1	/P	Pin Assy, Piston
13	BS-490348	1	/P	Rod Assy, Connecting
14	BS-222299	1		Lock, Connecting Rod Screw
15	BS-92909	1		Screw, Connecting Rod
16	BS-392294	1	/P	Breather Assy
17	BS-93394	3	S	Screw, Breather & Oil Filler
18	BS-280159	1		Elbow, Breather Tube
19	BS-231105	1		Tube, Breather
20	BS-280160	1		Elbow, Breather
21	IH-210511-R1	2		Clamp, Hose
22	BS-392295	1		Dipper-Stick, Oil Fill Cap
23	BS-68838	1	S	Seal, Lower Filler Tube
24	IH-76607-C1	1		Tube Assy, Oil Filler & Dipper-Stick
25	IH-76625-C1	1		Seal, Upper Oil Filler Tube
26	BS-391086	1	S	Seal, Oil
27	BS-93418	2	S	Plug, Oil Drain
28	BS-399688	1		Crankshaft
29	BS-393925	1		Cover Assy, Crankcase
30	BS-291675	1	S	Seal, Oil
31	BS-93585	6		Screw, Cover Mounting
	710-3073	4	S	Bolt, 5/16 X 2-1/4 Type 5
32	BS-222407	2		Retainer, Counterweight
33	BS-93394	6	S	Screw, Retainer
34	BS-491787	2		Counterweight & Bearing
35	IH-76589-C1	1		Shield, Cylinder
36	BS-93394	2	S	Screw, Shield
37	BS-231056	1		Bushing, Governor Crank
38	BS-23513	1		Bushing, Plunger
39	IH-539882-R1	1		Clip, Wire
40		1		Screw, No. 10 X 1/4 Znp H/Hd Mach (Common Hardware, Purchase Locally)
41	IH-76623-C1	1		Washer, Flat Plug
42	BS-212119	1		Head, Cylinder
43	BS-272164	1	/P	Gasket, Cylinder Head
44	BS-93113	5	S	Screw, Cylinder Head
45	BS-93211	5		Screw, Cylinder Head
46	759-3331	1	/P	Plug, Spark
47	BS-66538	1	S	Cover, Spark Plug Elbow
48	IH-76614-C1	1		Strap, Bracket
	710-3049	2		Bolt, 1/4 X 9/16 Type 5


1100
Engine

Page 16 of 64

Ref #	Part Number	Qty	S/P/F	Description
49	BS-212235	1		Frame, Shroud
	710-3049	4		Bolt, 1/4 X 9/16 Type 5
50	BS-392290	1		Cover Assy, Side
	710-3049	2		Bolt, 1/4 X 9/16 Type 5
51	BS-222613	1		Hood, Upper Engine
	710-3049	4		Bolt, 1/4 X 9/16 Type 5
52	BS-222695	1		Shroud, Exhaust Side
53	BS-392101	1	S	Muffler, Exhaust
	710-3013	2	/P	Bolt, 1/4 X 1/2 Type 5
54	BS-222692	1		Bracket, Muffler
	710-3015	4	/P	Bolt, 1/4 X 3/4 Type 5
55	BS-392903	1		Pipe Assy, Exhaust
	710-3100	2		Bolt, 5/16 X 5/8 Type 5
56	726-3017	1		Clamp Assy, Muffler
		1		Bolt, 5/16 X 1-1/4 Crg Type 1 (Common Hardware, Purchase Locally)
	712-0267	1	S	Nut, 5/16 Type 5
57	BS-261338	1		Link, Governor
58	BS-260871	1	S	Spring, Governor
59	BS-261126	1	S	Spring, Governor Idle
60	BS-391737	1	/P	Gear, Governor
61		1		Washer, Thrust NLA
62	IH-76586-C1	1		Washer, Governor Crank
63	BS-93306	1	/P	Pin, Hair Cotter
64	BS-93307	1	/P	Retainer, E-Ring
65	BS-231057	1		Crank, Governor
66	BS-392707	1		Lever Assy, Governor
67	BS-92613	1	/P	Bolt, Governor Lever
	BS-231082	1		Nut, No. 10 Mach Screw Type 1
68	IH-76584-C1	1		Plate, Governor Control
69	BS-221535	1	S	Clamp, Casing
	BS-93496	1	S	Screw, Clamp
	710-0432	2	/P	Screw, No. 10-NF X 3/8 H/Hd Tap
70	BS-26157	1	S	Spring, Throttle Adj
	BS-91920	1		Screw, No. 8 X 5/8 Znp Fil/Hds Mach
71	IH-549881-R1	1		Connector, Fuel Pipe
72	IH-76578-C1	1		Tube, Fuel Line
73	IH-995218-R1	2		Clamp, Fuel Line
74		1		Crankcase (Not serviced separately)
75	IH-77944-C1	1		Dipper, Connecting Rod
76	721-0208	1	S	Gasket, Exhaust Pipe
	BS-393529	1		Set, Gasket Overhaul
	710-0502A	4	/P	Screw, 3/8 X 1-1/4 H/Hd Tap

1100
Engine Mounting & Air Duct

Page 17 of 64

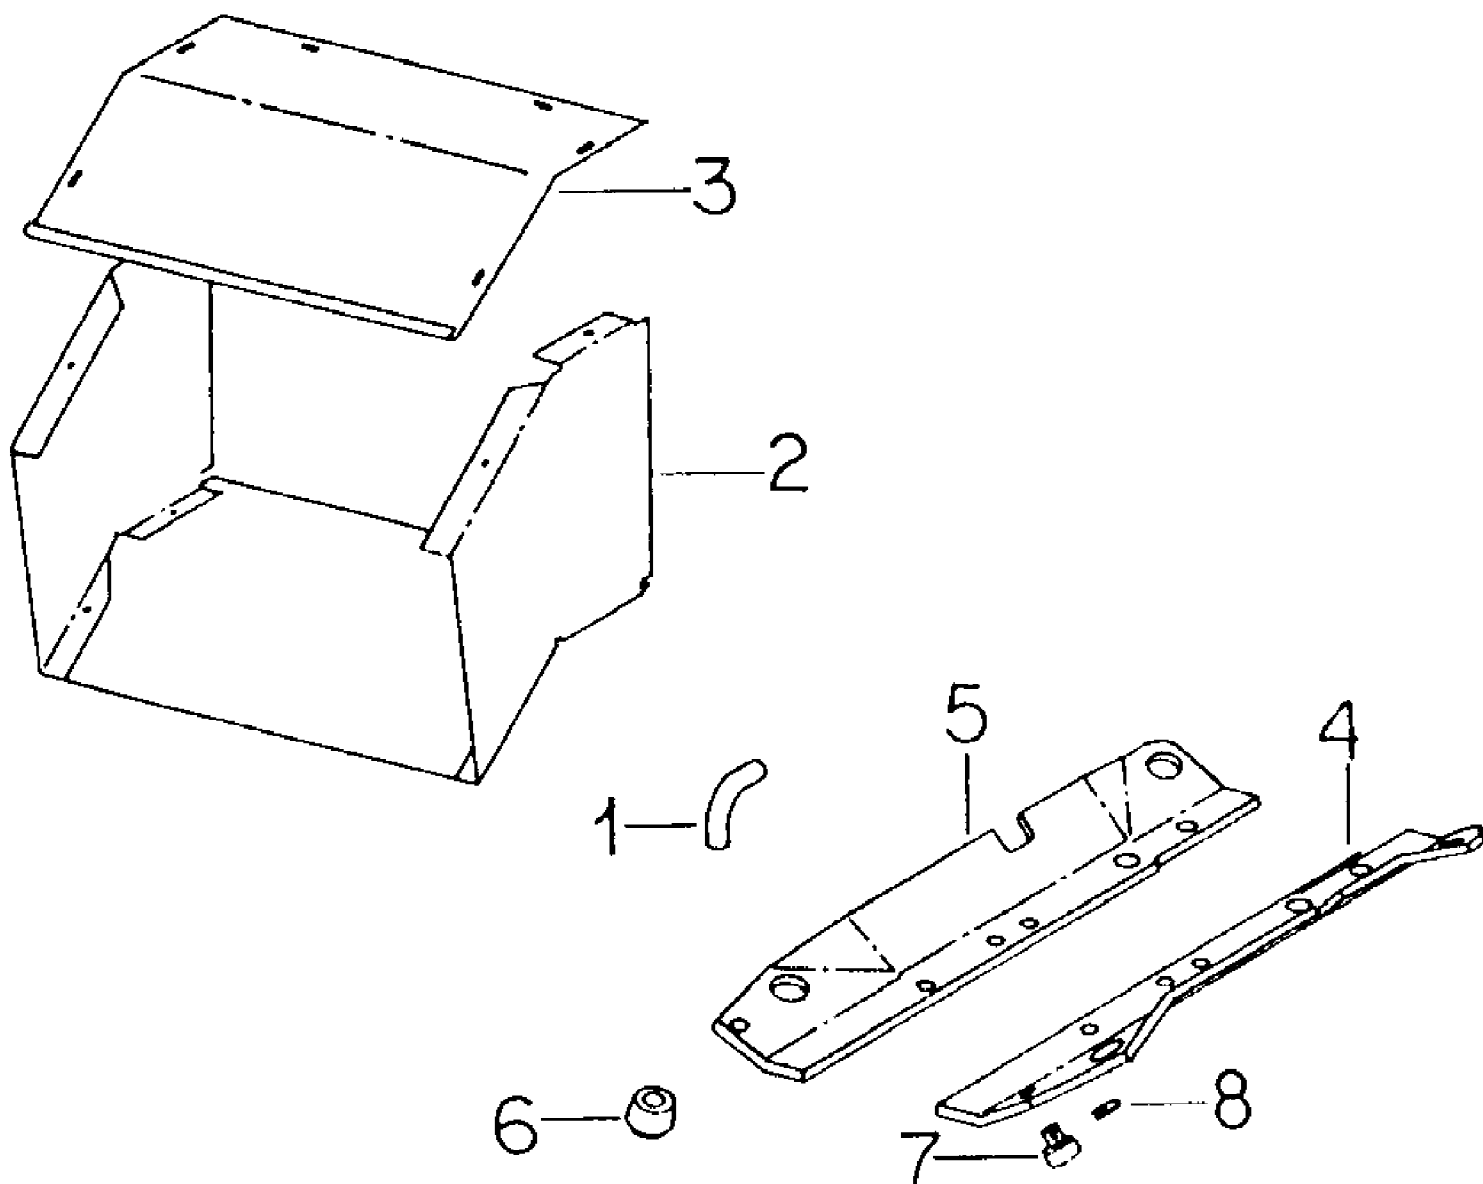


1100

Page 18 of 64

Engine Mounting & Air Duct

Ref #	Part Number	Qty	S/P/F	Description
1	751-3000	1		Pipe, Oil Drain
1	751-3001	1	/P	Plug, 1/4-18 Automotive Hex Hd Pipe
2	~NLA	1		Duct Assy, Air
2	710-0599	6	/P	Screw, 1/4-20 X 1/2 Hex Hd Flange Lock Replaces IH-161108-C1
3	~NLA	1		Top, Air Duct
3	IH-117584-C2	4	/P	Screw, No. 10-32 X 3/8 Znd Hd Flange Lock Replaces IH-117584-C1
4	703-0042-0637	1	/P	Frame, Engine Mount LH
5	703-0043-0637	1	/P	Frame, Engine Mount RH
6	759-3952	4	/P	Mounting Kit, Engine Replaces IH-61509-C2, also order 912-3000
6	710-3011	4	/P	Bolt, 3/8 X 2-1/4 Type 5
6	912-3000	4	/P	Nut, 3/8 Cad P/T Lock Type 5 Do not over-torque
7	IH-61510-C1	2	/P	Bumper, Snubbing Mount Replaces 722-3004
8	703-0044	6	/P	Shim, Snubbing Mount or as required
8	712-3006	2	/P	Nut, 1/4 Type 5

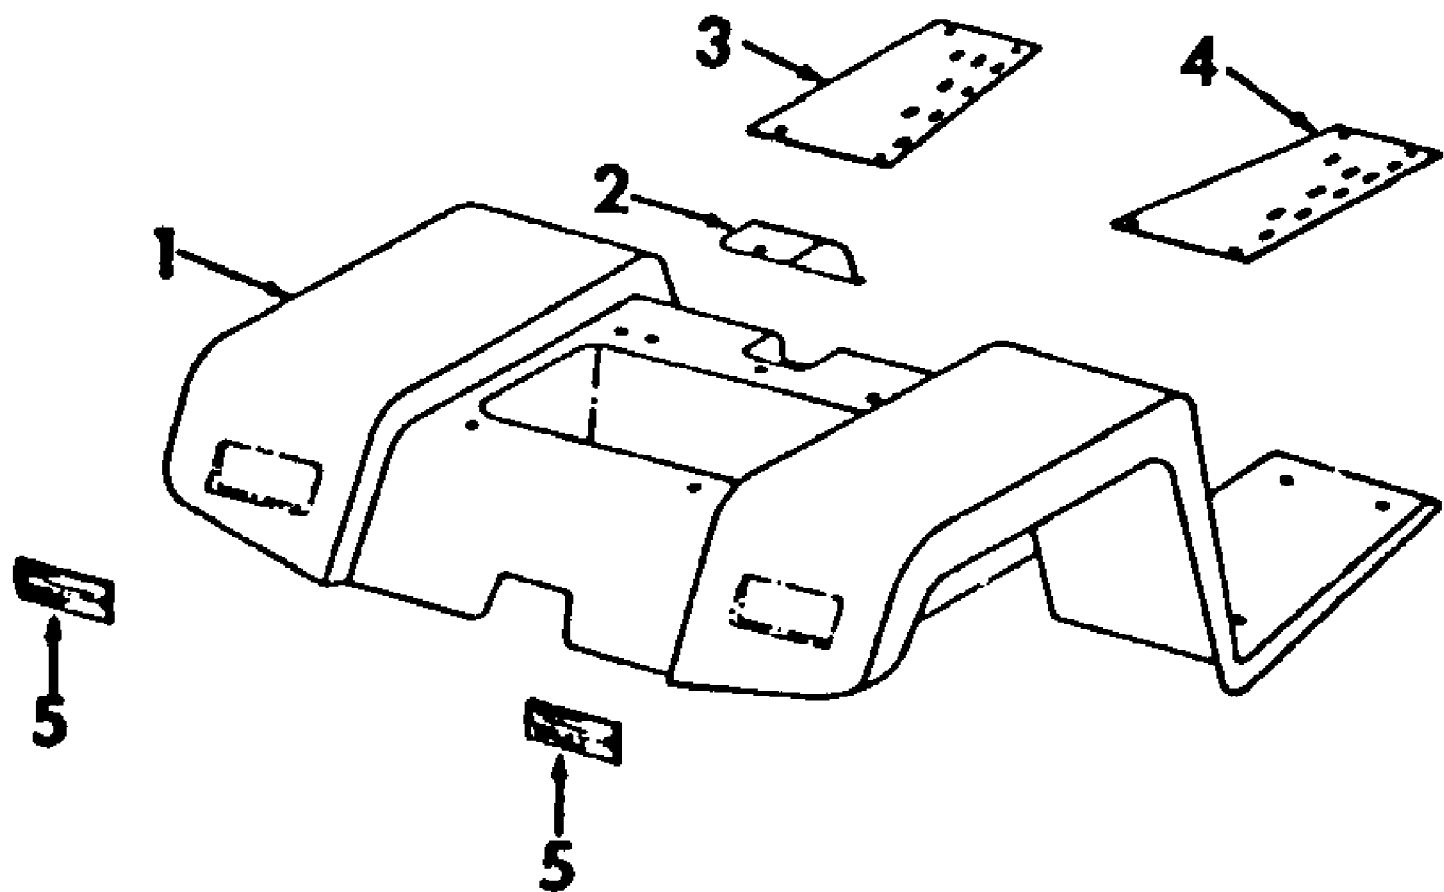


1100
Fender & Connections

Page 20 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	IH-545474-R2	1		Fender Assy
	710-0376	4	/P	Bolt, 5/16 X 1 Type 5
	IH-25708-R1	4	S	Washer, .344 X .750 X .054
2	703-0067	1		Cover, Hydrostatic Center
	710-3000	1	S	Bolt, 3/8 X 3/4 Type 5
	736-0140	1	S	Washer, .406 X .812 X .051
3	~NLA	1		Tread, Platform LH
		4		Screw, 5/16-18 X 5/8 C-Z Slit-Truss-Hd (Common Hardware, Purchase Locally)
4	~NLA	1		Tread, Platform RH
		4		Screw, 5/16-18 X 5/8 C-Z Slit-Truss-Hd (Common Hardware, Purchase Locally)
5	730-3000	2	S	Reflector
		4		Screw, No. 8 X 1/2 Znp P/Hdcr Mach (Common Hardware, Purchase Locally)
	712-0142	4	/P	Nut, No. 8 Mach Screw Type 1

1100
Flywheel Magneto & Points

Page 21 of 64

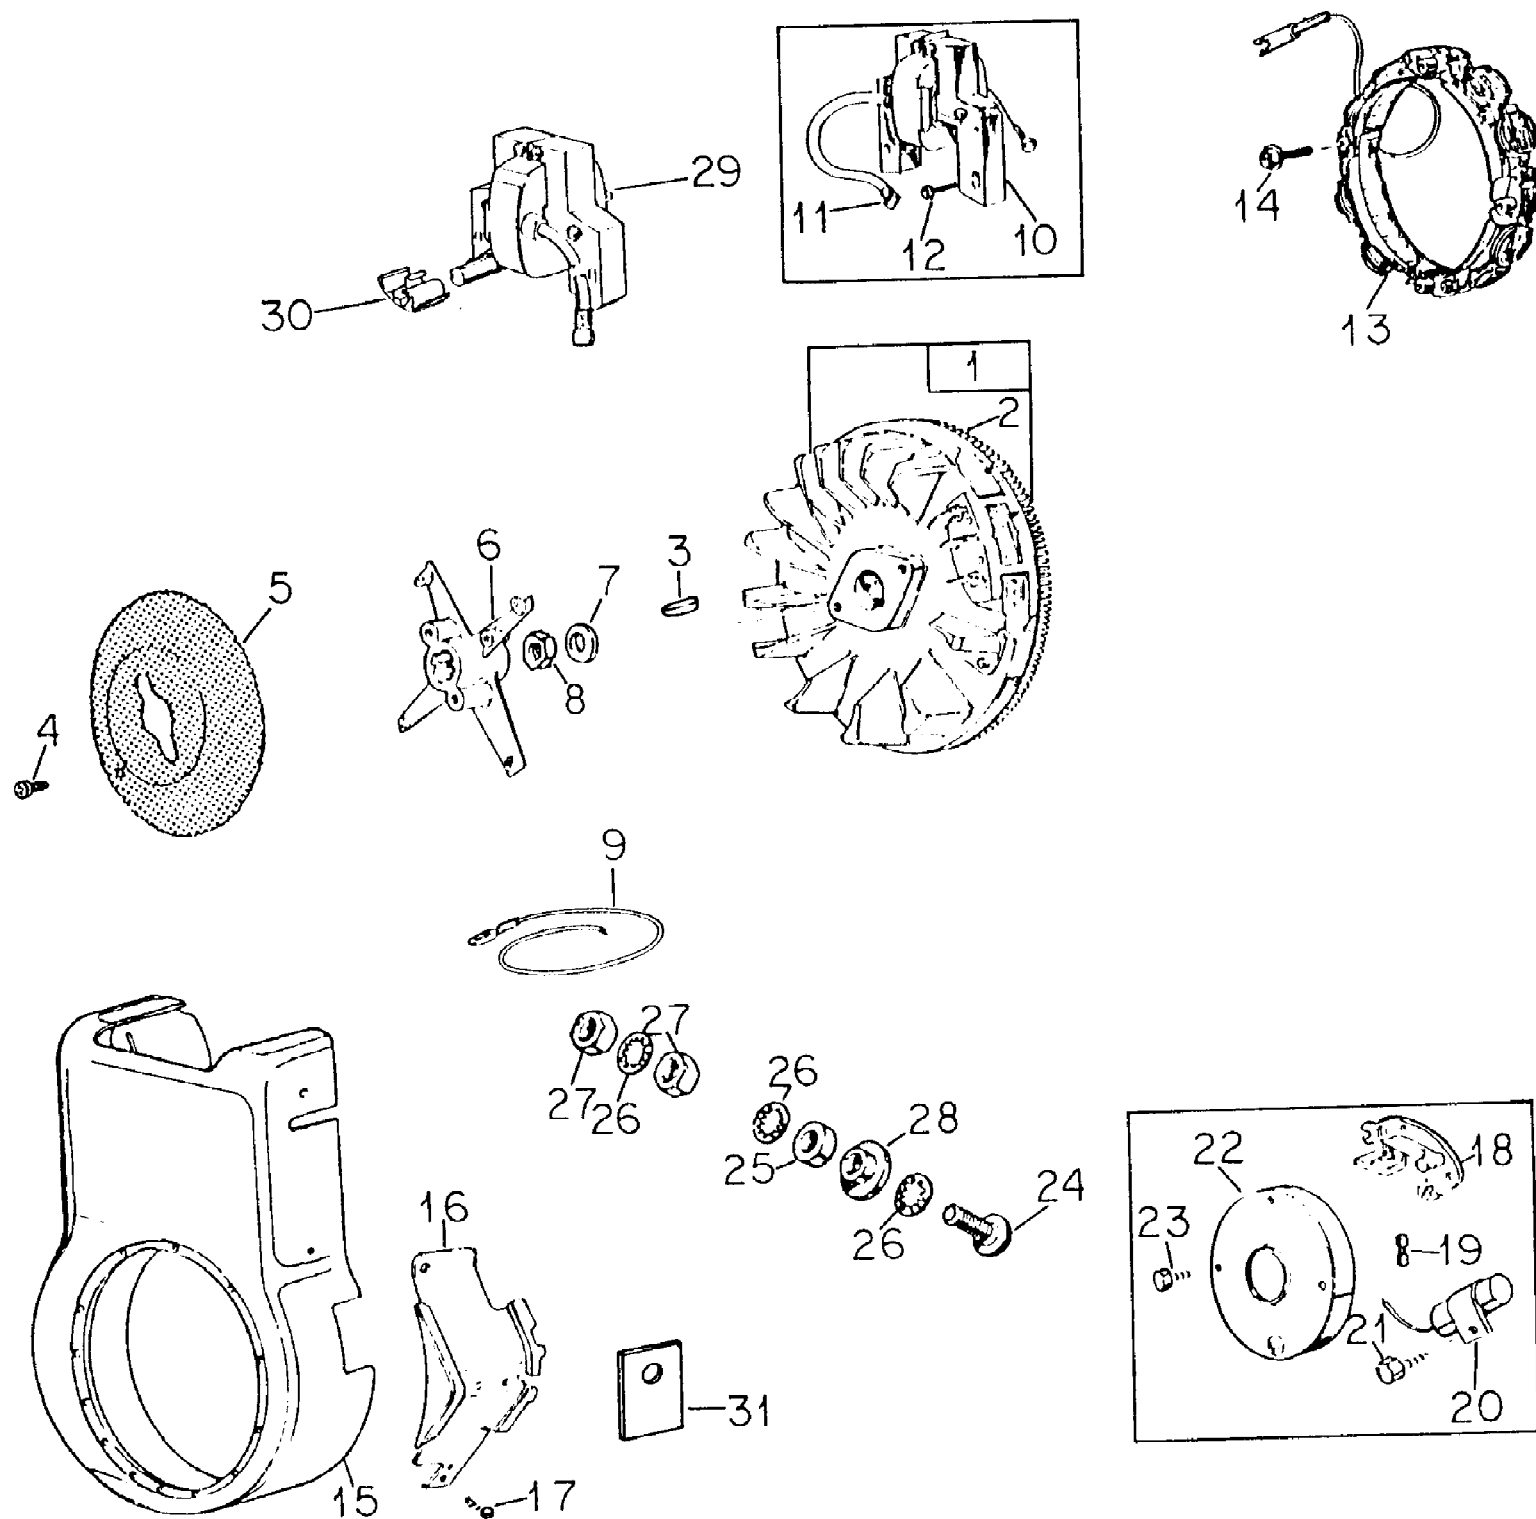

1100
Flywheel Magneto & Points

Page 22 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	BS-391988	1		Flywheel w/Ring Gear Assy, Magneto (Tractor w/Serial No. 646219 & below)
	BS-392406	1		Flywheel w/Ring Gear Assy, Magneto (Tractor w/Serial No. 646220 & above)
2	BS-392134	1	S	Gear, Flywheel Ring
3	BS-222698	1	S	Key, Flywheel
4	BS-93808	4	S	Screw, Flywheel Screen
5	IH-76594-C1	1		Screen, Flywheel
6	BS-212159	1		Fan, Booster
	710-3103	2	/P	Bolt, 5/16 X 2 Type 5
	736-0119	2	S	Washer, 5/16 Lock
7	BS-220865	1		Washer, Spring
8	712-3056	1	/P	Nut, 5/8-NF Jam Type 5
9	BS-398808	1		Wire, Ground
10	BS-298968	1	/P	Armature Assy, Magneto (Tractor w/Serial No. 646219 & below)
11	BS-221798	1	S	Terminal, Magneto Cable
12	BS-93381	4		Screw, Armature Mounting
13	BS-392595	1	S	Stator, Alternator
14	BS-93621	4	/P	Screw, Stator Mounting
15	IH-76579-C1	1		Housing, Blower
16	BS-395405	1	/P	Cover, Starter Shield
17	BS-93410	2		Screw, Starter Shield
18	BS-391284	1		Breaker Assy, Ignition Points (Tractor w/Serial No. 646219 & below)
19	BS-65704	1		Plunger, Breaker Points (Tractor w/Serial No. 646219 & below)
	~NLA	1		Screw, No. 8 X 5/16 Znp H/Hds L/W Mach
20	BS-29861	1		Condenser (Tractor w/Serial No. 646219 & below)
21	BS-93042	1		Screw, Condenser Mounting (Tractor w/Serial No. 646219 & below)
22	IH-76598-C1	1		Cover, Points & Condenser (Tractor w/Serial No. 646219 & below)
23	BS-93705	3	S	Screw, Cover Mounting (Tractor w/Serial No. 646219 & below)
24	~NLA	1		Screw, Terminal Mounting
25	BS-66068	1		Washer, Insulating
26	BS-92791	3	S	Washer, No. 8 Int Tooth Lock
27	712-0142	2	/P	Nut, No. 8-32 Hex Mach Screw Terminal
28	BS-66554	1		Collar, Insulating
29	BS-398811	1	/P	Armature Assy (Tractor w/Serial No. 646220 & above)
30	BS-280186	1		Shield, Capsule (Tractor w/Serial No. 646220 & above)
31	BS-222095	1		Retainer, Wire (Tractor w/Serial No. 646220 & above)

1100


Page 23 of 64

Flywheel Magneto & Points

Ref #	Part Number	Qty	S/P/F	Description
	BS-93705	1	S	Screw, Retainer

1100
Frame & Hitches

Page 24 of 64

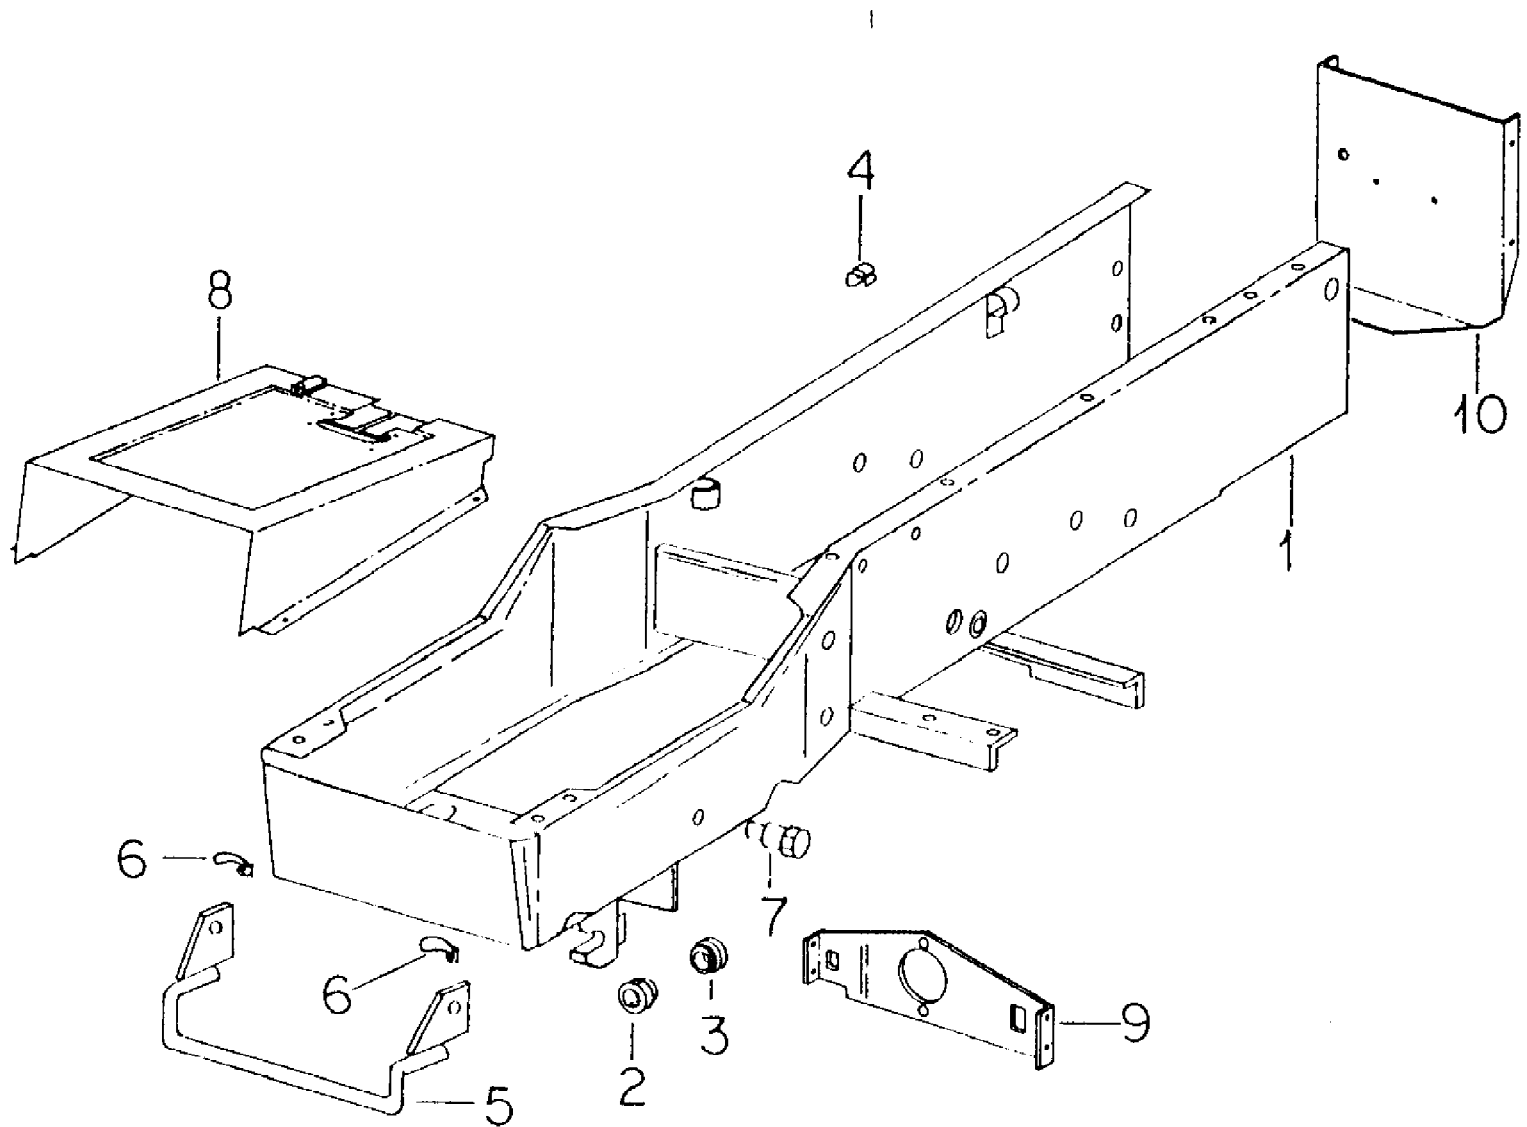


1100
Frame & Hitches

Page 25 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	~NLA	1		Frame Assy, Main
2	IH-384837-R1	1		Bushing, Front Axle Pivot Pin
3	711-3005	1	/P	Bushing, Front Axle Pivot Pin Rear
4	~NLA	4		Clip, Cable
5	IH-544170-R1	1		Hitch Assy, Quick
	711-3010	2	S	Pin, 3/8 X 1.060 Clevis
	714-0507	2	S	Pin, 3/32 X 3/4 Cot
6	IH-402344-R3	2	S	Spring, Latch
7	738-3001	2	S	Bolt, Implement Mtg Shoulder
	736-0272	2	S	Washer, Implement Mtg
8	~NLA	1		Cover Assy, Frame w/Product Graphic
	~NLA	1		Product Graphic, Caution
	~NLA	5		Rivet, Pop
	714-0115	1	S	Pin, 1/8 X 1 Cot
	710-3007	4	/P	Screw, No. 12 X 3/8 H/Whd Tap
9	703-0035	1		Bracket, Angle Drive
	710-0118	4	S	Bolt, 5/16 X 3/4 Type 5
	712-3004	4	S	Nut, 5/16 Flange Lock
10	703-0036	1		Drawbar Assy
	710-3000	4	S	Bolt, 3/8 X 3/4 Type 5
	736-3004	2	S	Washer, .406 X .875 X .105
		2		Washer, .406 X 1.250 X .090 Pln (Common Hardware, Purchase Locally)

1100
Front Axle

Page 26 of 64

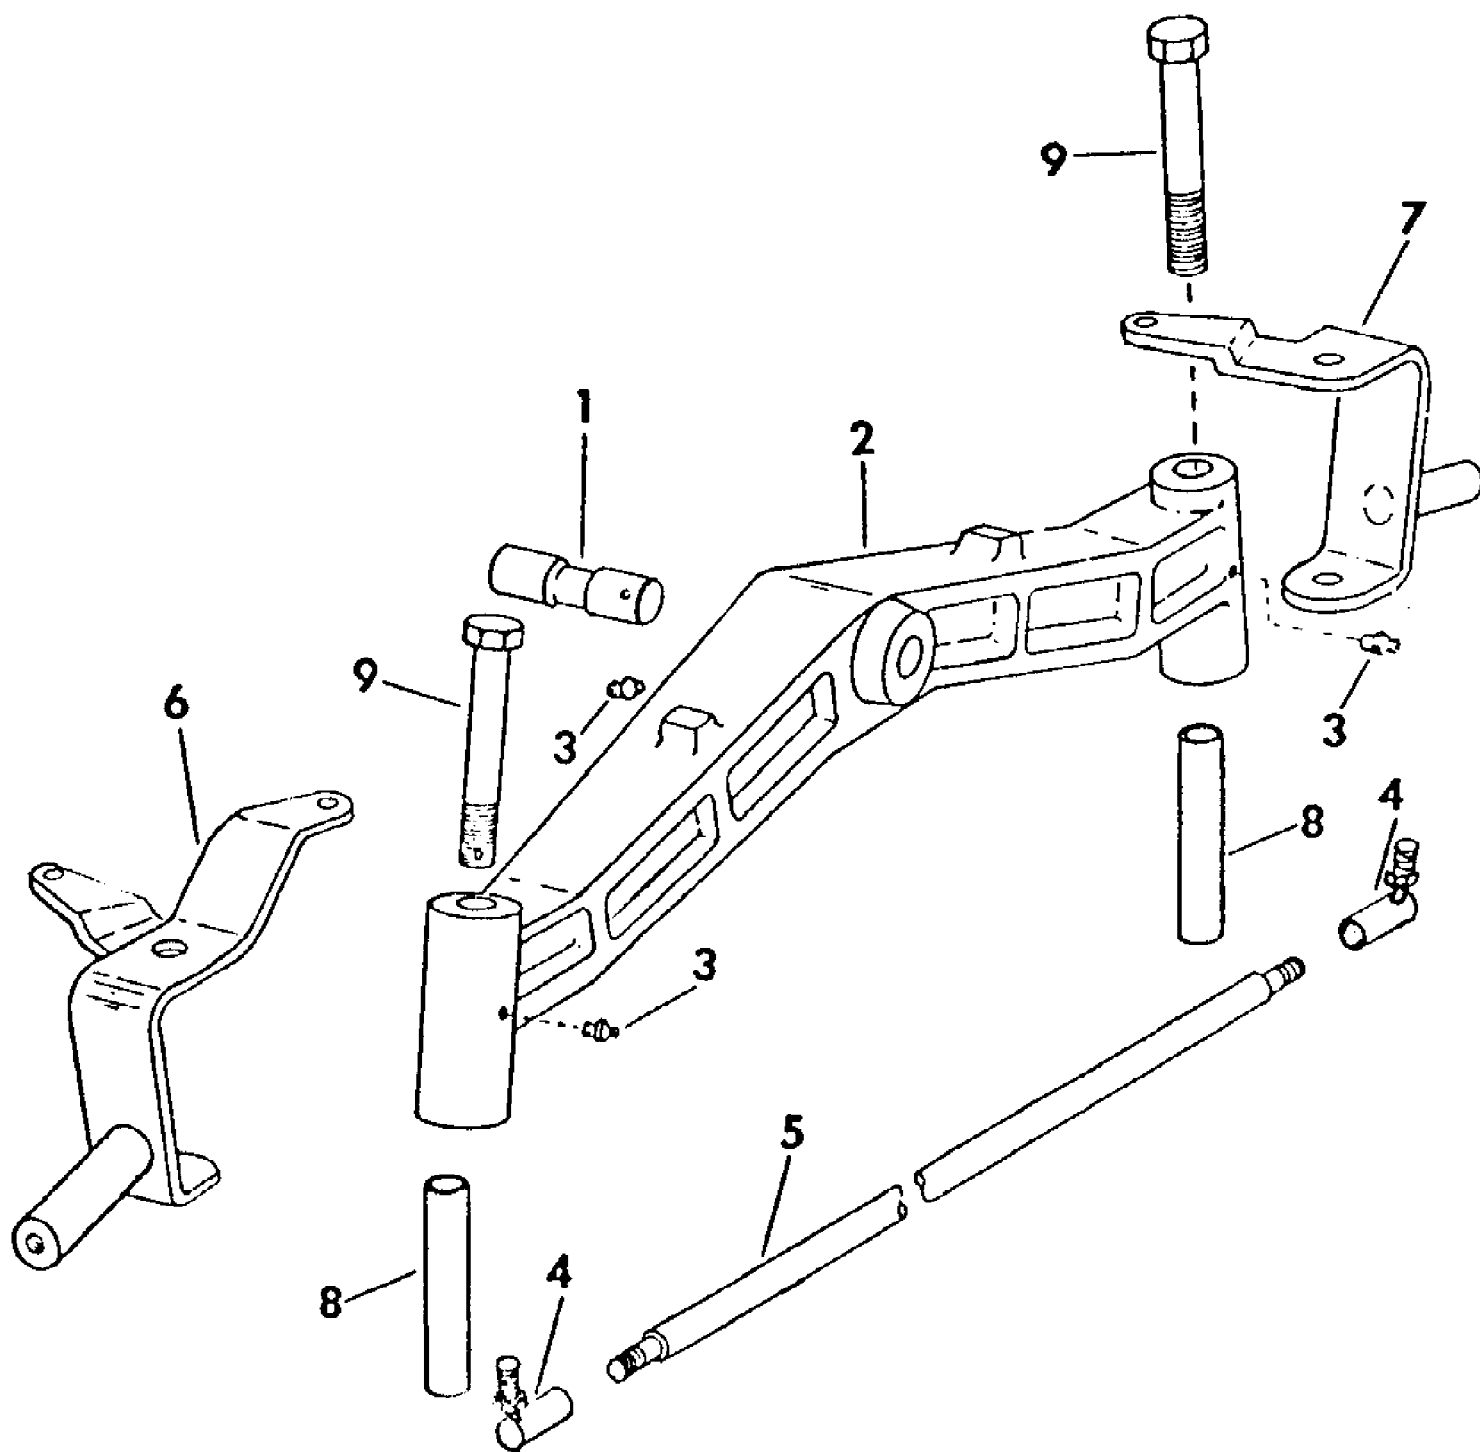


1100
Front Axle

Page 27 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	IH-384626-R3	1	S	Pin, Front Axle Pivot
	715-0134	1	S	Pin, 3/16 X 1-1/2 Hv Pln Coiled Spring
2	759-3270	1		Axle, Front
3	737-3000	3	S	Fitting, 3/16 Drive Type Str Lube
4	723-3000	2	S	Joint Assy, Ball
	712-3002	2	S	Nut, 3/8-24 C-Z Slit Hex
	714-0507	2	S	Pin, 3/32 X 3/4 C-Z Cot
5	711-3018	1	/P	Rod, Tie
	712-3001	2	S	Nut, 3/8-24 Hex
6	IH-544212-R1	1		Knuckle Assy, Steering LH (Tractors w/Serial No. 632501 & below)
	IH-24839-R1	1	S	Bolt, 3/8 X 3/4 Pln Type 5
		1		Washer, 13/32 X 1-1/2 X 11 Ga (Common Hardware, Purchase Locally)
	703-0083	1	S	Knuckle Assy, Steering LH (Tractors w/Serial No. 632502 & above)
	IH-24839-R1	1	S	Bolt, 3/8 X 3/4 Pln Type 5
	736-3011	1	/P	Washer, .406 X 1.750 X .105
7	IH-544217-R1	1		Knuckle Assy, Steering RH (Tractors w/Serial No. 632501 & below)
	IH-24839-R1	1	S	Bolt, 3/8 X 3/4 Pln Type 5
		1		Washer, .406 X 1.500 X .105 Pln (Common Hardware, Purchase Locally)
	703-0085	1	S	Knuckle Assy, Steering RH (Tractors w/Serial No. 632502 & above)
	IH-24839-R1	1	S	Bolt, 3/8 X 3/4 Pln Type 5
	736-3011	1	/P	Washer, .406 X 1.750 X .105
8	750-3002	2	S	Spacer, Steering Knuckle
9	710-3020	2	/P	Bolt, Steering Knuckle
	712-3012	2	S	Nut, 1/2-20 Znd Slit
		2		Pin, 3/32 X 1 C-Z Cot (Common Hardware, Purchase Locally)

1100
Front Wheels


Page 28 of 64

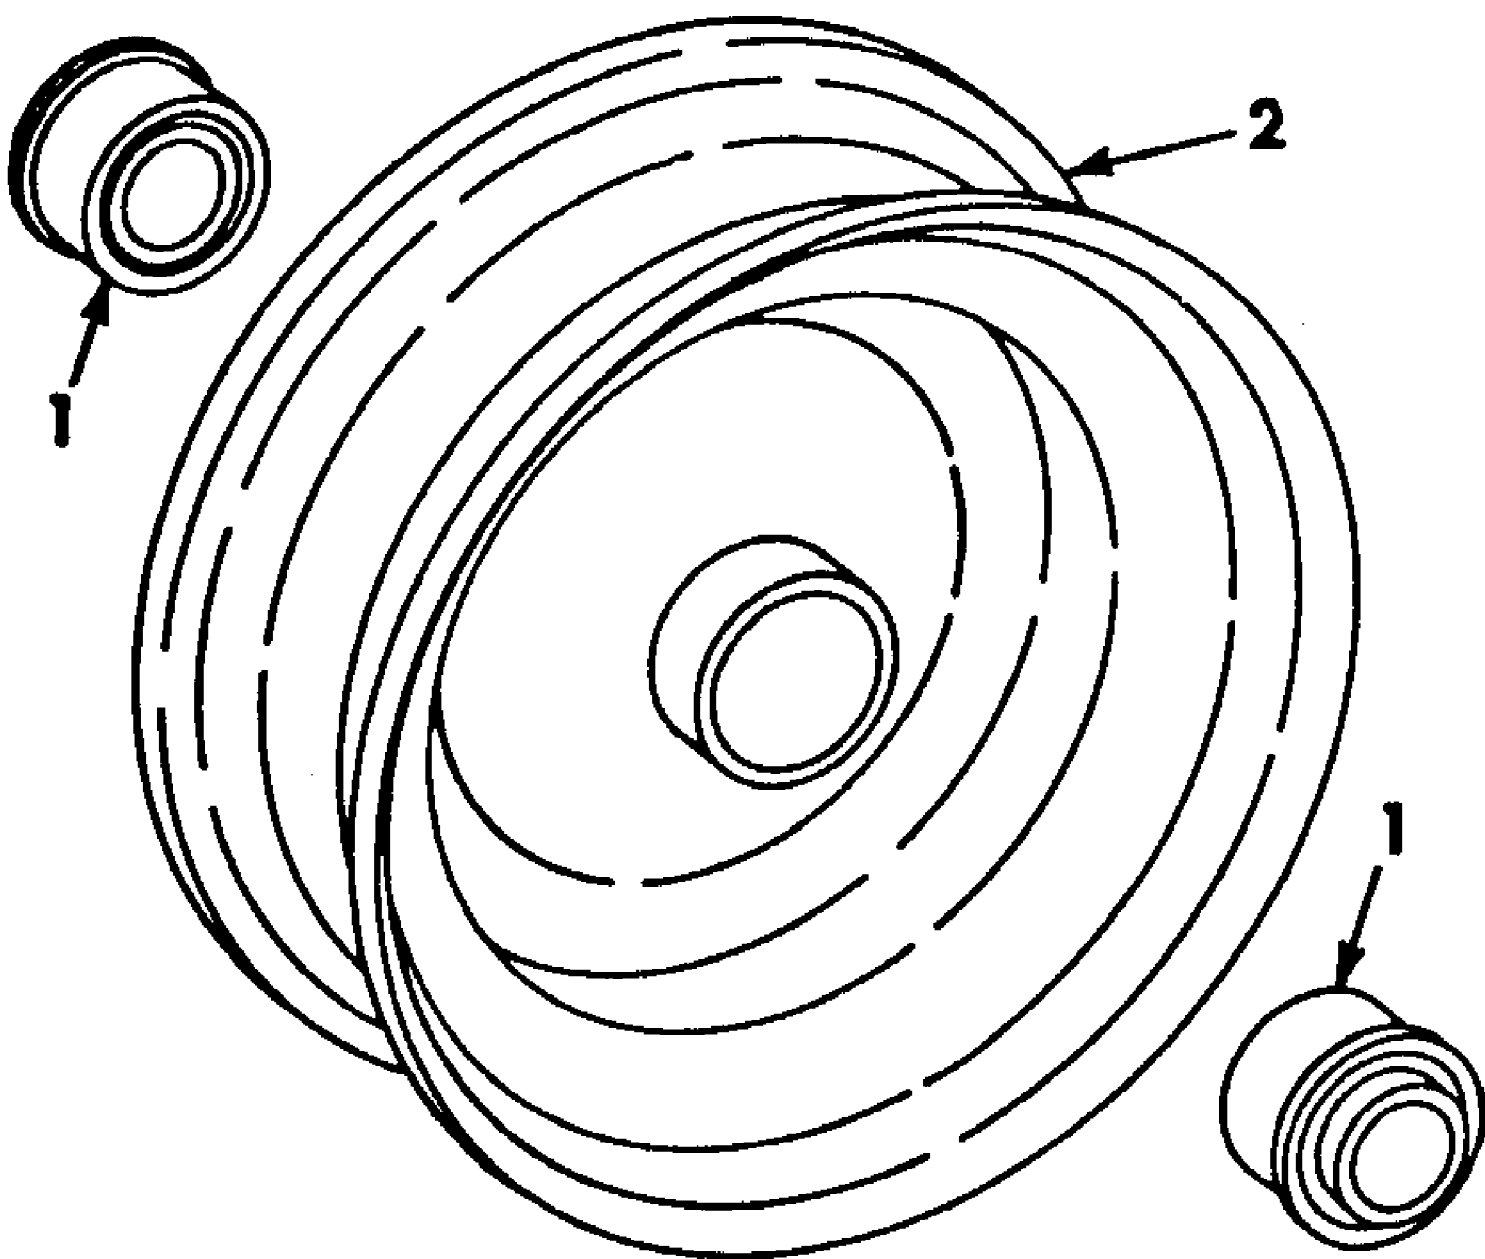

1100
Front Wheels

Page 29 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	IH-384881-R93	4	S	Bearing, Wheel Ball (Serial No. 632501 & below)
	741-3002	4	S	Bearing Assy, Front Wheel (Serial No. 632502 & above)
2	IH-545730-R2	2	/P	Wheel Assy, Front 5.38 X 8 Rim for 6.50-8 Tire (Serial No. 632501 & below)
	734-3053	2		Wheel Assy, Front 5.38 X 8 Rim for 6.50-8 Tire (Serial No. 632502 & above)
	734-0255	2	S	Valve, TR-413 Tubeless Type

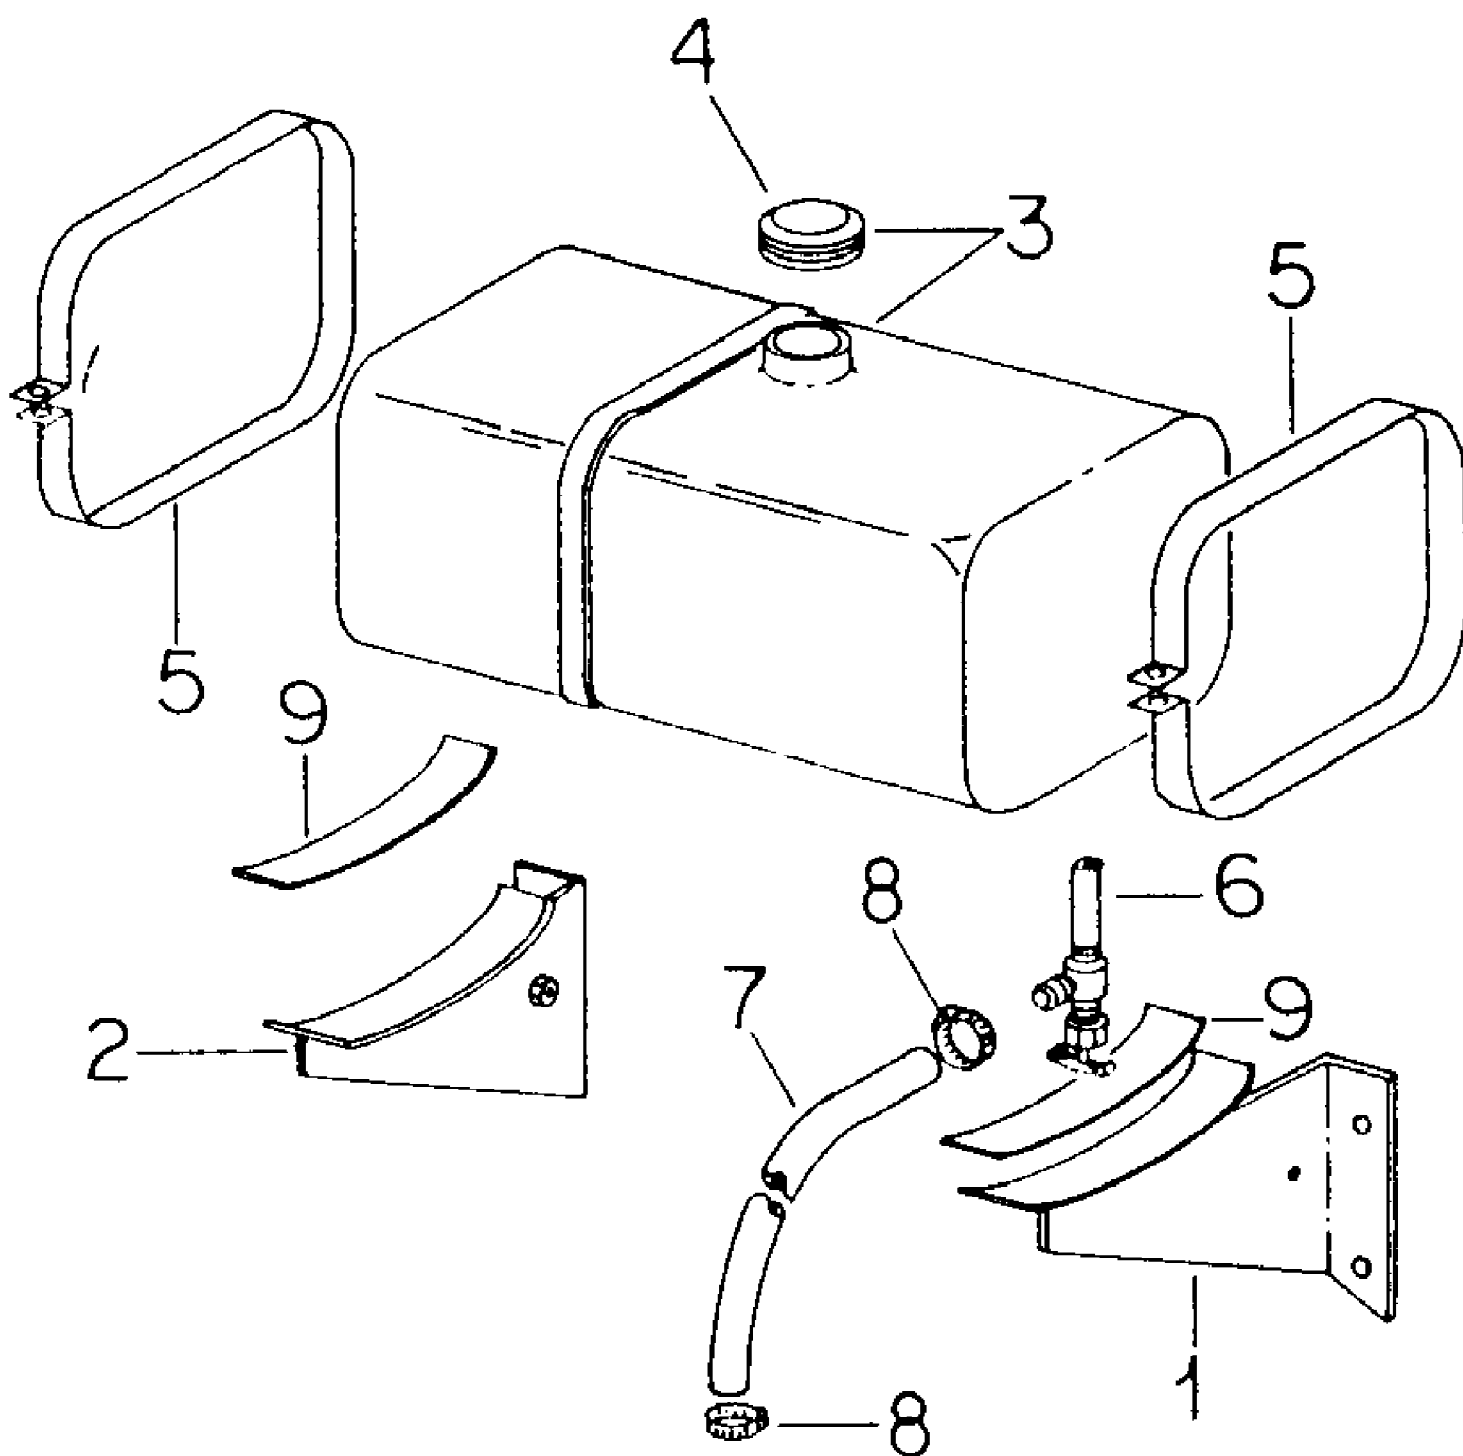

1100


Page 31 of 64

Fuel Tank & Mounting

Ref #	Part Number	Qty	S/P/F	Description
1	IH-547732-R1	1		Bracket Assy, Tank LH
	710-3039	2	/P	Screw, 5/16 X 1/2 Type 5
2	~NLA	1		Bracket Assy, Tank RH
	710-3039	2	/P	Screw, 5/16 X 1/2 Type 5
3	KH-235935	1	S	Tank, Fuel
4	KH-236655	1	/P	Cap, Fuel Filler
5	KH-A-236942	2	/P	Strap, Fuel Tank
		2		Bolt, 1/4 X 1-1/4 Type 5 (Common Hardware, Purchase Locally)
	IH-20244-R1	2		Nut, 1/4 P/T Lock Type 5
6	751-3015	1	S	Valve, Shutoff
7	IH-427682-C1	1		Hose, Fuel & Oil
8	IH-210511-R1	2		Clamp, 1/2 Inch Dia Type E Hose
9	IH-404831-R1	2		Pad, Fuel Tank

1100
Grille

Page 32 of 64

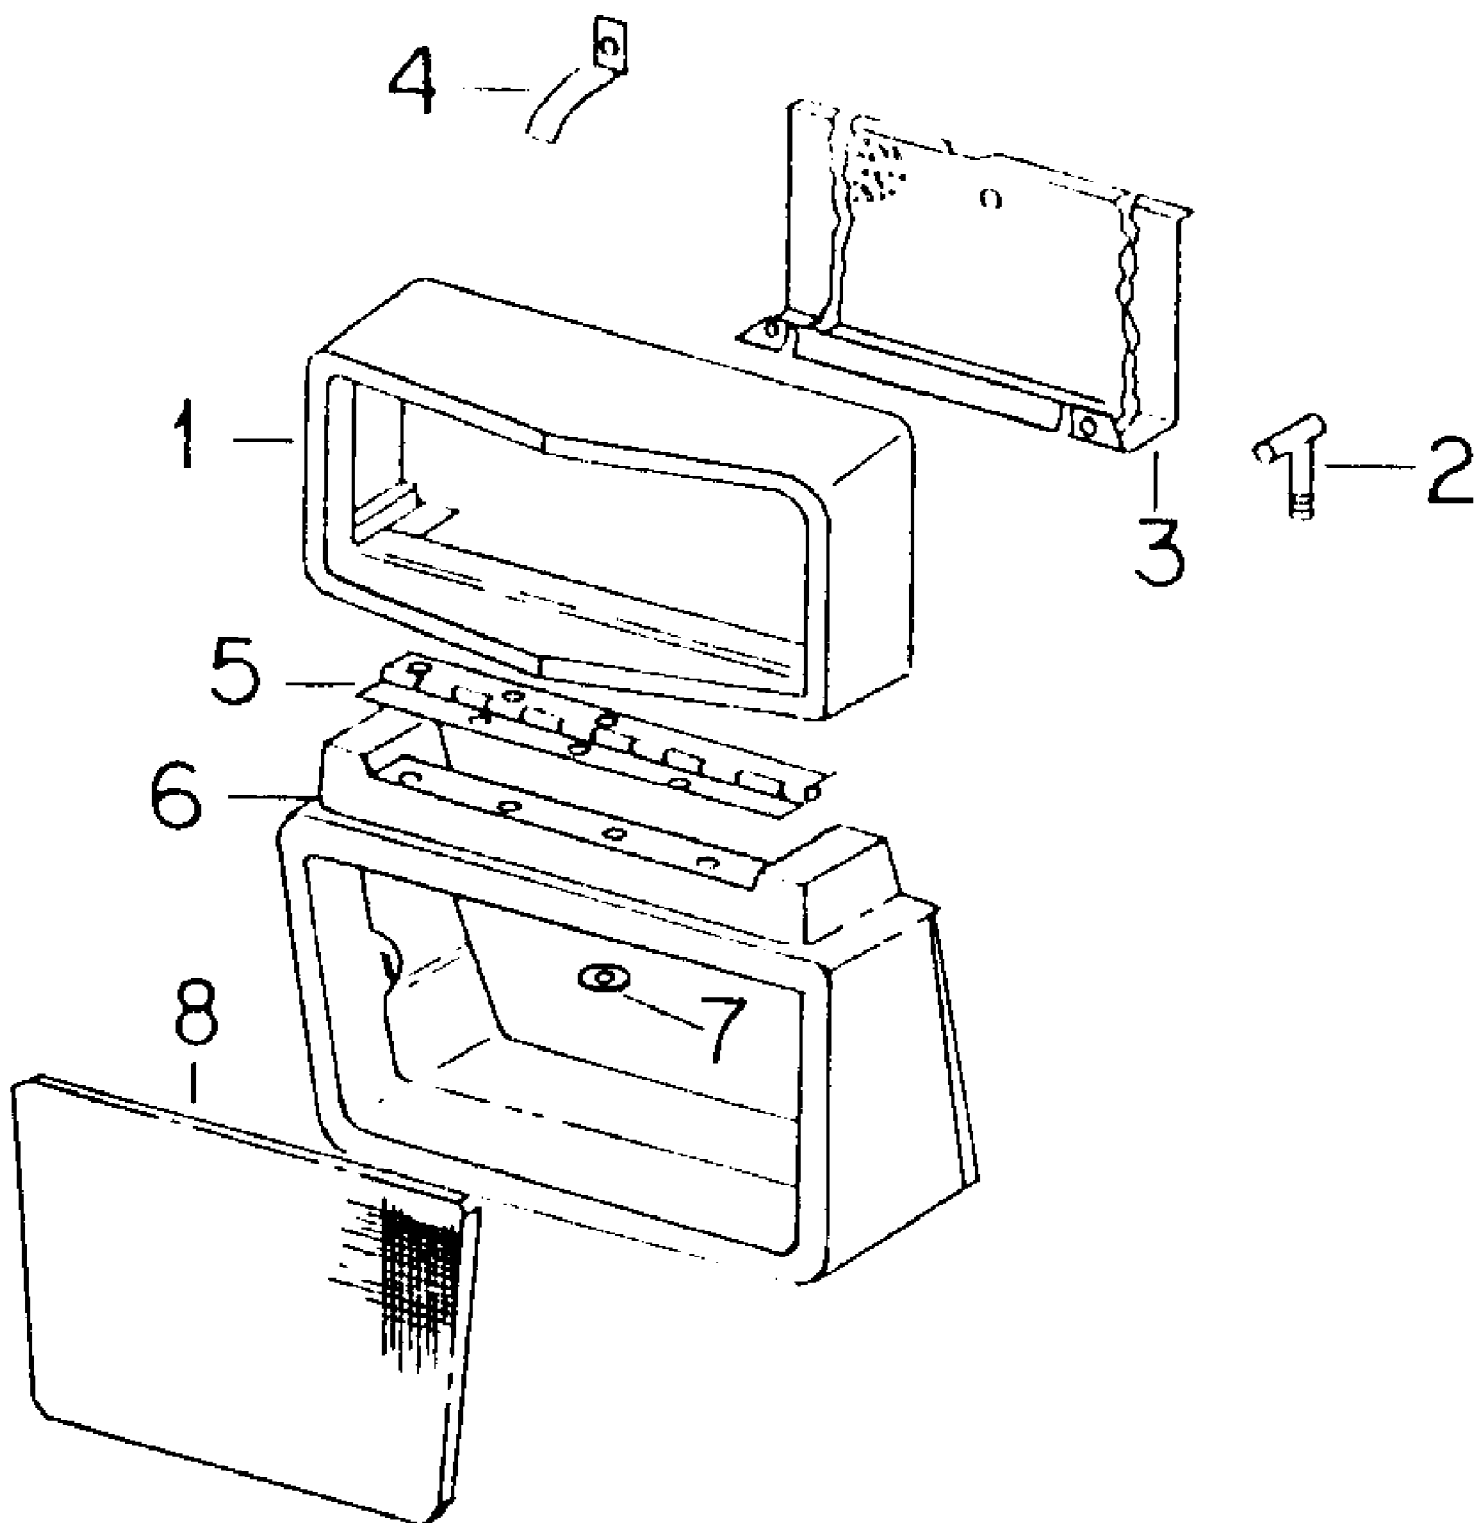


1100
Grille

Page 33 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	IH-61294-C1	1	S	Grille, Hood Extension
2	IH-545522-R1	2	S	Bolt, Tee
	712-3006	2	/P	Nut, 1/4 Type 5
	736-0463	2	S	Washer, .281 X .625 X .051
	710-3021	1	/P	Screw, 5/16 X 5/8 H/Hd Tap
3	IH-61418-C1	1		Panel, Grille
4	IH-106617-C2	1		Clip, Panel Retainer
5	IH-106254-C1	1		Hinge, Hood
	710-3021	6	/P	Screw, 5/16 X 5/8 H/Hd Tap
	736-0275	3	S	Washer, .344 X .688 X .051
6	~NLA	1		Housing, Grille
	710-3005	4	/P	Bolt, 3/8 X 1-1/4 Type 5
	IH-614452-R1	4	S	Washer, .406 X 1.250 X .090
7	736-3055	1	S	Washer, Ground Strap
8	IH-73484-C1	1		Insert, Grille
	IH-27095-R1	2		Screw, No. 10 x 1 Phc P/Hdcr Mach
	IH-118676	2	S	Washer, .219 X .500 X .036 Phc
	712-0998	2	/P	Nut, No. 10 Cad P/T Lock Type 5

1100
Hood & Pedestal

Page 34 of 64

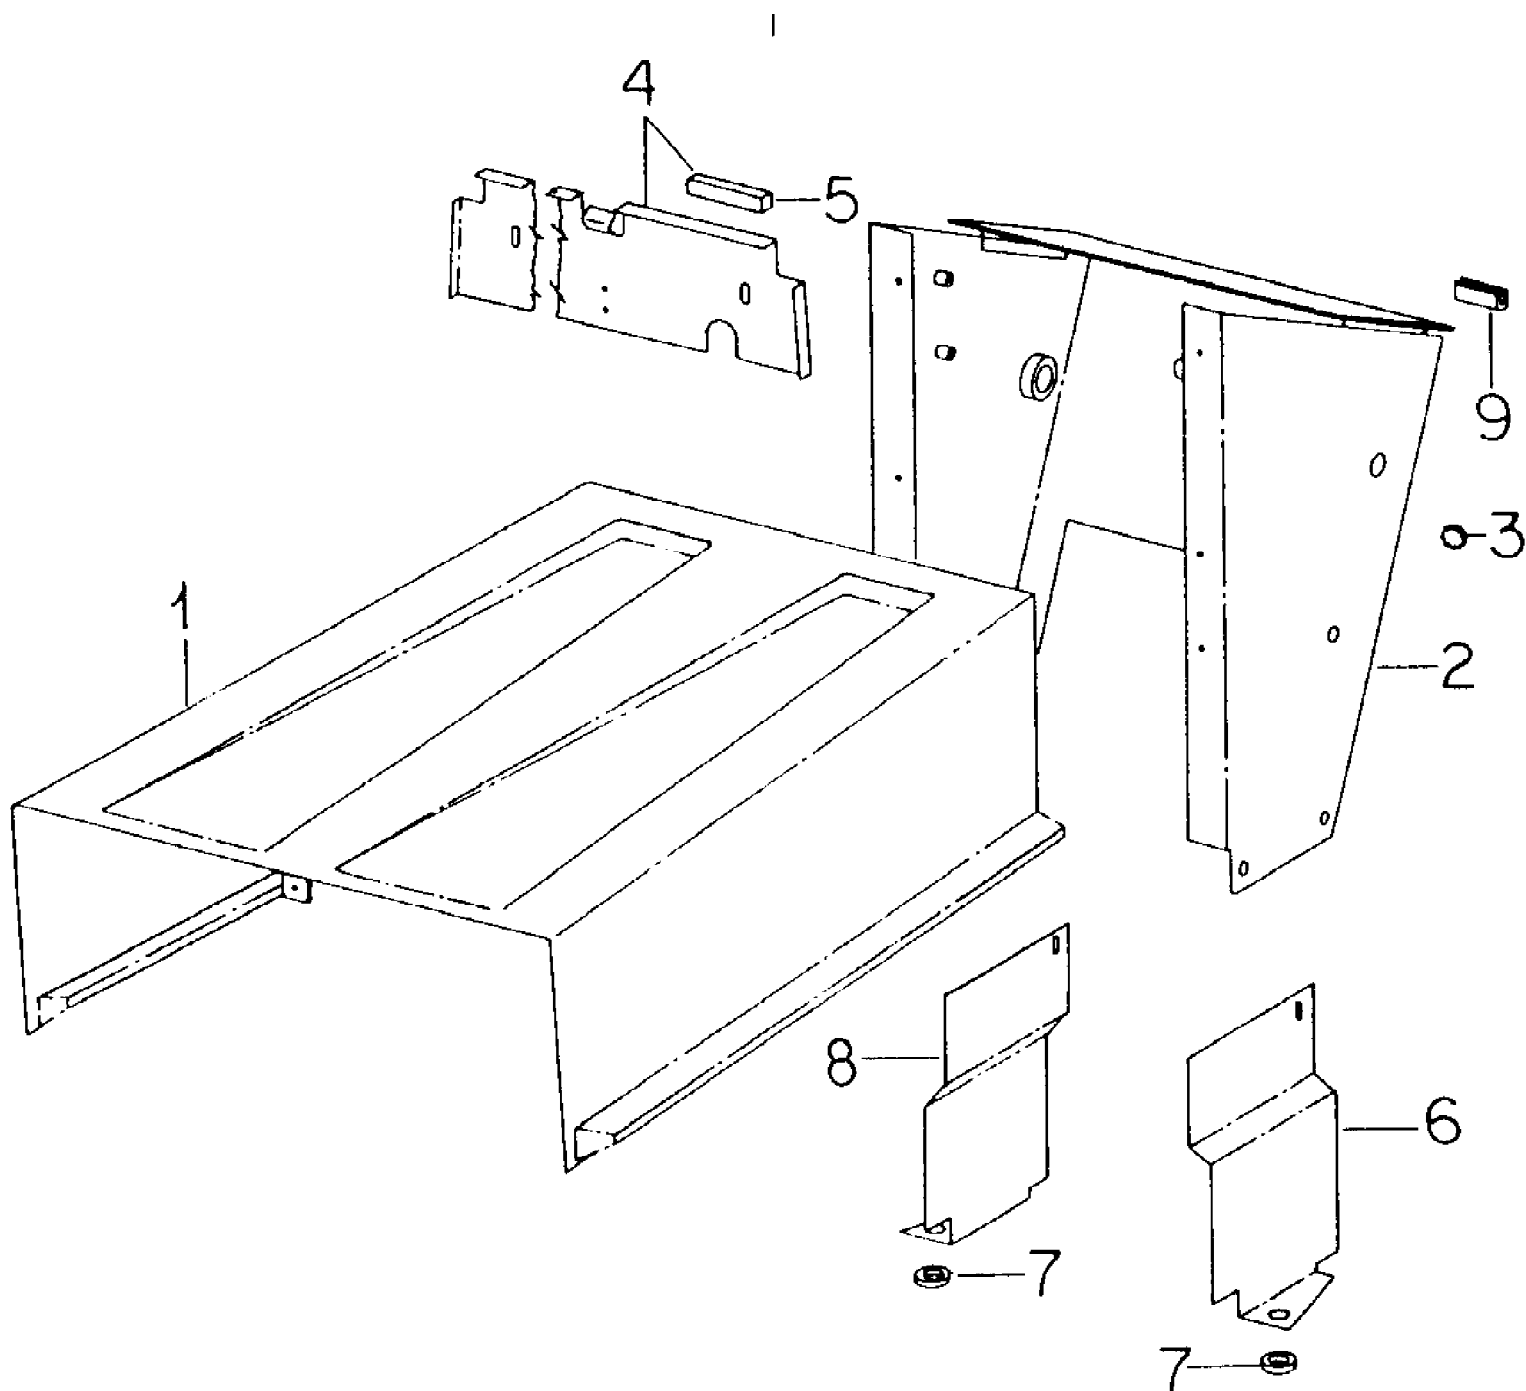


1100
Hood & Pedestal

Page 35 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	IH-61515-C1	1		Hood Assy
2	IH-61518-C3	1		Pedestal Assy, Instrument Panel
	710-3000	4	S	Bolt, 3/8 X 3/4 Type 5
	736-0169	4	S	Washer, 3/8 Lock
3	~NLA	1		Plug, 23/32 Button
4	IH-64533-C3	1		Support Assy, Rear Hood
	710-3039	2	/P	Bolt, 5/16 X 1/2 Type 5
	736-0275	2	S	Washer, .344 X .688 X .051
5	735-3005	2		Strip, Hood, Bumper
	~NLA	1		Adhesive, Tube, Loctite #495
6	IH-132404-C1	1		Panel, Extension LH
7	~NLA	2		Washer, Rubber
		2		Bolt, 1/4 X 3/8 Type 5 (Common Hardware, Purchase Locally)
	IH-282328-C1	2		Washer, .281 X 1.125 X .054
8	IH-132405-C1	1		Panel, Extension RH
		2		Bolt, 1/4 X 3/8 Type 5 (Common Hardware, Purchase Locally)
9	~NLA	1		Grommet, Edge

1100
Implement Handle Helper Spring

Page 36 of 64

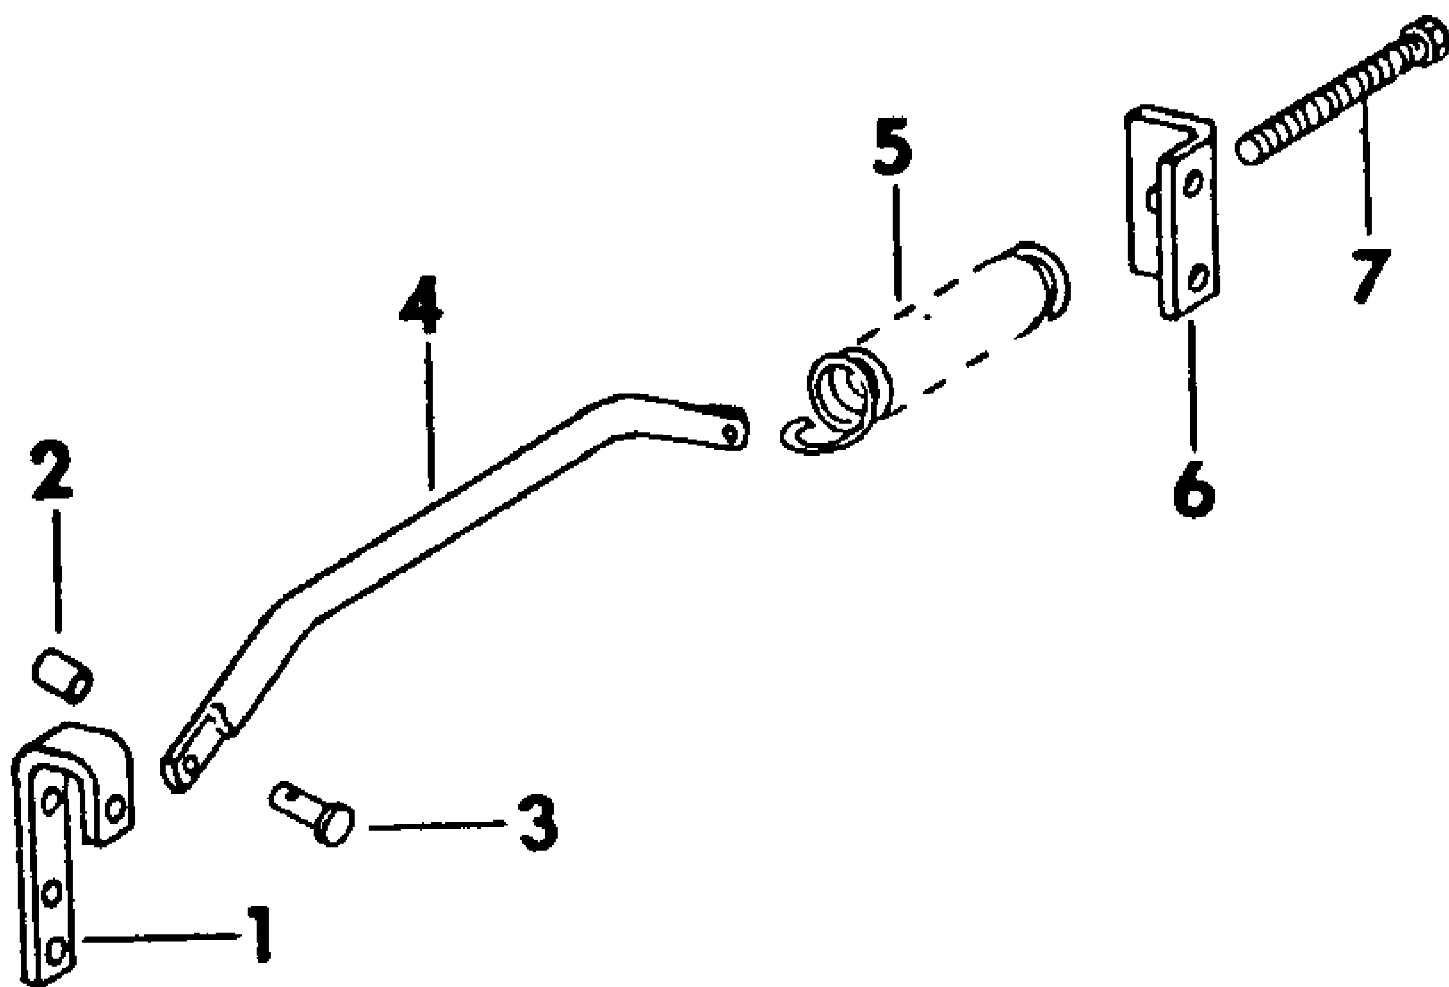

1100


Page 37 of 64

Implement Handle Helper Spring

Ref #	Part Number	Qty	S/P/F	Description
	IH-548380-92	1		Parts Accessory, Implement Handle Helper Spring
1	IH-548381-R1	1		Lever, Helper Spring
	710-3038	2	/P	Bolt, 5/16 X 7/8 Type 5
	712-0267	2	S	Nut, 5/16 Type 5
2	IH-878986-R1	1		Spacer, 1/4 X 5/8 Std Pipe
3	IH-378484-R1	1		Pin, 5/16 X 1-7/8 Znd Std Hd
	736-0160	1	S	Washer, 17/32 X 1 X 16 Ga C-Z
	714-0474	1	S	Pin, 1/8 X 5/8 Cot
4	IH-548382-R1	1		Rod, Helper Spring
5	IH-485298-R1	1		Spring, Tension
6	IH-548383-R1	1		Bracket, Helper Spring
	710-3000	2	S	Bolt, 3/8 X 3/4 Type 5
	712-0798	2	/P	Nut, 3/8 Type 5
7	IH-485351-R1	1		Bolt, Adjustment

1100
Implement Lift Handle


Page 38 of 64

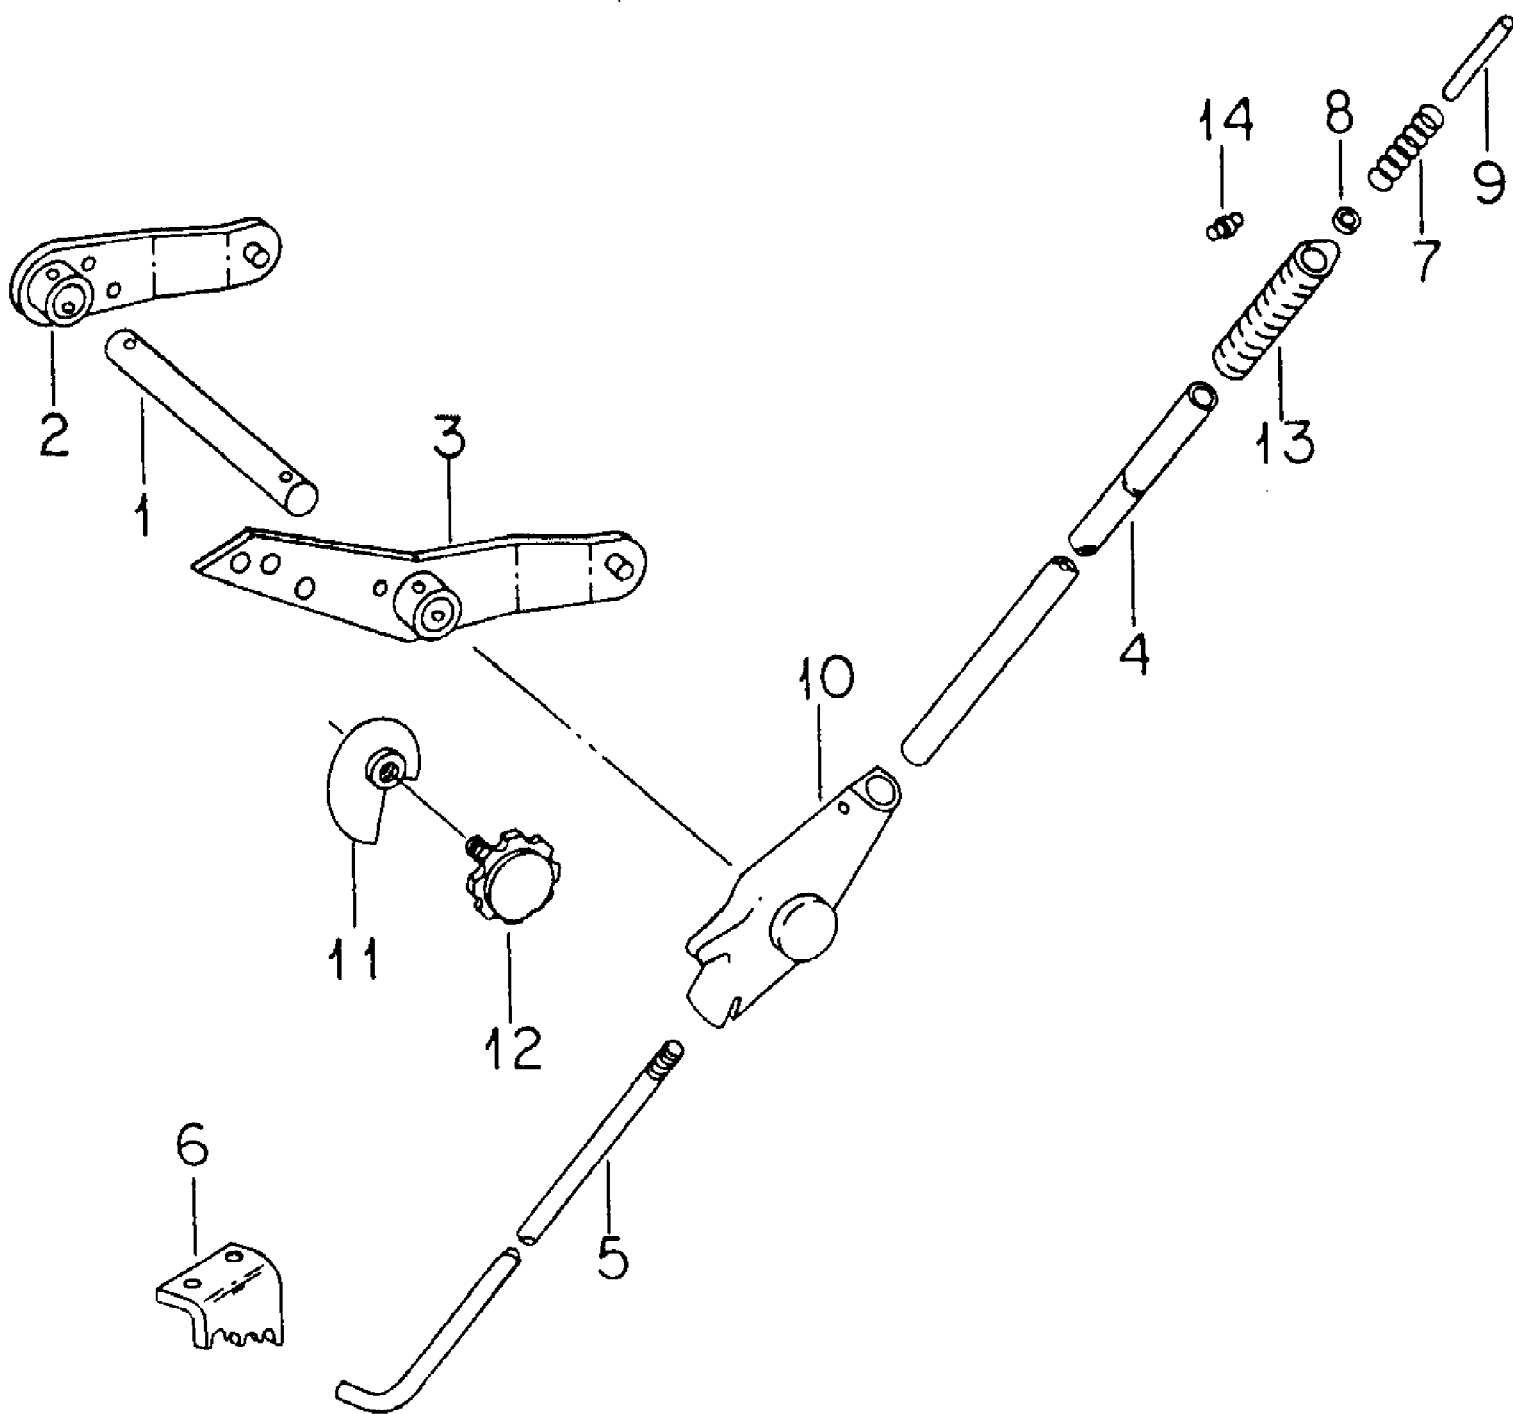

1100
Implement Lift Handle

Page 39 of 64


Ref #	Part Number	Qty	S/P/F	Description
1	IH-544194-R1	1		Rockshaft
2	IH-544195-R1	1		Arm Assy, Lift LH
	715-3002	1	S	Pin, 5/16 X 1-1/2 Hvy Pln Coiled Spring
3	IH-545627-R1	1		Arm Assy, Lift RH
	715-3002	1	S	Pin, 5/16 X 1-1/2 Hvy Pln Coiled Spring
4	IH-544208-R1	1		Handle, Lift
5	IH-106336-C1	1		Rod, Handle Release
6	IH-61347-C1	1		Ratchet, Lift Handle
	710-0514	2	/P	Bolt, 3/8 X 1 Type 5
	712-3000	2	S	Nut, 3/8 Cad P/T Lock Type 5
7	732-3005	1	S	Spring, Rod Return
8	736-3009	1	/P	Retainer, Spring
9	IH-401456-R2	1		Pin, Release Rod
10	~NLA	1		Hub, Lift Handle
	IH-617942-R1	1		Pin, 5/16 X 2-1/4 Hvy Pln Coiled Spring
	IH-19689-R1	1	S	Pin, 1/4 X 1-1/4 Lt Pln Coiled Spring
11	IH-544202-R2	1		Cam Assy, Lift Handle Stop
12	IH-544205-R1	1		Knob, Torque
	IH-178374-R1	1	/P	Washer, .531 X 1.125 X .054
13	IH-401448-R1	1		Grip
14	IH-401449-R1	1		Lock Assy, Release Rod

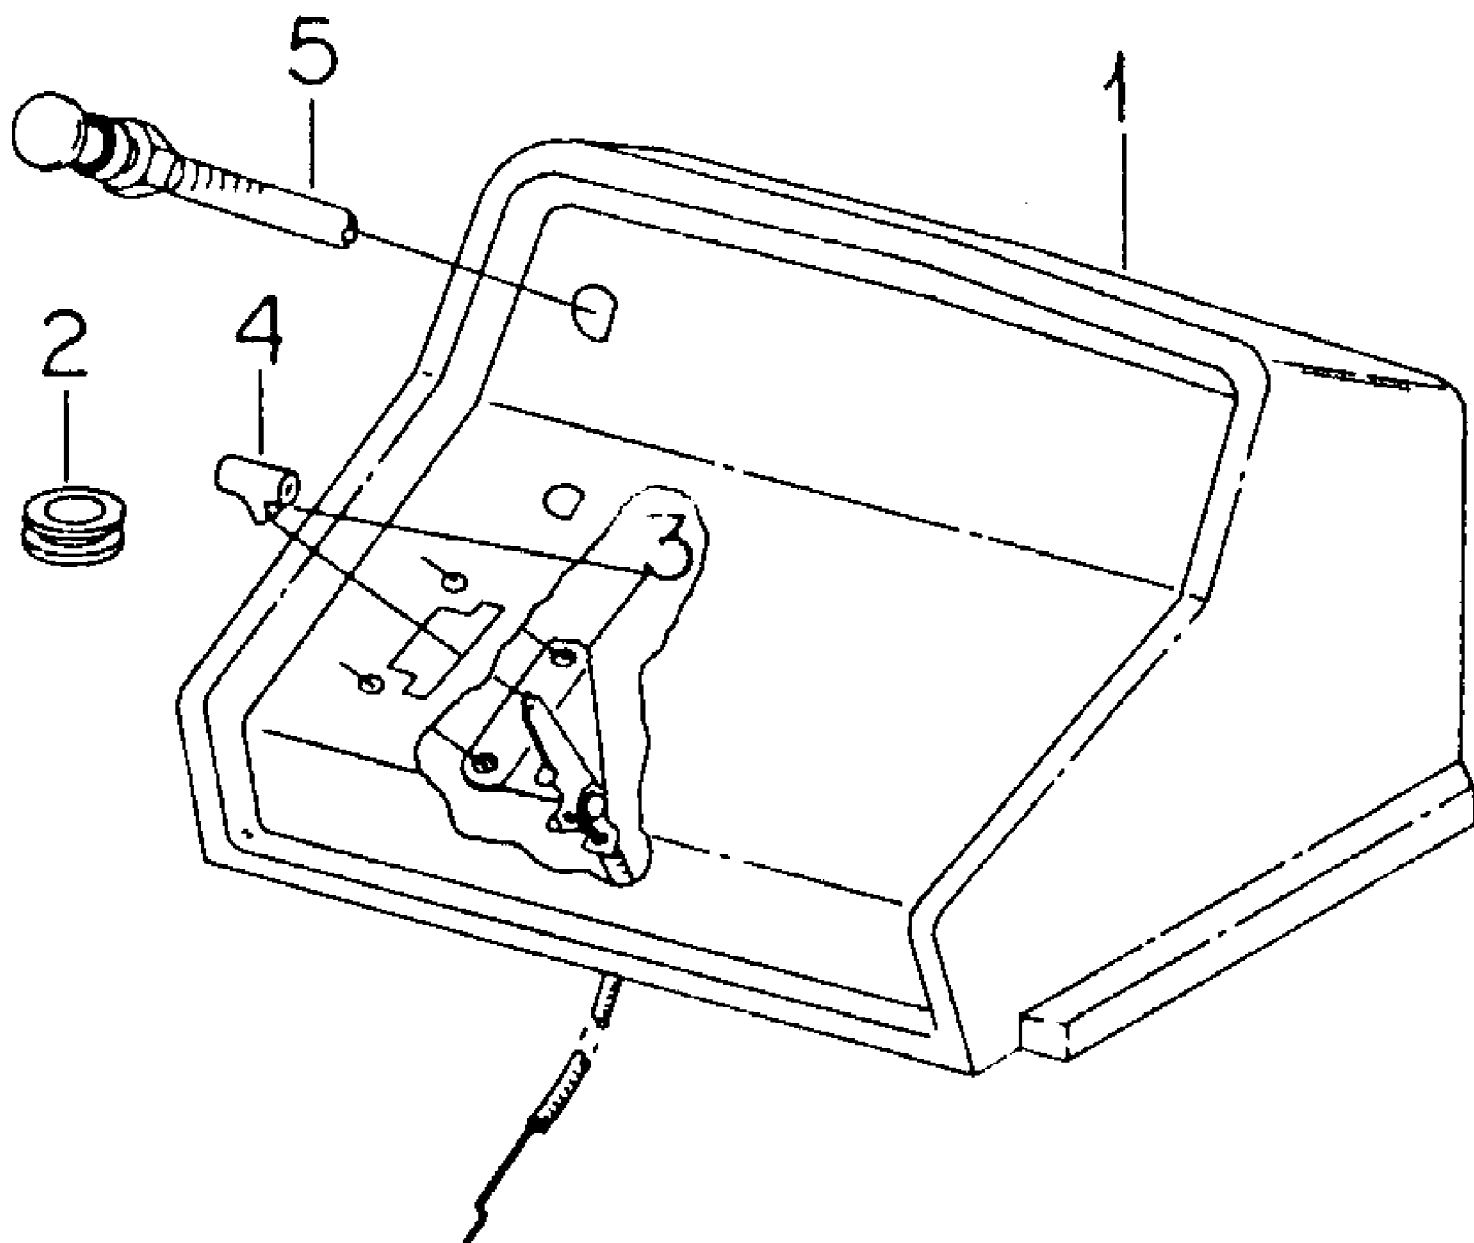

1100
Instrument Panel

Page 41 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	IH-61293-C3	1		Cowl, Instrument Panel
	IH-159927	7		Screw, No. 10 X 1/2 Phc P/Hdcr Mach
	BS-231082	3		Nut, No. 10 Mach Screw Type 1
2	IH-384908-R1	2		Grommet, Instrument Panel
3	IH-132301-C1	1		Control, Throttle
4	731-0108	1	/P	Knob, Throttle Control
5	746-3017	1		Cable, Choke
	IH-27503-R1	1		Washer, .406 X .812 X .051 Crb

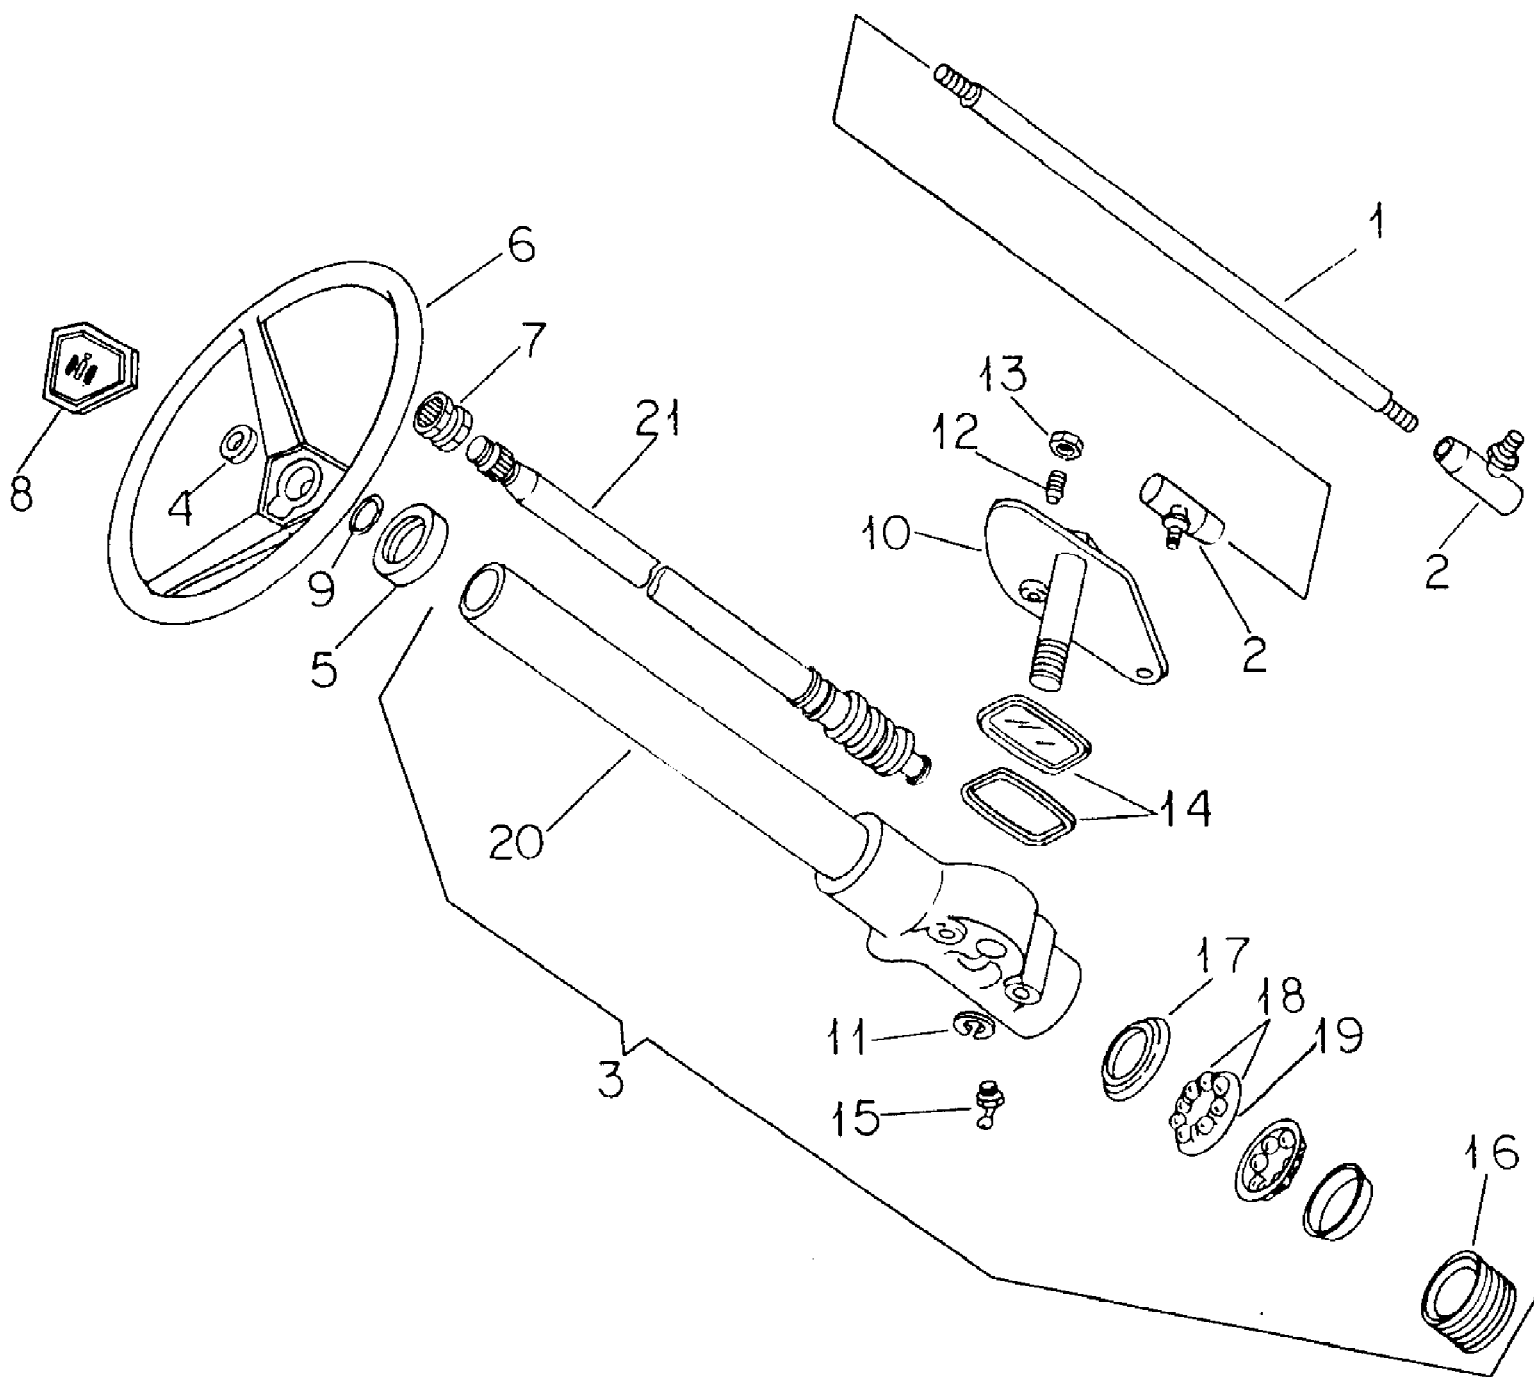


1100
Mechanical Steering

Page 43 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	711-3000	1		Link, Steering Gear Drag
	712-3001	2	S	Nut, 3/8-NF Pln Jam Type 5
2	723-3000	2	S	Joint, Ball
	712-3002	2	S	Nut, 3/8-NF SlT Type 5
	714-0507	2	S	Pin, 3/32 X 3/4 Cot
3	703-1085	1	/P/F	Gear Assy, Steering (Marked CCC)
	~NLA	1		Gear Assy, Steering (Marked Ross) [Consists of Ref. No. 10, 11, 12, 13, 14, 15, 16, 17 (Qty 2), 18 (Qty 2), 2
4	723-3001	1	S	Seal, Steering Gear
5	741-3000	1	S	Bearing, Column Upper
	710-3001	2	/P	Bolt, 3/8 X 7/8 Pln Type 5
		2		Washer, 3/8 Pln Lock (Common Hardware, Purchase Locally)
6	731-3000	1	/P	Wheel Assy, Steering
7		1		Hub, Steering Wheel (Furnished as part of wheel assy)
8	731-3001	1	/P	Cap, Steering Wheel
9	721-3000	1	/P	O-Ring, 1-3/4 X 1/8
10	IH-385522-R1	1		Lever & Bolt
	712-3056	2	/P	Nut, 5/8-NF Pln Jam Type 5
11	IH-308362-C1	1		Washer, Flat, Cdp
12	IH-62806-C1	1	S	Stud, Cam Follower
13	IH-192510-R1	1	S	Nut, Cam Follower Stud
14	IH-394936-R91	1		Package, Seal & Seal Retainer
15	IH-273360	1		Fitting, 1/4 65 Deg Angle Lube
	IH-131506	1		Nut, 5/8-NF Stl Low Crown
16	IH-394288-R1	1	/P	Plug, Adjusting
	714-3015	1		Pin, 1/8 X 1/2 Pln Cot
17	703-1029	2	S	Retainer, Bearing Ball
18	IH-389081-R91	2	S	Retainer & Ball Assy
19	IH-389081-R91	2	S	Retainer, Ball
20	IH-401277-R1	1		Tube, Housing & Jacket
21	IH-385984-R91	1	S	Cam & Tube Assy
	IH-25930-R1	1	S	Nut, 1/4-NF Pln Jam Type 5

1100
PTO Clutch

Page 44 of 64

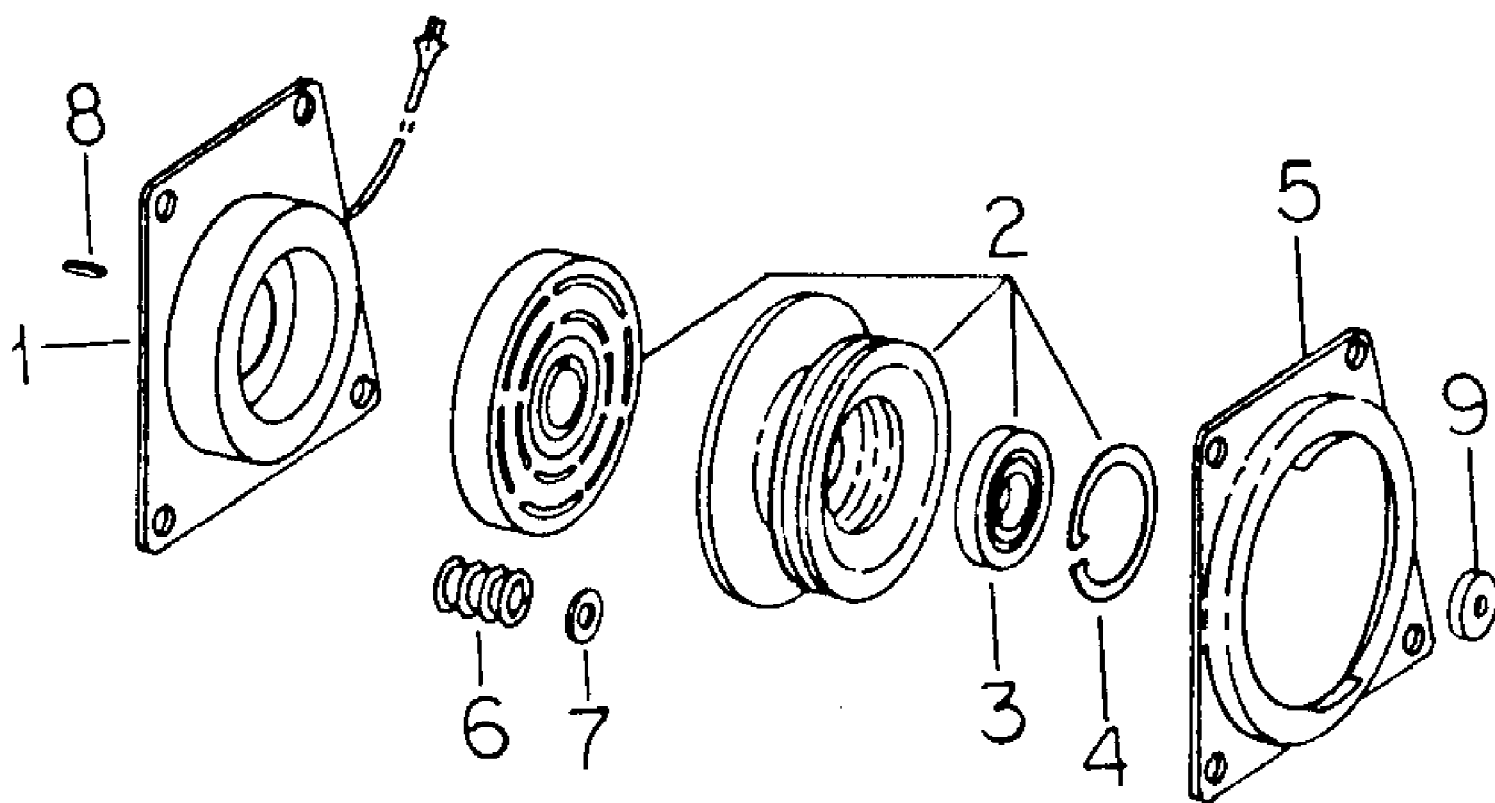


1100
PTO Clutch

Page 45 of 64

Ref #	Part Number	Qty	S/P/F	Description
	IH-135313-C1	1		Clutch Assy, PTO (Consists of Ref No. 1 thru 7)
1	IH-140157-C1	1		Package, Field Assembly Service
2	IH-140158-C1	1		Package, Rotor and Armature Service
3	IH-453879-R91	1	S	Bearing, Ball
4	~NLA	1		Package, Retaining Ring (Consists of 10 rings)
5	IH-140159-C1	1		Package, Brake Drum Service
6	759-3306	1	/P	Kit, Spring (Consists of 4 springs)
	712-0214	4	S	Nut, 3/8-NF P/T Lock Type 5
7	IH-117415-C1	1		Package, Shim (Consists of 4 shims)
8		1		Key, 1/4 X 5/8 Sq Parallel (Common Hardware, Purchase Locally)
	710-3000	4	S	Bolt, 3/8 X 3/4 Type 5
	736-0169	4	S	Washer, 3/8 Lock
9	711-3004	1	/P	Washer, PTO
		1		Bolt, 3/8-NF X 3/4 Type 5 (Common Hardware, Purchase Locally)

1100
Rear Wheel & Hubs

Page 46 of 64

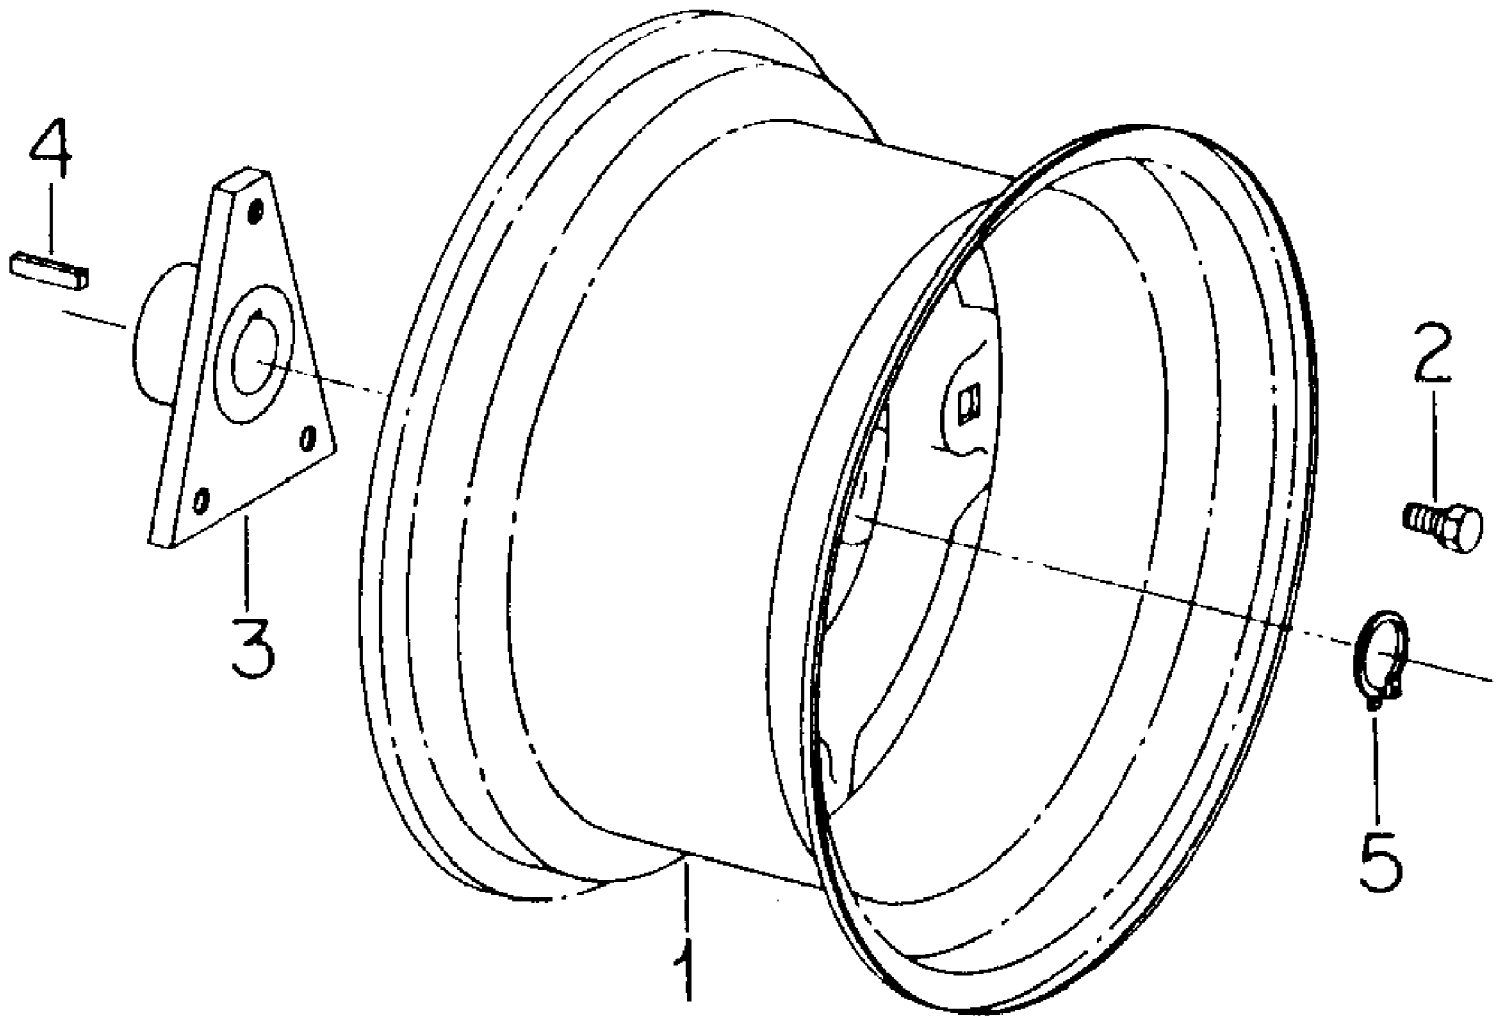


1100

Page 47 of 64

Rear Wheel & Hubs

Ref #	Part Number	Qty	S/P/F	Description
1	734-3004	2		Wheel, Rear w/7JA-12 Rim
	734-3013	2	S	Wheel, Rear w/8-1/2JA-12 Rim
2	710-3027	6	/P	Bolt, Wheel
3	703-0015	2		Hub Assy, Rear Wheels
4	714-3000	2		Key, 1/4 X 1-1/8 Woodruff 18
	736-3002	4		Washer, 1.031 X 2.000 X .054
5	716-0102	2	S	Ring, Ret
	734-0255	2	S	Valve, TR-413 Tubeless Type

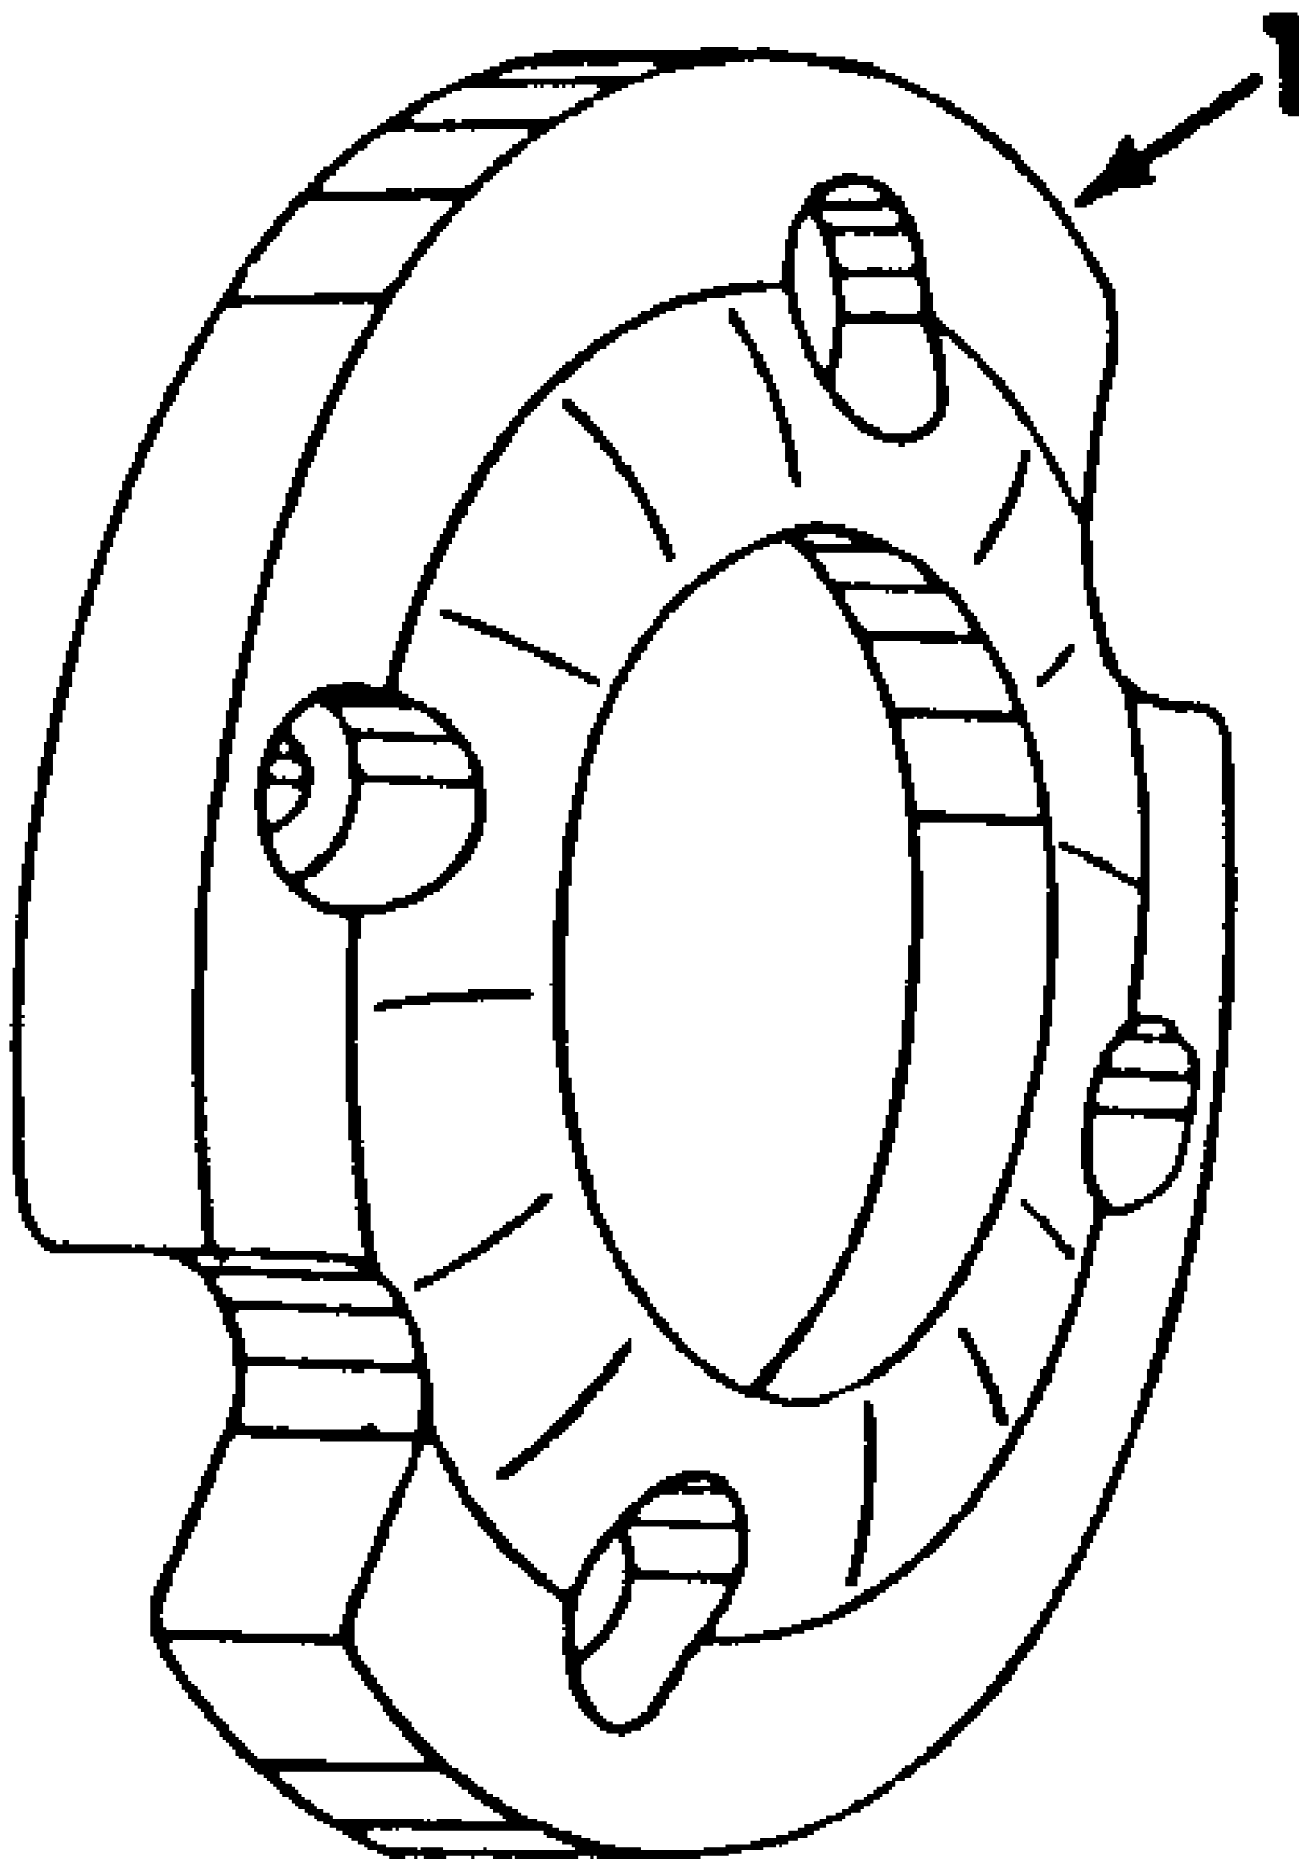

1100


Page 49 of 64

Rear Wheel Weights Part 1

Ref #	Part Number	Qty	S/P/F	Description
1	703-0396	2		Weight, Rear Wheel (Approx 75 lbs)
	712-0206	12	S	Nut, 1/2 Type 5
	736-0921	8	S	Washer, 1/2 Lock
	736-0272	4	S	Washer, .531 X 1.062 X .074

1100
Rear Wheel Weights Part 2

Page 50 of 64

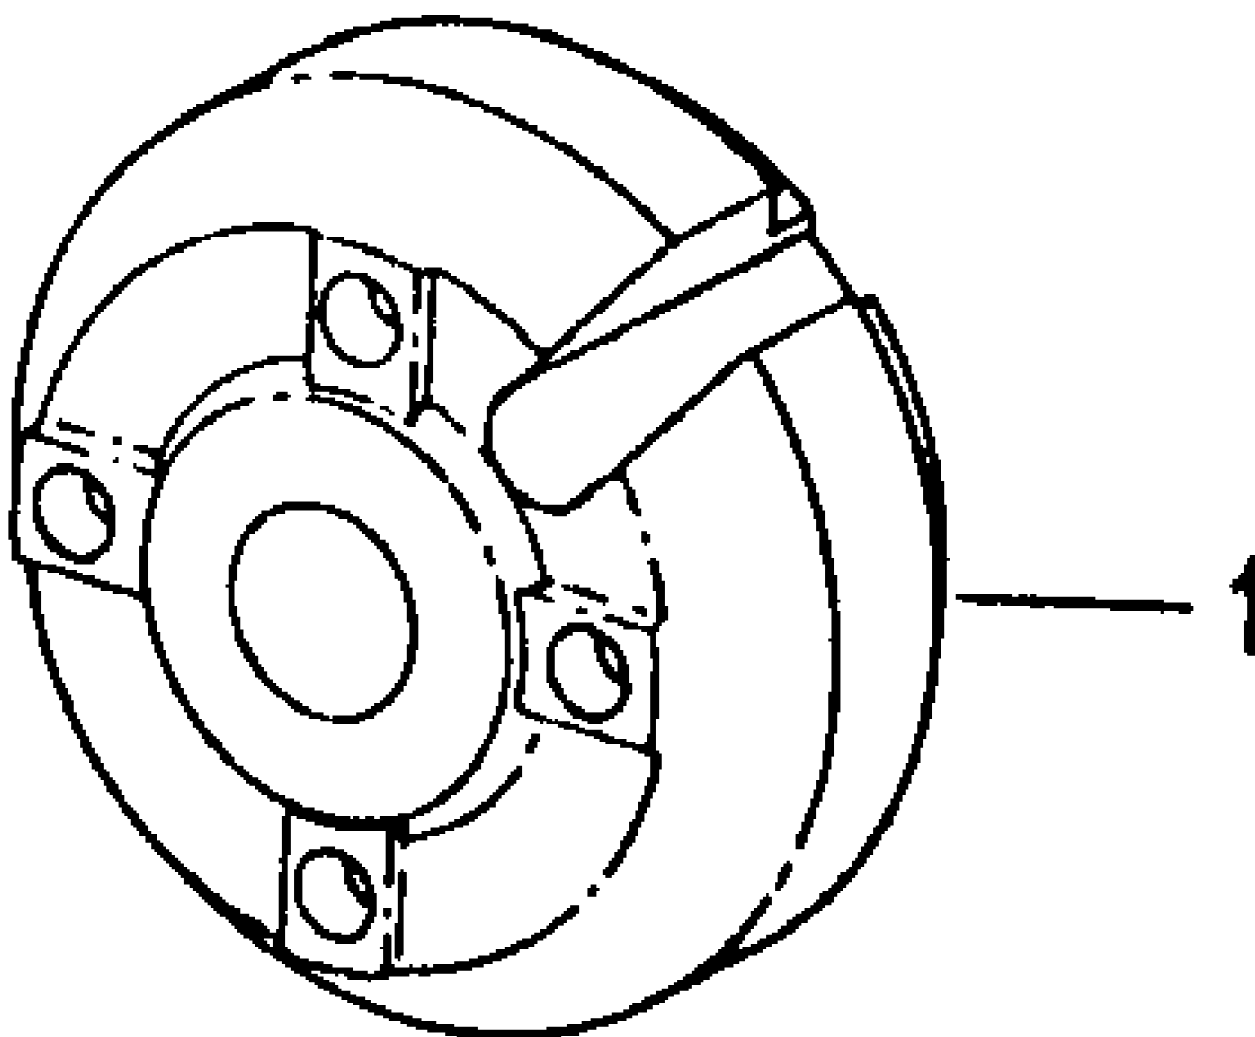

1100


Page 51 of 64

Rear Wheel Weights Part 2

Ref #	Part Number	Qty	S/P/F	Description
1	~NLA	2	F	Weight, Rear Wheel (Approx 26 lbs)
		4		Bolt, 1/2 X 5-1/4 Crg Type 1 (Common Hardware, Purchase Locally)
	712-0206	4	S	Nut, 1/2 Type 5
	736-0921	4	S	Washer, 1/2 Lock (2 for second position)
		4		Bolt, 1/2 X 7 Crg Type 1 (Common Hardware, Purchase Locally)
	712-0206	4	S	Nut, 1/2 Type 5
	736-0921	4	S	Washer, 1/2 Lock

1100
Right Angle Drive

Page 52 of 64

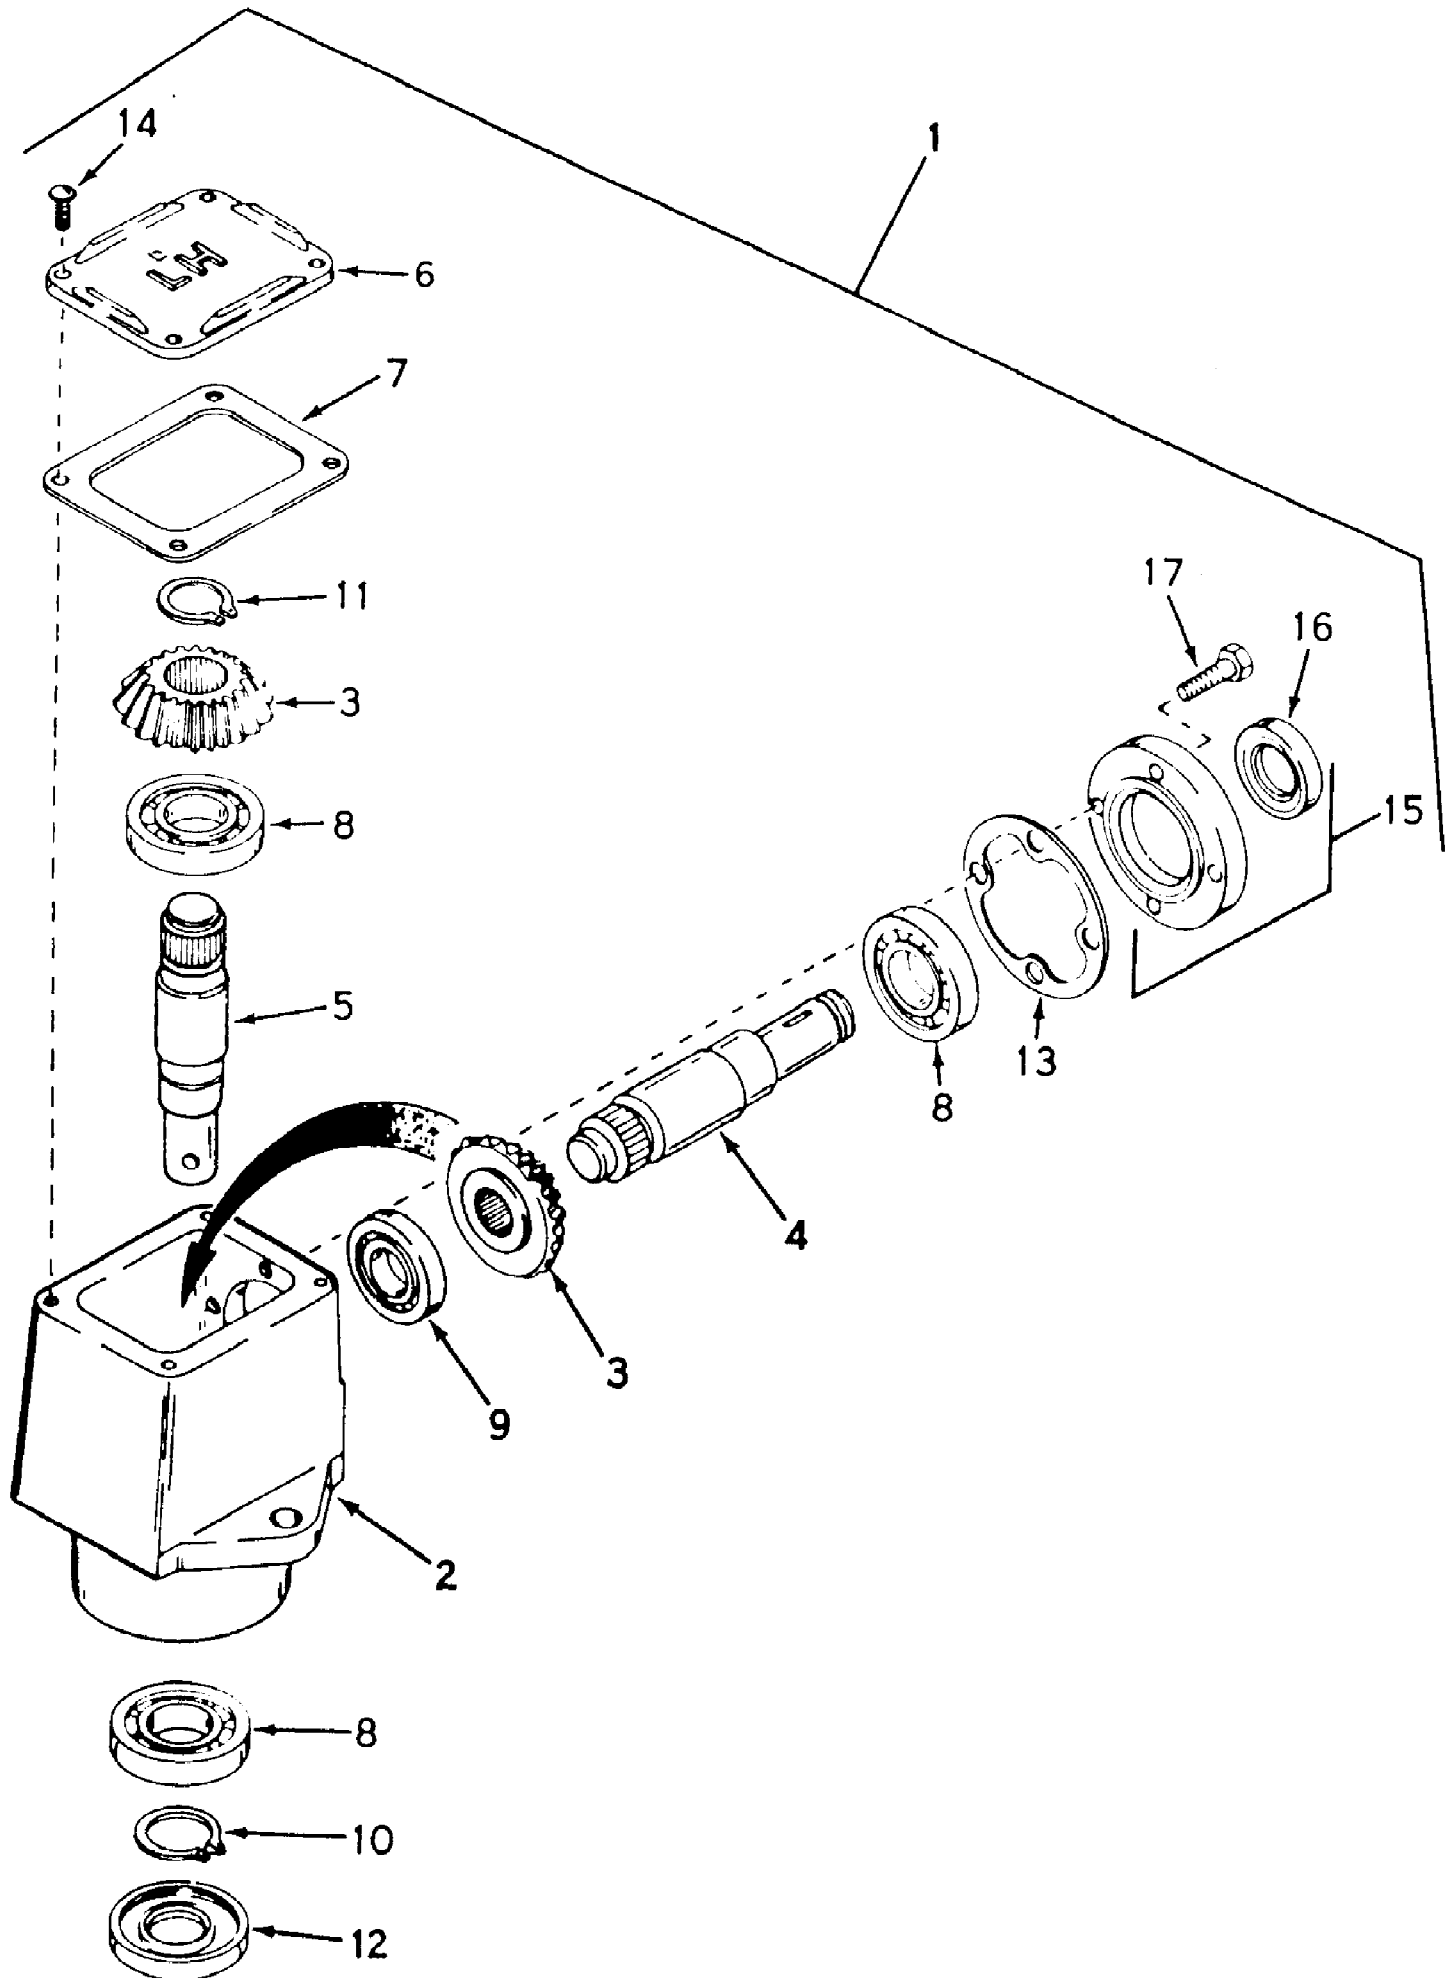


1100
Right Angle Drive

Page 53 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	TC-794233	1		Drive, Right Angle
2	TC-770026A	1		Housing, Right Angle Drive
3	TC-778046	2	/P	Gear, Miter
4	TC-776188	1		Shaft, Input
5	TC-776187	1		Shaft, Output
6	TC-772035	1		Cover, Housing
7	TC-788028	1	/P	Gasket, Cover
8	TC-780034	3	/P	Bearing Assy, Ball
9	TC-780024	1	/P	Bearing Assy, Ball
10	716-3014	1		Ring, Snap
11	716-3001	1	S	Ring, Snap
12	TC-788029	1	S	Seal, Oil
13	TC-788030	1	S	Gasket, Cap
14	TC-792025	4	/P	Screw, 10-24 X 1/2 Rd Hd Self-Tapping
15	TC-786029	1	/P	Cap & Seal Assy, Retainer
16	TC-788031	1	/P	Seal, Oil
17	TC-792026	4	/P	Bolt, 1/4 X 7/8 Type 5

1100
Seat & Support

Page 54 of 64

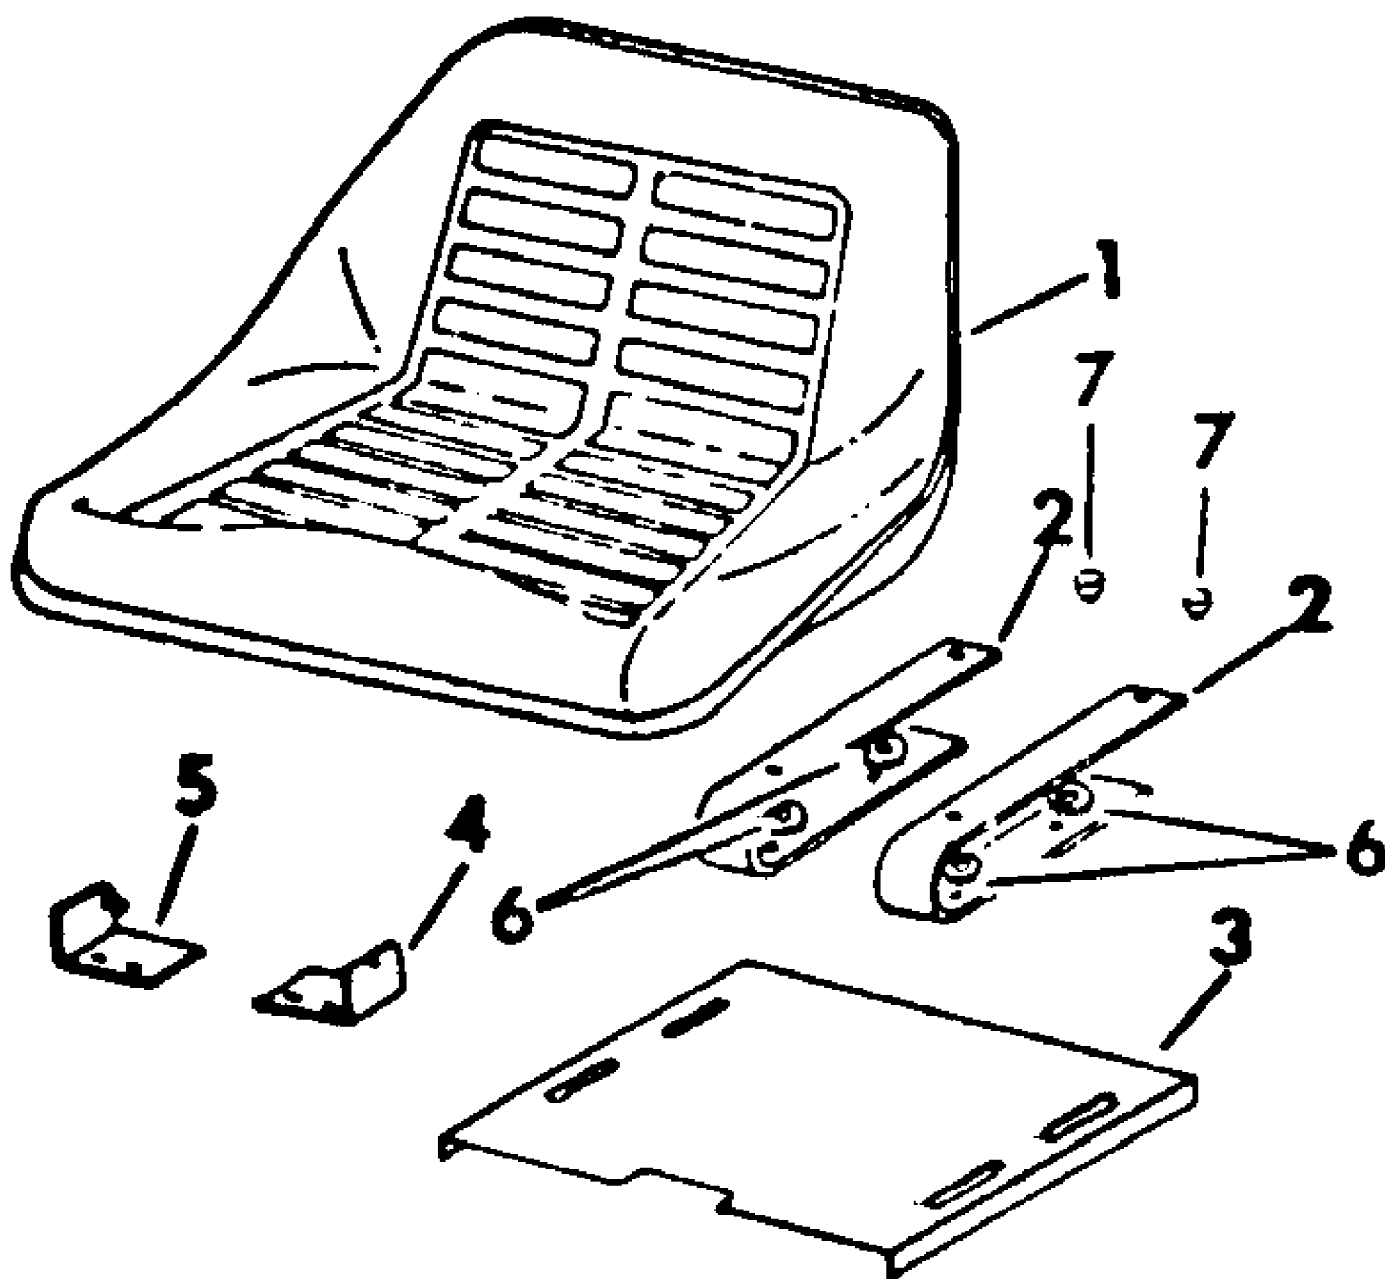


1100
Seat & Support

Page 55 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	759-3148	1	/P	Seat Assy
2	703-0068	2	/P	Spring, Seat
	710-0118	4	S	Bolt, 5/16 X 3/4 Type 5
3	759-3065	1		Cover, Dual Spring w/Product Graphic
	710-0376	4	/P	Bolt, 5/16 X 1 Type 5
	736-3008	4	S	Washer, .344 X .750 X .105
	712-0267	4	S	Nut, 5/16 Type 5
4	703-0070	1		Bracket Assy, Pivot LH
	710-3000	2	S	Bolt, 3/8 X 3/4 Type 5
	736-0169	2	S	Washer, 3/8 Lock
5	703-0072	1		Bracket Assy, Pivot RH
	710-3000	2	S	Bolt, 3/8 X 3/4 Type 5
	736-0169	2	S	Washer, 3/8 Lock
6	736-3070	4	/P	Washer, 11/32 X 1-1/2 X 11 Ga
7	IH-128509-H1	2		Bumper, Seat Support

1100
Starter Assembly

Page 56 of 64

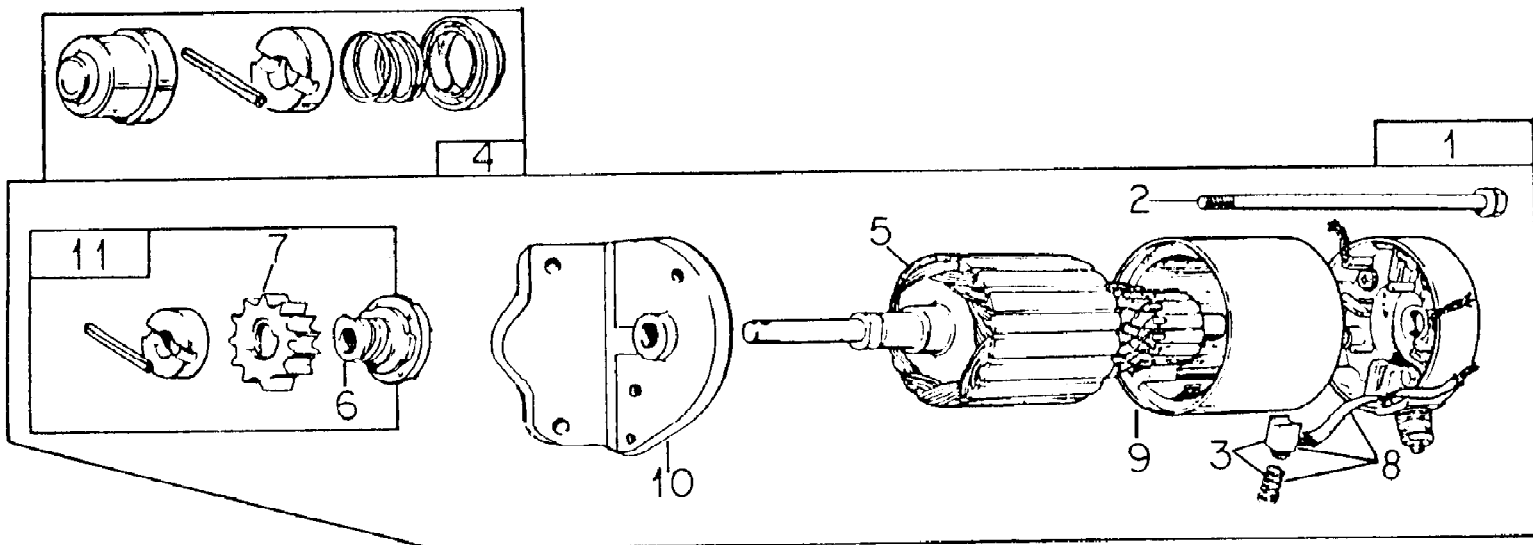


1100
Starter Assembly

Page 57 of 64

Ref #	Part Number	Qty	S/P/F	Description
1		1		Starter Assy (Order individual components)
2	IH-76591-C1	2		Bolt, Thru
3	BS-391705	1		Set, Brush
4	BS-490467	1	S	Kit, Pinion Spring
5	BS-392233	1		Armature Assy
6	BS-398003	1	S	Clutch Assy, Starter
7	BS-280104	1	S	Gear, Starter Clutch
8	BS-391172	1		Cap Assy, End
9	BS-391167	1		Housing, Starter
10	BS-394857	1	/P	Cap, Drive End
	710-0118	2	S	Bolt, 5/16 X 3/4 Type 5
11	BS-391461	1	S	Drive Assy, Starter

1100
Three Point Hitch Attachment

Page 58 of 64

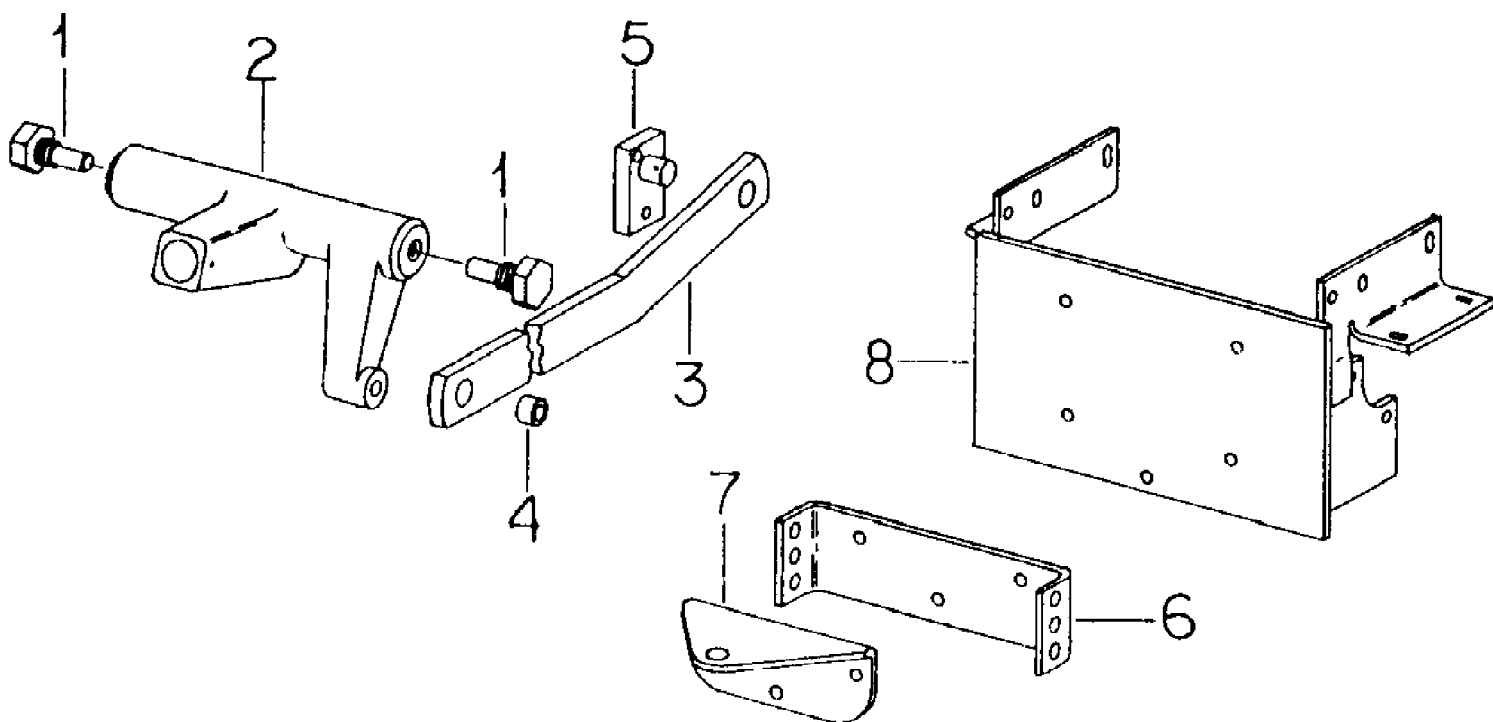

1100


Page 59 of 64

Three Point Hitch Attachment

Ref #	Part Number	Qty	S/P/F	Description
1	IH-64872-C1	2	S	Bolt, Stud Shaft
	IH-219759	2		Nut, 7/8-14 Unf Jam
2	719-3024	1	/P	Lever, Lift
		1		Bolt, 1/2 X 1-3/8 Type 8 (Common Hardware, Purchase Locally)
	736-3003	1	/P	Washer, .531 X .750 X .054
	736-3013	1	S	Washer, .531 X 1.000 X .027
3	IH-545638-R3	1		Bar, Lift
4	711-3073	1	/P	Spacer, Lift Arm
5	703-0398	1	/P	Plate Assy, Lift Bar
	710-3063	2	S	Bolt, 3/8 X 3/4 Type 8
	714-0470	1	S	Pin, 1/8 X 1-1/4 Cot
6	703-0400	1	S	Link, Lower Hitch
7	703-0401	1		Drawbar, Fixed
	710-3005	3	/P	Bolt, 3/8 X 1-1/4 Type 5
	736-0169	3	S	Washer, 3/8 Lock
	712-0798	3	/P	Nut, 3/8 Type 5
8	703-0402	1		Bracket Assy, Hitch
	712-3000	2	S	Nut, 3/8-16 Lock
	IH-26679-R1	4		Bolt, 5/16 X 1-1/4 Phc P/T Type 8
	736-0119	4	S	Washer, 5/16 Lock

1100
Transaxle

Page 60 of 64

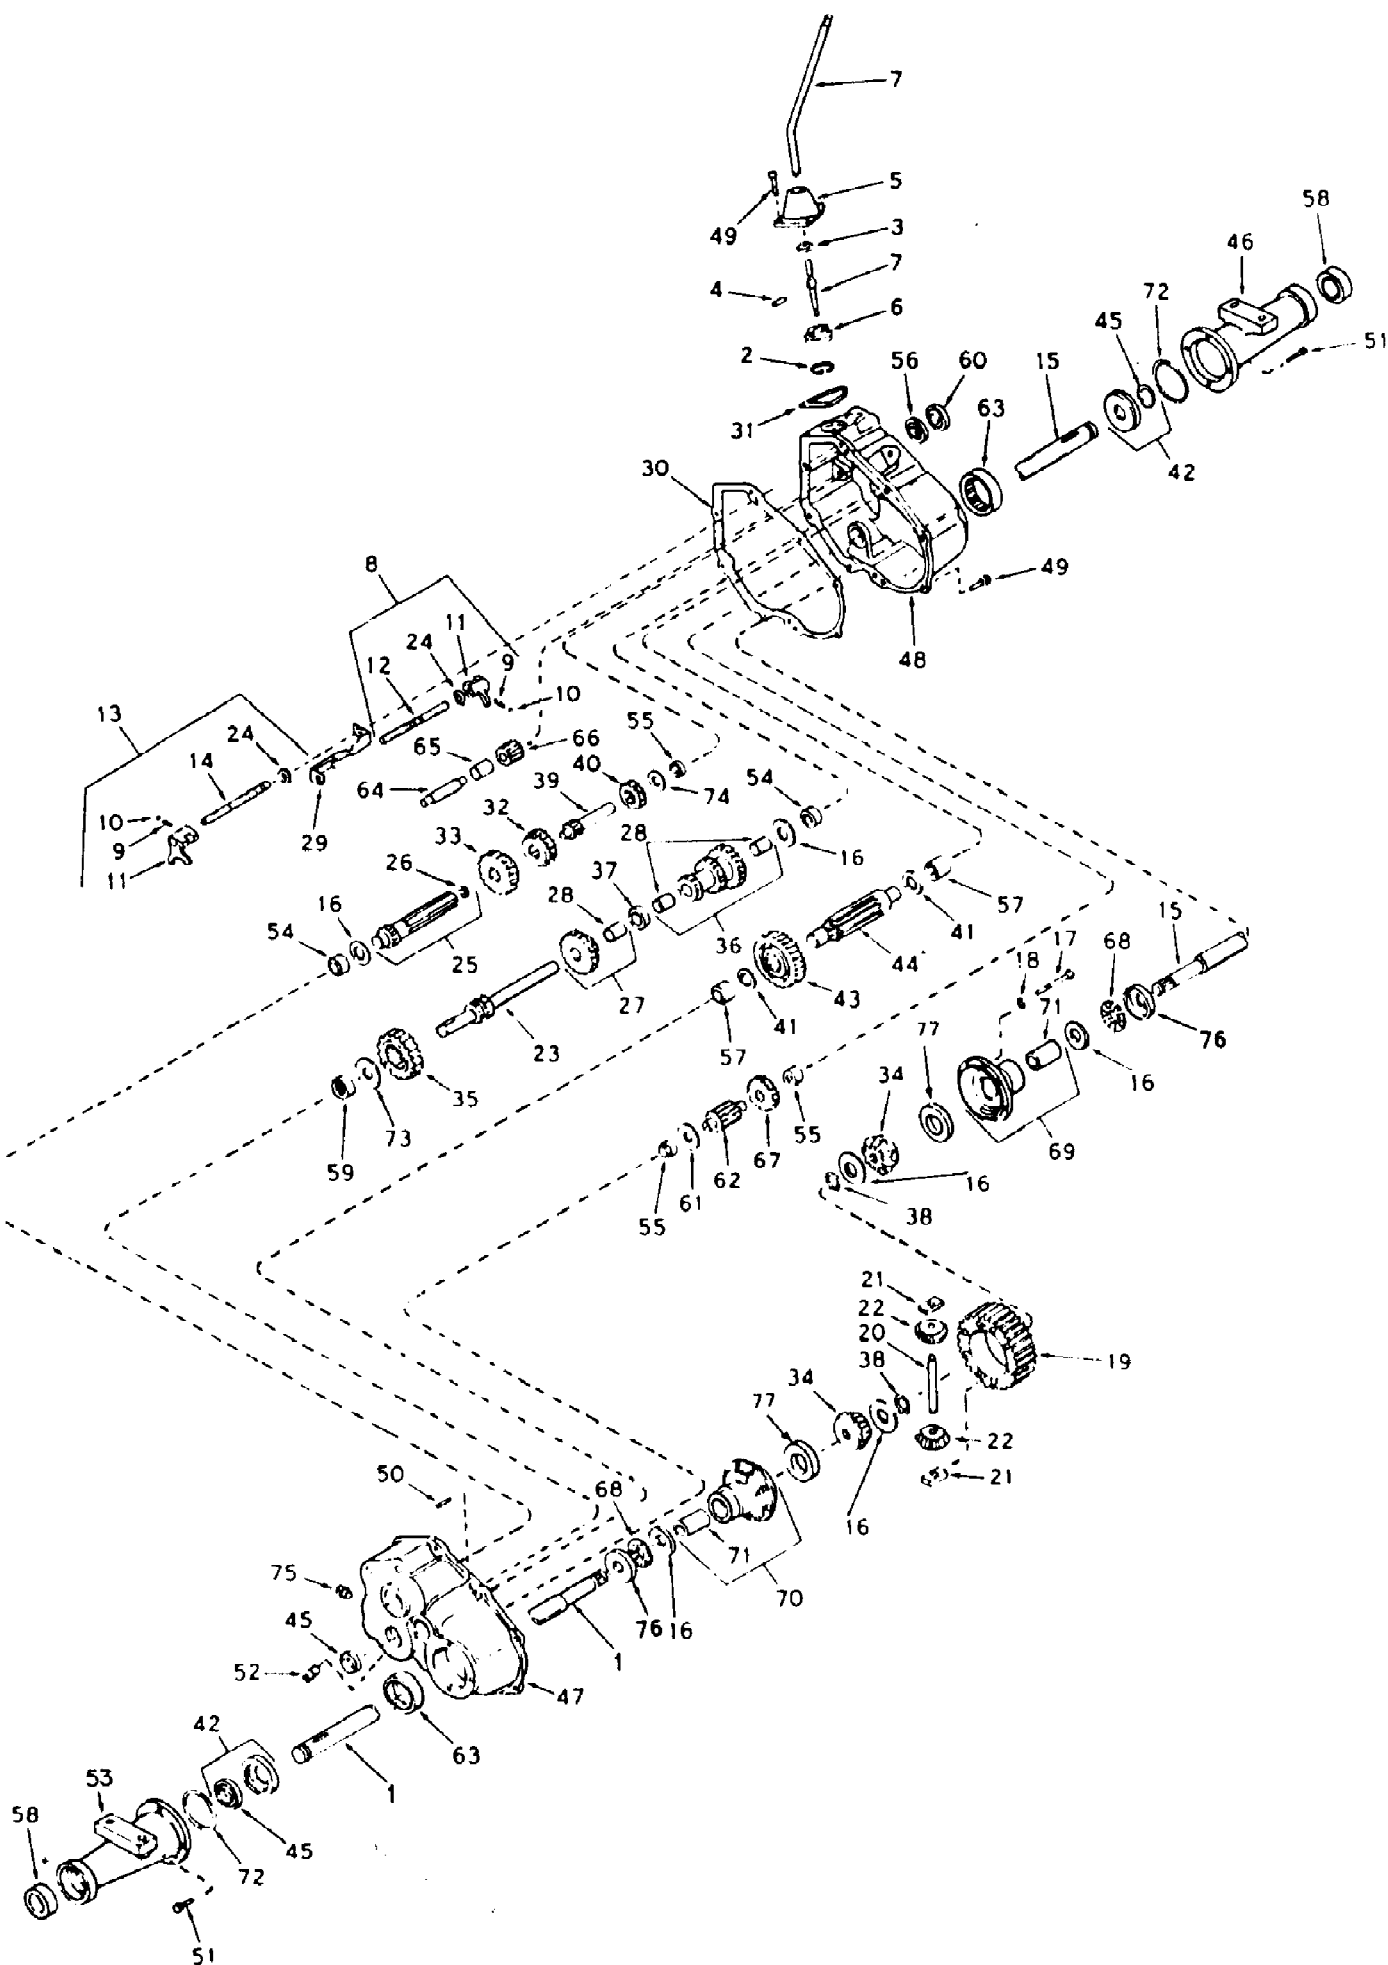

1100
Transaxle

Page 61 of 64

Ref #	Part Number	Qty	S/P/F	Description
	717-3001	1		Transaxle
1	TC-774384	1		Axle, LH
2	716-3007	1	S	Ring, Snap
3	TC-792001	1	/P	Ring, Quad
4	TC-792049	1		Pin, Roll
5	TC-784093	1		Housing, Shift Lever
6	TC-784094	1		Retainer, Shift Lever
7	TC-784300	1		Lever, Shift
8	TC-784054	1		Rod Assy, Shift
9	TC-792003	2	/P	Spring
10	TC-792004	2		Ball, Steel
11	TC-784004	2		Fork, Shifter
12	TC-784055	1		Rod, Shifter 3rd & 4th
13	TC-784056	1	/P	Rod Assy, Shift
14	TC-784057	1		Rod, Shifter 1st & 2nd
15	TC-774080	1		Axle, RH
16	TC-780042	6		Washer, Thrust
17	TC-792005	16		Bolt, 1/4 X 2-1/2 Pln Type 8
18	TC-792006	16		Washer, 1/4 Heavy Lock
19	TC-774029A	1		Gear, Ring
20	TC-786019	1		Pin, Drive
21	TC-786066	2		Block, Drive
22	TC-778094	2		Pinion, Bevel
23	TC-776029A	1		Shaft, Brake Gear
24	716-0865	2	/P	Ring, Snap
25	TC-776189A	1		Shaft Assy, Pinion
26	TC-780018	1		Bearing Assy, Needle
27	TC-778034	1		Gear Assy, Cluster
28	TC-780053	3		Bushing
29	TC-784074	1		Stop, Shifter
30	TC-788023	1	/P	Gasket, Case to Cover
31	TC-788022	1		Gasket, Shifter Lever Housing
32	TC-778019A	1	/P	Gear, Shift 3rd & 4th
33	TC-778020	1		Gear, Shifting 1st, 2nd & Reverse
34	TC-778231	2		Gear, Bevel
35	TC-778037	1		Gear, Idler
36	TC-778035A	1		Gear, Cluster
37	TC-786024	1		Spacer
38	716-3001	2	S	Ring, Snap
39	TC-776067	1		Shaft, Input
40	TC-778024A	1		Gear, Input Shaft Spur
41	TC-780052	2	/P	Washer, Thrust
42	TC-788021	2	/P	Retainer Assy, Oil Seal
43	TC-778036	1		Gear, Output
44	TC-776028	1		Pinion, Output
45	TC-788008	3	/P	Seal, Oil
46	TC-782025	1		Housing, Axle RH
47	TC-772076	1		Cover Assy, Transaxle
48	TC-770068	1		Case Assy, Transaxle
49	TC-792007	12		Screw, 1/4-20 X 3/4 Flanged
50	TC-786026	2	/P	Pin, Dowel
51	TC-792037	8		Bolt, 5/16 X 1 Pln Type 5
52	TC-792019	1		Plug, Magnetic Drain


1100
Transaxle

Page 62 of 64

Ref #	Part Number	Qty	S/P/F	Description
53	TC-782059	1		Housing, Axle LH
54	TC-780049	2		Bearing, Needle
55	IH-73002-C91	3	S	Bearing, Needle
56	TC-780024	1	/P	Bearing, Ball
57	TC-780047	2		Bearing, Needle
58	TC-780050	2		Bearing Assy, Ball
59	TC-780046	1		Bearing, Needle
60	TC-788025	1	/P	Seal, Oil
61	TC-780001	1		Washer
62	TC-776031	1		Shaft, Pinion
63	TC-780048	1		Bearing, Needle
64	TC-776030	1	/P	Shaft, Reverse Idler
65	TC-786025	1		Spacer, Reverse Idler
66	TC-778016	1		Idler, Reverse
67	TC-778038	1		Gear, Spur -22T
68	TC-780039	2		Bearing, Thrust
69	TC-774072A	1		Carrier Assy, Differential RH
70	TC-774071A	1		Carrier Assy, Differential LH
71	TC-780041	2		Bushing, Carrier
72	TC-788024	2	/P	O-Ring
73	TC-780007	1	/P	Washer, Thrust
74	TC-780051	1	/P	Washer, Thrust
75	BS-91084	1	S	Plug, Pipe
76	TC-780075	2		Bearing, Thrust Race
77	TC-780107	2	/P	Washer

1100
Utility Box

Page 63 of 64

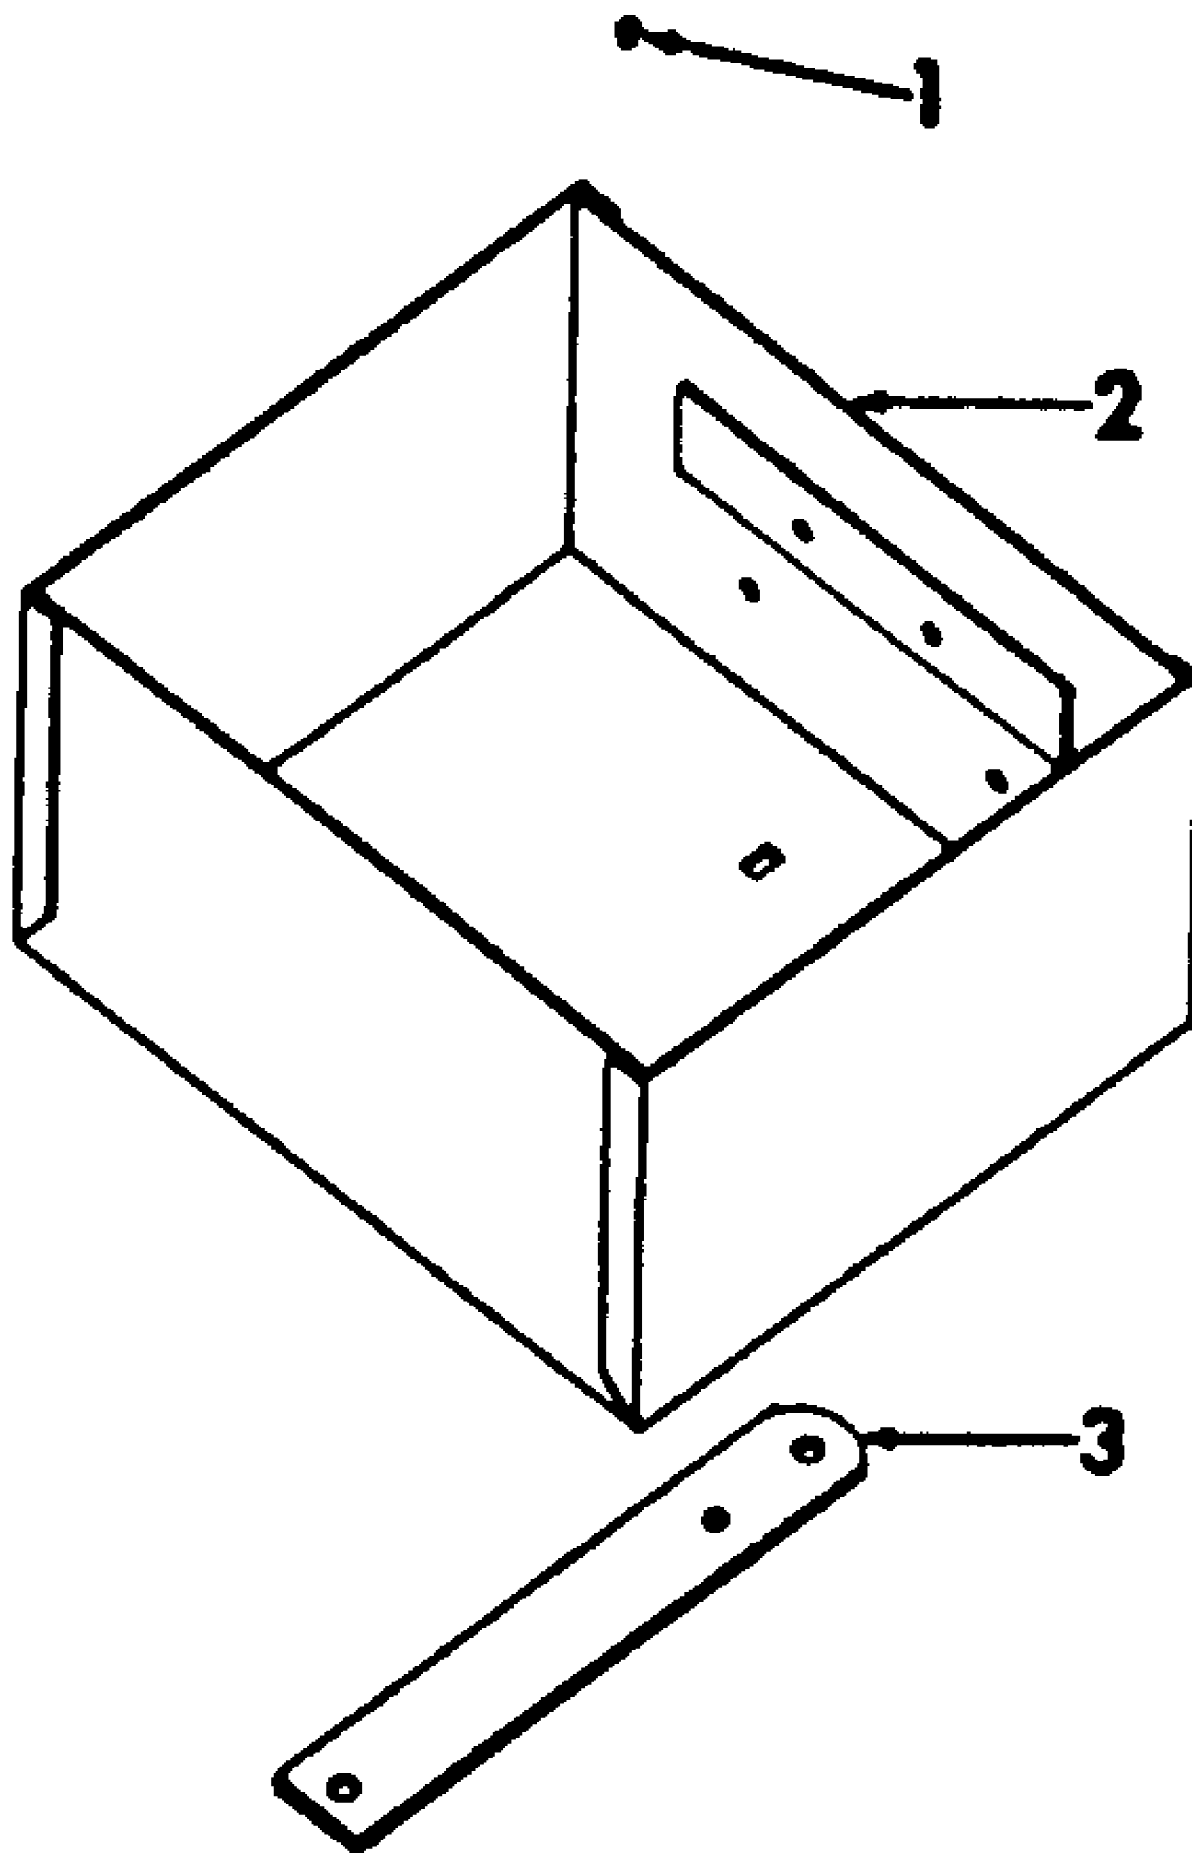

1100
Utility Box

Page 64 of 64

Ref #	Part Number	Qty	S/P/F	Description
1	~NLA	2		Pin, Drain Hole
		2		Pin, 1/16 X 1/2 Cot (Common Hardware, Purchase Locally)
2	~NLA	1		Box Assy, Utility
	~NLA	2		Plug, 1-9/16 C-Z Button
		2		Bolt, 3/8-16 X 1-5/8 Type 5 (Common Hardware, Purchase Locally)
	712-0798	2	/P	Nut, 3/8-16 Type 5
	IH-561277-R1	4		Spacer, Utility Box
3	IH-390025-R1	1		Extension, Drawbar
	710-0389	1	/P	Bolt, 3/8 X 3/4 Crg Type 1
	712-0798	1	/P	Nut, 3/8 Crg Type 5
	736-0169	1	S	Washer, 3/8 Lock
		1		Bolt, 1/2 X 1-1/4 Crg Type 1 (Common Hardware, Purchase Locally)
	712-0206	1	S	Nut, 1/2 Type 5
	736-0921	1	S	Washer, 1/2 Lock