


LTX1050VT Tractor (2010 & After)  
Drive System

Page 1 of 63

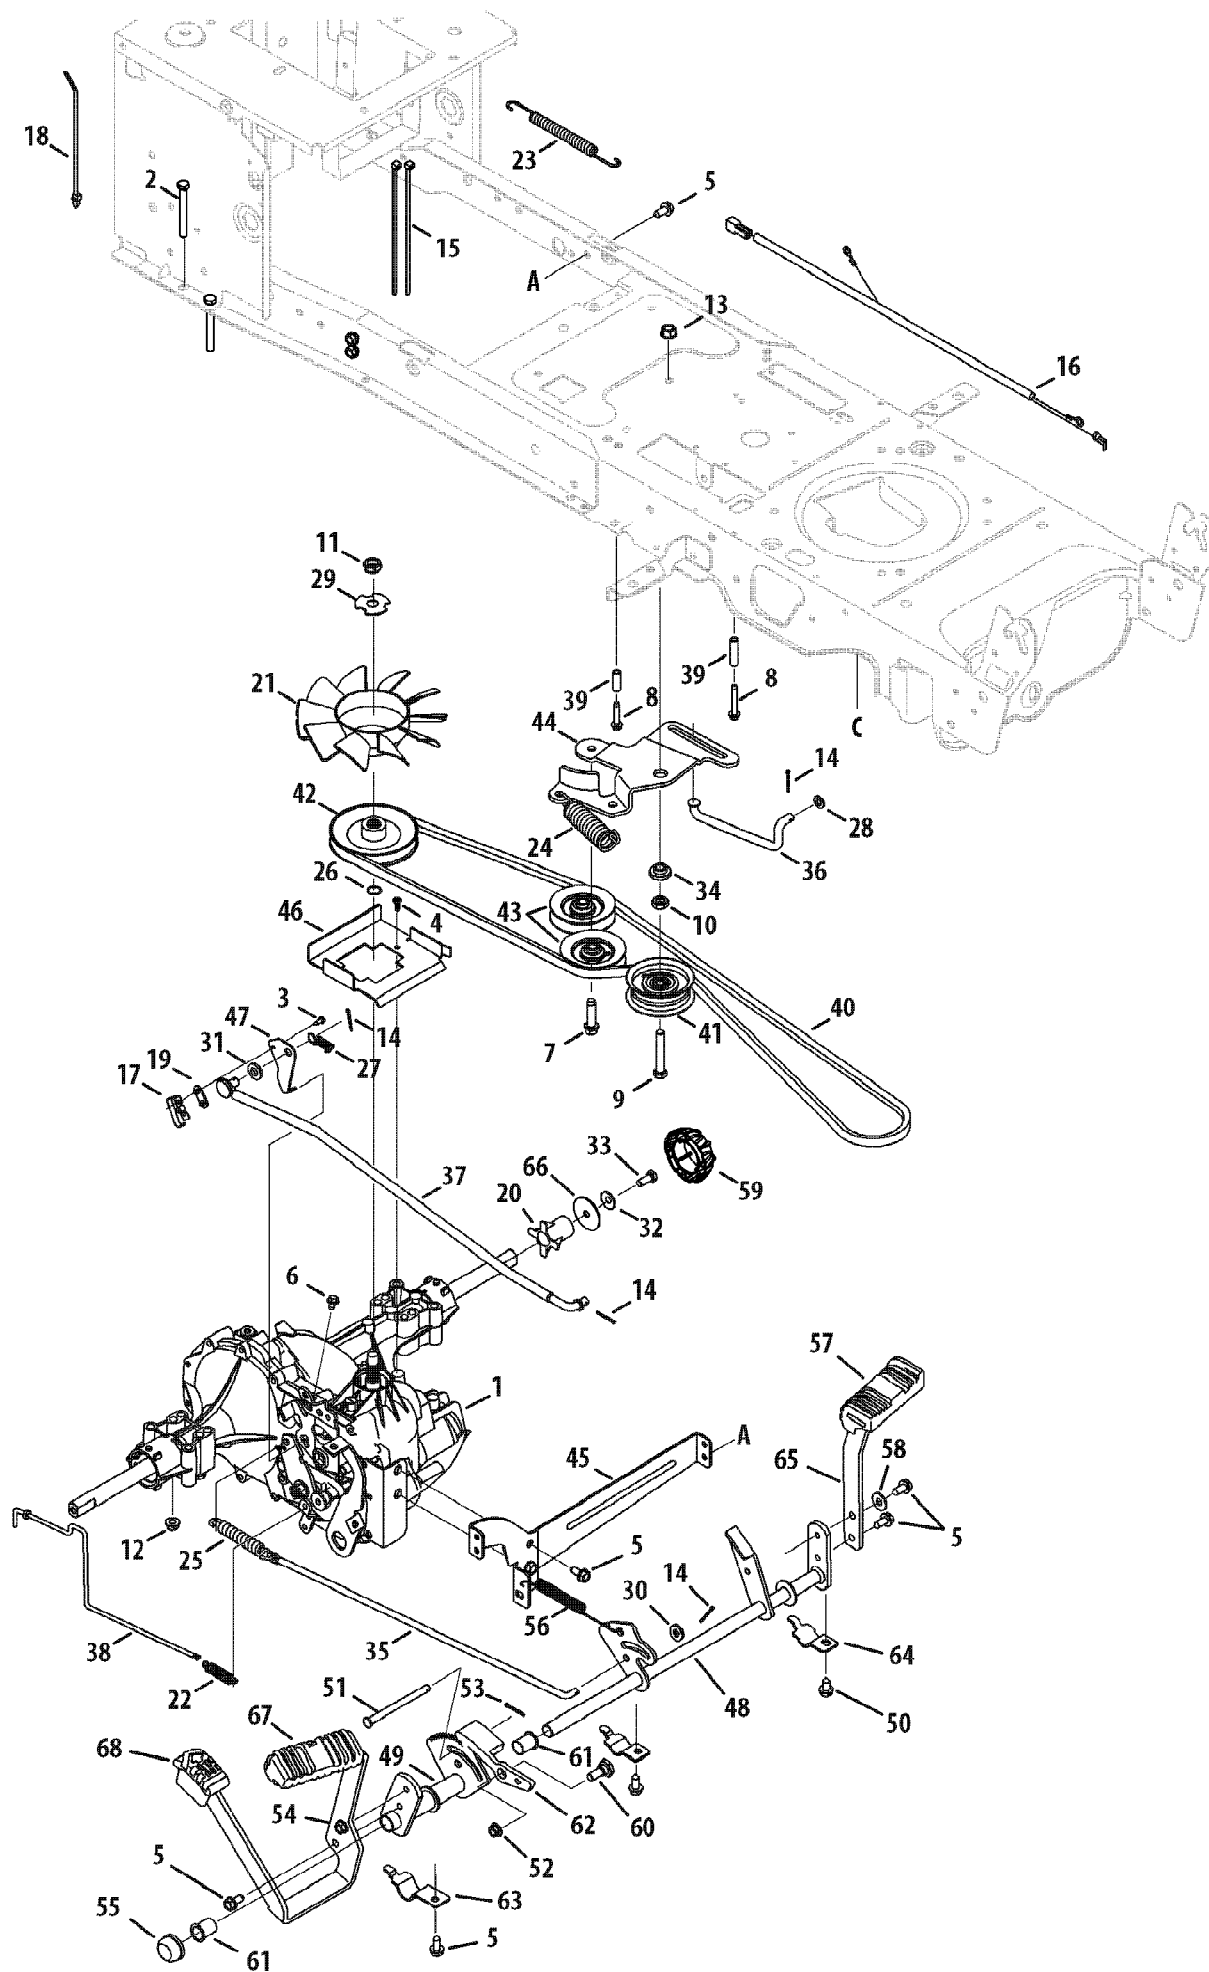

LTX1050VT Tractor (2010 & After)  
Drive System

Page 2 of 63

| Ref # | Part Number    | Qty | S/P/F | Description                           |
|-------|----------------|-----|-------|---------------------------------------|
| 1     | 918-0319       | 1   | /P    | Transmission, Hydro-Gear 0510         |
| 2     | 710-0176       | 1   | /P    | Hex Screw, 5/16-18, 2.75, Gr5, Std    |
| 3     | 710-0227       | 1   | /P    | Screw, #8-18, 0.500,                  |
| 4     | 710-0351       | 1   | /P    | Screw, #10-16, 0.500                  |
| 5     | 710-04484      | 1   |       | Screw, Self-tapping, 5/16-18, .750    |
| 6     | 710-0653       | 1   | /P    | Screw, Self-tapping, 1/4-20, 0.375    |
| 7     | 710-1007       | 1   | /P    | Screw, Self-tapping, 3/8-16, 1.500    |
| 8     | 710-1325       | 1   | /P    | Screw, Self-tapping, 1/4-20, 1.625    |
| 9     | 710-3011       | 1   | /P    | Hex Screw, 3/8-16, 2.25, Gr5          |
| 10    | 912-0240       | 1   | /P    | Nut, Jam, 7/16-20, Gr2                |
| 11    | 912-0346       | 1   | /P    | Nut, Jam Lock, 1/2-20, Gr5, Nylon     |
| 12    | 712-04063      | 1   | /P    | Nut, Flange Lock, 5/16-18, Nylon      |
| 13    | 912-0431       | 1   | /P    | Nut, Flange Lock, 3/8-16              |
| 14    | 914-0111       | 1   | /P    | Pin, Cotter, 3/32, 1.0                |
| 15    | 725-0157       | 1   | /P    | Cable, Tie, 3/16 x .05 x 7.4          |
| 16    | 725-04791A     | 1   |       | Jumper Harness, Ground & Reverse      |
| 17    | 725-1644       | 1   |       | Switch, Spring, Short                 |
| 18    | 926-0154       | 1   | /P    | Tie, Cable, Push Mount 7.5            |
| 19    | 926-0320       | 1   | /P    | Plate, Insulator Nut                  |
| 20    | 731-05299A     | 1   |       | Sleeve, .765 Id x 1.500               |
| 21    | 731-06098      | 1   |       | Fan, Hydro                            |
| 22    | 932-0209       | 1   | /P    | Spring, Extension, .48 Od x 2.03      |
| 23    | 732-04606      | 1   |       | Spring, Extension, .500 Dia x 12.6    |
| 24    | 732-04624      | 1   |       | Spring, Extension, 1.00 Dia x 4.75    |
| 25    | 732-0716D      | 1   | /P    | Spring, Extension, .59 Od x 4.00      |
| 26    | 732-0729       | 1   | /P    | Ring, Wire                            |
| 27    | 732-3118       | 1   |       | Spring, Extension, .375 Od x 1.44     |
| 28    | 936-0264       | 1   | /P    | Washer, Flat, .330 x .630 x .0635     |
| 29    | 736-04263      | 1   |       | Washer, Lock, Transmission Hydro      |
| 30    | 936-3008       | 1   | /P    | Washer, Flat, .344 x .750 x .120      |
| 31    | 736-3010       | 1   | /P    | Washer, Flat, .407x.812x.135, Ht      |
| 32    | 736-0242       | 1   | /P    | Washer, Bell, .340 x .872 x .060      |
| 33    | 710-0627       | 1   | /P    | Hex Screw, 5/16-24, .750, Gr5, Lock   |
| 34    | 738-04420      | 1   |       | Spacer, Shoulder, 1.375 x .380 x .183 |
| 35    | 747-04139      | 1   |       | Rod, Brake, LT Hydro                  |
| 36    | 747-04957A     | 1   |       | Rod, Transmission, Bypass             |
| 37    | 747-04979      | 1   |       | Rod, Control, Hydro                   |
| 38    | 747-04991      | 1   |       | Rod, Hydro Bypass                     |
| 39    | 750-04456      | 1   |       | Spacer, .260 x .372 x 1.420           |
| 40    | 954-04207      | 1   | /P    | Belt, V-Type                          |
| 41    | 756-04224      | 1   | /P    | Pulley, Idler, Flat 2.75 OD           |
| 42    | 756-04308      | 1   |       | Pulley, Input, 4.13 Dia               |
| 43    | 756-04325      | 1   | /P    | Pulley, Idler, V-Type x 3.06          |
| 44    | 783-06027A     | 1   |       | Bracket, Idler, Center Double         |
| 45    | 783-06133-0637 | 1   |       | Bracket, Mount, Hydro                 |
| 46    | 783-06260-0637 | 1   |       | Bracket, Support, Belt Disengage      |
| 47    | 783-1019B      | 1   | /P    | Bracket, Actuator, Switch             |
| 48    | 647-04152A     | 1   |       | Control Assembly, Brake               |
| 49    | 683-04537      | 1   |       | Bracket Assembly, Pedal, Hydro        |
| 50    | 710-0604A      | 1   | /P    | Screw, Self-tapping, 5/16-18, 0.625,  |
| 51    | 711-05068      | 1   |       | Pin, Clevis, 5/16 x 3.985             |
| 52    | 712-04065      | 1   | /P    | Nut, Flange Lock, 3/8-16, Nylon       |
| 53    | 714-04040      | 1   | /P    | Pin, Cotter, Bow-Tie 72               |


LTX1050VT Tractor (2010 & After)  
Drive System


Page 3 of 63

| Ref # | Part Number     | Qty | S/P/F | Description                         |
|-------|-----------------|-----|-------|-------------------------------------|
| 54    | 783-06059-0637  | 1   |       | Bracket, Pedal, Hydro               |
| 55    | 726-0214        | 1   | /P    | Cap, Push 5/8                       |
| 56    | 732-04587       | 1   |       | Spring, Extension, .63 Dia x 4.95   |
| 57    | 735-04136       | 1   |       | Pad, Pedal, Brake                   |
| 58    | 736-0242        | 1   | /P    | Washer, Bell, .340 x .872 x .060    |
| 59    | 731-2290A       | 1   | /P    | Cap, Hub                            |
| 60    | 938-0380        | 1   | /P    | Bolt, Shoulder, .500 x .270, 3/8-16 |
| 61    | 741-0495        | 1   | /P    | Bearing, Flange, .630 x .695 x .60  |
| 62    | 748-04203       | 1   |       | Latch, Cruise                       |
| 63    | 783-05914       | 1   |       | Bracket, Support, Pedal Strap       |
| 64    | 783-05940       | 1   |       | Bracket, Support, Pedal Strap 5/8   |
| 65    | 783-06103A-0637 | 1   |       | Bracket, Pedal, Brake               |
| 66    | 736-0430        | 1   | /P    | Washer, Flat, .350 x 1.59 x .062    |
| 67    | 735-04118A      | 1   | /P    | Pad, Pedal, Forward                 |
| 68    | 735-04135       | 1   |       | Pad, Pedal, Reverse                 |

LTX1050VT Tractor (2010 & After)  
Electrical Schematic

Page 4 of 63

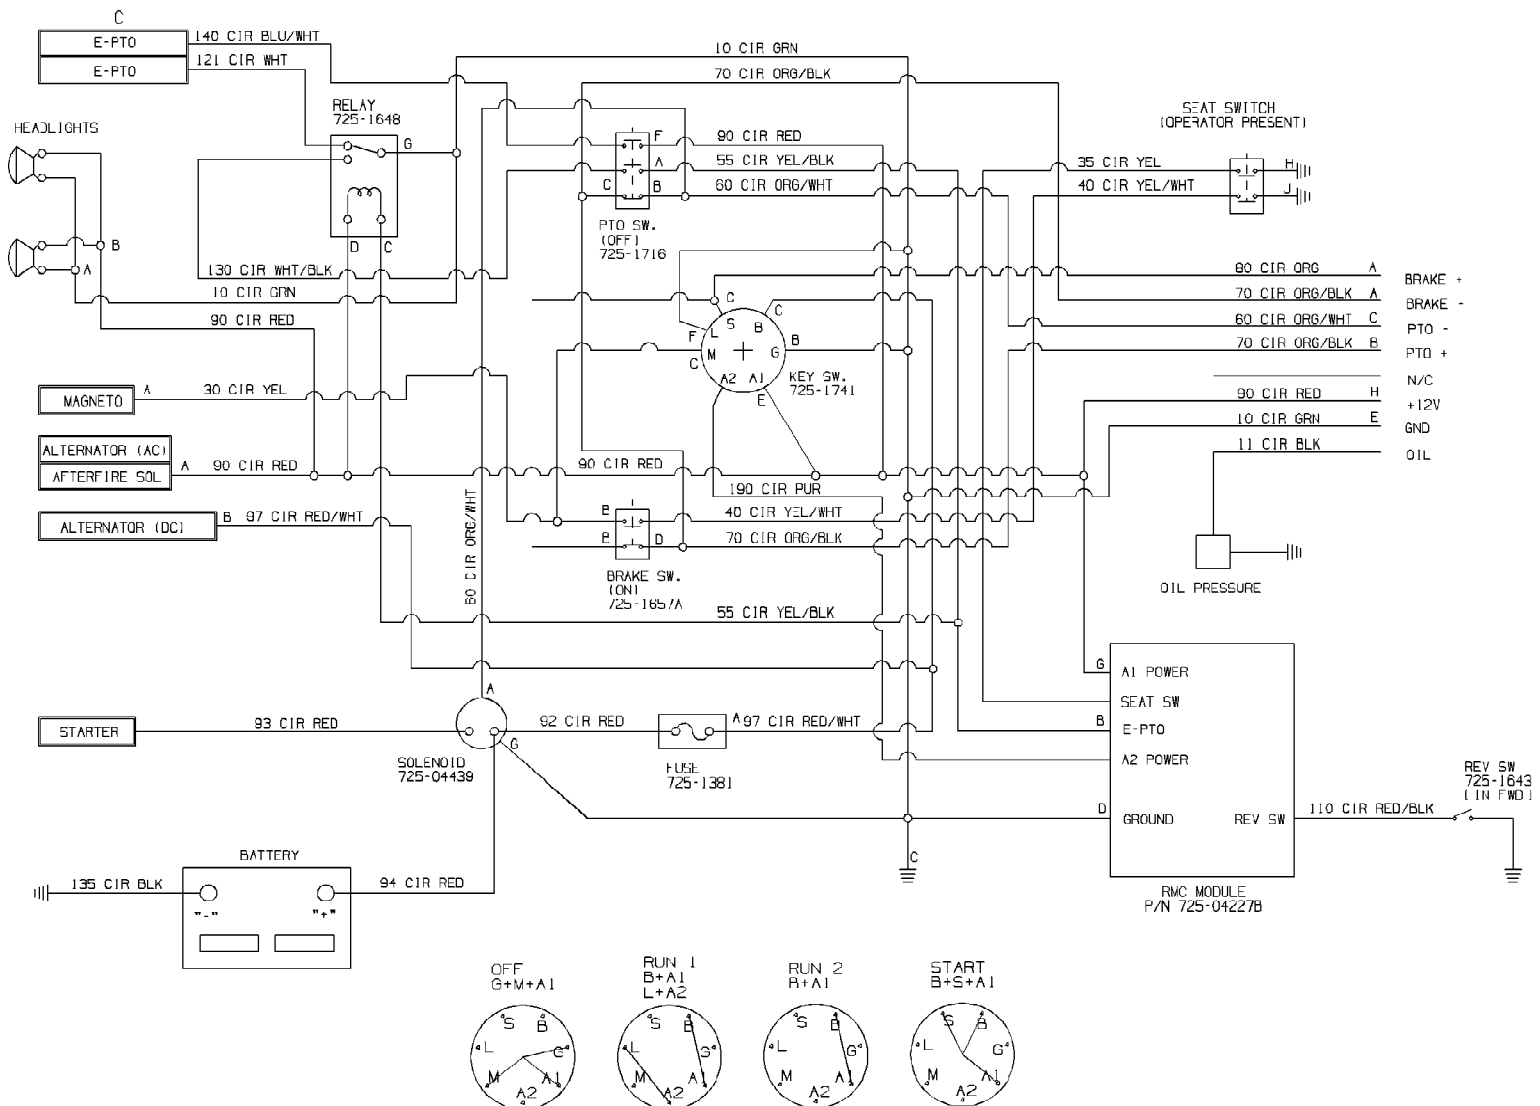

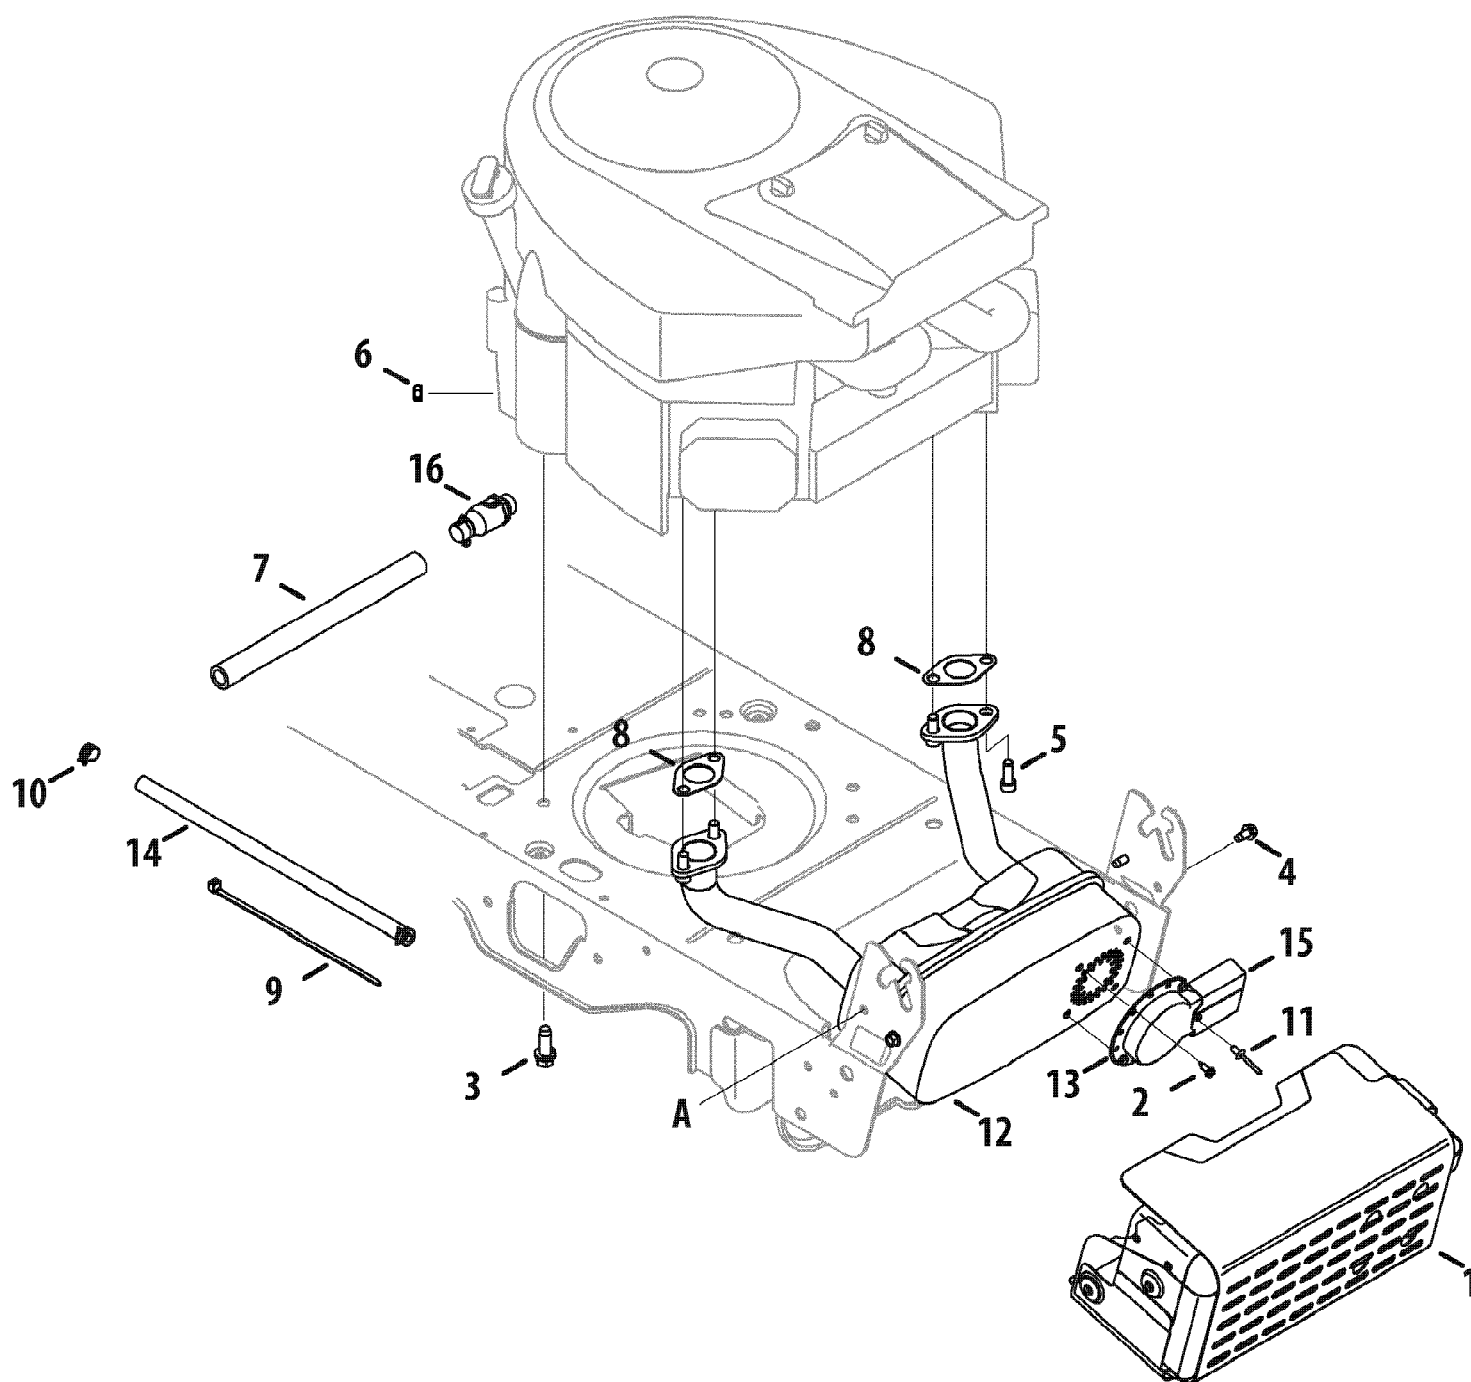


LTX1050VT Tractor (2010 & After)  
Engine Accessories

Page 6 of 63

| Ref # | Part Number    | Qty | S/P/F | Description                         |
|-------|----------------|-----|-------|-------------------------------------|
| 1     | 683-04549-0637 | 1   | /P    | Shield Ass'y, Muffler               |
| 2     | 710-0227       | 1   | /P    | Screw, Ab, #8-18, 0.500,            |
| 3     | 710-04683      | 1   |       | Screw, Self-tapping, 3/8-16, 1.000, |
| 4     | 710-0599       | 1   | /P    | Screw, Self-tapping, 1/4-20, 0.500, |
| 5     | 710-1314A      | 1   | /P    | Screw, Socket Head, 5/16-18, .750   |
| 6     | 712-0271       | 1   | /P    | Nut, Sems, 1/4-20                   |
| 7     | 751-3141-14    | 1   | /P    | Hose, Extension, Oil Drain          |
| 8     | 721-0460       | 1   |       | Gasket, Exhaust                     |
| 9     | 725-0157       | 1   | /P    | Cable, Tie, 3/16 x .05 x 7.4        |
| 10    | 726-0205       | 1   | /P    | Clamp, Hose, .490 Dia.              |
| 11    | 728-04000      | 1   |       | Rivet, Pop, .188 Dia x .300         |
| 12    | 751-10542A     | 1   |       | Muffler, Intek Twin                 |
| 13    | 751-0564B      | 1   | /P    | Deflector, Muffler                  |
| 14    | 751-10349      | 1   |       | Hose, Fuel, Low Permeation, 1/4     |
| 15    | 751-10353      | 1   |       | Deflector, Muffler, Long            |
| 16    | 951-10517A     | 1   | /P    | Drain, Oil                          |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 1

Page 7 of 63

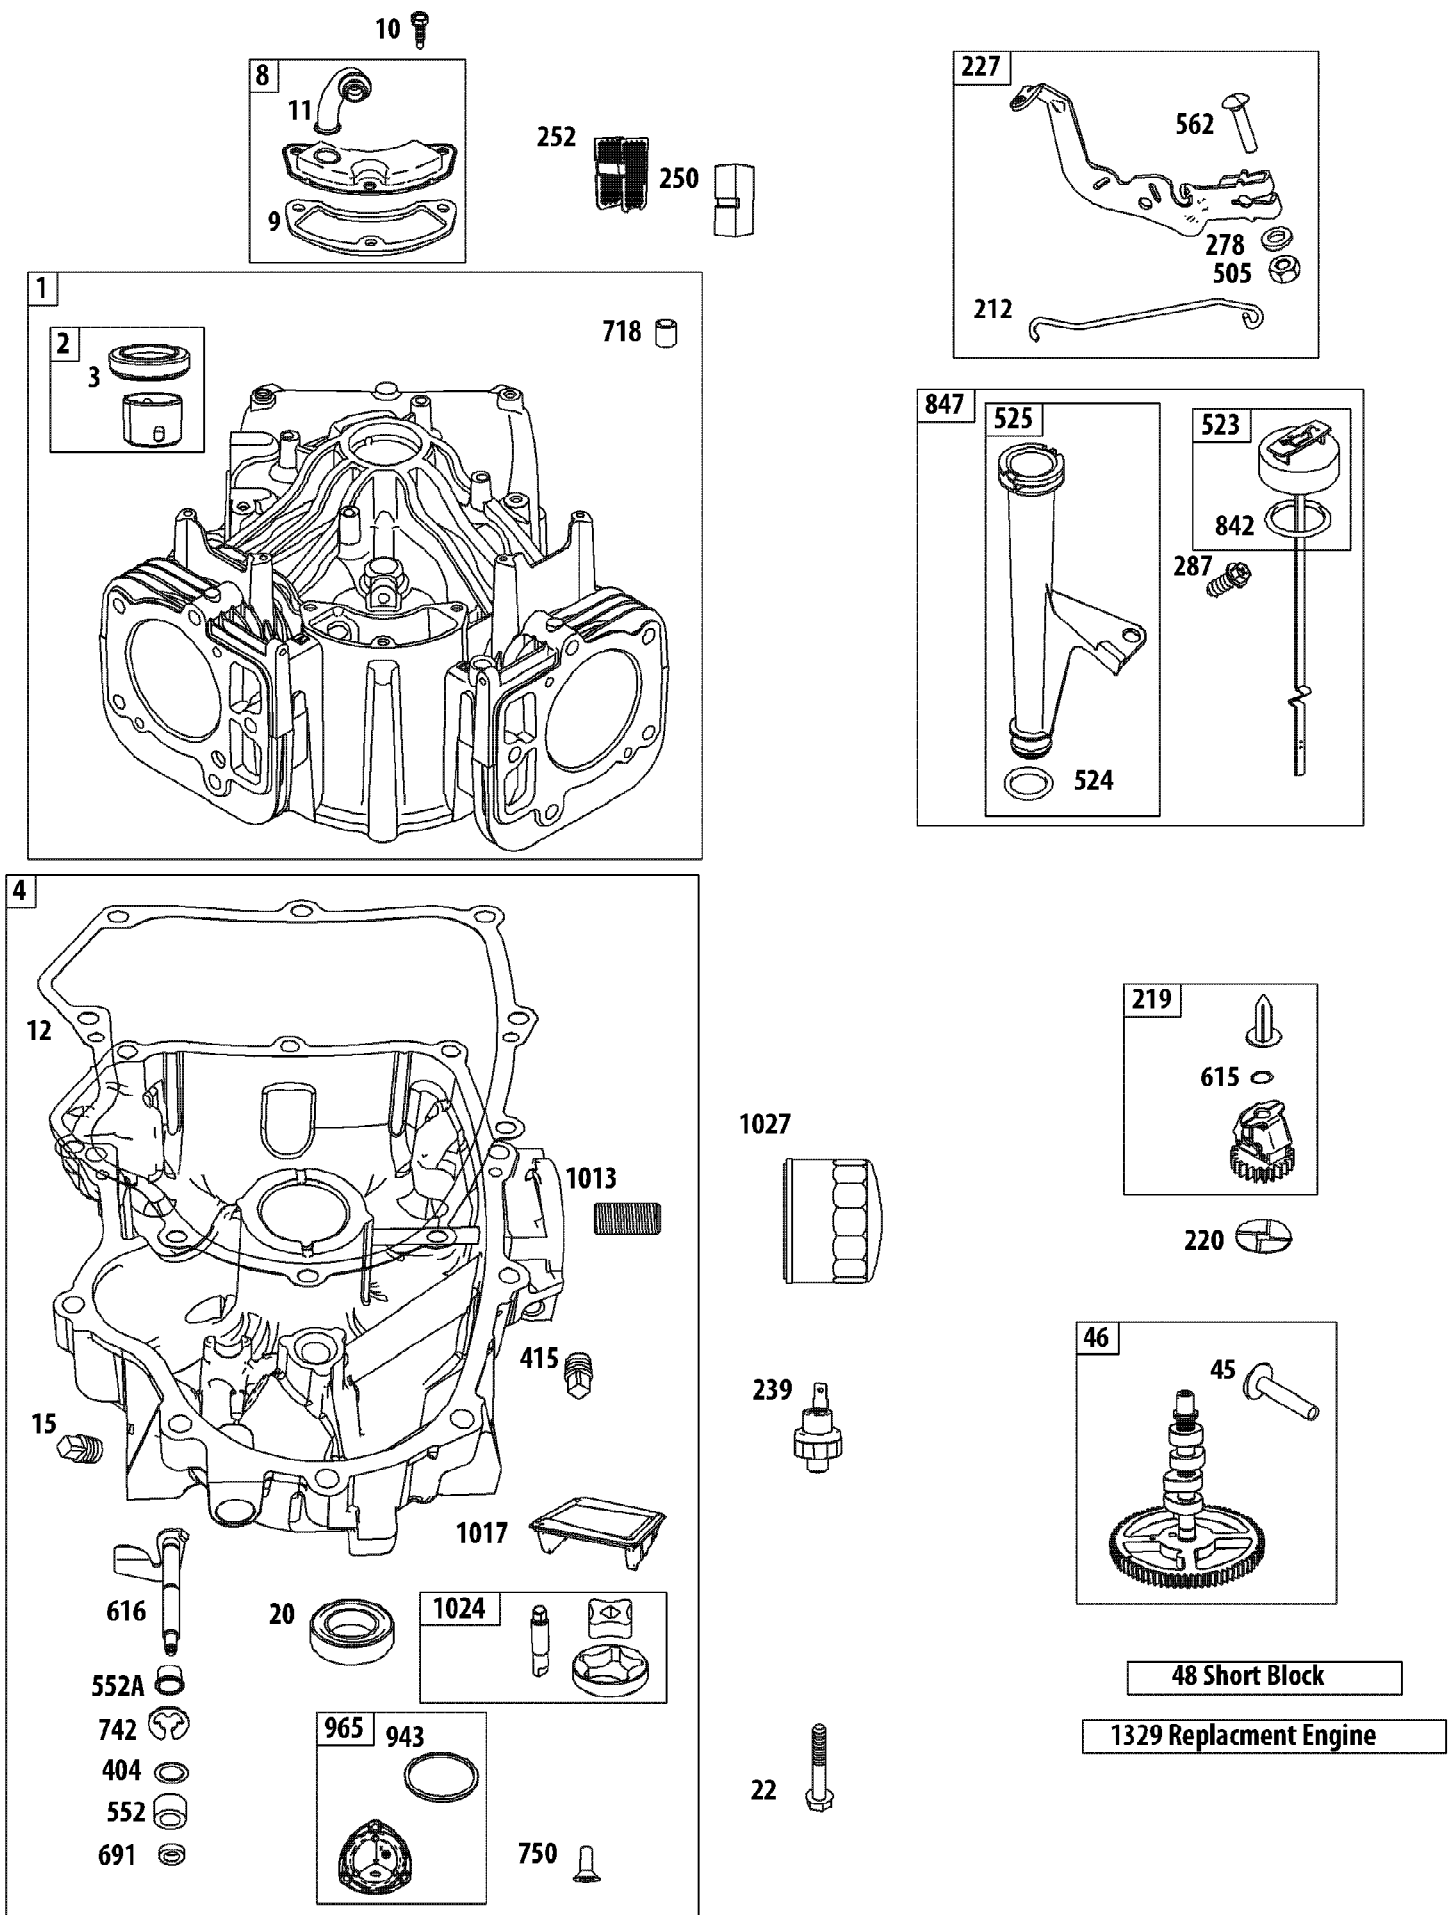

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 1

Page 8 of 63

| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 1     | BS-793564   | 1   |       | Cylinder Assembly               |
| 2     | BS-499585   | 1   |       | Kit-Bushing/Seal (Magneto Side) |
| 3     | BS-391086S  | 1   | /P    | Seal-Oil (Magneto Side)         |
| 4     | BS-796307   | 1   | /P    | Sump-Engine                     |
| 5     | BS-796231   | 1   | /P    | Head-Cylinder (Cylinder #1)     |
| 5A    | BS-796232   | 1   | /P    | Head-Cylinder (Cylinder #2)     |
| 7     | BS-693997   | 1   | /P    | Gasket-Cylinder Head            |
| 8     | BS-792185   | 1   | /P    | Breather Assembly               |
| 9     | BS-690937   | 1   |       | Gasket-Breather                 |
| 10    | BS-697551   | 1   |       | Screw (Breather Assembly)       |
| 11    | BS-792184   | 1   | /P    | Tube-Breather                   |
| 12    | BS-697227   | 1   | /P    | Gasket-Crankcase                |
| 13    | BS-793988   | 1   |       | Screw (Cylinder Head)           |
| 15    | BS-690946   | 1   | /P    | Plug-Oil Drain                  |
| 16    | BS-796540   | 1   |       | Crankshaft                      |
| 20    | BS-795387   | 1   | /P    | Seal-Oil (PTO Side)             |
| 22    | BS-694966   | 1   | /P    | Screw (Crankcase Cover/ Sump)   |
| 23    | BS-691053   | 1   |       | Flywheel                        |
| 24    | BS-222698S  | 1   | /P    | Key-Flywheel                    |
| 25    | BS-792023   | 1   | /P    | Piston Assembly (Standard)      |
| 25    | BS-792072   | 1   |       | Piston Assembly (020" Oversize) |
| 26    | BS-793561   | 1   |       | Ring Set (Standard)             |
| 26    | BS-792073   | 1   |       | Ring Set (.020" Oversize)       |
| 27    | BS-690975   | 1   |       | Lock-Piston Pin                 |
| 28    | BS-696581   | 1   |       | Pin-Piston                      |
| 29    | BS-796209   | 1   | /P    | Rod-Connecting                  |
| 32    | BS-690976   | 1   |       | Screw (Connecting Rod)          |
| 33    | BS-697576   | 1   |       | Valve-Exhaust                   |
| 34    | BS-792200   | 1   | /P    | Valve-Intake                    |
| 35    | BS-694865   | 1   |       | Spring-Valve (Intake)           |
| 36    | BS-694865   | 1   |       | Spring-Valve (Exhaust)          |
| 42    | BS-499586   | 1   | /P    | Keeper-Valve                    |
| 45    | BS-690977   | 1   | /P    | Tappet-Valve                    |
| 46    | BS-796853   | 1   |       | Gear-Cam (44L777)               |
| 46    | BS-797242   | 1   |       | Gear-Cam (44M777)               |
| 48    | BS-797093   | 1   |       | Short Block                     |
| 50    | BS-695241   | 1   | /P    | Manifold-Intake                 |
| 51    | BS-795123   | 1   |       | Gasket-Intake                   |
| 51A   | BS-690950   | 1   |       | Gasket-Intake                   |
| 51B   | BS-690949   | 1   |       | Gasket-Intake                   |
| 53    | BS-690951   | 1   |       | Stud (Carburetor)               |
| 54    | BS-699816   | 1   |       | Screw (Intake Manifold)         |
| 73    | BS-494439   | 1   | /P    | Screen-Rotating                 |
| 74    | BS-698425   | 1   |       | Screw (Rotating Screen)         |
| 75    | BS-691056   | 1   |       | Washer (Flywheel)               |
| 95    | BS-690718   | 1   |       | Screw (Throttle Valve)          |
| 98    | BS-699721   | 1   |       | Kit-Idle Speed                  |
| 104   | BS-694918   | 1   |       | Pin-Float Hinge                 |
| 105   | BS-698537   | 1   |       | Valve-Float Needle              |
| 108   | BS-699723   | 1   |       | Valve-Choke                     |
| 117   | BS-842630   | 1   |       | Jet-Main (Standard)             |
| 118   | BS-797477   | 1   |       | Jet-Main (High Altitude)        |



LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 1

Page 9 of 63

| Ref # | Part Number  | Qty | S/P/F | Description                                                 |
|-------|--------------|-----|-------|-------------------------------------------------------------|
| 121   | BS-792455    | 1   | S     | Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633) |
| 125   | BS-796997    | 1   |       | Carburetor                                                  |
| 130   | BS-690993    | 1   |       | Valve-Throttle                                              |
| 131   | BS-499805    | 1   |       | Kit-Throttle Shaft                                          |
| 133   | BS-699724    | 1   |       | Float-Carburetor                                            |
| 135   | BS-699729    | 1   |       | Tube-Fuel Transfer                                          |
| 137   | BS-690994    | 1   |       | Gasket-Float Bowl                                           |
| 141   | BS-796228    | 1   |       | Kit-Choke Shaft                                             |
| 142   | BS-699726    | 1   |       | Nozzle-Carburetor                                           |
| 146   | BS-690979    | 1   | /P    | Key-Timing                                                  |
| 150   | BS-690995    | 1   |       | Gasket-Nozzle                                               |
| 163   | BS-691001    | 1   |       | Gasket-Air Cleaner                                          |
| 165   | BS-693148    | 1   |       | Nut (Ring Gear)                                             |
| 186   | BS-795985    | 1   |       | Connector-Hose                                              |
| 187   | 751-10349-16 | 1   | /P    | Line-Fuel Cut as required                                   |
| 188   | BS-697551    | 1   |       | Screw (Control Bracket)                                     |
| 192   | BS-690083    | 1   |       | Adjuster-Rocker Arm                                         |
| 197   | BS-697820    | 1   |       | Screw (Back Plate)                                          |
| 209   | BS-796658    | 1   |       | Spring-Governor (Yellow/Brown)                              |
| 211   | BS-796225    | 1   |       | Spring-Governed Idle (Orange)                               |
| 212   | BS-695238    | 1   |       | Link-Throttle                                               |
| 216   | BS-796229    | 1   |       | Link-Choke                                                  |
| 217   | BS-695409    | 1   |       | Spring-Choke Return                                         |
| 219   | BS-793338    | 1   | /P    | Gear-Governor                                               |
| 220   | BS-690412    | 1   | /P    | Washer (Governor Gear)                                      |
| 221   | BS-841026    | 1   |       | Cup-Governor                                                |
| 222   | BS-796226    | 1   |       | Bracket-Control                                             |
| 227   | BS-796223    | 1   |       | Lever-Governor Control                                      |
| 231   | BS-690718    | 1   |       | Screw (Choke Valve)                                         |
| 239   | BS-792028    | 1   |       | Switch-Oil Pressure                                         |
| 240   | BS-691035    | 1   | /P    | Filter-Fuel                                                 |
| 250   | BS-690957    | 1   |       | Retainer-Breather                                           |
| 252   | BS-794389    | 1   |       | Collector-Oil                                               |
| 265   | BS-691024    | 1   | /P    | Clamp-Casing                                                |
| 267   | BS-695134    | 1   |       | Screw (Casing Clamp)                                        |
| 276   | BS-695410    | 1   |       | Washer-Sealing                                              |
| 278   | BS-792651    | 1   |       | Washer (Governor Control Lever)                             |
| 287   | BS-697551    | 1   |       | Screw (Dipstick Tube)                                       |
| 304   | BS-797407    | 1   | /P    | Housing-Blower                                              |
| 305   | BS-691005    | 1   |       | Screw (Blower Housing)                                      |
| 305A  | BS-790690    | 1   |       | Screw (Blower Housing to Intake Elbow)                      |
| 306   | BS-796541    | 1   |       | Shield-Cylinder (Cylinder #2)                               |
| 306A  | BS-796852    | 1   |       | Shield-Cylinder (Cylinder #1)                               |
| 307   | BS-697551    | 1   |       | Screw (Cylinder Shield)                                     |
| 309   | BS-497595    | 1   | /P    | Motor-Starter                                               |
| 310   | BS-690323    | 1   |       | Screw (Starter Motor)                                       |
| 332   | BS-691059    | 1   |       | Nut (Flywheel)                                              |
| 333   | BS-691060    | 1   | /P    | Armature-Magneto                                            |
| 334   | BS-691061    | 1   |       | Screw (Magneto Armature)                                    |
| 337   | 759-3336     | 1   | /P    | Plug-Spark                                                  |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 1

Page 10 of 63

| Ref # | Part Number | Qty | S/P/F | Description                                                             |
|-------|-------------|-----|-------|-------------------------------------------------------------------------|
| 358   | BS-694012   | 1   | /P    | Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883) |
| 385   | BS-797409   | 1   |       | Screw (Fuel Pump)                                                       |
| 387   | BS-808656   | 1   | /P    | Pump-Fuel                                                               |
| 404   | BS-690442   | 1   |       | Washer (Governor Crank)                                                 |
| 415   | BS-794903   | 1   |       | Plug (Oil Pressure Switch Hole)                                         |
| 418   | BS-795912   | 1   |       | Plate-Carburetor                                                        |
| 431   | BS-792297   | 1   |       | Elbow-Intake                                                            |
| 445   | BS-792105   | 1   | /P    | Filter-Air Cleaner Cartridge                                            |
| 447   | BS-691003   | 1   | /P    | Screw (Air Guide Cover)                                                 |
| 467   | BS-790697   | 1   |       | Knob-Air Cleaner                                                        |
| 474   | BS-696457   | 1   | /P    | Alternator                                                              |
| 501   | BS-794360   | 1   | /P    | Regulator                                                               |
| 503   | BS-691532   | 1   | /P    | Strap-Starter                                                           |
| 505   | BS-691029   | 1   |       | Nut (Governor Control Lever)                                            |
| 510   | BS-696541   | 1   | /P    | Drive-Starter                                                           |
| 513   | BS-692024   | 1   | /P    | Clutch-Drive                                                            |
| 523   | BS-691036   | 1   |       | Dipstick                                                                |
| 524   | BS-691032   | 1   |       | Seal-Dipstick Tube                                                      |
| 525   | BS-691037   | 1   |       | Tube-Dipstick                                                           |
| 526   | BS-691129   | 1   | /P    | Screw (Regulator)                                                       |
| 544   | N/A         | 1   |       | Armature-Starter (Service with Starter Motor BS-497595)                 |
| 552   | BS-796638   | 1   |       | Bushing-Governor Crank                                                  |
| 552A  | BS-690553   | 1   |       | Bushing-Governor Crank                                                  |
| 562   | BS-690311   | 1   |       | Screw (Governor Control Lever)                                          |
| 573   | BS-790444   | 1   |       | Plate-Back                                                              |
| 579   | BS-691029   | 1   |       | Nut (Starter Cable)                                                     |
| 601   | BS-691038   | 1   |       | Clamp-Hose (Black)                                                      |
| 615   | BS-698290   | 1   | /P    | Retainer-Governor Shaft                                                 |
| 616   | BS-691045   | 1   |       | Crank-Governor                                                          |
| 617   | BS-697891   | 1   |       | Seal-O Ring (Intake Manifold) (Red)                                     |
| 633   | BS-699813   | 1   |       | Seal-Choke/Throttle Shaft                                               |
| 634   | BS-698779   | 1   |       | Spring/Seal Assembly                                                    |
| 635   | BS-66538s   | 1   | /P    | Boot-Spark Plug                                                         |
| 654   | BS-690958   | 1   | /P    | Nut (Carburetor)                                                        |
| 668   | BS-691215   | 1   |       | Spacer (Rotating Screen)                                                |
| 668A  | BS-691500   | 1   | /P    | Spacer (Rotating Screen)                                                |
| 672   | BS-690234   | 1   |       | Gasket-Carburetor Plate                                                 |
| 691   | BS-790574   | 1   |       | Seal-Governor Shaft                                                     |
| 695   | BS-693149   | 1   |       | Screw (Ring Gear)                                                       |
| 697   | BS-791680   | 1   | /P    | Screw (Drive Cap)                                                       |
| 703   | BS-691010   | 1   |       | Clip                                                                    |
| 718   | BS-690959   | 1   | /P    | Pin-Locating                                                            |
| 726   | BS-499612   | 1   |       | Gear-Ring                                                               |
| 729   | BS-694123   | 1   |       | Clip-Wire                                                               |
| 741   | BS-690980   | 1   |       | Gear-Timing                                                             |
| 742   | BS-690328   | 1   | /P    | Retainer-E Ring (Governor Crank)                                        |
| 750   | BS-796208   | 1   |       | Screw (Oil Pump Cover)                                                  |
| 783   | BS-695708   | 1   | /P    | Gear-Pinion                                                             |
| 789   | BS-797460   | 1   |       | Harness-Wiring                                                          |
| 798   | BS-697890   | 1   |       | Screw (Rocker Arm)                                                      |






LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 1

Page 11 of 63

| Ref # | Part Number    | Qty | S/P/F | Description                                            |
|-------|----------------|-----|-------|--------------------------------------------------------|
| 801   | BS-691283      | 1   |       | Cap-Drive                                              |
| 802   | BS-691286      | 1   | /P    | Cap-End                                                |
| 803   | N/A            | 1   |       | Housing-Starter (Service with Starter Motor BS-497595) |
| 842   | BS-691031      | 1   | /P    | Seal-O Ring (Dipstick Tube)                            |
| 847   | BS-499602      | 1   |       | Dipstick/Tube Assembly                                 |
| 851   | BS-493880S     | 1   | /P    | Terminal-Spark Plug                                    |
| 865   | BS-792286      | 1   |       | Cover-Air Guide (Valley)                               |
| 868   | BS-690968      | 1   | /P    | Seal-Valve                                             |
| 883   | BS-690970      | 1   | /P    | Gasket-Exhaust                                         |
| 914   | BS-691127      | 1   | /P    | Screw (Rocker Cover)                                   |
| 918   | BS-797408      | 1   |       | Hose-Vacuum                                            |
| 929   | BS-695239      | 1   |       | Screw (Choke Control Bracket)                          |
| 943   | BS-796222      | 1   |       | Seal-O Ring (Oil Pump Cover)                           |
| 947   | BS-841546      | 1   |       | Solenoid-Fuel                                          |
| 965   | BS-796221      | 1   |       | Cover-Oil Pump                                         |
| 967   | BS-792303      | 1   | /P    | Filter-Pre Cleaner                                     |
| 968   | BS-795120      | 1   | /P    | Cover-Air Cleaner                                      |
| 975   | BS-793592      | 1   |       | Bowl-Float                                             |
| 987   | BS-691000      | 1   |       | Seal-Throttle Shaft                                    |
| 1005  | BS-791236      | 1   |       | Fan-Flywheel                                           |
| 1013  | BS-690954      | 1   | /P    | Nipple-Oil Filter                                      |
| 1017  | BS-796214      | 1   |       | Screen-Oil Pump                                        |
| 1022  | BS-690971      | 1   | /P    | Gasket-Rocker Cover                                    |
| 1023  | BS-793146      | 1   |       | Cover-Rocker (Cylinder #1)                             |
| 1023A | BS-499600      | 1   |       | Cover-Rocker (Cylinder #2)                             |
| 1024  | BS-796220      | 1   |       | Pump-Oil                                               |
| 1026  | BS-690981      | 1   | /P    | Rod-Push (Exhaust)                                     |
| 1026A | BS-690982      | 1   | /P    | Rod-Push (Intake)                                      |
| 1027  | BS-696854      | 1   | /P    | Filter-Oil                                             |
| 1029  | BS-690972      | 1   |       | Arm-Rocker                                             |
| 1036  |                | 1   |       | Label-Emissions (Available from a Briggs & Stratton )  |
| 1040  | BS-791237      | 1   |       | Plate-Trim                                             |
| 1051  | BS-691265      | 1   | /P    | Ring-Retaining (Starter Drive)                         |
| 1054  | BS-280275      | 1   |       | Tie-Cable                                              |
| 1059  | BS-698516      | 1   |       | Kit-Screw/Washer (Alternator)                          |
| 1070  | BS-791680      | 1   | /P    | Screw (Flywheel Fan)                                   |
| 1090  | BS-691293      | 1   | /P    | Retainer-Brush                                         |
| 1095  | BS-694013      | 1   | /P    | Gasket Set-Valve (Incl. Ref No. 7,883)                 |
| 1100  | BS-791959      | 1   |       | Pivot-Rocker Arm                                       |
| 1119  | BS-93621       | 1   | /P    | Screw (Alternator)                                     |
| 1124  | BS-841653      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1124A | BS-690988      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1126  | BS-690991      | 1   |       | Screw (Fuel Transfer Tube)                             |
| 1127  | BS-695407      | 1   |       | Screw (Fuel Bowl)                                      |
| 1128  | BS-690990      | 1   |       | Screw (Carburetor Nozzle)                              |
| 1169  | BS-690990      | 1   |       | Screw (Carburetor Plate)                               |
| 1329  | BS-44L777-0137 | 1   |       | Replacement Engine (44L777)                            |
| 1329  | BS-44Q777-0137 | 1   | /P    | Replacement Engine (44M777)                            |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 2

Page 12 of 63

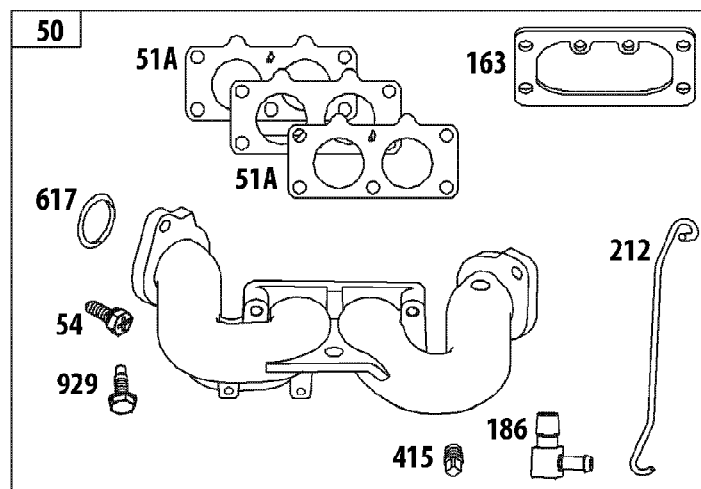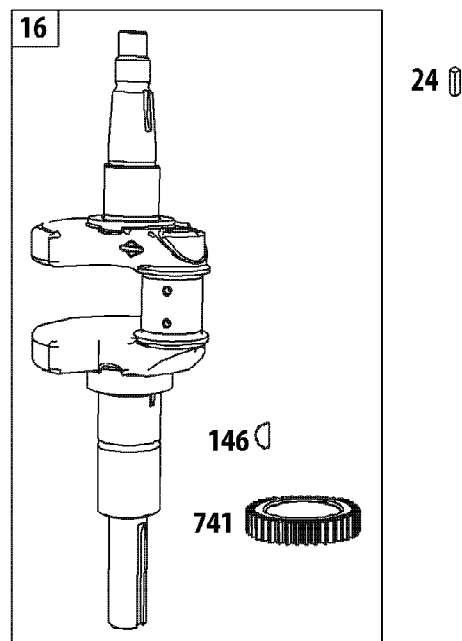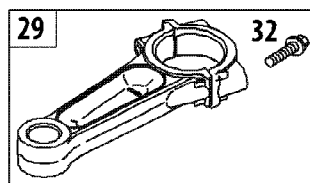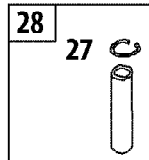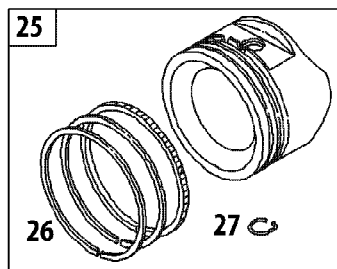

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 2

Page 13 of 63

| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 1     | BS-793564   | 1   |       | Cylinder Assembly               |
| 2     | BS-499585   | 1   |       | Kit-Bushing/Seal (Magneto Side) |
| 3     | BS-391086S  | 1   | /P    | Seal-Oil (Magneto Side)         |
| 4     | BS-796307   | 1   | /P    | Sump-Engine                     |
| 5     | BS-796231   | 1   | /P    | Head-Cylinder (Cylinder #1)     |
| 5A    | BS-796232   | 1   | /P    | Head-Cylinder (Cylinder #2)     |
| 7     | BS-693997   | 1   | /P    | Gasket-Cylinder Head            |
| 8     | BS-792185   | 1   | /P    | Breather Assembly               |
| 9     | BS-690937   | 1   |       | Gasket-Breather                 |
| 10    | BS-697551   | 1   |       | Screw (Breather Assembly)       |
| 11    | BS-792184   | 1   | /P    | Tube-Breather                   |
| 12    | BS-697227   | 1   | /P    | Gasket-Crankcase                |
| 13    | BS-793988   | 1   |       | Screw (Cylinder Head)           |
| 15    | BS-690946   | 1   | /P    | Plug-Oil Drain                  |
| 16    | BS-796540   | 1   |       | Crankshaft                      |
| 20    | BS-795387   | 1   | /P    | Seal-Oil (PTO Side)             |
| 22    | BS-694966   | 1   | /P    | Screw (Crankcase Cover/ Sump)   |
| 23    | BS-691053   | 1   |       | Flywheel                        |
| 24    | BS-222698S  | 1   | /P    | Key-Flywheel                    |
| 25    | BS-792023   | 1   | /P    | Piston Assembly (Standard)      |
| 25    | BS-792072   | 1   |       | Piston Assembly (020" Oversize) |
| 26    | BS-793561   | 1   |       | Ring Set (Standard)             |
| 26    | BS-792073   | 1   |       | Ring Set (.020" Oversize)       |
| 27    | BS-690975   | 1   |       | Lock-Piston Pin                 |
| 28    | BS-696581   | 1   |       | Pin-Piston                      |
| 29    | BS-796209   | 1   | /P    | Rod-Connecting                  |
| 32    | BS-690976   | 1   |       | Screw (Connecting Rod)          |
| 33    | BS-697576   | 1   |       | Valve-Exhaust                   |
| 34    | BS-792200   | 1   | /P    | Valve-Intake                    |
| 35    | BS-694865   | 1   |       | Spring-Valve (Intake)           |
| 36    | BS-694865   | 1   |       | Spring-Valve (Exhaust)          |
| 42    | BS-499586   | 1   | /P    | Keeper-Valve                    |
| 45    | BS-690977   | 1   | /P    | Tappet-Valve                    |
| 46    | BS-796853   | 1   |       | Gear-Cam (44L777)               |
| 46    | BS-797242   | 1   |       | Gear-Cam (44M777)               |
| 48    | BS-797093   | 1   |       | Short Block                     |
| 50    | BS-695241   | 1   | /P    | Manifold-Intake                 |
| 51    | BS-795123   | 1   |       | Gasket-Intake                   |
| 51A   | BS-690950   | 1   |       | Gasket-Intake                   |
| 51B   | BS-690949   | 1   |       | Gasket-Intake                   |
| 53    | BS-690951   | 1   |       | Stud (Carburetor)               |
| 54    | BS-699816   | 1   |       | Screw (Intake Manifold)         |
| 73    | BS-494439   | 1   | /P    | Screen-Rotating                 |
| 74    | BS-698425   | 1   |       | Screw (Rotating Screen)         |
| 75    | BS-691056   | 1   |       | Washer (Flywheel)               |
| 95    | BS-690718   | 1   |       | Screw (Throttle Valve)          |
| 98    | BS-699721   | 1   |       | Kit-Idle Speed                  |
| 104   | BS-694918   | 1   |       | Pin-Float Hinge                 |
| 105   | BS-698537   | 1   |       | Valve-Float Needle              |
| 108   | BS-699723   | 1   |       | Valve-Choke                     |
| 117   | BS-842630   | 1   |       | Jet-Main (Standard)             |
| 118   | BS-797477   | 1   |       | Jet-Main (High Altitude)        |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 2

Page 14 of 63

| Ref # | Part Number  | Qty | S/P/F | Description                                                 |
|-------|--------------|-----|-------|-------------------------------------------------------------|
| 121   | BS-792455    | 1   | S     | Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633) |
| 125   | BS-796997    | 1   |       | Carburetor                                                  |
| 130   | BS-690993    | 1   |       | Valve-Throttle                                              |
| 131   | BS-499805    | 1   |       | Kit-Throttle Shaft                                          |
| 133   | BS-699724    | 1   |       | Float-Carburetor                                            |
| 135   | BS-699729    | 1   |       | Tube-Fuel Transfer                                          |
| 137   | BS-690994    | 1   |       | Gasket-Float Bowl                                           |
| 141   | BS-796228    | 1   |       | Kit-Choke Shaft                                             |
| 142   | BS-699726    | 1   |       | Nozzle-Carburetor                                           |
| 146   | BS-690979    | 1   | /P    | Key-Timing                                                  |
| 150   | BS-690995    | 1   |       | Gasket-Nozzle                                               |
| 163   | BS-691001    | 1   |       | Gasket-Air Cleaner                                          |
| 165   | BS-693148    | 1   |       | Nut (Ring Gear)                                             |
| 186   | BS-795985    | 1   |       | Connector-Hose                                              |
| 187   | 751-10349-16 | 1   | /P    | Line-Fuel Cut as required                                   |
| 188   | BS-697551    | 1   |       | Screw (Control Bracket)                                     |
| 192   | BS-690083    | 1   |       | Adjuster-Rocker Arm                                         |
| 197   | BS-697820    | 1   |       | Screw (Back Plate)                                          |
| 209   | BS-796658    | 1   |       | Spring-Governor (Yellow/Brown)                              |
| 211   | BS-796225    | 1   |       | Spring-Governed Idle (Orange)                               |
| 212   | BS-695238    | 1   |       | Link-Throttle                                               |
| 216   | BS-796229    | 1   |       | Link-Choke                                                  |
| 217   | BS-695409    | 1   |       | Spring-Choke Return                                         |
| 219   | BS-793338    | 1   | /P    | Gear-Governor                                               |
| 220   | BS-690412    | 1   | /P    | Washer (Governor Gear)                                      |
| 221   | BS-841026    | 1   |       | Cup-Governor                                                |
| 222   | BS-796226    | 1   |       | Bracket-Control                                             |
| 227   | BS-796223    | 1   |       | Lever-Governor Control                                      |
| 231   | BS-690718    | 1   |       | Screw (Choke Valve)                                         |
| 239   | BS-792028    | 1   |       | Switch-Oil Pressure                                         |
| 240   | BS-691035    | 1   | /P    | Filter-Fuel                                                 |
| 250   | BS-690957    | 1   |       | Retainer-Breather                                           |
| 252   | BS-794389    | 1   |       | Collector-Oil                                               |
| 265   | BS-691024    | 1   | /P    | Clamp-Casing                                                |
| 267   | BS-695134    | 1   |       | Screw (Casing Clamp)                                        |
| 276   | BS-695410    | 1   |       | Washer-Sealing                                              |
| 278   | BS-792651    | 1   |       | Washer (Governor Control Lever)                             |
| 287   | BS-697551    | 1   |       | Screw (Dipstick Tube)                                       |
| 304   | BS-797407    | 1   | /P    | Housing-Blower                                              |
| 305   | BS-691005    | 1   |       | Screw (Blower Housing)                                      |
| 305A  | BS-790690    | 1   |       | Screw (Blower Housing to Intake Elbow)                      |
| 306   | BS-796541    | 1   |       | Shield-Cylinder (Cylinder #2)                               |
| 306A  | BS-796852    | 1   |       | Shield-Cylinder (Cylinder #1)                               |
| 307   | BS-697551    | 1   |       | Screw (Cylinder Shield)                                     |
| 309   | BS-497595    | 1   | /P    | Motor-Starter                                               |
| 310   | BS-690323    | 1   |       | Screw (Starter Motor)                                       |
| 332   | BS-691059    | 1   |       | Nut (Flywheel)                                              |
| 333   | BS-691060    | 1   | /P    | Armature-Magneto                                            |
| 334   | BS-691061    | 1   |       | Screw (Magneto Armature)                                    |
| 337   | 759-3336     | 1   | /P    | Plug-Spark                                                  |



LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 2

Page 15 of 63

| Ref # | Part Number | Qty | S/P/F | Description                                                             |
|-------|-------------|-----|-------|-------------------------------------------------------------------------|
| 358   | BS-694012   | 1   | /P    | Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883) |
| 385   | BS-797409   | 1   |       | Screw (Fuel Pump)                                                       |
| 387   | BS-808656   | 1   | /P    | Pump-Fuel                                                               |
| 404   | BS-690442   | 1   |       | Washer (Governor Crank)                                                 |
| 415   | BS-794903   | 1   |       | Plug (Oil Pressure Switch Hole)                                         |
| 418   | BS-795912   | 1   |       | Plate-Carburetor                                                        |
| 431   | BS-792297   | 1   |       | Elbow-Intake                                                            |
| 445   | BS-792105   | 1   | /P    | Filter-Air Cleaner Cartridge                                            |
| 447   | BS-691003   | 1   | /P    | Screw (Air Guide Cover)                                                 |
| 467   | BS-790697   | 1   |       | Knob-Air Cleaner                                                        |
| 474   | BS-696457   | 1   | /P    | Alternator                                                              |
| 501   | BS-794360   | 1   | /P    | Regulator                                                               |
| 503   | BS-691532   | 1   | /P    | Strap-Starter                                                           |
| 505   | BS-691029   | 1   |       | Nut (Governor Control Lever)                                            |
| 510   | BS-696541   | 1   | /P    | Drive-Starter                                                           |
| 513   | BS-692024   | 1   | /P    | Clutch-Drive                                                            |
| 523   | BS-691036   | 1   |       | Dipstick                                                                |
| 524   | BS-691032   | 1   |       | Seal-Dipstick Tube                                                      |
| 525   | BS-691037   | 1   |       | Tube-Dipstick                                                           |
| 526   | BS-691129   | 1   | /P    | Screw (Regulator)                                                       |
| 544   | N/A         | 1   |       | Armature-Starter (Service with Starter Motor BS-497595)                 |
| 552   | BS-796638   | 1   |       | Bushing-Governor Crank                                                  |
| 552A  | BS-690553   | 1   |       | Bushing-Governor Crank                                                  |
| 562   | BS-690311   | 1   |       | Screw (Governor Control Lever)                                          |
| 573   | BS-790444   | 1   |       | Plate-Back                                                              |
| 579   | BS-691029   | 1   |       | Nut (Starter Cable)                                                     |
| 601   | BS-691038   | 1   |       | Clamp-Hose (Black)                                                      |
| 615   | BS-698290   | 1   | /P    | Retainer-Governor Shaft                                                 |
| 616   | BS-691045   | 1   |       | Crank-Governor                                                          |
| 617   | BS-697891   | 1   |       | Seal-O Ring (Intake Manifold) (Red)                                     |
| 633   | BS-699813   | 1   |       | Seal-Choke/Throttle Shaft                                               |
| 634   | BS-698779   | 1   |       | Spring/Seal Assembly                                                    |
| 635   | BS-66538s   | 1   | /P    | Boot-Spark Plug                                                         |
| 654   | BS-690958   | 1   | /P    | Nut (Carburetor)                                                        |
| 668   | BS-691215   | 1   |       | Spacer (Rotating Screen)                                                |
| 668A  | BS-691500   | 1   | /P    | Spacer (Rotating Screen)                                                |
| 672   | BS-690234   | 1   |       | Gasket-Carburetor Plate                                                 |
| 691   | BS-790574   | 1   |       | Seal-Governor Shaft                                                     |
| 695   | BS-693149   | 1   |       | Screw (Ring Gear)                                                       |
| 697   | BS-791680   | 1   | /P    | Screw (Drive Cap)                                                       |
| 703   | BS-691010   | 1   |       | Clip                                                                    |
| 718   | BS-690959   | 1   | /P    | Pin-Locating                                                            |
| 726   | BS-499612   | 1   |       | Gear-Ring                                                               |
| 729   | BS-694123   | 1   |       | Clip-Wire                                                               |
| 741   | BS-690980   | 1   |       | Gear-Timing                                                             |
| 742   | BS-690328   | 1   | /P    | Retainer-E Ring (Governor Crank)                                        |
| 750   | BS-796208   | 1   |       | Screw (Oil Pump Cover)                                                  |
| 783   | BS-695708   | 1   | /P    | Gear-Pinion                                                             |
| 789   | BS-797460   | 1   |       | Harness-Wiring                                                          |
| 798   | BS-697890   | 1   |       | Screw (Rocker Arm)                                                      |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 2






Page 16 of 63

| Ref # | Part Number    | Qty | S/P/F | Description                                            |
|-------|----------------|-----|-------|--------------------------------------------------------|
| 801   | BS-691283      | 1   |       | Cap-Drive                                              |
| 802   | BS-691286      | 1   | /P    | Cap-End                                                |
| 803   | N/A            | 1   |       | Housing-Starter (Service with Starter Motor BS-497595) |
| 842   | BS-691031      | 1   | /P    | Seal-O Ring (Dipstick Tube)                            |
| 847   | BS-499602      | 1   |       | Dipstick/Tube Assembly                                 |
| 851   | BS-493880S     | 1   | /P    | Terminal-Spark Plug                                    |
| 865   | BS-792286      | 1   |       | Cover-Air Guide (Valley)                               |
| 868   | BS-690968      | 1   | /P    | Seal-Valve                                             |
| 883   | BS-690970      | 1   | /P    | Gasket-Exhaust                                         |
| 914   | BS-691127      | 1   | /P    | Screw (Rocker Cover)                                   |
| 918   | BS-797408      | 1   |       | Hose-Vacuum                                            |
| 929   | BS-695239      | 1   |       | Screw (Choke Control Bracket)                          |
| 943   | BS-796222      | 1   |       | Seal-O Ring (Oil Pump Cover)                           |
| 947   | BS-841546      | 1   |       | Solenoid-Fuel                                          |
| 965   | BS-796221      | 1   |       | Cover-Oil Pump                                         |
| 967   | BS-792303      | 1   | /P    | Filter-Pre Cleaner                                     |
| 968   | BS-795120      | 1   | /P    | Cover-Air Cleaner                                      |
| 975   | BS-793592      | 1   |       | Bowl-Float                                             |
| 987   | BS-691000      | 1   |       | Seal-Throttle Shaft                                    |
| 1005  | BS-791236      | 1   |       | Fan-Flywheel                                           |
| 1013  | BS-690954      | 1   | /P    | Nipple-Oil Filter                                      |
| 1017  | BS-796214      | 1   |       | Screen-Oil Pump                                        |
| 1022  | BS-690971      | 1   | /P    | Gasket-Rocker Cover                                    |
| 1023  | BS-793146      | 1   |       | Cover-Rocker (Cylinder #1)                             |
| 1023A | BS-499600      | 1   |       | Cover-Rocker (Cylinder #2)                             |
| 1024  | BS-796220      | 1   |       | Pump-Oil                                               |
| 1026  | BS-690981      | 1   | /P    | Rod-Push (Exhaust)                                     |
| 1026A | BS-690982      | 1   | /P    | Rod-Push (Intake)                                      |
| 1027  | BS-696854      | 1   | /P    | Filter-Oil                                             |
| 1029  | BS-690972      | 1   |       | Arm-Rocker                                             |
| 1036  |                | 1   |       | Label-Emissions (Available from a Briggs & Stratton )  |
| 1040  | BS-791237      | 1   |       | Plate-Trim                                             |
| 1051  | BS-691265      | 1   | /P    | Ring-Retaining (Starter Drive)                         |
| 1054  | BS-280275      | 1   |       | Tie-Cable                                              |
| 1059  | BS-698516      | 1   |       | Kit-Screw/Washer (Alternator)                          |
| 1070  | BS-791680      | 1   | /P    | Screw (Flywheel Fan)                                   |
| 1090  | BS-691293      | 1   | /P    | Retainer-Brush                                         |
| 1095  | BS-694013      | 1   | /P    | Gasket Set-Valve (Incl. Ref No. 7,883)                 |
| 1100  | BS-791959      | 1   |       | Pivot-Rocker Arm                                       |
| 1119  | BS-93621       | 1   | /P    | Screw (Alternator)                                     |
| 1124  | BS-841653      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1124A | BS-690988      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1126  | BS-690991      | 1   |       | Screw (Fuel Transfer Tube)                             |
| 1127  | BS-695407      | 1   |       | Screw (Fuel Bowl)                                      |
| 1128  | BS-690990      | 1   |       | Screw (Carburetor Nozzle)                              |
| 1169  | BS-690990      | 1   |       | Screw (Carburetor Plate)                               |
| 1329  | BS-44L777-0137 | 1   |       | Replacement Engine (44L777)                            |
| 1329  | BS-44Q777-0137 | 1   | /P    | Replacement Engine (44M777)                            |



LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 3

Page 17 of 63

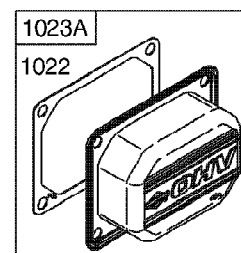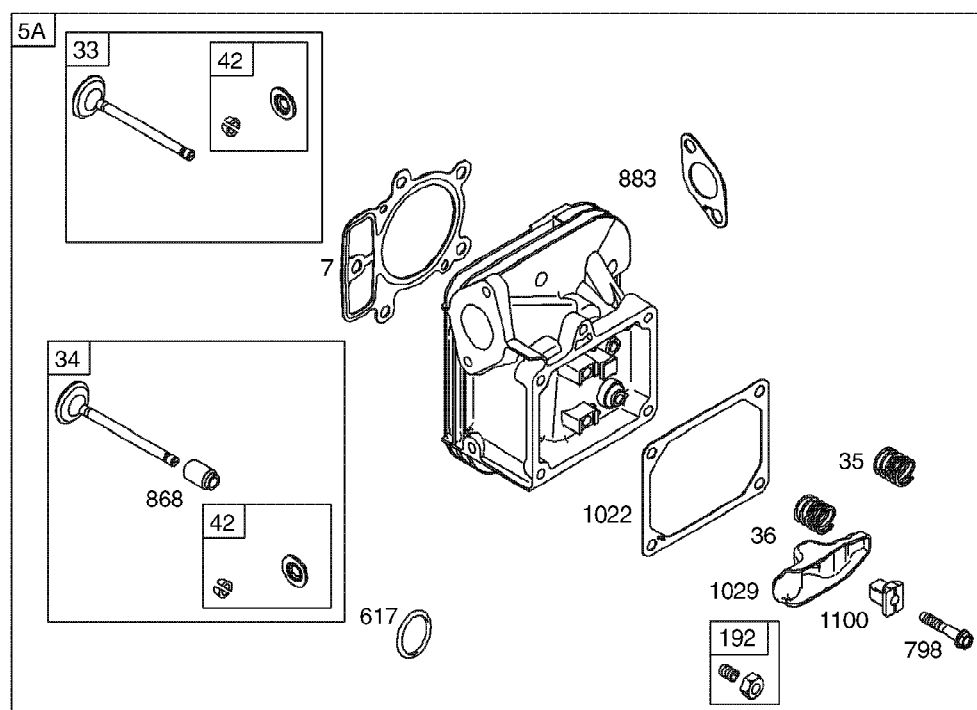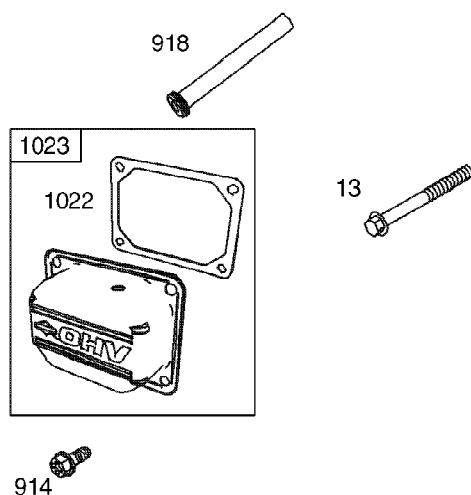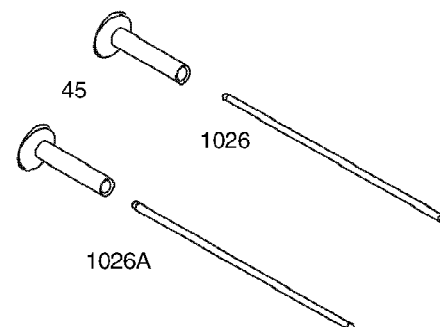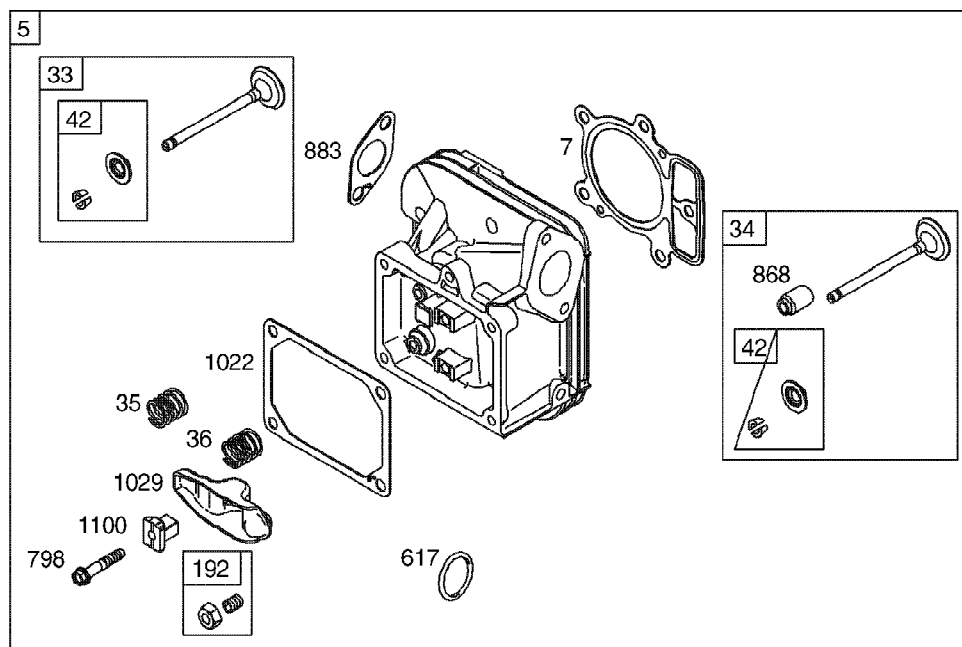

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 3

Page 18 of 63

| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 1     | BS-793564   | 1   |       | Cylinder Assembly               |
| 2     | BS-499585   | 1   |       | Kit-Bushing/Seal (Magneto Side) |
| 3     | BS-391086S  | 1   | /P    | Seal-Oil (Magneto Side)         |
| 4     | BS-796307   | 1   | /P    | Sump-Engine                     |
| 5     | BS-796231   | 1   | /P    | Head-Cylinder (Cylinder #1)     |
| 5A    | BS-796232   | 1   | /P    | Head-Cylinder (Cylinder #2)     |
| 7     | BS-693997   | 1   | /P    | Gasket-Cylinder Head            |
| 8     | BS-792185   | 1   | /P    | Breather Assembly               |
| 9     | BS-690937   | 1   |       | Gasket-Breather                 |
| 10    | BS-697551   | 1   |       | Screw (Breather Assembly)       |
| 11    | BS-792184   | 1   | /P    | Tube-Breather                   |
| 12    | BS-697227   | 1   | /P    | Gasket-Crankcase                |
| 13    | BS-793988   | 1   |       | Screw (Cylinder Head)           |
| 15    | BS-690946   | 1   | /P    | Plug-Oil Drain                  |
| 16    | BS-796540   | 1   |       | Crankshaft                      |
| 20    | BS-795387   | 1   | /P    | Seal-Oil (PTO Side)             |
| 22    | BS-694966   | 1   | /P    | Screw (Crankcase Cover/ Sump)   |
| 23    | BS-691053   | 1   |       | Flywheel                        |
| 24    | BS-222698S  | 1   | /P    | Key-Flywheel                    |
| 25    | BS-792023   | 1   | /P    | Piston Assembly (Standard)      |
| 25    | BS-792072   | 1   |       | Piston Assembly (020" Oversize) |
| 26    | BS-793561   | 1   |       | Ring Set (Standard)             |
| 26    | BS-792073   | 1   |       | Ring Set (.020" Oversize)       |
| 27    | BS-690975   | 1   |       | Lock-Piston Pin                 |
| 28    | BS-696581   | 1   |       | Pin-Piston                      |
| 29    | BS-796209   | 1   | /P    | Rod-Connecting                  |
| 32    | BS-690976   | 1   |       | Screw (Connecting Rod)          |
| 33    | BS-697576   | 1   |       | Valve-Exhaust                   |
| 34    | BS-792200   | 1   | /P    | Valve-Intake                    |
| 35    | BS-694865   | 1   |       | Spring-Valve (Intake)           |
| 36    | BS-694865   | 1   |       | Spring-Valve (Exhaust)          |
| 42    | BS-499586   | 1   | /P    | Keeper-Valve                    |
| 45    | BS-690977   | 1   | /P    | Tappet-Valve                    |
| 46    | BS-796853   | 1   |       | Gear-Cam (44L777)               |
| 46    | BS-797242   | 1   |       | Gear-Cam (44M777)               |
| 48    | BS-797093   | 1   |       | Short Block                     |
| 50    | BS-695241   | 1   | /P    | Manifold-Intake                 |
| 51    | BS-795123   | 1   |       | Gasket-Intake                   |
| 51A   | BS-690950   | 1   |       | Gasket-Intake                   |
| 51B   | BS-690949   | 1   |       | Gasket-Intake                   |
| 53    | BS-690951   | 1   |       | Stud (Carburetor)               |
| 54    | BS-699816   | 1   |       | Screw (Intake Manifold)         |
| 73    | BS-494439   | 1   | /P    | Screen-Rotating                 |
| 74    | BS-698425   | 1   |       | Screw (Rotating Screen)         |
| 75    | BS-691056   | 1   |       | Washer (Flywheel)               |
| 95    | BS-690718   | 1   |       | Screw (Throttle Valve)          |
| 98    | BS-699721   | 1   |       | Kit-Idle Speed                  |
| 104   | BS-694918   | 1   |       | Pin-Float Hinge                 |
| 105   | BS-698537   | 1   |       | Valve-Float Needle              |
| 108   | BS-699723   | 1   |       | Valve-Choke                     |
| 117   | BS-842630   | 1   |       | Jet-Main (Standard)             |
| 118   | BS-797477   | 1   |       | Jet-Main (High Altitude)        |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 3

Page 19 of 63

| Ref # | Part Number  | Qty | S/P/F | Description                                                 |
|-------|--------------|-----|-------|-------------------------------------------------------------|
| 121   | BS-792455    | 1   | S     | Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633) |
| 125   | BS-796997    | 1   |       | Carburetor                                                  |
| 130   | BS-690993    | 1   |       | Valve-Throttle                                              |
| 131   | BS-499805    | 1   |       | Kit-Throttle Shaft                                          |
| 133   | BS-699724    | 1   |       | Float-Carburetor                                            |
| 135   | BS-699729    | 1   |       | Tube-Fuel Transfer                                          |
| 137   | BS-690994    | 1   |       | Gasket-Float Bowl                                           |
| 141   | BS-796228    | 1   |       | Kit-Choke Shaft                                             |
| 142   | BS-699726    | 1   |       | Nozzle-Carburetor                                           |
| 146   | BS-690979    | 1   | /P    | Key-Timing                                                  |
| 150   | BS-690995    | 1   |       | Gasket-Nozzle                                               |
| 163   | BS-691001    | 1   |       | Gasket-Air Cleaner                                          |
| 165   | BS-693148    | 1   |       | Nut (Ring Gear)                                             |
| 186   | BS-795985    | 1   |       | Connector-Hose                                              |
| 187   | 751-10349-16 | 1   | /P    | Line-Fuel Cut as required                                   |
| 188   | BS-697551    | 1   |       | Screw (Control Bracket)                                     |
| 192   | BS-690083    | 1   |       | Adjuster-Rocker Arm                                         |
| 197   | BS-697820    | 1   |       | Screw (Back Plate)                                          |
| 209   | BS-796658    | 1   |       | Spring-Governor (Yellow/Brown)                              |
| 211   | BS-796225    | 1   |       | Spring-Governed Idle (Orange)                               |
| 212   | BS-695238    | 1   |       | Link-Throttle                                               |
| 216   | BS-796229    | 1   |       | Link-Choke                                                  |
| 217   | BS-695409    | 1   |       | Spring-Choke Return                                         |
| 219   | BS-793338    | 1   | /P    | Gear-Governor                                               |
| 220   | BS-690412    | 1   | /P    | Washer (Governor Gear)                                      |
| 221   | BS-841026    | 1   |       | Cup-Governor                                                |
| 222   | BS-796226    | 1   |       | Bracket-Control                                             |
| 227   | BS-796223    | 1   |       | Lever-Governor Control                                      |
| 231   | BS-690718    | 1   |       | Screw (Choke Valve)                                         |
| 239   | BS-792028    | 1   |       | Switch-Oil Pressure                                         |
| 240   | BS-691035    | 1   | /P    | Filter-Fuel                                                 |
| 250   | BS-690957    | 1   |       | Retainer-Breather                                           |
| 252   | BS-794389    | 1   |       | Collector-Oil                                               |
| 265   | BS-691024    | 1   | /P    | Clamp-Casing                                                |
| 267   | BS-695134    | 1   |       | Screw (Casing Clamp)                                        |
| 276   | BS-695410    | 1   |       | Washer-Sealing                                              |
| 278   | BS-792651    | 1   |       | Washer (Governor Control Lever)                             |
| 287   | BS-697551    | 1   |       | Screw (Dipstick Tube)                                       |
| 304   | BS-797407    | 1   | /P    | Housing-Blower                                              |
| 305   | BS-691005    | 1   |       | Screw (Blower Housing)                                      |
| 305A  | BS-790690    | 1   |       | Screw (Blower Housing to Intake Elbow)                      |
| 306   | BS-796541    | 1   |       | Shield-Cylinder (Cylinder #2)                               |
| 306A  | BS-796852    | 1   |       | Shield-Cylinder (Cylinder #1)                               |
| 307   | BS-697551    | 1   |       | Screw (Cylinder Shield)                                     |
| 309   | BS-497595    | 1   | /P    | Motor-Starter                                               |
| 310   | BS-690323    | 1   |       | Screw (Starter Motor)                                       |
| 332   | BS-691059    | 1   |       | Nut (Flywheel)                                              |
| 333   | BS-691060    | 1   | /P    | Armature-Magneto                                            |
| 334   | BS-691061    | 1   |       | Screw (Magneto Armature)                                    |
| 337   | 759-3336     | 1   | /P    | Plug-Spark                                                  |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 3

Page 20 of 63

| Ref # | Part Number | Qty | S/P/F | Description                                                             |
|-------|-------------|-----|-------|-------------------------------------------------------------------------|
| 358   | BS-694012   | 1   | /P    | Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883) |
| 385   | BS-797409   | 1   |       | Screw (Fuel Pump)                                                       |
| 387   | BS-808656   | 1   | /P    | Pump-Fuel                                                               |
| 404   | BS-690442   | 1   |       | Washer (Governor Crank)                                                 |
| 415   | BS-794903   | 1   |       | Plug (Oil Pressure Switch Hole)                                         |
| 418   | BS-795912   | 1   |       | Plate-Carburetor                                                        |
| 431   | BS-792297   | 1   |       | Elbow-Intake                                                            |
| 445   | BS-792105   | 1   | /P    | Filter-Air Cleaner Cartridge                                            |
| 447   | BS-691003   | 1   | /P    | Screw (Air Guide Cover)                                                 |
| 467   | BS-790697   | 1   |       | Knob-Air Cleaner                                                        |
| 474   | BS-696457   | 1   | /P    | Alternator                                                              |
| 501   | BS-794360   | 1   | /P    | Regulator                                                               |
| 503   | BS-691532   | 1   | /P    | Strap-Starter                                                           |
| 505   | BS-691029   | 1   |       | Nut (Governor Control Lever)                                            |
| 510   | BS-696541   | 1   | /P    | Drive-Starter                                                           |
| 513   | BS-692024   | 1   | /P    | Clutch-Drive                                                            |
| 523   | BS-691036   | 1   |       | Dipstick                                                                |
| 524   | BS-691032   | 1   |       | Seal-Dipstick Tube                                                      |
| 525   | BS-691037   | 1   |       | Tube-Dipstick                                                           |
| 526   | BS-691129   | 1   | /P    | Screw (Regulator)                                                       |
| 544   | N/A         | 1   |       | Armature-Starter (Service with Starter Motor BS-497595)                 |
| 552   | BS-796638   | 1   |       | Bushing-Governor Crank                                                  |
| 552A  | BS-690553   | 1   |       | Bushing-Governor Crank                                                  |
| 562   | BS-690311   | 1   |       | Screw (Governor Control Lever)                                          |
| 573   | BS-790444   | 1   |       | Plate-Back                                                              |
| 579   | BS-691029   | 1   |       | Nut (Starter Cable)                                                     |
| 601   | BS-691038   | 1   |       | Clamp-Hose (Black)                                                      |
| 615   | BS-698290   | 1   | /P    | Retainer-Governor Shaft                                                 |
| 616   | BS-691045   | 1   |       | Crank-Governor                                                          |
| 617   | BS-697891   | 1   |       | Seal-O Ring (Intake Manifold) (Red)                                     |
| 633   | BS-699813   | 1   |       | Seal-Choke/Throttle Shaft                                               |
| 634   | BS-698779   | 1   |       | Spring/Seal Assembly                                                    |
| 635   | BS-66538s   | 1   | /P    | Boot-Spark Plug                                                         |
| 654   | BS-690958   | 1   | /P    | Nut (Carburetor)                                                        |
| 668   | BS-691215   | 1   |       | Spacer (Rotating Screen)                                                |
| 668A  | BS-691500   | 1   | /P    | Spacer (Rotating Screen)                                                |
| 672   | BS-690234   | 1   |       | Gasket-Carburetor Plate                                                 |
| 691   | BS-790574   | 1   |       | Seal-Governor Shaft                                                     |
| 695   | BS-693149   | 1   |       | Screw (Ring Gear)                                                       |
| 697   | BS-791680   | 1   | /P    | Screw (Drive Cap)                                                       |
| 703   | BS-691010   | 1   |       | Clip                                                                    |
| 718   | BS-690959   | 1   | /P    | Pin-Locating                                                            |
| 726   | BS-499612   | 1   |       | Gear-Ring                                                               |
| 729   | BS-694123   | 1   |       | Clip-Wire                                                               |
| 741   | BS-690980   | 1   |       | Gear-Timing                                                             |
| 742   | BS-690328   | 1   | /P    | Retainer-E Ring (Governor Crank)                                        |
| 750   | BS-796208   | 1   |       | Screw (Oil Pump Cover)                                                  |
| 783   | BS-695708   | 1   | /P    | Gear-Pinion                                                             |
| 789   | BS-797460   | 1   |       | Harness-Wiring                                                          |
| 798   | BS-697890   | 1   |       | Screw (Rocker Arm)                                                      |


LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 3

Page 21 of 63

| Ref # | Part Number    | Qty | S/P/F | Description                                            |
|-------|----------------|-----|-------|--------------------------------------------------------|
| 801   | BS-691283      | 1   |       | Cap-Drive                                              |
| 802   | BS-691286      | 1   | /P    | Cap-End                                                |
| 803   | N/A            | 1   |       | Housing-Starter (Service with Starter Motor BS-497595) |
| 842   | BS-691031      | 1   | /P    | Seal-O Ring (Dipstick Tube)                            |
| 847   | BS-499602      | 1   |       | Dipstick/Tube Assembly                                 |
| 851   | BS-493880S     | 1   | /P    | Terminal-Spark Plug                                    |
| 865   | BS-792286      | 1   |       | Cover-Air Guide (Valley)                               |
| 868   | BS-690968      | 1   | /P    | Seal-Valve                                             |
| 883   | BS-690970      | 1   | /P    | Gasket-Exhaust                                         |
| 914   | BS-691127      | 1   | /P    | Screw (Rocker Cover)                                   |
| 918   | BS-797408      | 1   |       | Hose-Vacuum                                            |
| 929   | BS-695239      | 1   |       | Screw (Choke Control Bracket)                          |
| 943   | BS-796222      | 1   |       | Seal-O Ring (Oil Pump Cover)                           |
| 947   | BS-841546      | 1   |       | Solenoid-Fuel                                          |
| 965   | BS-796221      | 1   |       | Cover-Oil Pump                                         |
| 967   | BS-792303      | 1   | /P    | Filter-Pre Cleaner                                     |
| 968   | BS-795120      | 1   | /P    | Cover-Air Cleaner                                      |
| 975   | BS-793592      | 1   |       | Bowl-Float                                             |
| 987   | BS-691000      | 1   |       | Seal-Throttle Shaft                                    |
| 1005  | BS-791236      | 1   |       | Fan-Flywheel                                           |
| 1013  | BS-690954      | 1   | /P    | Nipple-Oil Filter                                      |
| 1017  | BS-796214      | 1   |       | Screen-Oil Pump                                        |
| 1022  | BS-690971      | 1   | /P    | Gasket-Rocker Cover                                    |
| 1023  | BS-793146      | 1   |       | Cover-Rocker (Cylinder #1)                             |
| 1023A | BS-499600      | 1   |       | Cover-Rocker (Cylinder #2)                             |
| 1024  | BS-796220      | 1   |       | Pump-Oil                                               |
| 1026  | BS-690981      | 1   | /P    | Rod-Push (Exhaust)                                     |
| 1026A | BS-690982      | 1   | /P    | Rod-Push (Intake)                                      |
| 1027  | BS-696854      | 1   | /P    | Filter-Oil                                             |
| 1029  | BS-690972      | 1   |       | Arm-Rocker                                             |
| 1036  |                | 1   |       | Label-Emissions (Available from a Briggs & Stratton )  |
| 1040  | BS-791237      | 1   |       | Plate-Trim                                             |
| 1051  | BS-691265      | 1   | /P    | Ring-Retaining (Starter Drive)                         |
| 1054  | BS-280275      | 1   |       | Tie-Cable                                              |
| 1059  | BS-698516      | 1   |       | Kit-Screw/Washer (Alternator)                          |
| 1070  | BS-791680      | 1   | /P    | Screw (Flywheel Fan)                                   |
| 1090  | BS-691293      | 1   | /P    | Retainer-Brush                                         |
| 1095  | BS-694013      | 1   | /P    | Gasket Set-Valve (Incl. Ref No. 7,883)                 |
| 1100  | BS-791959      | 1   |       | Pivot-Rocker Arm                                       |
| 1119  | BS-93621       | 1   | /P    | Screw (Alternator)                                     |
| 1124  | BS-841653      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1124A | BS-690988      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1126  | BS-690991      | 1   |       | Screw (Fuel Transfer Tube)                             |
| 1127  | BS-695407      | 1   |       | Screw (Fuel Bowl)                                      |
| 1128  | BS-690990      | 1   |       | Screw (Carburetor Nozzle)                              |
| 1169  | BS-690990      | 1   |       | Screw (Carburetor Plate)                               |
| 1329  | BS-44L777-0137 | 1   |       | Replacement Engine (44L777)                            |
| 1329  | BS-44Q777-0137 | 1   | /P    | Replacement Engine (44M777)                            |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 4

Page 22 of 63

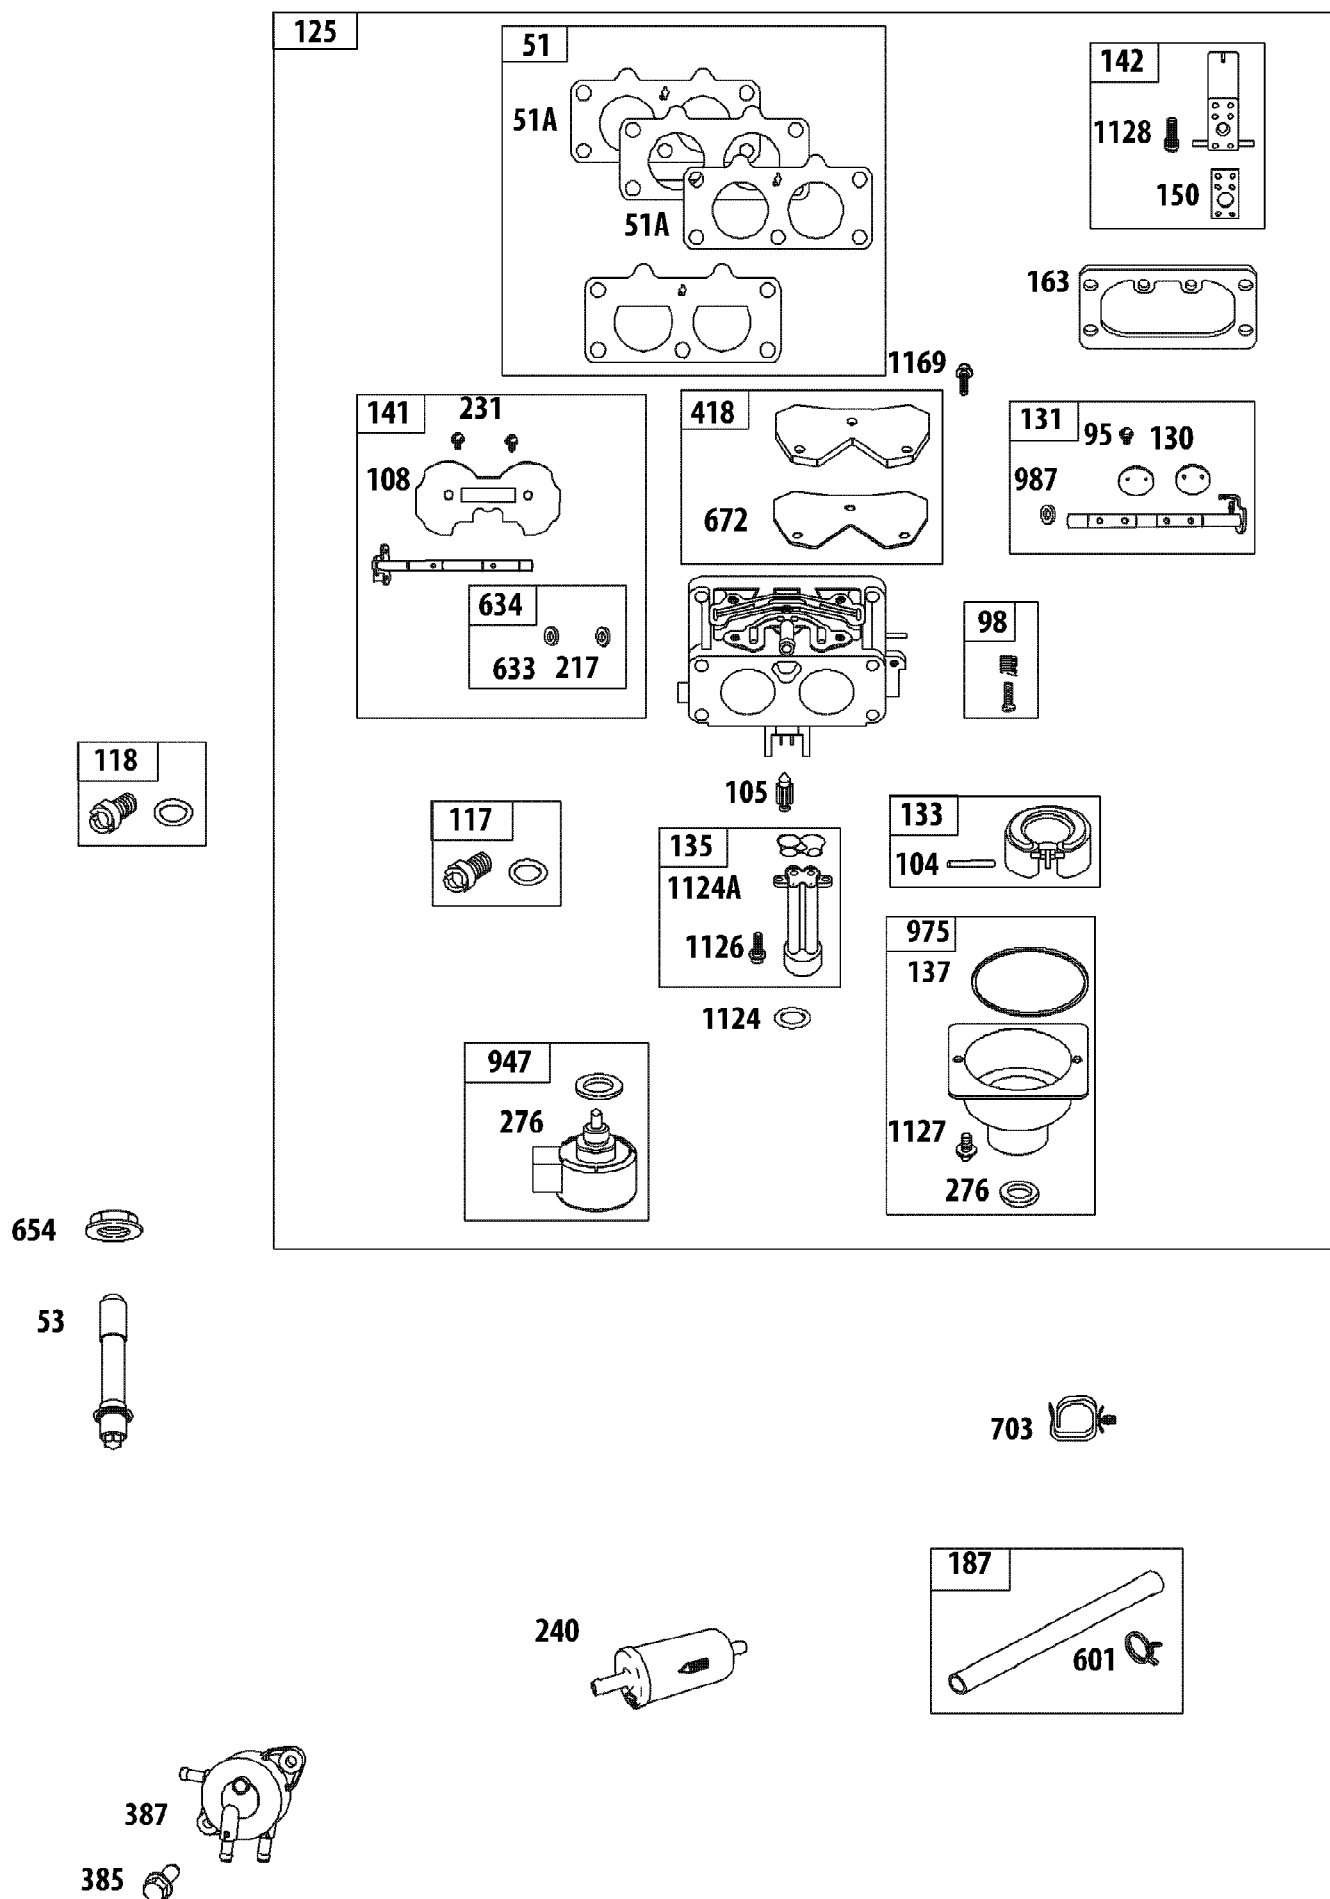



LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 4

Page 23 of 63

| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 1     | BS-793564   | 1   |       | Cylinder Assembly               |
| 2     | BS-499585   | 1   |       | Kit-Bushing/Seal (Magneto Side) |
| 3     | BS-391086S  | 1   | /P    | Seal-Oil (Magneto Side)         |
| 4     | BS-796307   | 1   | /P    | Sump-Engine                     |
| 5     | BS-796231   | 1   | /P    | Head-Cylinder (Cylinder #1)     |
| 5A    | BS-796232   | 1   | /P    | Head-Cylinder (Cylinder #2)     |
| 7     | BS-693997   | 1   | /P    | Gasket-Cylinder Head            |
| 8     | BS-792185   | 1   | /P    | Breather Assembly               |
| 9     | BS-690937   | 1   |       | Gasket-Breather                 |
| 10    | BS-697551   | 1   |       | Screw (Breather Assembly)       |
| 11    | BS-792184   | 1   | /P    | Tube-Breather                   |
| 12    | BS-697227   | 1   | /P    | Gasket-Crankcase                |
| 13    | BS-793988   | 1   |       | Screw (Cylinder Head)           |
| 15    | BS-690946   | 1   | /P    | Plug-Oil Drain                  |
| 16    | BS-796540   | 1   |       | Crankshaft                      |
| 20    | BS-795387   | 1   | /P    | Seal-Oil (PTO Side)             |
| 22    | BS-694966   | 1   | /P    | Screw (Crankcase Cover/ Sump)   |
| 23    | BS-691053   | 1   |       | Flywheel                        |
| 24    | BS-222698S  | 1   | /P    | Key-Flywheel                    |
| 25    | BS-792023   | 1   | /P    | Piston Assembly (Standard)      |
| 25    | BS-792072   | 1   |       | Piston Assembly (020" Oversize) |
| 26    | BS-793561   | 1   |       | Ring Set (Standard)             |
| 26    | BS-792073   | 1   |       | Ring Set (.020" Oversize)       |
| 27    | BS-690975   | 1   |       | Lock-Piston Pin                 |
| 28    | BS-696581   | 1   |       | Pin-Piston                      |
| 29    | BS-796209   | 1   | /P    | Rod-Connecting                  |
| 32    | BS-690976   | 1   |       | Screw (Connecting Rod)          |
| 33    | BS-697576   | 1   |       | Valve-Exhaust                   |
| 34    | BS-792200   | 1   | /P    | Valve-Intake                    |
| 35    | BS-694865   | 1   |       | Spring-Valve (Intake)           |
| 36    | BS-694865   | 1   |       | Spring-Valve (Exhaust)          |
| 42    | BS-499586   | 1   | /P    | Keeper-Valve                    |
| 45    | BS-690977   | 1   | /P    | Tappet-Valve                    |
| 46    | BS-796853   | 1   |       | Gear-Cam (44L777)               |
| 46    | BS-797242   | 1   |       | Gear-Cam (44M777)               |
| 48    | BS-797093   | 1   |       | Short Block                     |
| 50    | BS-695241   | 1   | /P    | Manifold-Intake                 |
| 51    | BS-795123   | 1   |       | Gasket-Intake                   |
| 51A   | BS-690950   | 1   |       | Gasket-Intake                   |
| 51B   | BS-690949   | 1   |       | Gasket-Intake                   |
| 53    | BS-690951   | 1   |       | Stud (Carburetor)               |
| 54    | BS-699816   | 1   |       | Screw (Intake Manifold)         |
| 73    | BS-494439   | 1   | /P    | Screen-Rotating                 |
| 74    | BS-698425   | 1   |       | Screw (Rotating Screen)         |
| 75    | BS-691056   | 1   |       | Washer (Flywheel)               |
| 95    | BS-690718   | 1   |       | Screw (Throttle Valve)          |
| 98    | BS-699721   | 1   |       | Kit-Idle Speed                  |
| 104   | BS-694918   | 1   |       | Pin-Float Hinge                 |
| 105   | BS-698537   | 1   |       | Valve-Float Needle              |
| 108   | BS-699723   | 1   |       | Valve-Choke                     |
| 117   | BS-842630   | 1   |       | Jet-Main (Standard)             |
| 118   | BS-797477   | 1   |       | Jet-Main (High Altitude)        |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 4

Page 24 of 63

| Ref # | Part Number  | Qty | S/P/F | Description                                                 |
|-------|--------------|-----|-------|-------------------------------------------------------------|
| 121   | BS-792455    | 1   | S     | Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633) |
| 125   | BS-796997    | 1   |       | Carburetor                                                  |
| 130   | BS-690993    | 1   |       | Valve-Throttle                                              |
| 131   | BS-499805    | 1   |       | Kit-Throttle Shaft                                          |
| 133   | BS-699724    | 1   |       | Float-Carburetor                                            |
| 135   | BS-699729    | 1   |       | Tube-Fuel Transfer                                          |
| 137   | BS-690994    | 1   |       | Gasket-Float Bowl                                           |
| 141   | BS-796228    | 1   |       | Kit-Choke Shaft                                             |
| 142   | BS-699726    | 1   |       | Nozzle-Carburetor                                           |
| 146   | BS-690979    | 1   | /P    | Key-Timing                                                  |
| 150   | BS-690995    | 1   |       | Gasket-Nozzle                                               |
| 163   | BS-691001    | 1   |       | Gasket-Air Cleaner                                          |
| 165   | BS-693148    | 1   |       | Nut (Ring Gear)                                             |
| 186   | BS-795985    | 1   |       | Connector-Hose                                              |
| 187   | 751-10349-16 | 1   | /P    | Line-Fuel Cut as required                                   |
| 188   | BS-697551    | 1   |       | Screw (Control Bracket)                                     |
| 192   | BS-690083    | 1   |       | Adjuster-Rocker Arm                                         |
| 197   | BS-697820    | 1   |       | Screw (Back Plate)                                          |
| 209   | BS-796658    | 1   |       | Spring-Governor (Yellow/Brown)                              |
| 211   | BS-796225    | 1   |       | Spring-Governed Idle (Orange)                               |
| 212   | BS-695238    | 1   |       | Link-Throttle                                               |
| 216   | BS-796229    | 1   |       | Link-Choke                                                  |
| 217   | BS-695409    | 1   |       | Spring-Choke Return                                         |
| 219   | BS-793338    | 1   | /P    | Gear-Governor                                               |
| 220   | BS-690412    | 1   | /P    | Washer (Governor Gear)                                      |
| 221   | BS-841026    | 1   |       | Cup-Governor                                                |
| 222   | BS-796226    | 1   |       | Bracket-Control                                             |
| 227   | BS-796223    | 1   |       | Lever-Governor Control                                      |
| 231   | BS-690718    | 1   |       | Screw (Choke Valve)                                         |
| 239   | BS-792028    | 1   |       | Switch-Oil Pressure                                         |
| 240   | BS-691035    | 1   | /P    | Filter-Fuel                                                 |
| 250   | BS-690957    | 1   |       | Retainer-Breather                                           |
| 252   | BS-794389    | 1   |       | Collector-Oil                                               |
| 265   | BS-691024    | 1   | /P    | Clamp-Casing                                                |
| 267   | BS-695134    | 1   |       | Screw (Casing Clamp)                                        |
| 276   | BS-695410    | 1   |       | Washer-Sealing                                              |
| 278   | BS-792651    | 1   |       | Washer (Governor Control Lever)                             |
| 287   | BS-697551    | 1   |       | Screw (Dipstick Tube)                                       |
| 304   | BS-797407    | 1   | /P    | Housing-Blower                                              |
| 305   | BS-691005    | 1   |       | Screw (Blower Housing)                                      |
| 305A  | BS-790690    | 1   |       | Screw (Blower Housing to Intake Elbow)                      |
| 306   | BS-796541    | 1   |       | Shield-Cylinder (Cylinder #2)                               |
| 306A  | BS-796852    | 1   |       | Shield-Cylinder (Cylinder #1)                               |
| 307   | BS-697551    | 1   |       | Screw (Cylinder Shield)                                     |
| 309   | BS-497595    | 1   | /P    | Motor-Starter                                               |
| 310   | BS-690323    | 1   |       | Screw (Starter Motor)                                       |
| 332   | BS-691059    | 1   |       | Nut (Flywheel)                                              |
| 333   | BS-691060    | 1   | /P    | Armature-Magneto                                            |
| 334   | BS-691061    | 1   |       | Screw (Magneto Armature)                                    |
| 337   | 759-3336     | 1   | /P    | Plug-Spark                                                  |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 4

Page 25 of 63

| Ref # | Part Number | Qty | S/P/F | Description                                                             |
|-------|-------------|-----|-------|-------------------------------------------------------------------------|
| 358   | BS-694012   | 1   | /P    | Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883) |
| 385   | BS-797409   | 1   |       | Screw (Fuel Pump)                                                       |
| 387   | BS-808656   | 1   | /P    | Pump-Fuel                                                               |
| 404   | BS-690442   | 1   |       | Washer (Governor Crank)                                                 |
| 415   | BS-794903   | 1   |       | Plug (Oil Pressure Switch Hole)                                         |
| 418   | BS-795912   | 1   |       | Plate-Carburetor                                                        |
| 431   | BS-792297   | 1   |       | Elbow-Intake                                                            |
| 445   | BS-792105   | 1   | /P    | Filter-Air Cleaner Cartridge                                            |
| 447   | BS-691003   | 1   | /P    | Screw (Air Guide Cover)                                                 |
| 467   | BS-790697   | 1   |       | Knob-Air Cleaner                                                        |
| 474   | BS-696457   | 1   | /P    | Alternator                                                              |
| 501   | BS-794360   | 1   | /P    | Regulator                                                               |
| 503   | BS-691532   | 1   | /P    | Strap-Starter                                                           |
| 505   | BS-691029   | 1   |       | Nut (Governor Control Lever)                                            |
| 510   | BS-696541   | 1   | /P    | Drive-Starter                                                           |
| 513   | BS-692024   | 1   | /P    | Clutch-Drive                                                            |
| 523   | BS-691036   | 1   |       | Dipstick                                                                |
| 524   | BS-691032   | 1   |       | Seal-Dipstick Tube                                                      |
| 525   | BS-691037   | 1   |       | Tube-Dipstick                                                           |
| 526   | BS-691129   | 1   | /P    | Screw (Regulator)                                                       |
| 544   | N/A         | 1   |       | Armature-Starter (Service with Starter Motor BS-497595)                 |
| 552   | BS-796638   | 1   |       | Bushing-Governor Crank                                                  |
| 552A  | BS-690553   | 1   |       | Bushing-Governor Crank                                                  |
| 562   | BS-690311   | 1   |       | Screw (Governor Control Lever)                                          |
| 573   | BS-790444   | 1   |       | Plate-Back                                                              |
| 579   | BS-691029   | 1   |       | Nut (Starter Cable)                                                     |
| 601   | BS-691038   | 1   |       | Clamp-Hose (Black)                                                      |
| 615   | BS-698290   | 1   | /P    | Retainer-Governor Shaft                                                 |
| 616   | BS-691045   | 1   |       | Crank-Governor                                                          |
| 617   | BS-697891   | 1   |       | Seal-O Ring (Intake Manifold) (Red)                                     |
| 633   | BS-699813   | 1   |       | Seal-Choke/Throttle Shaft                                               |
| 634   | BS-698779   | 1   |       | Spring/Seal Assembly                                                    |
| 635   | BS-66538s   | 1   | /P    | Boot-Spark Plug                                                         |
| 654   | BS-690958   | 1   | /P    | Nut (Carburetor)                                                        |
| 668   | BS-691215   | 1   |       | Spacer (Rotating Screen)                                                |
| 668A  | BS-691500   | 1   | /P    | Spacer (Rotating Screen)                                                |
| 672   | BS-690234   | 1   |       | Gasket-Carburetor Plate                                                 |
| 691   | BS-790574   | 1   |       | Seal-Governor Shaft                                                     |
| 695   | BS-693149   | 1   |       | Screw (Ring Gear)                                                       |
| 697   | BS-791680   | 1   | /P    | Screw (Drive Cap)                                                       |
| 703   | BS-691010   | 1   |       | Clip                                                                    |
| 718   | BS-690959   | 1   | /P    | Pin-Locating                                                            |
| 726   | BS-499612   | 1   |       | Gear-Ring                                                               |
| 729   | BS-694123   | 1   |       | Clip-Wire                                                               |
| 741   | BS-690980   | 1   |       | Gear-Timing                                                             |
| 742   | BS-690328   | 1   | /P    | Retainer-E Ring (Governor Crank)                                        |
| 750   | BS-796208   | 1   |       | Screw (Oil Pump Cover)                                                  |
| 783   | BS-695708   | 1   | /P    | Gear-Pinion                                                             |
| 789   | BS-797460   | 1   |       | Harness-Wiring                                                          |
| 798   | BS-697890   | 1   |       | Screw (Rocker Arm)                                                      |


LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 4

Page 26 of 63







| Ref # | Part Number    | Qty | S/P/F | Description                                            |
|-------|----------------|-----|-------|--------------------------------------------------------|
| 801   | BS-691283      | 1   |       | Cap-Drive                                              |
| 802   | BS-691286      | 1   | /P    | Cap-End                                                |
| 803   | N/A            | 1   |       | Housing-Starter (Service with Starter Motor BS-497595) |
| 842   | BS-691031      | 1   | /P    | Seal-O Ring (Dipstick Tube)                            |
| 847   | BS-499602      | 1   |       | Dipstick/Tube Assembly                                 |
| 851   | BS-493880S     | 1   | /P    | Terminal-Spark Plug                                    |
| 865   | BS-792286      | 1   |       | Cover-Air Guide (Valley)                               |
| 868   | BS-690968      | 1   | /P    | Seal-Valve                                             |
| 883   | BS-690970      | 1   | /P    | Gasket-Exhaust                                         |
| 914   | BS-691127      | 1   | /P    | Screw (Rocker Cover)                                   |
| 918   | BS-797408      | 1   |       | Hose-Vacuum                                            |
| 929   | BS-695239      | 1   |       | Screw (Choke Control Bracket)                          |
| 943   | BS-796222      | 1   |       | Seal-O Ring (Oil Pump Cover)                           |
| 947   | BS-841546      | 1   |       | Solenoid-Fuel                                          |
| 965   | BS-796221      | 1   |       | Cover-Oil Pump                                         |
| 967   | BS-792303      | 1   | /P    | Filter-Pre Cleaner                                     |
| 968   | BS-795120      | 1   | /P    | Cover-Air Cleaner                                      |
| 975   | BS-793592      | 1   |       | Bowl-Float                                             |
| 987   | BS-691000      | 1   |       | Seal-Throttle Shaft                                    |
| 1005  | BS-791236      | 1   |       | Fan-Flywheel                                           |
| 1013  | BS-690954      | 1   | /P    | Nipple-Oil Filter                                      |
| 1017  | BS-796214      | 1   |       | Screen-Oil Pump                                        |
| 1022  | BS-690971      | 1   | /P    | Gasket-Rocker Cover                                    |
| 1023  | BS-793146      | 1   |       | Cover-Rocker (Cylinder #1)                             |
| 1023A | BS-499600      | 1   |       | Cover-Rocker (Cylinder #2)                             |
| 1024  | BS-796220      | 1   |       | Pump-Oil                                               |
| 1026  | BS-690981      | 1   | /P    | Rod-Push (Exhaust)                                     |
| 1026A | BS-690982      | 1   | /P    | Rod-Push (Intake)                                      |
| 1027  | BS-696854      | 1   | /P    | Filter-Oil                                             |
| 1029  | BS-690972      | 1   |       | Arm-Rocker                                             |
| 1036  |                | 1   |       | Label-Emissions (Available from a Briggs & Stratton )  |
| 1040  | BS-791237      | 1   |       | Plate-Trim                                             |
| 1051  | BS-691265      | 1   | /P    | Ring-Retaining (Starter Drive)                         |
| 1054  | BS-280275      | 1   |       | Tie-Cable                                              |
| 1059  | BS-698516      | 1   |       | Kit-Screw/Washer (Alternator)                          |
| 1070  | BS-791680      | 1   | /P    | Screw (Flywheel Fan)                                   |
| 1090  | BS-691293      | 1   | /P    | Retainer-Brush                                         |
| 1095  | BS-694013      | 1   | /P    | Gasket Set-Valve (Incl. Ref No. 7,883)                 |
| 1100  | BS-791959      | 1   |       | Pivot-Rocker Arm                                       |
| 1119  | BS-93621       | 1   | /P    | Screw (Alternator)                                     |
| 1124  | BS-841653      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1124A | BS-690988      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1126  | BS-690991      | 1   |       | Screw (Fuel Transfer Tube)                             |
| 1127  | BS-695407      | 1   |       | Screw (Fuel Bowl)                                      |
| 1128  | BS-690990      | 1   |       | Screw (Carburetor Nozzle)                              |
| 1169  | BS-690990      | 1   |       | Screw (Carburetor Plate)                               |
| 1329  | BS-44L777-0137 | 1   |       | Replacement Engine (44L777)                            |
| 1329  | BS-44Q777-0137 | 1   | /P    | Replacement Engine (44M777)                            |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 5

Page 27 of 63

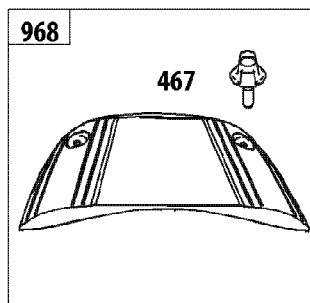

1036 Emissions Label

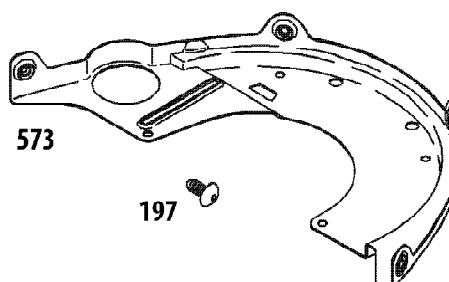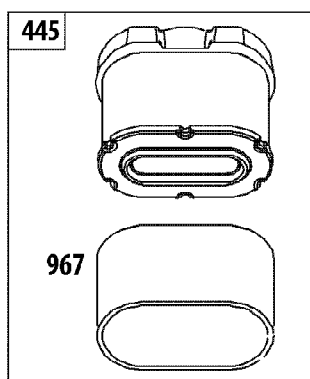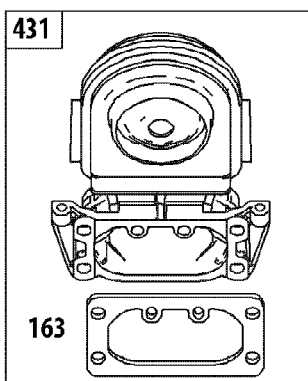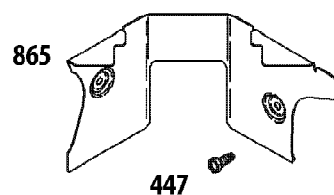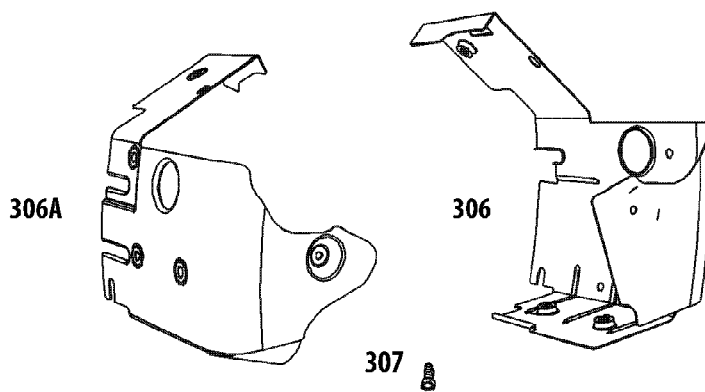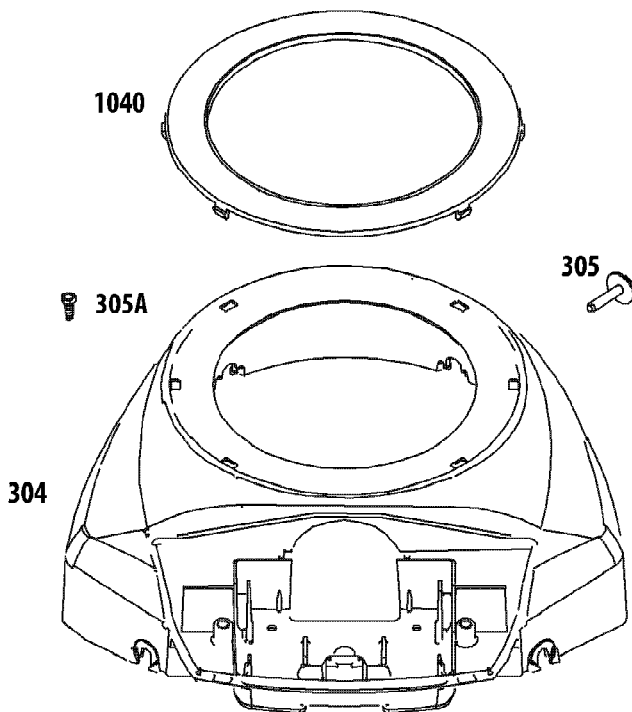



LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 5

Page 28 of 63

| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 1     | BS-793564   | 1   |       | Cylinder Assembly               |
| 2     | BS-499585   | 1   |       | Kit-Bushing/Seal (Magneto Side) |
| 3     | BS-391086S  | 1   | /P    | Seal-Oil (Magneto Side)         |
| 4     | BS-796307   | 1   | /P    | Sump-Engine                     |
| 5     | BS-796231   | 1   | /P    | Head-Cylinder (Cylinder #1)     |
| 5A    | BS-796232   | 1   | /P    | Head-Cylinder (Cylinder #2)     |
| 7     | BS-693997   | 1   | /P    | Gasket-Cylinder Head            |
| 8     | BS-792185   | 1   | /P    | Breather Assembly               |
| 9     | BS-690937   | 1   |       | Gasket-Breather                 |
| 10    | BS-697551   | 1   |       | Screw (Breather Assembly)       |
| 11    | BS-792184   | 1   | /P    | Tube-Breather                   |
| 12    | BS-697227   | 1   | /P    | Gasket-Crankcase                |
| 13    | BS-793988   | 1   |       | Screw (Cylinder Head)           |
| 15    | BS-690946   | 1   | /P    | Plug-Oil Drain                  |
| 16    | BS-796540   | 1   |       | Crankshaft                      |
| 20    | BS-795387   | 1   | /P    | Seal-Oil (PTO Side)             |
| 22    | BS-694966   | 1   | /P    | Screw (Crankcase Cover/ Sump)   |
| 23    | BS-691053   | 1   |       | Flywheel                        |
| 24    | BS-222698S  | 1   | /P    | Key-Flywheel                    |
| 25    | BS-792023   | 1   | /P    | Piston Assembly (Standard)      |
| 25    | BS-792072   | 1   |       | Piston Assembly (020" Oversize) |
| 26    | BS-793561   | 1   |       | Ring Set (Standard)             |
| 26    | BS-792073   | 1   |       | Ring Set (.020" Oversize)       |
| 27    | BS-690975   | 1   |       | Lock-Piston Pin                 |
| 28    | BS-696581   | 1   |       | Pin-Piston                      |
| 29    | BS-796209   | 1   | /P    | Rod-Connecting                  |
| 32    | BS-690976   | 1   |       | Screw (Connecting Rod)          |
| 33    | BS-697576   | 1   |       | Valve-Exhaust                   |
| 34    | BS-792200   | 1   | /P    | Valve-Intake                    |
| 35    | BS-694865   | 1   |       | Spring-Valve (Intake)           |
| 36    | BS-694865   | 1   |       | Spring-Valve (Exhaust)          |
| 42    | BS-499586   | 1   | /P    | Keeper-Valve                    |
| 45    | BS-690977   | 1   | /P    | Tappet-Valve                    |
| 46    | BS-796853   | 1   |       | Gear-Cam (44L777)               |
| 46    | BS-797242   | 1   |       | Gear-Cam (44M777)               |
| 48    | BS-797093   | 1   |       | Short Block                     |
| 50    | BS-695241   | 1   | /P    | Manifold-Intake                 |
| 51    | BS-795123   | 1   |       | Gasket-Intake                   |
| 51A   | BS-690950   | 1   |       | Gasket-Intake                   |
| 51B   | BS-690949   | 1   |       | Gasket-Intake                   |
| 53    | BS-690951   | 1   |       | Stud (Carburetor)               |
| 54    | BS-699816   | 1   |       | Screw (Intake Manifold)         |
| 73    | BS-494439   | 1   | /P    | Screen-Rotating                 |
| 74    | BS-698425   | 1   |       | Screw (Rotating Screen)         |
| 75    | BS-691056   | 1   |       | Washer (Flywheel)               |
| 95    | BS-690718   | 1   |       | Screw (Throttle Valve)          |
| 98    | BS-699721   | 1   |       | Kit-Idle Speed                  |
| 104   | BS-694918   | 1   |       | Pin-Float Hinge                 |
| 105   | BS-698537   | 1   |       | Valve-Float Needle              |
| 108   | BS-699723   | 1   |       | Valve-Choke                     |
| 117   | BS-842630   | 1   |       | Jet-Main (Standard)             |
| 118   | BS-797477   | 1   |       | Jet-Main (High Altitude)        |



LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 5

Page 29 of 63

| Ref # | Part Number  | Qty | S/P/F | Description                                                 |
|-------|--------------|-----|-------|-------------------------------------------------------------|
| 121   | BS-792455    | 1   | S     | Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633) |
| 125   | BS-796997    | 1   |       | Carburetor                                                  |
| 130   | BS-690993    | 1   |       | Valve-Throttle                                              |
| 131   | BS-499805    | 1   |       | Kit-Throttle Shaft                                          |
| 133   | BS-699724    | 1   |       | Float-Carburetor                                            |
| 135   | BS-699729    | 1   |       | Tube-Fuel Transfer                                          |
| 137   | BS-690994    | 1   |       | Gasket-Float Bowl                                           |
| 141   | BS-796228    | 1   |       | Kit-Choke Shaft                                             |
| 142   | BS-699726    | 1   |       | Nozzle-Carburetor                                           |
| 146   | BS-690979    | 1   | /P    | Key-Timing                                                  |
| 150   | BS-690995    | 1   |       | Gasket-Nozzle                                               |
| 163   | BS-691001    | 1   |       | Gasket-Air Cleaner                                          |
| 165   | BS-693148    | 1   |       | Nut (Ring Gear)                                             |
| 186   | BS-795985    | 1   |       | Connector-Hose                                              |
| 187   | 751-10349-16 | 1   | /P    | Line-Fuel Cut as required                                   |
| 188   | BS-697551    | 1   |       | Screw (Control Bracket)                                     |
| 192   | BS-690083    | 1   |       | Adjuster-Rocker Arm                                         |
| 197   | BS-697820    | 1   |       | Screw (Back Plate)                                          |
| 209   | BS-796658    | 1   |       | Spring-Governor (Yellow/Brown)                              |
| 211   | BS-796225    | 1   |       | Spring-Governed Idle (Orange)                               |
| 212   | BS-695238    | 1   |       | Link-Throttle                                               |
| 216   | BS-796229    | 1   |       | Link-Choke                                                  |
| 217   | BS-695409    | 1   |       | Spring-Choke Return                                         |
| 219   | BS-793338    | 1   | /P    | Gear-Governor                                               |
| 220   | BS-690412    | 1   | /P    | Washer (Governor Gear)                                      |
| 221   | BS-841026    | 1   |       | Cup-Governor                                                |
| 222   | BS-796226    | 1   |       | Bracket-Control                                             |
| 227   | BS-796223    | 1   |       | Lever-Governor Control                                      |
| 231   | BS-690718    | 1   |       | Screw (Choke Valve)                                         |
| 239   | BS-792028    | 1   |       | Switch-Oil Pressure                                         |
| 240   | BS-691035    | 1   | /P    | Filter-Fuel                                                 |
| 250   | BS-690957    | 1   |       | Retainer-Breather                                           |
| 252   | BS-794389    | 1   |       | Collector-Oil                                               |
| 265   | BS-691024    | 1   | /P    | Clamp-Casing                                                |
| 267   | BS-695134    | 1   |       | Screw (Casing Clamp)                                        |
| 276   | BS-695410    | 1   |       | Washer-Sealing                                              |
| 278   | BS-792651    | 1   |       | Washer (Governor Control Lever)                             |
| 287   | BS-697551    | 1   |       | Screw (Dipstick Tube)                                       |
| 304   | BS-797407    | 1   | /P    | Housing-Blower                                              |
| 305   | BS-691005    | 1   |       | Screw (Blower Housing)                                      |
| 305A  | BS-790690    | 1   |       | Screw (Blower Housing to Intake Elbow)                      |
| 306   | BS-796541    | 1   |       | Shield-Cylinder (Cylinder #2)                               |
| 306A  | BS-796852    | 1   |       | Shield-Cylinder (Cylinder #1)                               |
| 307   | BS-697551    | 1   |       | Screw (Cylinder Shield)                                     |
| 309   | BS-497595    | 1   | /P    | Motor-Starter                                               |
| 310   | BS-690323    | 1   |       | Screw (Starter Motor)                                       |
| 332   | BS-691059    | 1   |       | Nut (Flywheel)                                              |
| 333   | BS-691060    | 1   | /P    | Armature-Magneto                                            |
| 334   | BS-691061    | 1   |       | Screw (Magneto Armature)                                    |
| 337   | 759-3336     | 1   | /P    | Plug-Spark                                                  |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 5

Page 30 of 63

| Ref # | Part Number | Qty | S/P/F | Description                                                             |
|-------|-------------|-----|-------|-------------------------------------------------------------------------|
| 358   | BS-694012   | 1   | /P    | Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883) |
| 385   | BS-797409   | 1   |       | Screw (Fuel Pump)                                                       |
| 387   | BS-808656   | 1   | /P    | Pump-Fuel                                                               |
| 404   | BS-690442   | 1   |       | Washer (Governor Crank)                                                 |
| 415   | BS-794903   | 1   |       | Plug (Oil Pressure Switch Hole)                                         |
| 418   | BS-795912   | 1   |       | Plate-Carburetor                                                        |
| 431   | BS-792297   | 1   |       | Elbow-Intake                                                            |
| 445   | BS-792105   | 1   | /P    | Filter-Air Cleaner Cartridge                                            |
| 447   | BS-691003   | 1   | /P    | Screw (Air Guide Cover)                                                 |
| 467   | BS-790697   | 1   |       | Knob-Air Cleaner                                                        |
| 474   | BS-696457   | 1   | /P    | Alternator                                                              |
| 501   | BS-794360   | 1   | /P    | Regulator                                                               |
| 503   | BS-691532   | 1   | /P    | Strap-Starter                                                           |
| 505   | BS-691029   | 1   |       | Nut (Governor Control Lever)                                            |
| 510   | BS-696541   | 1   | /P    | Drive-Starter                                                           |
| 513   | BS-692024   | 1   | /P    | Clutch-Drive                                                            |
| 523   | BS-691036   | 1   |       | Dipstick                                                                |
| 524   | BS-691032   | 1   |       | Seal-Dipstick Tube                                                      |
| 525   | BS-691037   | 1   |       | Tube-Dipstick                                                           |
| 526   | BS-691129   | 1   | /P    | Screw (Regulator)                                                       |
| 544   | N/A         | 1   |       | Armature-Starter (Service with Starter Motor BS-497595)                 |
| 552   | BS-796638   | 1   |       | Bushing-Governor Crank                                                  |
| 552A  | BS-690553   | 1   |       | Bushing-Governor Crank                                                  |
| 562   | BS-690311   | 1   |       | Screw (Governor Control Lever)                                          |
| 573   | BS-790444   | 1   |       | Plate-Back                                                              |
| 579   | BS-691029   | 1   |       | Nut (Starter Cable)                                                     |
| 601   | BS-691038   | 1   |       | Clamp-Hose (Black)                                                      |
| 615   | BS-698290   | 1   | /P    | Retainer-Governor Shaft                                                 |
| 616   | BS-691045   | 1   |       | Crank-Governor                                                          |
| 617   | BS-697891   | 1   |       | Seal-O Ring (Intake Manifold) (Red)                                     |
| 633   | BS-699813   | 1   |       | Seal-Choke/Throttle Shaft                                               |
| 634   | BS-698779   | 1   |       | Spring/Seal Assembly                                                    |
| 635   | BS-66538s   | 1   | /P    | Boot-Spark Plug                                                         |
| 654   | BS-690958   | 1   | /P    | Nut (Carburetor)                                                        |
| 668   | BS-691215   | 1   |       | Spacer (Rotating Screen)                                                |
| 668A  | BS-691500   | 1   | /P    | Spacer (Rotating Screen)                                                |
| 672   | BS-690234   | 1   |       | Gasket-Carburetor Plate                                                 |
| 691   | BS-790574   | 1   |       | Seal-Governor Shaft                                                     |
| 695   | BS-693149   | 1   |       | Screw (Ring Gear)                                                       |
| 697   | BS-791680   | 1   | /P    | Screw (Drive Cap)                                                       |
| 703   | BS-691010   | 1   |       | Clip                                                                    |
| 718   | BS-690959   | 1   | /P    | Pin-Locating                                                            |
| 726   | BS-499612   | 1   |       | Gear-Ring                                                               |
| 729   | BS-694123   | 1   |       | Clip-Wire                                                               |
| 741   | BS-690980   | 1   |       | Gear-Timing                                                             |
| 742   | BS-690328   | 1   | /P    | Retainer-E Ring (Governor Crank)                                        |
| 750   | BS-796208   | 1   |       | Screw (Oil Pump Cover)                                                  |
| 783   | BS-695708   | 1   | /P    | Gear-Pinion                                                             |
| 789   | BS-797460   | 1   |       | Harness-Wiring                                                          |
| 798   | BS-697890   | 1   |       | Screw (Rocker Arm)                                                      |


LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 5

Page 31 of 63

| Ref # | Part Number    | Qty | S/P/F | Description                                            |
|-------|----------------|-----|-------|--------------------------------------------------------|
| 801   | BS-691283      | 1   |       | Cap-Drive                                              |
| 802   | BS-691286      | 1   | /P    | Cap-End                                                |
| 803   | N/A            | 1   |       | Housing-Starter (Service with Starter Motor BS-497595) |
| 842   | BS-691031      | 1   | /P    | Seal-O Ring (Dipstick Tube)                            |
| 847   | BS-499602      | 1   |       | Dipstick/Tube Assembly                                 |
| 851   | BS-493880S     | 1   | /P    | Terminal-Spark Plug                                    |
| 865   | BS-792286      | 1   |       | Cover-Air Guide (Valley)                               |
| 868   | BS-690968      | 1   | /P    | Seal-Valve                                             |
| 883   | BS-690970      | 1   | /P    | Gasket-Exhaust                                         |
| 914   | BS-691127      | 1   | /P    | Screw (Rocker Cover)                                   |
| 918   | BS-797408      | 1   |       | Hose-Vacuum                                            |
| 929   | BS-695239      | 1   |       | Screw (Choke Control Bracket)                          |
| 943   | BS-796222      | 1   |       | Seal-O Ring (Oil Pump Cover)                           |
| 947   | BS-841546      | 1   |       | Solenoid-Fuel                                          |
| 965   | BS-796221      | 1   |       | Cover-Oil Pump                                         |
| 967   | BS-792303      | 1   | /P    | Filter-Pre Cleaner                                     |
| 968   | BS-795120      | 1   | /P    | Cover-Air Cleaner                                      |
| 975   | BS-793592      | 1   |       | Bowl-Float                                             |
| 987   | BS-691000      | 1   |       | Seal-Throttle Shaft                                    |
| 1005  | BS-791236      | 1   |       | Fan-Flywheel                                           |
| 1013  | BS-690954      | 1   | /P    | Nipple-Oil Filter                                      |
| 1017  | BS-796214      | 1   |       | Screen-Oil Pump                                        |
| 1022  | BS-690971      | 1   | /P    | Gasket-Rocker Cover                                    |
| 1023  | BS-793146      | 1   |       | Cover-Rocker (Cylinder #1)                             |
| 1023A | BS-499600      | 1   |       | Cover-Rocker (Cylinder #2)                             |
| 1024  | BS-796220      | 1   |       | Pump-Oil                                               |
| 1026  | BS-690981      | 1   | /P    | Rod-Push (Exhaust)                                     |
| 1026A | BS-690982      | 1   | /P    | Rod-Push (Intake)                                      |
| 1027  | BS-696854      | 1   | /P    | Filter-Oil                                             |
| 1029  | BS-690972      | 1   |       | Arm-Rocker                                             |
| 1036  |                | 1   |       | Label-Emissions (Available from a Briggs & Stratton )  |
| 1040  | BS-791237      | 1   |       | Plate-Trim                                             |
| 1051  | BS-691265      | 1   | /P    | Ring-Retaining (Starter Drive)                         |
| 1054  | BS-280275      | 1   |       | Tie-Cable                                              |
| 1059  | BS-698516      | 1   |       | Kit-Screw/Washer (Alternator)                          |
| 1070  | BS-791680      | 1   | /P    | Screw (Flywheel Fan)                                   |
| 1090  | BS-691293      | 1   | /P    | Retainer-Brush                                         |
| 1095  | BS-694013      | 1   | /P    | Gasket Set-Valve (Incl. Ref No. 7,883)                 |
| 1100  | BS-791959      | 1   |       | Pivot-Rocker Arm                                       |
| 1119  | BS-93621       | 1   | /P    | Screw (Alternator)                                     |
| 1124  | BS-841653      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1124A | BS-690988      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1126  | BS-690991      | 1   |       | Screw (Fuel Transfer Tube)                             |
| 1127  | BS-695407      | 1   |       | Screw (Fuel Bowl)                                      |
| 1128  | BS-690990      | 1   |       | Screw (Carburetor Nozzle)                              |
| 1169  | BS-690990      | 1   |       | Screw (Carburetor Plate)                               |
| 1329  | BS-44L777-0137 | 1   |       | Replacement Engine (44L777)                            |
| 1329  | BS-44Q777-0137 | 1   | /P    | Replacement Engine (44M777)                            |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 6

Page 32 of 63

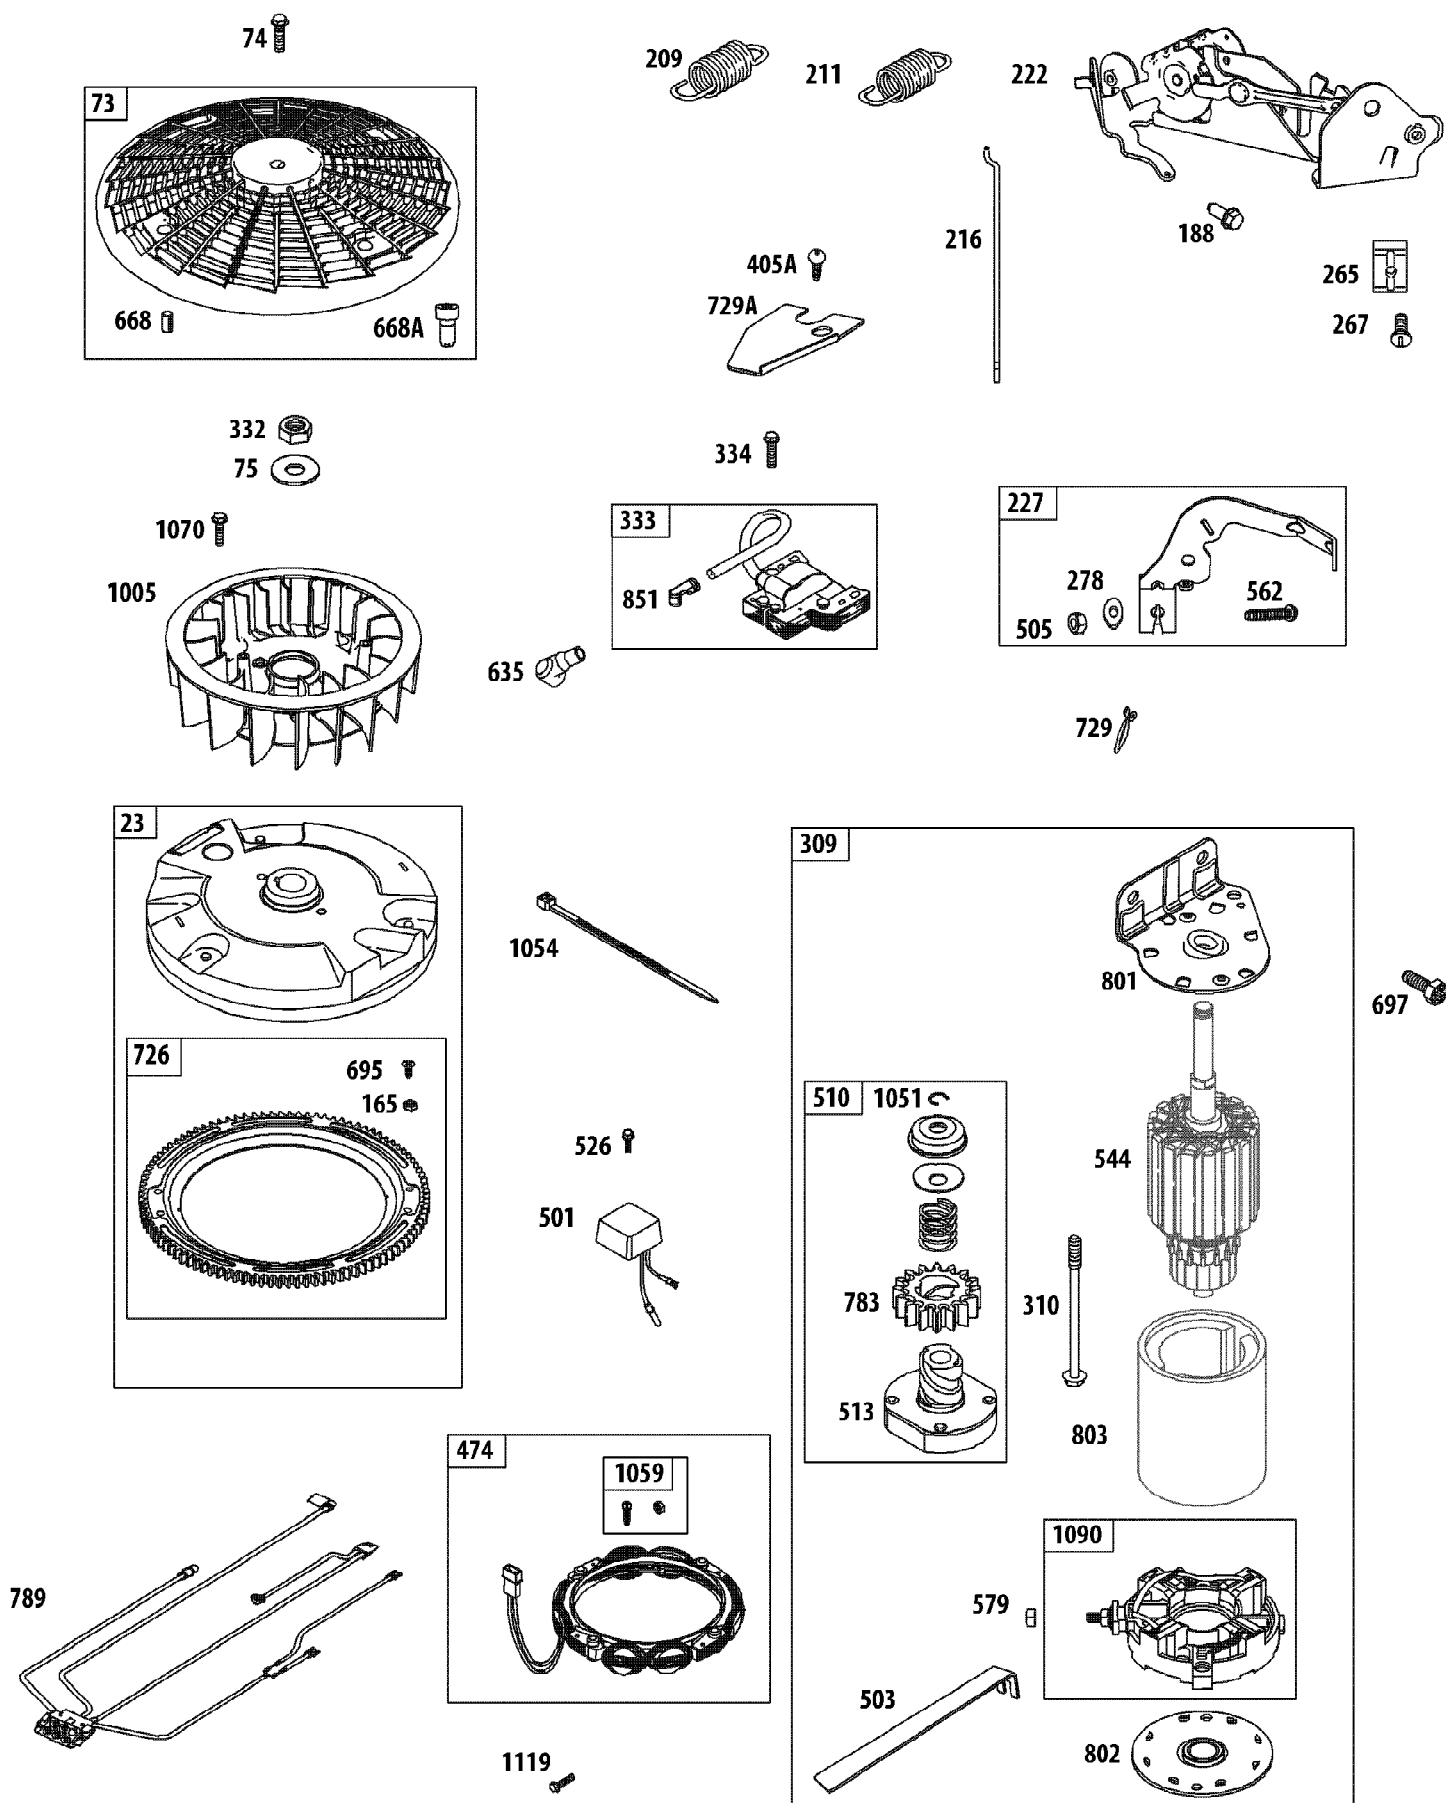

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 6

Page 33 of 63

| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 1     | BS-793564   | 1   |       | Cylinder Assembly               |
| 2     | BS-499585   | 1   |       | Kit-Bushing/Seal (Magneto Side) |
| 3     | BS-391086S  | 1   | /P    | Seal-Oil (Magneto Side)         |
| 4     | BS-796307   | 1   | /P    | Sump-Engine                     |
| 5     | BS-796231   | 1   | /P    | Head-Cylinder (Cylinder #1)     |
| 5A    | BS-796232   | 1   | /P    | Head-Cylinder (Cylinder #2)     |
| 7     | BS-693997   | 1   | /P    | Gasket-Cylinder Head            |
| 8     | BS-792185   | 1   | /P    | Breather Assembly               |
| 9     | BS-690937   | 1   |       | Gasket-Breather                 |
| 10    | BS-697551   | 1   |       | Screw (Breather Assembly)       |
| 11    | BS-792184   | 1   | /P    | Tube-Breather                   |
| 12    | BS-697227   | 1   | /P    | Gasket-Crankcase                |
| 13    | BS-793988   | 1   |       | Screw (Cylinder Head)           |
| 15    | BS-690946   | 1   | /P    | Plug-Oil Drain                  |
| 16    | BS-796540   | 1   |       | Crankshaft                      |
| 20    | BS-795387   | 1   | /P    | Seal-Oil (PTO Side)             |
| 22    | BS-694966   | 1   | /P    | Screw (Crankcase Cover/ Sump)   |
| 23    | BS-691053   | 1   |       | Flywheel                        |
| 24    | BS-222698S  | 1   | /P    | Key-Flywheel                    |
| 25    | BS-792023   | 1   | /P    | Piston Assembly (Standard)      |
| 25    | BS-792072   | 1   |       | Piston Assembly (020" Oversize) |
| 26    | BS-793561   | 1   |       | Ring Set (Standard)             |
| 26    | BS-792073   | 1   |       | Ring Set (.020" Oversize)       |
| 27    | BS-690975   | 1   |       | Lock-Piston Pin                 |
| 28    | BS-696581   | 1   |       | Pin-Piston                      |
| 29    | BS-796209   | 1   | /P    | Rod-Connecting                  |
| 32    | BS-690976   | 1   |       | Screw (Connecting Rod)          |
| 33    | BS-697576   | 1   |       | Valve-Exhaust                   |
| 34    | BS-792200   | 1   | /P    | Valve-Intake                    |
| 35    | BS-694865   | 1   |       | Spring-Valve (Intake)           |
| 36    | BS-694865   | 1   |       | Spring-Valve (Exhaust)          |
| 42    | BS-499586   | 1   | /P    | Keeper-Valve                    |
| 45    | BS-690977   | 1   | /P    | Tappet-Valve                    |
| 46    | BS-796853   | 1   |       | Gear-Cam (44L777)               |
| 46    | BS-797242   | 1   |       | Gear-Cam (44M777)               |
| 48    | BS-797093   | 1   |       | Short Block                     |
| 50    | BS-695241   | 1   | /P    | Manifold-Intake                 |
| 51    | BS-795123   | 1   |       | Gasket-Intake                   |
| 51A   | BS-690950   | 1   |       | Gasket-Intake                   |
| 51B   | BS-690949   | 1   |       | Gasket-Intake                   |
| 53    | BS-690951   | 1   |       | Stud (Carburetor)               |
| 54    | BS-699816   | 1   |       | Screw (Intake Manifold)         |
| 73    | BS-494439   | 1   | /P    | Screen-Rotating                 |
| 74    | BS-698425   | 1   |       | Screw (Rotating Screen)         |
| 75    | BS-691056   | 1   |       | Washer (Flywheel)               |
| 95    | BS-690718   | 1   |       | Screw (Throttle Valve)          |
| 98    | BS-699721   | 1   |       | Kit-Idle Speed                  |
| 104   | BS-694918   | 1   |       | Pin-Float Hinge                 |
| 105   | BS-698537   | 1   |       | Valve-Float Needle              |
| 108   | BS-699723   | 1   |       | Valve-Choke                     |
| 117   | BS-842630   | 1   |       | Jet-Main (Standard)             |
| 118   | BS-797477   | 1   |       | Jet-Main (High Altitude)        |



LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 6

Page 34 of 63

| Ref # | Part Number  | Qty | S/P/F | Description                                                 |
|-------|--------------|-----|-------|-------------------------------------------------------------|
| 121   | BS-792455    | 1   | S     | Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633) |
| 125   | BS-796997    | 1   |       | Carburetor                                                  |
| 130   | BS-690993    | 1   |       | Valve-Throttle                                              |
| 131   | BS-499805    | 1   |       | Kit-Throttle Shaft                                          |
| 133   | BS-699724    | 1   |       | Float-Carburetor                                            |
| 135   | BS-699729    | 1   |       | Tube-Fuel Transfer                                          |
| 137   | BS-690994    | 1   |       | Gasket-Float Bowl                                           |
| 141   | BS-796228    | 1   |       | Kit-Choke Shaft                                             |
| 142   | BS-699726    | 1   |       | Nozzle-Carburetor                                           |
| 146   | BS-690979    | 1   | /P    | Key-Timing                                                  |
| 150   | BS-690995    | 1   |       | Gasket-Nozzle                                               |
| 163   | BS-691001    | 1   |       | Gasket-Air Cleaner                                          |
| 165   | BS-693148    | 1   |       | Nut (Ring Gear)                                             |
| 186   | BS-795985    | 1   |       | Connector-Hose                                              |
| 187   | 751-10349-16 | 1   | /P    | Line-Fuel Cut as required                                   |
| 188   | BS-697551    | 1   |       | Screw (Control Bracket)                                     |
| 192   | BS-690083    | 1   |       | Adjuster-Rocker Arm                                         |
| 197   | BS-697820    | 1   |       | Screw (Back Plate)                                          |
| 209   | BS-796658    | 1   |       | Spring-Governor (Yellow/Brown)                              |
| 211   | BS-796225    | 1   |       | Spring-Governed Idle (Orange)                               |
| 212   | BS-695238    | 1   |       | Link-Throttle                                               |
| 216   | BS-796229    | 1   |       | Link-Choke                                                  |
| 217   | BS-695409    | 1   |       | Spring-Choke Return                                         |
| 219   | BS-793338    | 1   | /P    | Gear-Governor                                               |
| 220   | BS-690412    | 1   | /P    | Washer (Governor Gear)                                      |
| 221   | BS-841026    | 1   |       | Cup-Governor                                                |
| 222   | BS-796226    | 1   |       | Bracket-Control                                             |
| 227   | BS-796223    | 1   |       | Lever-Governor Control                                      |
| 231   | BS-690718    | 1   |       | Screw (Choke Valve)                                         |
| 239   | BS-792028    | 1   |       | Switch-Oil Pressure                                         |
| 240   | BS-691035    | 1   | /P    | Filter-Fuel                                                 |
| 250   | BS-690957    | 1   |       | Retainer-Breather                                           |
| 252   | BS-794389    | 1   |       | Collector-Oil                                               |
| 265   | BS-691024    | 1   | /P    | Clamp-Casing                                                |
| 267   | BS-695134    | 1   |       | Screw (Casing Clamp)                                        |
| 276   | BS-695410    | 1   |       | Washer-Sealing                                              |
| 278   | BS-792651    | 1   |       | Washer (Governor Control Lever)                             |
| 287   | BS-697551    | 1   |       | Screw (Dipstick Tube)                                       |
| 304   | BS-797407    | 1   | /P    | Housing-Blower                                              |
| 305   | BS-691005    | 1   |       | Screw (Blower Housing)                                      |
| 305A  | BS-790690    | 1   |       | Screw (Blower Housing to Intake Elbow)                      |
| 306   | BS-796541    | 1   |       | Shield-Cylinder (Cylinder #2)                               |
| 306A  | BS-796852    | 1   |       | Shield-Cylinder (Cylinder #1)                               |
| 307   | BS-697551    | 1   |       | Screw (Cylinder Shield)                                     |
| 309   | BS-497595    | 1   | /P    | Motor-Starter                                               |
| 310   | BS-690323    | 1   |       | Screw (Starter Motor)                                       |
| 332   | BS-691059    | 1   |       | Nut (Flywheel)                                              |
| 333   | BS-691060    | 1   | /P    | Armature-Magneto                                            |
| 334   | BS-691061    | 1   |       | Screw (Magneto Armature)                                    |
| 337   | 759-3336     | 1   | /P    | Plug-Spark                                                  |



LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 6

Page 35 of 63

| Ref # | Part Number | Qty | S/P/F | Description                                                             |
|-------|-------------|-----|-------|-------------------------------------------------------------------------|
| 358   | BS-694012   | 1   | /P    | Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883) |
| 385   | BS-797409   | 1   |       | Screw (Fuel Pump)                                                       |
| 387   | BS-808656   | 1   | /P    | Pump-Fuel                                                               |
| 404   | BS-690442   | 1   |       | Washer (Governor Crank)                                                 |
| 415   | BS-794903   | 1   |       | Plug (Oil Pressure Switch Hole)                                         |
| 418   | BS-795912   | 1   |       | Plate-Carburetor                                                        |
| 431   | BS-792297   | 1   |       | Elbow-Intake                                                            |
| 445   | BS-792105   | 1   | /P    | Filter-Air Cleaner Cartridge                                            |
| 447   | BS-691003   | 1   | /P    | Screw (Air Guide Cover)                                                 |
| 467   | BS-790697   | 1   |       | Knob-Air Cleaner                                                        |
| 474   | BS-696457   | 1   | /P    | Alternator                                                              |
| 501   | BS-794360   | 1   | /P    | Regulator                                                               |
| 503   | BS-691532   | 1   | /P    | Strap-Starter                                                           |
| 505   | BS-691029   | 1   |       | Nut (Governor Control Lever)                                            |
| 510   | BS-696541   | 1   | /P    | Drive-Starter                                                           |
| 513   | BS-692024   | 1   | /P    | Clutch-Drive                                                            |
| 523   | BS-691036   | 1   |       | Dipstick                                                                |
| 524   | BS-691032   | 1   |       | Seal-Dipstick Tube                                                      |
| 525   | BS-691037   | 1   |       | Tube-Dipstick                                                           |
| 526   | BS-691129   | 1   | /P    | Screw (Regulator)                                                       |
| 544   | N/A         | 1   |       | Armature-Starter (Service with Starter Motor BS-497595)                 |
| 552   | BS-796638   | 1   |       | Bushing-Governor Crank                                                  |
| 552A  | BS-690553   | 1   |       | Bushing-Governor Crank                                                  |
| 562   | BS-690311   | 1   |       | Screw (Governor Control Lever)                                          |
| 573   | BS-790444   | 1   |       | Plate-Back                                                              |
| 579   | BS-691029   | 1   |       | Nut (Starter Cable)                                                     |
| 601   | BS-691038   | 1   |       | Clamp-Hose (Black)                                                      |
| 615   | BS-698290   | 1   | /P    | Retainer-Governor Shaft                                                 |
| 616   | BS-691045   | 1   |       | Crank-Governor                                                          |
| 617   | BS-697891   | 1   |       | Seal-O Ring (Intake Manifold) (Red)                                     |
| 633   | BS-699813   | 1   |       | Seal-Choke/Throttle Shaft                                               |
| 634   | BS-698779   | 1   |       | Spring/Seal Assembly                                                    |
| 635   | BS-66538s   | 1   | /P    | Boot-Spark Plug                                                         |
| 654   | BS-690958   | 1   | /P    | Nut (Carburetor)                                                        |
| 668   | BS-691215   | 1   |       | Spacer (Rotating Screen)                                                |
| 668A  | BS-691500   | 1   | /P    | Spacer (Rotating Screen)                                                |
| 672   | BS-690234   | 1   |       | Gasket-Carburetor Plate                                                 |
| 691   | BS-790574   | 1   |       | Seal-Governor Shaft                                                     |
| 695   | BS-693149   | 1   |       | Screw (Ring Gear)                                                       |
| 697   | BS-791680   | 1   | /P    | Screw (Drive Cap)                                                       |
| 703   | BS-691010   | 1   |       | Clip                                                                    |
| 718   | BS-690959   | 1   | /P    | Pin-Locating                                                            |
| 726   | BS-499612   | 1   |       | Gear-Ring                                                               |
| 729   | BS-694123   | 1   |       | Clip-Wire                                                               |
| 741   | BS-690980   | 1   |       | Gear-Timing                                                             |
| 742   | BS-690328   | 1   | /P    | Retainer-E Ring (Governor Crank)                                        |
| 750   | BS-796208   | 1   |       | Screw (Oil Pump Cover)                                                  |
| 783   | BS-695708   | 1   | /P    | Gear-Pinion                                                             |
| 789   | BS-797460   | 1   |       | Harness-Wiring                                                          |
| 798   | BS-697890   | 1   |       | Screw (Rocker Arm)                                                      |




LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 6

Page 36 of 63

| Ref # | Part Number    | Qty | S/P/F | Description                                            |
|-------|----------------|-----|-------|--------------------------------------------------------|
| 801   | BS-691283      | 1   |       | Cap-Drive                                              |
| 802   | BS-691286      | 1   | /P    | Cap-End                                                |
| 803   | N/A            | 1   |       | Housing-Starter (Service with Starter Motor BS-497595) |
| 842   | BS-691031      | 1   | /P    | Seal-O Ring (Dipstick Tube)                            |
| 847   | BS-499602      | 1   |       | Dipstick/Tube Assembly                                 |
| 851   | BS-493880S     | 1   | /P    | Terminal-Spark Plug                                    |
| 865   | BS-792286      | 1   |       | Cover-Air Guide (Valley)                               |
| 868   | BS-690968      | 1   | /P    | Seal-Valve                                             |
| 883   | BS-690970      | 1   | /P    | Gasket-Exhaust                                         |
| 914   | BS-691127      | 1   | /P    | Screw (Rocker Cover)                                   |
| 918   | BS-797408      | 1   |       | Hose-Vacuum                                            |
| 929   | BS-695239      | 1   |       | Screw (Choke Control Bracket)                          |
| 943   | BS-796222      | 1   |       | Seal-O Ring (Oil Pump Cover)                           |
| 947   | BS-841546      | 1   |       | Solenoid-Fuel                                          |
| 965   | BS-796221      | 1   |       | Cover-Oil Pump                                         |
| 967   | BS-792303      | 1   | /P    | Filter-Pre Cleaner                                     |
| 968   | BS-795120      | 1   | /P    | Cover-Air Cleaner                                      |
| 975   | BS-793592      | 1   |       | Bowl-Float                                             |
| 987   | BS-691000      | 1   |       | Seal-Throttle Shaft                                    |
| 1005  | BS-791236      | 1   |       | Fan-Flywheel                                           |
| 1013  | BS-690954      | 1   | /P    | Nipple-Oil Filter                                      |
| 1017  | BS-796214      | 1   |       | Screen-Oil Pump                                        |
| 1022  | BS-690971      | 1   | /P    | Gasket-Rocker Cover                                    |
| 1023  | BS-793146      | 1   |       | Cover-Rocker (Cylinder #1)                             |
| 1023A | BS-499600      | 1   |       | Cover-Rocker (Cylinder #2)                             |
| 1024  | BS-796220      | 1   |       | Pump-Oil                                               |
| 1026  | BS-690981      | 1   | /P    | Rod-Push (Exhaust)                                     |
| 1026A | BS-690982      | 1   | /P    | Rod-Push (Intake)                                      |
| 1027  | BS-696854      | 1   | /P    | Filter-Oil                                             |
| 1029  | BS-690972      | 1   |       | Arm-Rocker                                             |
| 1036  |                | 1   |       | Label-Emissions (Available from a Briggs & Stratton )  |
| 1040  | BS-791237      | 1   |       | Plate-Trim                                             |
| 1051  | BS-691265      | 1   | /P    | Ring-Retaining (Starter Drive)                         |
| 1054  | BS-280275      | 1   |       | Tie-Cable                                              |
| 1059  | BS-698516      | 1   |       | Kit-Screw/Washer (Alternator)                          |
| 1070  | BS-791680      | 1   | /P    | Screw (Flywheel Fan)                                   |
| 1090  | BS-691293      | 1   | /P    | Retainer-Brush                                         |
| 1095  | BS-694013      | 1   | /P    | Gasket Set-Valve (Incl. Ref No. 7,883)                 |
| 1100  | BS-791959      | 1   |       | Pivot-Rocker Arm                                       |
| 1119  | BS-93621       | 1   | /P    | Screw (Alternator)                                     |
| 1124  | BS-841653      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1124A | BS-690988      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1126  | BS-690991      | 1   |       | Screw (Fuel Transfer Tube)                             |
| 1127  | BS-695407      | 1   |       | Screw (Fuel Bowl)                                      |
| 1128  | BS-690990      | 1   |       | Screw (Carburetor Nozzle)                              |
| 1169  | BS-690990      | 1   |       | Screw (Carburetor Plate)                               |
| 1329  | BS-44L777-0137 | 1   |       | Replacement Engine (44L777)                            |
| 1329  | BS-44Q777-0137 | 1   | /P    | Replacement Engine (44M777)                            |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 7

Page 37 of 63

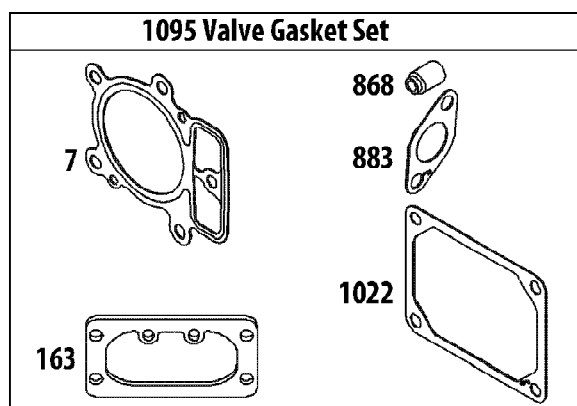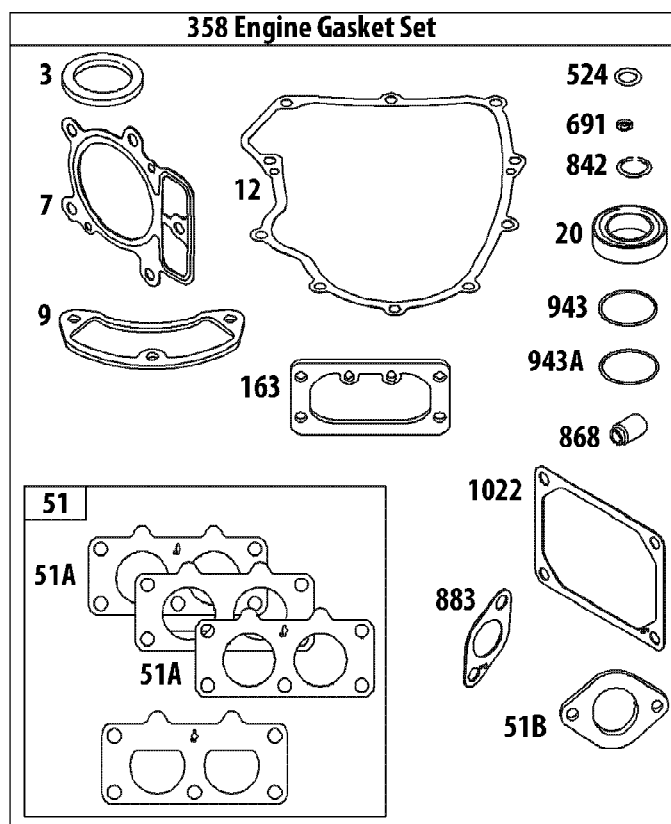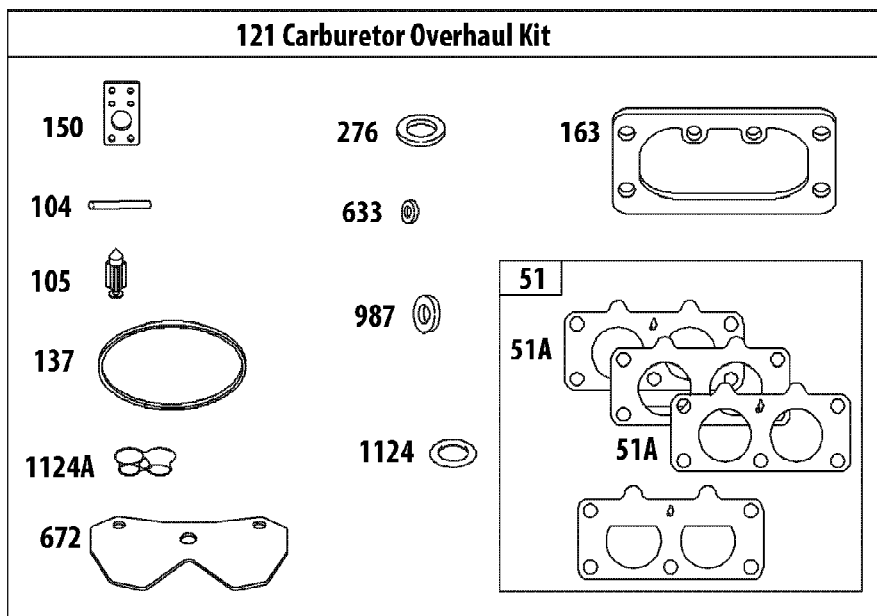

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 7

Page 38 of 63

| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 1     | BS-793564   | 1   |       | Cylinder Assembly               |
| 2     | BS-499585   | 1   |       | Kit-Bushing/Seal (Magneto Side) |
| 3     | BS-391086S  | 1   | /P    | Seal-Oil (Magneto Side)         |
| 4     | BS-796307   | 1   | /P    | Sump-Engine                     |
| 5     | BS-796231   | 1   | /P    | Head-Cylinder (Cylinder #1)     |
| 5A    | BS-796232   | 1   | /P    | Head-Cylinder (Cylinder #2)     |
| 7     | BS-693997   | 1   | /P    | Gasket-Cylinder Head            |
| 8     | BS-792185   | 1   | /P    | Breather Assembly               |
| 9     | BS-690937   | 1   |       | Gasket-Breather                 |
| 10    | BS-697551   | 1   |       | Screw (Breather Assembly)       |
| 11    | BS-792184   | 1   | /P    | Tube-Breather                   |
| 12    | BS-697227   | 1   | /P    | Gasket-Crankcase                |
| 13    | BS-793988   | 1   |       | Screw (Cylinder Head)           |
| 15    | BS-690946   | 1   | /P    | Plug-Oil Drain                  |
| 16    | BS-796540   | 1   |       | Crankshaft                      |
| 20    | BS-795387   | 1   | /P    | Seal-Oil (PTO Side)             |
| 22    | BS-694966   | 1   | /P    | Screw (Crankcase Cover/ Sump)   |
| 23    | BS-691053   | 1   |       | Flywheel                        |
| 24    | BS-222698S  | 1   | /P    | Key-Flywheel                    |
| 25    | BS-792023   | 1   | /P    | Piston Assembly (Standard)      |
| 25    | BS-792072   | 1   |       | Piston Assembly (020" Oversize) |
| 26    | BS-793561   | 1   |       | Ring Set (Standard)             |
| 26    | BS-792073   | 1   |       | Ring Set (.020" Oversize)       |
| 27    | BS-690975   | 1   |       | Lock-Piston Pin                 |
| 28    | BS-696581   | 1   |       | Pin-Piston                      |
| 29    | BS-796209   | 1   | /P    | Rod-Connecting                  |
| 32    | BS-690976   | 1   |       | Screw (Connecting Rod)          |
| 33    | BS-697576   | 1   |       | Valve-Exhaust                   |
| 34    | BS-792200   | 1   | /P    | Valve-Intake                    |
| 35    | BS-694865   | 1   |       | Spring-Valve (Intake)           |
| 36    | BS-694865   | 1   |       | Spring-Valve (Exhaust)          |
| 42    | BS-499586   | 1   | /P    | Keeper-Valve                    |
| 45    | BS-690977   | 1   | /P    | Tappet-Valve                    |
| 46    | BS-796853   | 1   |       | Gear-Cam (44L777)               |
| 46    | BS-797242   | 1   |       | Gear-Cam (44M777)               |
| 48    | BS-797093   | 1   |       | Short Block                     |
| 50    | BS-695241   | 1   | /P    | Manifold-Intake                 |
| 51    | BS-795123   | 1   |       | Gasket-Intake                   |
| 51A   | BS-690950   | 1   |       | Gasket-Intake                   |
| 51B   | BS-690949   | 1   |       | Gasket-Intake                   |
| 53    | BS-690951   | 1   |       | Stud (Carburetor)               |
| 54    | BS-699816   | 1   |       | Screw (Intake Manifold)         |
| 73    | BS-494439   | 1   | /P    | Screen-Rotating                 |
| 74    | BS-698425   | 1   |       | Screw (Rotating Screen)         |
| 75    | BS-691056   | 1   |       | Washer (Flywheel)               |
| 95    | BS-690718   | 1   |       | Screw (Throttle Valve)          |
| 98    | BS-699721   | 1   |       | Kit-Idle Speed                  |
| 104   | BS-694918   | 1   |       | Pin-Float Hinge                 |
| 105   | BS-698537   | 1   |       | Valve-Float Needle              |
| 108   | BS-699723   | 1   |       | Valve-Choke                     |
| 117   | BS-842630   | 1   |       | Jet-Main (Standard)             |
| 118   | BS-797477   | 1   |       | Jet-Main (High Altitude)        |

LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 7

Page 39 of 63

| Ref # | Part Number  | Qty | S/P/F | Description                                                 |
|-------|--------------|-----|-------|-------------------------------------------------------------|
| 121   | BS-792455    | 1   | S     | Kit-Carburetor Overhaul (Incl. Ref No. 104,137,163,276,633) |
| 125   | BS-796997    | 1   |       | Carburetor                                                  |
| 130   | BS-690993    | 1   |       | Valve-Throttle                                              |
| 131   | BS-499805    | 1   |       | Kit-Throttle Shaft                                          |
| 133   | BS-699724    | 1   |       | Float-Carburetor                                            |
| 135   | BS-699729    | 1   |       | Tube-Fuel Transfer                                          |
| 137   | BS-690994    | 1   |       | Gasket-Float Bowl                                           |
| 141   | BS-796228    | 1   |       | Kit-Choke Shaft                                             |
| 142   | BS-699726    | 1   |       | Nozzle-Carburetor                                           |
| 146   | BS-690979    | 1   | /P    | Key-Timing                                                  |
| 150   | BS-690995    | 1   |       | Gasket-Nozzle                                               |
| 163   | BS-691001    | 1   |       | Gasket-Air Cleaner                                          |
| 165   | BS-693148    | 1   |       | Nut (Ring Gear)                                             |
| 186   | BS-795985    | 1   |       | Connector-Hose                                              |
| 187   | 751-10349-16 | 1   | /P    | Line-Fuel Cut as required                                   |
| 188   | BS-697551    | 1   |       | Screw (Control Bracket)                                     |
| 192   | BS-690083    | 1   |       | Adjuster-Rocker Arm                                         |
| 197   | BS-697820    | 1   |       | Screw (Back Plate)                                          |
| 209   | BS-796658    | 1   |       | Spring-Governor (Yellow/Brown)                              |
| 211   | BS-796225    | 1   |       | Spring-Governed Idle (Orange)                               |
| 212   | BS-695238    | 1   |       | Link-Throttle                                               |
| 216   | BS-796229    | 1   |       | Link-Choke                                                  |
| 217   | BS-695409    | 1   |       | Spring-Choke Return                                         |
| 219   | BS-793338    | 1   | /P    | Gear-Governor                                               |
| 220   | BS-690412    | 1   | /P    | Washer (Governor Gear)                                      |
| 221   | BS-841026    | 1   |       | Cup-Governor                                                |
| 222   | BS-796226    | 1   |       | Bracket-Control                                             |
| 227   | BS-796223    | 1   |       | Lever-Governor Control                                      |
| 231   | BS-690718    | 1   |       | Screw (Choke Valve)                                         |
| 239   | BS-792028    | 1   |       | Switch-Oil Pressure                                         |
| 240   | BS-691035    | 1   | /P    | Filter-Fuel                                                 |
| 250   | BS-690957    | 1   |       | Retainer-Breather                                           |
| 252   | BS-794389    | 1   |       | Collector-Oil                                               |
| 265   | BS-691024    | 1   | /P    | Clamp-Casing                                                |
| 267   | BS-695134    | 1   |       | Screw (Casing Clamp)                                        |
| 276   | BS-695410    | 1   |       | Washer-Sealing                                              |
| 278   | BS-792651    | 1   |       | Washer (Governor Control Lever)                             |
| 287   | BS-697551    | 1   |       | Screw (Dipstick Tube)                                       |
| 304   | BS-797407    | 1   | /P    | Housing-Blower                                              |
| 305   | BS-691005    | 1   |       | Screw (Blower Housing)                                      |
| 305A  | BS-790690    | 1   |       | Screw (Blower Housing to Intake Elbow)                      |
| 306   | BS-796541    | 1   |       | Shield-Cylinder (Cylinder #2)                               |
| 306A  | BS-796852    | 1   |       | Shield-Cylinder (Cylinder #1)                               |
| 307   | BS-697551    | 1   |       | Screw (Cylinder Shield)                                     |
| 309   | BS-497595    | 1   | /P    | Motor-Starter                                               |
| 310   | BS-690323    | 1   |       | Screw (Starter Motor)                                       |
| 332   | BS-691059    | 1   |       | Nut (Flywheel)                                              |
| 333   | BS-691060    | 1   | /P    | Armature-Magneto                                            |
| 334   | BS-691061    | 1   |       | Screw (Magneto Armature)                                    |
| 337   | 759-3336     | 1   | /P    | Plug-Spark                                                  |



LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 7

Page 40 of 63


| Ref # | Part Number | Qty | S/P/F | Description                                                             |
|-------|-------------|-----|-------|-------------------------------------------------------------------------|
| 358   | BS-694012   | 1   | /P    | Gasket Set-Engine (Incl. Ref No. 3.7,9,12,20,51,163,524,668,691868,883) |
| 385   | BS-797409   | 1   |       | Screw (Fuel Pump)                                                       |
| 387   | BS-808656   | 1   | /P    | Pump-Fuel                                                               |
| 404   | BS-690442   | 1   |       | Washer (Governor Crank)                                                 |
| 415   | BS-794903   | 1   |       | Plug (Oil Pressure Switch Hole)                                         |
| 418   | BS-795912   | 1   |       | Plate-Carburetor                                                        |
| 431   | BS-792297   | 1   |       | Elbow-Intake                                                            |
| 445   | BS-792105   | 1   | /P    | Filter-Air Cleaner Cartridge                                            |
| 447   | BS-691003   | 1   | /P    | Screw (Air Guide Cover)                                                 |
| 467   | BS-790697   | 1   |       | Knob-Air Cleaner                                                        |
| 474   | BS-696457   | 1   | /P    | Alternator                                                              |
| 501   | BS-794360   | 1   | /P    | Regulator                                                               |
| 503   | BS-691532   | 1   | /P    | Strap-Starter                                                           |
| 505   | BS-691029   | 1   |       | Nut (Governor Control Lever)                                            |
| 510   | BS-696541   | 1   | /P    | Drive-Starter                                                           |
| 513   | BS-692024   | 1   | /P    | Clutch-Drive                                                            |
| 523   | BS-691036   | 1   |       | Dipstick                                                                |
| 524   | BS-691032   | 1   |       | Seal-Dipstick Tube                                                      |
| 525   | BS-691037   | 1   |       | Tube-Dipstick                                                           |
| 526   | BS-691129   | 1   | /P    | Screw (Regulator)                                                       |
| 544   | N/A         | 1   |       | Armature-Starter (Service with Starter Motor BS-497595)                 |
| 552   | BS-796638   | 1   |       | Bushing-Governor Crank                                                  |
| 552A  | BS-690553   | 1   |       | Bushing-Governor Crank                                                  |
| 562   | BS-690311   | 1   |       | Screw (Governor Control Lever)                                          |
| 573   | BS-790444   | 1   |       | Plate-Back                                                              |
| 579   | BS-691029   | 1   |       | Nut (Starter Cable)                                                     |
| 601   | BS-691038   | 1   |       | Clamp-Hose (Black)                                                      |
| 615   | BS-698290   | 1   | /P    | Retainer-Governor Shaft                                                 |
| 616   | BS-691045   | 1   |       | Crank-Governor                                                          |
| 617   | BS-697891   | 1   |       | Seal-O Ring (Intake Manifold) (Red)                                     |
| 633   | BS-699813   | 1   |       | Seal-Choke/Throttle Shaft                                               |
| 634   | BS-698779   | 1   |       | Spring/Seal Assembly                                                    |
| 635   | BS-66538s   | 1   | /P    | Boot-Spark Plug                                                         |
| 654   | BS-690958   | 1   | /P    | Nut (Carburetor)                                                        |
| 668   | BS-691215   | 1   |       | Spacer (Rotating Screen)                                                |
| 668A  | BS-691500   | 1   | /P    | Spacer (Rotating Screen)                                                |
| 672   | BS-690234   | 1   |       | Gasket-Carburetor Plate                                                 |
| 691   | BS-790574   | 1   |       | Seal-Governor Shaft                                                     |
| 695   | BS-693149   | 1   |       | Screw (Ring Gear)                                                       |
| 697   | BS-791680   | 1   | /P    | Screw (Drive Cap)                                                       |
| 703   | BS-691010   | 1   |       | Clip                                                                    |
| 718   | BS-690959   | 1   | /P    | Pin-Locating                                                            |
| 726   | BS-499612   | 1   |       | Gear-Ring                                                               |
| 729   | BS-694123   | 1   |       | Clip-Wire                                                               |
| 741   | BS-690980   | 1   |       | Gear-Timing                                                             |
| 742   | BS-690328   | 1   | /P    | Retainer-E Ring (Governor Crank)                                        |
| 750   | BS-796208   | 1   |       | Screw (Oil Pump Cover)                                                  |
| 783   | BS-695708   | 1   | /P    | Gear-Pinion                                                             |
| 789   | BS-797460   | 1   |       | Harness-Wiring                                                          |
| 798   | BS-697890   | 1   |       | Screw (Rocker Arm)                                                      |



LTX1050VT Tractor (2010 & After)  
Engine B&S 44L777 & 44M777 7

Page 41 of 63

| Ref # | Part Number    | Qty | S/P/F | Description                                            |
|-------|----------------|-----|-------|--------------------------------------------------------|
| 801   | BS-691283      | 1   |       | Cap-Drive                                              |
| 802   | BS-691286      | 1   | /P    | Cap-End                                                |
| 803   | N/A            | 1   |       | Housing-Starter (Service with Starter Motor BS-497595) |
| 842   | BS-691031      | 1   | /P    | Seal-O Ring (Dipstick Tube)                            |
| 847   | BS-499602      | 1   |       | Dipstick/Tube Assembly                                 |
| 851   | BS-493880S     | 1   | /P    | Terminal-Spark Plug                                    |
| 865   | BS-792286      | 1   |       | Cover-Air Guide (Valley)                               |
| 868   | BS-690968      | 1   | /P    | Seal-Valve                                             |
| 883   | BS-690970      | 1   | /P    | Gasket-Exhaust                                         |
| 914   | BS-691127      | 1   | /P    | Screw (Rocker Cover)                                   |
| 918   | BS-797408      | 1   |       | Hose-Vacuum                                            |
| 929   | BS-695239      | 1   |       | Screw (Choke Control Bracket)                          |
| 943   | BS-796222      | 1   |       | Seal-O Ring (Oil Pump Cover)                           |
| 947   | BS-841546      | 1   |       | Solenoid-Fuel                                          |
| 965   | BS-796221      | 1   |       | Cover-Oil Pump                                         |
| 967   | BS-792303      | 1   | /P    | Filter-Pre Cleaner                                     |
| 968   | BS-795120      | 1   | /P    | Cover-Air Cleaner                                      |
| 975   | BS-793592      | 1   |       | Bowl-Float                                             |
| 987   | BS-691000      | 1   |       | Seal-Throttle Shaft                                    |
| 1005  | BS-791236      | 1   |       | Fan-Flywheel                                           |
| 1013  | BS-690954      | 1   | /P    | Nipple-Oil Filter                                      |
| 1017  | BS-796214      | 1   |       | Screen-Oil Pump                                        |
| 1022  | BS-690971      | 1   | /P    | Gasket-Rocker Cover                                    |
| 1023  | BS-793146      | 1   |       | Cover-Rocker (Cylinder #1)                             |
| 1023A | BS-499600      | 1   |       | Cover-Rocker (Cylinder #2)                             |
| 1024  | BS-796220      | 1   |       | Pump-Oil                                               |
| 1026  | BS-690981      | 1   | /P    | Rod-Push (Exhaust)                                     |
| 1026A | BS-690982      | 1   | /P    | Rod-Push (Intake)                                      |
| 1027  | BS-696854      | 1   | /P    | Filter-Oil                                             |
| 1029  | BS-690972      | 1   |       | Arm-Rocker                                             |
| 1036  |                | 1   |       | Label-Emissions (Available from a Briggs & Stratton )  |
| 1040  | BS-791237      | 1   |       | Plate-Trim                                             |
| 1051  | BS-691265      | 1   | /P    | Ring-Retaining (Starter Drive)                         |
| 1054  | BS-280275      | 1   |       | Tie-Cable                                              |
| 1059  | BS-698516      | 1   |       | Kit-Screw/Washer (Alternator)                          |
| 1070  | BS-791680      | 1   | /P    | Screw (Flywheel Fan)                                   |
| 1090  | BS-691293      | 1   | /P    | Retainer-Brush                                         |
| 1095  | BS-694013      | 1   | /P    | Gasket Set-Valve (Incl. Ref No. 7,883)                 |
| 1100  | BS-791959      | 1   |       | Pivot-Rocker Arm                                       |
| 1119  | BS-93621       | 1   | /P    | Screw (Alternator)                                     |
| 1124  | BS-841653      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1124A | BS-690988      | 1   |       | Seal-O Ring(Fuel Transfer Tube)                        |
| 1126  | BS-690991      | 1   |       | Screw (Fuel Transfer Tube)                             |
| 1127  | BS-695407      | 1   |       | Screw (Fuel Bowl)                                      |
| 1128  | BS-690990      | 1   |       | Screw (Carburetor Nozzle)                              |
| 1169  | BS-690990      | 1   |       | Screw (Carburetor Plate)                               |
| 1329  | BS-44L777-0137 | 1   |       | Replacement Engine (44L777)                            |
| 1329  | BS-44Q777-0137 | 1   | /P    | Replacement Engine (44M777)                            |

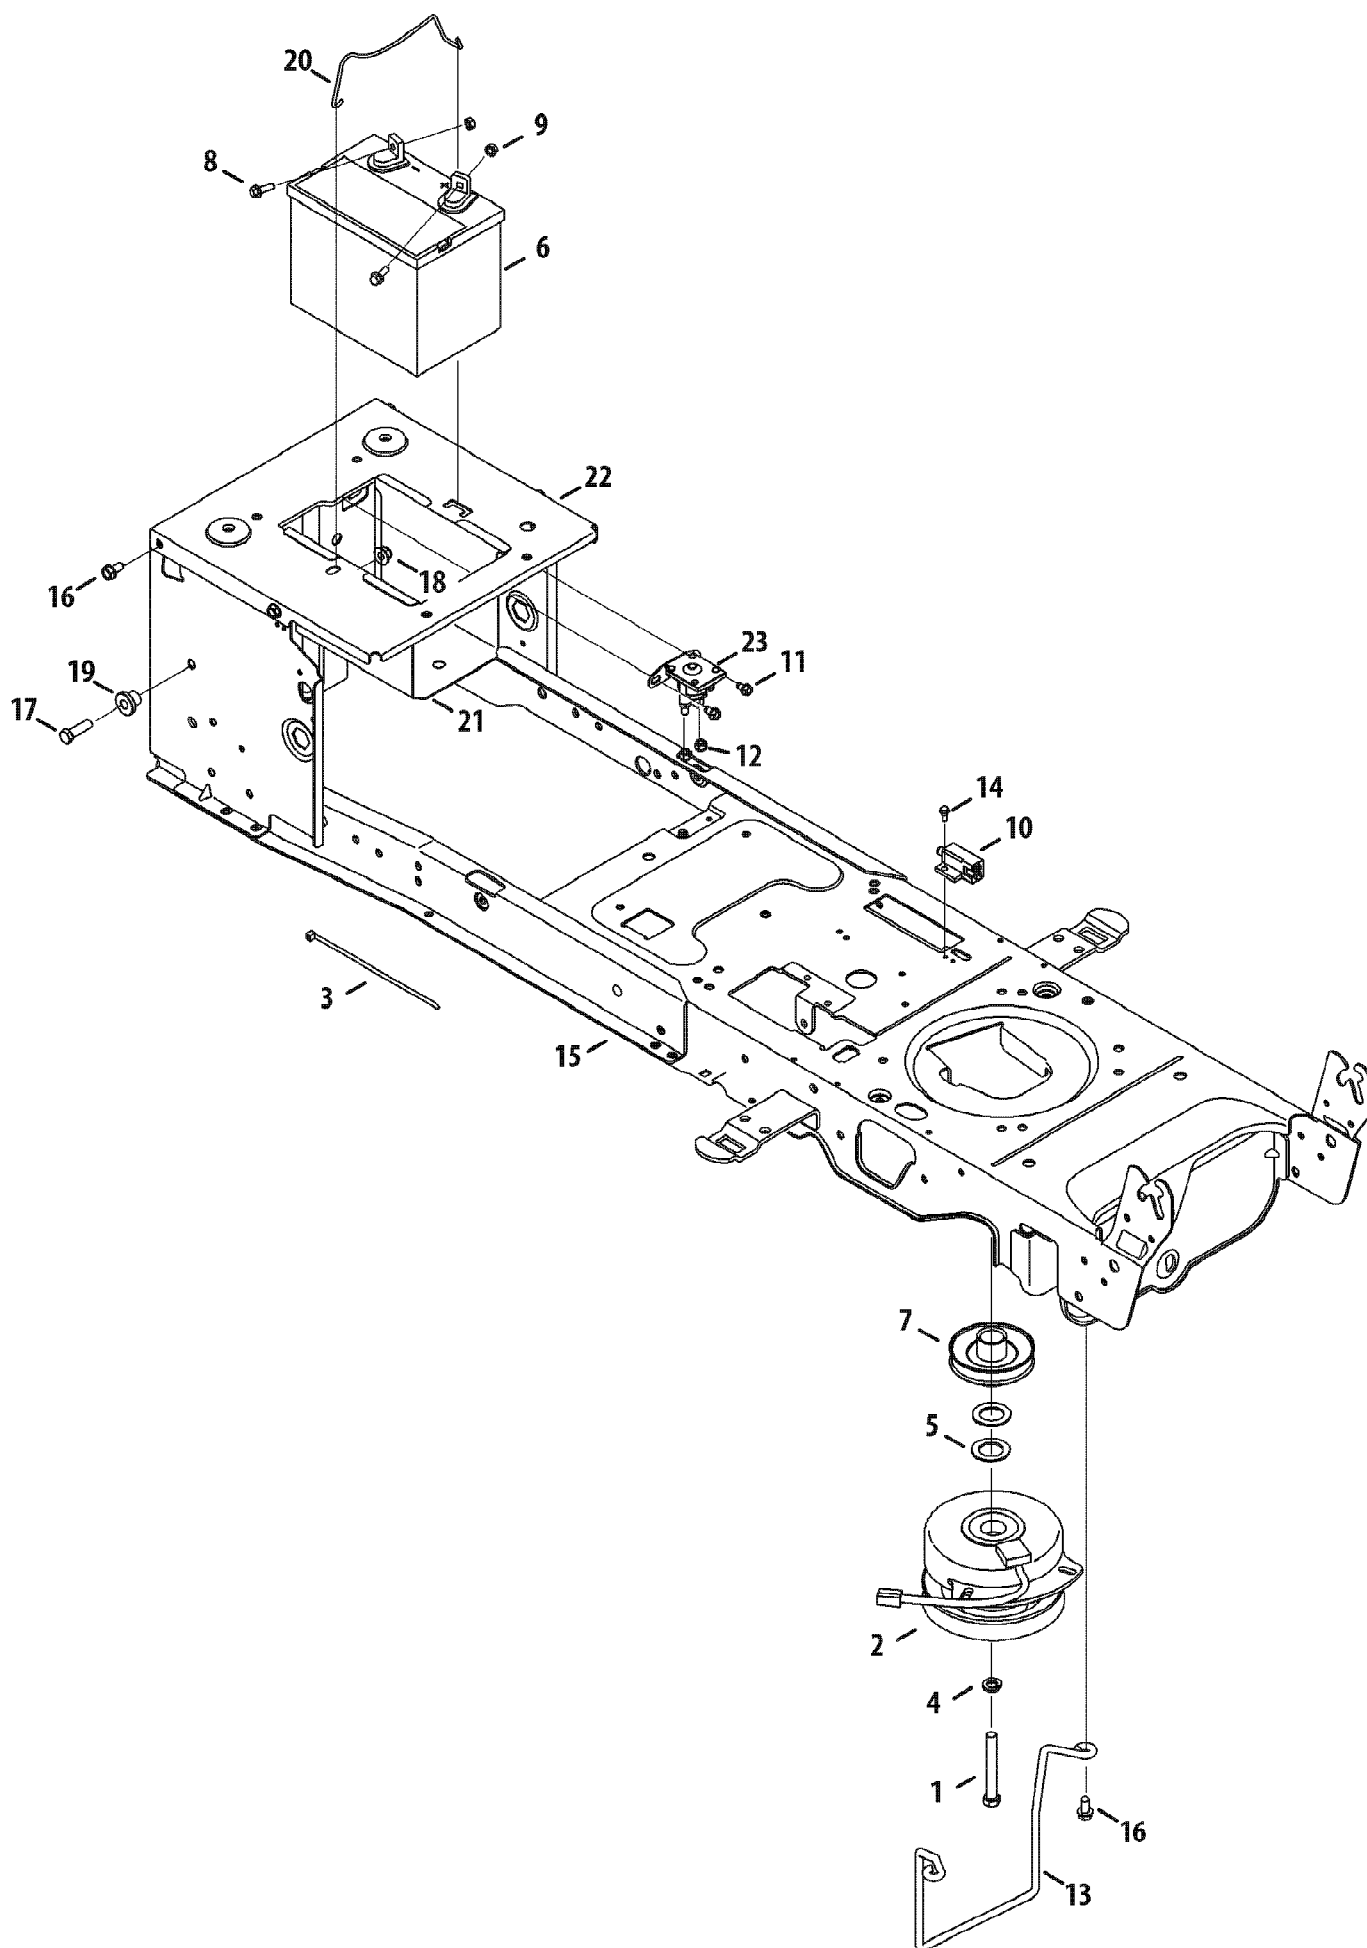


LTX1050VT Tractor (2010 & After)  
Frame, Electrical & PTO

Page 43 of 63

| Ref # | Part Number     | Qty | S/P/F | Description                         |
|-------|-----------------|-----|-------|-------------------------------------|
| 1     | 710-04379A      | 1   |       | Hex Screw, 7/16-20, 3.50, Gr5, Lock |
| 2     | 917-04552       | 1   | /P    | Clutch, Electric PTO (46")          |
| 2     | 917-04174A      | 1   | /P    | Clutch, Electric PTO (50")          |
| 3     | 725-0157        | 1   | /P    | Cable, Tie, 3/16 X .05 X 7.4        |
| 4     | 736-0171        | 1   | S     | Washer, Lock, 7/16 , Regular Duty   |
| 5     | 736-0277        | 1   |       | Washer, Flat, 1.031 X1.620 X.095    |
| 6     | 925-1707D       | 1   | /P    | Battery                             |
| 7     | 756-0978B       | 1   | /P    | Engine Pulley, Electric PTO         |
| 8     | 710-04666       | 1   |       | Hex Flange Screw, 1/4-20, .75, Gr5  |
| 9     | 712-0271        | 1   | /P    | Nut, Sems, 1/4-20                   |
| 10    | 725-04363       | 1   |       | Switch, Interlock                   |
| 11    | 710-0653        | 1   | /P    | Screw, Self-tapping, 1/4-20, 0.375  |
| 12    | 712-04064       | 1   | /P    | Nut, Flange Lock, 1/4-20, Nylon     |
| 13    | 747-05171       | 1   |       | Rod, Keeper (46")                   |
| 13    | 747-05195       | 1   |       | Rod, Keeper (50")                   |
| 14    | 738-04237A      | 1   |       | Screw, Shoulder, #10-32, .50        |
| 15    | 683-04469A-0637 | 1   |       | Frame Assembly, Lower               |
| 16    | 710-04484       | 1   |       | Screw, Self-tapping, 5/16-18, .750  |
| 17    | 710-3005        | 1   | /P    | Hex Screw, 3/8-16, 1.25, Gr5, Std   |
| 18    | 712-04065       | 1   | /P    | Nut, Flange Lock, 3/8-16, Nylon     |
| 19    | 738-04058       | 1   |       | Spacer, Shoulder, .38 X 1.0 X .70   |
| 20    | 747-04121A      | 1   |       | Rod, Battery                        |
| 21    | 783-0349-0637   | 1   |       | Tray, Battery                       |
| 22    | 783-06089-0637  | 1   |       | Bracket, Frame, Seat                |
| 23    | 725-04439       | 1   |       | Solenoid, 12V, 100 Amp, 4 term      |
|       | 925-04093       | 1   | /P    | Harness Assembly, Main Not Shown    |

LTX1050VT Tractor (2010 & After)  
Fuel Tank, Hood & Dash

Page 44 of 63

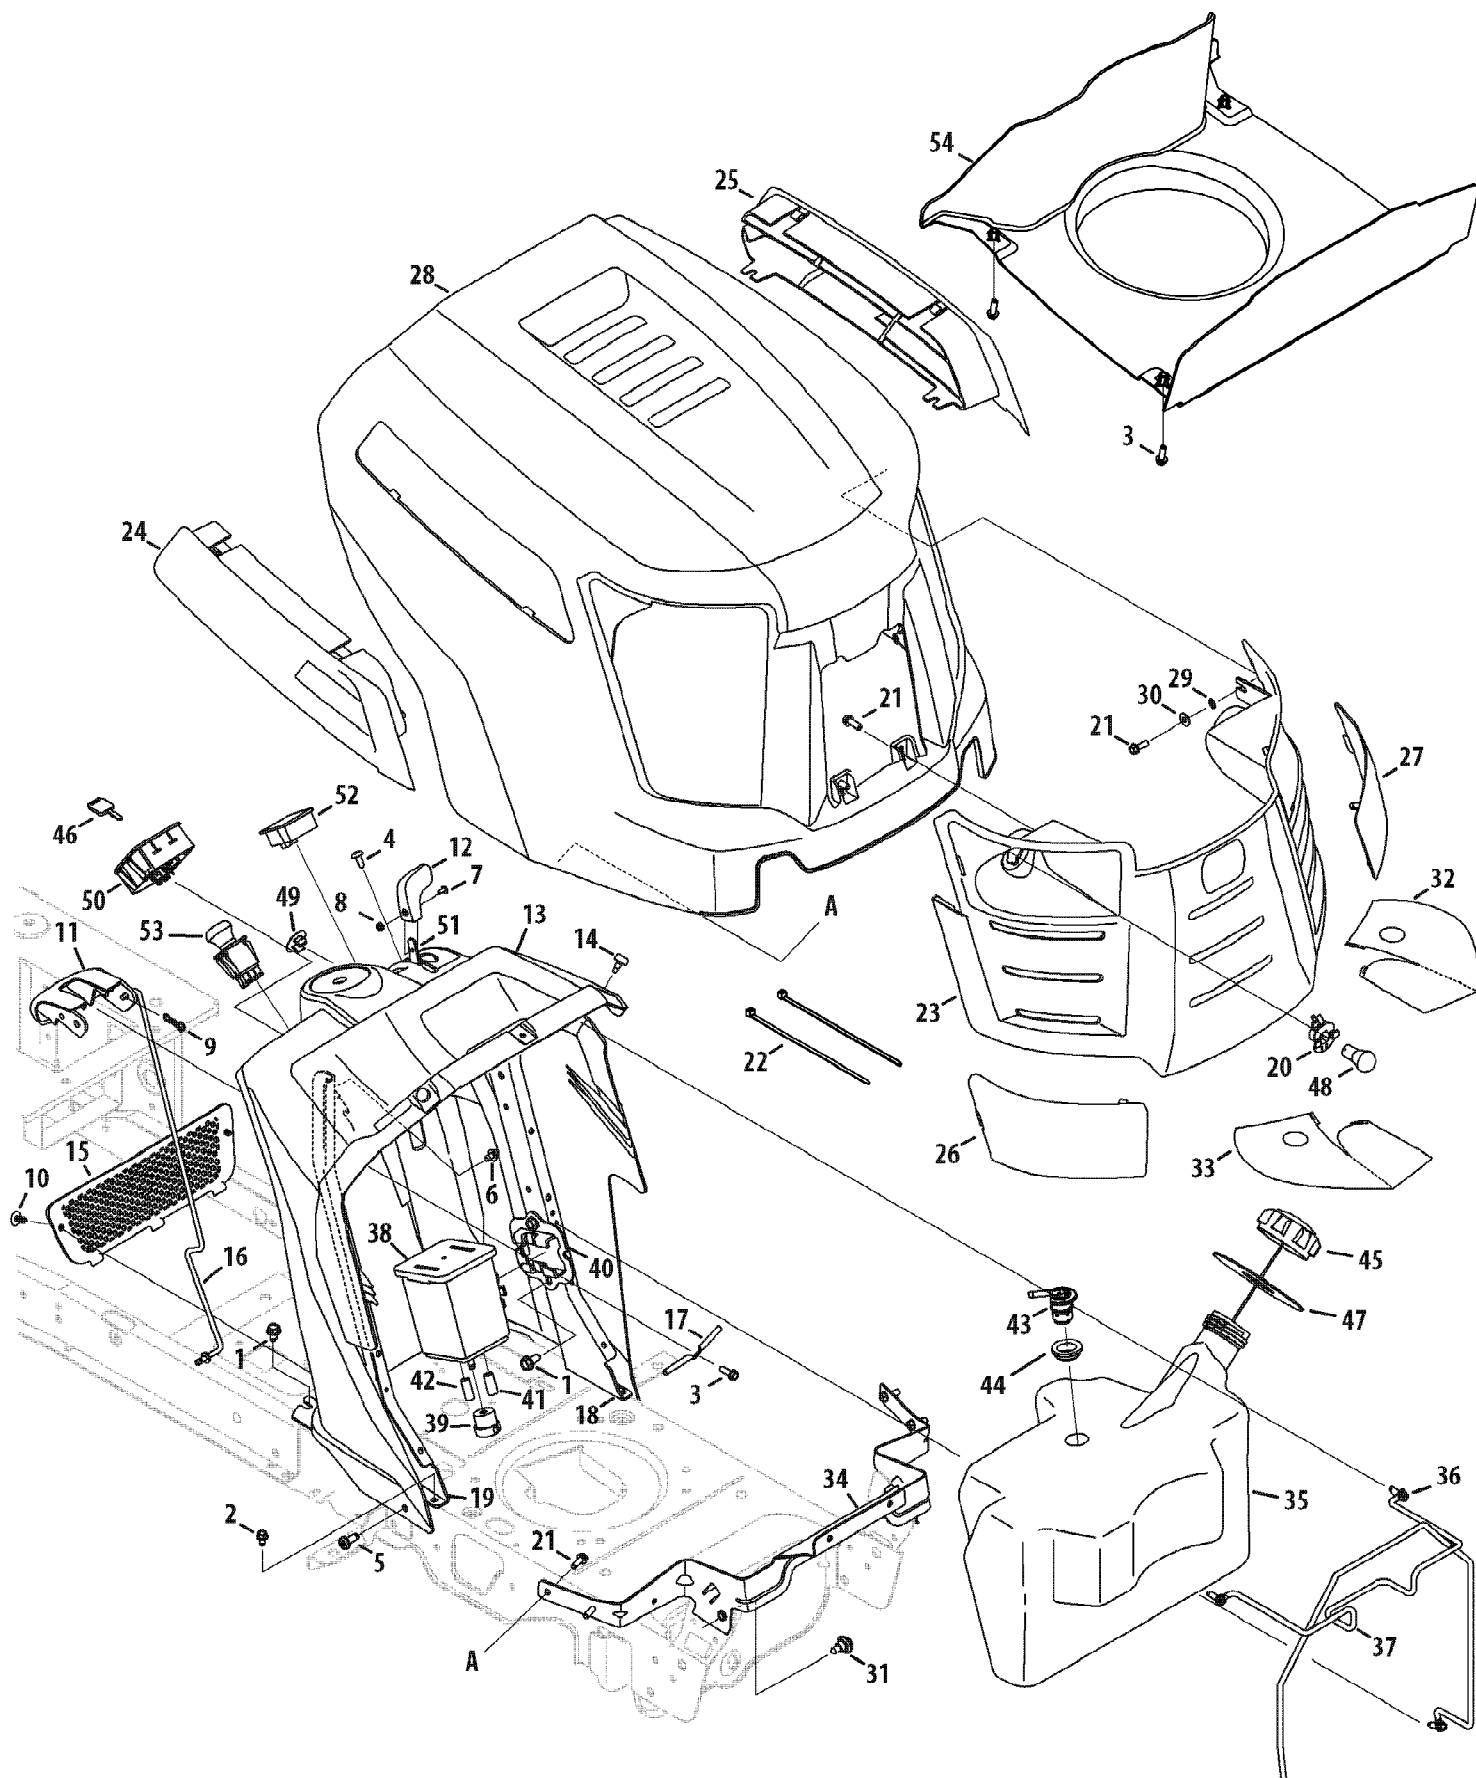

LTX1050VT Tractor (2010 & After)  
Fuel Tank, Hood & Dash

Page 45 of 63

| Ref # | Part Number    | Qty | S/P/F | Description                           |
|-------|----------------|-----|-------|---------------------------------------|
| 1     | 710-04484      | 1   |       | Screw, Self-tapping, 5/16-18, .750    |
| 2     | 710-0599       | 1   | /P    | Screw, Self-tapping, 1/4-20, 0.500    |
| 3     | 710-0895       | 1   |       | Screw, HL, 1/4-15, 0.750              |
| 4     | 710-1017       | 1   | /P    | Screw, Ab, 1/4-14, 0.625,             |
| 5     | 710-1611B      | 1   | /P    | Screw, Self-tapping, 5/16-18, 0.750,  |
| 6     | 710-1652       | 1   | /P    | Screw, Self-tapping, 1/4-20 x .625    |
| 7     | 710-3217       | 1   | /P    | Screw, Mach, #8-32, 0.375             |
| 8     | 712-0142       | 1   | /P    | Nut, Hex, #8-32                       |
| 9     | 714-04040      | 1   | /P    | Pin, Cotter, Bow-Tie 72               |
| 10    | 726-3046       | 1   | /P    | Clip, Ratchet, .250 Dia               |
| 11    | 731-05447A     | 1   |       | Lever, Dash, Cruise/Brake             |
| 12    | 731-06593      | 1   |       | Knob, Throttle                        |
| 13    | 931-06554      | 1   | /P    | Dash Panel, A-Style, NO LGT SW        |
| 14    | 735-0271A      | 1   | /P    | Bumper, .62 Dia X .3                  |
| 15    | 735-04076      | 1   |       | Net                                   |
| 16    | 747-05009A     | 1   |       | Rod, Control, Latch Cub               |
| 17    | 747-1196       | 1   |       | Rod, Lever, Bent                      |
| 18    | 783-06098-0637 | 1   |       | Support, Dash, Plate LH               |
| 19    | 783-06099-0637 | 1   |       | Support, Dash, Plate RH               |
| 20    | 925-1649       | 1   | /P    | Socket, Lamp                          |
| 21    | 710-05108      | 1   |       | Screw, 1/4 Dia, .750                  |
| 22    | 926-0154       | 1   | /P    | Tie, Cable, Push Mount 7.5 Lg         |
| 23    | 931-04322      | 1   | /P    | Grille Ass'y (Incl. 26, 27, 32 & 33)  |
| 24    | 931-06542      | 1   | /P    | Scoop, Hood, RH A-Style               |
| 25    | 931-06543      | 1   | /P    | Scoop, Hood, LH A-Style               |
| 26    | 931-06558      | 1   | /P    | Lens, Hood, RH A-Style                |
| 27    | 931-06559      | 1   | /P    | Lens, Hood, LH A-Style                |
| 28    | 931-06634      | 1   | /P    | Hood, A-Style                         |
| 29    | 936-0222       | 1   | /P    | Washer, Lock, 1/4, External           |
| 30    | 936-3020       | 1   | /P    | Washer, Flat, .271, .630, .065        |
| 31    | 738-04091A     | 1   | /P    | Screw, Shoulder, .43x.29, 5/16-18     |
| 32    | 777X44055      | 1   |       | Reflector, Cub A Style, LH            |
| 33    | 777X44056      | 1   |       | Reflector, Cub A Style, RH            |
| 34    | 783-06114-0637 | 1   |       | Bracket, Pivot, Hood A-Style          |
| 35    | 751-10879      | 1   |       | Tank, Fuel, 3.75 Gal.                 |
| 35    | 751-10906      | 1   |       | Tank, Fuel, 3.30 Gal. (CA)            |
| 36    | 710-1652       | 1   | /P    | Screw, Self-tapping, 1/4-20, .625     |
| 36    | 710-0642       | 1   | /P    | Screw, Self-tapping, 1/4-20, .75 (CA) |
| 37    | 747-05040A     | 1   | /P    | Rod, Support, Fuel Tank               |
| 38    | 951-10589      | 1   | /P    | Cnstr, Carbon, 5 Gallon (CA)          |
| 39    | 951-10590      | 1   | /P    | Filter, Vent, Canister (CA)           |
| 40    | 951-10610      | 1   | /P    | Bracket, Adapter, Canister (CA)       |
| 41    | 751-10749      | 1   |       | Hose, Fuel, Low Perm, 3/16 Wht (CA)   |
| 42    | 751-10750-28   | 1   |       | Hose, Fuel, Low Perm, 7/32 Yel (CA)   |
| 43    | 751-10441      | 1   |       | Valve, Rollover Grommet (CA)          |
| 44    | 735-04081      | 1   |       | Grommet, Rubber, 23.0 ID (CA)         |
| 45    | 751-0603A      | 1   | /P    | Cap, Fuel                             |
| 45    | 951-10947      | 1   | /P    | Cap, Fuel (CA) California models (CA) |
| 46    | 925-2054A      | 1   | /P    | Key, Ignition                         |
| 47    | 735-04170      | 1   |       | Gasket, Fuel Tank                     |
| 48    | 925-0963       | 1   | /P    | Lamp, 12v                             |
| 49    | 731-1999       | 1   |       | Plug, Choke                           |
| 50    | 925-04227B     | 1   | /P    | Module Switch, Ignition               |

LTX1050VT Tractor (2010 & After)  
Fuel Tank, Hood & Dash

Page 46 of 63


| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 51    | 946-04617   | 1   | /P    | Cable, Throttle/Choke, 28"      |
| 52    | 925-04022B  | 1   | /P    | Meter, Indicator                |
| 53    | 725-04258   | 1   | /P    | Switch, Electric PTO, Yellow    |
| 54    | 731-06936   | 1   |       | Plenum, A-Style, B&S Intek Twin |



LTX1050VT Tractor (2010 & After)  
Label Map LTX1050VT

Page 47 of 63

777D13207

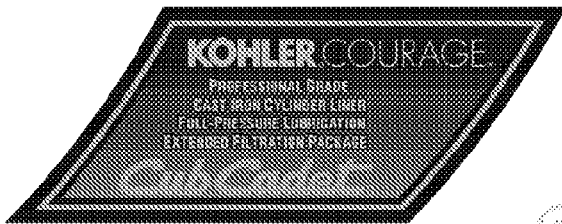

777D13208



777D12864




777I23293



777D12928




777S33233

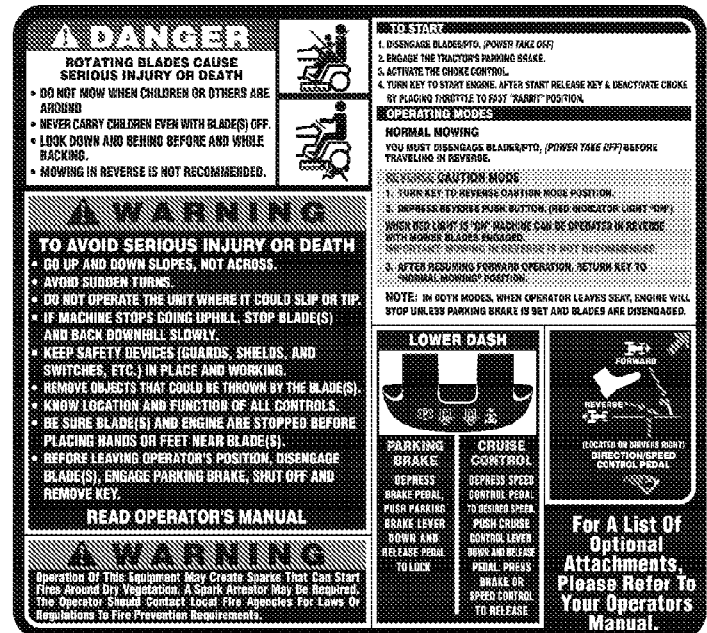


777D12929




777D13983

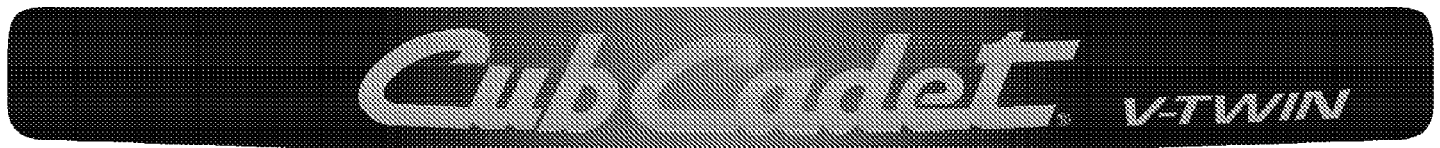

777I23292

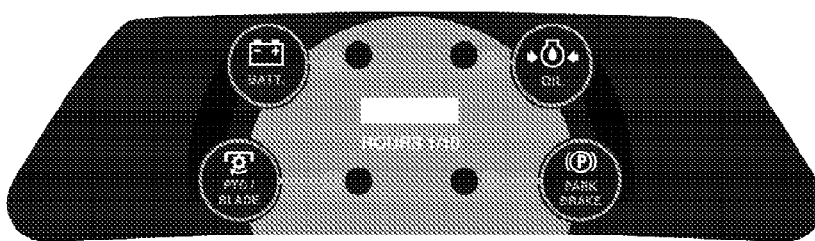

777I23294



777D14176




777D14175




777S30018



777I23150

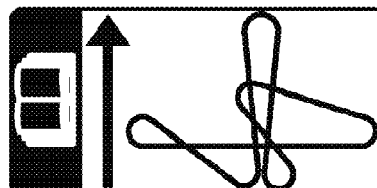

777S23132

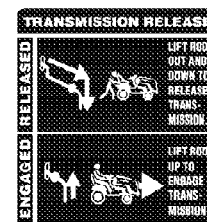

777I23133



777I22679




777S30503



777X44233

| MODEL<br>LTX 1050VT<br>REPLACEMENT PARTS |                |              |           |
|------------------------------------------|----------------|--------------|-----------|
| Use only Cub Cadet genuine factory parts |                |              |           |
| Blades                                   | 842-84033C (2) | Oil Filter   | 85-63064  |
| Lower Drive Belt                         | 854-84287      | Air Filter   | 85-732106 |
| Engine To Deck Belt                      | 854-84288      | Pre-Cleaner  | 85-732303 |
| Deck Solenoid                            | 818-64895A     | Spray Plug   | 755-8335  |
| Ignition Key                             | 725-20246      | Fuel Filter  | 85-601025 |
| Solenoid                                 | 725-84439      | Oil Capacity | 68.8 oz   |


777D13924

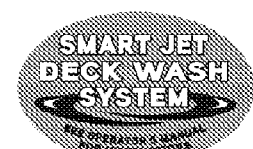

LTX1050VT Tractor (2010 & After)  
Label Map LTX1050VT

Page 48 of 63

| Ref #     | Part Number | Qty | S/P/F | Description                     |
|-----------|-------------|-----|-------|---------------------------------|
| 777D13207 | 777D13207   | 1   |       | LABEL-KOHLER ENG LH CUB CADET   |
| 777D13208 | 777D13208   | 1   |       | LABEL-KOHLER ENG RH CUB CADET   |
| 777D12864 | 777D12864   | 1   |       | LABEL-C LOGO GRILLE C CADET     |
| 777S33233 | 777S33233   | 1   |       | LABEL-FLOORBRD SAFETY HYDRO     |
| 777I23293 | 777I23293   | 1   |       | LABEL-DECK HEIGHT               |
| 777D12928 | 777D12928   | 1   |       | LABEL-LFT SIDE HOOD SCOOP       |
| 777D12929 | 777D12929   | 1   |       | LABEL-RGT SIDE HOOD SCOOP       |
| 777D13983 | 777D13983   | 1   |       | LABEL-FENDER REAR V-TWN C CADET |
| 777I23292 | 777I23292   | 1   |       | LABEL-A STY DASH PNL            |
| 777I23294 | 777I23294   | 1   |       | LABEL-THROTTLE/CHOKE            |
| 777D14176 | 777D14176   | 1   |       | LABEL-LTX 1050VT HYDRO TWN LH   |
| 777D14175 | 777D14175   | 1   |       | LABEL-LTX 1050VT HYDRO TWN RH   |
| 777I23133 | 777I23133   | 1   |       | LABEL-FUEL LEVEL                |
| 777I22679 | 777I22679   | 1   |       | LABEL-CHECK ENG OI              |
| 777D13924 | 777D13924   | 1   |       | LABEL-DECK WASH SYSTEM          |
| 777S23132 | 777I23132   | 1   |       | LABEL-HYDRO RELEASE             |
| 777X44233 | 777X44233   | 1   |       | LABEL-PARTS LIST LTX 1050VT     |
| 777I23150 | 777I23150   | 1   |       | LABEL-BELT ROUTING 50"/54"      |
| 777S30018 | 777S30018   | 1   | /P    | LABEL-DECK SAFETY               |
| 777S30503 | 777S30503   | 1   | /P    | LABEL-DANGER CHUTE              |

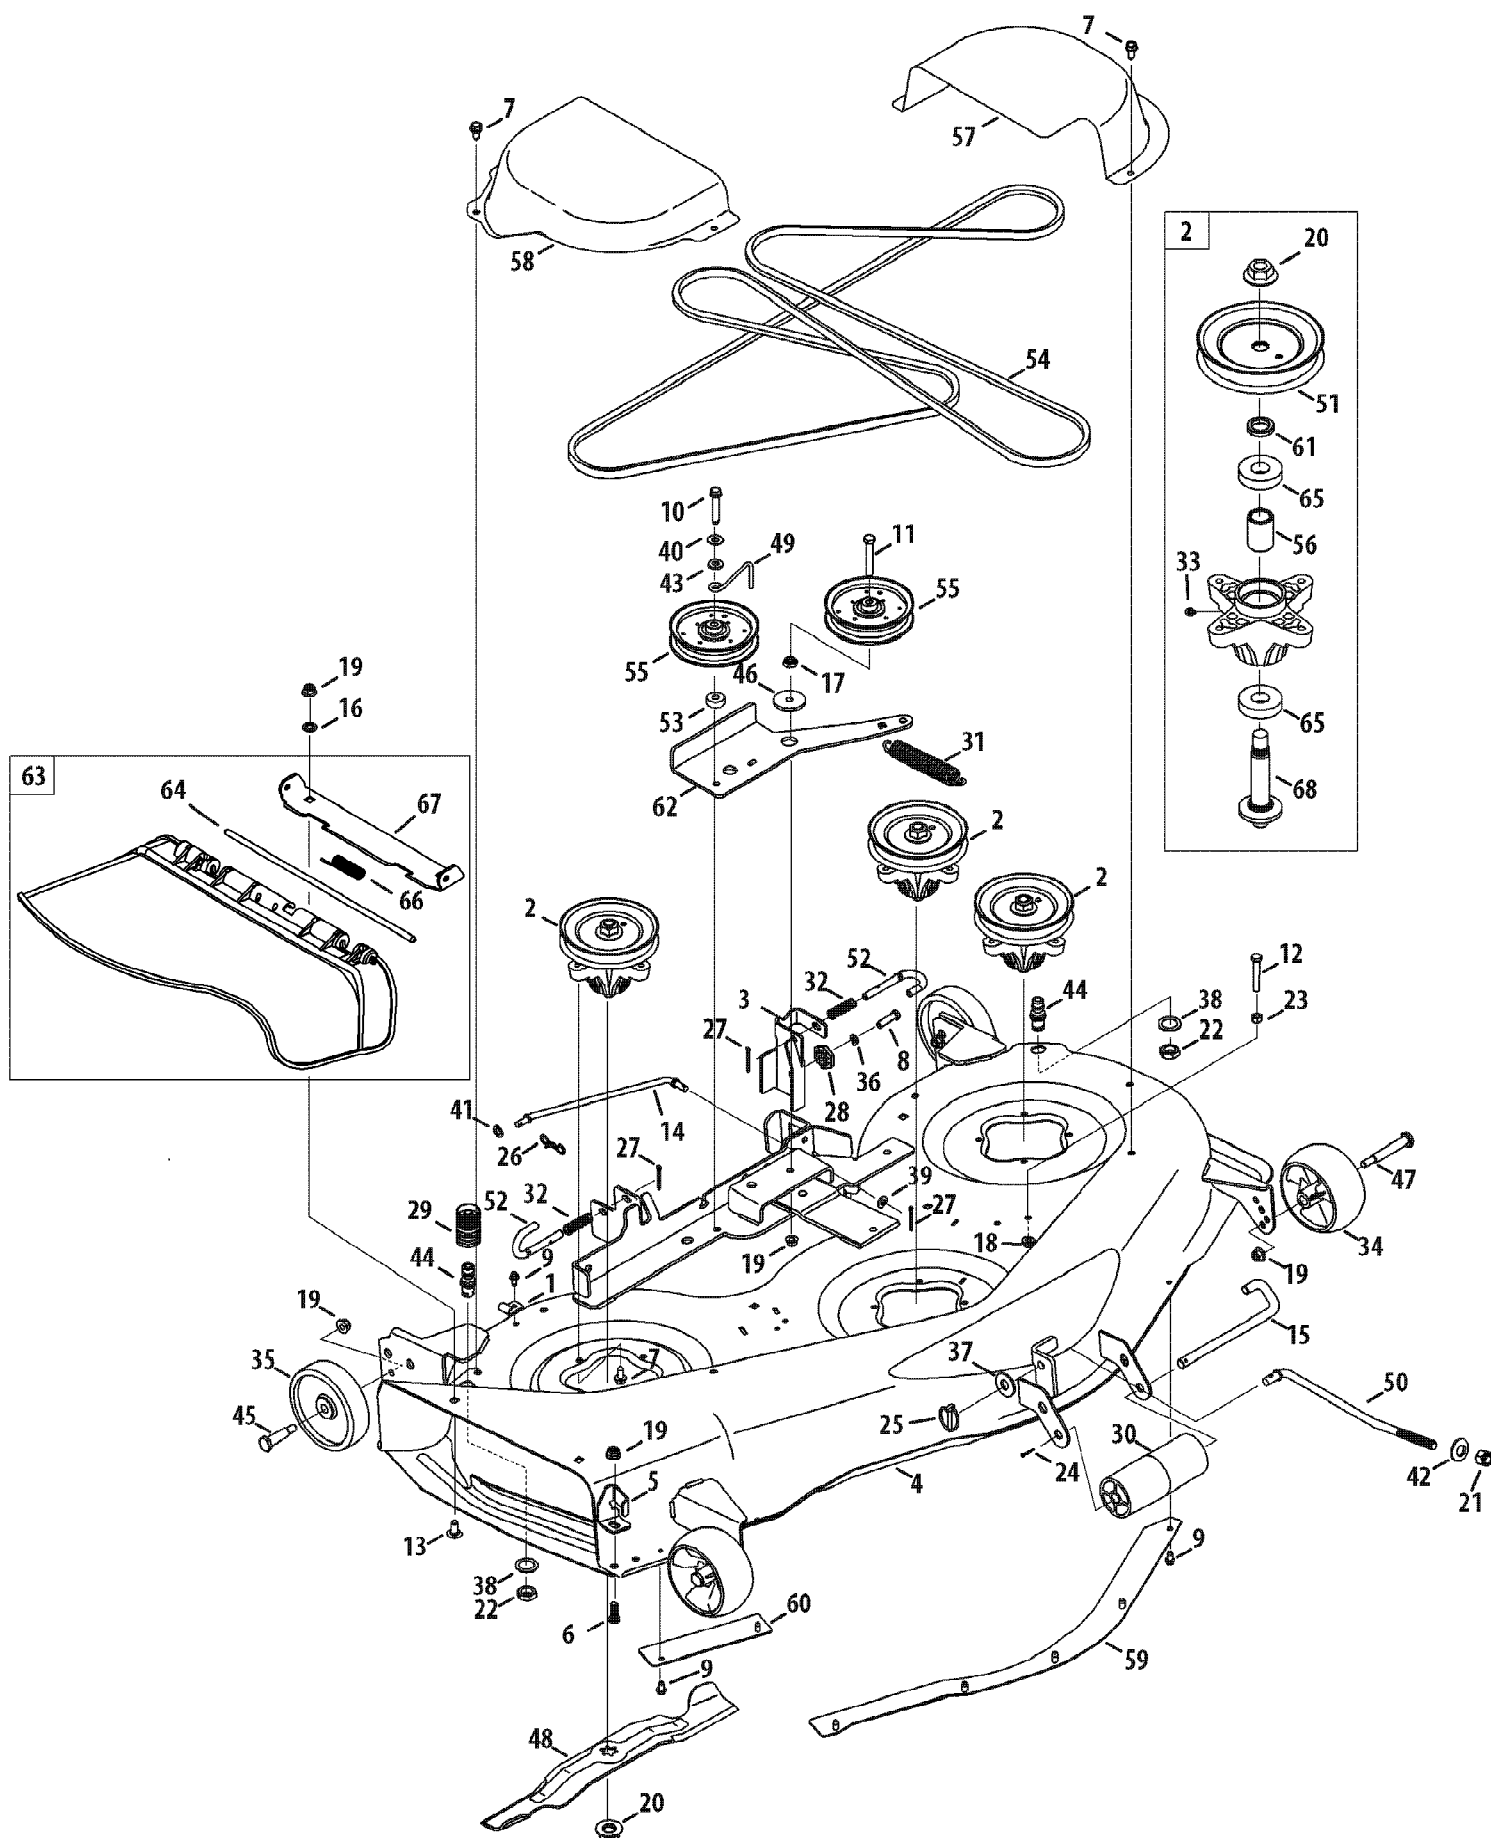

LTX1050VT Tractor (2010 & After)  
Mower Deck 50-Inch


Page 50 of 63

| Ref # | Part Number    | Qty | S/P/F | Description                          |
|-------|----------------|-----|-------|--------------------------------------|
| 1     | 96606          | 1   | /P    | Bracket, Hook, Retainer              |
| 2     | 918-04825B     | 1   | /P    | Spindle Assembly, Pulley, 5.3 Dia.   |
| 3     | 683-0254B-4021 | 1   |       | Bracket Assembly, Deck, Hanger LH    |
| 4     | 983-04648-4021 | 1   | /P    | Deck Assembly, 50"                   |
| 5     | 703-3279-4021  | 1   |       | Stop, Chute, Dfl                     |
| 6     | 710-04095      | 1   |       | Hex Screw, 3/8-16, 1.00, Gr5, Spec   |
| 7     | 710-04484      | 1   |       | Screw, Self-tapping, 5/16-18, .750,  |
| 8     | 710-0528       | 1   | /P    | Hex Screw, 5/16-18, 1.25, Gr5, Std   |
| 9     | 710-0599       | 1   | /P    | Screw, Self-tapping, 1/4-20, 0.500   |
| 10    | 710-1008       | 1   |       | Screw, Self-tapping, 3/8-16, 1.875   |
| 11    | 710-3011       | 1   | /P    | Hex Screw, 3/8-16, 2.25, Gr5, Std    |
| 12    | 710-3103       | 1   | /P    | Hex Screw, 5/16-18, 2.00, Gr5, Std   |
| 13    | 710-3178       | 1   | /P    | Bolt, Carriage, 3/8-16, 0.75, Gr1    |
| 14    | 711-05078      | 1   |       | Rod, Support, Deck                   |
| 15    | 711-3314       | 1   | S     | Roller Pin-1/2 Dia. x 7.31           |
| 16    | 712-0229       | 1   |       | Nut, Push, 3/8                       |
| 17    | 912-0240       | 1   | /P    | Nut, Jam, 7/16-20, Gr2               |
| 18    | 712-04063      | 1   | /P    | Nut, Flange Lock, 5/16-18, Nylon     |
| 19    | 712-04065      | 1   | /P    | Nut, Flange Lock, 3/8-16, Nylon      |
| 20    | 712-0417A      | 1   | /P    | Nut, Flange, 5/8-18                  |
| 21    | 712-04243      | 1   |       | Nut, 1/2-13                          |
| 22    | 912-0641       | 1   | /P    | Nut, Hex, M16-1.5                    |
| 23    | 912-3010       | 1   | /P    | Nut, Hex, 5/16-18, Gr5               |
| 24    | 914-0111       | 1   | /P    | Pin, Cotter, 3/32, 1.0               |
| 25    | 753-04070      | 1   | /P    | Pin, Lynch, .1875                    |
| 26    | 714-04043      | 1   |       | Pin, Cotter, Bow-Tie                 |
| 27    | 914-0470       | 1   | /P    | Pin, Cotter, 1/8 x 1.25              |
| 28    | 917-04074      | 1   | /P    | Gear, Deck, Adjustment               |
| 29    | 921-04041      | 1   | /P    | Coupler, Water                       |
| 30    | 731-05679      | 1   |       | Roller, Front                        |
| 31    | 732-04649      | 1   |       | Spring, Extension, 1.0 OD x 6.10     |
| 32    | 732-04652      | 1   |       | Spring, Compression, .535 OD x 1.751 |
| 33    | 937-3000       | 1   | /P    | Lube Fitting, 3/16                   |
| 34    | 734-04155      | 1   |       | Wheel, Deck, 5.0 Dia. Ball           |
| 35    | 734-0973       | 1   | /P    | Wheel, Deck 5.0 x 1.38               |
| 36    | 936-0119       | 1   | /P    | Washer, Lock, 5/16, Regular Duty     |
| 37    | 936-0179       | 1   | /P    | Washer, Flat, .531 x 1.25 x .100     |
| 38    | 736-0225       | 1   | /P    | Washer, Lock, 5/8, Int Tooth         |
| 39    | 936-0275       | 1   | /P    | Washer, Flat, .344 x .688 x .065     |
| 40    | 936-0300       | 1   | /P    | Washer, Flat, .406 x .875 x .059     |
| 41    | 936-0314       | 1   | /P    | Washer, Thrust, .375 x .70 x .030    |
| 42    | 736-0317       | 1   | /P    | Washer, Bell, .63 x 1.25 x .18       |
| 43    | 736-3010       | 1   | /P    | Washer, Flat, .407 x .812 x .135     |
| 44    | 737-04003D     | 1   | /P    | Port, Water                          |
| 45    | 938-0373       | 1   | /P    | Bolt, Shoulder, .496 x 1.525, 3/8-16 |
| 46    | 738-04162A     | 1   | /P    | Spacer, Shoulder, .8840 x .190       |
| 47    | 938-3056       | 1   | /P    | Bolt, Shoulder, .496 x 2.50, 3/8-16  |
| 48    | 942-04053C     | 1   | /P    | Blade, 17.90 Star 2 In 1             |
| 49    | 747-04530      | 1   |       | Rod, Keeper,                         |
| 50    | 747-05067A     | 1   | /P    | Rod, Lift, Deck, Front, 11.7         |
| 51    | 756-04216      | 1   |       | Pulley, Deck, 5.39 Dia.              |
| 52    | 747-1116       | 1   | /P    | Rod, Deck Release                    |
| 53    | 750-3119       | 1   | /P    | Spacer, .406 Id x 1.00 OD x .38      |

LTX1050VT Tractor (2010 & After)  
Mower Deck 50-Inch

Page 51 of 63

| Ref # | Part Number     | Qty | S/P/F | Description                          |
|-------|-----------------|-----|-------|--------------------------------------|
| 54    | 954-04240       | 1   | /P    | Belt, V-Type                         |
| 55    | 756-04129B      | 1   | /P    | Pulley, Idler, 4.25"Dia.             |
| 56    | 750-1096        | 1   |       | Spacer, .800 x 1.100 x 1.5300        |
| 57    | 783-04399-4021  | 1   |       | Cover, Belt, LH 50"                  |
| 58    | 783-04400-4021  | 1   |       | Cover, Belt, Rh 50"                  |
| 59    | 783-04414A-4021 | 1   |       | Skirt, Center, 50"                   |
| 60    | 783-04415-4021  | 1   |       | Skirt, RH, 50"                       |
| 61    | 748-0434        | 1   |       | Spacer, .750 x 1.150 x .230          |
| 62    | 783-06361-0637  | 1   | S     | Bracket, Idler, Arm                  |
| 63    | 631-04070A      | 1   | /P    | Chute Assembly                       |
| 64    | 711-04565       | 1   |       | Pin, Hinge, .3175 Dia. x 14.06 ,1    |
| 65    | 941-0919        | 1   | /P    | Bearing, Ball, .787id x 1.85 Odx.551 |
| 66    | 732-04372       | 1   |       | Spring, Torsion, .44 I.D. x 2.0,     |
| 67    | 783-05030       | 1   |       | Bracket, Chute 50/54"                |
| 68    | 738-0976        | 1   |       | Shaft, Spindle, 4.1250               |

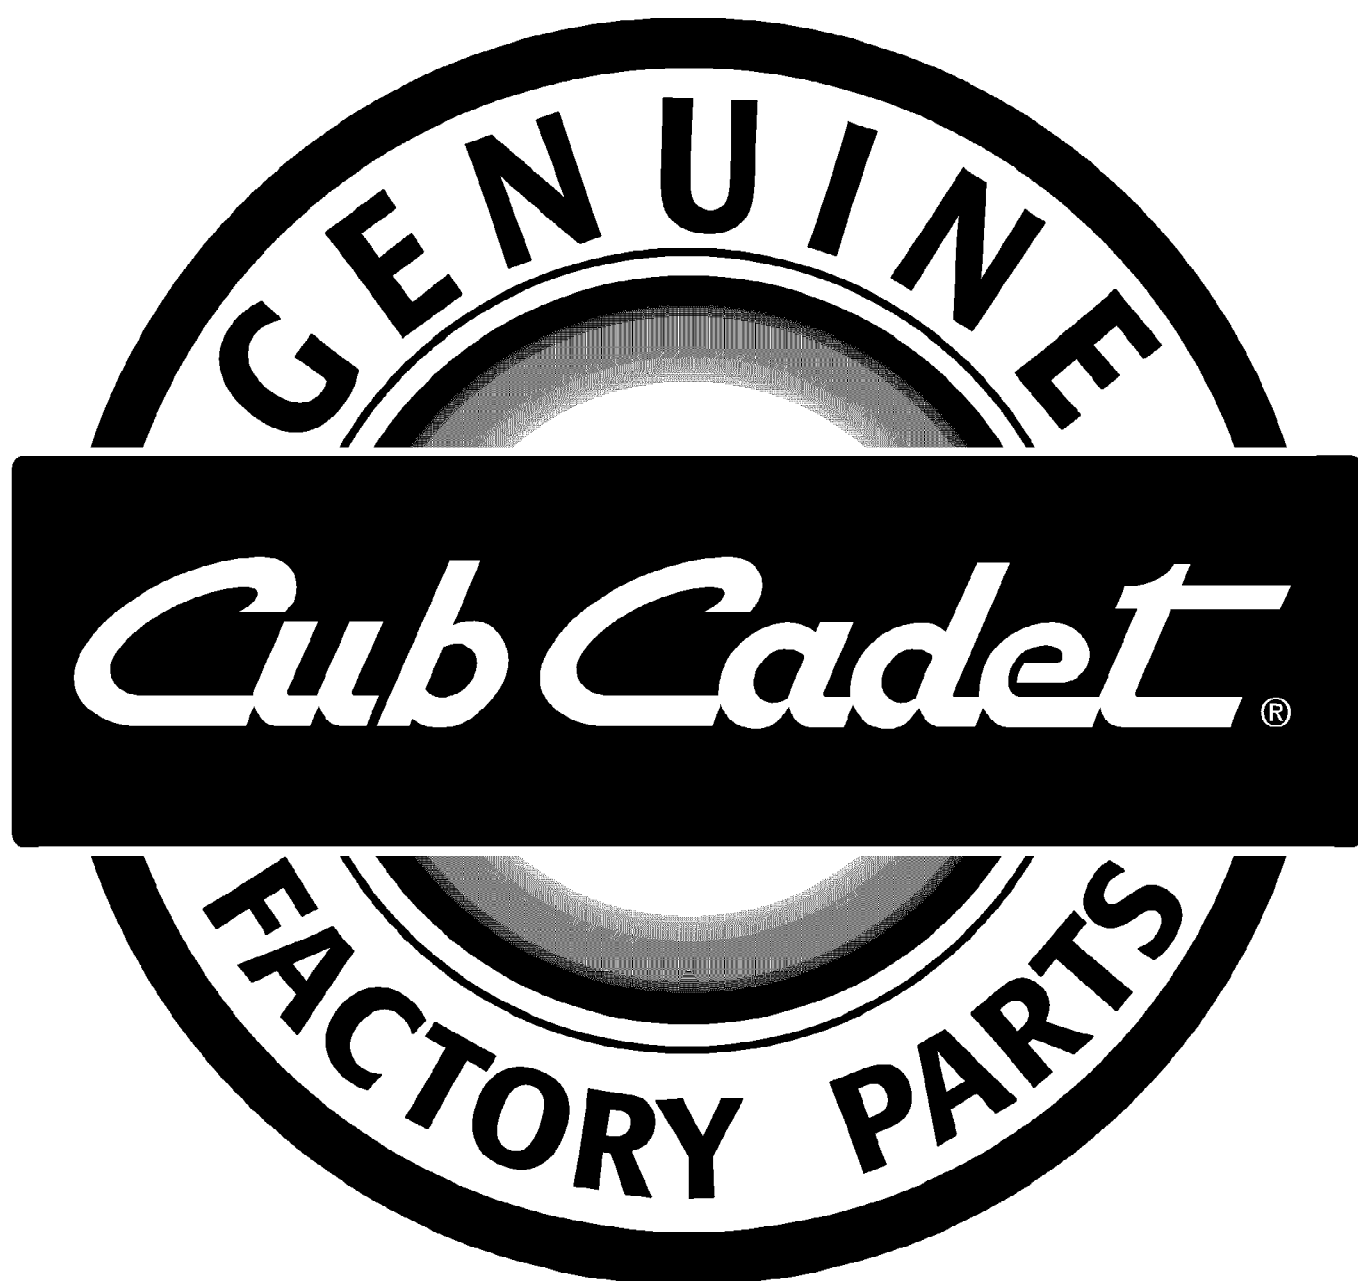




LTX1050VT Tractor (2010 & After)  
Quick Reference LTX1050VT

Page 53 of 63

| Ref # | Part Number  | Qty | S/P/F | Description            |
|-------|--------------|-----|-------|------------------------|
|       | 759-3336     | 1   | /P    | Spark Plug             |
|       | BS-792303    | 1   | /P    | Pre-Cleaner            |
|       | BS-792105    | 1   | /P    | Air Filter             |
|       | BS-492932S   | 1   | /P    | Oil Filter             |
|       | BS-691035    | 1   | /P    | Fuel Filter            |
|       | BS-691060    | 1   | /P    | Ignition Module        |
|       | BS-794360    | 1   | /P    | Voltage Regulator      |
|       | BS-808656    | 1   | /P    | Fuel Pump              |
|       | BS-792455    | 1   | S     | Carb Repair Kit        |
|       | BS-841546    | 1   |       | Carburetor Solenoid    |
|       | 954-04207    | 1   | /P    | Drive Belt (Trans)     |
|       | 954-04240    | 1   | /P    | P.T.O. / Deck Belt     |
|       | 942-04053C   | 1   | /P    | Blades                 |
|       | 712-0417A    | 1   | /P    | Blade Nut              |
|       | 918-04825B   | 1   | /P    | Spindle Assy. w/Pulley |
|       | 734-04155    | 1   |       | Deck Wheels (Front)    |
|       | 734-0973     | 1   | /P    | Deck Wheels (Back)     |
|       | 921-04041    | 1   | /P    | Water Nozzle Adapter   |
|       | 923-0448A    | 1   | /P    | Ball Joints            |
|       | 725-04363    | 1   |       | Brake Switch           |
|       | 751-0603A    | 1   | /P    | Fuel Cap               |
|       | 725-04439    | 1   |       | Solenoid               |
|       | 925-2054A    | 1   | /P    | Ignition Keys          |
|       | 925-04227B   | 1   | /P    | Ignition Switch Module |
|       | 725-04258    | 1   | /P    | P.T.O. Switch          |
|       | 917-04174A   | 1   | /P    | P.T.O. Clutch          |
|       | 19A40002100  | 1   | /P    | Bagger Attachment      |
|       | 190-193-000  | 1   |       | Mulch Attachment       |
|       | 190-679-101  | 1   |       | Bumper Attachment      |
|       | 490-900-0041 | 1   |       | Deck Gauge Accessory   |

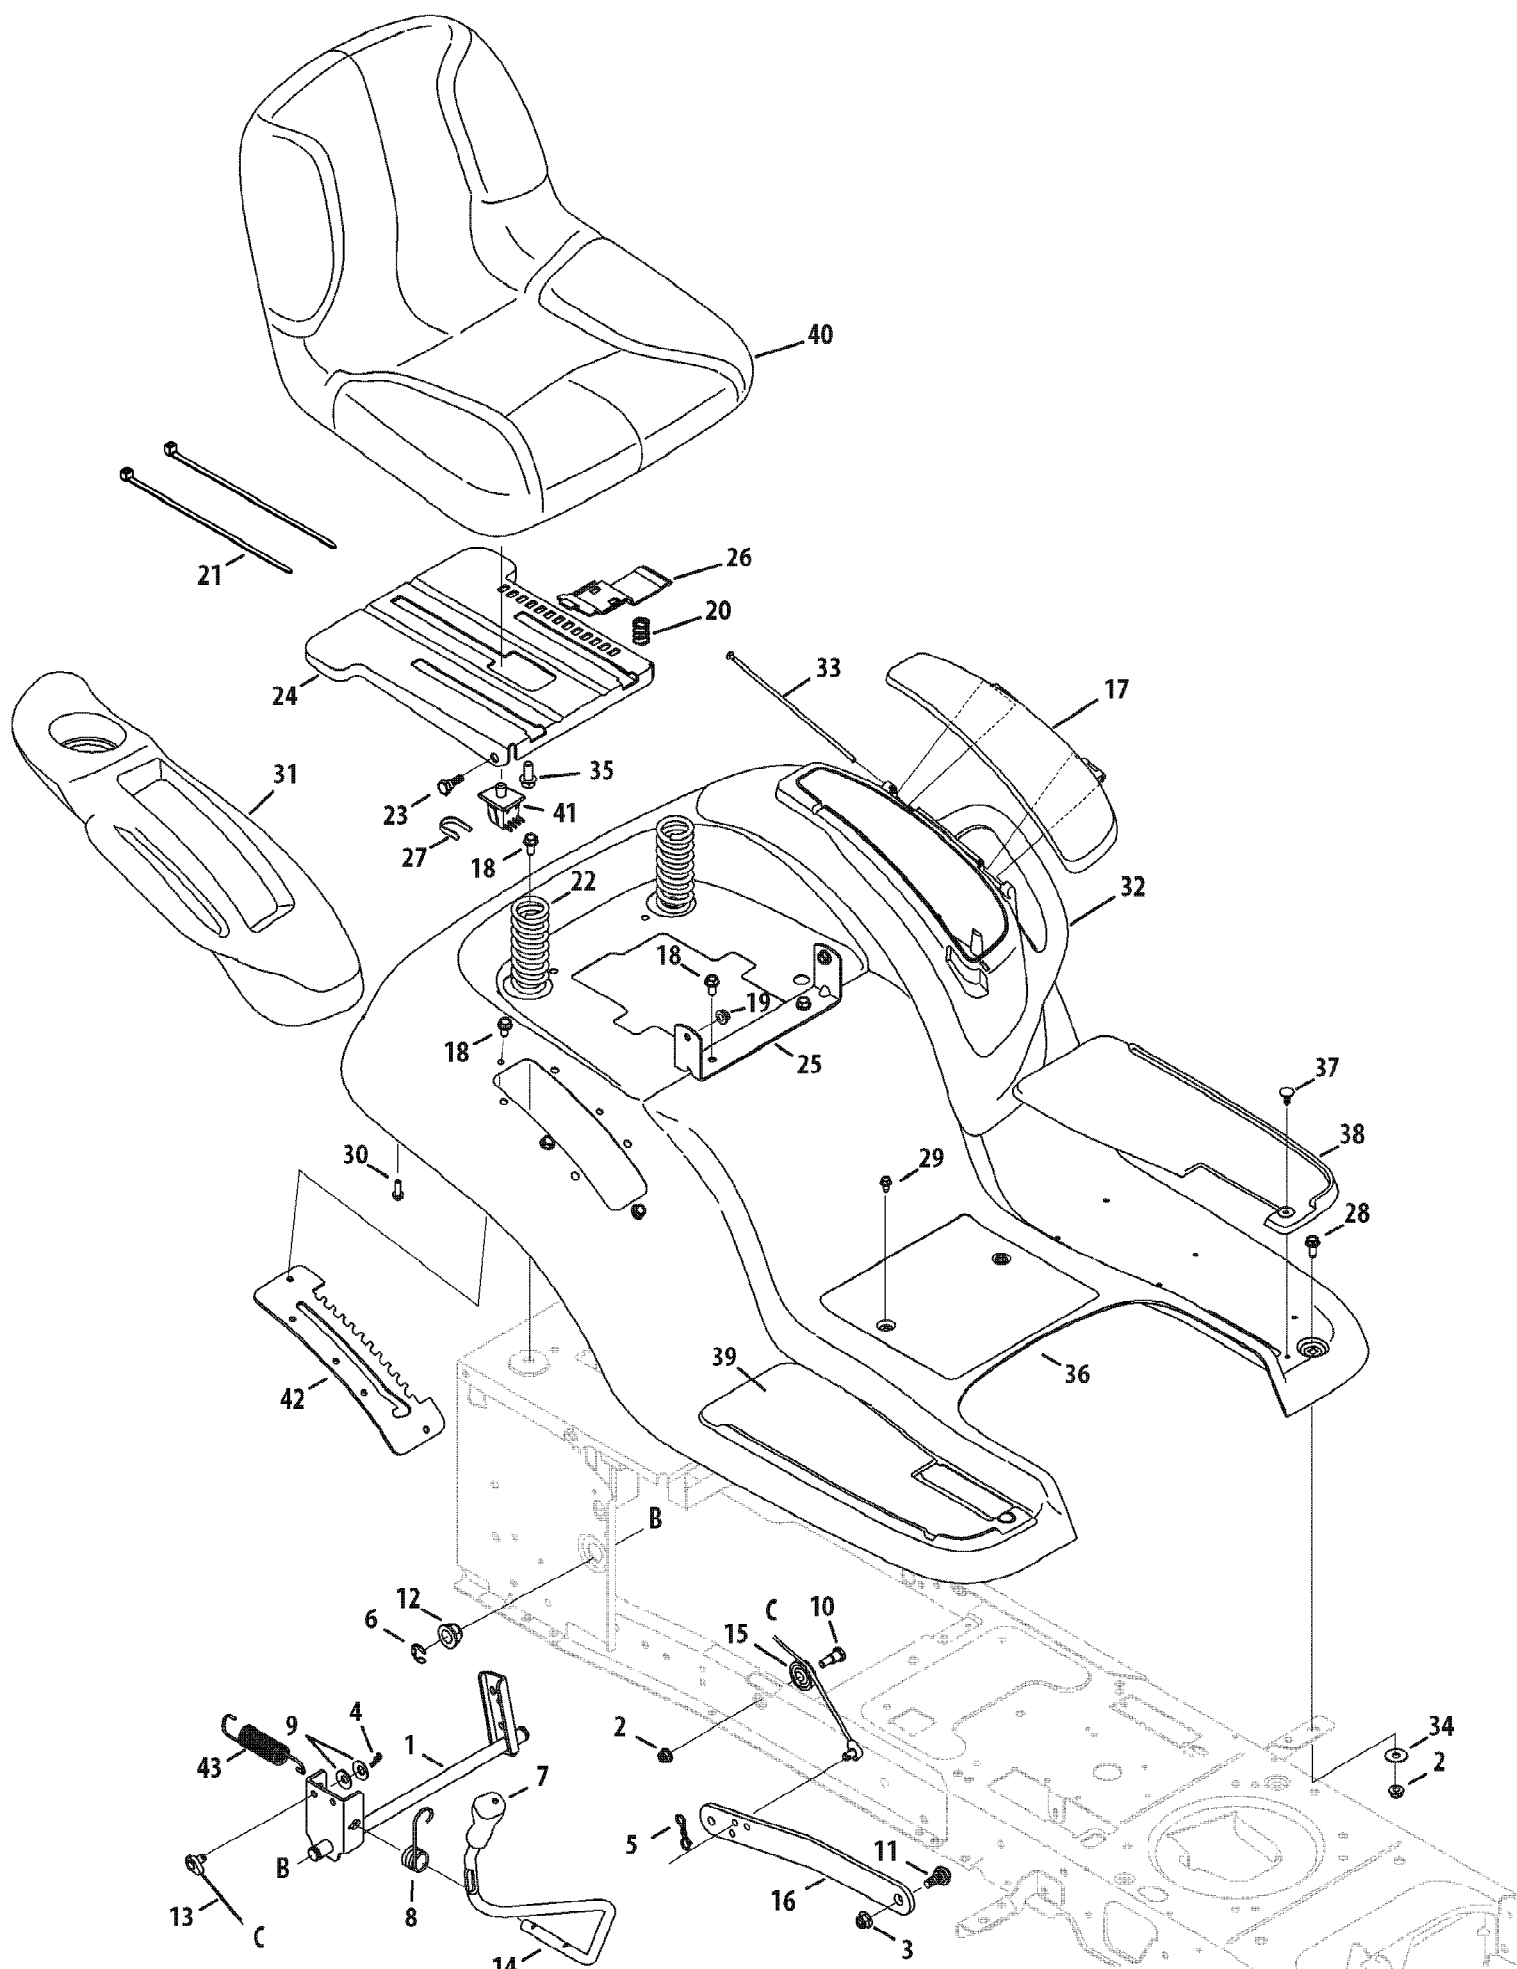


LTX1050VT Tractor (2010 & After)  
Seat, Fender & Lift

Page 55 of 63

| Ref # | Part Number     | Qty | S/P/F | Description                           |
|-------|-----------------|-----|-------|---------------------------------------|
| 1     | 683-04223-0637  | 1   | /P    | Shaft Ass'y, Lift                     |
| 2     | 712-04063       | 1   | /P    | Nut, Flange Lock, 5/16-18, Grf        |
| 3     | 712-04065       | 1   | /P    | Nut, Flange Lock, 3/8-16, Grf         |
| 4     | 914-0104        | 1   | /P    | Pin, Cotter, .072 Dia. x 1.13         |
| 5     | 714-04040       | 1   | /P    | Pin, Cotter, Bow-Tie 72               |
| 6     | 716-0106A       | 1   |       | Ring, E Type, .625 Dia. Shaft         |
| 7     | 720-04139       | 1   |       | Grip, Handle, Cub, .50 ID             |
| 8     | 732-0874        | 1   | /P    | Spring, Torsion                       |
| 9     | 736-0105        | 1   | /P    | Washer, Spring, .401 x .870 x .063    |
| 10    | 738-0138A       | 1   | /P    | Screw, Shoulder, .437 x .470, 5/16-18 |
| 11    | 938-0380        | 1   | /P    | Bolt, Shoulder, .50, 3/8-16           |
| 12    | 941-0225        | 1   | /P    | Bearing, Hex Flange                   |
| 13    | 746-0968        | 1   |       | Cable, Lift, 16.16                    |
| 14    | 747-04962A      | 1   | /P    | Handle, Lift,                         |
| 15    | 756-04331       | 1   |       | Pulley, Roller, Cable                 |
| 16    | 783-05546A-0637 | 1   | /P    | Link, Lift                            |
| 17    | 731-06584       | 1   |       | Door, Cover, Fender                   |
| 18    | 710-04484       | 1   |       | Screw, Self-tapping, 5/16-18, .750,   |
| 19    | 712-3004A       | 1   | /P    | Nut, Flange Lock, 5/16-18, Gr5, Sd Lk |
| 20    | 732-04563       | 1   |       | Spring, Compr', .68 x 1.065 x .055    |
| 21    | 725-0157        | 1   | /P    | Cable, Tie, 3/16 x .05 x 7.4          |
| 22    | 732-04561       | 1   |       | Spring, Compr, 1.71 x 3.735 x .238    |
| 23    | 938-0296        | 1   | /P    | Screw, Shoulder, .437 x .268, 5/16-18 |
| 24    | 783-06049-4021  | 1   |       | Bracket, Mounting, Seat               |
| 25    | 783-06088-4021  | 1   |       | Bracket, Pivot, Seat                  |
| 26    | 783-06050       | 1   |       | Lever, Seat Adjustment                |
| 27    | 783-06448       | 1   |       | Clip, Retaining, Switch               |
| 28    | 710-1260A       | 1   | /P    | Hex Screw, 5/16-18, .75, Gr5, Std     |
| 29    | 710-0599        | 1   | /P    | Screw, Self-tapping, 1/4-20, 0.500,   |
| 30    | 710-0895        | 1   |       | Screw, HL, 1/4-15, 0.750,             |
| 31    | 731-06700       | 1   |       | Cover, Fender, RH                     |
| 32    | 731-06676       | 1   |       | Cover, Fender, LH                     |
| 33    | 747-05039       | 1   |       | Pin, Door                             |
| 34    | 736-3078        | 1   | /P    | Washer, Flat .344 x 1.00 x .063       |
| 35    | 710-04482       | 1   |       | Hex Flange Screw, 3/8/16, .875, Gr5   |
| 36    | 783-06118-4021  | 1   |       | Fender, Cub Hydro                     |
| 37    | 726-3046        | 1   | /P    | Clip, Ratchet, .250 Dia               |
| 38    | 735-04137       | 1   |       | Pad, Foot, LH                         |
| 39    | 735-04139       | 1   |       | Pad, Foot, RH                         |
| 40    | 757-04131       | 1   |       | Seat, High Back Cloth, Cub            |
| 41    | 925-05013       | 1   | /P    | Switch, Seat                          |
| 42    | 783-06181-0637  | 1   |       | Bracket, Lift                         |
| 43    | 732-0934        | 1   |       | Spring, Extension, 1.15 OD x 5.99     |

LTX1050VT Tractor (2010 & After)  
Steering

Page 56 of 63

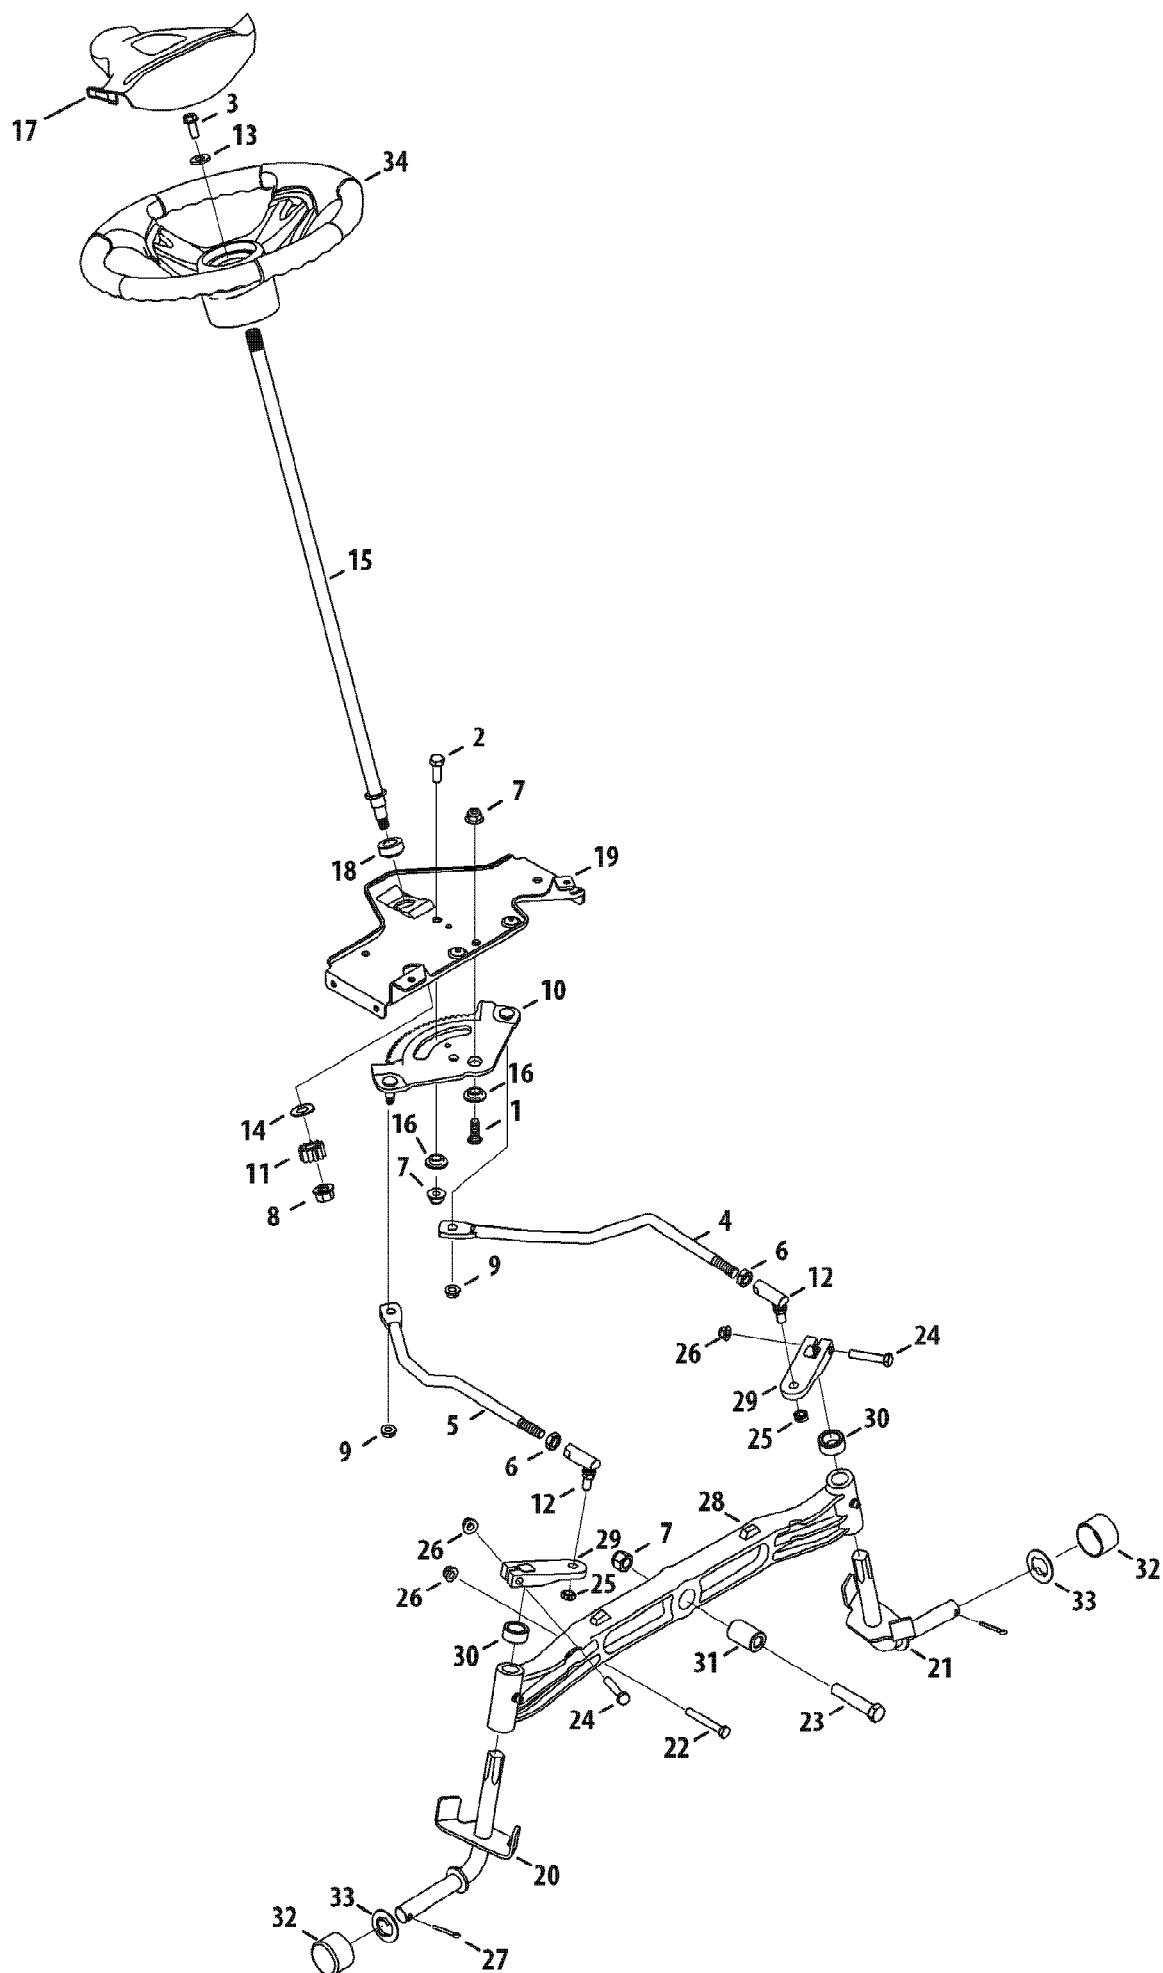

LTX1050VT Tractor (2010 & After)  
Steering

Page 57 of 63

| Ref # | Part Number    | Qty | S/P/F | Description                           |
|-------|----------------|-----|-------|---------------------------------------|
| 1     | 710-04095      | 1   |       | Hex Screw, 3/8-16, 1.00, Gr5, Spec    |
| 2     | 710-0514       | 1   | /P    | Hex Screw, 3/8-16, 1.00, Gr5, Std     |
| 3     | 710-0650       | 1   | /P    | Hex Screw, 5/16-18, .875, Gr5, Lock   |
| 4     | 711-04998      | 1   |       | Link, Drag LH                         |
| 5     | 711-04999      | 1   |       | Link, Drag RH                         |
| 6     | 912-0240       | 1   | /P    | Nut, Jam, 7/16-20, Gr2                |
| 7     | 712-04065      | 1   | /P    | Nut, Flange Lock, 3/8-16, Grf,        |
| 8     | 712-0459       | 1   | /P    | Nut, Flange Lock, 7/16-20, Grb, Lock  |
| 9     | 712-3004A      | 1   | /P    | Nut, Flange Lock, 5/16-18, Gr5, Sd Lk |
| 10    | 717-1550F      | 1   | /P    | Gear, Steering, 11/90 Ratio           |
| 11    | 717-1554       | 1   |       | Gear, Pinion, Steering                |
| 12    | 923-0448A      | 1   | /P    | Ball Joint, 7/16-20, Lock             |
| 13    | 936-3004       | 1   | /P    | Washer, Flat, .406 x .875 x .105      |
| 14    | 736-3084       | 1   | /P    | Washer, Flat, .51 x 1.12 x .06        |
| 15    | 738-04262      | 1   |       | Shaft, Steering, .625 OD x 25, Cub    |
| 16    | 738-04363      | 1   |       | Spacer, Shoulder, .385x 1.25 x .3025  |
| 17    | 731-04532B     | 1   |       | Cover, Steering Wheel, Cub Cadet      |
| 18    | 741-04237B     | 1   | /P    | Bearing, Flange, Hex 5/8 Pm           |
| 19    | 783-06043-0637 | 1   |       | Bracket, Support, Steering            |
| 20    | 638-04022-0637 | 1   |       | Axle Ass'y, RH .750 Dia. (46" Deck)   |
| 21    | 638-04028-0637 | 1   |       | Axle Ass'y, LH .750 Dia. (46" Deck)   |
| 22    | 710-0395       | 1   | /P    | Hex Screw, 5/16-18, 2.25, Gr5, Std    |
| 23    | 710-0859       | 1   | /P    | Hex Screw, 3/8-16, 2.50, Gr5, Std     |
| 24    | 710-3180       | 1   | /P    | Hex Screw, 5/16-18, 1.75, Gr5, Std    |
| 25    | 912-0214       | 1   | /P    | Nut, Hex Lock, 3/8-24, Grb            |
| 26    | 712-04063      | 1   | /P    | Nut, Flange Lock, 5/16-18, Grf        |
| 27    | 714-0162       | 1   | /P    | Pin, Cotter, 5/32, 1.25               |
| 28    | 719-04413A     | 1   |       | Axle, Pivot Bar, Cast                 |
| 29    | 748-04065-0637 | 1   | /P    | Steering, Block                       |
| 30    | 748-04068      | 1   |       | Spacer, .71 ID x .125 OD x .56        |
| 31    | 750-05280      | 1   |       | Spacer, .385 x 1.00 x 1.5075          |
| 32    | 731-05674      | 1   | /P    | Cap, Bumper                           |
| 33    | 736-04228A     | 1   |       | Washer, Flat, .350 x 1.559 x .062     |
| 34    | 631-04008A     | 1   | /P    | Wheel, Steering, 3 Spoke, Softgrip    |





LTX1050VT Tractor (2010 & After)  
Transmission, Hydrostatic

Page 59 of 63

| Ref # | Part Number | Qty | S/P/F | Description                        |
|-------|-------------|-----|-------|------------------------------------|
| 1     | HG-70467    | 1   |       | Main Housing Assembly              |
| 1     | N/A         | 1   |       | Main Housing, Machined             |
| 1     | N/A         | 1   |       | Bushing ,865 x 985 x .790          |
| 2     | HG-70483    | 1   | /P    | Main Housing Assembly              |
| 2     | N/A         | 1   |       | Main Housing, Machined             |
| 2     | N/A         | 1   |       | Bushing ,865 x 985 x .790          |
| 2     | N/A         | 1   |       | Bushing 624 x 719 x .562           |
| 3     | HG-70477    | 1   |       | Center Section Assembly            |
| 3     | N/A         | 1   |       | Center Section Machined            |
| 3     | N/A         | 1   |       | Bushing. 707 x .788 x .591         |
| 4     | HG-51048    | 1   | /P    | Swashplate, Trunnion Machined      |
| 5     | HG-70331    | 1   | /P    | Block - Assembly                   |
| 5     | N/A         | 1   |       | Block - Cylinder                   |
| 5     | N/A         | 1   |       | Piston                             |
| 5     | N/A         | 1   |       | Spring, Compression                |
| 5     | N/A         | 1   |       | Washer - Thrust                    |
| 7     | HG-51190    | 1   | /P    | Hex Flange Screw 1/4-20 x-1,25     |
| 9     | HG-51062    | 1   | /P    | Shaft, Input                       |
| 10    | HG-2000022  | 1   | /P    | Ring - Retaining                   |
| 11    | HG-50951    | 1   | /P    | Spacer                             |
| 12    | HG-50329    | 1   | /P    | Ring - Retaining                   |
| 13    | HG-51161    | 1   | /P    | Seal Lip .67 x 1.58 x .276         |
| 14    | HG-50315    | 1   |       | Ball Bearing 17mm Id x 40mm Od     |
| 16    | HG-51064    | 1   |       | Bolt. Flange 5/16-24 x .94 (Patch) |
| 17    | HG-51140    | 1   | /P    | Lip Seal 18 x 32 x 7               |
| 18    | HG-51119    | 1   | /P    | Arm Control                        |
| 19    | HG-50551    | 1   | S     | Bearing 30x52 x 13 Thrust          |
| 24    | HG-50966    | 1   |       | Shaft Motor                        |
| 27    | HG-51130    | 1   |       | Gear - Pinnion 13t                 |
| 28    | HG-51129    | 1   |       | 10t/48t Gear                       |
| 29    | HG-51043    | 1   | /P    | Gear Jot Jackshaft                 |
| 30    | HG-51044    | 1   |       | 60t Bull Gear                      |
| 31    | HG-51088    | 1   | /P    | Sleeve Bearing .75 x 1.750 x .625  |
| 32    | HG-51089    | 1   | /P    | Sleeve Bearing .75 x 1.575 x .625  |
| 33    | HG-44875    | 1   | /P    | Washer 3/4 Id x 1-1/2 Od x .13 Thk |
| 34    | HG-51066    | 1   | /P    | Lip Seal Axle Seal                 |
| 35    | HG-51079    | 1   | /P    | Shaft Axle .75 x 11.39 (Dd R. H. ) |
| 36    | HG-51078    | 1   | /P    | Shaft Axle .75 x 17.99 (Dd, L, H.) |
| 37    | HG-44096    | 1   | S     | Miter Gear (Splined)               |
| 38    | HG-44097    | 1   |       | Miter Gear 15t (0.5 Id)            |
| 39    | HG-50146    | 1   |       | Shaft                              |
| 40    | HG-44871    | 1   | /P    | Ring, Spiral Retaining             |
| 41    | HG-51083    | 1   |       | Pin, Jackshaft                     |
| 42    | HG-51100    | 1   |       | Magnet, Ring                       |
| 43    | HG-51136    | 1   |       | Spring, Bypass                     |
| 44    | HG-50016    | 1   |       | Hydro Mtg Screw 3/8-24 x 2.5       |
| 45    | HG-51581    | 1   |       | Bottom, Filter                     |
| 46    | HG-51580    | 1   |       | Base Filter W/ Poppet              |
| 47    | HG-51091    | 1   |       | Actuator Bypass                    |
| 48    | HG-51098    | 1   |       | Rod Bypass Actuator                |
| 49    | HG-51135    | 1   |       | Arm, Bypass                        |
| 50    | HG-51116    | 1   | /P    | Retaining Ring 0.250 External      |
| 51    | HG-51081    | 1   | /P    | Seal Lip .741 x .250 x .250 Tc     |

LTX1050VT Tractor (2010 & After)  
Transmission, Hydrostatic

Page 60 of 63

| Ref # | Part Number     | Qty | S/P/F | Description                        |
|-------|-----------------|-----|-------|------------------------------------|
| 52    | HG-44371        | 1   | /P    | Flat Washer 5/8 Id x 1.0 Od x .05  |
| 53    | HG-44145        | 1   |       | Retaining Ring                     |
| 54    | HG-51071        | 1   |       | Bearing, Center Block              |
| 55    | HG-2003014      | 1   | /P    | Spring - Helical Compression       |
| 56    | HG-2003017      | 1   | /P    | Washer                             |
| 58    | HG-62589        | 1   | /P    | Kit, Brake Yoke                    |
| 58    | N/A             | 1   |       | Brake Yoke                         |
| 58    | N/A             | 1   |       | Sq. Hd, Bolt 5/16-24 Ribbed        |
| 59    | HG-51072        | 1   | /P    | Rotor, Brake                       |
| 60    | 917-0678        | 1   | /P    | Brake Puck                         |
| 61    | 917-0682        | 1   | /P    | Puck Plate                         |
| 62    | 941-0343        | 1   | /P    | Brake Actuating Pin                |
| 63    | HG-51146        | 1   |       | Hex Screw 1/4-20 x 2 w/ Patch      |
| 65    | HG-23711        | 1   |       | Spacer                             |
| 66    | HG-70896        | 1   |       | Kit, Spring                        |
| 67    | HG-44138        | 1   |       | So. Hd, Bolt 5/16-24- Ribbed       |
| 68    | HG-44094        | 1   | /P    | Arm, Brake                         |
| 69    | 912-0273        | 1   | /P    | Slotted Hex Nut 5/16-24            |
| 70    | 914-0507        | 1   | /P    | Cotter Pin 3/32 x 3/4              |
| 71    | HG-50919        | 1   | /P    | Comp. Spring Brake Anti-Drag       |
| 72    | HG-50132        | 1   | /P    | Washer, Ht .5 I. D. x 1 OD, x .032 |
| 73    | 736-0371        | 1   | /P    | Flat Washer, 11/32 ID x 7/8 OD     |
| 74    | HG-70719        | 1   | /P    | Kit, Seal                          |
| 74    | N/A             | 1   |       | Oil, Seal 625 x Lo x .25           |
| 74    | N/A             | 1   |       | Ring, Ret-Star Washer              |
| 74    | N/A             | 1   |       | Bulletin, Shaft Seal               |
| 75    | HG-51084        | 1   | /P    | Check Plug Assem, .027 Washer      |
| 83    | HG-9004800-2506 | 1   | /P    | Pin, Standard Headless             |
| 84    | HG-51143        | 1   | /P    | Fitting, 5/16 Sae 5/32 Tube        |
| 85    | HG-51147        | 1   |       | Hose, Expansion Tank               |
| 87    | HG-51251        | 1   |       | Cap,. Vent                         |
| 88    | HG-50653        | 1   | /P    | Bolt, Self Tapping 10-32 x 112     |
| 94    | HG-44147        | 1   |       | Ball Bearing .62 Id x 1.38 x 44    |
| 95    | HG-50837        | 1   |       | Cap Screw, 5/16-24 x 1-112         |
| 96    | HG-51200        | 1   |       | Spacer, Locating                   |
| 97    | HG-50870        | 1   |       | Screw, Sfhcs                       |
| 98    | HG-51120        | 1   |       | Arm, Return                        |
| 99    | HG-51097        | 1   |       | Puck, Adjusting                    |
| 100   | HG-51122        | 1   |       | Washer, .325 OD x 1.6 ID x .150    |
| 101   | HG-51131        | 1   | /P    | Spring, Extension                  |
| 102   | HG-51123        | 1   |       | Spacer, .56 x .26 x .87            |
| 103   | HG-51223        | 1   |       | Bracket, Torque                    |
| 107   | HG-51134        | 1   |       | Deflector                          |
| 108   | HG-51069        | 1   |       | Washer, Motor Shaft .71 Id 1.15 Od |
| 109   | HG-9005110-5600 | 1   | /P    | Plug, SAE #6                       |
| 110   | HG-50868        | 1   |       | Torx Head Screw, 5/16-18           |
| 111   | HG-51144        | 1   |       | O-Ring, .07 x .301 ID              |
| 113   | HG-51179        | 1   |       | Bracket, Support Expansion Tank    |
| 114   | HG-51184        | 1   | /P    | Spring Guide                       |
| 116   | HG-51196        | 1   |       | Silicon Sponge                     |
| 120   | HG-70759        | 1   |       | Center Section - Bypass Assm       |
| 120   | N/A             | 1   |       | Center Section Machined            |
| 120   | N/A             | 1   |       | Base Filter w/ Poppet              |


LTX1050VT Tractor (2010 & After)  
Transmission, Hydrostatic

Page 61 of 63

| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 120   | N/A         | 1   |       | Check Plug Assembly             |
| 120   | N/A         | 1   |       | Spring Bypass                   |
| 120   | N/A         | 1   |       | Actuator Bypass                 |
| 120   | N/A         | 1   |       | Deflector                       |
| 120   | N/A         | 1   |       | Bottom, Filter                  |
| 120   | N/A         | 1   |       | Bushing, .707 x .788 x .591     |
| 121   | HG-70756    | 1   | /P    | Filter Assembly                 |
| 121   | N/A         | 1   |       | Bottom Filter                   |
| 121   | N/A         | 1   |       | Base Filter w/ Poppet           |
| 121   | N/A         | 1   |       | Spring Bypass                   |
| 121   | N/A         | 1   |       | Actuator Bypass                 |
| 121   | N/A         | 1   |       | Deflector                       |
| 128   | HG-70503    | 1   | /P    | Kit, Expansion Tank             |
| 128   | N/A         | 1   |       | Tank, Expansion                 |
| 128   | N/A         | 1   |       | Cap, Vent                       |
| 128   | N/A         | 1   |       | Bolt, Self Tapping 10-32 x 1/2  |
| 128   | N/A         | 1   |       | Bracket, Support Expansion Tank |
| 128   | N/A         | 1   |       | Silicon-Sponge 112 x 1/2 x 3/16 |
| 129   | HG-51252    | 1   |       | Cap, Expansion Tank Shipping    |
|       | HG-50928    | 1   | /P    | Sealant Not Shown               |
|       | HG-70463    | 1   | /P    | Seal, O-Ring Kit Not Shown      |
|       |             | 1   |       | 20w-50 Oil (78.8 oz) Not Shown  |

LTX1050VT Tractor (2010 & After)  
Wheels, Front & Rear

Page 62 of 63

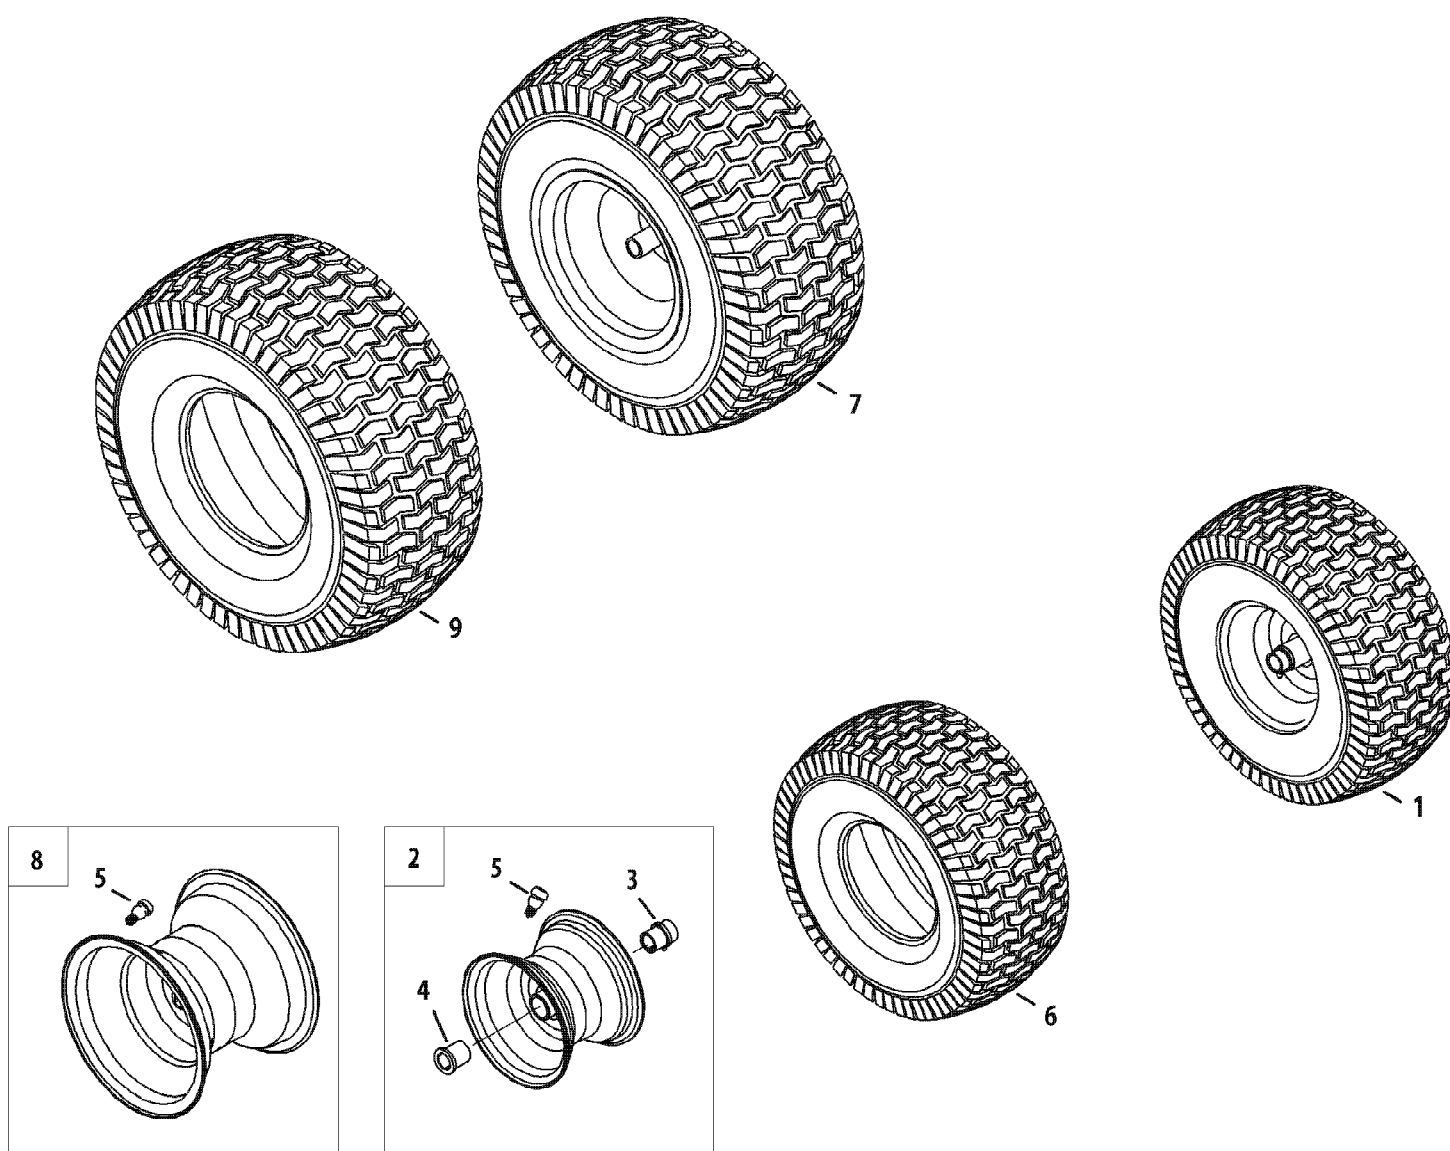

LTX1050VT Tractor (2010 & After)  
Wheels, Front & Rear

Page 63 of 63

| Ref # | Part Number    | Qty | S/P/F | Description                            |
|-------|----------------|-----|-------|----------------------------------------|
| 1     | N/A            | 1   |       | Wheel Ass'y, Complete, 15 x 6 x 6      |
| 2     | 634-04405-0499 | 1   |       | Rim Ass'y, 6.0 x 4.5, Plastic Bearings |
| 3     | 741-0990B      | 1   | /P    | Bearing, Flange, .760 ID w/ Fitting    |
| 4     | 741-0516B      | 1   | /P    | Bearing, Flange, .760 x 1.00 x 1.20    |
| 5     | 934-0255       | 1   | /P    | Valve, Tubeless Air                    |
| 6     | 734-1731-0901  | 1   | /P    | Tire, 15 x 6 x 6 Sq Shoulder           |
| 7     | 634-0177-0931  | 1   |       | Wheel, Complete, 20 x 10 x 8           |
| 8     | 634-04369-0499 | 1   |       | Rim Ass'y, 8.0 x 7.0 x .750 ID         |
| 9     | 734-1730-0901  | 1   | /P    | Tire, 20 x 8 x 8 Sq Shoulder           |