


LT2042 Tractor
Air Intake And Filtration

Page 1 of 72

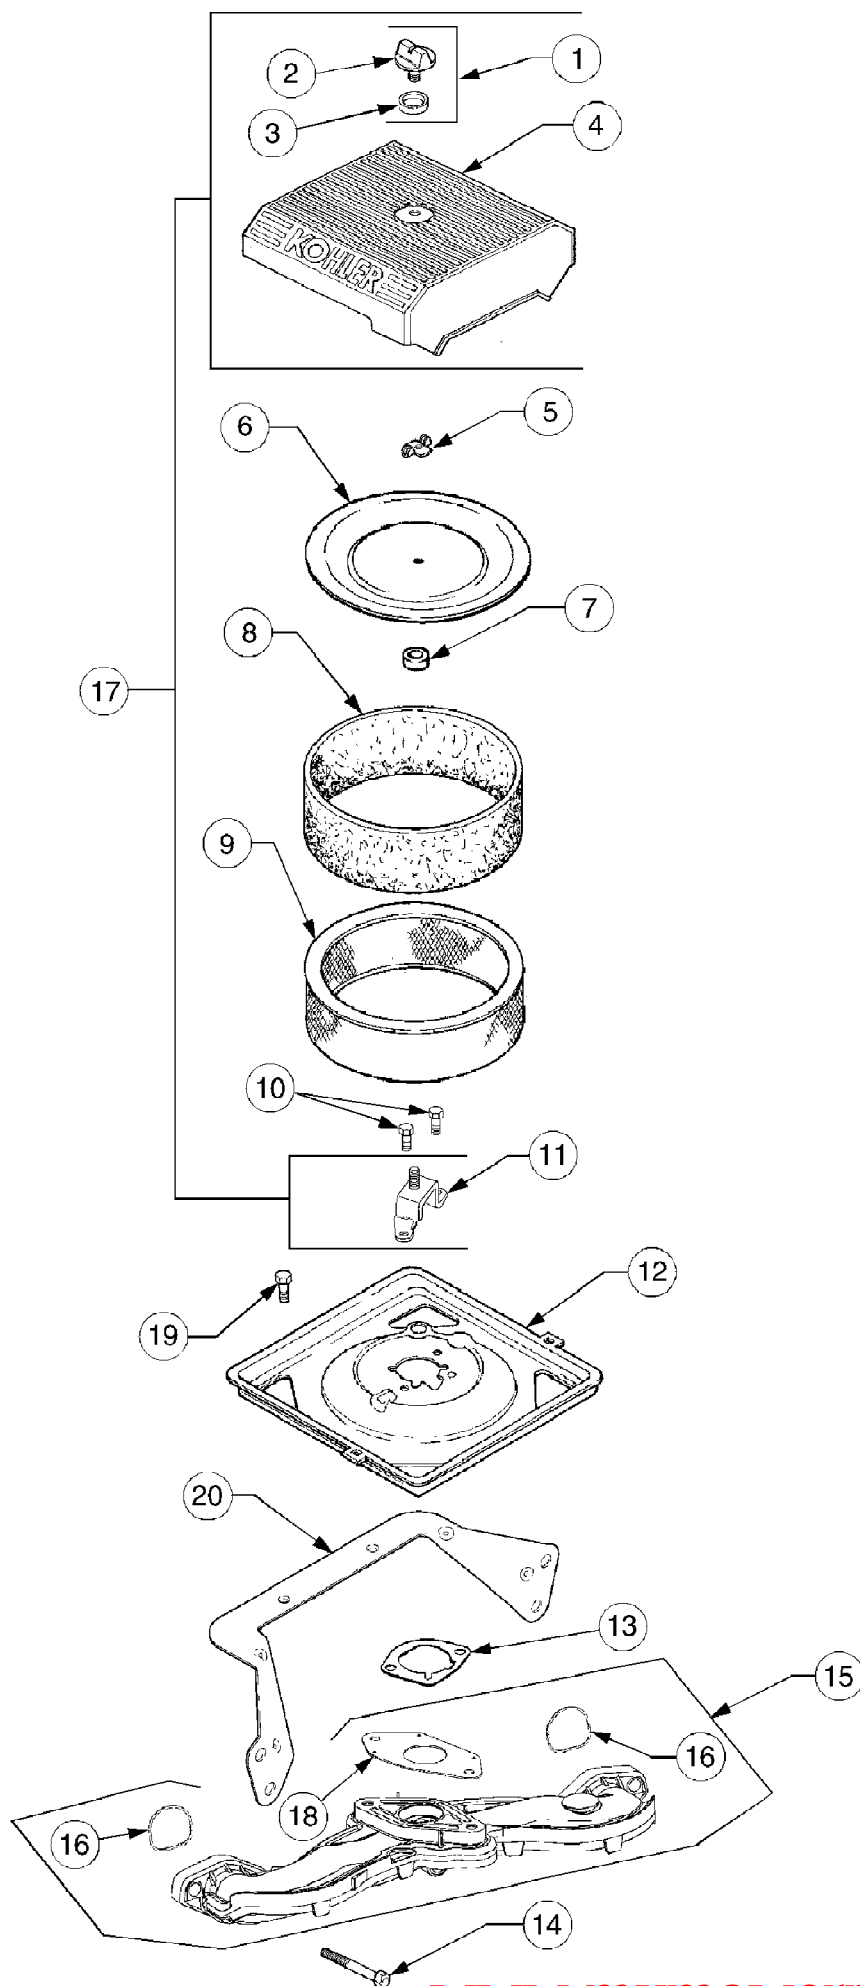


LT2042 Tractor
Air Intake And Filtration

Page 2 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-755-01	1	S	Kit, Knob w/Seal (Incl. Ref #2,3)
2	KH-25-341-03	1	/P	Knob, Cover
3	KH-24-153-20-S	1		Seal, Air Cleaner Cover Knob
4	KH-24-096-69-S	1	/P	Cover, Air Cleaner
5	KH-12-100-01	1	/P	Wing Nut
6	KH-24-096-01	1	/P	Cover, Inner Air Cleaner
7	KH-24-032-03	1	/P	Seal, Inner Air Cleaner
8	KH-24-083-02	1	S	Precleaner, Element
9	KH-47-083-03	1	S	Element, Air Cleaner
10	KH-24-086-53-S	3		Screw, Hex Flange, M6 x 1.0 x 16
11	KH-24-126-21	1		Bracket, Air Cleaner Base
12	KH-24-094-24-S	1	S	Base, Air Cleaner
13	KH-24-041-06	1	/P	Gasket, Air Cleaner Base
14	KH-M-651040-S	4		Screw, Hex Flange, M6 x 1.0 x 40
15	KH-24-164-54-S	1	S	Manifold, Intake (Includes Carb Gasket KH-24-041-53-S and (2) O-Rings KH-24-153-27-S)
16	KH-24-153-27-S	2	/P	O-Ring, Intake Manifold
17	KH-24-743-08	1		Kit, Air Cleaner Cover (Incl 1-4, 11)
18	KH-24-041-53-S	1		Gasket, Carburetor
19	KH-M-0545010	2	/P	Screw, Hex Flng, M5 x 0.8 x 10
20	KH-24-126-130-S	1		Bracket, Air Cleaner Base

LT2042 Tractor
Battery, Electrical Components And Switches

Page 3 of 72

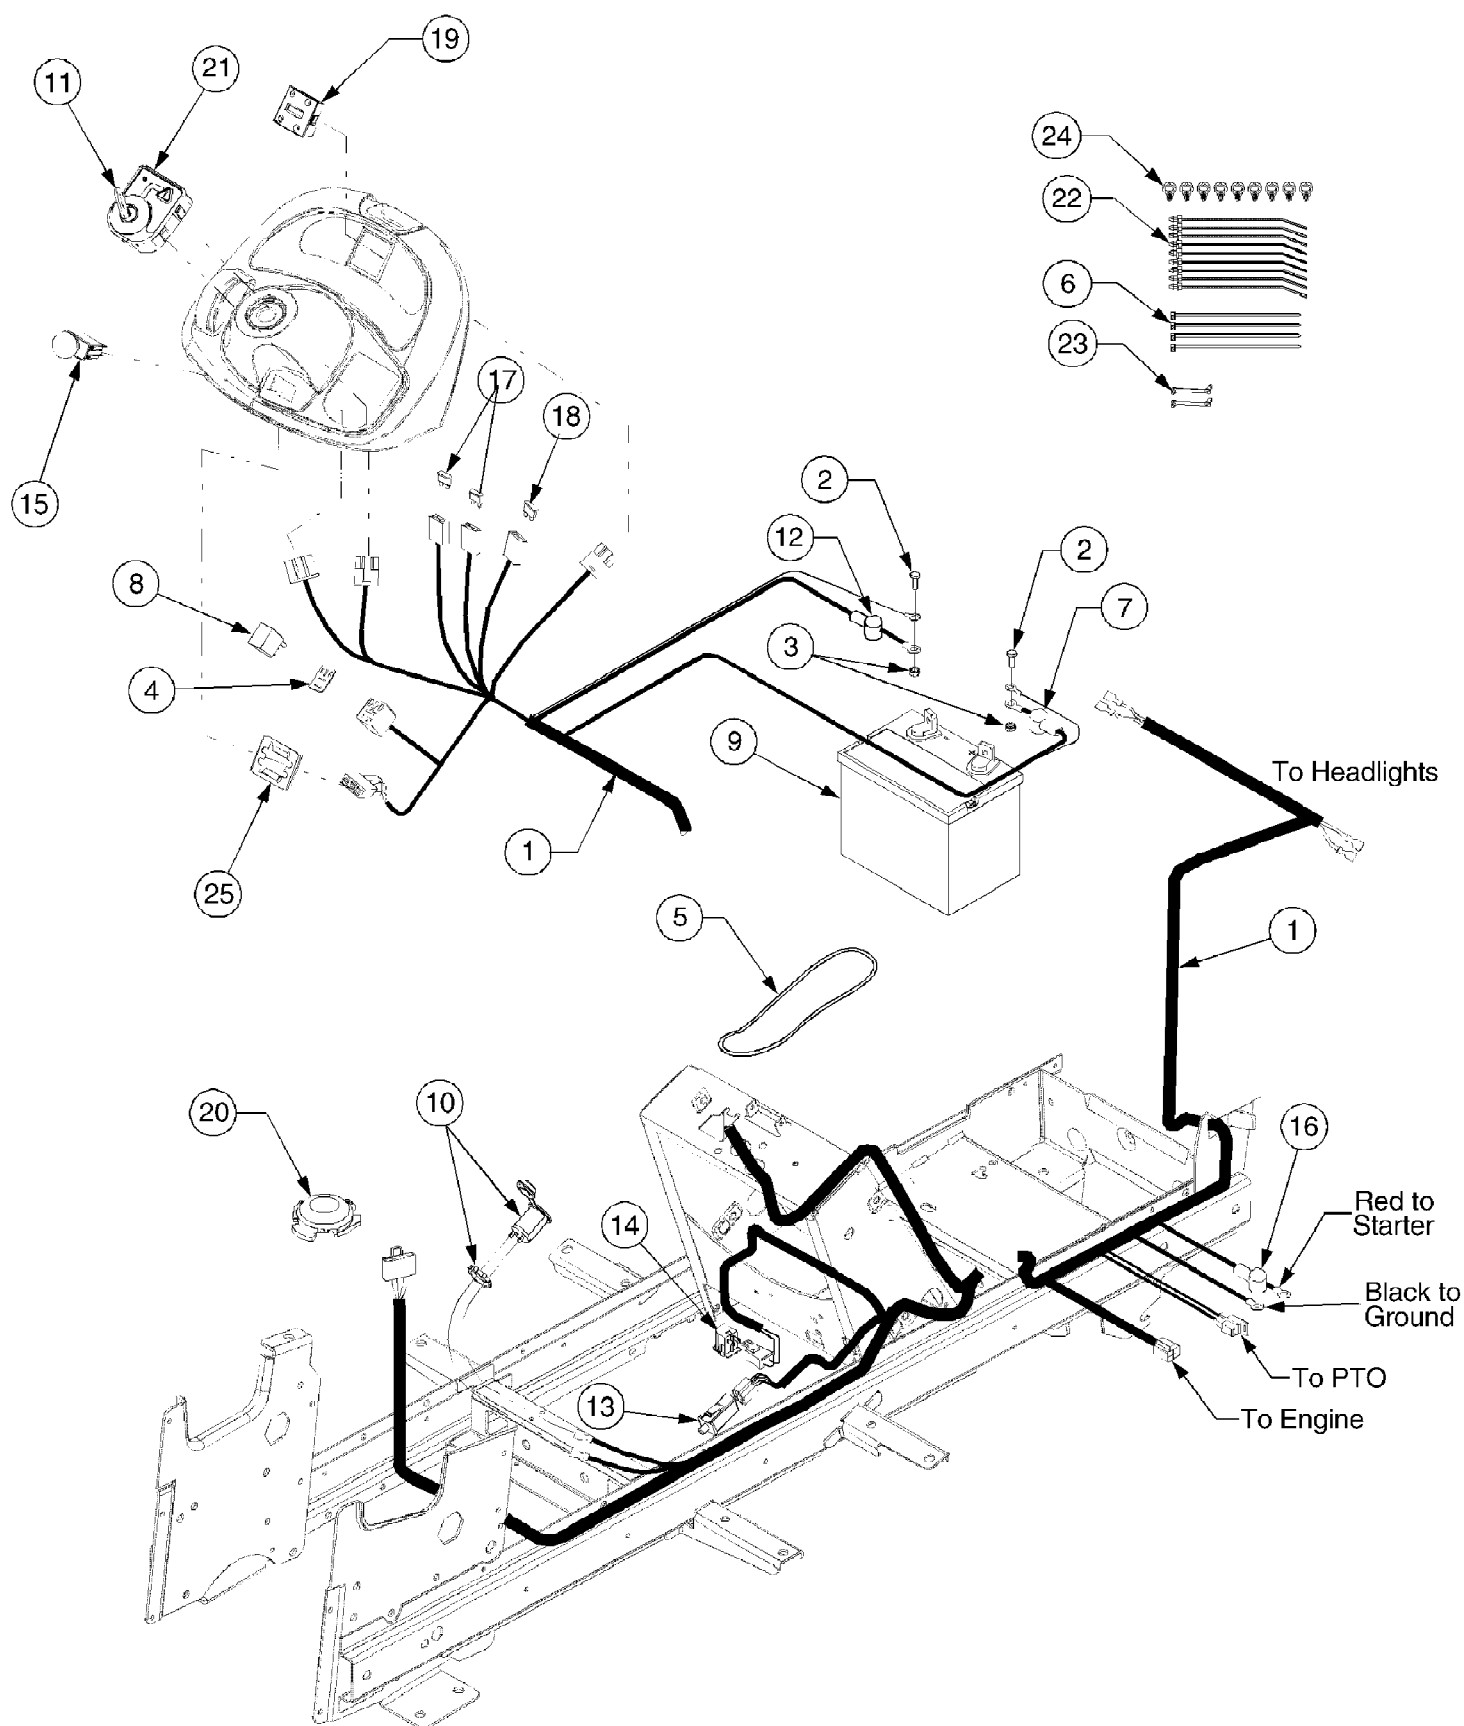


LT2042 Tractor
Battery, Electrical Components And Switches

Page 4 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	629-04111	1	S	Wire Harness, Main
2	710-3015	2	/P	Screw, Hex, 1/4-20 x .75 GR5
3	712-0271	2	/P	Sems Nut
4	721-0342	1	S	Gasket, Silicone
5	723-04016	1		Strap, Battery Retainer
6	725-0157	4	/P	Tie , Self-Clinch Cable
7	725-0340	1		Cover, Terminal Black
8	725-1648	1	S	Relay
9	925-1707D	1	/P	Battery
10	725-2003	1		Receptacle, Power 12V
11	725-2054	2	S	Key, Ignition
12	725-3007A	1	/P	Cover, Terminal Red
13	725-3164A	1	S	Switch, Interlock (Brake)
14	725-3167	1	S	Switch, Snap Mount (Reverse)
15	725-04240	1	S	Switch, PTO
16	725-3237	1		Cover, Terminal Red
17	725-3243	2		Fuse, 25 Amp
18	725-04008	1		Fuse, 5 Amp
19	725-04036A	1	S	Meter, Indicator / Hour
20	725-1462	1		Switch, Seat
21	725-04227	1	S	Switch, Key/Module
22	726-0154	9	S	Tie, Pushmount
23	726-0161	2		Clip, Wire
24	726-3055	9		Clip, Cable
25	783-0462	1	/P	Bracket, PTO Switch Retainer

LT2042 Tractor
Blower Housing And Baffles

Page 5 of 72

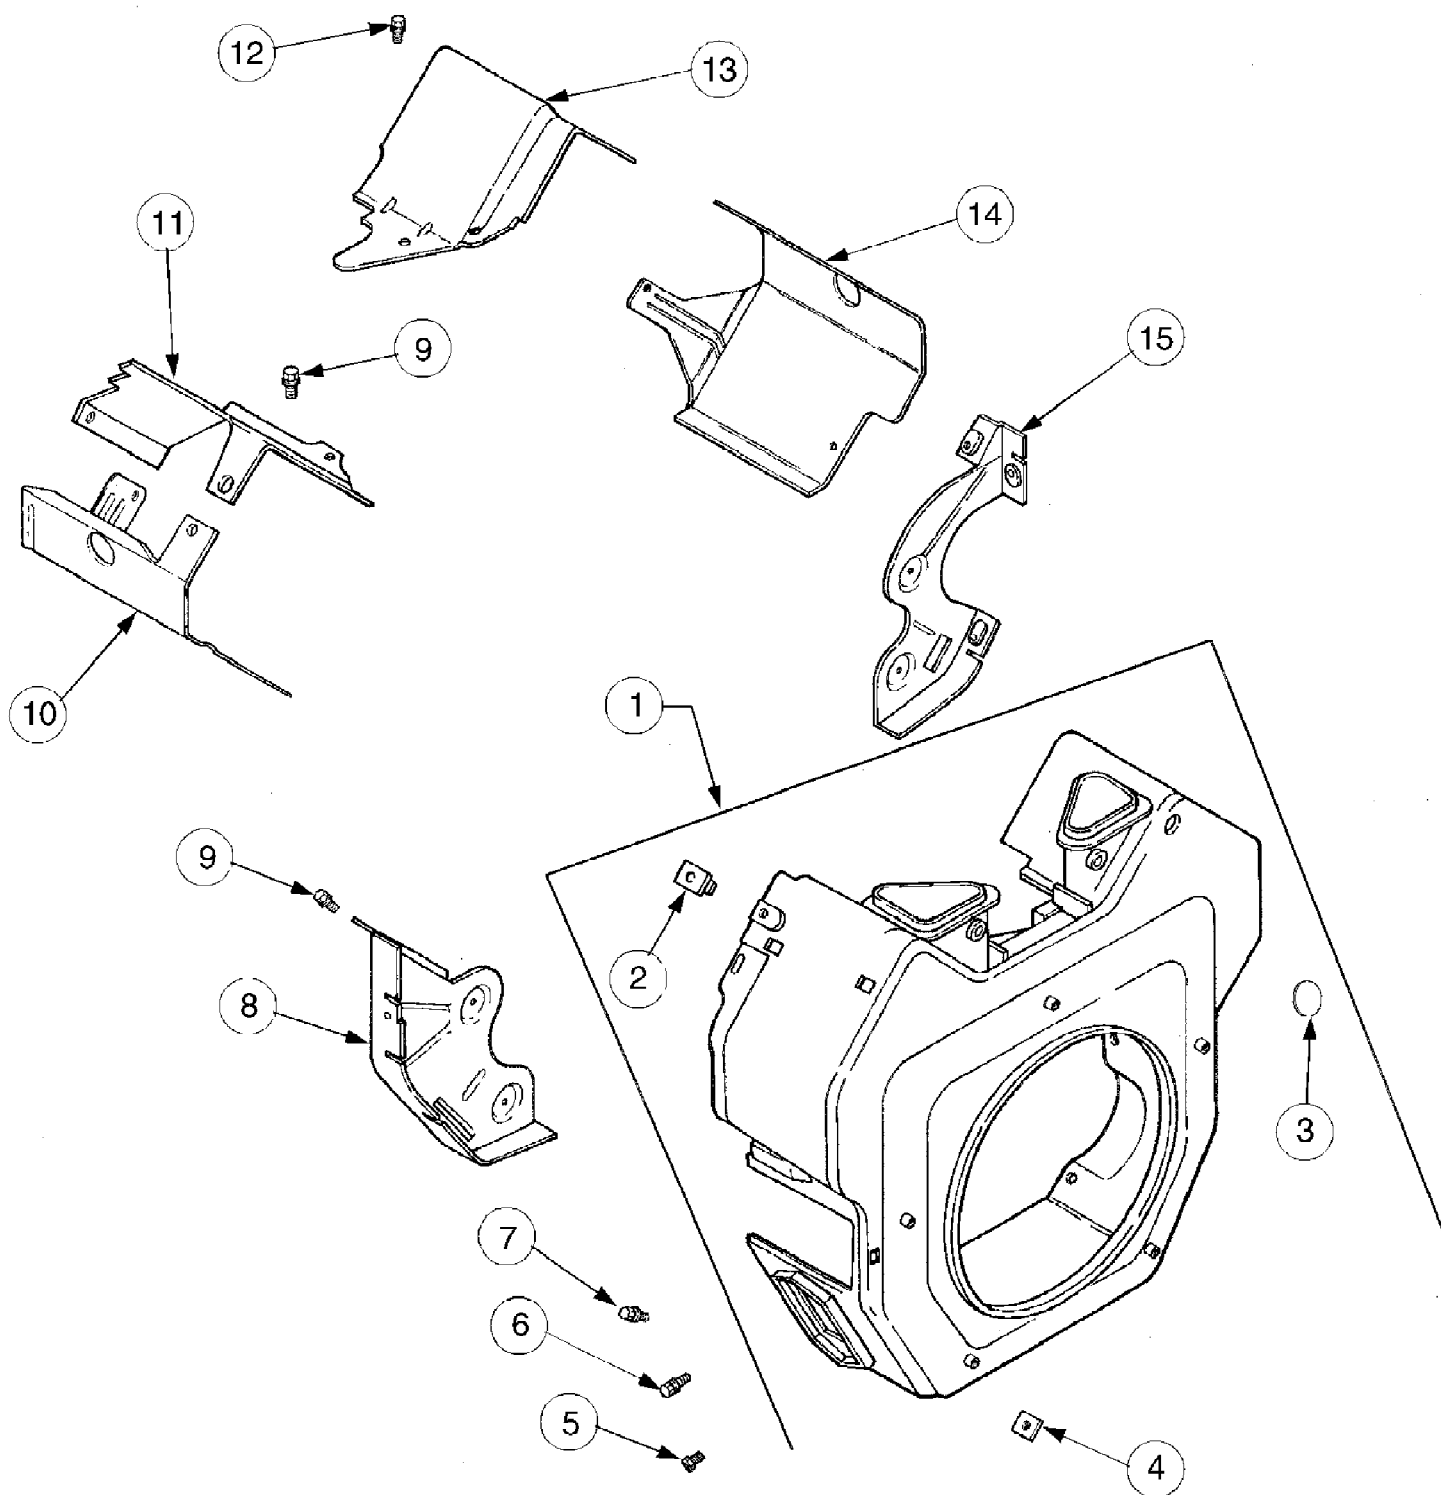


LT2042 Tractor
Blower Housing And Baffles

Page 6 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-027-175-S	1	/P	Housing, Blower (Incl. Ref #2-4)
2	KH-24-100-02	2		Nut, Plastic
3	KH-25-139-16	1		Plug, Button, 9/16
4	KH-24-100-01	3		Nut, Plastic
5	KH-M-0551016	1		Screw, Hex Flange, M5 x 0.8 x 16
6	KH-M-545016-S	3	/P	Screw, Hex Flange, M5 x 0.8 x 16
7	KH-M-0545020	4	/P	Screw, Hex Flange, M5 x 0.8 x 20
8	KH-24-146-16-S	1	/P	Plate, Backing - #2 Side
9	KH-M-0645016	6	S	Screw, Hex Flange, M6 x 1.0 x 16
10	KH-24-063-20	1	/P	Baffle, Cylinder Barrel - #2 Side
11	KH-24-063-17	1	/P	Baffle, Valley - #2 Side
12	KH-M-0545010	2	/P	Screw, Hex Flange, M5 x 0.8 x 10
13	KH-24-063-59-S	1		Baffle, Valley - #1 Side
14	KH-24-063-58-S	1	S	Baffle, Cylinder Barrel - #1 Side
15	KH-24-146-20-S	1	/P	Plate, Backing - #1 Side

LT2042 Tractor
Brake And Control Pedals

Page 7 of 72

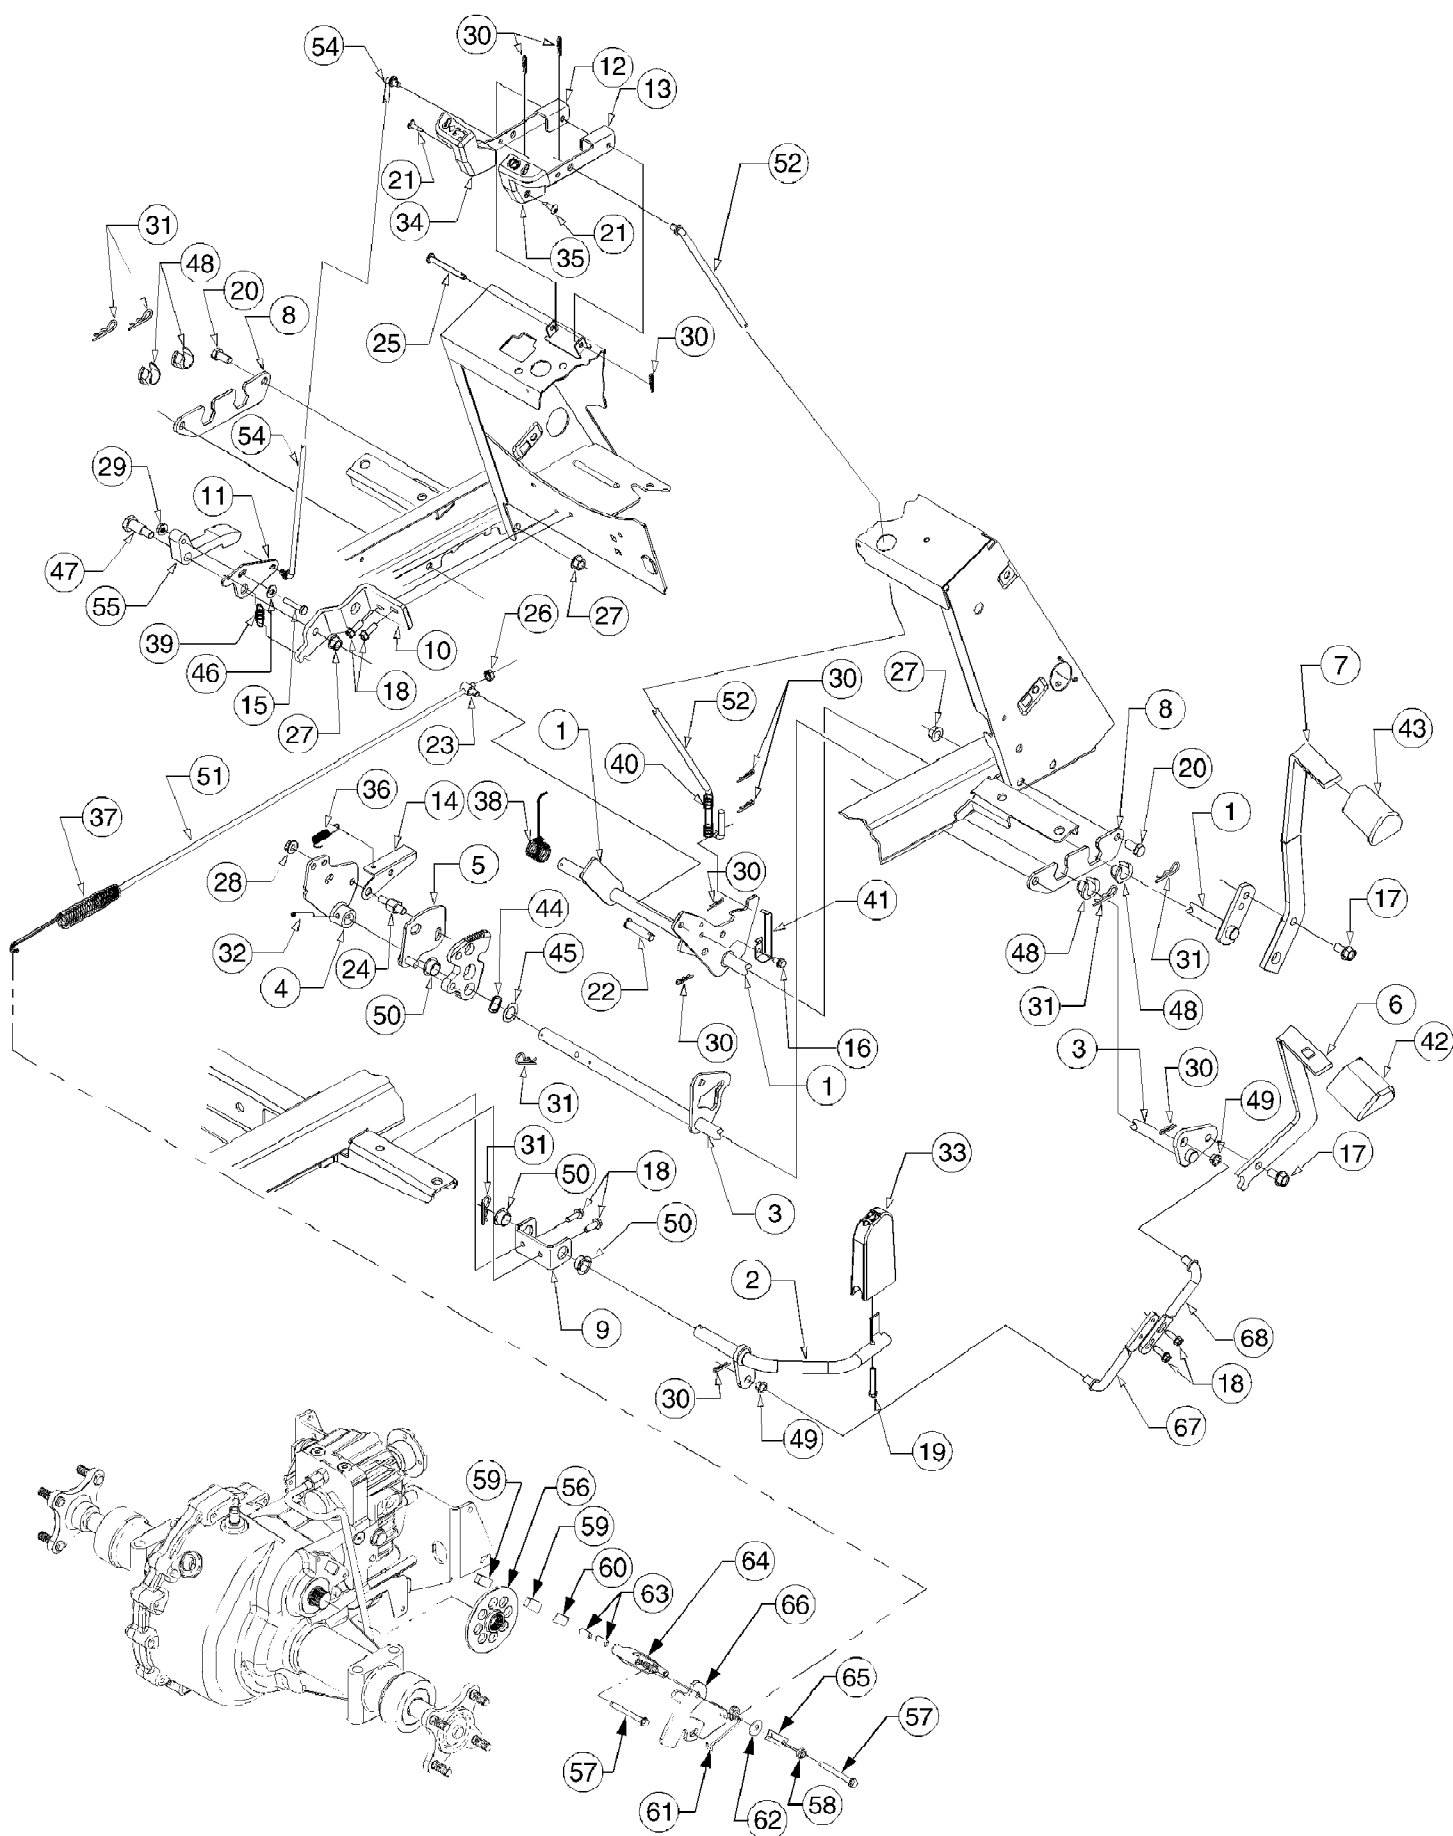

LT2042 Tractor
Brake And Control Pedals


Page 8 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	603-0321A	1		Shaft Assy, Brake
2	603-0412	1		Pedal Assy, Reverse
3	603-0697	1		Shaft Assy, Forward/Reverse
4	603-0419	1		Cam Assy, Control
5	603-0421A	1	/P	Plate Assy, Disengagement
6	703-2570A	1		Pedal, Forward
7	703-2573A	1		Pedal, Brake
8	703-2804	2		Plate, Bearing Mounting
9	703-2938	1		Bracket, Reverse Pivot
10	703-2941	1		Bracket, Cruise
11	703-2942	1		Plate, Rod Adjustment
12	703-2962	1		Lever, Cruise
13	703-2963	1	S	Lever, Brake Lock
14	703-2965	1	S	Actuator, Reverse Switch
15	710-0106	1	/P	Screw, Hex Cap, 1/4-20 x 1.25
16	710-0599	1	/P	Screw, Hex Wash Hd Tapp 1/4-20 x .5
17	710-0623	2	/P	Screw, Hex Wash Hd Tapp 3/8-16x .75
18	710-0642	6	/P	Screw, Hex Wash Hd Tapp 1/4-20x .75
19	710-0796	1	/P	Screw, Truss Mach, #12 x 1.5
20	710-0216	2	/P	Screw, Hex Cap, 3/8-16 x .75 GR5
21	710-3009	2	/P	Screw, Phil Hd Pan, #10-24 x .75
22	711-0415	1	S	Pin, Clevis, 3/8 x 1.62
23	711-0736	1	/P	Ferrule, Adjustment, 1/4-20 Thrd
24	711-1138	1		Stud, Actuator
25	711-3295	1	S	Pin, Clevis, .25 x 2.38
26	712-0271	1	/P	Nut, Hex Sems, 1/4-20
27	712-0431	3	S	Nut, Hex Flange Lock, 3/8-16
28	712-3004A	1	/P	Nut, Hex Flange Lock, 5/16-18
29	712-3027	1	S	Nut, Hex Flange Lock, 1/4-20
30	714-0104	9	S	Pin, Internal Cotter, 5/16 Dia x 1.12
31	714-0145	6	S	Pin, Internal Cotter, 3/8 Dia x 1.62 and/or
31	714-0111	5	S	Pin, Cotter, 3/32 x 1.0
32	715-0114	1	S	Pin, Spiral Spring, 1/4 x 1.5
33	731-3205	1	S	Pedal, Reverse
34	731-3206	1		Knob, Cruise
35	731-3207	1		Knob, Brake Lock
36	732-0418	1		Spring, Extension, .38 OD x 2.1
37	732-0463A	1	/P	Spring, Extension
38	732-0756A	1	S	Spring, Torsion
39	732-04006	1	S	Spring, Extension, .6 OD x 1.34
40	732-3099	1		Spring, Compression, .50 x 2.23
41	732-3117	1		Spring, Switch Actuator
42	735-3048	1		Pad, Forward Foot Control
43	735-3049	1	S	Pad, Brake Foot
44	736-0174	1	/P	Washer, Wave, .625 x .885 x .015
45	736-0349	1	S	Washer, Flat, .635 x 1.0 x .020
46	736-0463	1	S	Washer, Flat, 1/4 x .63 x .051
47	738-0145	1	S	Shoulder Bolt, .50 OD x .840
48	741-3065B	4	/P	Bearing, Hex Flange Split
49	741-3073	2	S	Bearing, Flange, .375 x .58 x .25
50	741-3074	3		Bearing, Flange, .626 x .93 x .344
51	747-3392A	1		Rod, Brake
52	747-3219	1		Rod, Parking Brake

LT2042 Tractor
Brake And Control Pedals

Page 9 of 72


Ref #	Part Number	Qty	S/P/F	Description
54	747-3307	1		Rod, Cruise
55	748-3060	1		Latch, Cruise
56	761-0215	1		Disc, Brake
57	710-1206	2	/P	Screw, Hex Wash Hd, Tapp, 1/4-20 x 2.375
58	712-0273	1	S	Nut, Hex Nylon Lock, 5/16-24
59	717-0678	2	S	Pad, Brake
60	717-0682	1	S	Plate, Puck
61	732-0925	1		Spring, Torsion
62	736-0371	1	/P	Washer, Flat, .343 x .88 x .062
63	741-0343	2	S	Pin, Brake Actuating
64	761-0207A	1	/P	Yoke, Brake
65	761-0208	1		Bracket, Brake Anti Rotation
66	761-3074	1		Arm, Brake Actuator
67	747-3341A	1	/P	Rod, Rear Connecting
68	747-3383	1	/P	Rod, Front Connecting

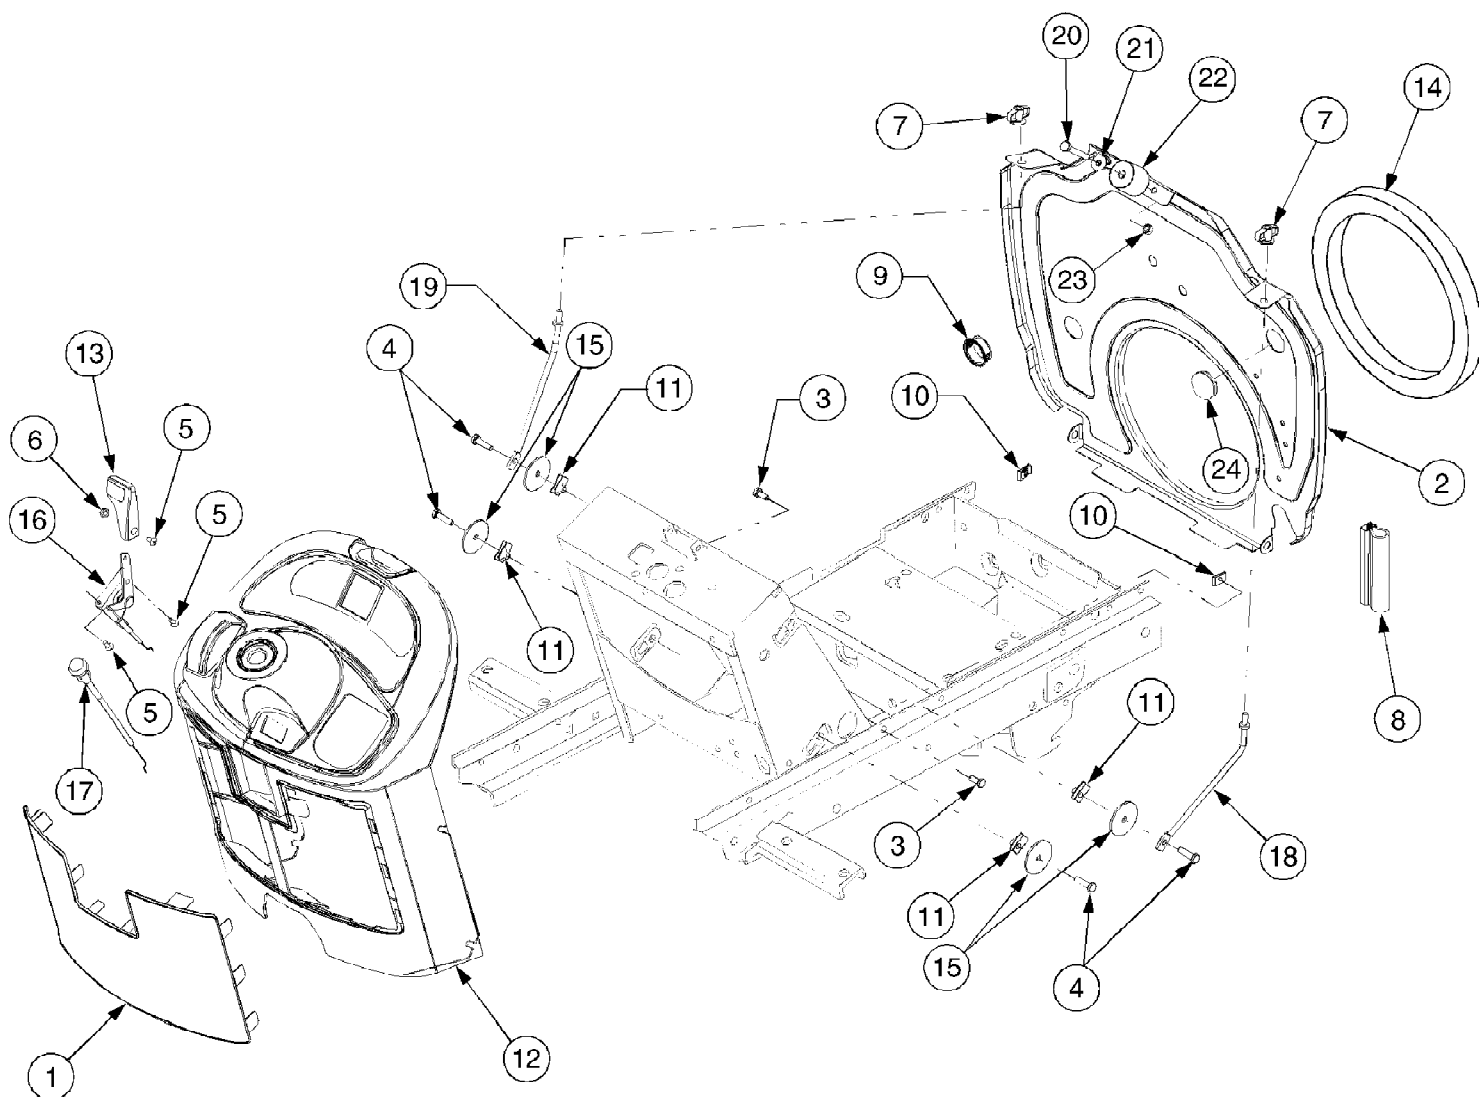

LT2042 Tractor
Bulkhead, Dash Panel And Engine Controls

Page 11 of 72


Ref #	Part Number	Qty	S/P/F	Description
1	703-2557	1	S	Screen, Intake Dash
2	703-3108C	1	S	Bulkhead, Lower
3	710-0751	2	/P	Screw, Hex Cap, 1/4-20 x .625
4	710-0597	4	/P	Screw, Hex Cap, 1/4-20 x 1.0
5	710-3217	3	/P	Screw, Cross Rec Trus, #8-32 x .38
6	712-0142	1	/P	Nut, #8-32
7	712-0397	2	S	Nut, Wing w/Bell Washer 1/4-20
8	720-3024-36	28in	/P	Seal, Push On Trim
9	723-3042	1	/P	Bushing, Snap, 7/8 ID
10	726-3048	2		Nut, U-Type Speed, 1/4-20
11	726-3054	4		Nut, U-Clip, 1/4-20
12	731-05038	1		Panel, Dash
	777I22458	1		Graphic, Instrument Panel Inlay
13	731-3161	1	S	Knob, Throttle
14	723-3062	1		Seal Ring, Foam
15	736-3128	4		Washer, Flat, .285 x 1.75 x .10
16	746-3049	1	S	Control, Throttle
17	746-3050A	1	S	Control, Choke
18	747-3226	1		Rod, RH Mounting
19	747-3227	1		Rod, LH Mounting
20	710-0136	1	/P	Screw, Hex Cap, 1/4-20 x 1.75 GR5
21	736-0342	1		Washer, Flat, .283 x .75 x .030
22	731-3232	1		Roller, Hood Latch
23	712-0271	1	/P	Nut, Hex Sems, 1/4-20
24	720-3025	1		Plug. Button

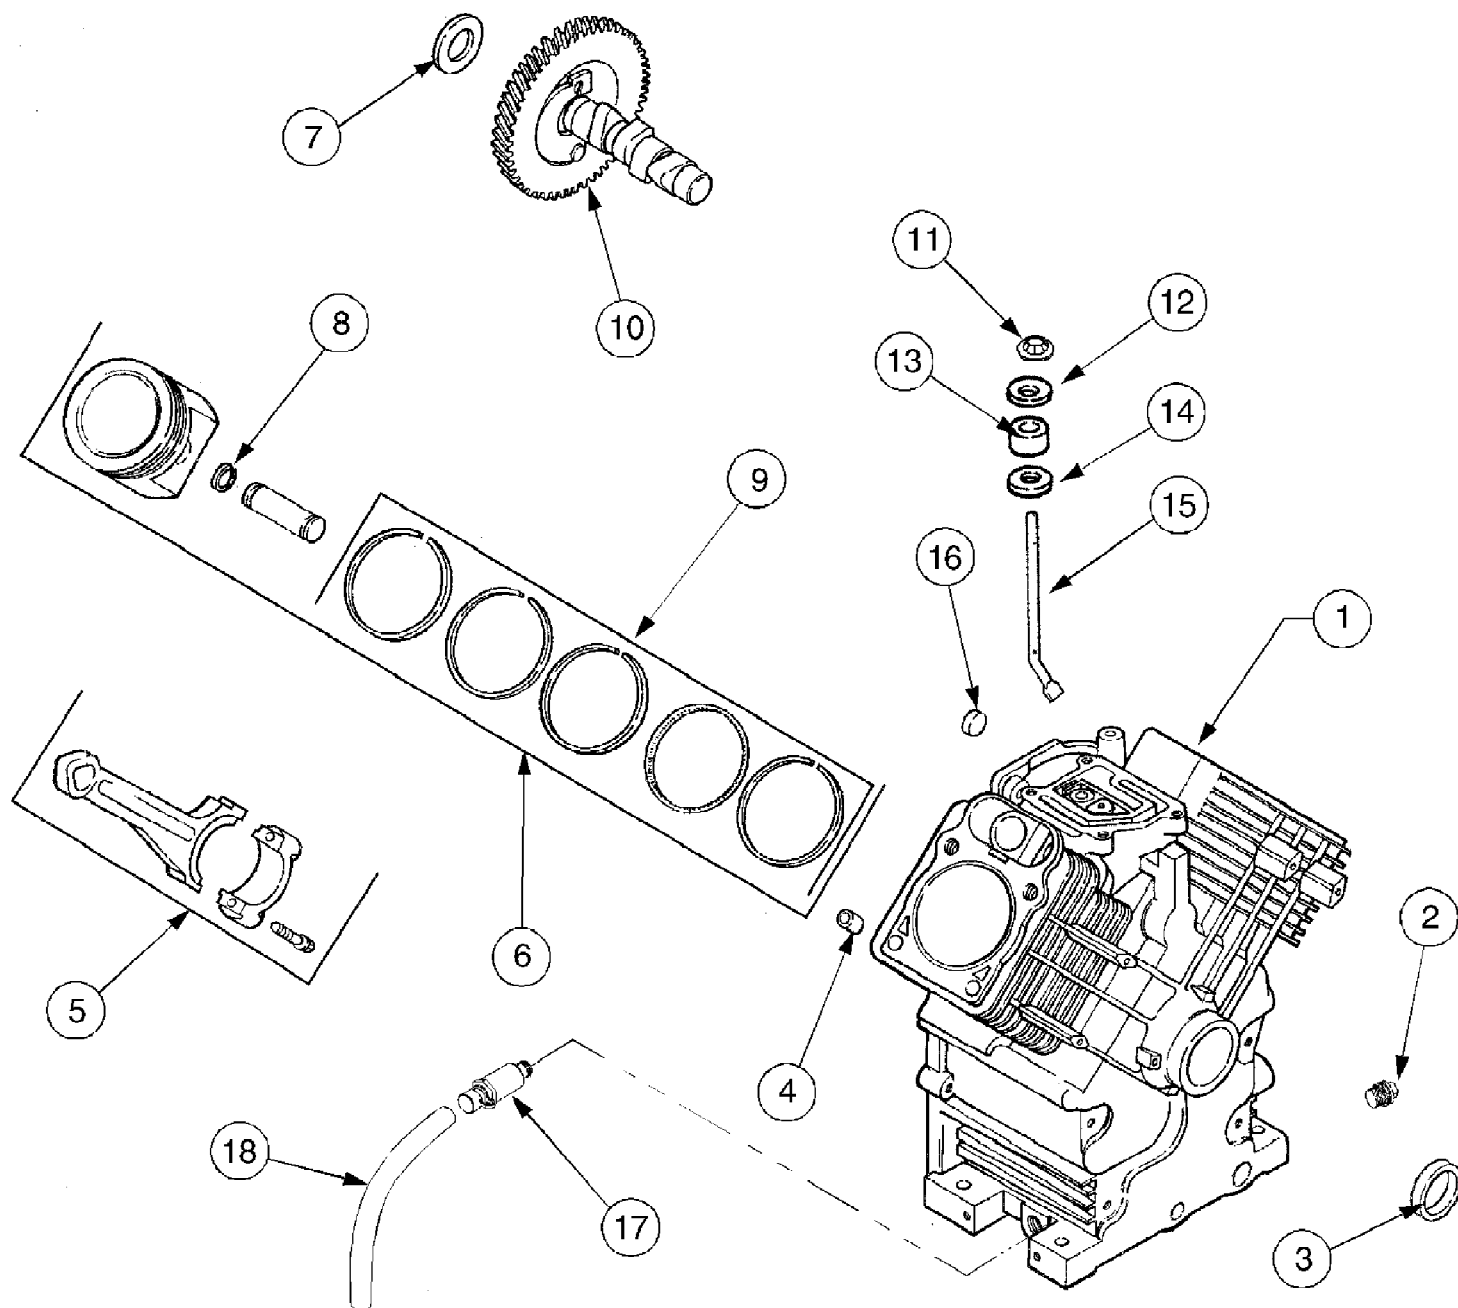

LT2042 Tractor
Crankcase

Page 13 of 72

Ref #	Part Number	Qty	S/P/F	Description
	KH-62588	1	/P	Complete Engine
	KH-24-522-130	1	/P	Short Block
1	KH-24-782-15	1	/P	Cylinder Block (Use Miniblock)
2	KH-25-139-57-S	2	/P	Plug, Hex Hd, 3/8
3	KH-24-032-01	1	S	Seal, Front Oil
4	KH-24-380-13-S	6	S	Pin, Locating Dowel
5	KH-24-067-13	2	S	Rod, Connecting, Std
	KH-24-067-14	2		Rod, Connection, .010 / .25mm
6	KH-24-874-17-S	2	S	Piston w/Ring Set, Std
	KH-24-874-14-S	2		Piston w/Ring Set, .08mm
	KH-24-874-18-S	2	/P	Piston w/Ring Set, .010 / .25mm
	KH-24-874-19-S	2	S	Piston w/Ring Set, .020 / .50mm
7	KH-12-422-09	AR	S	Shim, Camshaft, .0320 (Red)
	KH-12-422-13	AR	S	Shim, Camshaft, .0400 (Black)
	KH-12-422-07	AR	S	Shim, Camshaft, .0280 (White)
	KH-12-422-08	AR	S	Shim, Camshaft, .0300 (Blue)
	KH-12-422-10	AR	S	Shim, Camshaft, .0340 (Yellow)
	KH-12-422-11	AR	S	Shim, Camshaft, .0360 (Green)
	KH-12-422-12	AR	S	Shim, Camshaft, .0380 (Gray)
8	KH-24-018-01	4	S	Retainer, Piston Pin
9	KH-24-108-11-S	2	S	Ring Set, Std
	KH-24-108-12-S	2	S	Ring Set, .010 / .25mm
	KH-24-108-13-S	2		Ring Set, .020 / .50mm
10	KH-24-012-10-S	1	/P	Camshaft Assembly
11	KH-24-018-09-S	1		Ring, Retainer
12	KH-M-931010-S	1		Washer, Nylon
13	KH-28-032-09-S	1		Seal, Governor Cross Shaft
14	KH-24-468-15-S	1		Washer, Plain
15	KH-24-144-38-S	1	/P	Shaft, Governor Cross
16	KH-52-139-09	1	S	Plug, Cup
17	751-3140	1	S	Drain, Oil
	751-3142	1		Cap
18	751-3141-12	1	S	Hose, Oil Drain
	KH-24-755-107-S	1	/P	Gasket Set

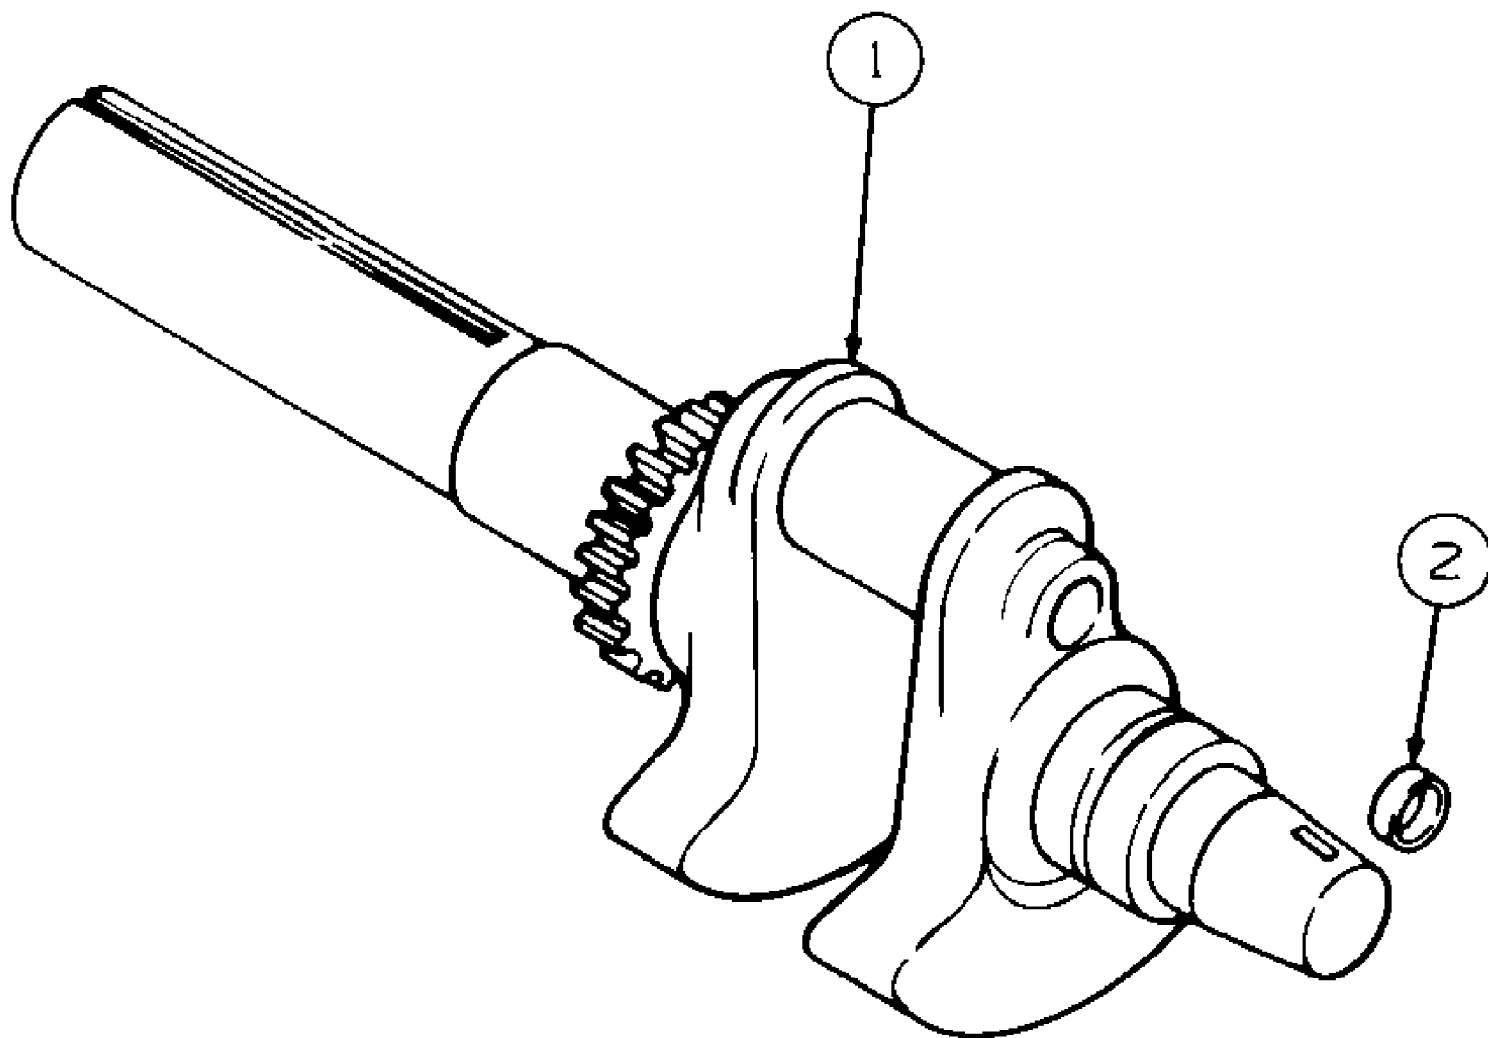


LT2042 Tractor
Crankshaft

Page 15 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-014-06	1	S	Crankshaft (Incl. Ref #2)
2	KH-52-139-09	1	S	Plug, Cup

LT2042 Tractor
Cylinder Head, Valves And Breather

Page 16 of 72

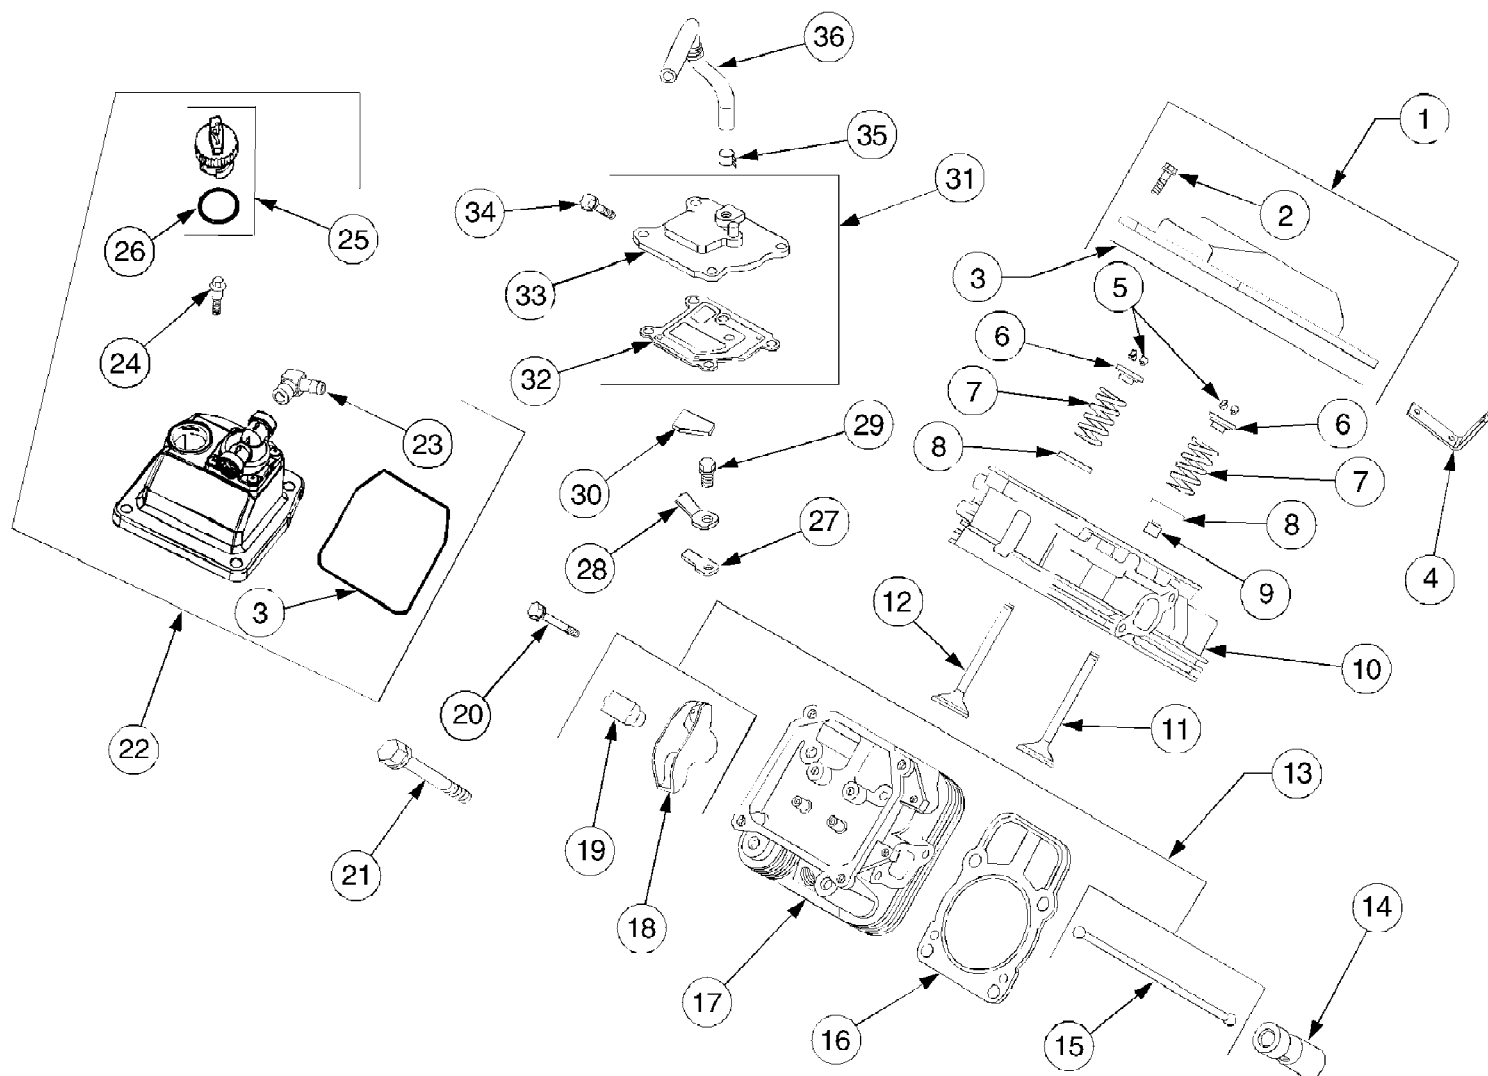


LT2042 Tractor
Cylinder Head, Valves And Breather

Page 17 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-755-141-S	1	/P	Kit , Valve Cover (Includes 2-3)
2	KH-M-651030-S	4		Screw, Hex Flng, M6 x1.0 x 30
3	KH-24-153-28-S	2	S	O-Ring, Valve Cover
4	KH-24-445-01	1	S	Strap, Lifting
5	KH-12-755-03	4	/P	Kit, Retainer
6	KH-12-173-01	4	/P	Cap, Valve Spring
7	KH-24-089-02	4	/P	Spring, Valve
8	KH-235011	4	S	Retainer, Spring
9	KH-66-032-05-S	2	/P	Seal, Valve Stem
10	KH-24-318-68-S	1	S	Head Assembly, #1 Cylinder
11	KH-24-017-01	2	/P	Valve, Intake Std
	KH-24-017-02	2		Valve, Intake, .25mm
12	KH-24-016-01	2	/P	Valve, Exhaust Std
	KH-24-016-02	2		Valve, Exhaust, .25mm
13	KH-24-755-66	1	/P	Kit, Valve Train (Incl. 15,18,19)
14	KH-25-351-01	4	S	Lifter, Valve
15	KH-24-411-05	4	/P	Rod, Push
16	KH-24-841-01-S	2	/P	Kit, Cyl. Hd. Gasket (Includes 21)
17	KH-24-318-71-S	1	S	Head Assembly, #2 Cylinder
18	KH-25-186-01	4	/P	Arm, Rocker
19	KH-24-599-01	4	S	Pivot, Rocker Arm
20	KH-66-086-07-S	4	S	Screw, Hex Flng, M6 x 1.0 x 34
21	KH-12-086-16	8	S	Screw, Hex Flng, M10 x 1.5 x 90
22	KH-24-559-05-S	1	S	Kit, Fuel Pump Valve Cover
23	KH-25-294-11-S	2		Fitting, 90°.
24	KH-24-086-32	4		Screw, Shoulder
25	KH-24-227-02	1	S	Cap Assembly, Oil Fill (Incl. 26)
26	KH-24-153-09	1	S	O-Ring
27	KH-24-402-03	1	/P	Reed, Breather
28	KH-66-018-04-S	1	/P	Retainer, Breather Reed
29	KH-M-0545010	1	/P	Screw, Hex Flng, M5 x 0.8 x 10
30	KH-24-050-01	1	S	Filter, Breather
31	KH-24-033-01	1	/P	Kit, Breather (Includes 32-34)
32	KH-24-041-51-S	1	S	Gasket, Breather
33	KH-24-096-86-S	1	S	Cover, Breather
34	KH-M-0645020	4	S	Screw, Hex Flng M6 x 1.0 x 20
35	KH-25-237-14-S	1	/P	Clamp, Breather
36	KH-24-326-26	1	S	Hose, Breather

LT2042 Tractor
Deck Assembly 42 inch

Page 18 of 72

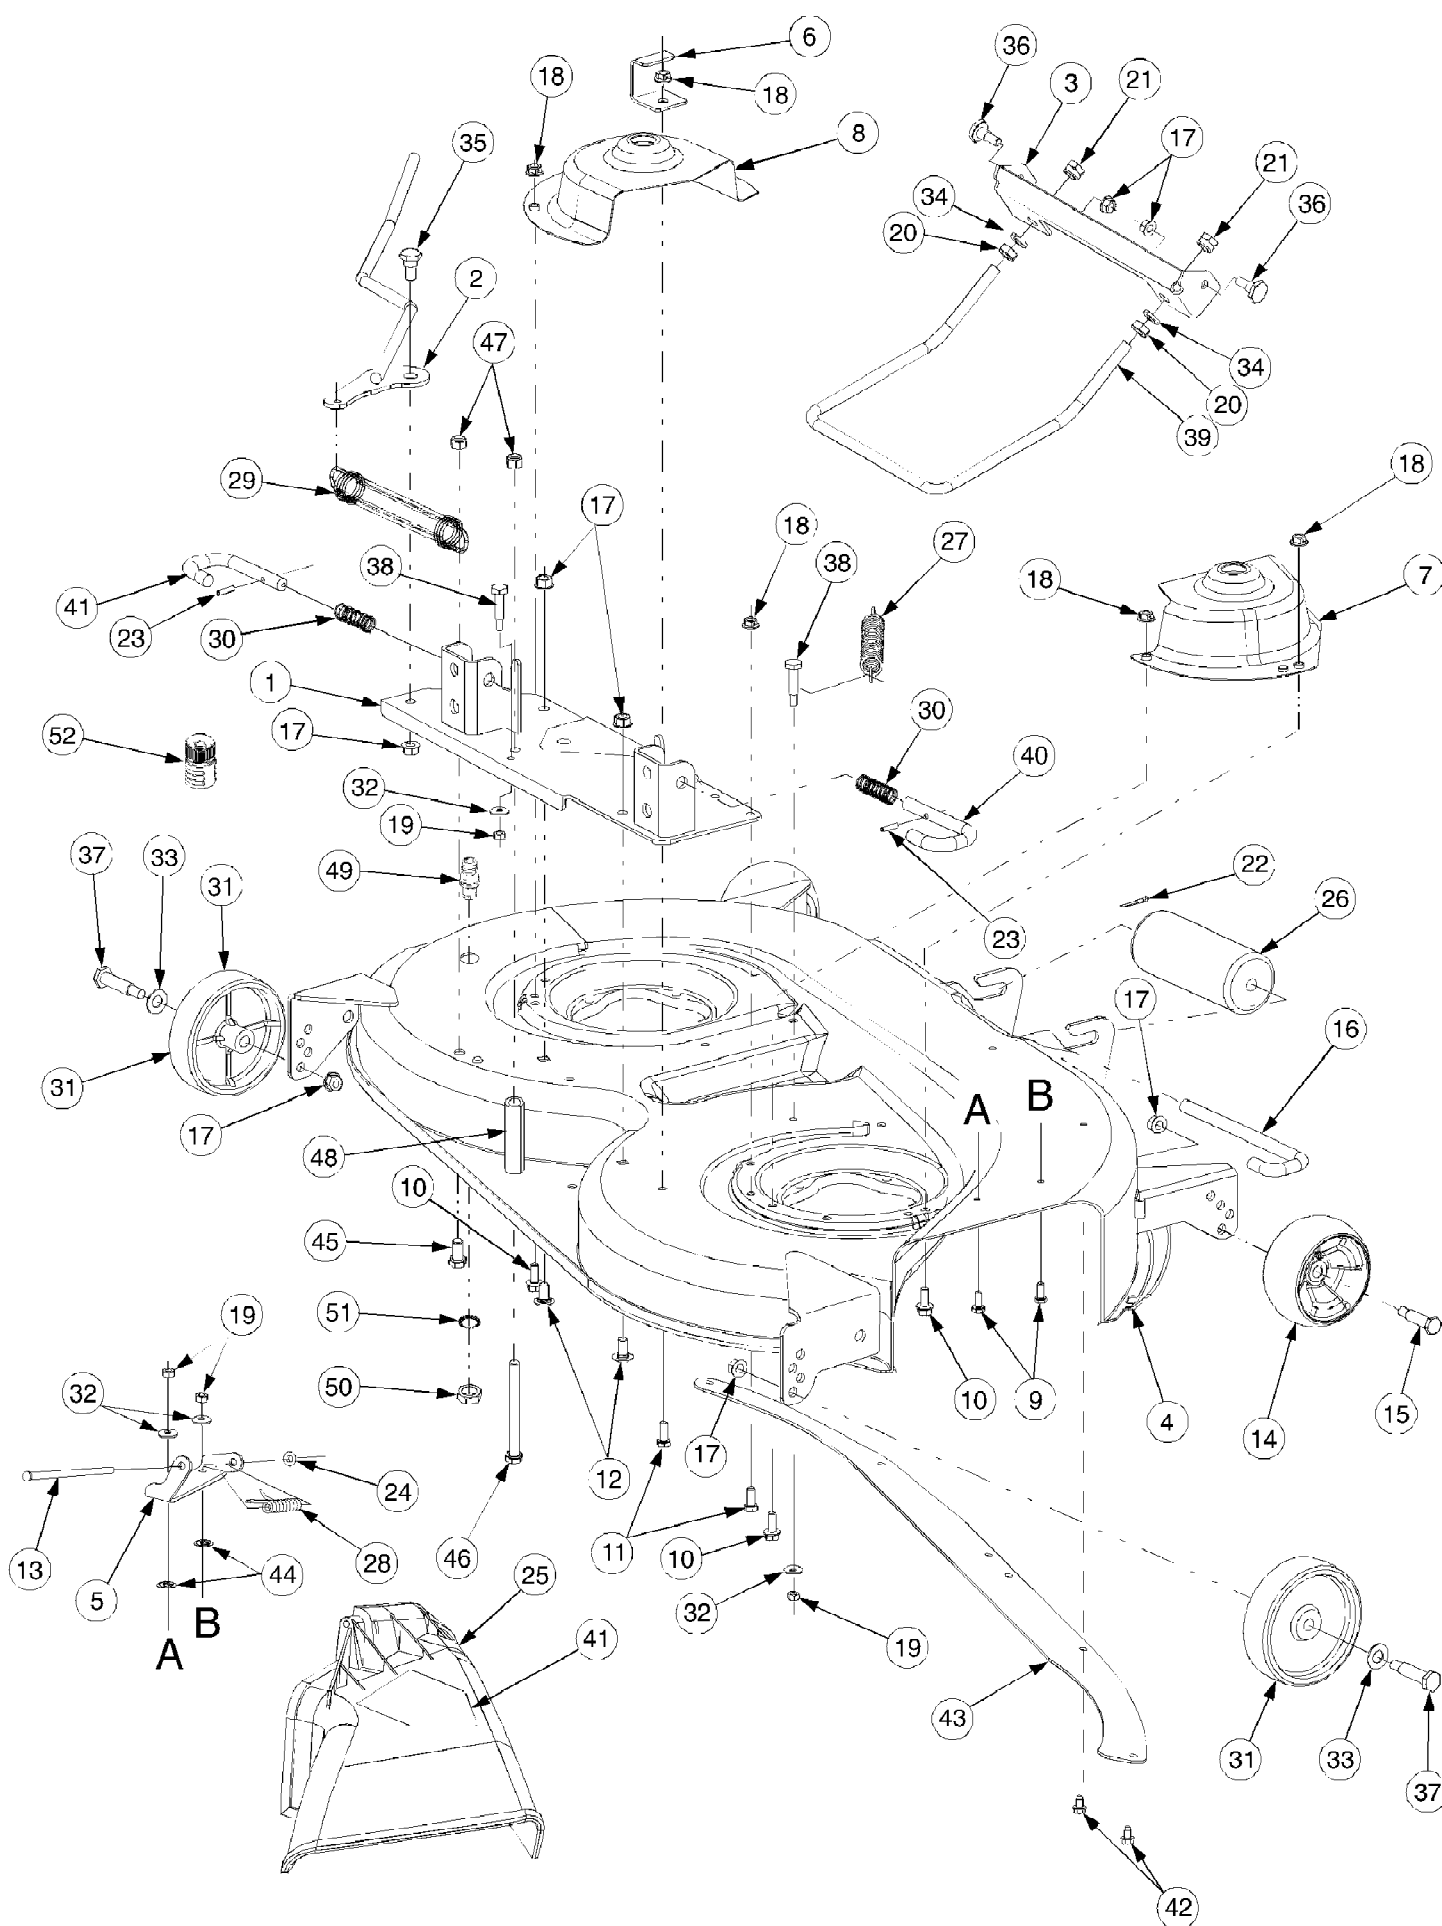

LT2042 Tractor
Deck Assembly 42 inch


Page 19 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	603-0181B	1		Plate Assembly, Mounting
2	603-0199	1		Handle, Tension
3	603-0200	1	S	Bracket, Front Lift replace with 703-2248 when available
	703-2248	1	/P	Bracket, Front Lift
4	603-0409C	1	S	Deck Assembly, 42"
	777S30503	1	/P	Graphic, Danger Top/RH Deck
	777S30014	1	/P	Graphic, Tension Lever
	777S30018	1	/P	Graphic, Safety Top/LH Deck
	777D06914	1		Graphic, Cut
	777D07755	1		Graphic, 42" Cut
5	703-1693A	1	/P	Bracket, Hinge Mounting
6	703-2559	1		Bracket, Handle Stop
7	703-3237	1	/P	Shield, RH Pulley
8	703-2945	1		Shield, LH Pulley
9	710-0751	2	/P	Screw, Hex Cap, 1/4-20 x .62 GR5
10	710-1260A	3	/P	Screw, Hx Wsh Hd Tapp, 5/16-18 x .75
11	710-3008	2	/P	Screw, Hex Cap, 5/16-18 x .75 GR5
12	710-3178	2	/P	Bolt, Carriage, 3/8-16 x .75
13	711-0792	1	S	Pin, Hinge, .25 Dia x 6.75 Lg
14	634-04188	2	S	Wheel, Deck w/Fitting
	737-0280	2	S	Lube, Fitting
15	738-0373	2	S	Bolt, Shoulder, 1/2 x 1.5 : 3/8-16
16	711-3314	1	S	Pin, Roller, 1/2 Dia x 7.31 Lg
17	712-0431	7	S	Nut, Hex Flange Lock, 3/8-16
18	712-3004A	5	/P	Nut, Hex Flange Lock, 5/16-18 GR5
19	712-3006	2	/P	Nut, Hex, 1/4-20
20	712-3048	2	S	Nut, Hex Jam, 1/2-13 GR5
21	712-3083	2	/P	Nut, Hex Insert Lock, 1/2-13
22	714-3004	1		Pin, Cotter, 3/32 x 1.25
23	715-3003	2	/P	Pin, Spirol Spring, 3/16 x .75
24	726-0106	1	S	Cap, Speed Nut
25	731-1032B	1	S	Deflector Assy Includes. #5, 13, 24,28, 45
26	731-3005	1	/P	Roller
27	732-0262	1	S	Spring, Extension, .88 OD x 6.12
28	732-0602A	1	/P	Spring, Torsion
29	732-3115	1	/P	Spring, Extension, 1.25 OD x 8.15
30	732-3127	2	S	Spring, Compression
31	734-0973	2	/P	Wheel, Deck, 5 in. Dia
32	736-0270	4	/P	Washer, Bell, .265 x .75 x .062
33	736-0272	2	S	Washer, Flat, .510 x 1.0 x .060
34	736-0921	2	S	Washer, Lock, 1/2
35	738-0143	1	/P	Bolt, Shoulder, .498 Dia x .340 Lg
36	738-0507B	2	S	Bolt, Shoulder, .50 Dia x .434 Lg
37	738-0533	2	S	Bolt, Shoulder, .498 Dia x 1.64 Lg
38	738-0572	2	S	Bolt, Shoulder, .375 Dia x 1.16 Lg
39	747-3172B	1	S	Rod, Front Lift
40	747-3188	2		Pin, Mower Support
41	777S30284	1	S	Graphic, Danger
42	710-0599	5	/P	Screw, Self Tapping, 1/4-20 x .5
43	783-1146A	1	S	Skirt, Deck
44	726-0233	2	/P	Nut, Push, 1/4

LT2042 Tractor
Deck Assembly 42 inch

Page 20 of 72


Ref #	Part Number	Qty	S/P/F	Description
45	710-0180A	1		Screw, Hx Cap Lock, 3/8-24 x .75 GR5
46	710-0902	1		Screw, Hex Cap, 3.8-24 x 3.75 GR5
47	712-3061	2	S	Nut, Hex Insert Lock, 3/8-24
48	750-3193	1	/P	Spacer
49	737-04003B	1	S	Nozzle, Deck Wash
50	712-0641	1	S	Nut, Hex, M16-1.5
51	736-0760	1	S	Washer, Lock
52	721-04041	1	S	Adapter, Water Nozzle

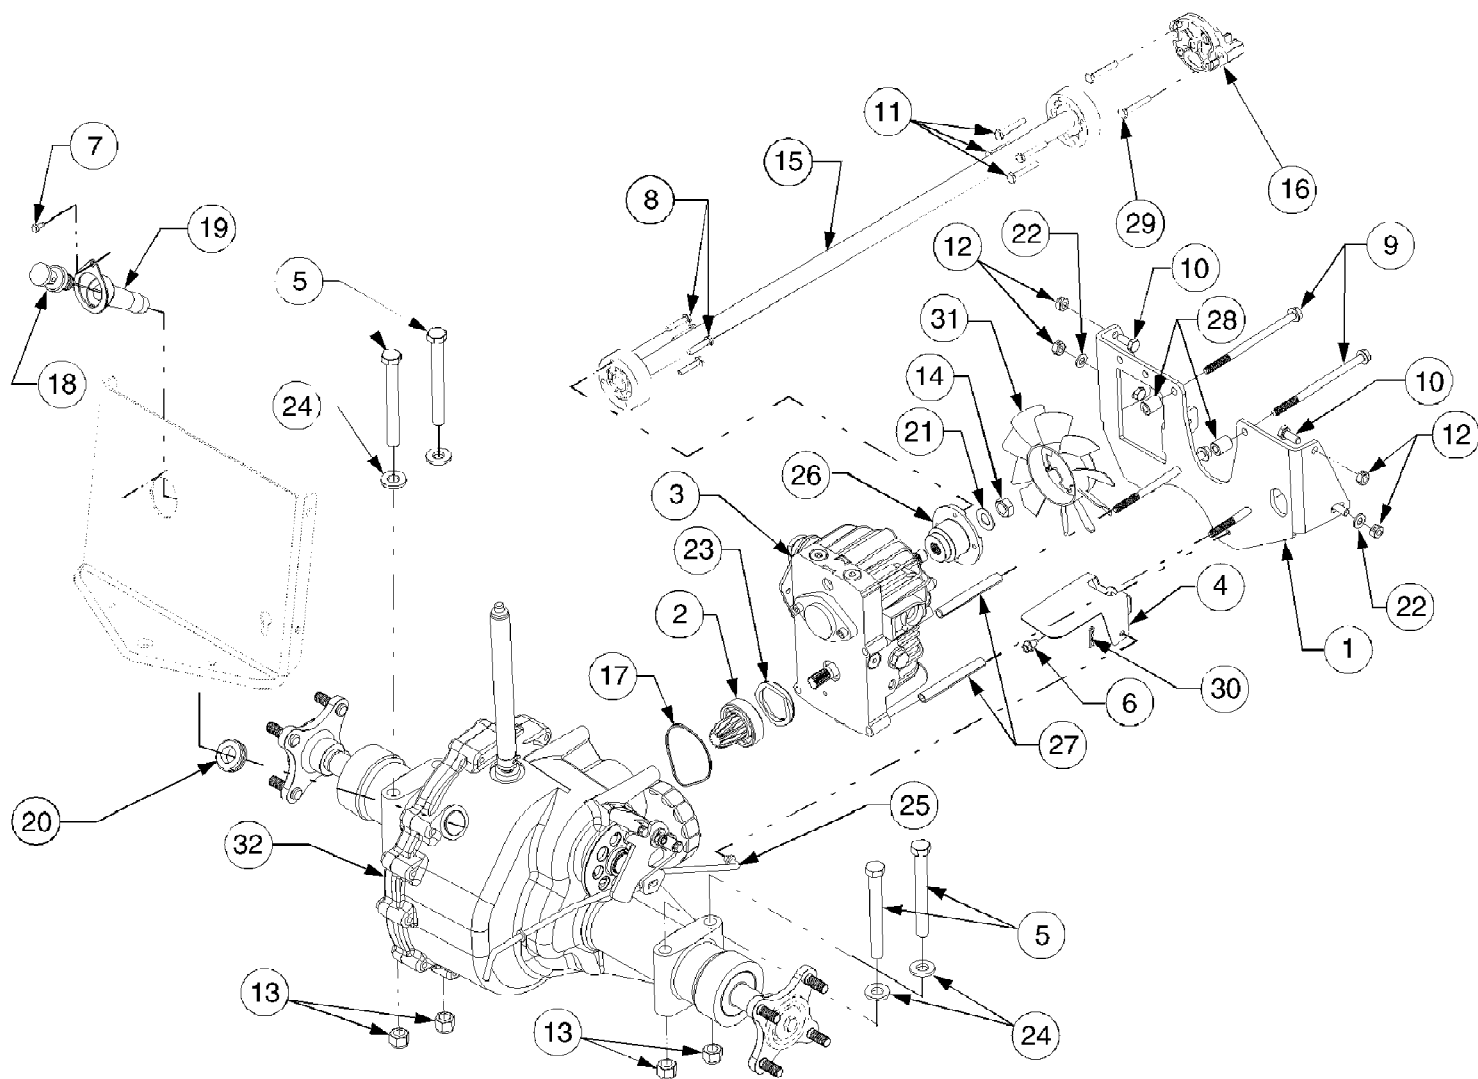

LT2042 Tractor
Drive Line

Page 22 of 72


Ref #	Part Number	Qty	S/P/F	Description
1	603-0707	1		Bracket, Torque
2	617-3002	1		Gear Assembly, Pinion
3	618-3243	1	S	Transmission, Hydrostatic
4	703-4093	1	/P	Spring Plate, Hydro Dump
5	710-0465	4		Screw, Hex Cap, 1/2-20 x 4.5 GR5
6	710-0599	1	/P	Scrw, Hx Wsh Hd Tapp, 1/4-20 x 5
7	710-0919	1	/P	Scrw, Hx Wsh Hd Tapp, 10-16 x .44
8	710-1062	4		Screw, Hex Patch, 1/4-20 x 1.25 GR5
9	710-1888	4		Scrw, Hx Hd Tapp, 5/16-18 x 5.25
10	710-3008	4	/P	Screw, Hex Cap, 5/16-18 x .75 GR5
11	710-3288	4		Screw, Hex Patch, 1/4-20 x 1.62 GR5
12	712-3009	4	S	Nut, Hex Cntr Lock, 3/8-16
13	712-3058	4	S	Nut, Hex Nylon Lock, 1/2-20 GR2
14	712-3059	1	/P	Nut, Hex Top Lock Jam, 1/2-20
15	718-3143	1		Shaft, Drive, 30.875 Lg
15	759-3764	2	/P	Drive Barrels Kit Not shown (2 used per tractor)
16	719-3096	1	/P	Adapter, Engine
17	721-0519	1		Seal, Gland
18	727-3195	1		Dipstick, Transmission
19	731-3294	1		Holder, Dipstick
20	735-0277A	1		Grommet, Rubber, .75 x 1.063
21	736-0253	1	S	Washer, Belleville
22	736-0275	2	S	Washer, Flat, .344 x .688 x .065
23	736-0619	1		Washer, Spring
24	736-3019	4		Washer, Flat, .531 x 1.062 x .134
25	747-3417	1	S	Rod, Hydro Dump Valve
26	748-3093	1		Adapter, Hydro Pump
27	750-3349	2		Spacer, Hydro, .323 x .443 3.51
28	750-3350	2		Spacer, Hydro, .323 x .600 x .74
29	KH-24-086-16	2	S	Screw, Hex Patch, M10-1.50 x 90mm
30	714-0104	1	S	Internal Cotter Pin
31	731-3297	1		Fan, Pump
32		1		See "Hydro Transmission" for Parts Info.

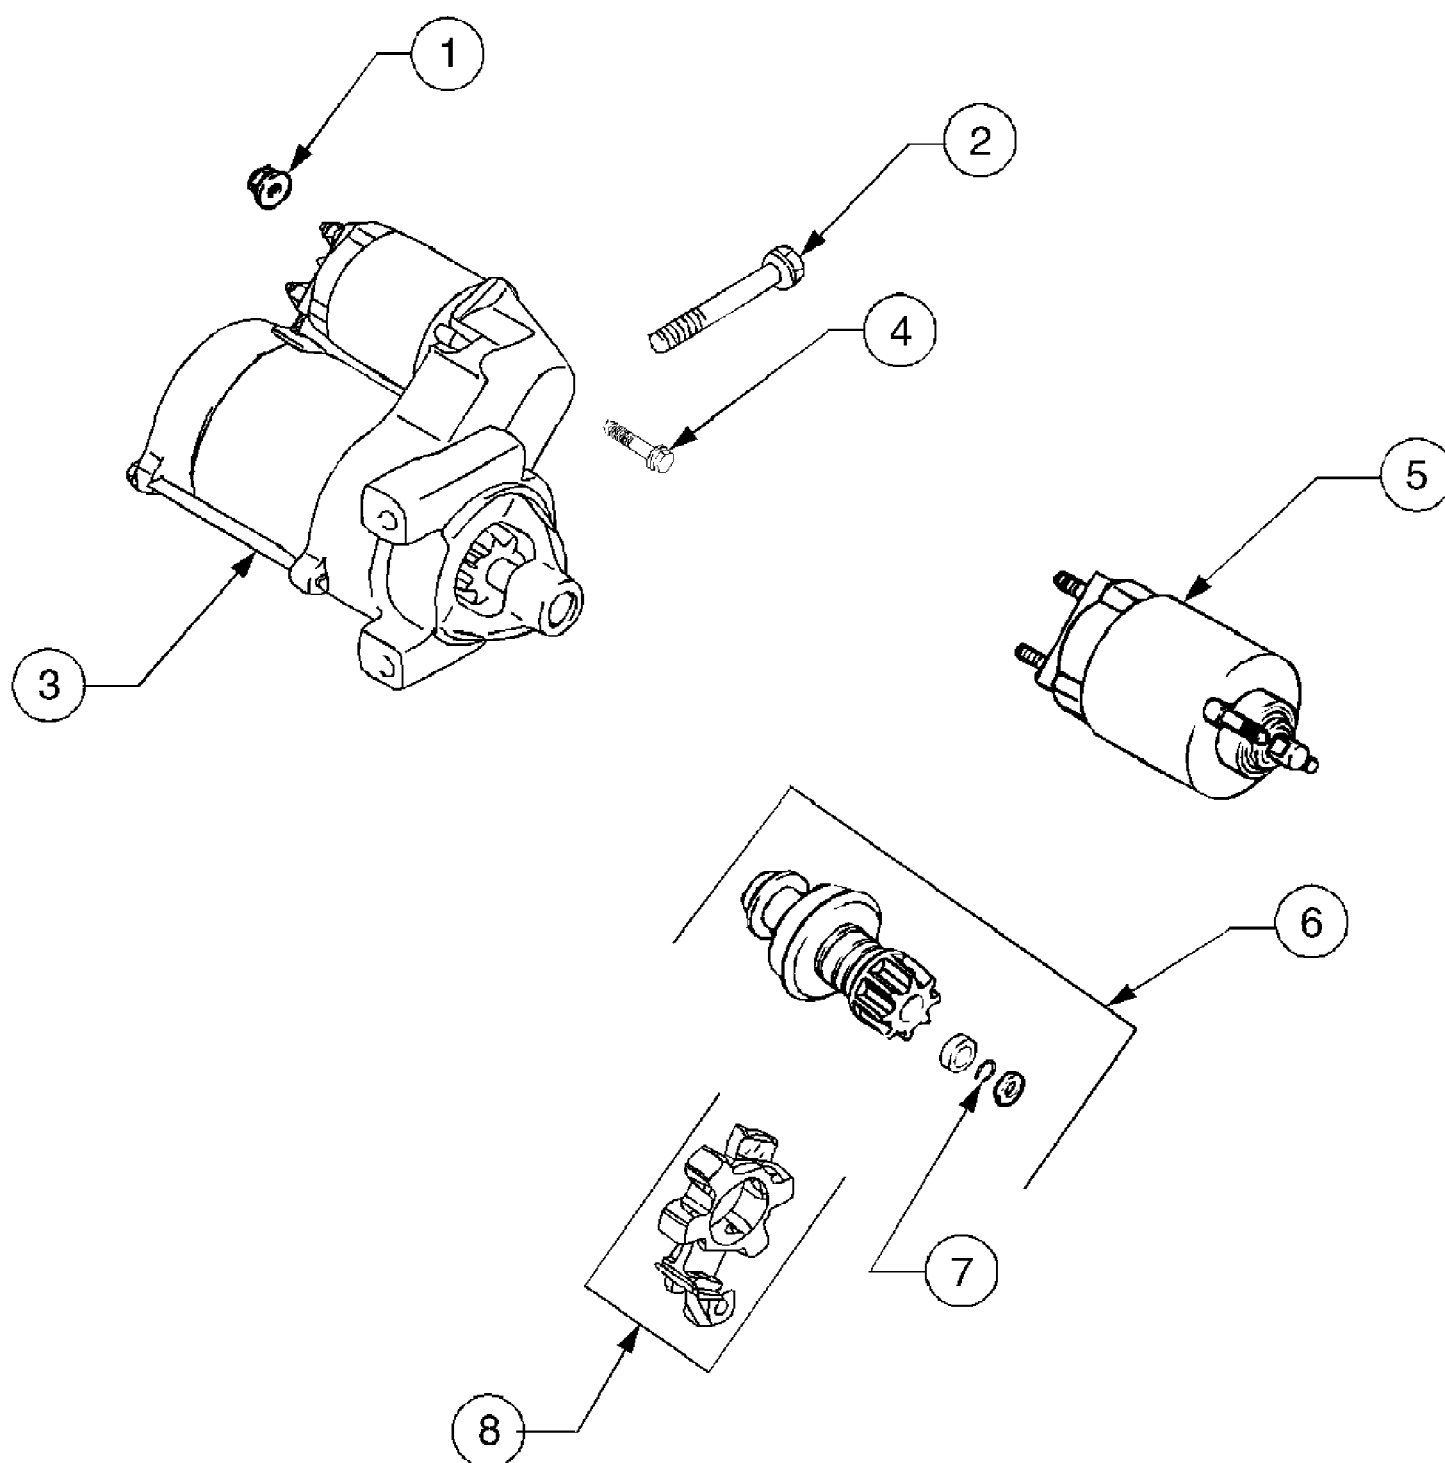

LT2042 Tractor
Electric Start

Page 24 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-0841080	1	S	Nut, Hex Flange M8 x 1.25"
2	KH-M-839080	2	S	Screw, Hex Flange M8 x 1.25 x 80
3	KH-25-098-09-S	1	S	Starter, Solenoid Shift Assembly (Includes 4-8)
4	KH-25-435-05-S	1	S	Kit, Solenoid
5	KH-25-755-33-S	1		Kit, Pinion Drive (Includes 7)
6	KH-25-221-01-S	1		Kit, Brush
7	KH-25-141-05-S	1		Ring, Retainer
8	KH-25-086-113-S	3		Screw, External Torx Hd.

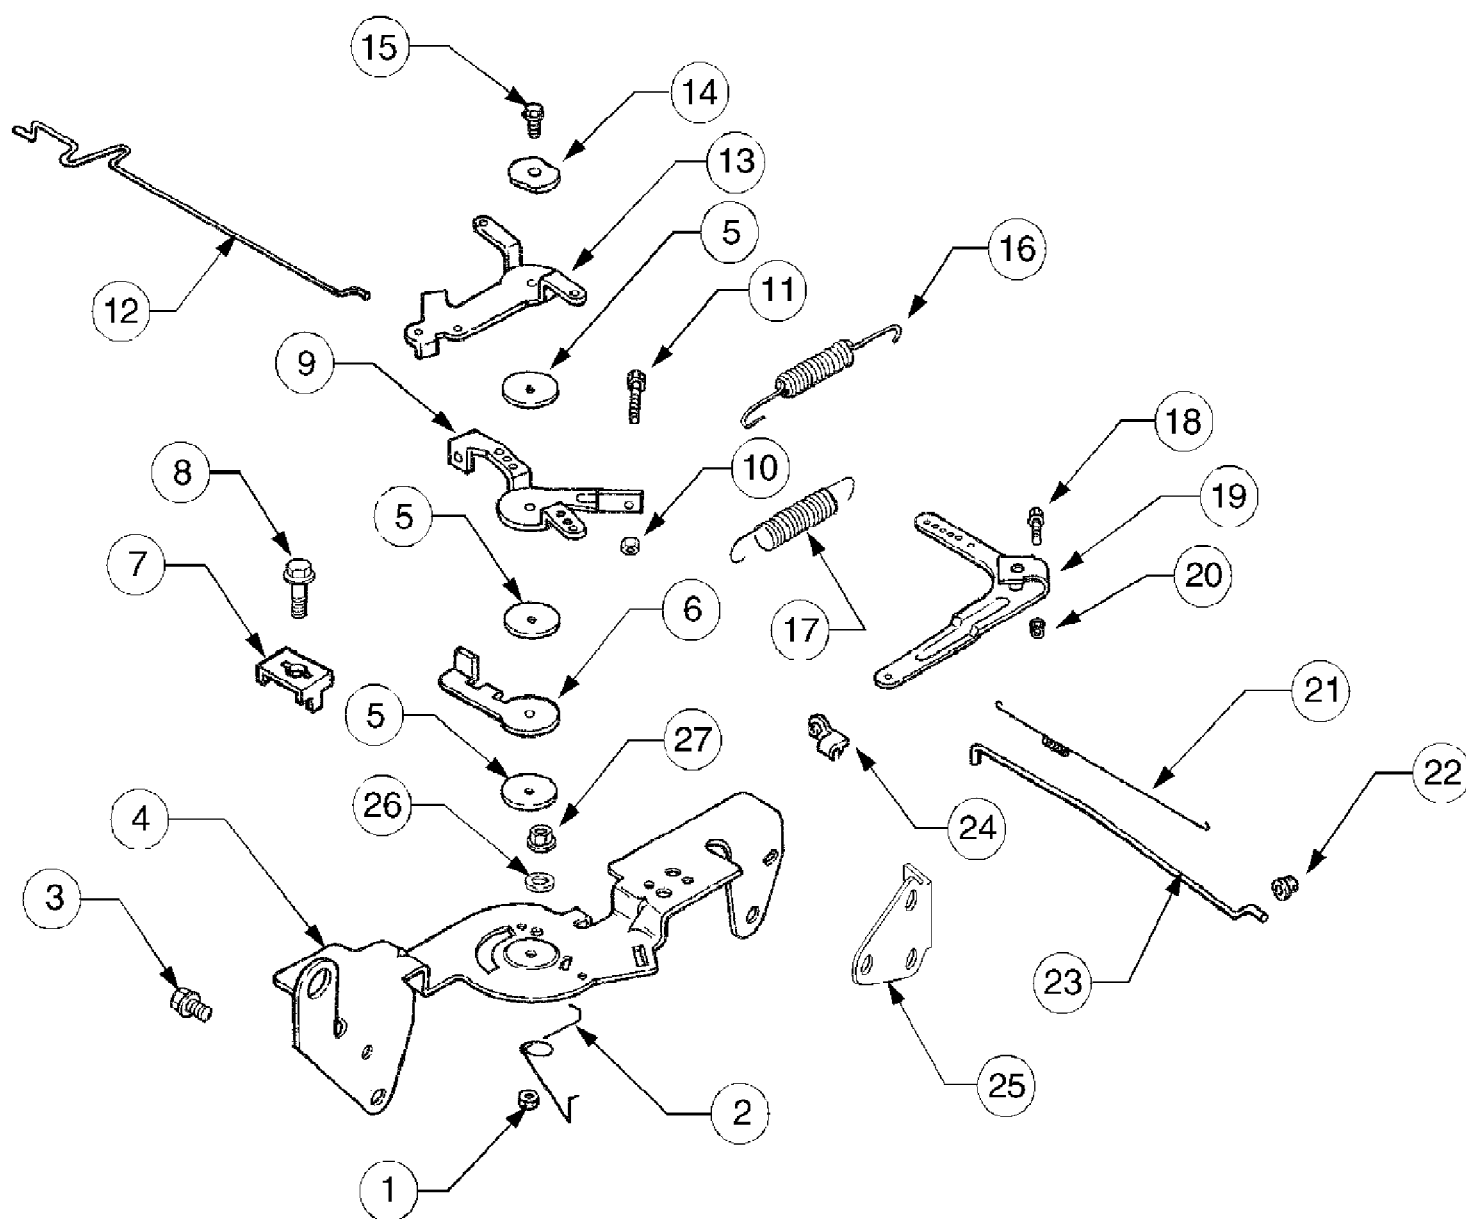


LT2042 Tractor
Engine Controls

Page 26 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	KH-M-0547050	1	/P	Nut, Hex Lock M5 x 0.8
2	KH-24-089-03	1		Spring, Choke Return
3	KH-M-645016-S	4	/P	Screw, Hex Flange M6 x 1.0 x 16
4	KH-24-126-56	1	S	Bracket, Control
5	KH-24-468-01	3		Washer , Plain 5.5mm
6	KH-24-090-07	1	/P	Lever, Throttle Actuator
7	KH-12-237-01	2		Clamp, Cable
8	KH-M-545016-S	3	/P	Screw, Hex Flange M5 x 0.8 x 16
9	KH-24-090-13	1		Lever, Throttle Control
10	KH-M-446030-S	1	/P	Nut, Hex M4 x 0.7
11	KH-M-401030	1	/P	Screw, Hex Cap M4 x 0.7 x 30
12	KH-24-079-21-S	1	/P	Linkage, Choke
13	KH-24-090-05	1		Lever, Choke
14	KH-41-468-03	1		Washer, Spring 1/4"
15	KH-M-0545020	1	/P	Screw, Hex Flange M5 x 0,.8 x 20
16	KH-24-089-51-S	1	/P	Spring, Throttle Limiter
17	KH-24-089-48-S	1		Spring, Governor
18	KH-24-211-03-S	1		Screw, Round Hd. Square Neck
19	KH-24-090-33-S	1	S	Lever, Governor
20	KH-M-0641060	1	S	Nut, Hex Flange M6 x 1.0
21	KH-24-089-01	1		Spring, Linkage
22	KH-25-158-08	1	/P	Bushing, Linkage Retaining
23	KH-24-079-01	1		Linkage, Throttle
24	KH-25-158-11	1	/P	Bushing, Linkage Retaining
25	KH-24-126-04	2	S	Bracket, Support
26	KH-X-20-1	1		Washer
27	KH-M-541050-S	1		Nut, Hex

LT2042 Tractor
Engine Mounting And Muffler


Page 27 of 72

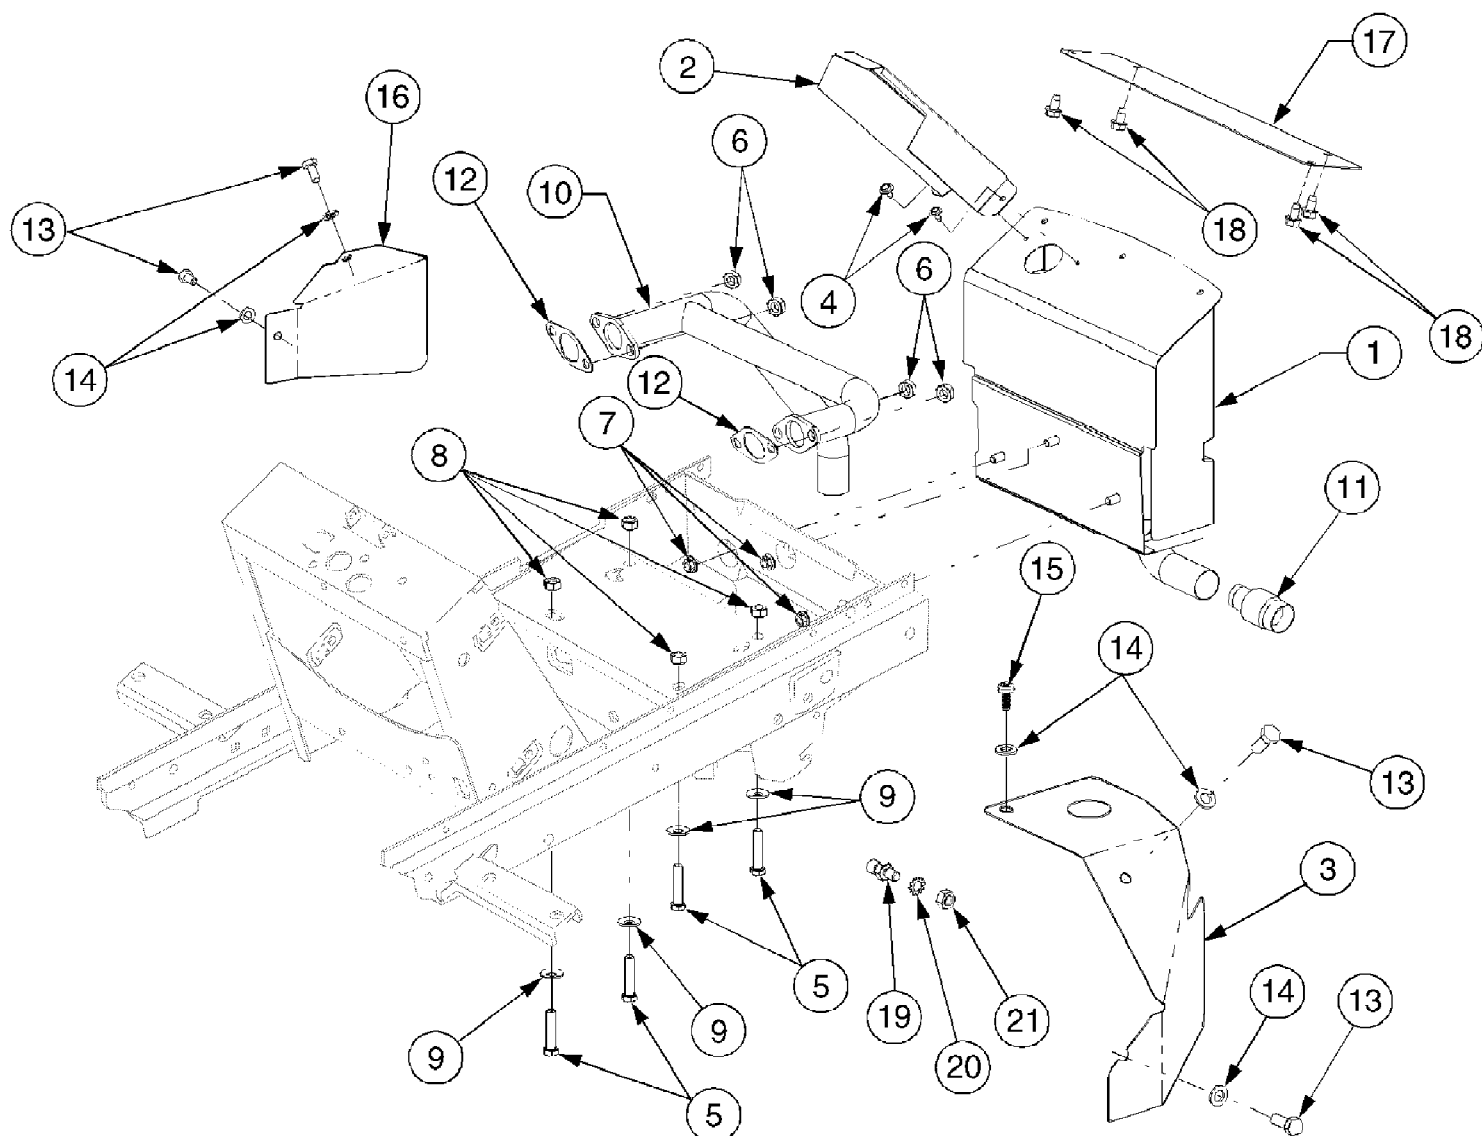

LT2042 Tractor
Engine Mounting And Muffler

Page 28 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	651-3001	1	S	Muffler Assembly
2	703-3099A	1	/P	Shield, Muffler Tube
3	703-2632	1	S	Baffle, RH Heat
4	710-1268	2	/P	Screw, Hex Wsh Hd Tap, #10-16 x .38
5	710-0539	4	/P	Bolt, Eng Mount, 3/8-24 x 1.75 GR5
6	KH-M-0841080	4	S	Nut, Hex Flange
7	712-3004A	3	/P	Nut, Hex Flange Lock, 5/16-18
8	712-3054	4	/P	Nut, Hex Lock, 3/8-24
9	736-0105	4	/P	Washer, Bell, .380 x .88 x .062
10	751-10026	1		Tube, Exhaust
11	759-3744	1	S	Arrestor, Spark
12	KH-24-041-02	2	S	Gasket, Exhaust
13	710-3209	4		Screw, Hex Cap, M6 x 1 x 10
14	736-0142	5	S	Washer, Flat, .281 x .5 x .06
15	710-0351	1	/P	Screw, Truss Hd Tapp, #10 x .5
16	703-2631	1	S	Baffle, LH Heat
17	703-05474	1		Deflector, Heat
18	710-0599	4	/P	Screw, Hex Wsh Hd Tap, 1/4-20 x .5
19	711-1094	1		Stud, Gound
20	712-3010	1	S	Nut, Hex, 5/16 - 18 GR5
21	736-0607	1	/P	Wash, Ext. Tooth Lock, 5/16

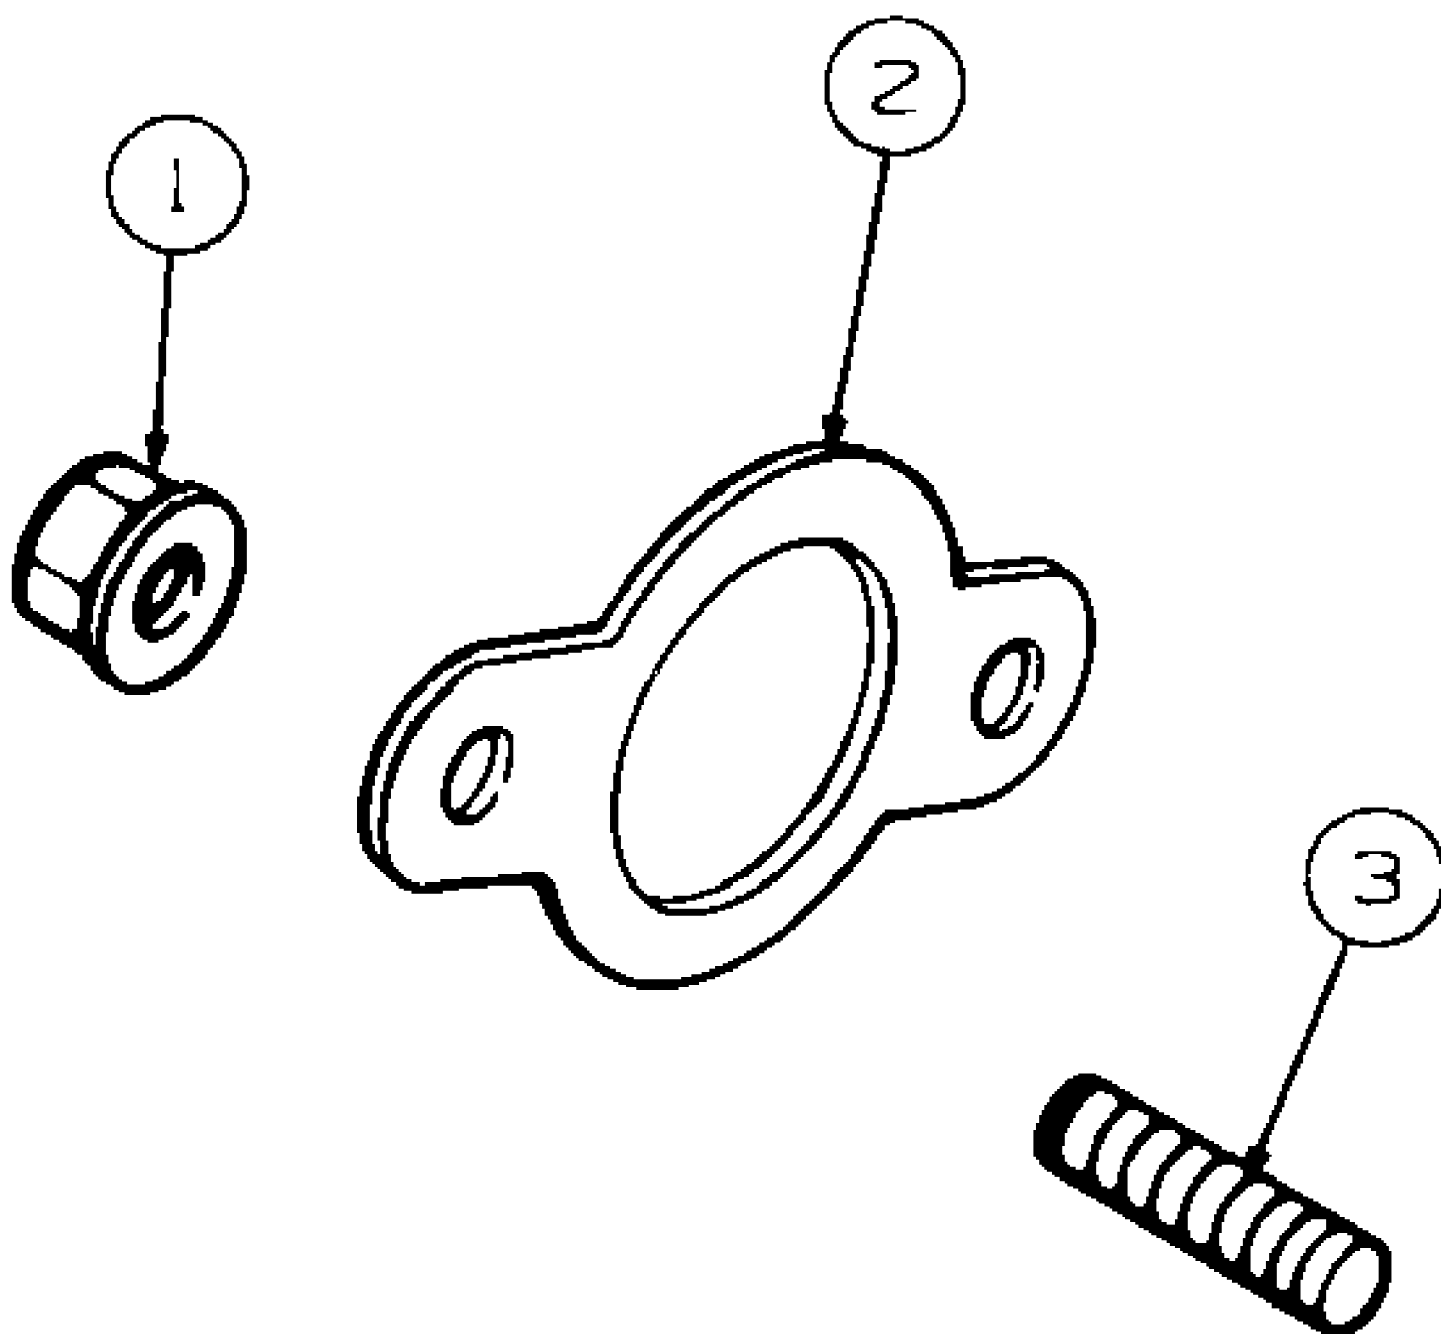


LT2042 Tractor
Exhaust

Page 30 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	712-3086	4	/P	Nut, Muffler Mounting, M8 x 1.25
2	721-0377	2	S	Gasket, Exhaust
3	KH-25-072-04	4	/P	Stud, Exhaust, M8 x 1.25 x 33

LT2042 Tractor
Fender And Running Board


Page 31 of 72

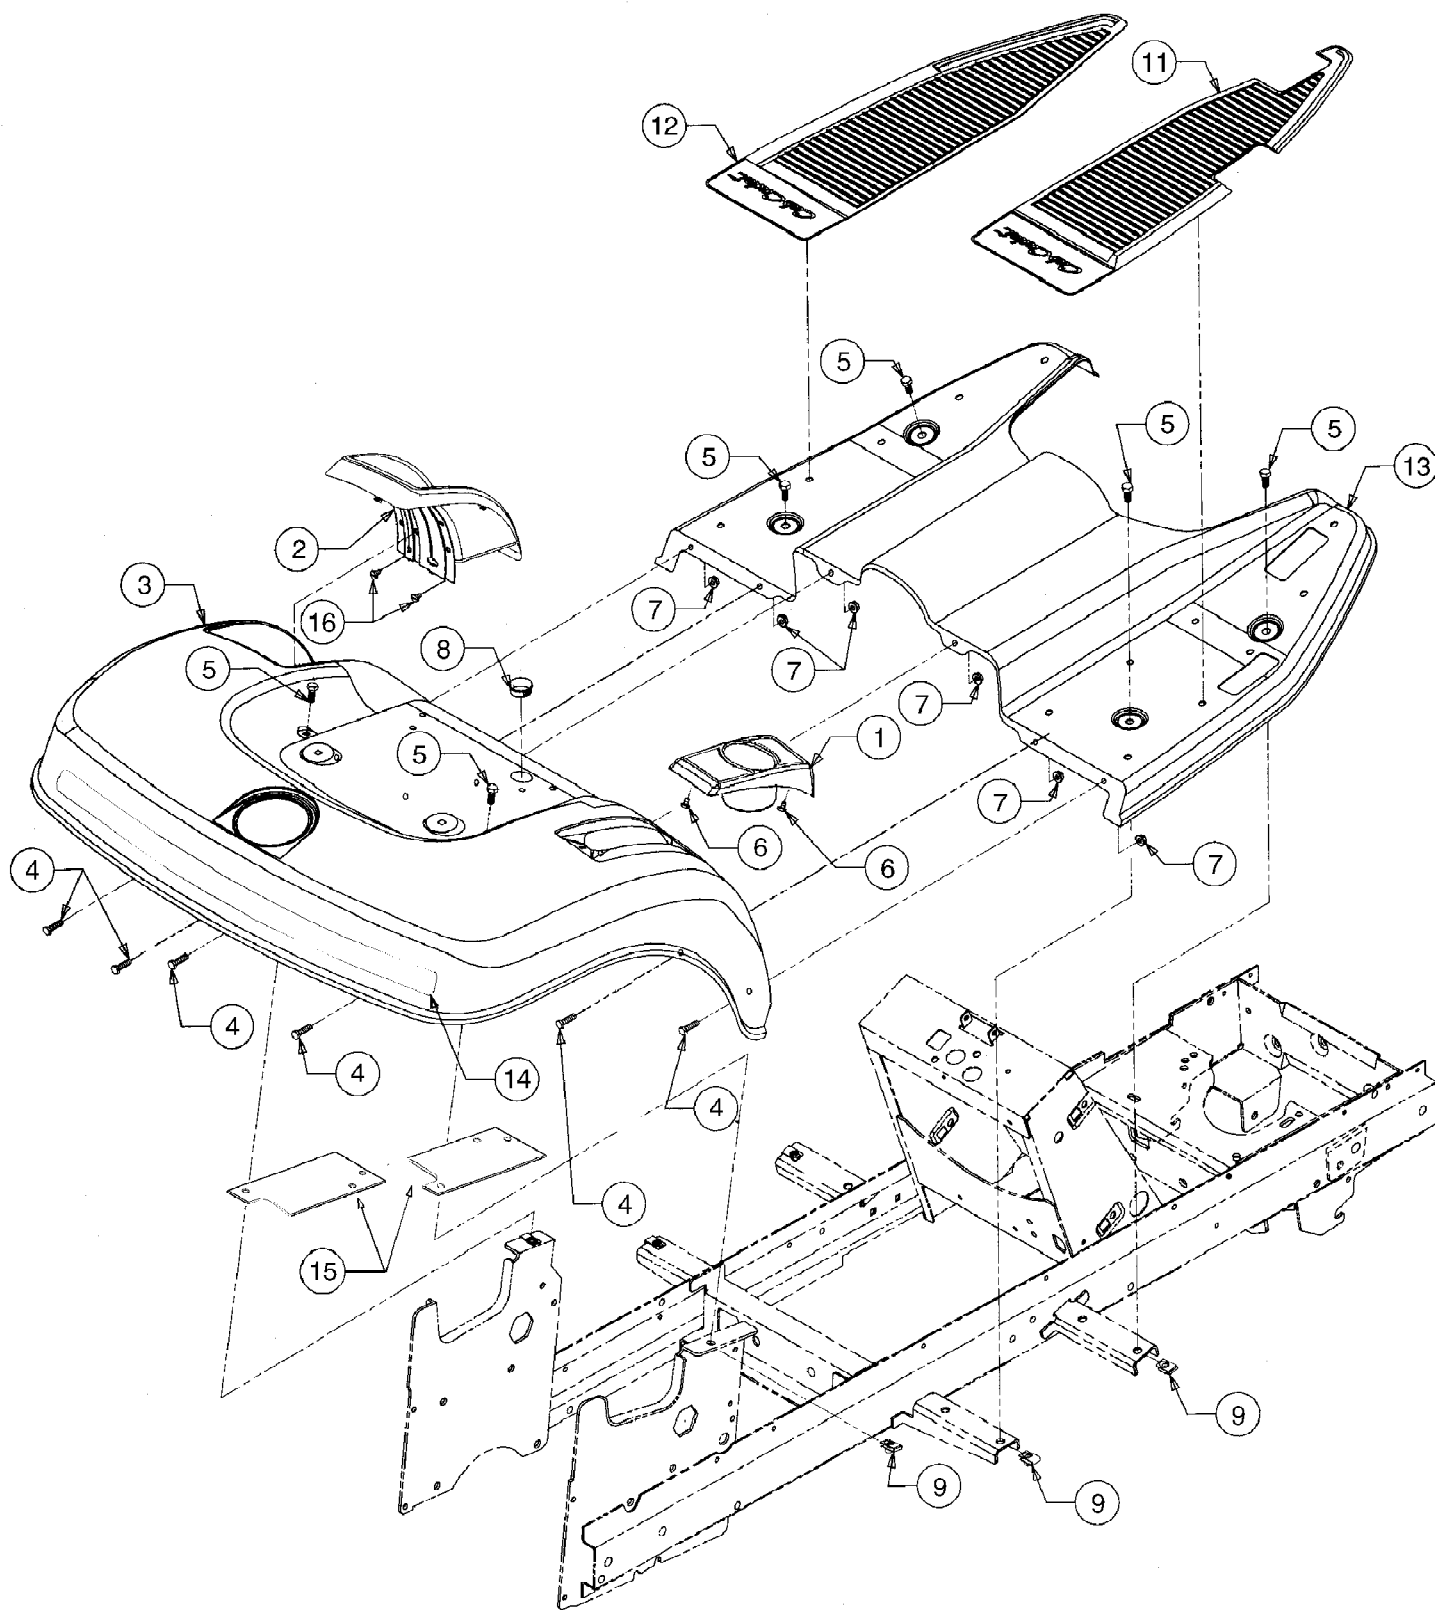

LT2042 Tractor
Fender And Running Board

Page 32 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	731-3212A	1	/P	Cup Holder
2	631-3002	1		Cover, Implement Lift
3	703-05570	1	S	Fender
	777D08642	1		Graphic, LH Reflector
	777D08643	1		Graphic, RH Reflector
4	710-0751	6	/P	Screw, Hex Cap, 1/4-20 x .62 GR5
5	710-1260A	6	/P	Screw, Hex Wash Hd Tapp 5/16-18 x .750
6	710-1268	2	/P	Screw, Hex Tapp, #10 x .38 Lg
7	712-3027	6	S	Nut, Hex Flange Lock, 1/4-20
8	723-3042	1	/P	Bushing, Snap, 7/8 ID
9	726-0211	6	S	U-Nut, 5/16-18
11	735-3046A	1	/P	Pad, RH Foot
12	735-3047	1		Pad, LH Foot
13	703-2279-0716	1	/P	Running Board w/Graphic
	777S30170	1	/P	Graphic, Warning
	777S32494	1		Graphic, Danger
14	777D08233	1		Graphic, Rear Fender
15	703-2628	2		Bracket, Fender Reinforcement
16	710-0224	4	S	Screw, Hex Tapp, #10-16 x .5 Lg.

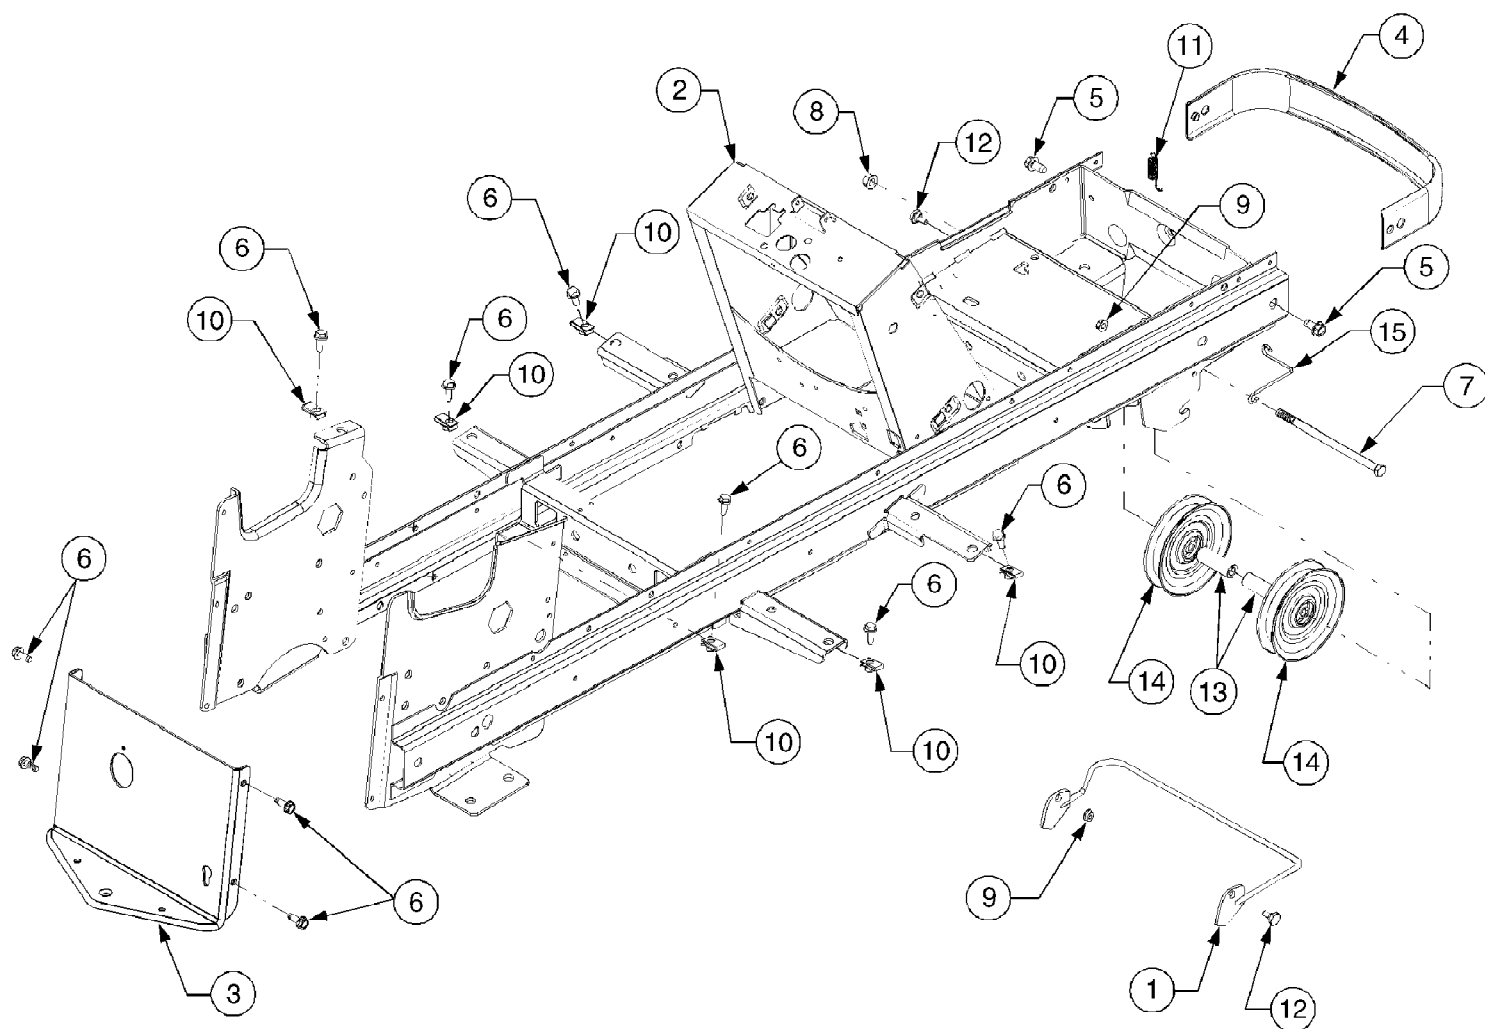


LT2042 Tractor
Frame And Drawbar

Page 34 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	603-04250	1	S	Rod, Quick Attach
2	603-04232	1		Frame
3	703-3453	1		Drawbar
3	777I20773	1		Graphic, Transmission Release Lever Not shown
3	777S30265	1		Graphic, Transmission Oil Not shown
4	703-05626	1	/P	Bumper
5	710-0623	2	/P	Screw, Hex Wsh Hd Tapp 3/8-16 x .75
6	710-1260A	10	/P	Screw, Hex Wsh Hd Tap 5/16-18 x .75
7	710-3261	1		Screw, Hex Cap, 3/8-16 x 7.0
8	712-0431	1	S	Nut, Hex Flange Lock, 3/8-16
9	712-3027	2	S	Nut, Hex Flange Lock, 1/4-20
10	726-0211	6	S	U-Nut, 5/16-18
11	732-3002	1	S	Spring, Latch
12	738-0255	2	S	Bolt, Shoulder
13	750-04198	2		Spacer, Idler, .411 x .720 x 2.19
14	756-3045	2	S	Pulley, Idler
15	732-0970	1	S	Belt Guide

LT2042 Tractor
Front Axle And Connections


Page 35 of 72

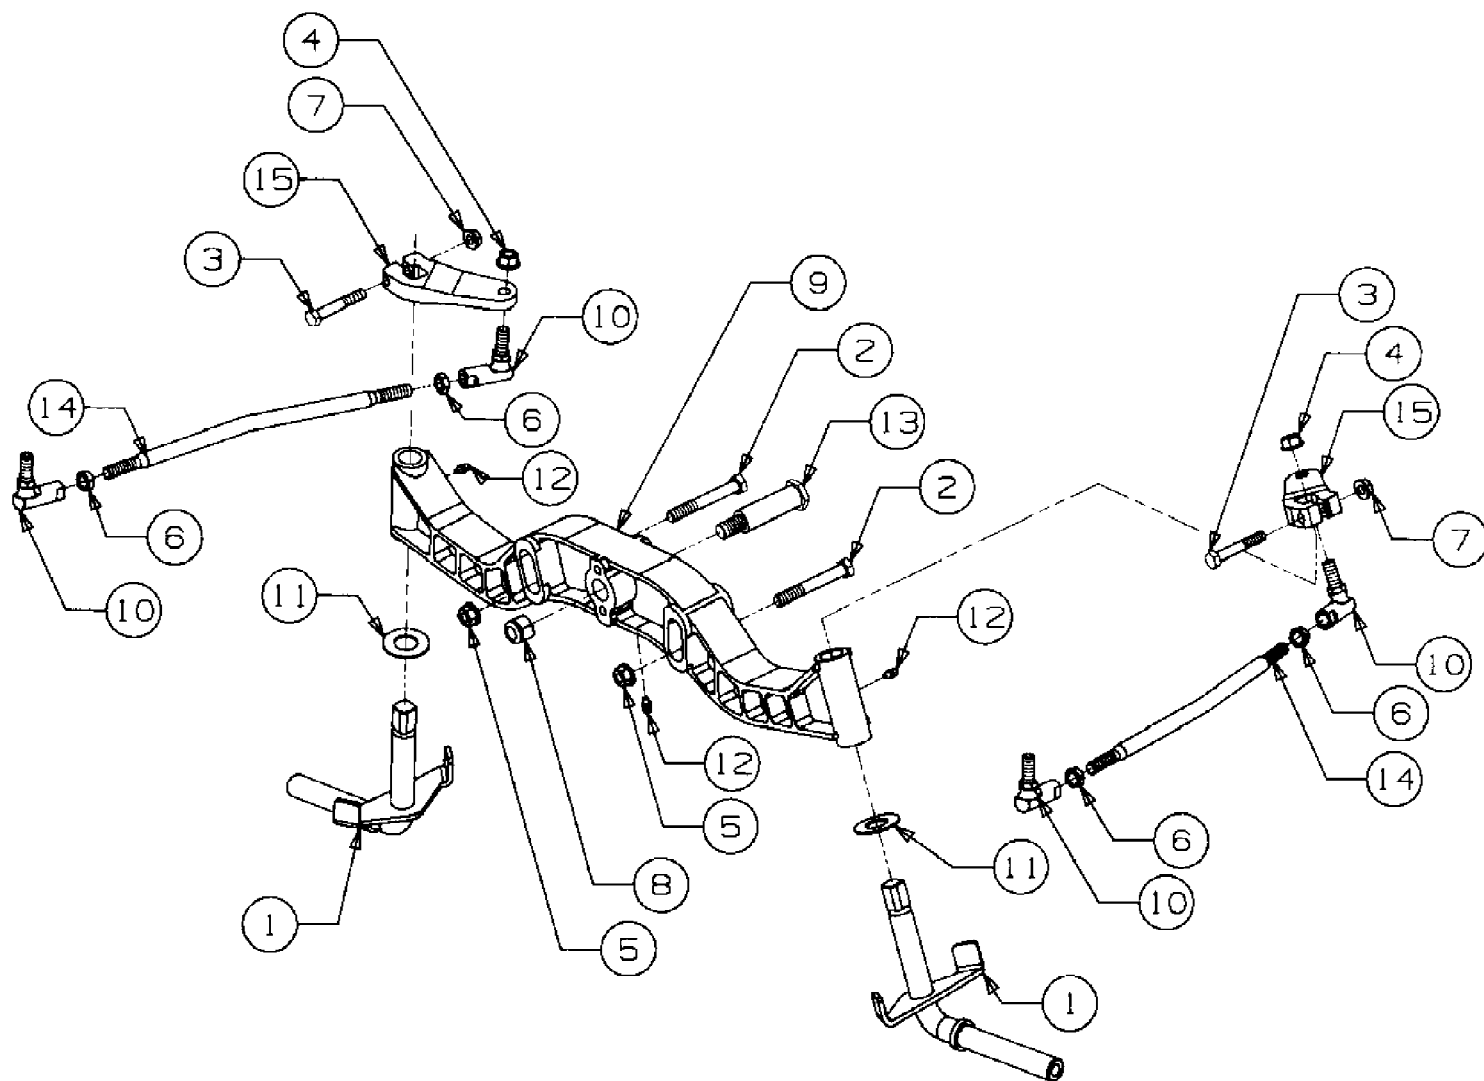

LT2042 Tractor
Front Axle And Connections

Page 36 of 72


Ref #	Part Number	Qty	S/P/F	Description
1	603-0066	2		Knuckle Assembly, Steering
2	710-3066	2	/P	Screw, Hex Cap, 3/8-16 x 2.75 GR8
3	710-3103	2	/P	Screw, Hex Cap, 5/16-18 x 2 GR5
4	712-3054	2	/P	Nut, Hex Lock, 3/8-24 GR5
5	712-0431	2	S	Nut, Hex Flanged Lock, 3/8-16
6	712-0711	4	/P	Nut, Hex Jam, 3/8-24 GR2
7	712-3004A	2	/P	Nut, Hex Flange Top Lock, 5/16-18
8	712-3083	1	/P	Nut, Hex Top Nylon Lock, 1/2-13
9	719-3095	1		Axle, Front Pivot
10	723-0156	4	S	Joint, Ball, 3/8-24
11	736-0188	2	/P	Washer, Flat, .760 x 1.49 x .06 Thk.
12	737-3000	3	S	Fitting, Lube, 3/16 Drive Type
13	738-3110	1	S	Bolt, Pivot Shoulder, 3/4 Dia x 2.23
14	747-3171	2		Rod, Tie
15	748-3049	2		Arm, Steering

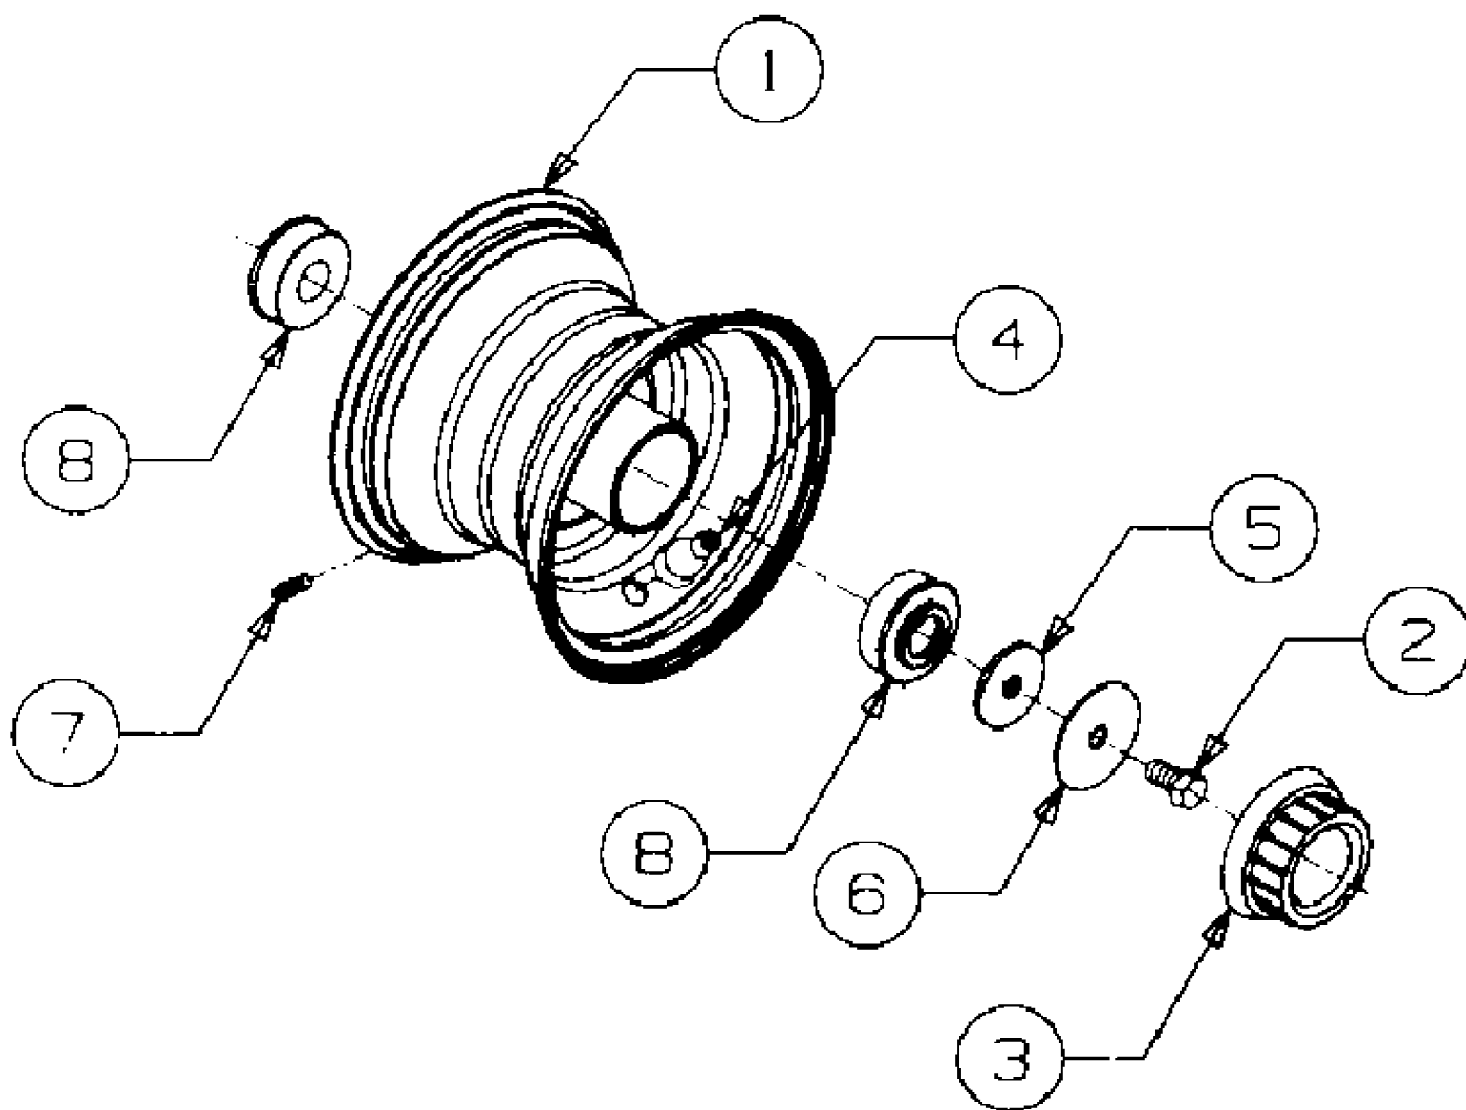

LT2042 Tractor
Front Wheel

Page 38 of 72


Ref #	Part Number	Qty	S/P/F	Description
	734-3186	2	S	Tire, Cub Tread, 15 x 6 x 6
1	634-3015	2	S	Rim Assy, Front
2	710-3119	2	/P	Bolt, Hex Patch, 3/8-16 x .75 GR5
3	731-3020	2	S	Cap, Hub
4	734-0255	2	S	Valve, Tubeless Air
5	736-3039	2	S	Washer, Flat, .406 x 1.5 x .110
6	736-3040	2	/P	Washer, Flat, .406 x 1.92 x .06
7	737-0224	2		Fitting, Grease
8	741-3032	4	S	Bearing, Ball

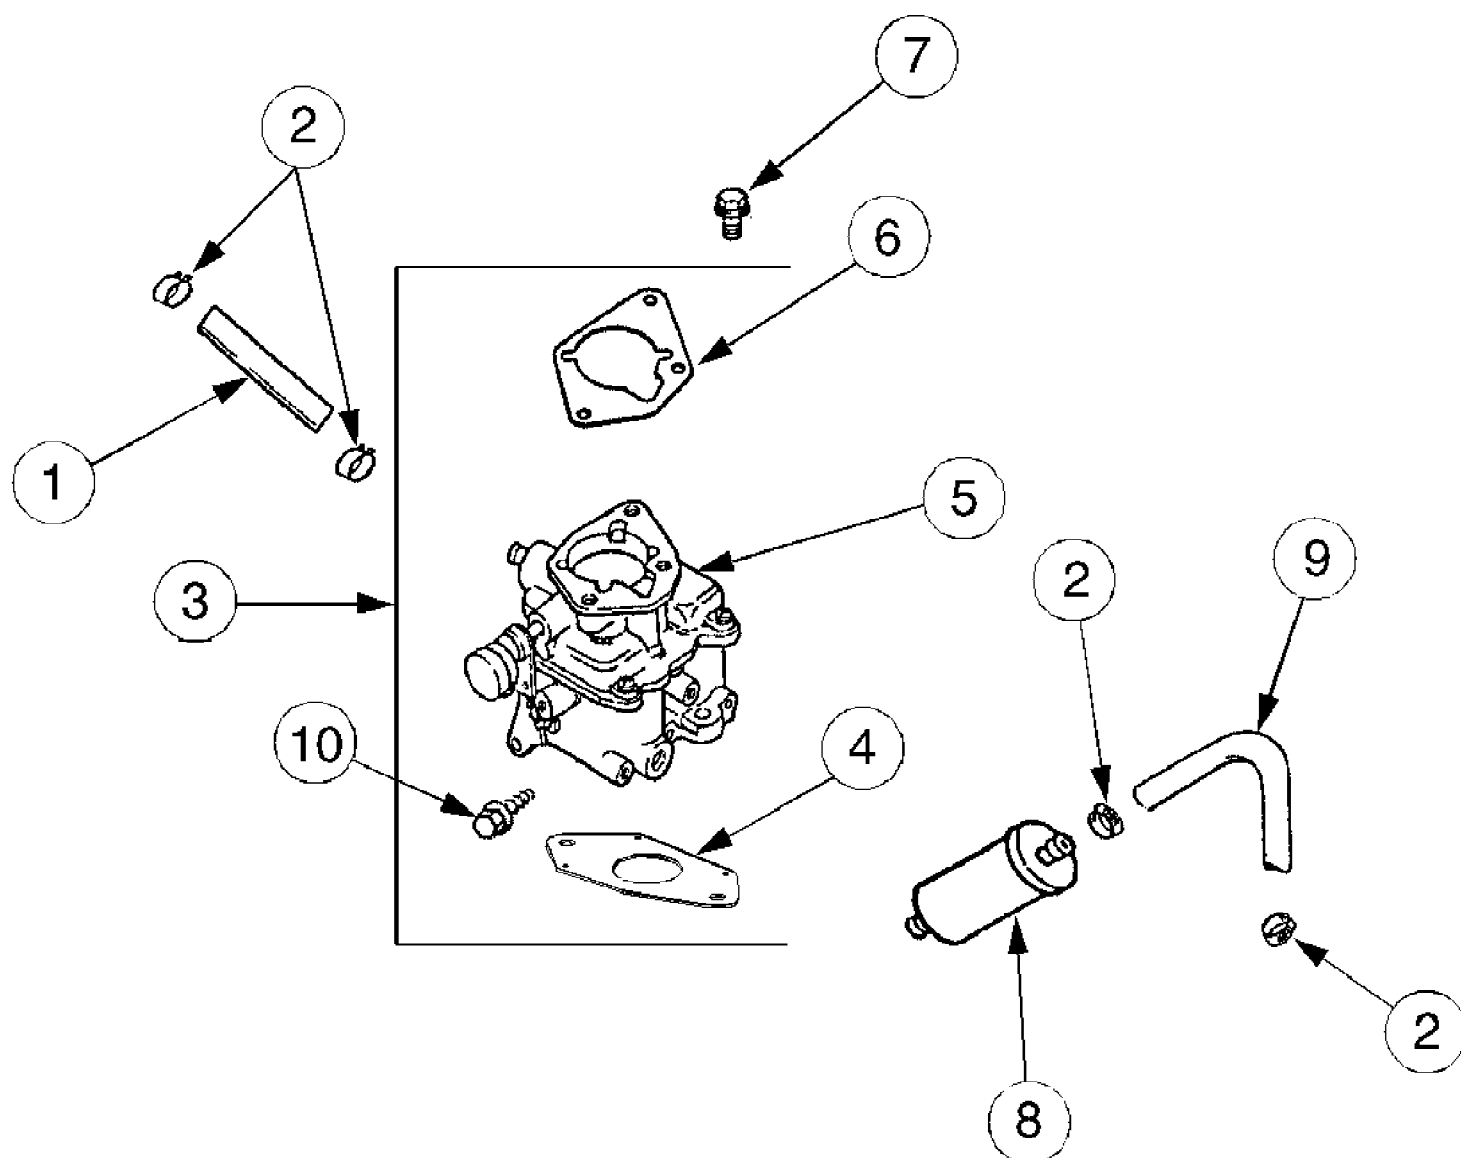

LT2042 Tractor
Fuel System

Page 40 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	KH-52-353-20	2	S	Line, Fuel 10"
2	KH-25-237-14-S	4	/P	Clamp, Hose
3	KH-24-853-32	1	/P	Kit, Carburetor w/Gasket (Includes 4-6,10)
4	KH-24-041-53-S	1		Gasket, Carburetor
5		1		Carburetor Assembly Not available separately
6	KH-24-041-06	1	/P	Gasket, Air Cleaner Base
7	KH-M-651025-S	2		Screw, Hex Flange, M6 x 1.0 x 25
8	KH-24-050-02	1	S	Filter, Fuel
9	KH-24-353-12	1		Line, Fuel 11"
10	KH-24-086-05	1		Screw, Throttle Stop
	723-3066-14	1	S	Insulator, Foam Fuel Line Not Illustrated
	KH-24-518-24-S	1		Lead, Ground Not Illustrated
	KH-24-757-01	1	/P	Kit, Solenoid Not Illustrated
	KH-24-757-02	1	S	Kit, Float Repair Not Illustrated
	KH-24-757-03	1	S	Kit, Carburetor Repair Not Illustrated
	KH-24-757-07	1		Kit, Choke Repair Not Illustrated
	KH-24-755-125-S	1		Kit, High Altitude Not Illustrated

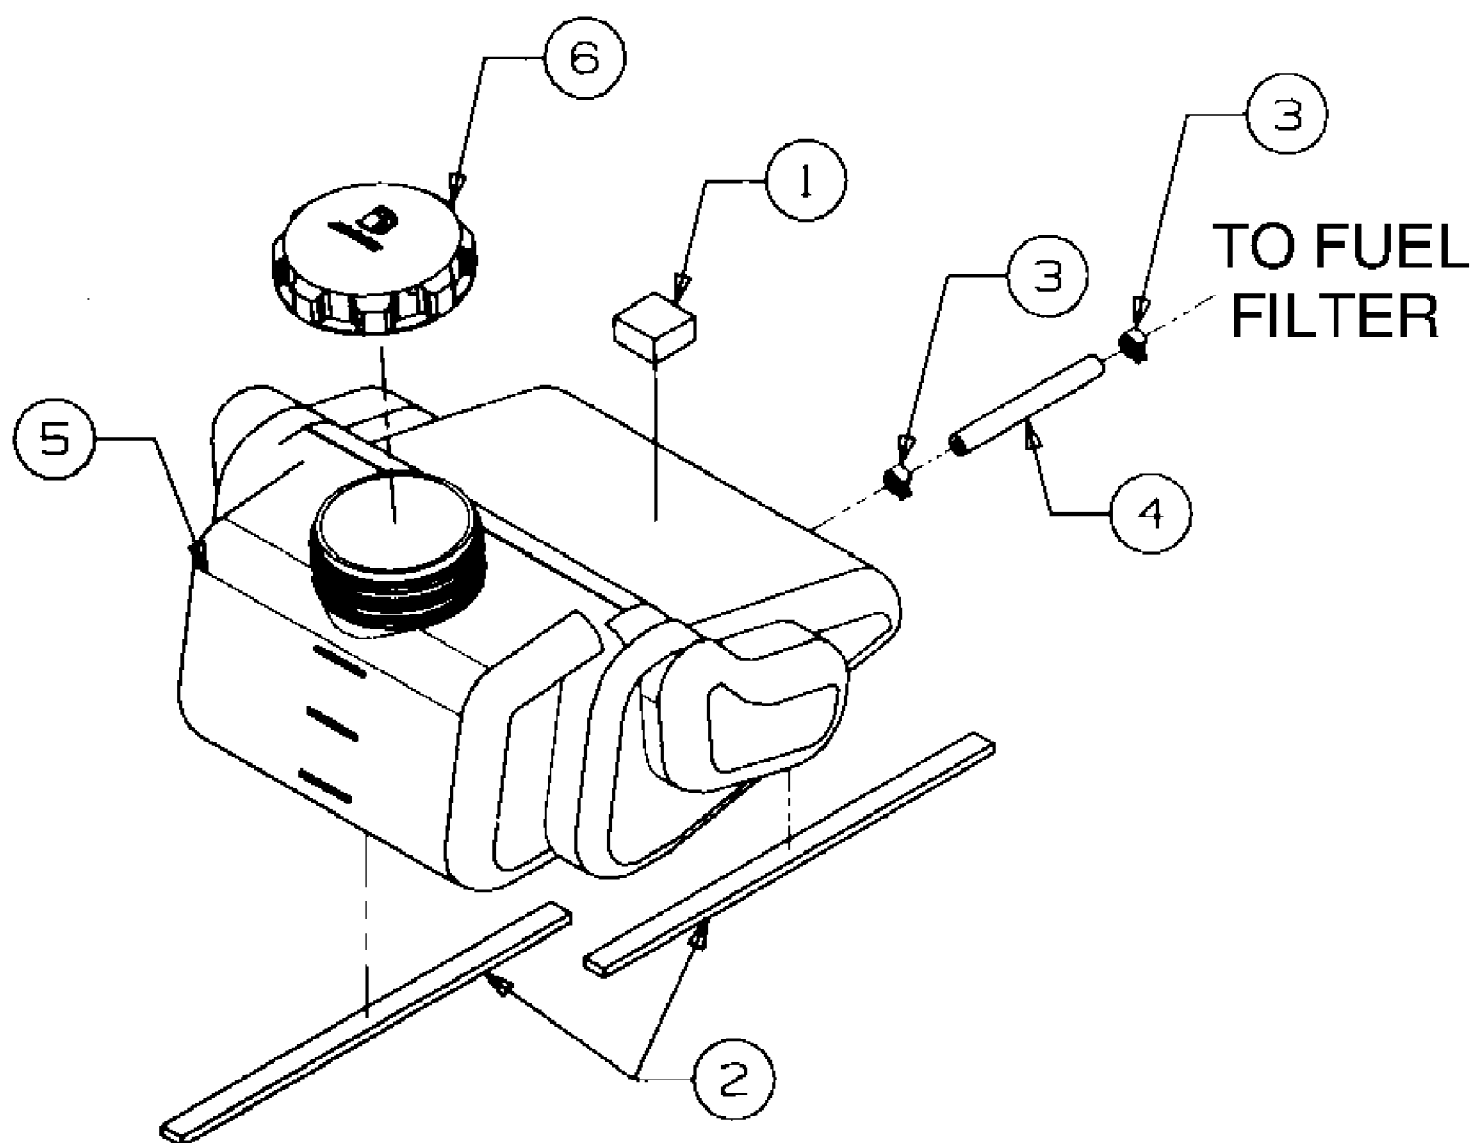


LT2042 Tractor
Fuel Tank

Page 42 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	722-3020	AR		Foam, 1.25 Sq x .62 Thk
2	722-3022	AR	S	Tape, Foam, .625 Wide x .25 Thk
3	726-0205	2	/P	Clamp, Hose
4	759-3330	1	/P	Line, Fuel, 72" (Shipped In 10ft Length)
5	751-3112B	1	/P	Tank, Fuel
6	751-3124B	1	S	Cap, Fuel
	723-3066-24	1	/P	Insulator, Foam Fuel Line Not Shown

LT2042 Tractor
Grille, Hood And Side Panels


Page 43 of 72

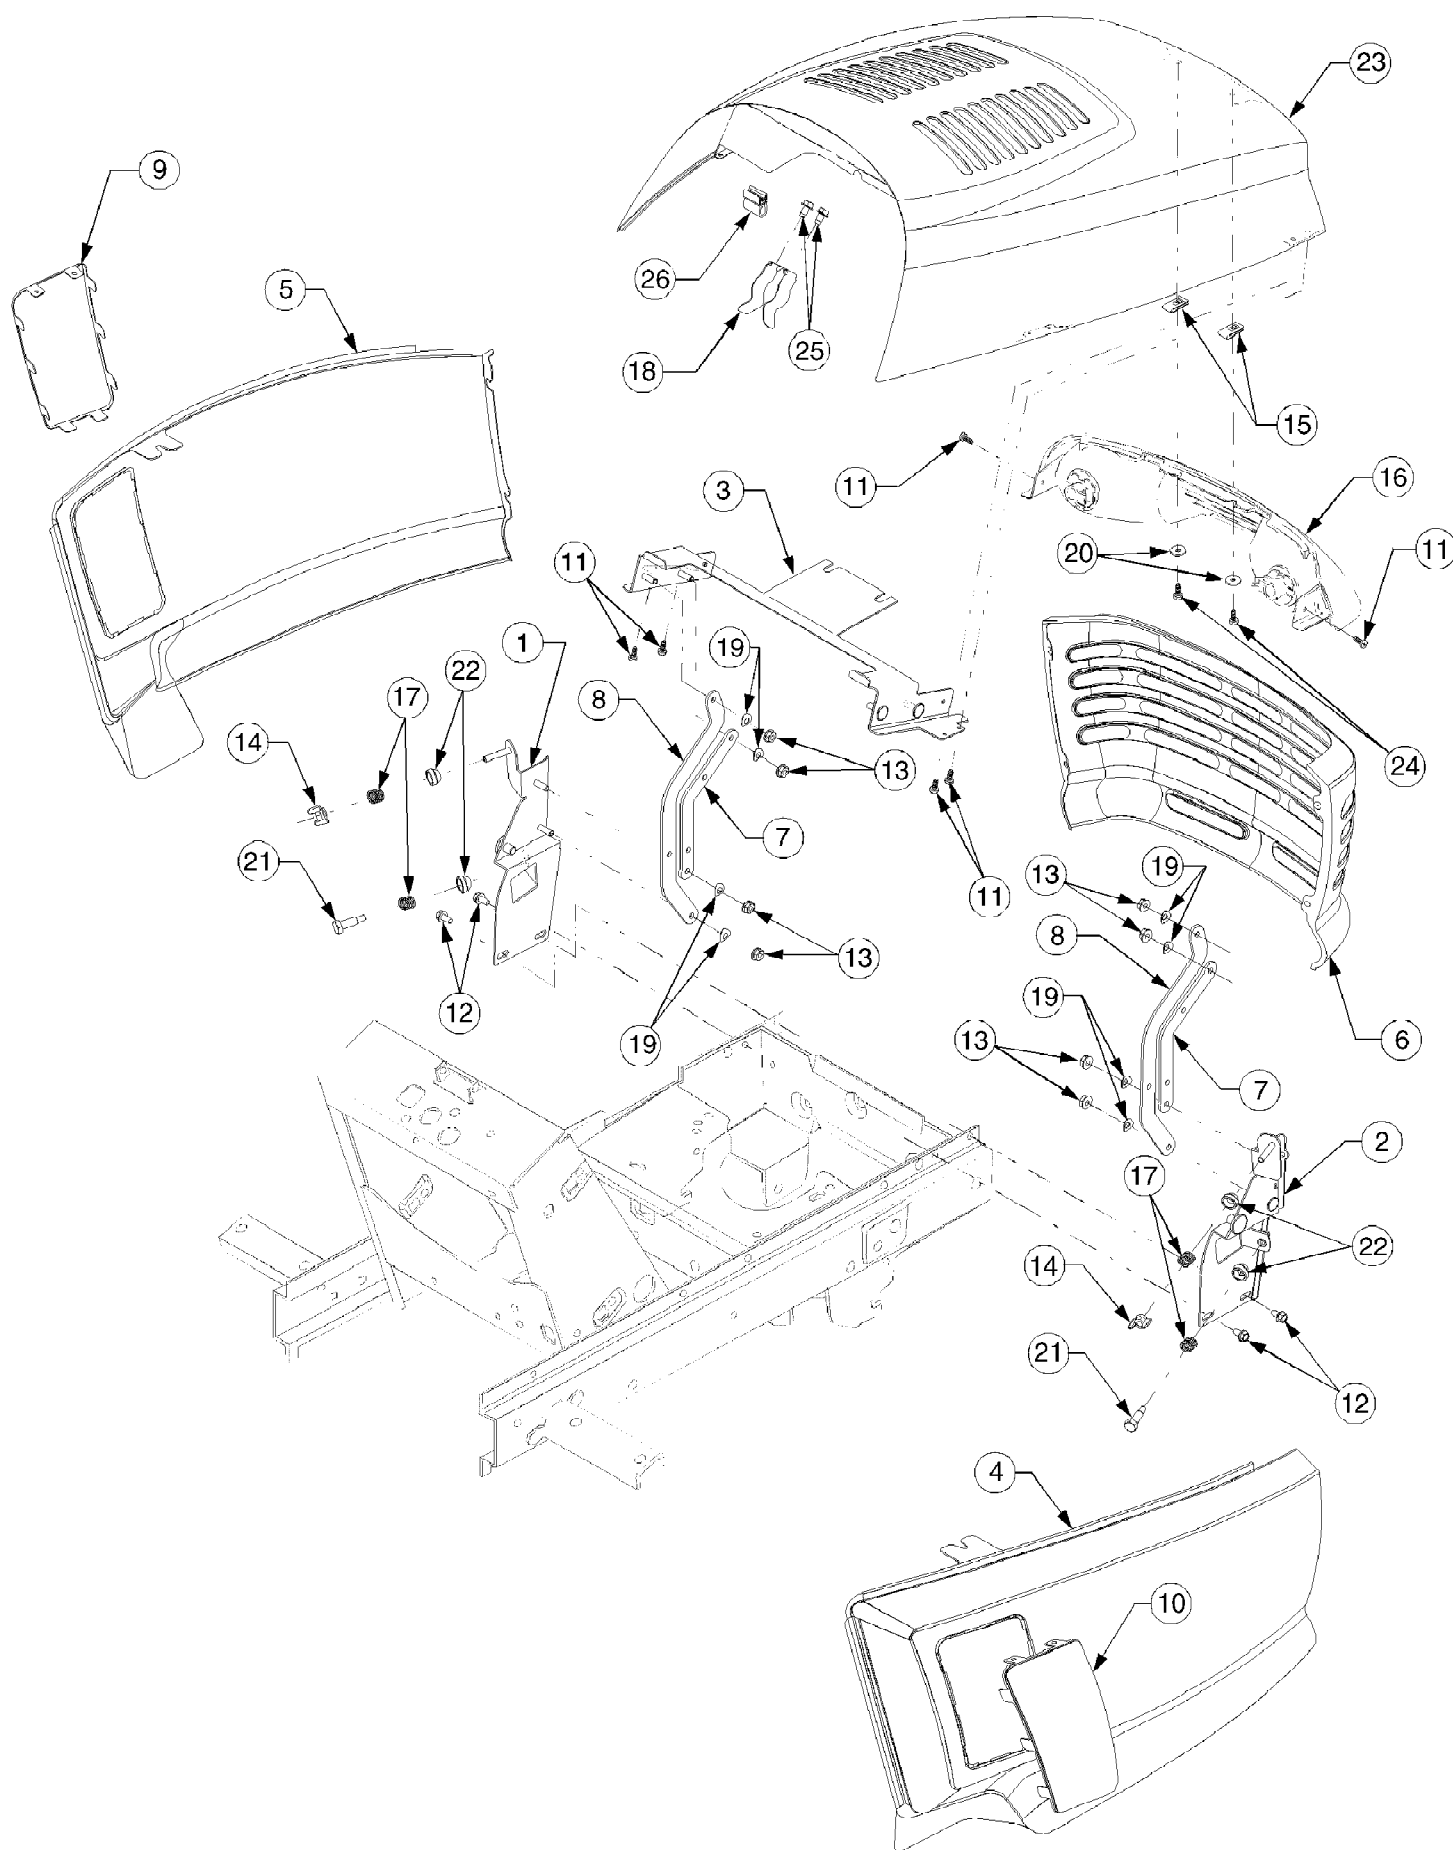

LT2042 Tractor
Grille, Hood And Side Panels

Page 44 of 72


Ref #	Part Number	Qty	S/P/F	Description
1	603-0211	1		Bracket, Grille LH
2	603-0212	1	S	Bracket, Grille RH
3	603-04191	1	S	Bracket, Upper Hood
4	703-2396	1	S	Panel, RH Side
	777D08636	1	S	Graphic, LT2042
	777X40079	1	/P	Strip, Protective
5	703-2397	1	S	Panel, LH Side
	777D08636	1	S	Graphic, LT2042
	777X40079	1	/P	Strip, Protective
6	703-2398	1	S	Grille
	777I20314	1	/P	Graphic, Warning HOT
7	703-2465	2	/P	Link, Short Hood
8	703-2466A	2	S	Link, Long Hood
9	703-2495	1	S	Screen, LH Panel
10	703-2496	1	S	Screen, RH Panel
11	710-0351	6	/P	Screw, Truss Mach Tapp, #10 x .50
12	710-0599	4	/P	Screw, Hex Wash Hd Tapp, 1/4 x .50
13	712-3027	8	S	Nut, Hex Flange Lock, 1/4-20
14	712-0397	2	S	Nut, Wing, 1/4-20
15	726-0139	2	/P	Nut, U-Type Speed, #10
16	625-04001A	1	S	Headlight Assy (Includes Lamp and Socket)
	725-0963	2	S	Lamp, 12V
	725-1649	2	S	Socket, Lamp
	777X41348	1	S	Reflector, Headlight
17	732-0334	4	S	Spring, Compression, .50 OD x .50
18	732-1178	1		Spring, Hood Latch
19	736-0175	8	S	Washer, Spring, .265 x .562 x .025
20	736-0400	2	S	Washer, Flat, .218 x .62 x .063
21	738-3141	2	S	Bolt, Shoulder, .31 Dia x .75 Lg
22	748-3055	4	S	Bushing, Tapered
23	759-3747B	1	/P	Hood, Series 2000
	777D08229	1		Graphic, Hood - RH
	777D08230	1		Graphic, Hood - LH
24	710-0436	2	S	Screw, Hex Tapp, 10-16 x .625
25	710-1005	2	S	Screw, Hex Wash Hd Tapp, 1/4-14 x .5
26	723-3061-19	34in	S	Seal, Heat Baffle

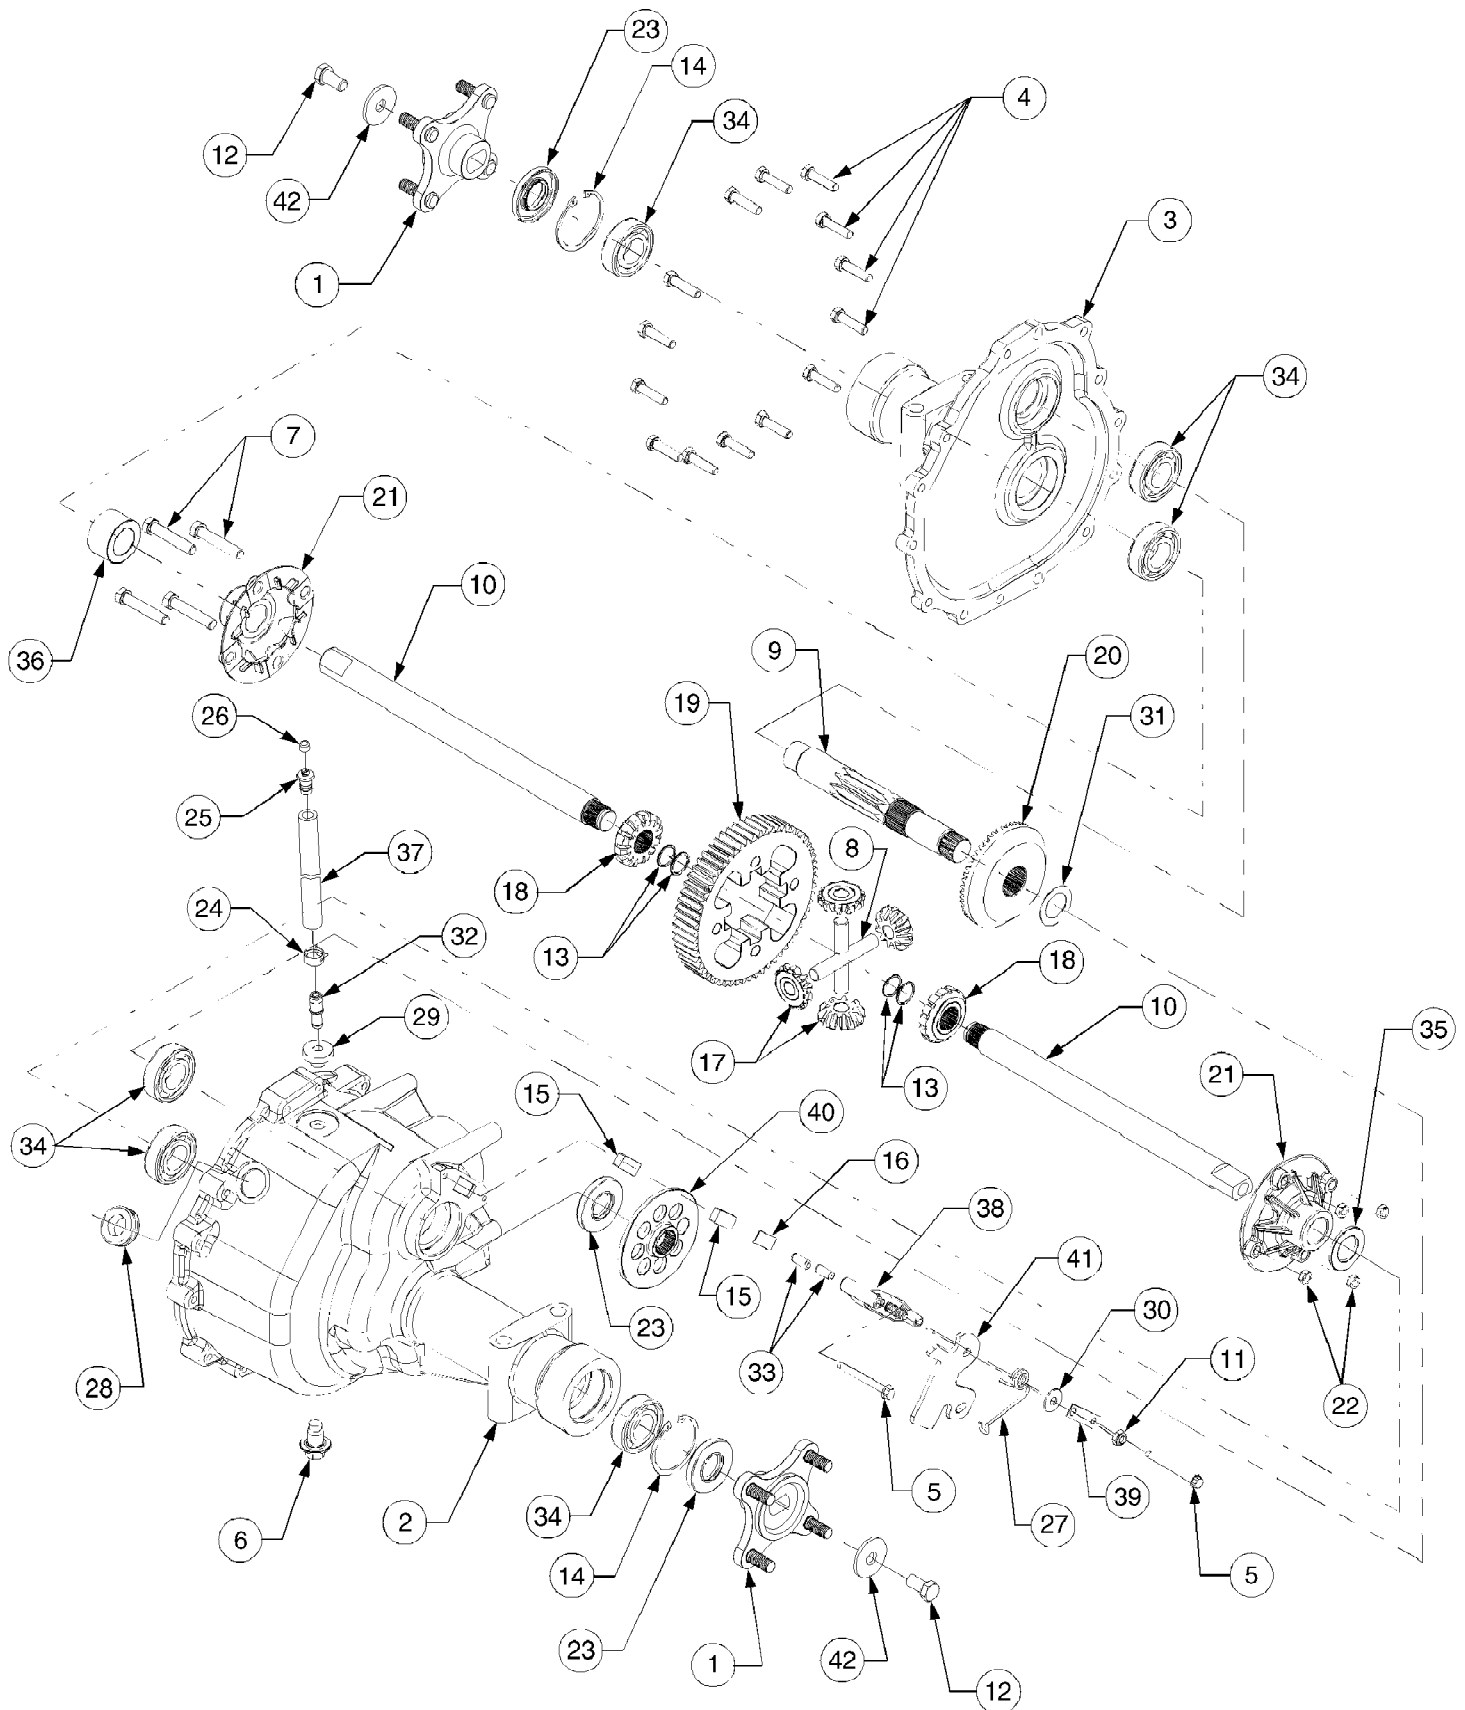

LT2042 Tractor
Hydro Transmission

Page 46 of 72

Ref #	Part Number	Qty	S/P/F	Description
	618-04176	1	S	Transmission Assembly, Hydro Does not include Ref Nos. 1 and 12
1	618-04115	2	S	Hub Assembly, Wheel
2	619-3071A	1	S	Housing, RH Transmission
3	619-3072	1		Housing, LH Transmission
4	710-0573	14		Screw, Hex Cap Lock, 5/16-18 x 1.25 GR5
5	710-1206	2	/P	Screw, Hex Wash Hd. Tapp, 1/4-20 x 2.375
6	710-1633	1		Screw, Plug, M14 x 1.5 x .827
7	710-3144	4	/P	Screw, Hex Cap Lock, 3/8-16 x 2.0 GR5
8	711-1052A	2		Shaft, Cross, .50 x 3.005
9	711-1385A	1	/P	Shaft, Output, 9T
10	711-04233	2	S	Shaft, Axle
11	712-0273	1	S	Nut, Hex Nylon Lock, 5/16-24
12	710-3119	2	/P	Screw, Hex Cap Lock, 3/8-16 x .75 GR5
13	716-04032	4		Ring, Retaining
14	716-0204	2		Ring, Retaining
15	717-0678	2	S	Pad, Brake
16	717-0682	1	S	Plate, Puck
17	717-1446	4	S	Gear, Miter, 10T
18	717-04102	2	S	Gear, Miter, 14T
19	717-1568A	1	S	Gear, Differential Spur, 60T
20	717-3449	1		Gear, Bevel, 54T
21	719-0375A	2	S	Housing, Differential w/Thru Holes
22	712-3020	4	S	Nut, Hex Insert Jam GR5, 3/8-16
23	721-0523	3		Seal, Oil, 1.0 x 2.047 x .2755
24	726-0324	1	S	Clamp, Hose
25	731-1480	1	/P	Vent, Plastic
26	731-1481	1		Cap, Plastic Vent
27	732-0925	1		Spring, Torsion
28	735-0277A	1		Grommet, Rubber, .75 x 1.063
29	735-0279	1		Grommet, Rubber, .362 x .56
30	736-0371	1	/P	Washer, Flat, .343 x .88 x .062
31	736-0615	1		Washer, Thrust, 1.007 x 1.542 x .03
32	737-3092	1		Fitting, Tube
33	741-0343	2	S	Pin, Brake Actuating
34	741-3114	6		Bearing, Ball (6205-1)
35	750-3346	1		Spacer, Axle, 1.007 x 1.665 x .141
36	750-3358	1		Spacer, Axle, 1.007 x 1.665 x .989
37	751-0588-8	1		Tube, Transmission Breather
38	761-0207A	1	/P	Yoke, Brake
39	761-0208	1		Bracket, Brake Anti Rotation
40	761-0215	1		Disc, Brake
41	761-3074	1		Arm, Brake Actuator
42	736-0227	2	S	Washer, Flat, .39 x 1.5 x .134
	759-3958	1		Sealant, Loctite Black, 5.3 oz. Tube
	737-3120	5.5	/P	Drive System Fluid Plus - Quart
	737-3121	AR	/P	Drive System Fluid Plus - Gallon

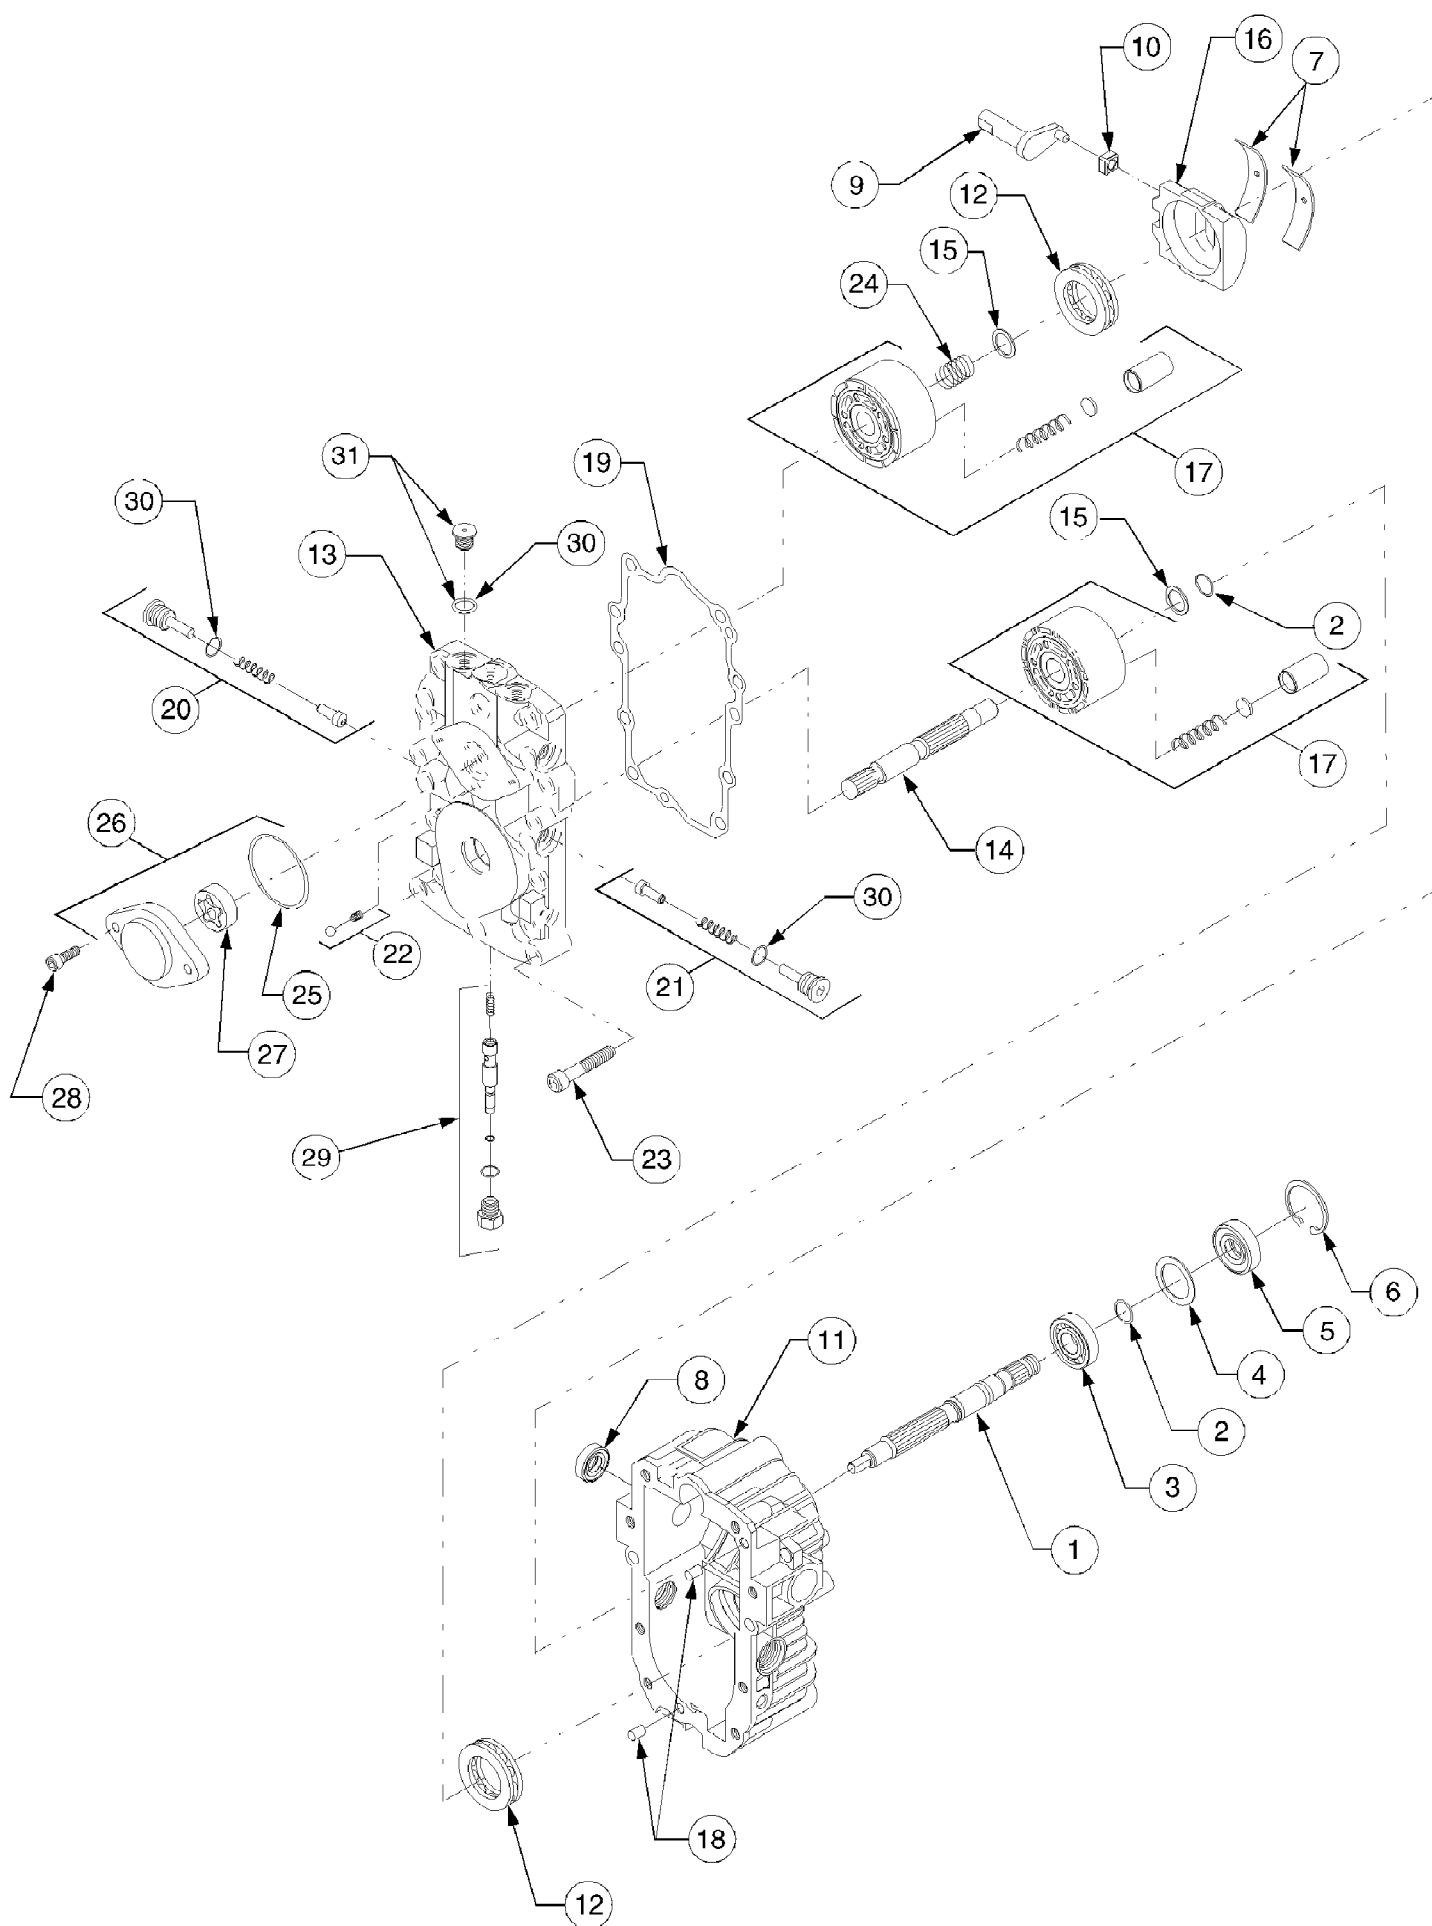


LT2042 Tractor
Hydrostatic Pump

Page 48 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	HG-50158	1		Shaft, Pump (Splined)
2	HG-2003016	2	/P	Ring, Retaining
3	HG-2003043	1	S	Bearing, Ball
4	HG-2003018	1	/P	Spacer
5	HG-9008000-0128	1	/P	Seal, Lip
6	HG-2003052	1	/P	Ring, Retaining
7	HG-2003023	2	S	Bearing, Cradle
8	HG-9008000-0126	1	/P	Seal, Lip
9	HG-2003005	1	/P	Arm, Trunnion
10	HG-2000015	1	/P	Guide, Slot
11	HG-2513036	1	/P	Housing Kit
12	HG-2003044	2	S	Bearing Assembly, Thrust Ball
13	HG-70444	1		Center Section Kit
14	HG-2003034	1		Shaft, Motor
15	HG-2003017	2	/P	Washer, Block Thrust
16	HG-2003087	1	/P	Swash Plate
17	HG-70079	2	S	Block Assembly
18	HG-9004800-2506	2	/P	Pin
19	HG-2003060	1	/P	Gasket, Center Section
20	HG-2510027	1		Kit, Check Valve
21	HG-2510034	1	/P	Kit, Orificed Check Valve
22	HG-2510011	1	/P	Kit, Charge Relief Valve
23	HG-9007314-0808	8	/P	Screw, Socket Hd
24	HG-2003014	1	/P	Spring, Block
25	HG-9004101-1340	1	/P	O-Ring
26	HG-2513027	1	/P	Kit, Charge Pump
27	HG-J1041008	1	S	Gerotor Assy
28	HG-50095	2		Screw, Socket Hd
29	HG-2513011	1	/P	Bypass Valve Kit
30	HG-9004201-3700	3	/P	O-Ring
31	HG-9005110-5600	2	/P	Plug w/O-Ring

LT2042 Tractor
Ignition, Electrical And Flywheel


Page 49 of 72

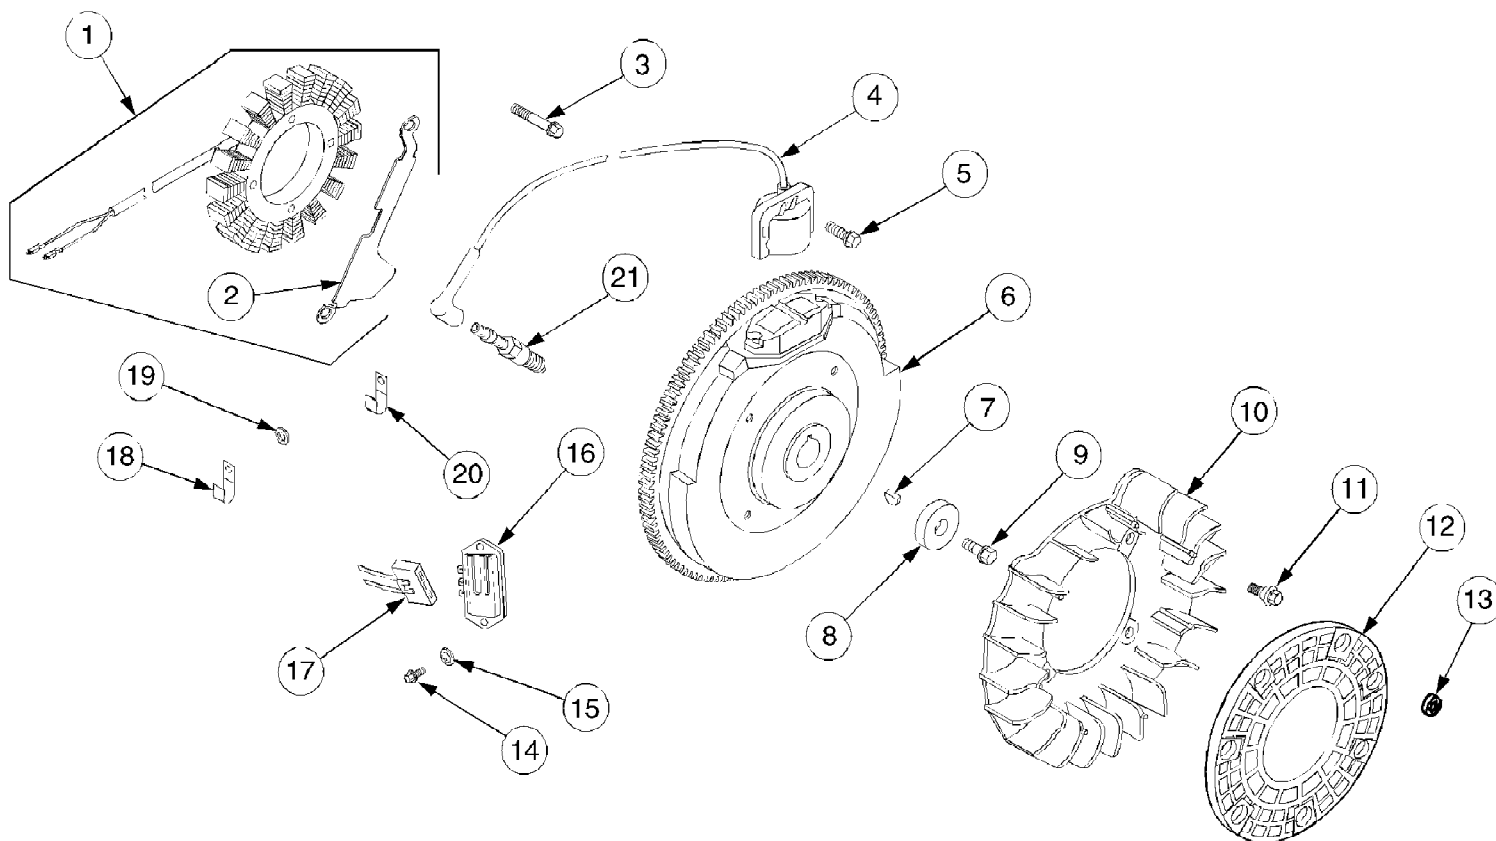

LT2042 Tractor
Ignition, Electrical And Flywheel

Page 50 of 72


Ref #	Part Number	Qty	S/P/F	Description
1	KH-54-755-09	1	S	Stator Kit, 15 Amp (Incl. Ref #22)
2	KH-24-126-139-S	1		Bracket, Stator Wire
3	KH-M-0548025	2		Screw, Stator Mtg. M5 x .8 x 25
4	KH-24-584-01	2	S	Module, Ignition
5	KH-M-545020-S	4		Screw, Module M5 x .8 x 20
6	KH-24-025-04	1	S	Flywheel Assembly
7	KH-X-42-15	1	/P	Key
8	KH-12-468-03	1	/P	Washer, Flywheel Mtg. Screw
9	KH-12-086-14	1		Screw, Flywheel Mtg, M10x1.5 x 46
10	KH-24-157-01	1	S	Fan
11	KH-25-086-47	4	/P	Bolt, Shoulder
12	KH-24-162-02	1		Screen, Grass
13	KH-24-018-03	3	S	Retainer
14	KH-24-086-18	2		Screw Phillips Hd., #11-16 x .875
15	KH-X-25-92	2		Washer, Plain
16	KH-41-403-09	1	S	Regulator - Rectifier
17	KH-236602	1	S	Connector, Regulator-Rectifier
18	KH-235173	1		Clip, Cable
19	KH-X-25-63	1	/P	Washer, Plain 1/4"
20	KH-48-154-02	1		Clip, Cable
21	759-3336	2	/P	Spark Plug
	KH-24-176-08	1	S	Harness, Wire
	KH-24-126-137-S	1		Bracket, Ground Strap
	KH-25-086-91-S	2	/P	Screw, Tapping
	KH-24-454-03-S	2		Tie , Wire

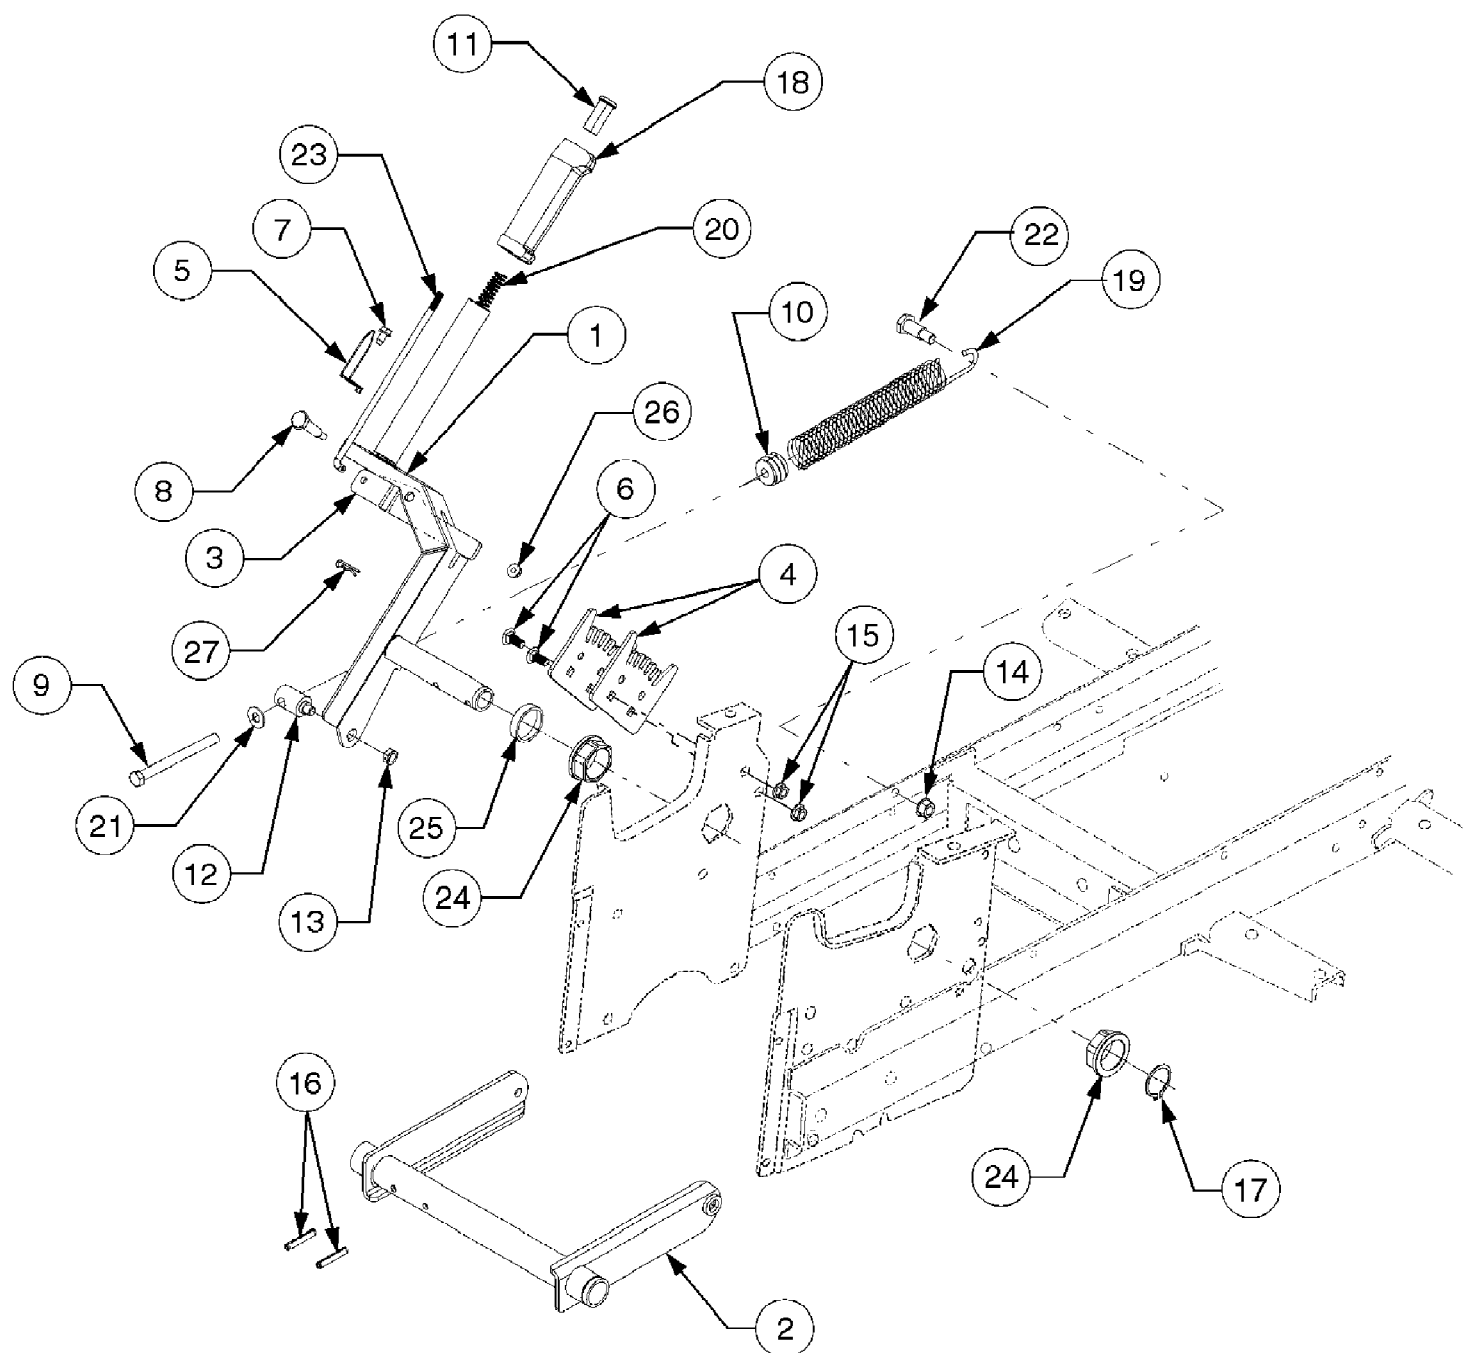

LT2042 Tractor
Implement Lift Handle

Page 52 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	603-04141	1		Handle Assembly, Lift
2	603-0059A	1	S	Shaft Assembly, Lift
3	703-05247	1	S	Fork, Lift
4	703-2239A	2	S	Bracket, Lift Index
5	703-2558	1		Indicator, Lift Height
6	710-0451	2	/P	Bolt, Carriage, 5/16-18 x .75
7	710-0599	1	/P	Screw, Hex Wash Tapp, 1/4 x .5
8	738-0560	1	S	Screw, Shoulder, .374 x 1.375
9	710-3279	1	/P	Screw, Hex Cap, 3/8-16 x 4.25 GR5
10	711-0635	1	/P	Insert, Spring
11	711-0642A	1	/P	Button, Handle
12	711-3350	1		Ferrule, Adjustment
13	712-0262	1	/P	Nut, Hex Center Lock, Jam, 3/8-24
14	712-0431	1	S	Nut, Hex Flanged Lock, 3/8-16
15	712-3004A	2	/P	Nut, Hex Flanged Top Lock, 5/16-18
16	715-0114	2	S	Pin, Spiral Spring, 1/4 Dia x 1.5
17	716-0116	1	/P	Ring, Snap, 1.25 Dia Shaft
18	731-3158	1	/P	Grip, Lift Handle
19	732-3093	1		Spring, Extension
20	732-3097	1		Spring, Compression
21	736-0267	1	S	Washer, Flat, .385 x .87 x .06
22	738-0145	1	S	Bolt, Shoulder
23	747-3175A	1	/P	Rod, Index
24	748-3051	2	S	Bearing, Hex Flange, 1.25 ID
25	750-3131	1		Spacer, 1.28 ID x 1.5 OD x .335 Lg
26	712-3027	1	S	Nut, Hex Flange Lock, 1/4-20
27	714-0104	1	S	Pin, Internal Cotter

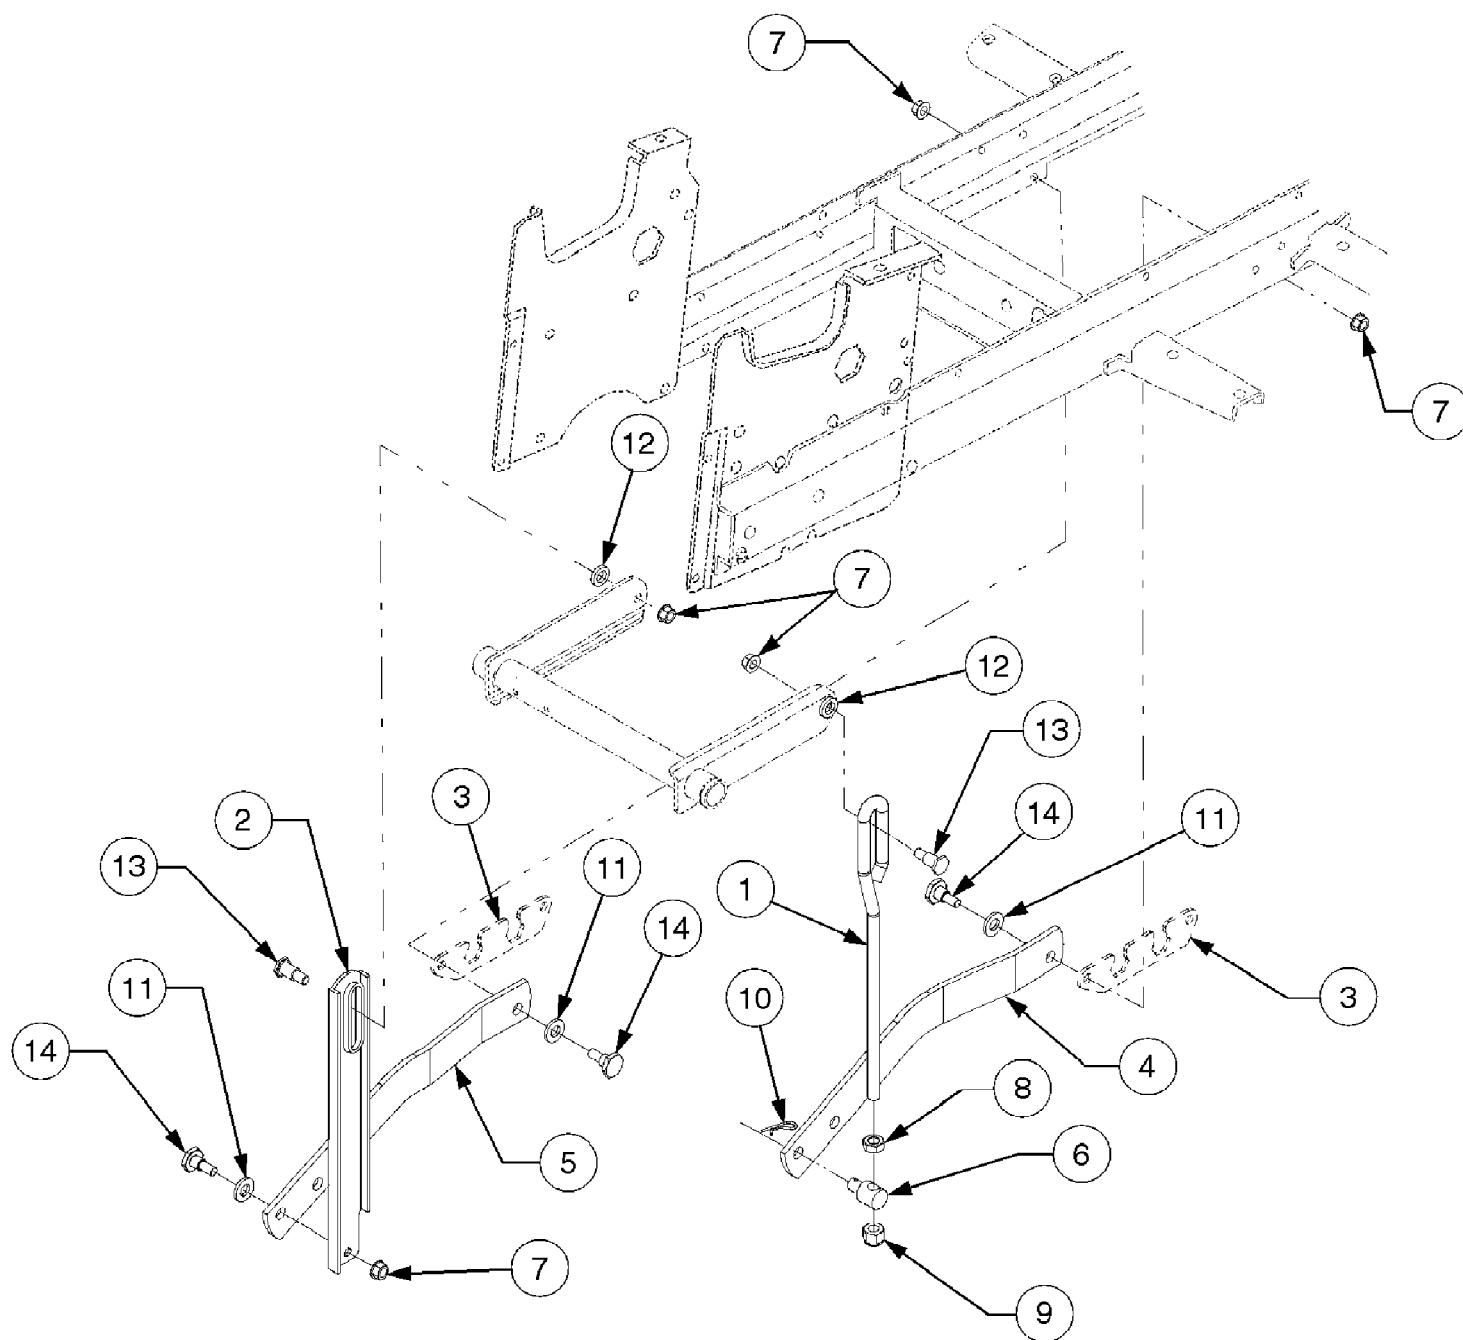


LT2042 Tractor
Implement Lift Hangar

Page 54 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	747-04196	1		Rod, Lift Link
2	703-2234	1		Bracket, LH Hanger
3	703-2804	2		Plate, Bearing Mounting
4	703-2832	1		Link, RH Lift
5	703-2833	1		Link, LH Lift
7	711-3319	1	S	Ferrule, Adjustment
8	712-0431	5	S	Nut, Hex Flange Lock, 3/8-16
9	712-3048	1	S	Nut, Hex Jam, 1/2-13 GR5
10	712-3083	1	/P	Nut, Hex Insert Lock, 1/2-13
11	714-0145	1	S	Pin, Internal Cotter
12	736-0326	3	S	Washer, Flat, .5 x 1.5 x .15
13	736-3069	2		Washer, Flat, .531 x .875 x .15
14	738-0430	2		Bolt, Shoulder
15	738-0507B	3	S	Bolt, Shoulder

LT2042 Tractor
Label Map

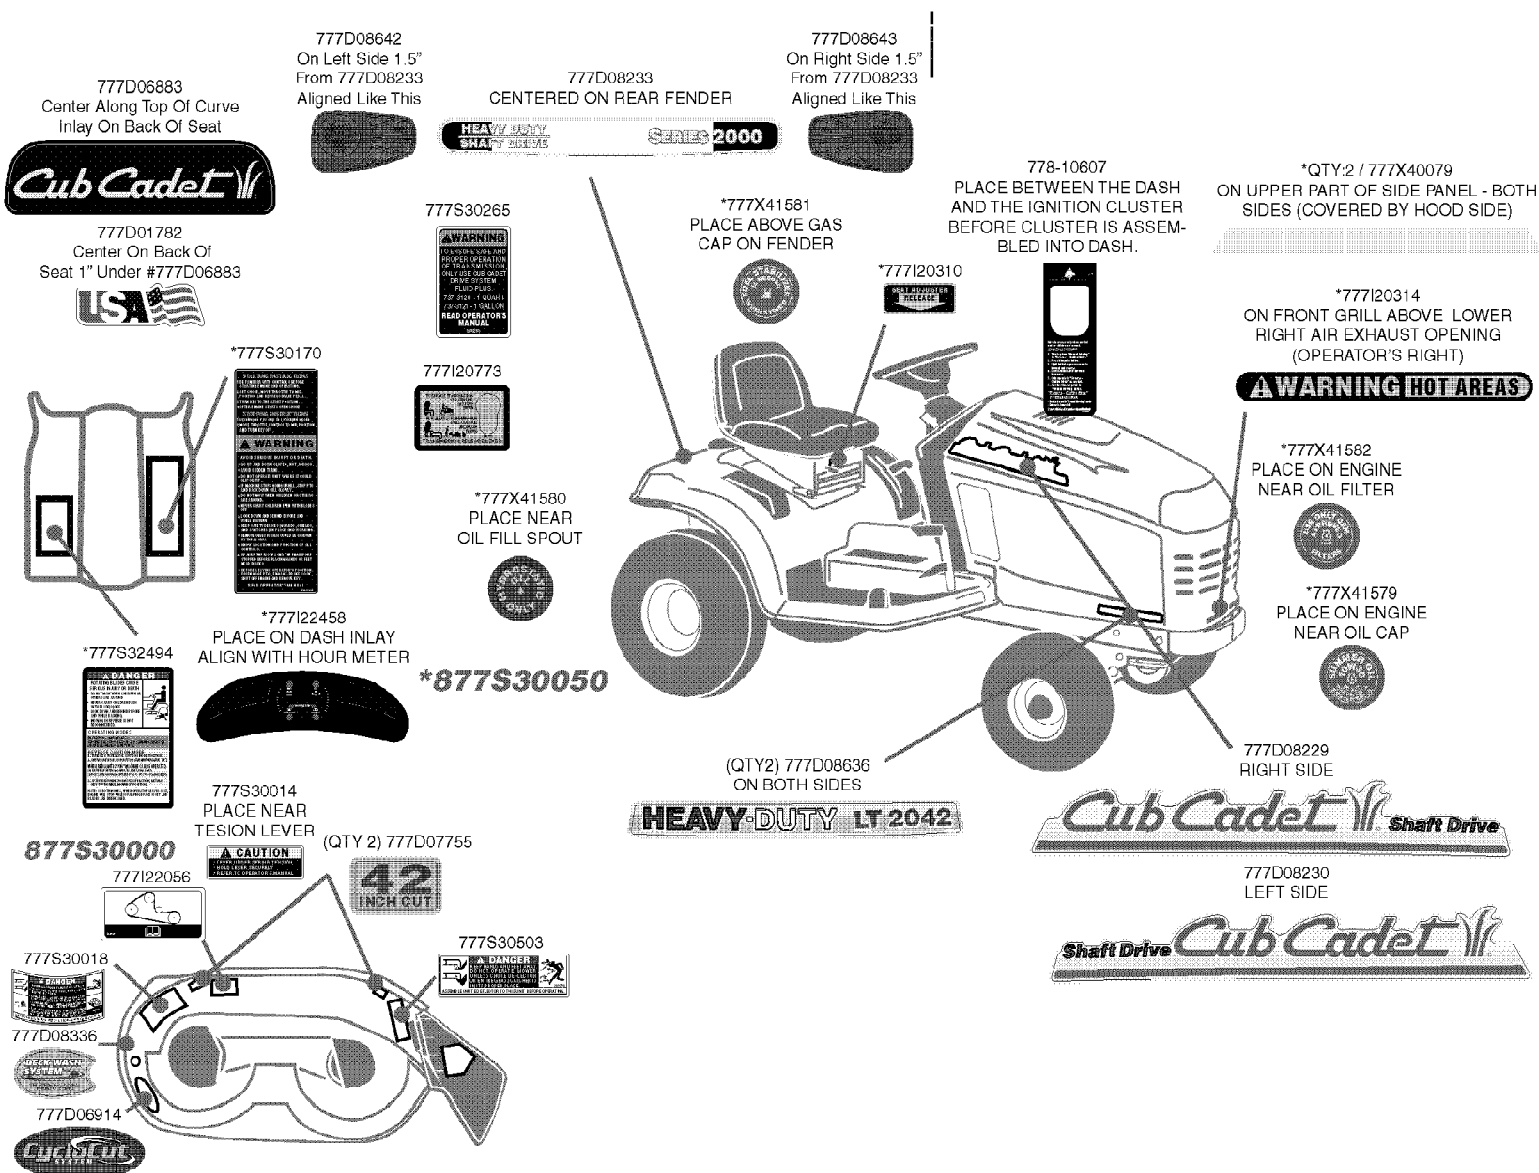


LT2042 Tractor
Label Map

Page 56 of 72

Ref #	Part Number	Qty	S/P/F	Description
777D06883	777D06883	1	/P	LABEL-SEAT BACK
777D01782	777D01782	1	/P	LABEL-MADE IN USA
777S30170	777S30170	1	/P	LABEL-FRAME COVER
777I22458	777I22458	1		LABEL-DASH PANEL
777S32494	777S32494	1		LABEL-MOWING MODE
777D06914	777D06914	1		LABEL-CYCLO CUT
777D08336	777D08336	1		LABEL-DECK WASH
777S30018	777S30018	1	/P	LABEL-DECK SAFETY
777I22056	777I22056	1		LABEL-BELT ROUTING
777S30014	777S30014	1	/P	LBL.CAUTION SPRING TENS.N.
777D07755	777D07755	1		LABEL-42" CUT
777S30503	777S30503	1	/P	LABEL-DANGER CHUTE
777D08636	977D08636	1	/P	LABEL-MODEL LT 204
777X41580	777X41580	1		LABLE-HYDRO OIL
777I20773	777I20773	1		LABEL-HITCH PLATE
777S30265	777S30265	1		LABEL-CUB OIL ONLY
777D08230	777D08230	1		LABEL-LH HOOD SHFT DRV
777D08229	777D08229	1		LABEL-RH HOOD SHFT DRV
777X41579	777X41579	1		LABEL-10W30 OIL
777X41582	777X41582	1		LABLE-OEM FILTERS
777I20314	777I20314	1	/P	LBL.WARNING/HOT AREA
777X40079	777X40079	1	/P	STRIP-PROTECTIVE
777I20310	777I20310	1		LABEL-SEAT ADJUSTE
777X41581	777X41581	1		LABLE-FUEL STABIL
777D08643	777D08643	1		LABEL-RH REFLECTOR
777D08233	777D08233	1		LABEL-2000 FENDER
777D08642	777D08642	1		LABEL-LH REFLECTOR

LT2042 Tractor
Neutral Linkage, Hydraulic Pickup And Return Tubes


Page 57 of 72

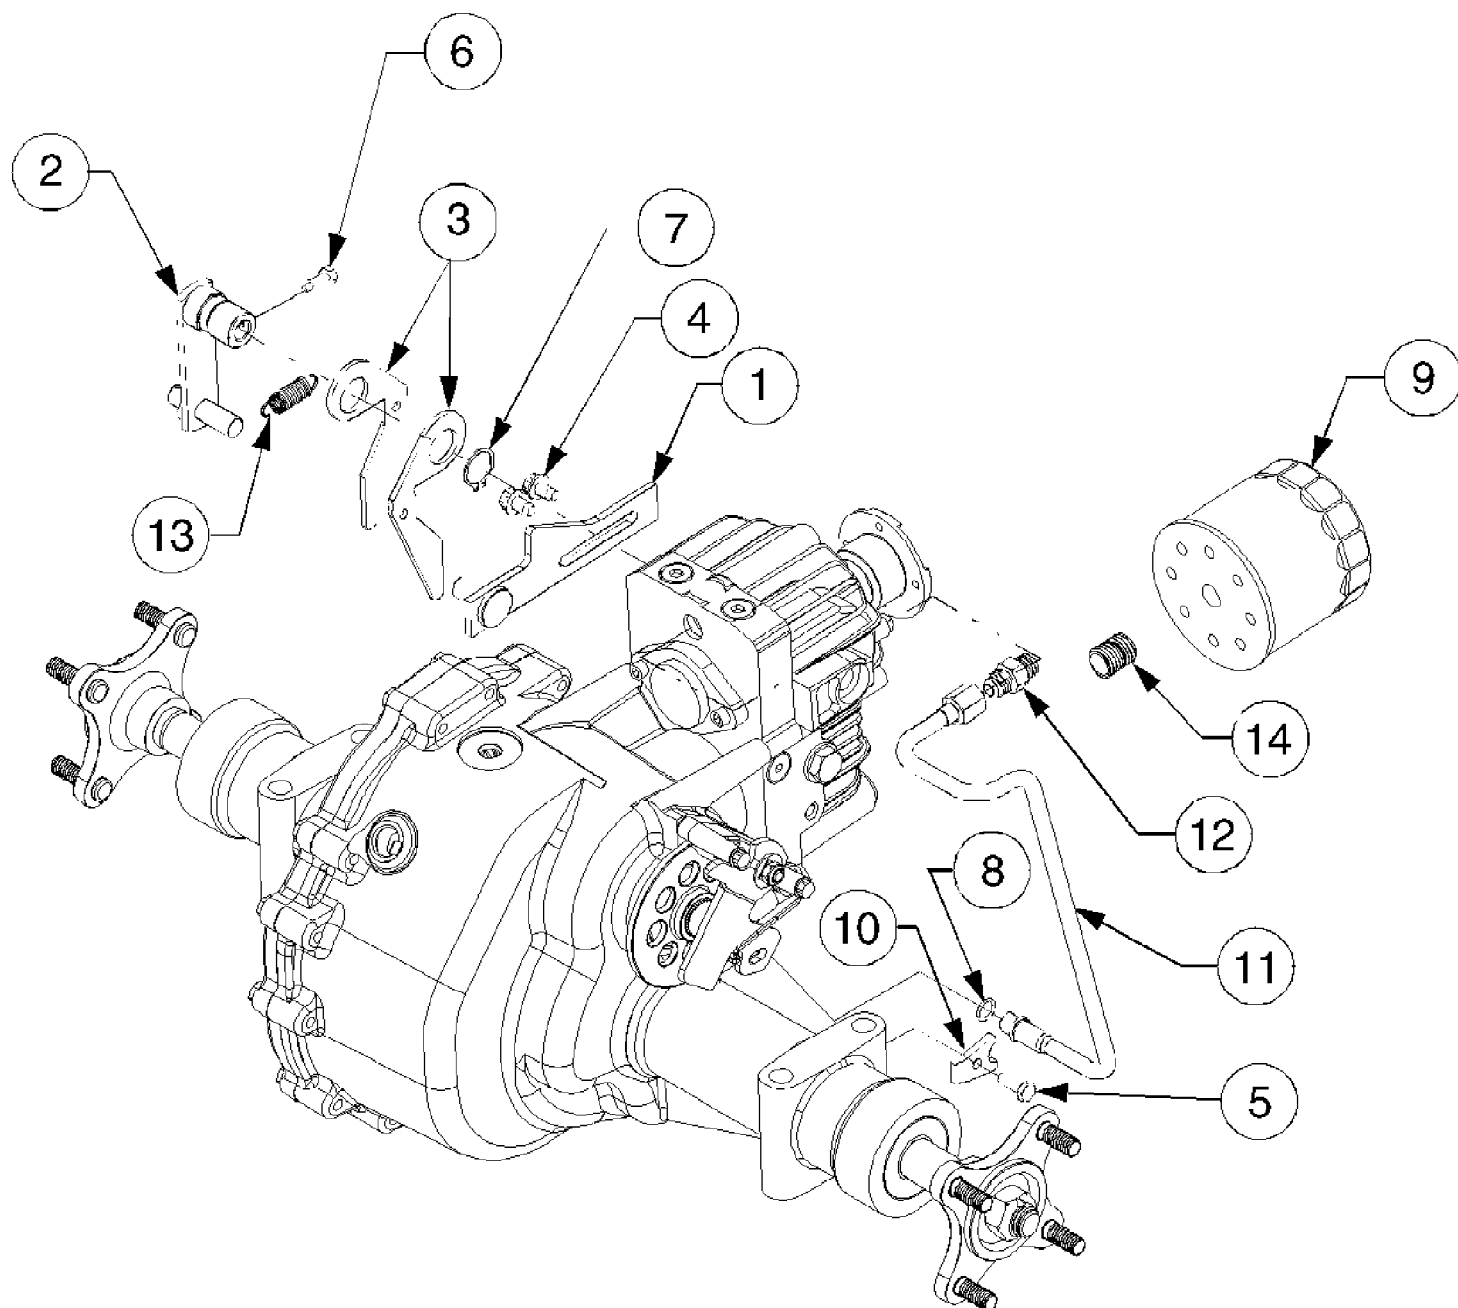

LT2042 Tractor
Neutral Linkage, Hydraulic Pickup And Return Tubes

Page 58 of 72


Ref #	Part Number	Qty	S/P/F	Description
1	603-0732	1		Bracket, Neutral Return
2	603-0737	1		Arm Assembly, Control
3	703-2441	2		Arm, Neutral
4	710-0607	2	/P	Screw, Hex Wash Hd Tapp, 5/16-18 x .50
5	710-3015	1	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
6	710-04171	1		Screw, Special Hex Cap, 5/16-24 x .625
7	716-0111	1	/P	Ring, Snap, .875 Shaft
8	721-0459	1		O-Ring, .426 ID x .566 OD x .07
9	723-3014	1	S	Filter, Oil
10	726-0295	1		Clamp, Tube, .50
11	727-0636	1		Tube, Hydro Pickup
12	727-3002	1	S	Fitting, Hydraulic
13	732-3119	1	S	Spring, Extension
14	737-3022	1	S	Nipple, Oil Filter

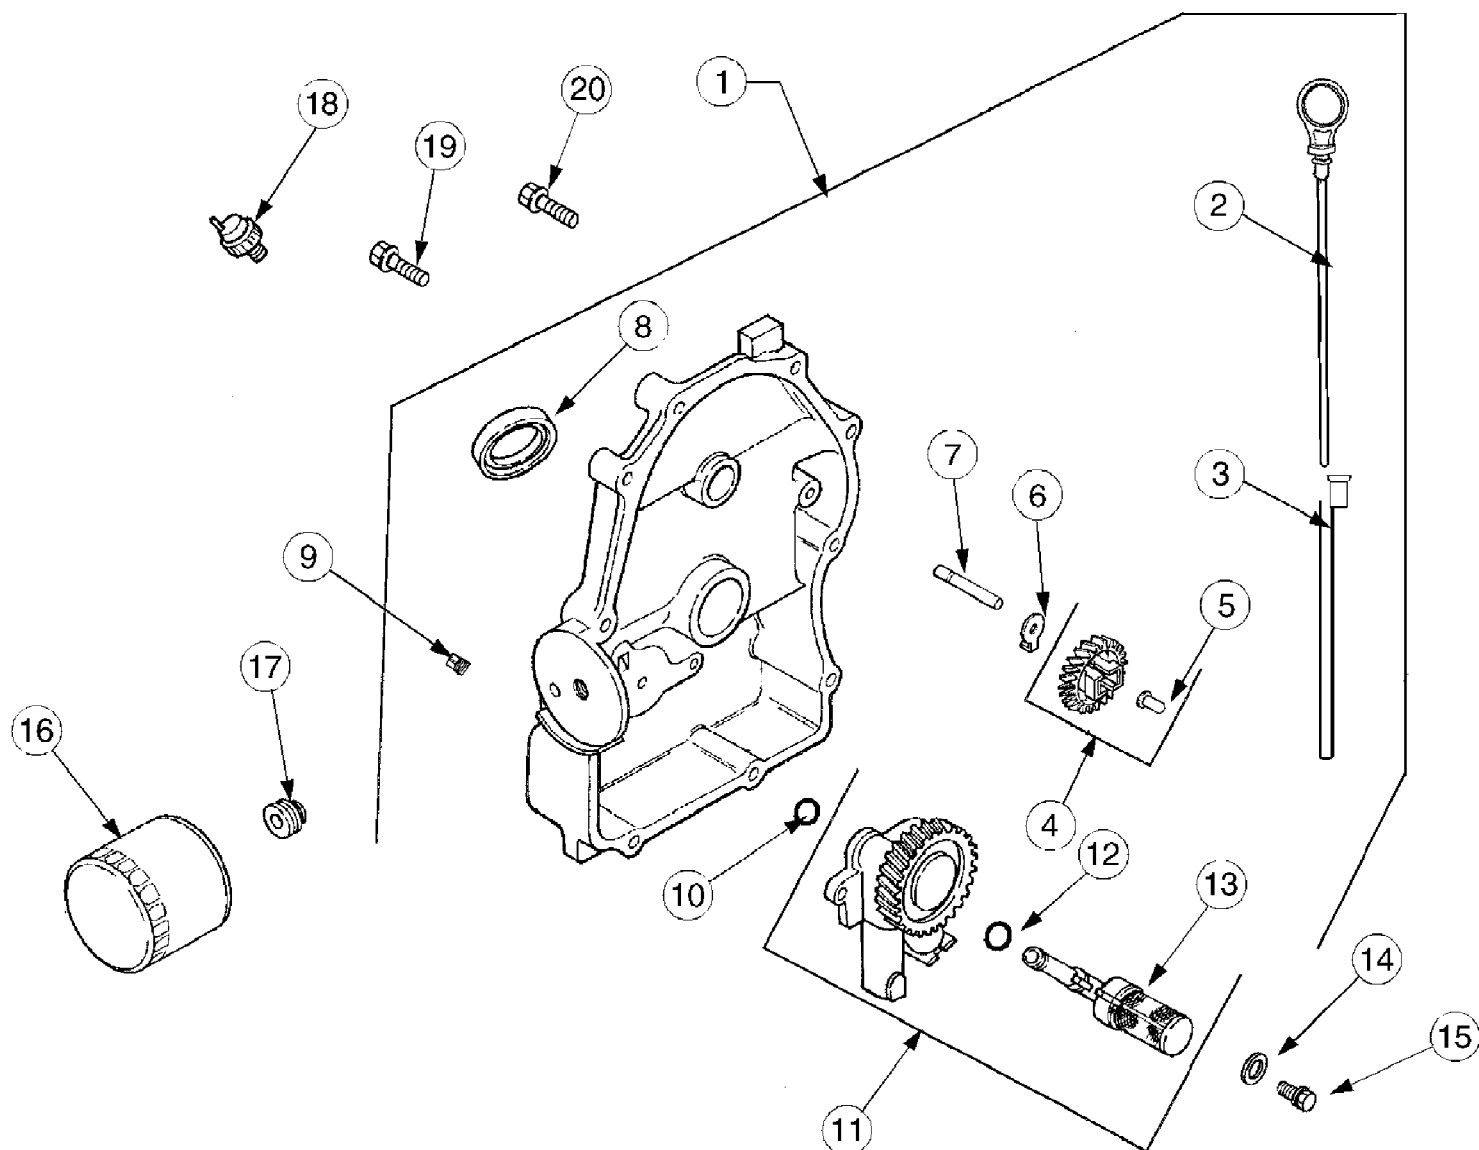

LT2042 Tractor
Oil Pan And Lubrication

Page 60 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	KH-24-009-83-S	1	S	Plate Assy, Closure (Incl. Ref #2-15)
2	KH-24-038-10-S	1	/P	Dipstick
3	KH-24-755-121-S	1	/P	Tube, Dipstick (Includes 2)
4	KH-24-043-12	1	/P	Kit, Governor Gear (Incl. Ref #5)
5	KH-12-380-01	1	/P	Pin, Governor Regulating
6	KH-24-448-02-S	1		Tab, Locking
7	KH-12-144-02	1		Shaft, Governor Gear
8	KH-52-032-08	1	S	Seal, Oil (PTO end)
9	KH-25-139-60-S	2	/P	Plug, Pipe 1/8
10	KH-24-153-08	1		O-Ring
11	KH-24-393-37-S	1	S	Oil Pump Assy (Incl. Ref #12-13)
12	KH-24-153-01	1	/P	O-Ring, Oil Pick-up
13	KH-24-381-04	1		Pick-up, Oil
14	KH-M-0631005	2	S	Washer, Plain
15	KH-M-0645025	2	S	Screw, Hex Flange, M6 x 1.0 x 25
16	KH-12-050-08	1	S	Filter, Oil
17	KH-24-136-01	1		Nipple, Oil Filter
18	KH-25-099-24	1	S	Switch, Pressure
19	KH-24-086-16	9	S	Screw, Hex Flange, M8 x 1.25 x 45
20	KH-24-086-17	1	S	Screw, Hex Flange, M8 x 1.25 x 45

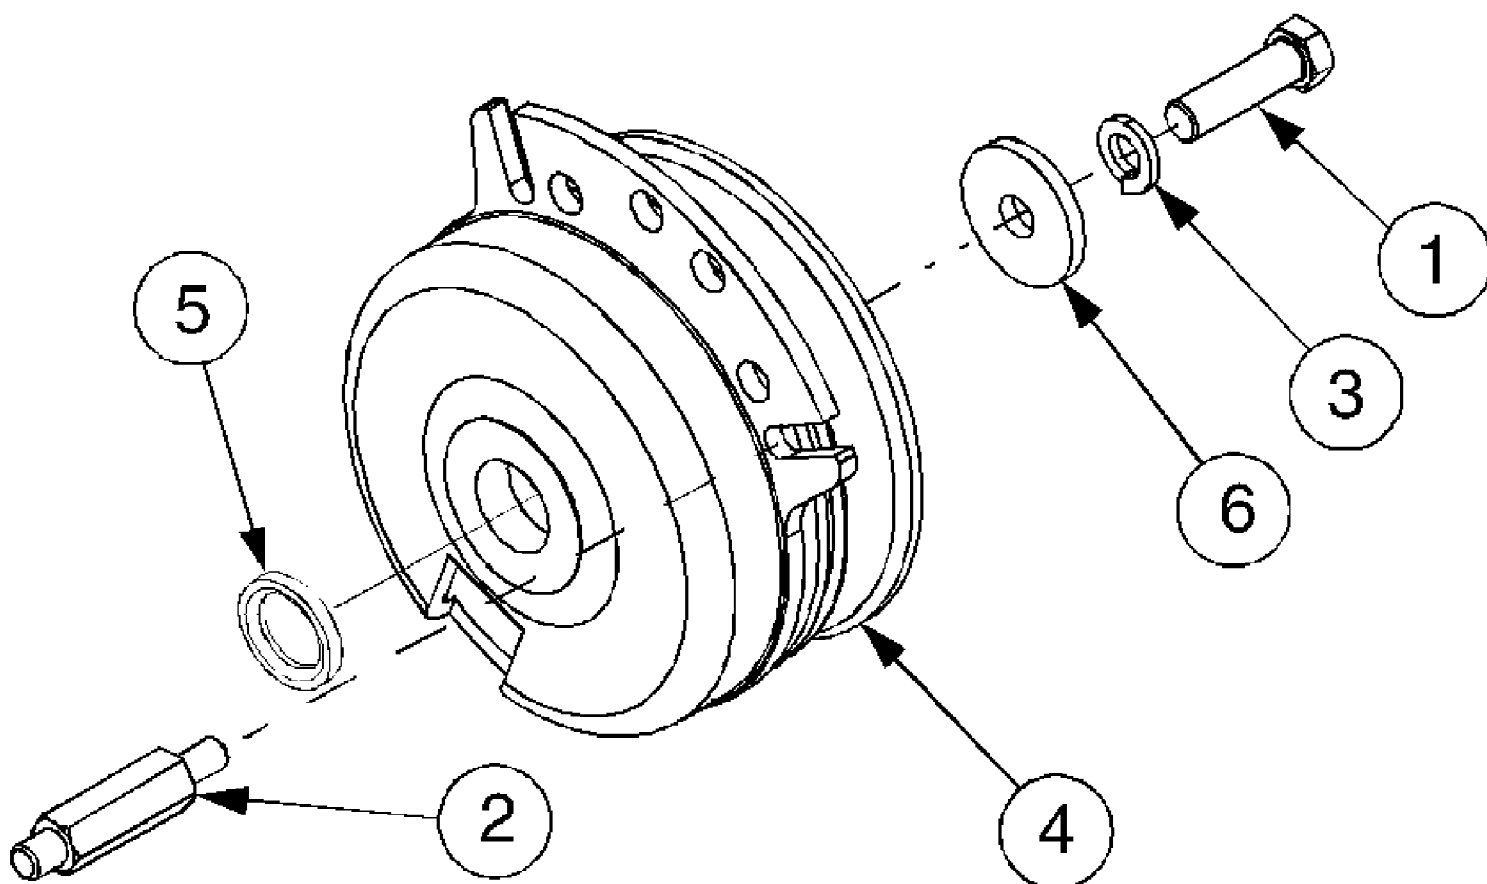


LT2042 Tractor
PTO Clutch

Page 62 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	710-0757	1	/P	Screw, Hex Cap, 7/16-20 x 1.5 GR5
2	711-1083	1	S	Stud, Clutch Stop
3	736-0171	1	S	Washer, Lock, 3/8
4	717-04180	1	S	Clutch Assy, PTO
5	750-3356	1		Spacer
6	736-3082A	1	/P	Washer, Flat, .445 x 1.5 x 1.72 Hdn

LT2042 Tractor
Rear Wheel


Page 63 of 72

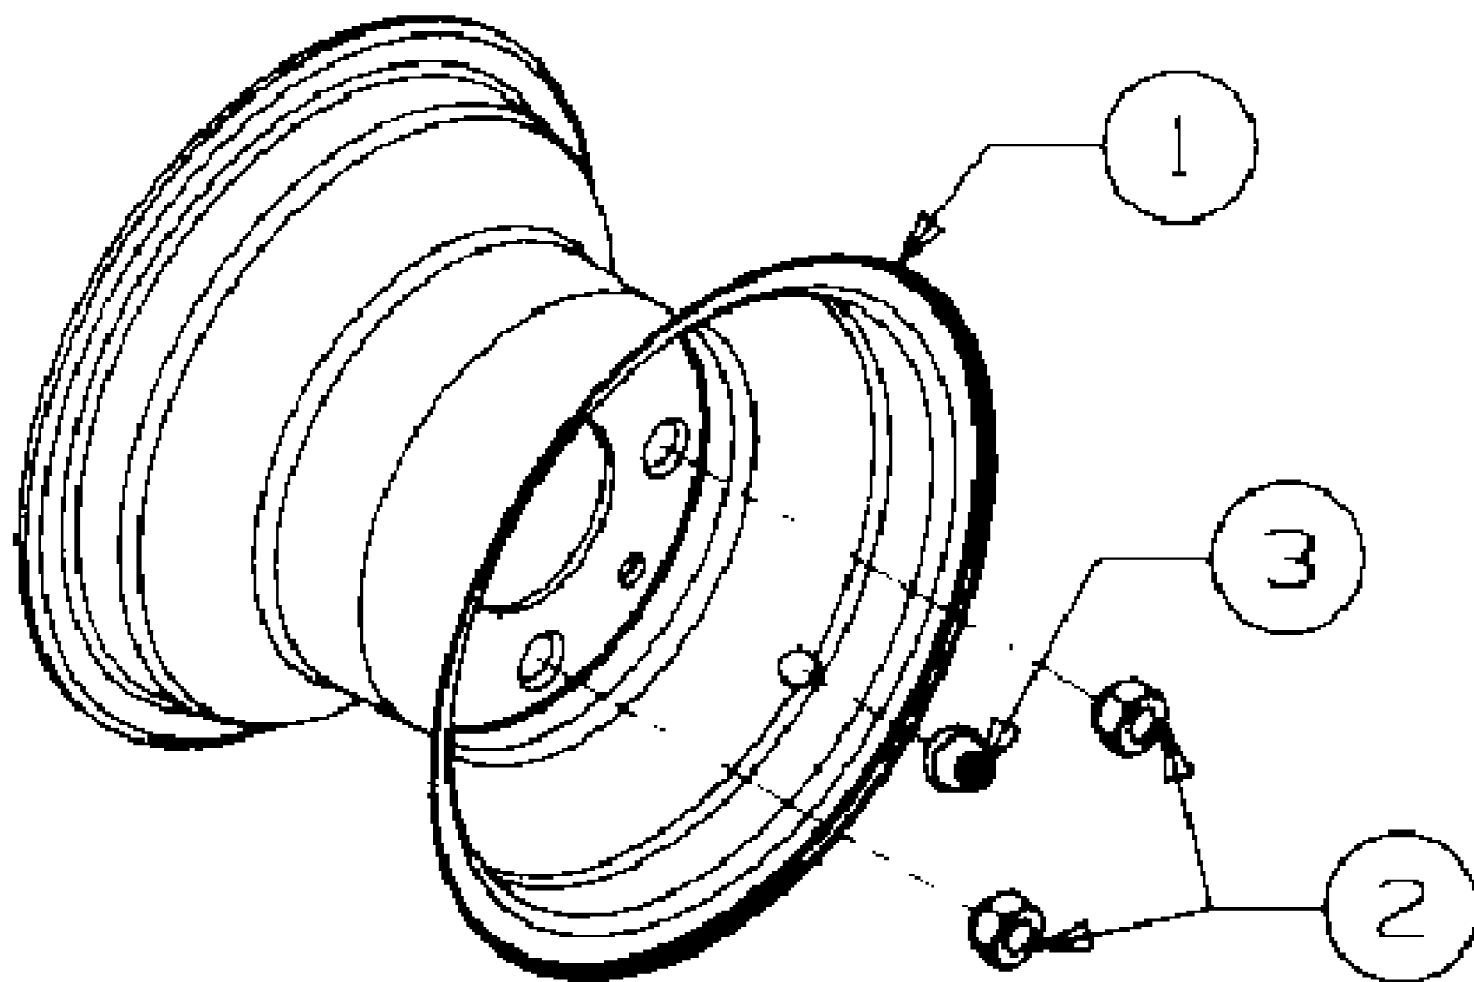

LT2042 Tractor
Rear Wheel

Page 64 of 72

Ref #	Part Number	Qty	S/P/F	Description
	734-3189	2	/P	Tire, Cub Tread, 20 x 9 x 8
1	634-3187	2	S	Rim Assy, Rear
2	712-3050	8	/P	Nut, Lug, 7/16-14
3	734-0255	2	S	Valve, Tubeless Air

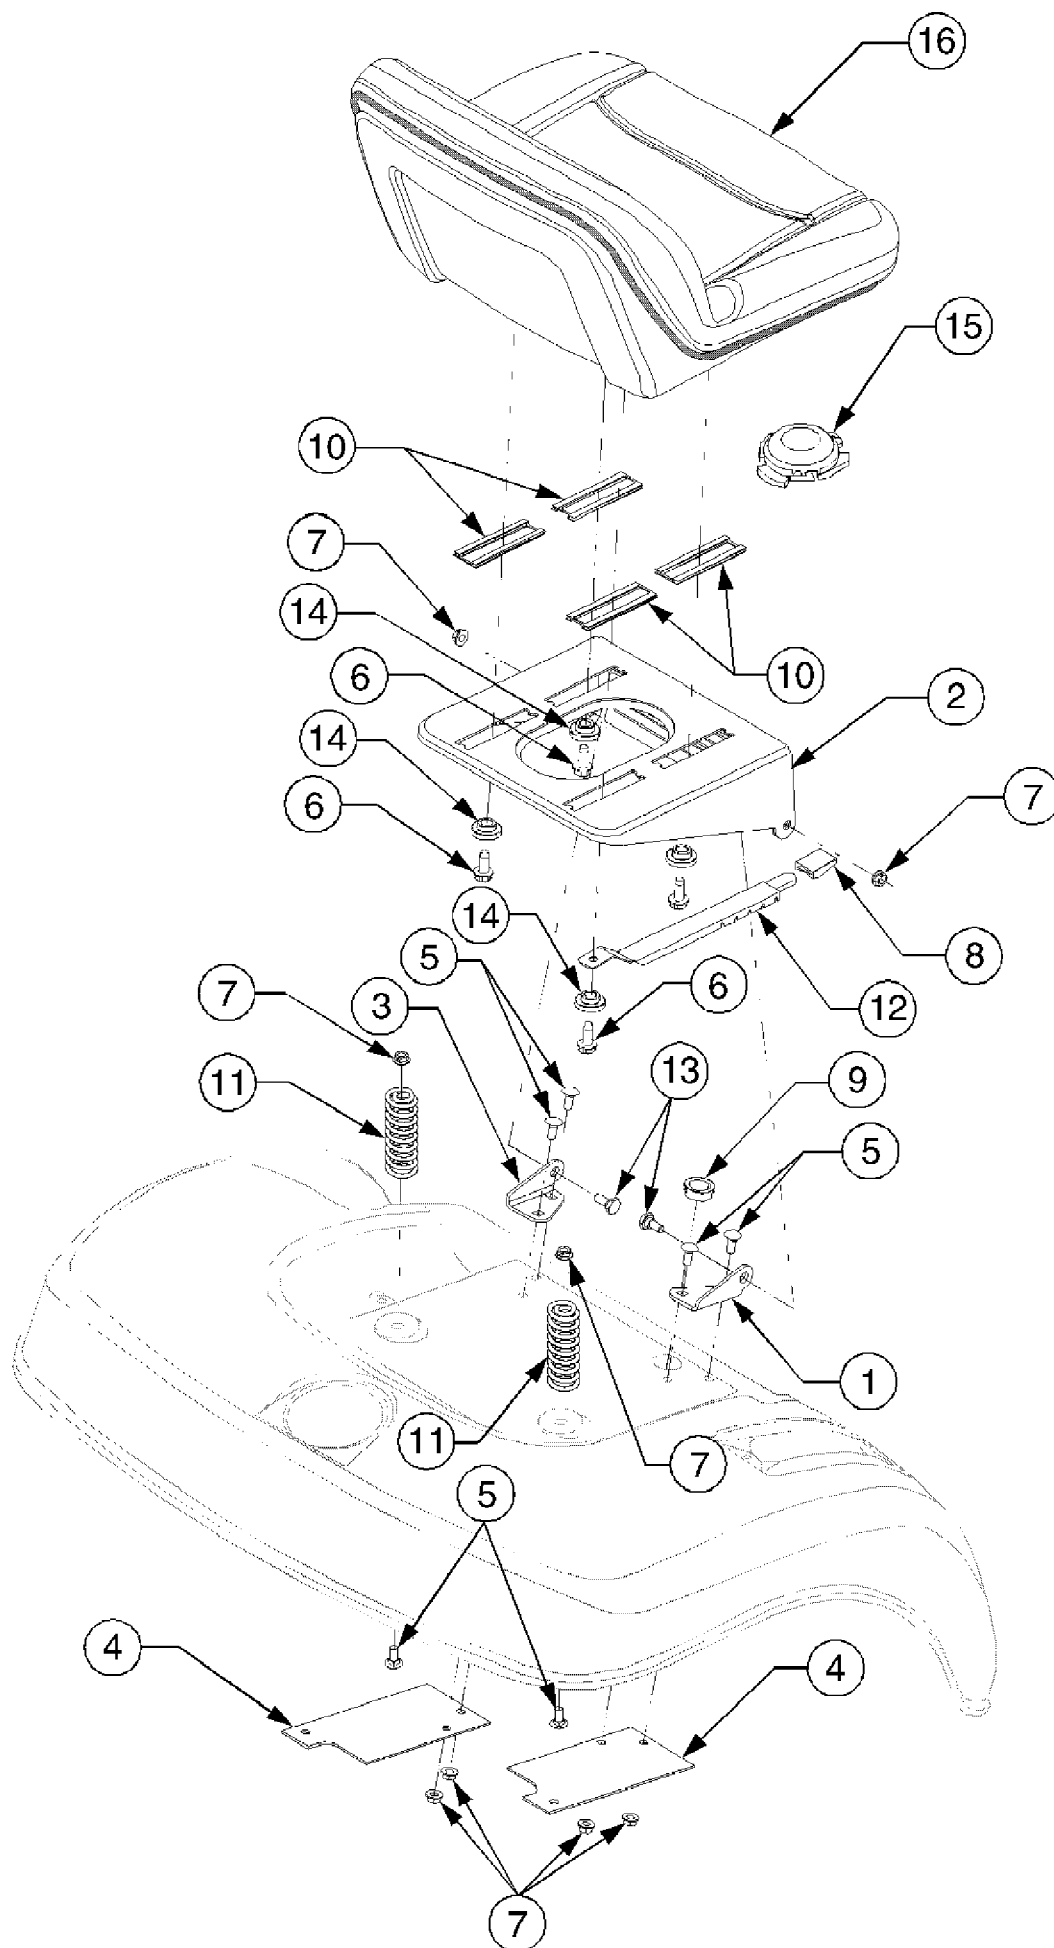

LT2042 Tractor
Seat And Support

Page 66 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	703-2394	1		Bracket, RH Seat Pivot
2	703-2395B	1		Seat, Base
	777I20310	1		Graphic, Seat Adjuster
3	703-2477	1		Bracket, LH Seat Pivot
4	703-2628	2		Bracket, Fender Reinforcement
5	710-0451	6	/P	Bolt, Carriage, 5/16-18 x .75
6	710-1260A	4	/P	Screw, Hex Wash. Hd., 5/16-18 x .75 GR5
7	712-04054	8	/P	Nut, Hex Flange Lock, 5/16-18
8	720-0426	1	/P	Knob, Seat Adjuster
9	723-3042	1	/P	Bushing, Snap
10	731-3154	4		Slide, Seat
11	732-3080A	2	/P	Spring, Comp, 1.9 OD x 2.4
12	732-3098	1		Index Spring, Seat Adjuster
13	738-0140	2	S	Bolt, Shoulder
14	738-0372B	4	/P	Spacer, Shoulder
15	725-1462	1		Switch, Seat
16	757-3003	1	S	Seat, Mid Back
	777D06883	1	/P	Graphic, Seat Back
	777D01782	1	/P	Graphic, Made in USA


LT2042 Tractor
Spindle Assembly 42"

Page 68 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	603-0857	1	/P	Pivot Arm, Double Pulley
2	603-0181B	1		Plate Assembly, Mounting
3	703-2463	1	S	Arm, Idler
4	710-0520	1	/P	Screw, Hex Cap, 3/8-16 x 1.5 GR5
5	710-0923	1	/P	Screw, Hex Cap, 5/8-18 x 3.0 GR5
6	710-1010	1	/P	Screw, Hex Cap, 1/2-20 x 3.0 GR8
7	710-1260A	8	/P	Screw, Hex Wsh Hd Tap, 5/16-18 x .75
8	710-1336A	2	/P	Bolt, Spindle, 3/4-16 x 4.25
9	712-0239	1	S	Nut, Hex Center Lock, 1/2-20
10	712-0431	1	S	Nut, Hex Flange Lock, 3/8-16
11	712-3078	2	/P	Nut, Hex Flange, 3/4-16
12	716-3020	2	S	Snap Ring, Internal
13	721-3018A	4	S	Seal, Oil, 1.25 x 1.874 x .25
14	732-0262	1	S	Spring, Extension, .88 x 6.12
15	732-3115	1	/P	Spring, Extension, 1.25 x 8.15
16	736-0100	1	/P	Washer, Flat, .531 x 1.25 x .036
17	736-0179	1	S	Washer, Flat, .531 x 1.25 x .100
18	736-0237	2	/P	Washer, Flat, .65 x 1.25 x .075 Hdn.
19	737-3000	4	S	Fitting, 3/16 Drive Lube
20	741-0338	2	/P	Bearing, Flange, 3/4 ID x .53 Lg
21	741-1122	2		Bearing, .625 ID x 1.574 OD x 470
22	741-04089	4	S	Cone, Bearing
23	741-04091	4	S	Cup, Bearing
24	712-3087	1	/P	Nut, Wing, 1/4-20
25	748-3065	4	S	Spacer, Deck Spindle
26	750-0656	1	/P	Spacer, Idlr Brkt .50 ID x .75 OD x 2.25
27	750-3132	1	S	Spacer, Pulley .635 ID x .88 OD x 1.25
28	750-04409	2	/P	Spacer, Bearing
30	754-3073	1	S	Belt, Spindle, A-Section x 61 Lg
31	754-04041	1	S	Belt, PTO, B-Section x 111.2 Lg
32	756-0627D	1	/P	Pulley, Flat Idler, 3.5 OD
33	756-3114	1	/P	Pulley, Double (737-3000 Lube Fitting Not Included)
34	756-3089	2		V-Pulley, 4.0 Dia
35	759-3830	2		Blade, 3 In One, 21.20 Lg
36	618-3129B	2	S	Spindle, Blade
37	731-2363	1	/P	Plug, Mulch
38	710-0134	1	/P	Screw, Carriage, 1/4-20 x .62

LT2042 Tractor
Steering


Page 69 of 72

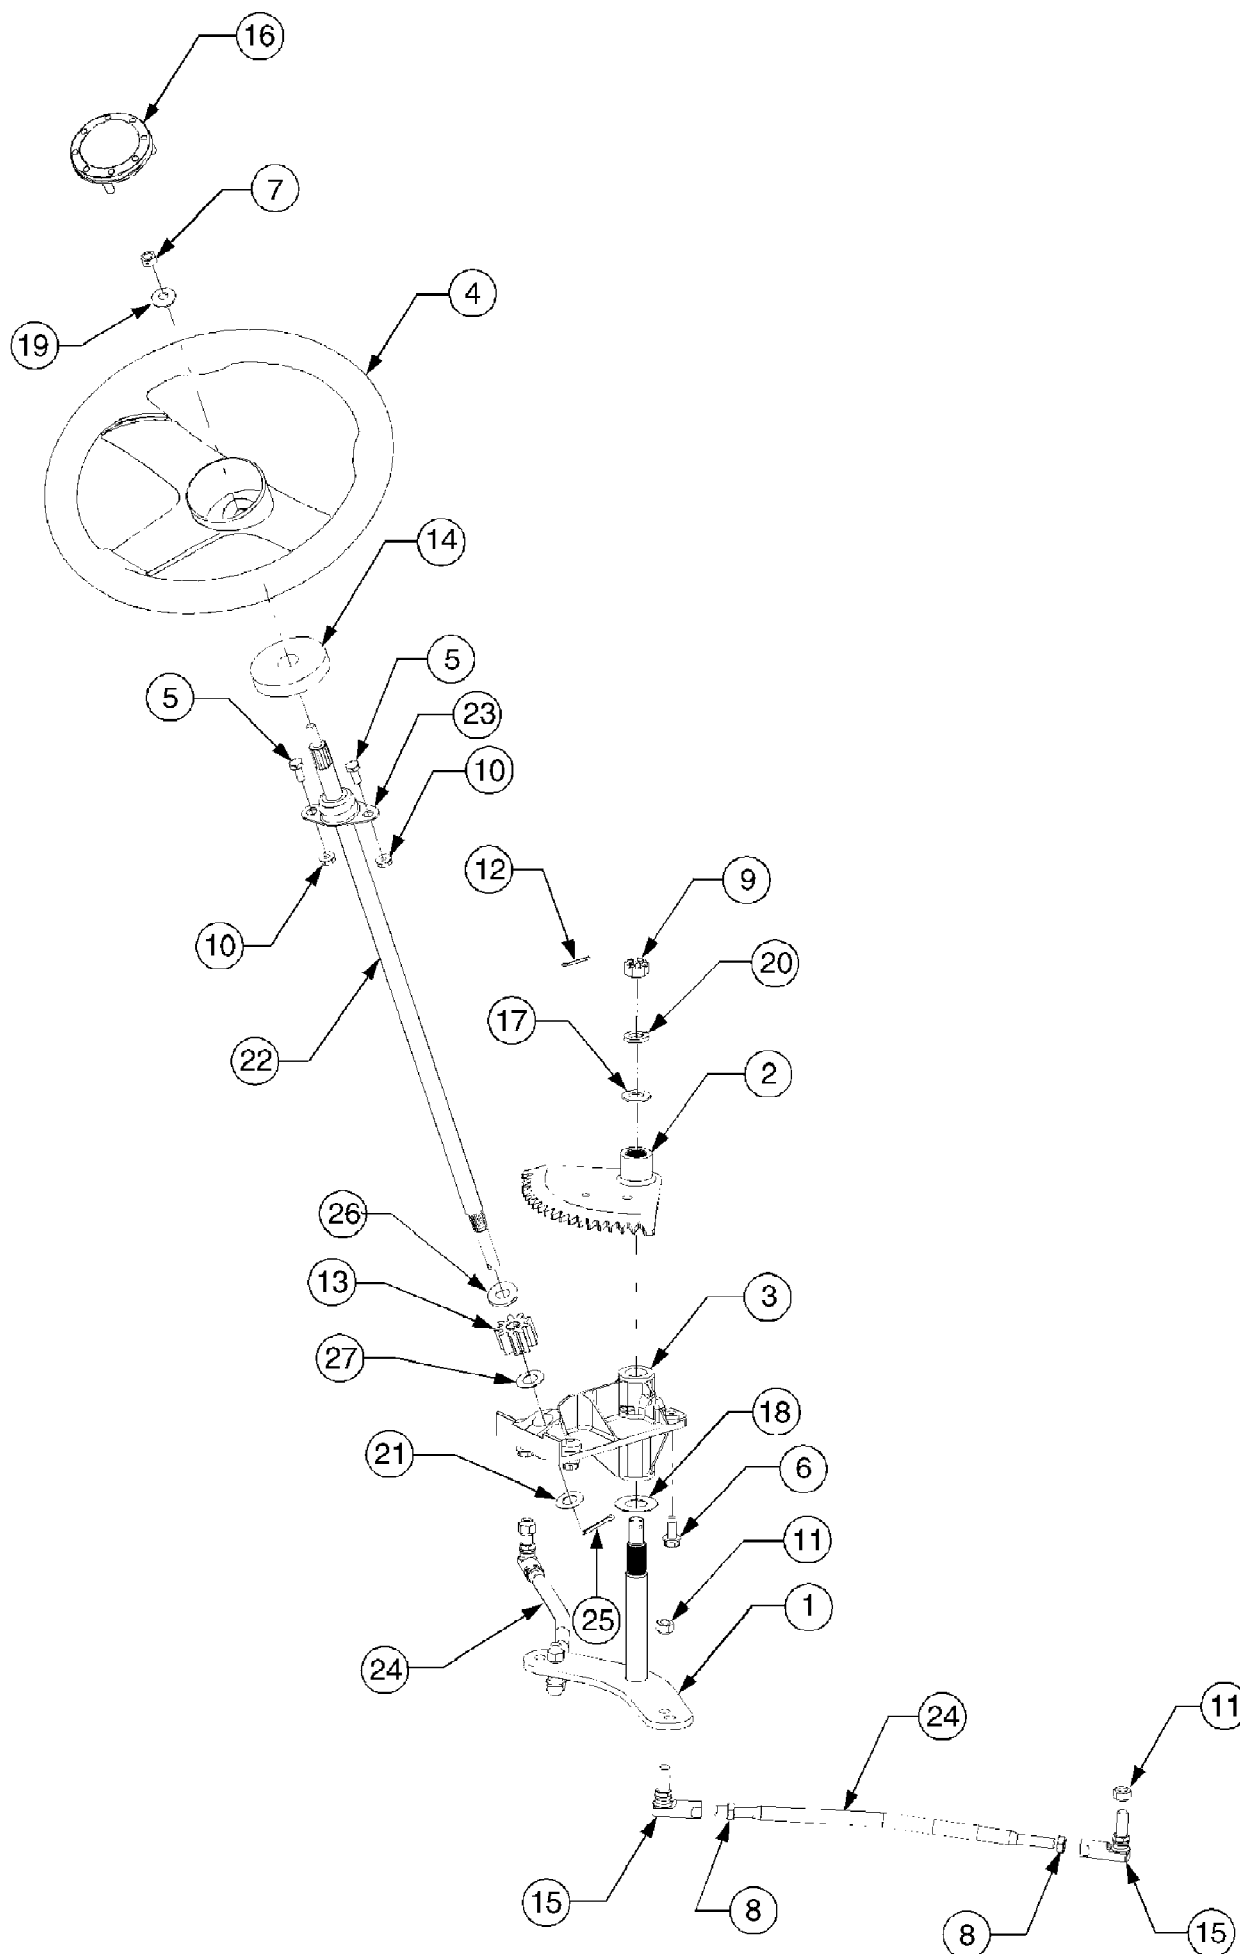

LT2042 Tractor
Steering

Page 70 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	603-0064	1		Arm Assy, Lower Steering
2	603-0250	1	/P	Segment Assy, 18T Steering
3	603-0236B	1	/P	Housing Assy,
	737-3000	1	S	Fitting, Grease, 3/16 Drive Type
	748-0108	1	S	Bearing, Flange, .503 ID
	748-3007A	2	S	Bearing, Bronze Flange, .75 ID
4	731-2624	1		Wheel, Steering, Soft Grip
5	710-3008	2	/P	Screw, Hex Cap, 5/16 - 18 x .75, GR5
6	710-1260A	4	/P	Screw, Hex Wash. Hd. Tapp 5/16 - 18 x .75
7	712-0237	1	S	Nut, Hex Center Lock, 5/16-18
8	712-0711	4	/P	Nut, Hex Jam, 3/8-24 GR2
9	712-3012	1	S	Nut, Hex Slotted, 1/2-20 GR5
10	712-3004A	2	/P	Nut, Hex Flange Lock, 5/16-18 GR5
11	712-3054	4	/P	Nut, Hex Lock, 3/8-24 GR5
12	714-3004	1		Pin, Cotter, 3/32 Dia x 1.25
13	717-3382	1		Pinion, Steering
14	722-3019	1		Gasket, Steering
15	723-0156	4	S	Joint, Ball, 3/8-24
16	731-2625	1		Cap, Steering Wheel
17	736-0272	1	S	Washer, Flat, .510 x 1 x .06 Thk
18	736-0351	1	S	Washer, Flat, .760 x 1.5 x .03 Thk
19	736-0242	1	/P	Washer, Bell., .34 x .872 x .061 Thk
20	736-0921	1	S	Washer, Lock, 1/2
21	736-3013	2	S	Washer, Flat, .531 x 1 x .027 Thk
22	711-04360	1		Shaft, Steering
23	741-3025	1		Bearing, Flange
24	747-3171	2		Rod, Tie
25	714-0115	1	S	Pin, Cotter, 1/8 x 1.0
26	736-0355	1	/P	Washer, Flat, .56 x 1.0 x .04 Ht
27	736-3132	1		Washer, Flat, 1.12 x .5 x .125

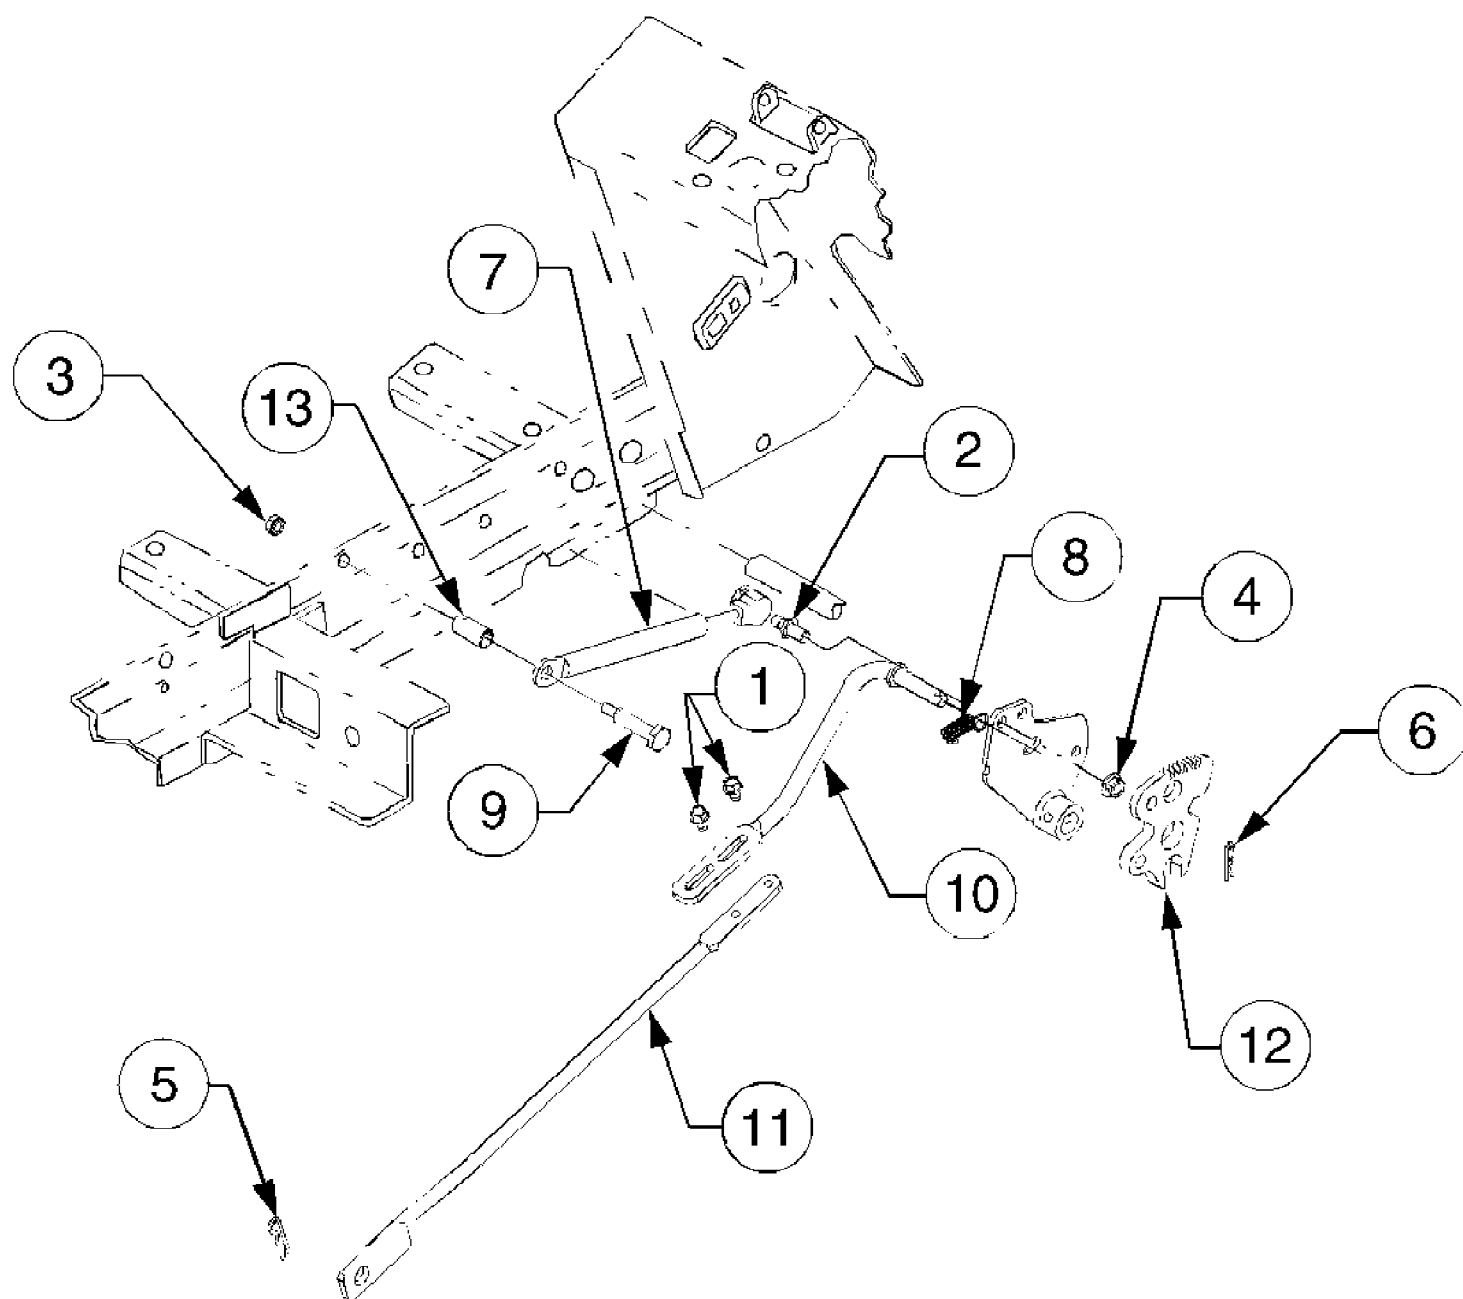

LT2042 Tractor
Transmission Controls

Page 72 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	710-0642	2	/P	Screw, Hex Wsh Hd Tapp, 1/4-20 x .75
2	710-3170	1		Screw, Ball, 5/16-18 x.56
3	712-0271	1	/P	Nut, Hex Sems, 1/4-20
4	712-3004A	1	/P	Nut, Hex Flange Lock, 1/4-20
5	714-0101	1	S	Pin, Internal Cotter
6	714-0104	1	S	Pin, Internal Cotter
7	727-3090	1	/P	Cylinder, Damper
8	732-3118	1		Spring, Extension, 3/8 OD x 1.44
9	738-0560	1	S	Bolt, Shoulder, .374 Dia x 1.375
10	747-3304	1		Rod, Front Control
11	647-3003	1		Rod, Rear Hydro Control
12	748-3070A	1		Plate, Cruise
13	750-0434	1	/P	Spacer, Split Tubing, .375 ID x 1.04