


RZT50 B&S Intek
Air Filter, Blower Housing And Engine Air Guides

Page 1 of 47

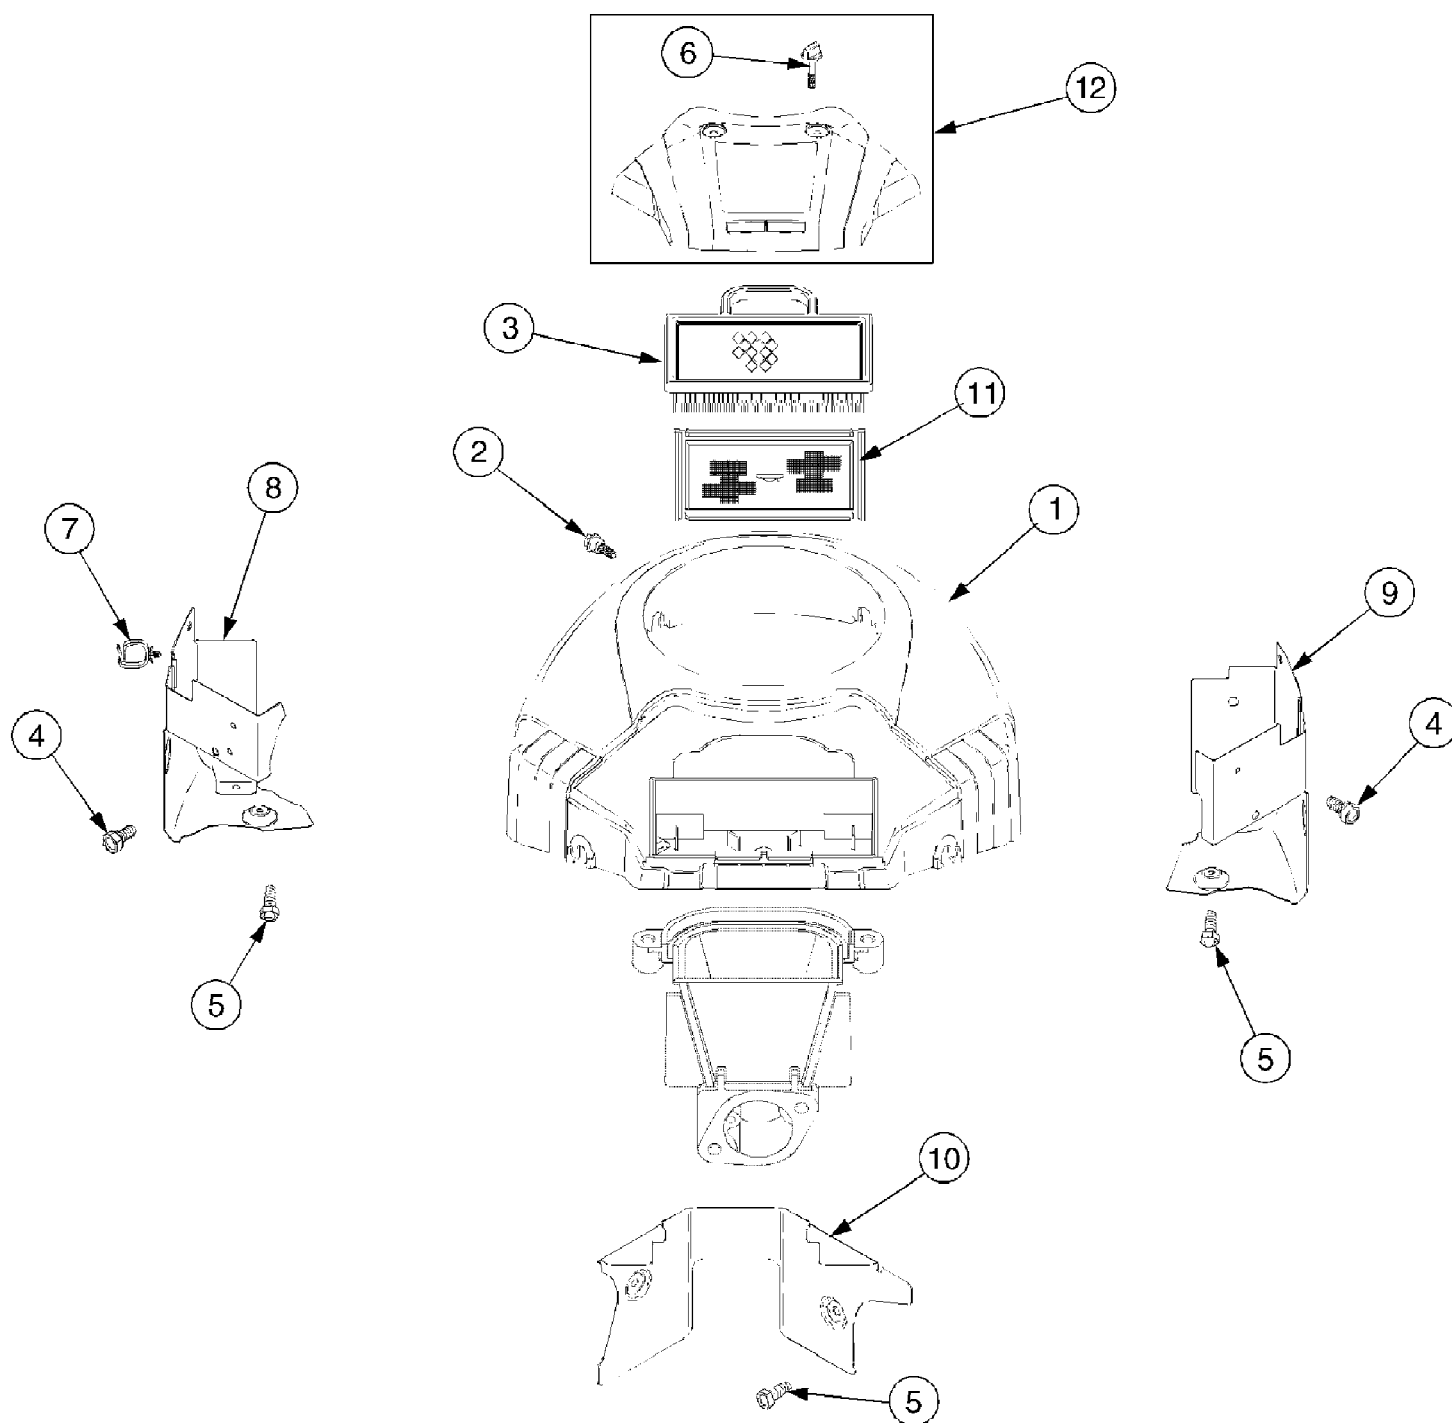




RZT50 B&S Intek
Air Filter, Blower Housing And Engine Air Guides

Page 2 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	BS-695277	1	S	Housing, Blower
2	BS-691005	6		Screw (Blower Housing)
3	BS-499486S	1	/P	Filt er, Air Cleaner Cartridge
4	BS-691003	2	/P	Screw (Air Guide Cover)
5	BS-691108	4	/P	Screw (Air Guide Cover)
6	BS-691008	2		Knob, Air Cleaner
7	BS-691010	1		Clip
8	BS-691012	1		Cover, Air Guide
9	BS-691014	1		Cover, Air Guide
10	BS-691015	1		Cover, Air Guide
11	BS-273638	1	S	Filter, Pre Cleaner
12	BS-499788	1	S	Cover, Air Cleaner

RZT50 B&S Intek
Carburetor And Intake Manifold

Page 3 of 47

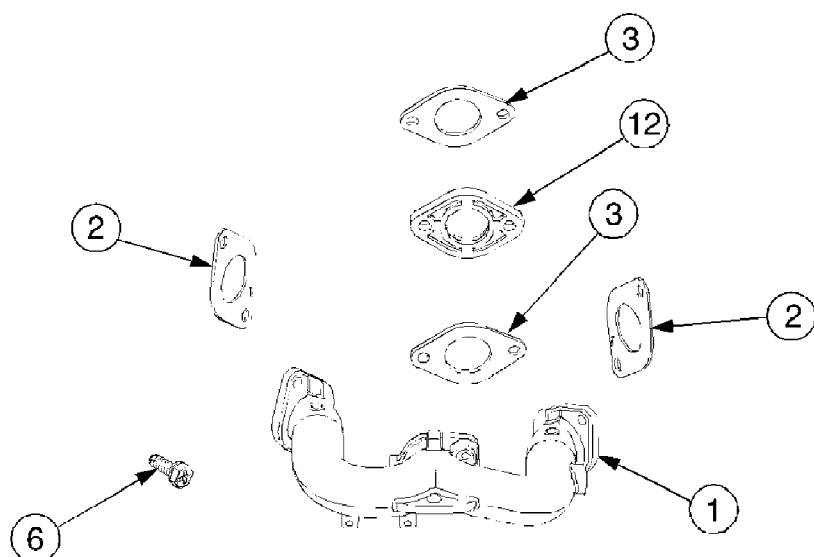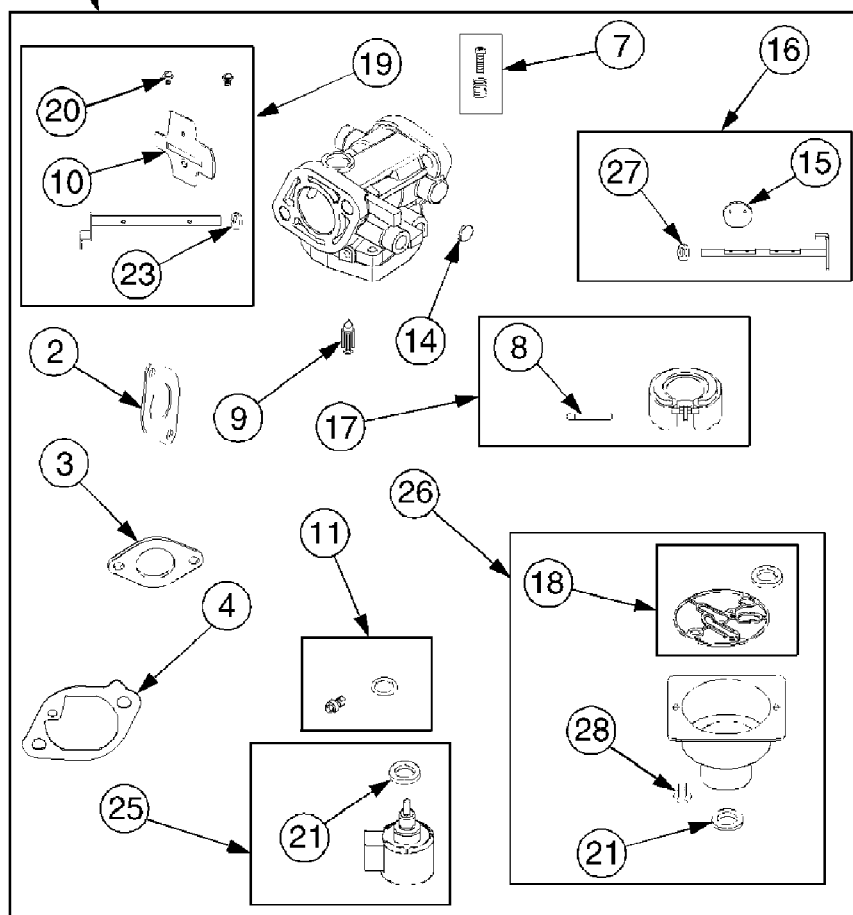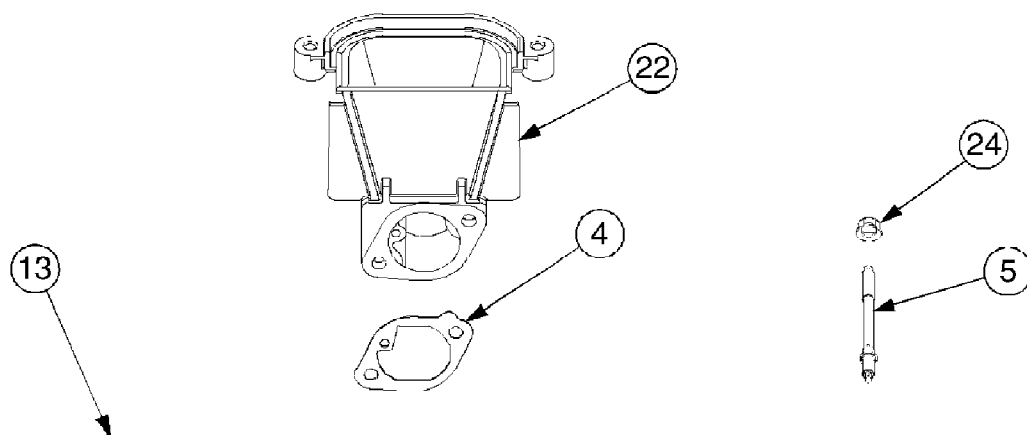




RZT50 B&S Intek
Carburetor And Intake Manifold

Page 4 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	BS-699801	1		Manifold, Intake
2	BS-690949	2		Gasket, Intake
3	BS-699803	2		Gasket, Intake
4	BS-699800	1		Gasket, Inake
5	BS-690951	1		Stud, Carburetor
6	BS-699816	4		Screw (Intake Manifold)
7	BS-699721	1		Kit, Idle Speed
8	BS-694918	1		Pin, Float
9	BS-698537	1		Valve, Float Needle
10	BS-699808	1		Valve, Choke
11	BS-698784	1	S	Jet, Main (Standard)
	BS-699820	1		Jet, Main (High Altitude)
12	BS-699802	1		Spacer, Carburetor
13	BS-699807	1		Carburetor
14	BS-699810	1		Plug, Welch
15	BS-699809	1		Valve, Throttle
16	BS-699812	1		Kit, Throttle Shaft
17	BS-694914	1		Float, Carburetor
18	BS-698781	1	/P	Gasket, Float Bowl
19	BS-699811	1		Kit, Choke Shaft
20	BS-690718	2		Screw (Choke Valve)
21	BS-695410	1		Washer, Sealing
22	BS-699806	1		Elbow, Intake
23	BS-695414	2		Seal, Choke/Throttle Shaft
24	BS-690958	2	/P	Nut (Carburetor)
25	BS-699728	1		Solenoid, Fuel
26	BS-699502	1		Bowl, Float
27	BS-699813	1		Seal, Throttle Shaft
28	BS-695407	1		Screw (Float Bowl)

RZT50 B&S Intek Controls And Deck Lift

Page 5 of 47

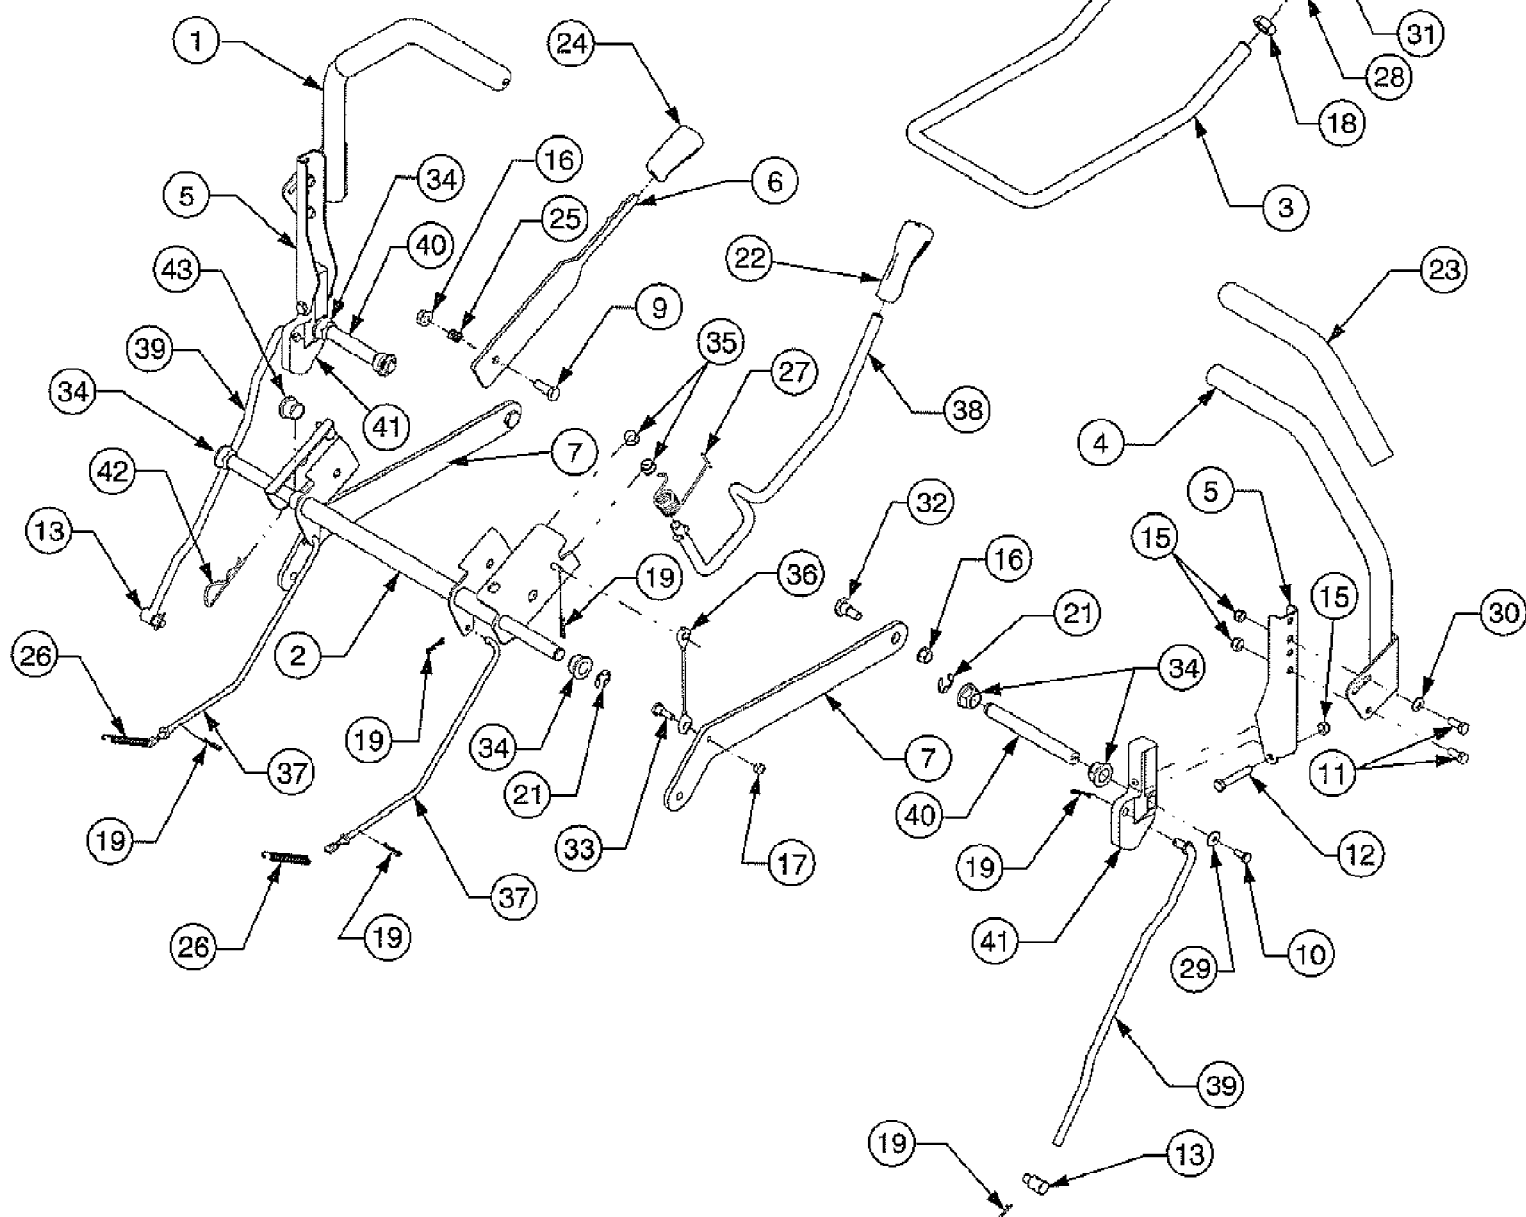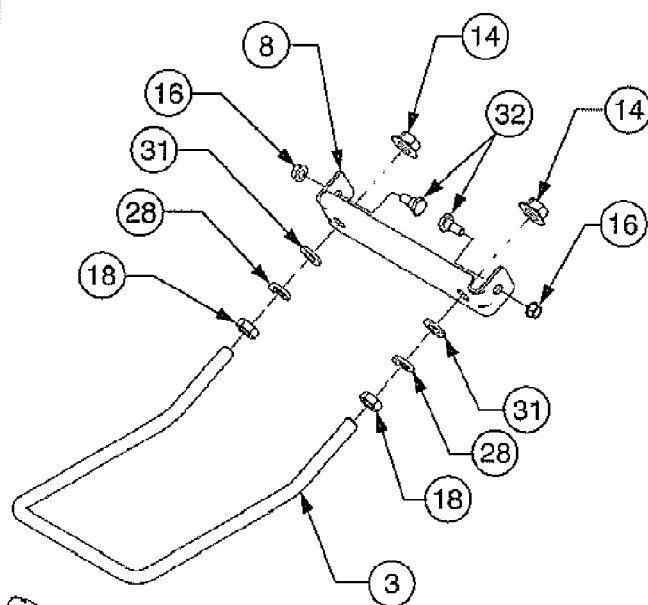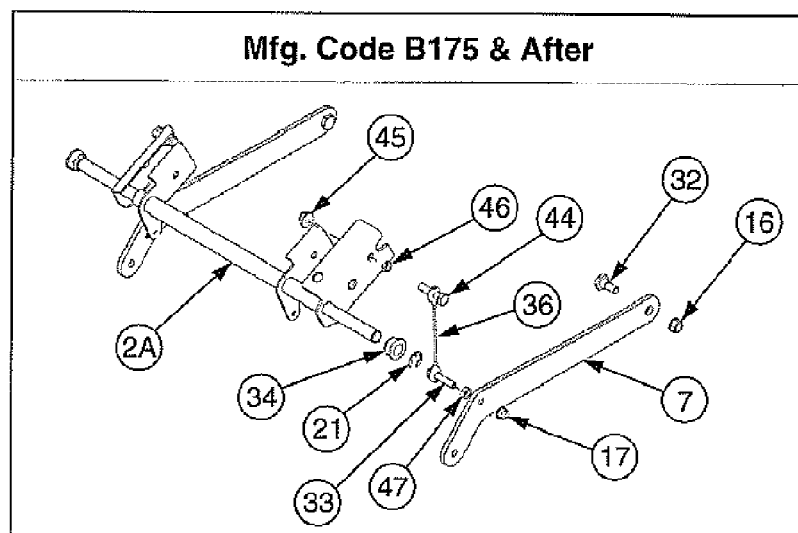

RZT50 B&S Intek
Controls And Deck Lift

Page 6 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	603-04150	1	S	Lever, Lapbar, LH
2	603-04160	1	S/F	Shaft Assembly, Deck Lift also furnish (2) 759-04085
2A	603-04160	1	S/F	Shaft Assembly, Deck Lift also furnish (4) 759-04085
3	747-04223A	1	/P	Rod, Deck Front Hanger
4	603-04181A	1		Lever, Lapbar, RH
5	703-05387	2	S	Bracket, Lapbar Pivot
6	703-05396	1	S	Handle, Brake
7	703-05401	1	S/F	Arm, Deck Lift, with 1/4" hole
7	703-05793	2	/P/F	Arm, Deck Lift, with 5/16" hole
8	703-05414	1		Bracket, Front Deck Hanger
9	710-0514	1	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5 ..
10	710-0433	2	/P	Screw, Hex Lock, 1/4-20 x .62 GR5 .
11	710-3008	4	/P	Screw, Hex Cap, 5/16-18 x .75 GR5
12	710-3180	2	/P	Screw, Hex Cap, 5/16-18 x 1.75 GR5
13	711-0832	2	S	Ferrule, 3/8-24 x .375
14	712-0417A	2	/P	Nut, Hex Flange, 5/8-18
15	712-0429	6	S	Nut, Hex Insert Lock, 5/16-18 GR5 ..
16	712-0431	5	S	Nut, Hex Flange Lock, 3/8-16 GRF
17	712-0380	1		Nut, Hex Flange Lock, 1/4-28 GR2, use with ref 7
17	712-04063	2	/P	Nut, Hex Flange Insert Lock, 5/16-18 GrF, use with ref 7
18	712-3056	2	/P	Nut, Hex Jam, 5/8-18 GR5
19	714-0104	10	S	Pin, Internal Cotter
21	716-0106	4	/P	E-Ring , .625 Dia. Shaft
22	720-0311	1		Grip, Handle
23	731-04719	2	S	Grip, Lapbar
24	731-04735	1		Grip, Handle
25	732-0334	1	S	Spring, Compression
26	732-0611	2	S	Spring, Extension
27	732-0874	1	/P	Spring, Torsion
28	736-0158	2	S	Washer, Lock, 5/8
29	736-0270	2	/P	Washer, Bell, .265 x .75 x .062
30	736-0275	2	S	Washer, Flat, .344 x .688 x .065
31	736-0366	2	/P	Washer, Flat, .64 x 1.12 x .125
32	738-0143	4	/P	Screw, Shoulder, .498 x .340:3/8-16
33	738-04100	1		Screw, Shoulder, 1/4-28 x .375, use with ref 7
33	710-0805	2	/P	Screw, Hex Cap, 5/16-18 x 1.5 GR5, use with ref 7
34	741-0225	6	S	Bearing, Hex Flange
35	741-0715	2	S	Bearing, Flange Snap, .50 ID
36	746-0970	2		Cable, Deck Lift, 5.05 Long, also furnish (4) 759-04085
37	747-04218	2		Rod, Brake
38	747-04224	1		Rod, Deck Lift Handle
39	747-04225	2	S	Rod, Lapbar Control
40	747-04226	2	S	Shaft, Control
41	748-04052	2		Hub, Control


RZT50 B&S Intek
Controls And Deck Lift

Page 7 of 47

Ref #	Part Number	Qty	S/P/F	Description
42	714-3020	1	/P	Pin, Internal Cotter
43	741-3074	2		Bearing, Flange, .626 x .938 x .344 ..
44	710-0520	2	/P	Screw, Hex Cap, 3/8-16 x 1.5 GR5, use with ref 2A
45	712-04065	2	/P	Nut, Hex Flange Insert Lock, 3/8-16 GrF, use with ref 2A
46	712-3008	2	S	Nut, Hex Jam, 3/8-16 GR5, use with ref 2A
47	712-3007	2	/P	Nut, Hex Jam, 5/16-18 GR5, use with ref 7
	759-04085	1	F	Deck Cable Hardware Kit, not shown

RZT50 B&S Intek
Crankcase, Breather, Governor And Lubrication

Page 8 of 47

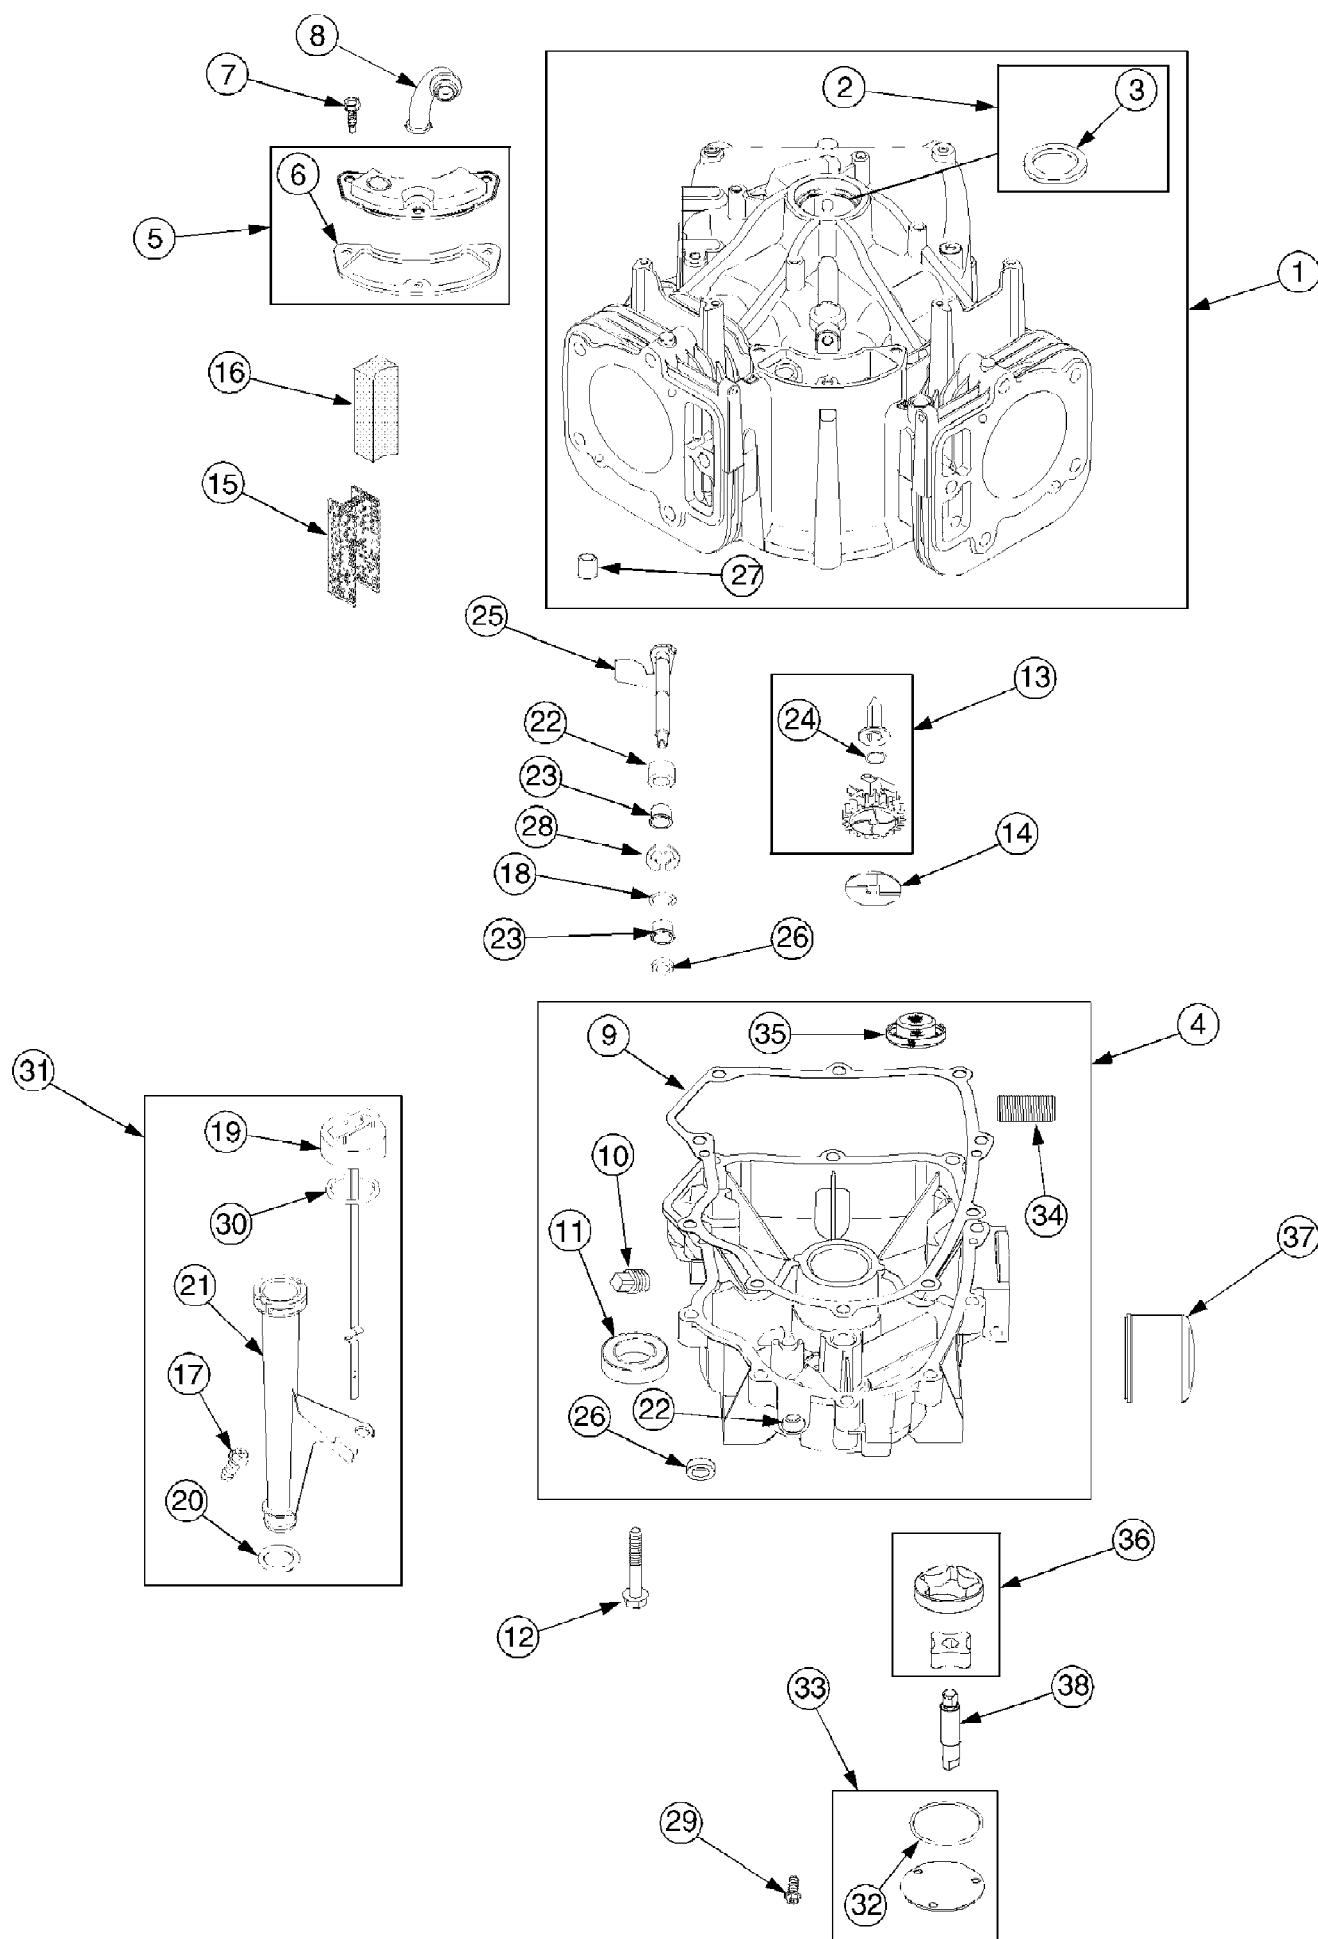


RZT50 B&S Intek
Crankcase, Breather, Governor And Lubrication

Page 9 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	BS-699751	1		Cylinder Assembly
2	BS-499585	1		Kit, Bushing/Seat (Magnetor Side)
3	BS-391086	1	S	Seal, Oil (Magnetor Side)
4	BS-699747	1	S	Sump, Engine
5	BS-499601	1	S	Breather Assembly
6	BS-690937	1		Gasket, Breather
7	BS-691108	3	/P	Screw, Breather Assembly
8	BS-690942	1	S	Tube, Breather
9	BS-697227	1	/P	Gasket, Crankcase
10	BS-690946	1	/P	Plug, Oil Drain
11	BS-690947	1	S	Seal, Oil (PTO Side)
12	BS-694966	10	/P	Screw, Engine Sump
13	BS-698231	1	S	Gear, Governor
14	BS-690412	1	/P	Washer, Governor Lever
15	BS-690957	1		Retainer, Breather
16	BS-690956	1		Collector, Oil
17	BS-691108	1	/P	Screw, Dipstick Tube
18	BS-690442	1		Washer, Governor Crank
19	BS-691036	1		Dipstick
20	BS-691032	1		Seal, Dipstick Tube
21	BS-691037	1		Tube, Dipstick
22	BS-690552	1		Bushing, Governor Crank
23	BS-690553	2		Bushing, Governor Crank
24	BS-698290	1	/P	Retainer, Governor Shaft
25	BS-691045	1		Crank, Governor
26	BS-690657	1		Seal, Governor Shaft
27	BS-690959	2	/P	Pin, Locating
28	BS-690328	1	/P	Retainer, E-ring
29	BS-696999	3		Screw, Oil Pump Cover
30	BS-691031	1	/P	Seal, Dipstick Tube
31	BS-499602	1		Dipstick Tube Assembly
32	BS-690589	1	/P	Seal, O-ring (Oil Pump Cover)
33	BS-499613	1		Cover, Oil Pump
34	BS-690954	1	/P	Nipple, Oil Filter
35	BS-690770	1		Screen, Oil Pump
36	BS-499054	1	S	Pump, Oil
37	BS-492932	1	S	Filter, Oil
38	BS-691042	1		Shaft, Pump
	BS-692714	1	S	Short Block
	BS-407577-0027	1	S	Engine, Service

RZT50 B&S Intek
Cylinder Head, Crankshaft, Camshaft And Valves

Page 10 of 47

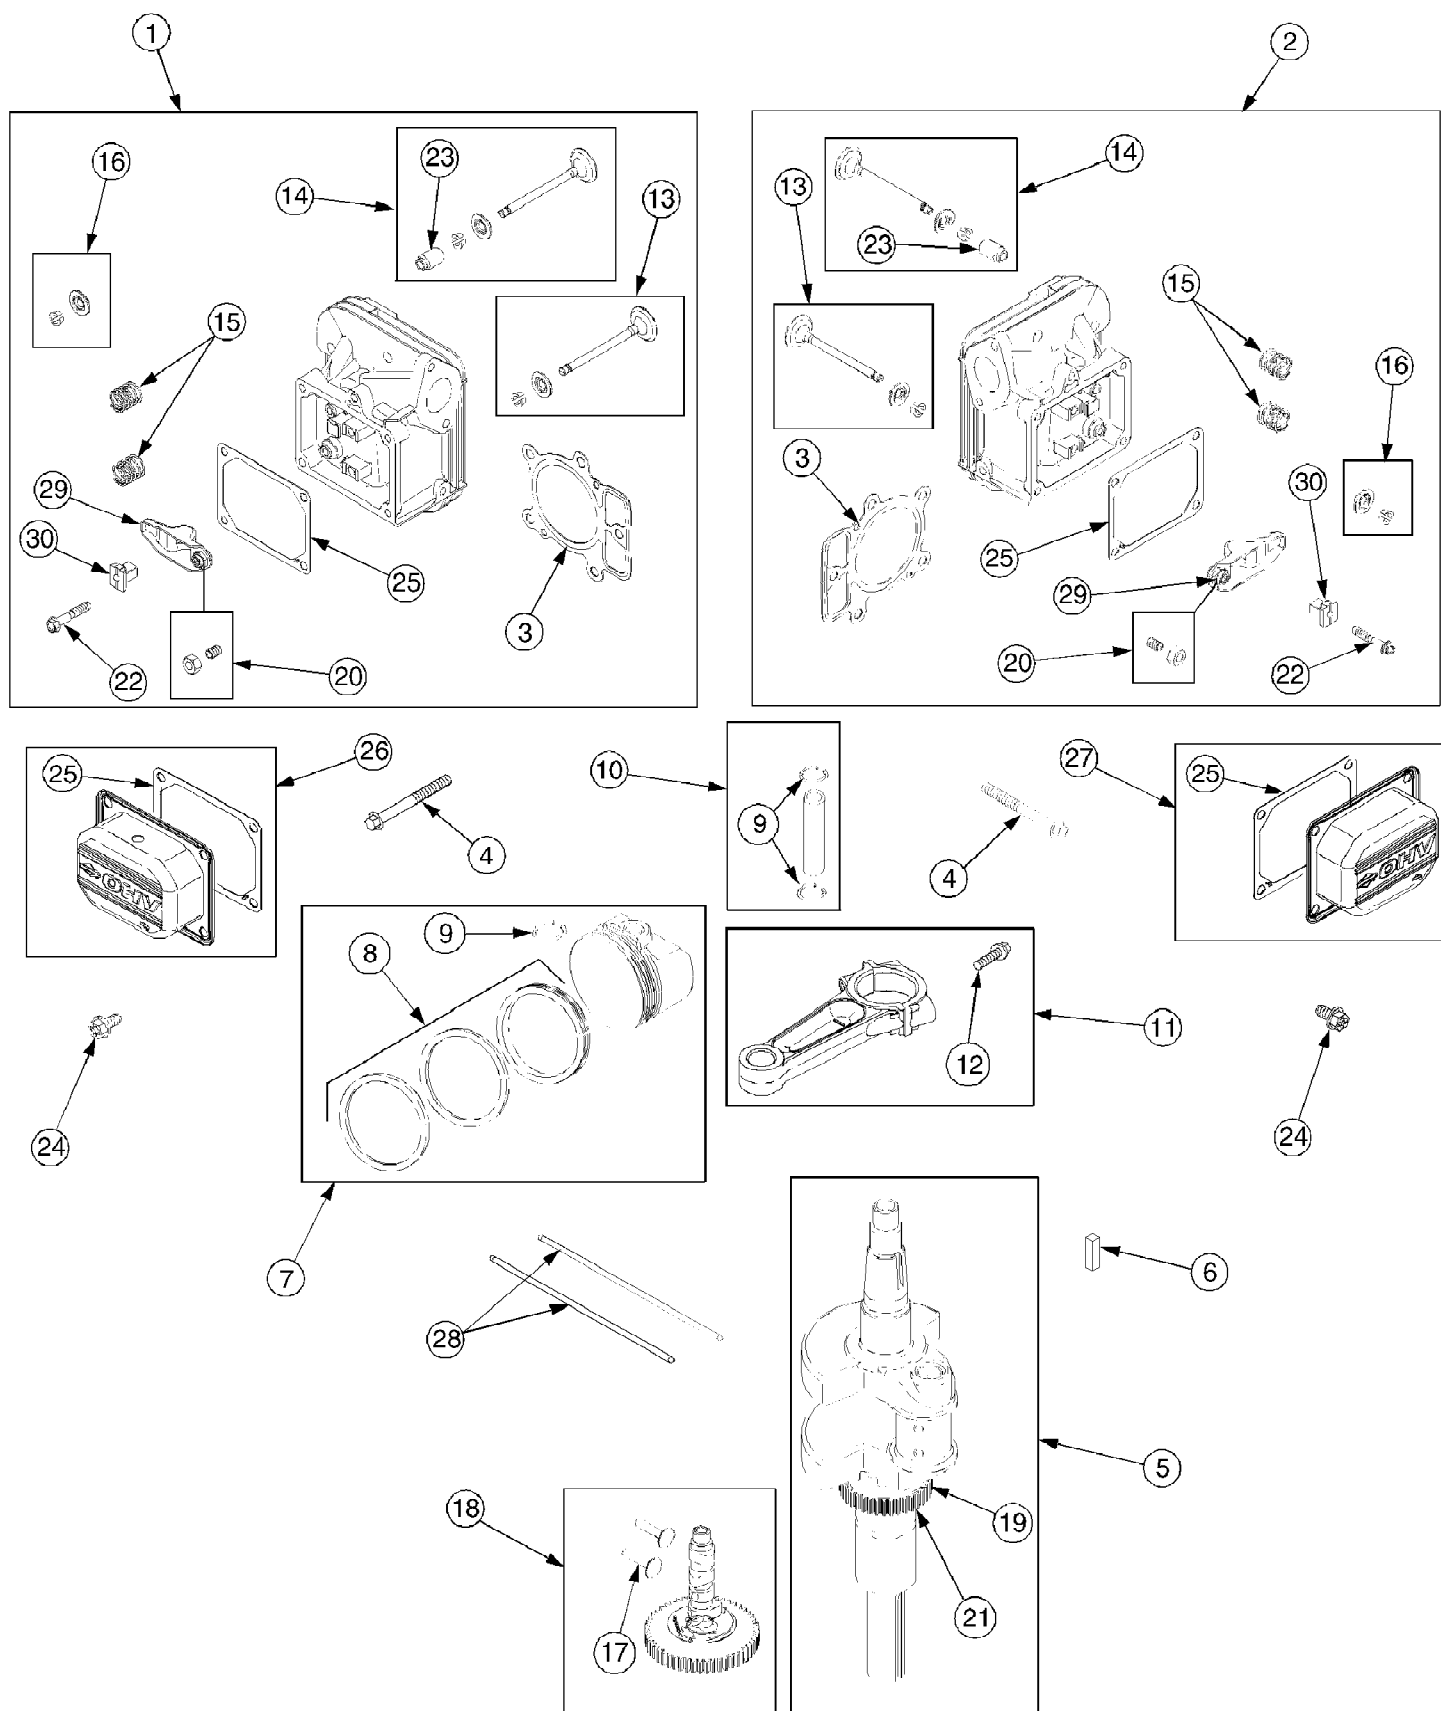


RZT50 B&S Intek
Cylinder Head, Crankshaft, Camshaft And Valves

Page 11 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	BS-693998	1	S	Head, Cylinder (Cylinder 1)
2	BS-693999	1	S	Head, Cylinder (Cylinder 2)
3	BS-690962	1	S	Gasket, Cylinder Head
4	BS-690360	8	/P	Screw, (Cylinder Head)
5	BS-790136	1		Crankshaft
6	BS-222698	1	S	Key, Flywheel
7	BS-499588	2	S	Piston Assembly (Standard)
	BS-499590	2	S	Piston Assembly, .020 Oversize
8	BS-499604	2		Ring Set, Piston (Standard)
	BS-499606	2		Ring Set, Piston .020 Oversize
9	BS-690975	4		Lock Ring, Piston Pin
10	BS-690229	2		Pin, Piston
11	BS-699699	2	S	Rod, Connecting
12	BS-690976	4		Screw (Connecting Rod)
13	BS-499596	2		Valve, Exhaust
14	BS-499597	2	S	Valve, Intake
15	BS-690963	4		Spring, Valve
16	BS-499586	4	/P	Keeper, Valve
17	BS-690977	4	/P	Tappet, Valve
18	BS-699748	1	S	Camshaft
19	BS-690979	1	/P	Key, Timing
20	BS-690083	4		Adjuster, Rocker Arm
21	BS-690980	1		Gear, Timing
22	BS-697890	4		Screw (Rocker Arm)
23	BS-690968	2	/P	Seal, Valve
24	BS-691127	8	/P	Screw (Rocker Cover)
25	BS-690971	2	/P	Gasket, Rocker Cover
26	BS-499599	1		Cover, Rocker (Cylinder 1)
27	BS-499600	1		Cover, Rocker (Cylinder 2)
28	BS-690981	4	/P	Rod, Push (Steel)
	BS-690982	4	/P	Rod, Push (Aluminum)
29	BS-690972	4		Arm, Rocker
30	BS-690973	4	/P	Pivot, Rocker Arm

RZT50 B&S Intek
Electrical


Page 12 of 47

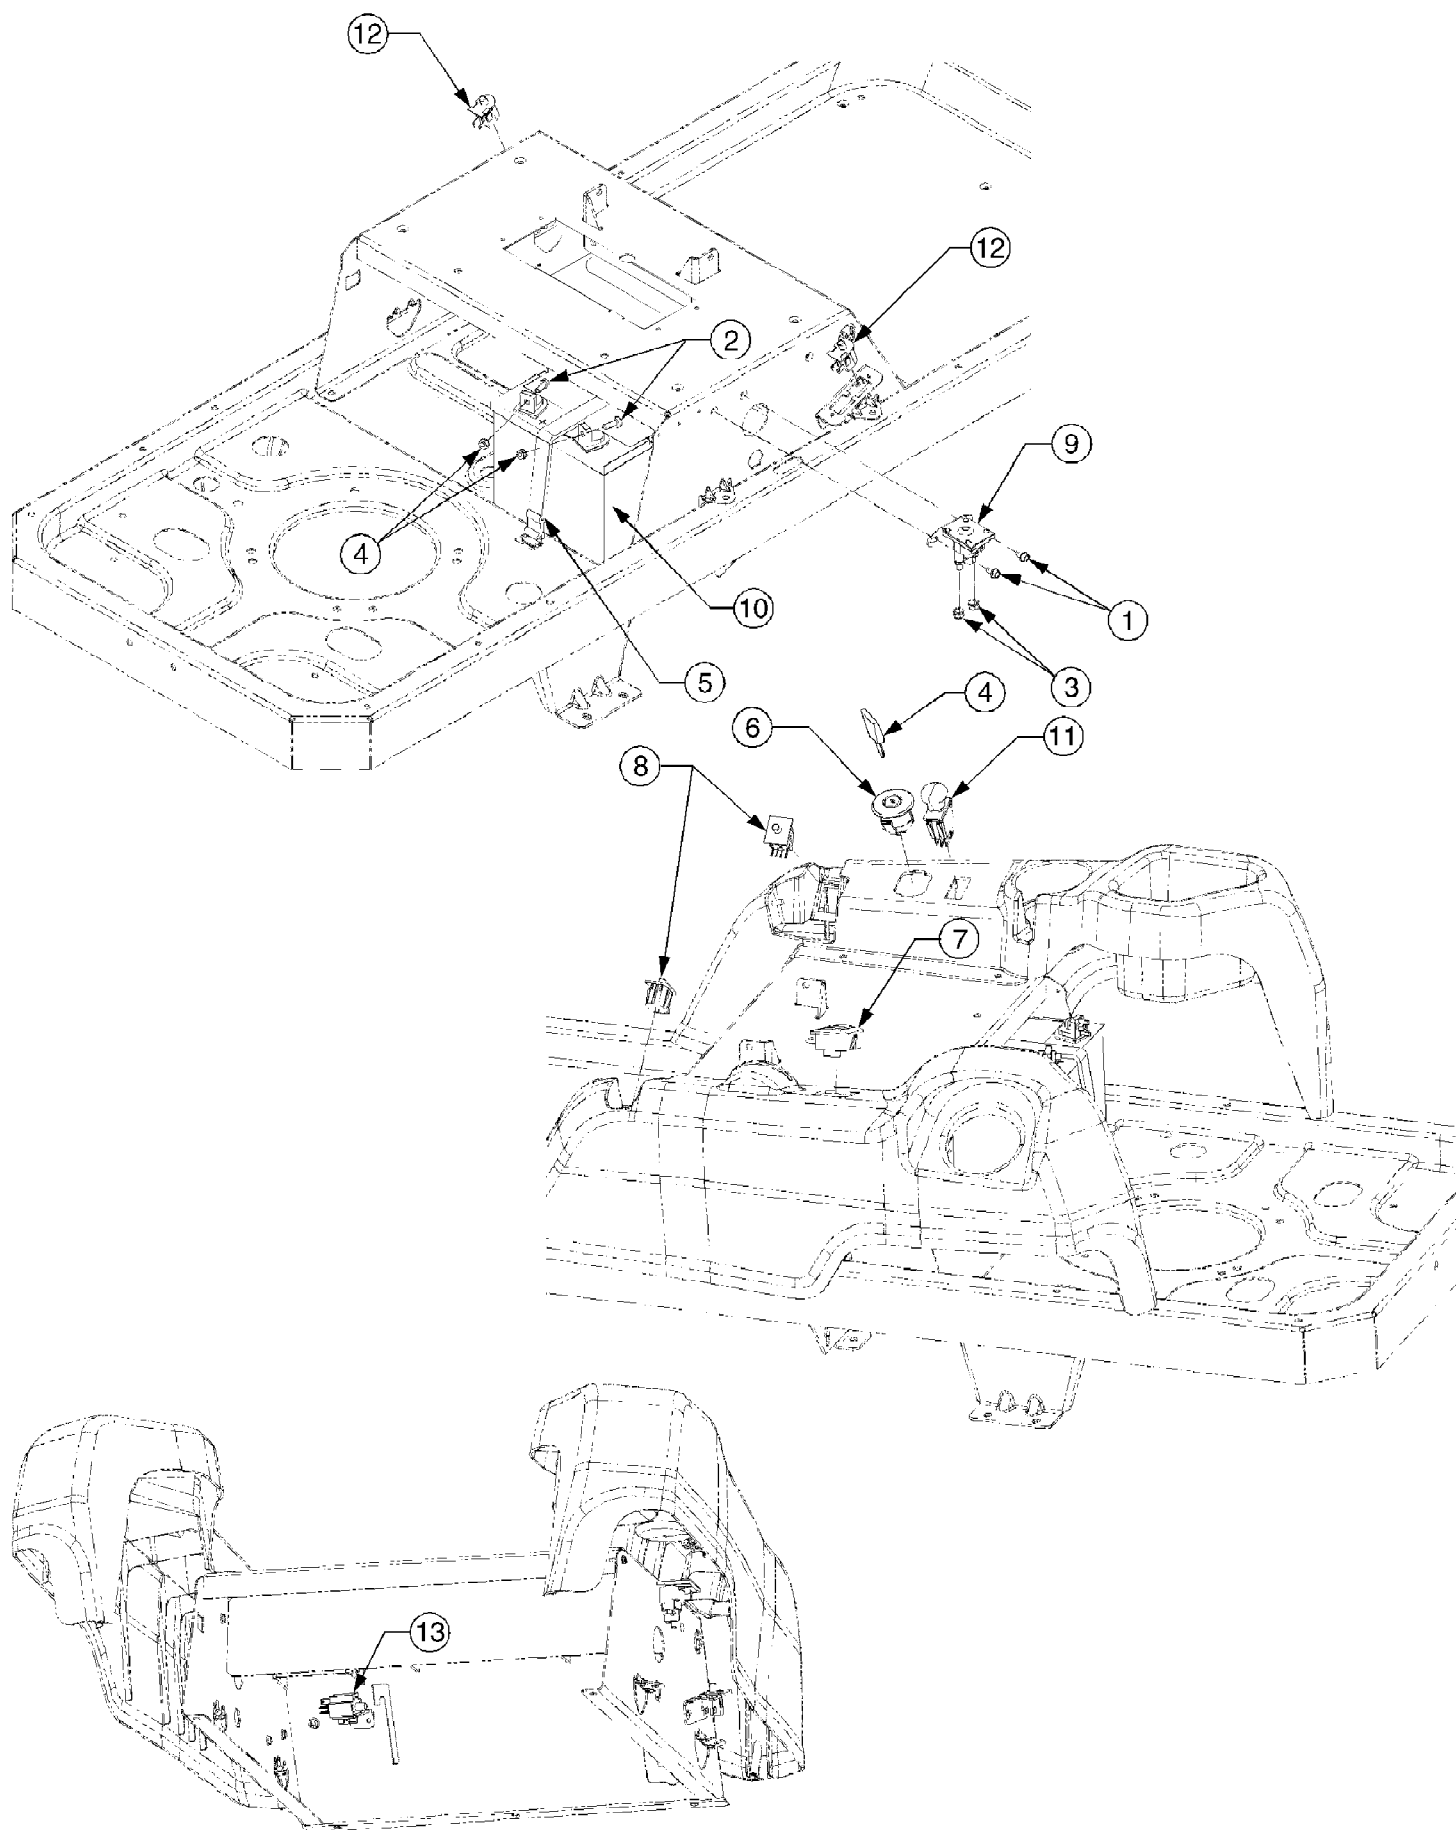

RZT50 B&S Intek
Electrical

Page 13 of 47


Ref #	Part Number	Qty	S/P/F	Description
1	710-0599	2	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5
2	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
3	712-0271	4	/P	Nut, Hex Sems, 1/4-20
4	925-1745	1	S	Key
5	723-0467	1		Strap, Battery
	732-0696	2		Hook, Wire Rectangular
6	725-04228	1	S	Switch, Ignition
7	725-04036A	1	S	Meter, Hour
8	725-04165	2	S	Switch, Dbl. Pole - Neutral
9	725-1426	1	S	Solenoid
10	725-1707D	1	S	Battery, 245 CCA
11	725-04174	1	S	Switch, PTO
12	725-3166	2	S	Switch, Snap Mount (N.C.) - Reverse
13	725-04232	1		Switch, 3-Pole, (NC-NO-NO) - Brake
	725-04244	1		Harness Assembly, Wire Not Shown
	725-04245	2		Jumper Harness, Neutral Not Shown
	725-04187	1		Cable Wire, Red - Starter Not Shown
	725-04188	1		Cable Wire, Black - to Ground Not Shown
	625-04023	1	S	Cable Wire, Red - Solenoid Not Shown

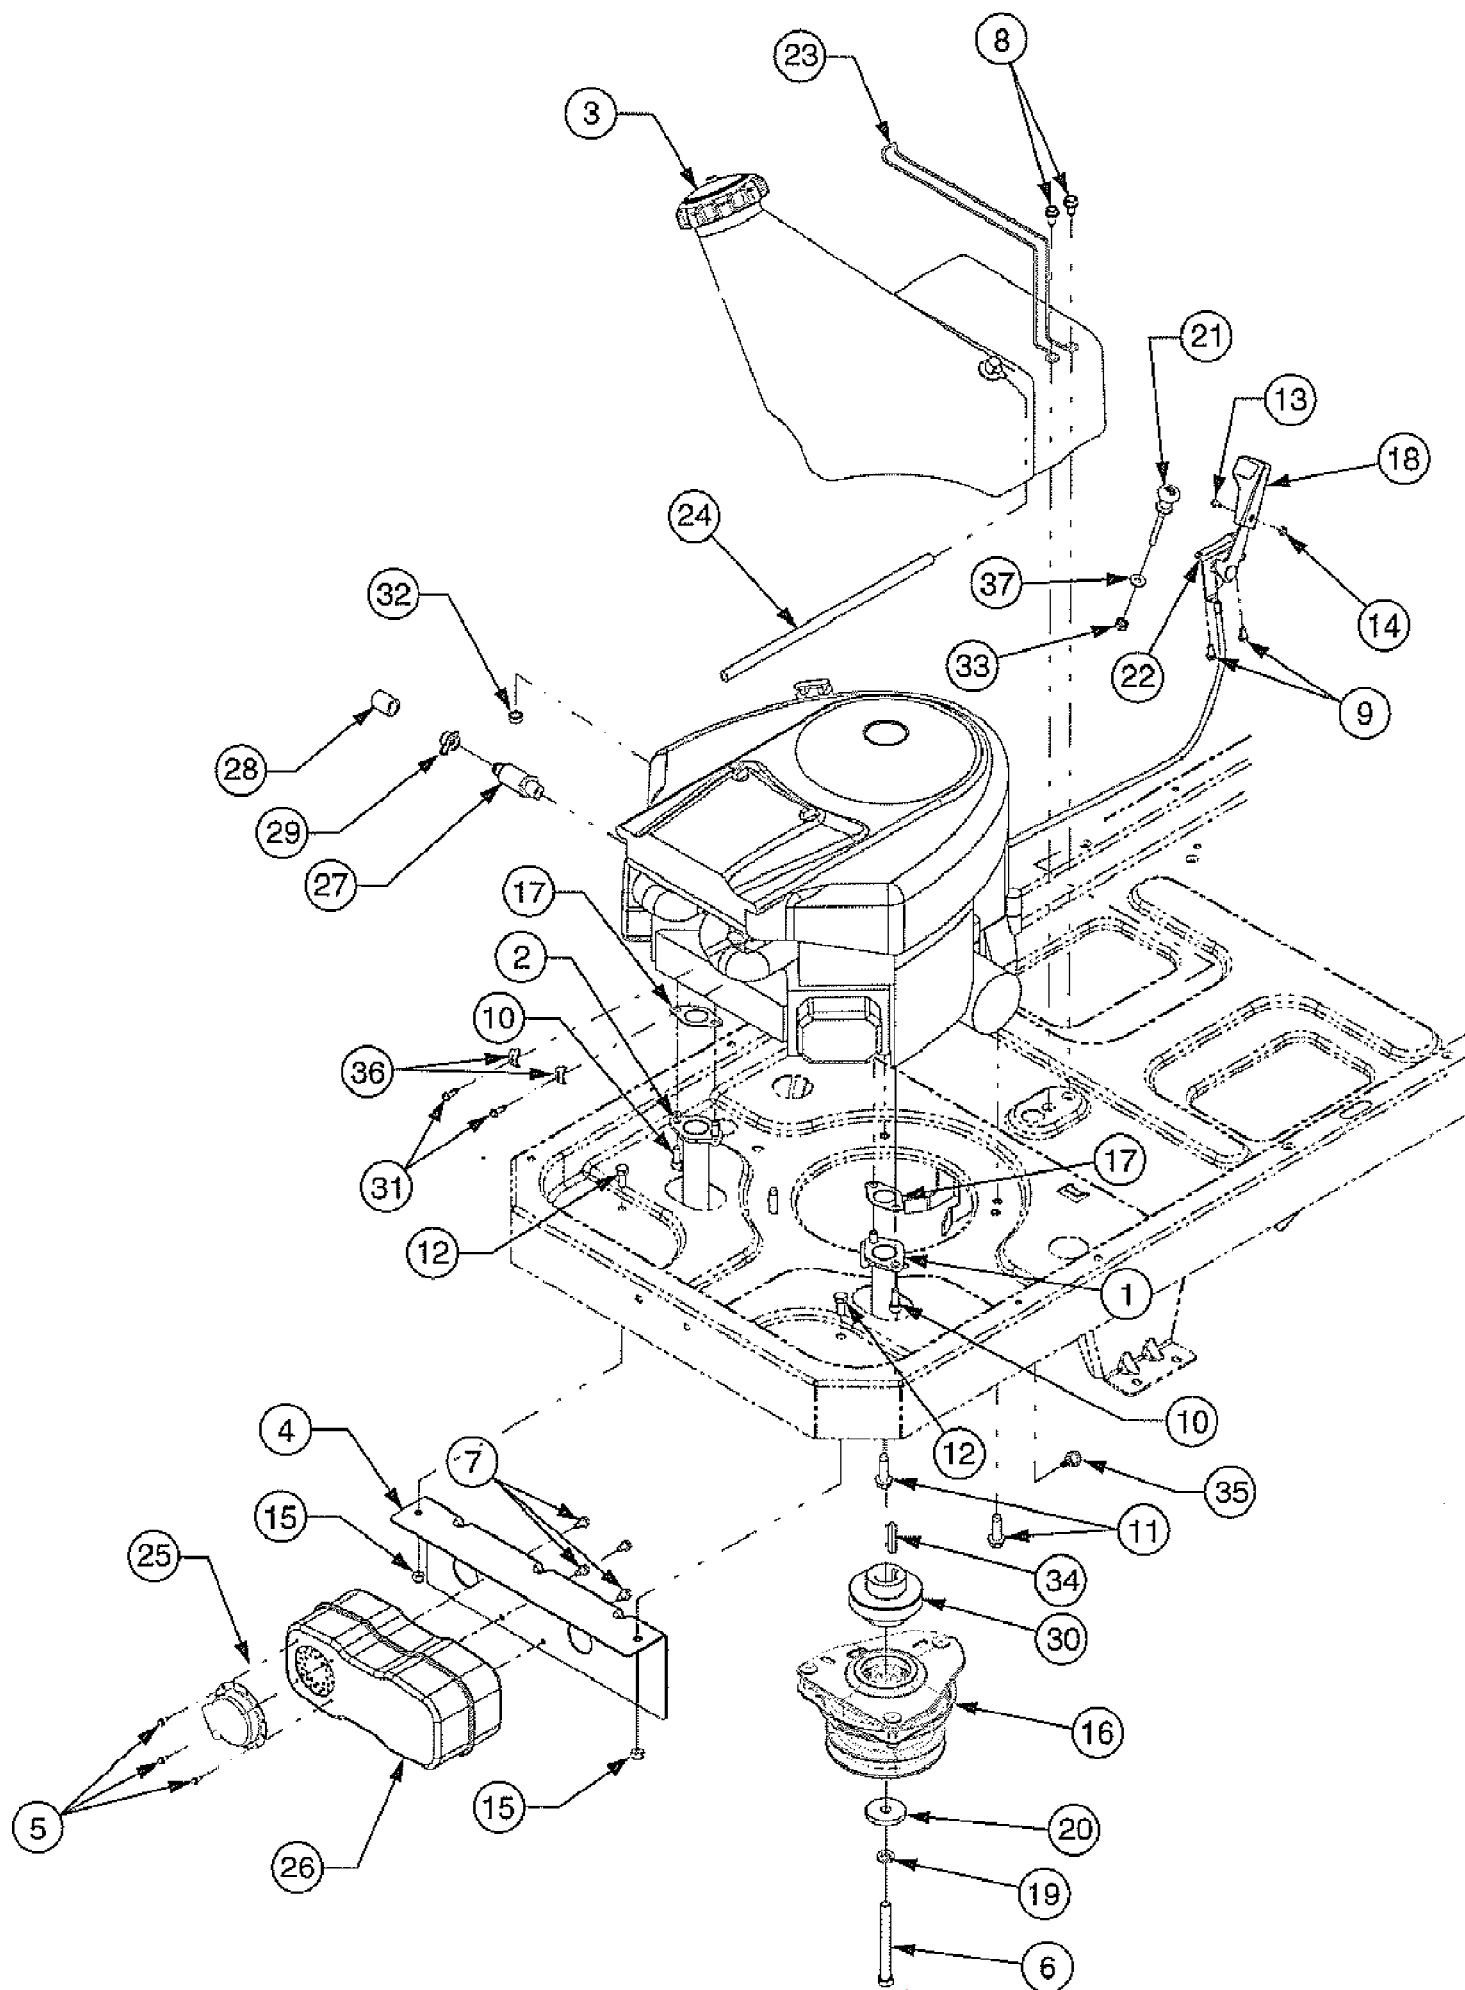

Ref #	Part Number	Qty	S/P/F	Description
1	603-04162	1		Tube, Exhaust RH
2	603-04163	1		Tube, Exhaust LH
3	651-04058A	1	S	Tank, Fuel, 3.0 Gal.
3	751-3124B	1	S	Cap, Fuel Not shown
4	703-05441	1	S	Bracket, Muffler Mounting
5	710-0227	3	/P	Screw, Hex Wash. Hd. Tapp #8-18 x .5
6	710-04248	1	/P	Screw, Hex Cap, 7/16-20 x 4.0 GR5
7	710-0599	4	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
8	710-0726	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-12 x .75
9	710-04261	2		Screw, Hex Wash. Hd. Tapp #12-16 x .5
10	710-1314A	4	/P	Screw, Socket Hd. 5/16-18 x .75
11	710-1315	4	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x 1.25
12	710-3008	2	/P	Screw, Hex Cap, 5/16-18 x .75 GR5
13	710-3217	1	/P	Screw, Truss Hd. Mach. #8-32 x .375
14	712-0142	1	/P	Nut, Hex, #8-32
15	712-0429	2	S	Nut, Hex Insert Lock, 5/16-18 GR5 ...
16	717-04127	1	S/F	Clutch Assembly, Electric PTO, (GT1-JD08)
16	717-04183	1	S/F	Clutch Assembly, Electric PTO, (GT1A-MT-09)
17	721-0460	2		Gasket, Exhaust
18	731-04914	1	/P	Knob, Throttle Control
19	736-0171	1	S	Washer, Lock, 7/16
20	736-04131	1	/P	Washer, Flat, .438 x 1.75 x .25
21	746-04214	1	S	Cable, Choke, 61Lg
22	746-1086	1	S	Cable, Throttle, 39.0 Lg
23	747-04228	1		Wire, Tank Mounting
24	751-0535-12	1	S	Hose, Fuel Line Cut to approx. 10 inches
24	726-0205	2	/P	Clamp, Hose Not shown
25	751-0564A	1	S	Deflector, Muffler
26	751-0616A	1	S	Muffler
27	751-3140	1	S	Valve, Oil Drain
28	751-3141	1	S	Hose, Oil Drain Extension
29	751-3142	1		Cap, Oil Drain Valve
30	756-04102A	1	/P	Pulley, Drive, 3.25 Dia.
31	710-1237	2		Screw, Hex Wash. Hd. Tapp #10-32 x .625
32	714-04037	1		Key, Square, 1/4 x 2.25, use with PTO Clutch 717-04127
32	714-0118	1	/P	Key, Square, 1/4 x 1.5, use with PTO Clutch 717-04183
33	712-3005	1	S	Nut, Hex Jam, 3/8-16 GR2
34	714-0118	1	/P	Key, Square, 1/4 x 1.5
35	726-3055	1		Clip, Cable Retainer
36	BS-691024	2	/P	Clamp, Casing
37	736-0300	1	S	Washer, Flat, .406 x .875 x .059
	703-05845	1	S/F	Anti-rotation Bracket, units with Mfg Code B095G - E135G Not shown, use with 717-04183

RZT50 B&S Intek
Flywheel And Electrical

Page 16 of 47

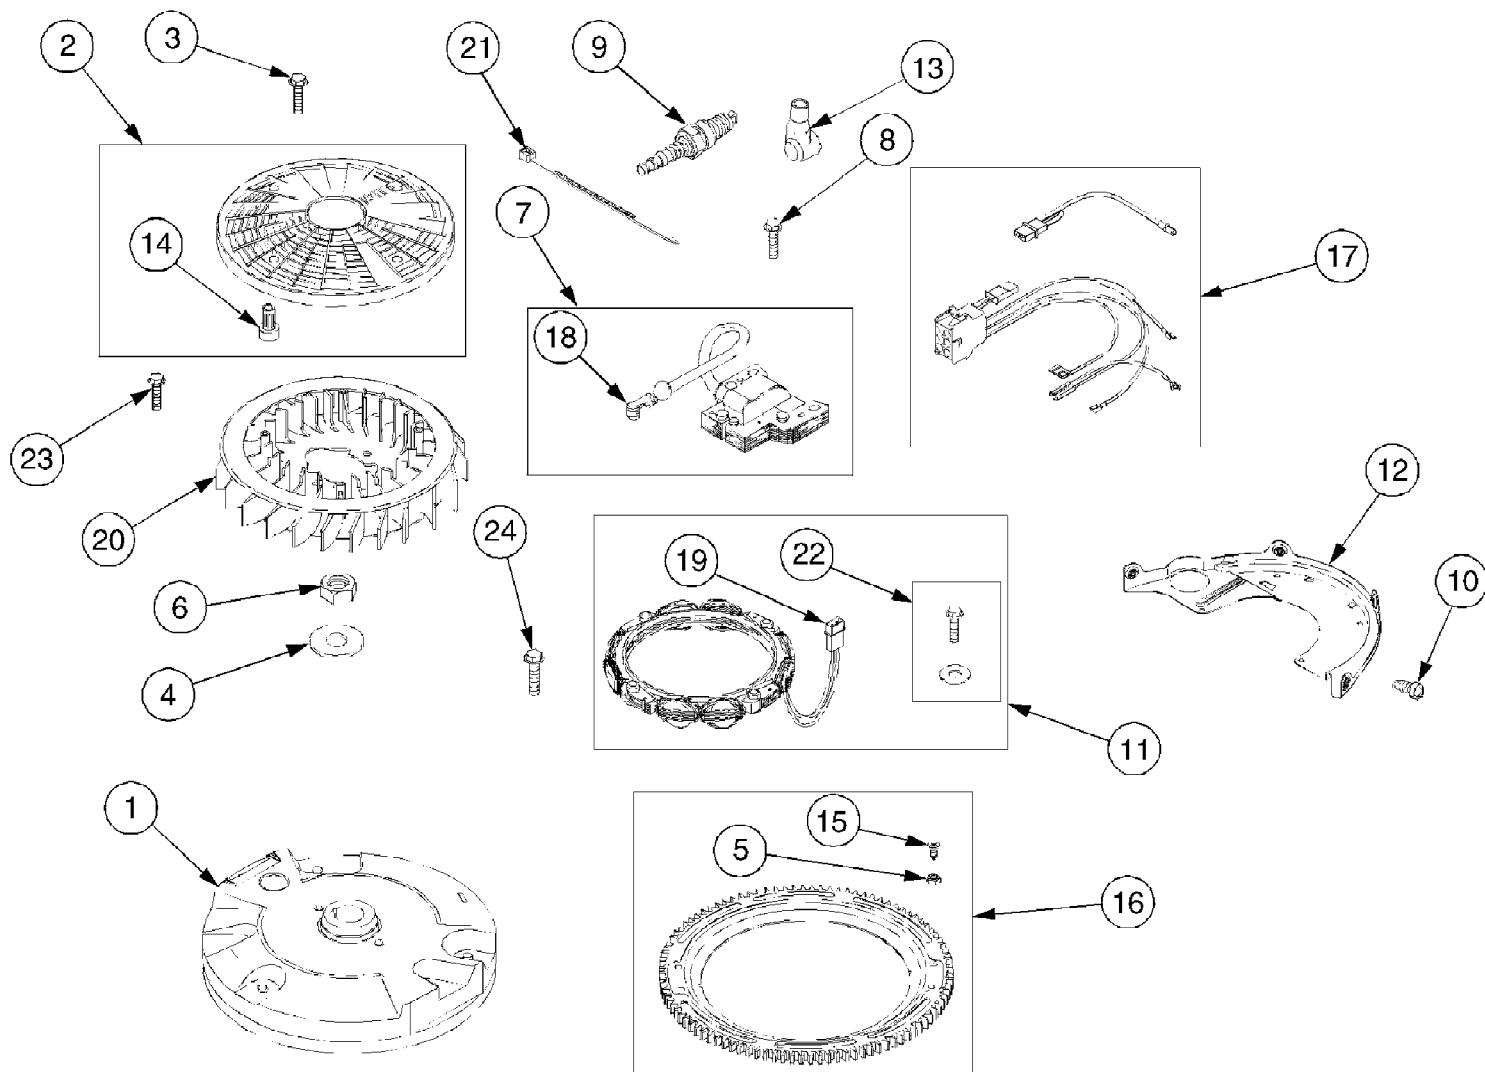


RZT50 B&S Intek
Flywheel And Electrical

Page 17 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	BS-691053	1		Flywheel
2	BS-691055	1	S	Screen, Rotating
3	BS-698425	4		Screw (Rotating Screen)
4	BS-691056	1		Washer
5	BS-693148	4		Nut
6	BS-691059	1		Nut, Flywheel
7	BS-691060	1	/P	Armature, Magneto
8	BS-691061	2		Screw
9	759-3336	2	/P	Spark Plug (RC12YC)
10	BS-697820	4		Screw
11	BS-696457	1	/P	Alternator
12	BS-691009	1		Plate, Back
13	BS-66538	2	S	Boot, Spark Plug
14	BS-691215	4		Spacer
15	BS-693149	4		Screw
16	BS-499612	1		Gear, Ring
17	BS-698330	1		Harness, Wiring
18	BS-493880	2	S	Terminal, Spark Plug
19	BS-399916	1		Wire/Connector, Alternator
20	BS-499603	1		Fan, Flywheel
21	BS-280275	1		Tie, Cable
22	BS-698516	1		Kit, Screw/Washer
23	BS-690372	4	S	Screw
24	BS-691183	2	S	Screw

RZT50 B&S Intek
Frame And Drive Idler Assembly

Page 18 of 47

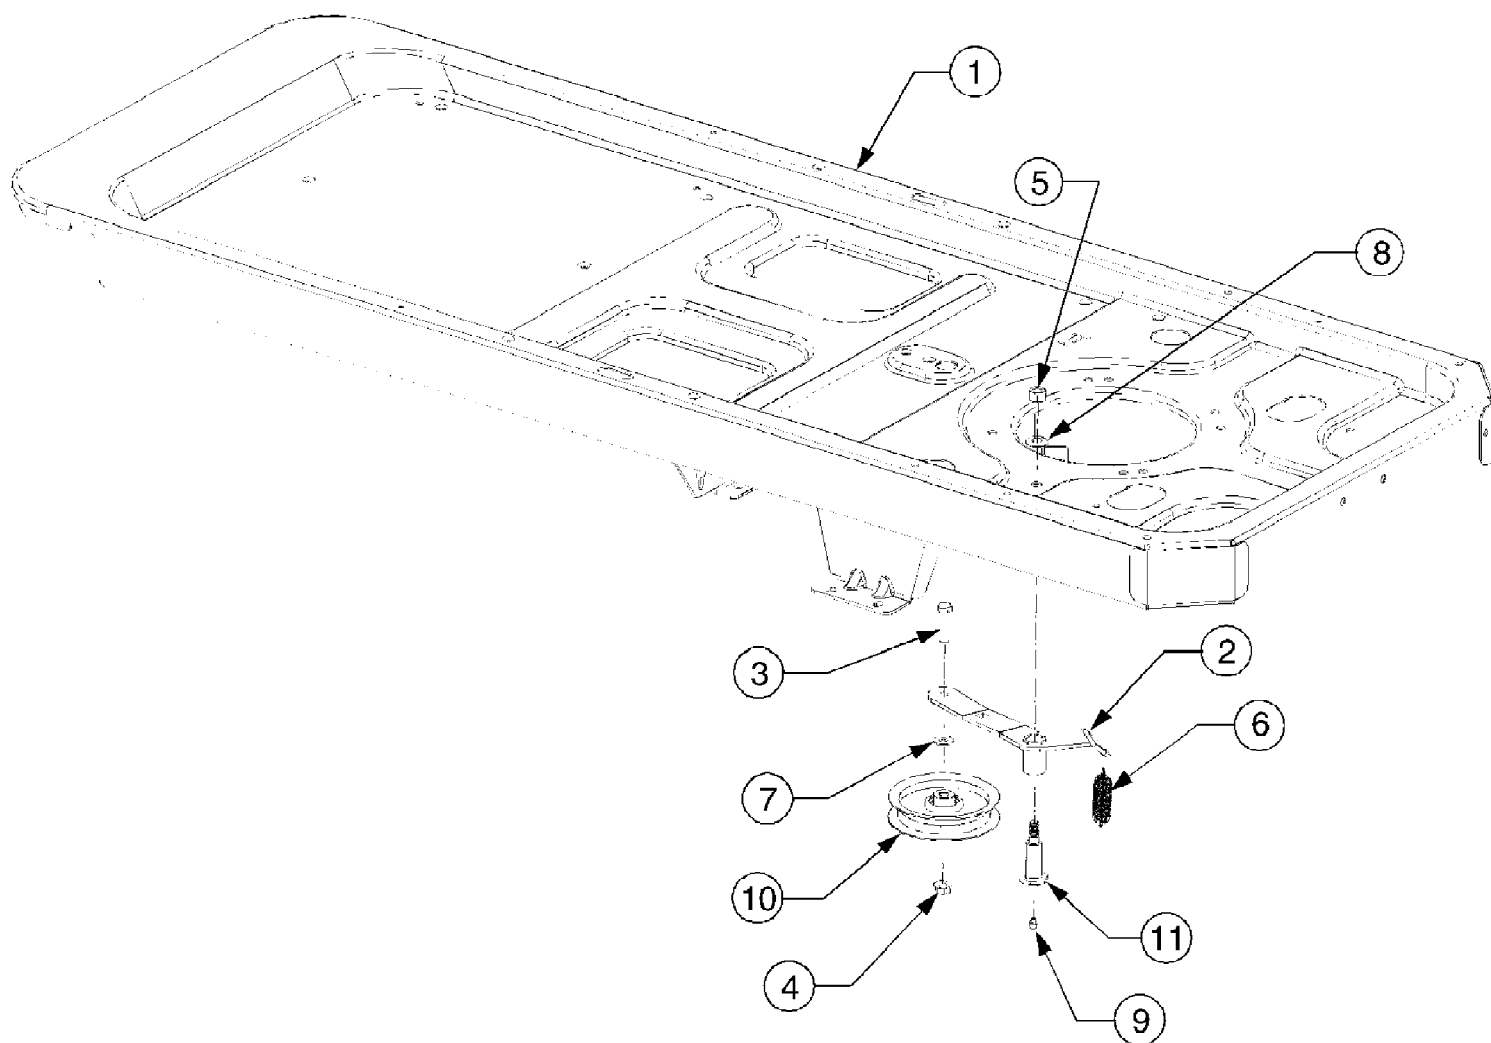


RZT50 B&S Intek
Frame And Drive Idler Assembly

Page 19 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	603-04303	1	S	Frame Assembly
	777D03479	1	/P	Graphic, Cub Cadet
2	603-04147A	1	S	Idler Arm, Drive
3	710-0520	1	/P	Screw, Hex Cap, 3/8-16 x 1.5 GR5
4	712-0431	1	S	Nut, Hex Flange Lock, 3/-16 GRF
5	712-0290	1	/P	Nut, Hex Lock, 7/16-14 GRA
6	732-0626	1		Spring, Extension, .75 x 5.06
7	736-0300	1	S	Washer, Flat, .406 x .875 x .059
8	736-0322	1	/P	Washer, Flat, .45 x 1.25 x .164 HT
9	737-3000	1	S	Fitting, Lube, 3/16 Drive
10	756-1229	1		Pulley, Idler, 4.08 Dia.
11	738-3005A	1	S	Screw, Shoulder, .68 x 1.59

RZT50 B&S Intek
Front Axle

Page 20 of 47

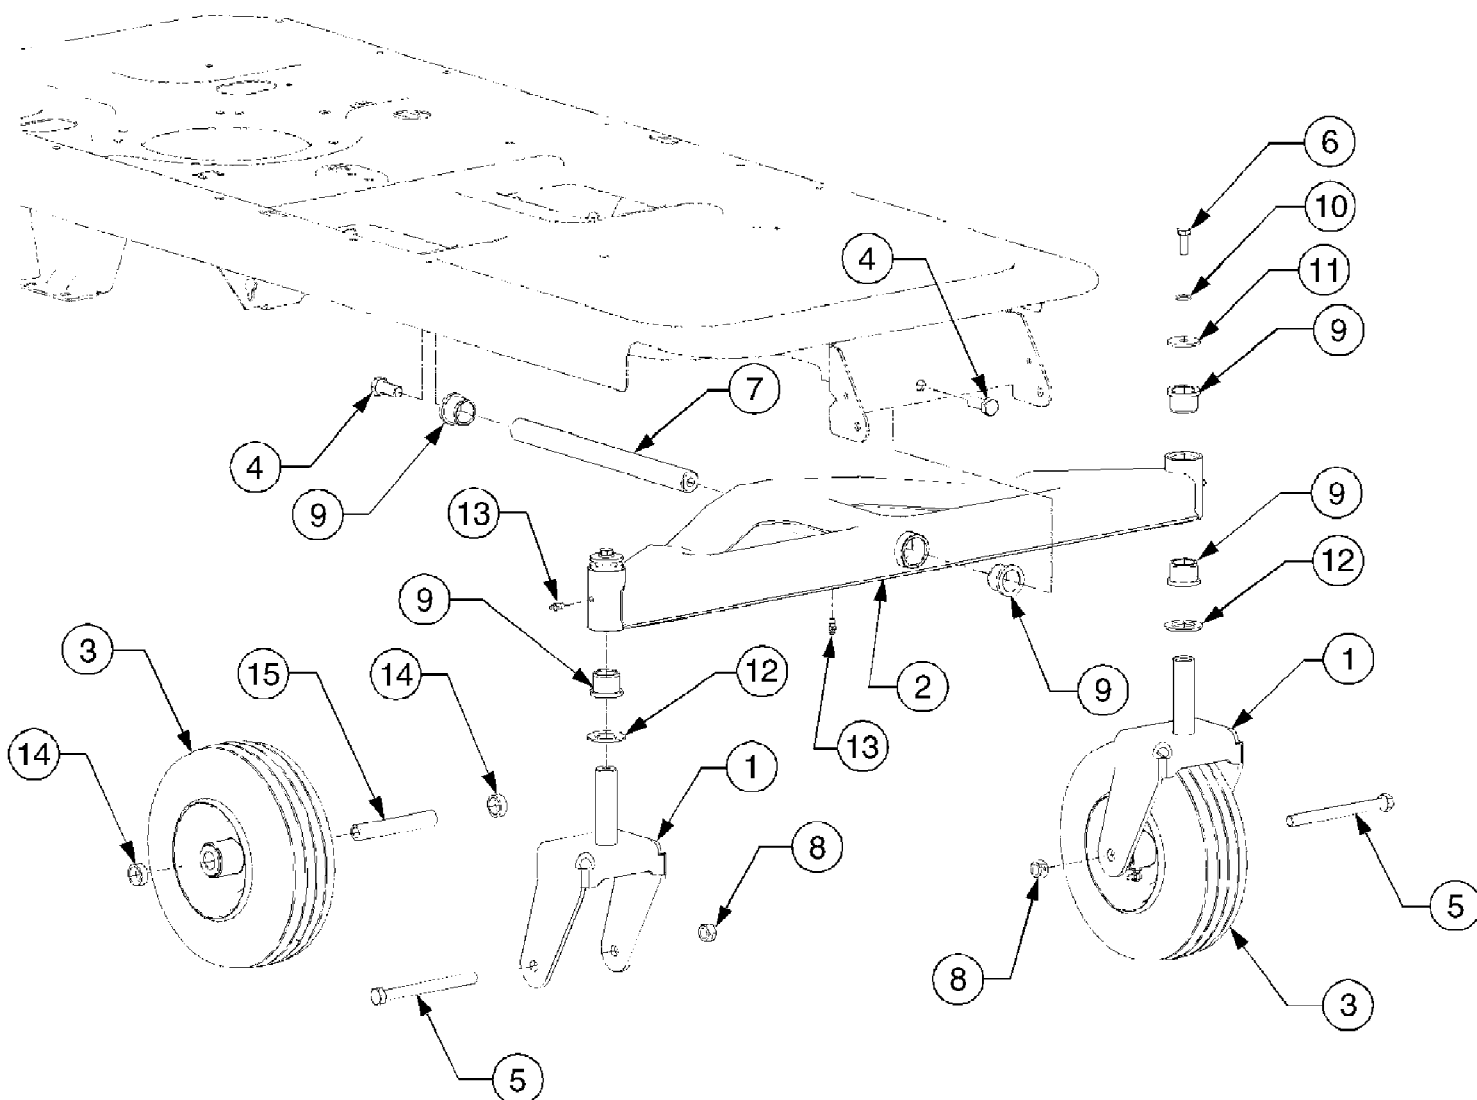


RZT50 B&S Intek
Front Axle

Page 21 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	603-0363A	2		Bracket, Castor Wheel
2	603-04148	1		Axle, Front Pivot
3	634-3163	2	/P	Wheel Assembly, 11.0 x 4.0 x 5.0
3	741-3069	1		Bearing, Flange Not Shown
3	741-3070	1	S	Bearing, Roller Not Shown
4	710-04186	2	/P	Screw, Hex Lock, 1/2-13 x 1.25 GR5
5	710-0506	2	/P	Screw, Hex Cap, 1/2-20 x 5.5 GR5
6	710-0514	2	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
7	711-04228	1	S	Shaft, Axle
8	712-0239	2	S	Nut, Hex Lock, 1/2-20 GRA
9	731-0374	6	S	Bearing, Flange, 1.0 x 1.254
10	736-0169	2	S	Washer, Lock, 3/8
11	736-0227	2	S	Washer, Flat, .39 x 1.5 x .134
12	736-0250	2	/P	Washer, Flat, 1.0 x 1.75 x .107
13	737-3000	3	S	Fitting, Lube, 3/16 Drive
14	750-0456	4	S	Spacer, .79 x .347
15	750-3197A	2	/P	Spacer, Wheel

RZT50 B&S Intek
Fuel System And Carburetor Linkage

Page 22 of 47

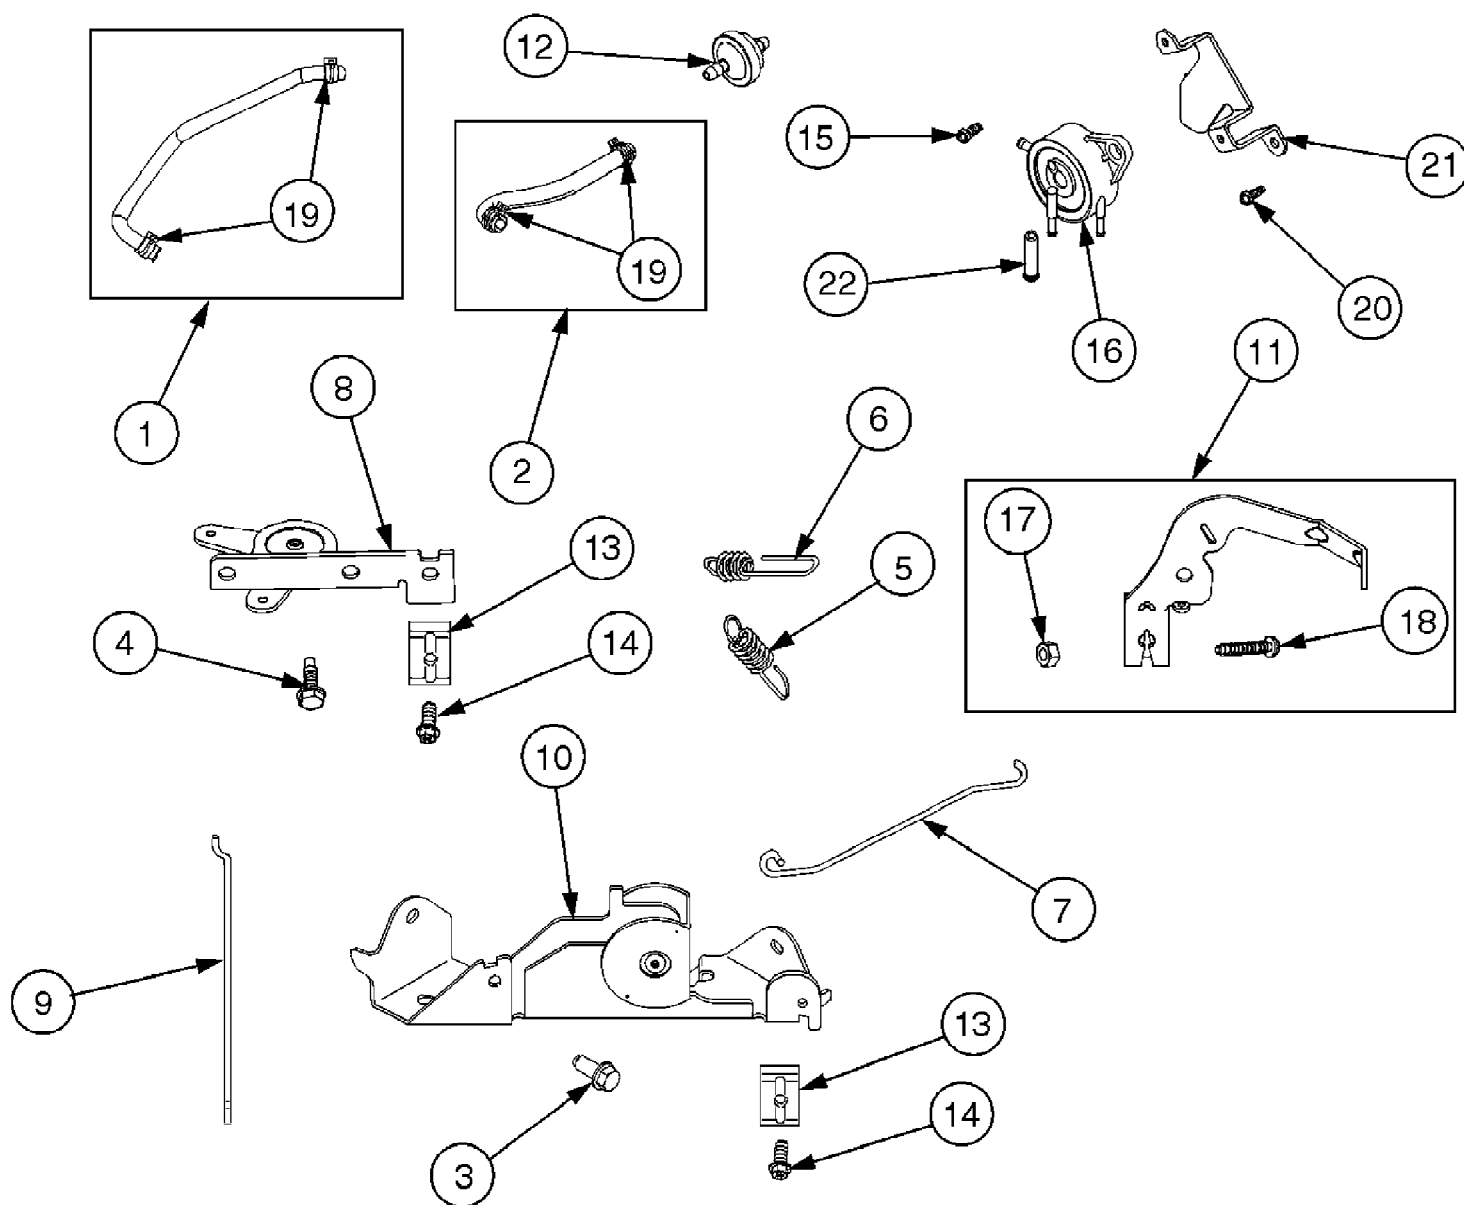


RZT50 B&S Intek
Fuel System And Carburetor Linkage

Page 23 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	BS-699799	1	S	Line, Fuel
2	BS-691049	1		Line, Fuel (Molded)
3	BS-691108	2	/P	Screw (Control Bracket)
4	BS-691003	2	/P	Screw (Control Bracket)
5	BS-698071	1		Spring, Governor
6	BS-691019	1		Spring, Governed Idle
7	BS-699805	1		Link, Throttle
8	BS-691021	1		Bracket, Choke Control
9	BS-691022	1		Link, Choke
10	BS-698761	1		Bracket, Control
11	BS-691048	1	S	Lever, Governor Control
12	BS-691035	1	/P	Filter, Fuel
13	BS-691024	2	/P	Clamp, Casing
14	BS-695134	1		Screw, Casing
15	BS-691108	2	/P	Screw, Fuel Pump
16	BS-808656	1	/P	Pump, Fuel
17	BS-691029	1		Nut (Governor Control Lever)
18	BS-690311	1		Bolt (Governor Control Lever)
19	BS-95162	4	S	Clamp, Hose
20	BS-691108	2	/P	Screw, Fuel Pump Bracket
21	BS-691039	1		Bracket, Fuel Pump
22	BS-694000	1	/P	Hose, Vacuum

RZT50 B&S Intek
Mower Deck 50 inch

Page 24 of 47

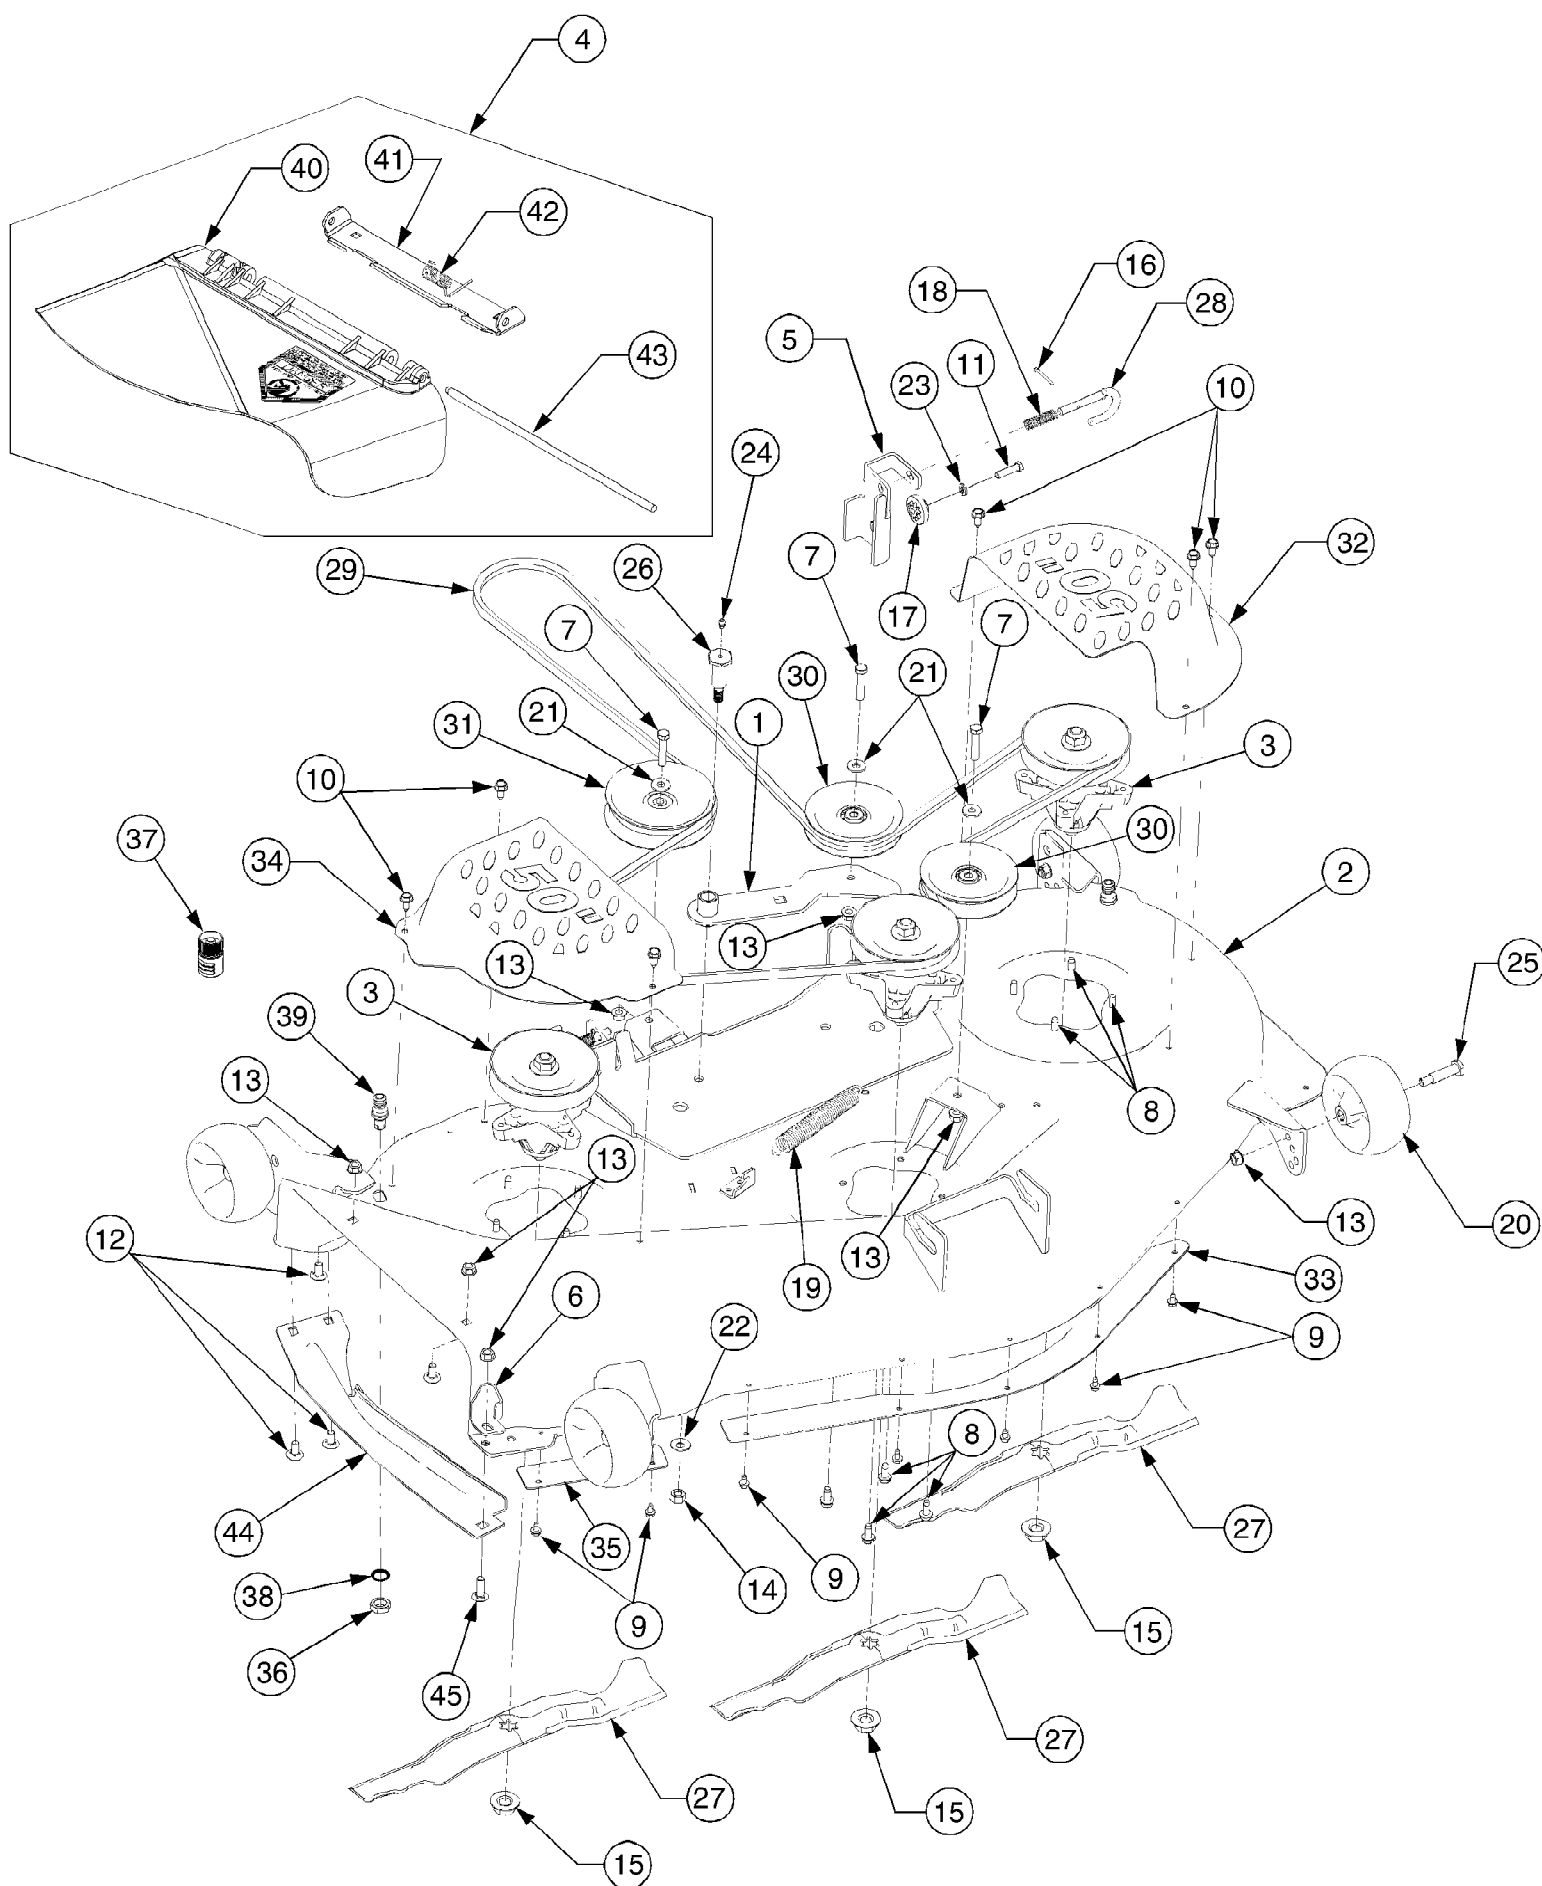

RZT50 B&S Intek
Mower Deck 50 inch


Page 25 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	603-04154-0716	1		Arm, Idler
2	903-04328A-0716	1	/P	Housing, Deck
2	777S30015	1		Graphic, Danger
2	777S30503	1	/P	Graphic, Danger
2	977I22282	1	/P	Graphic, Instruction
3	918-04126A	1	S	Spindle Assembly
3	712-0417A	1	/P	Hex Flange Nut 5/8-18 Not Shown
3	736-0315	1	/P	Washer, Flat .760 X 1.5 Not Shown
3	937-3000	1	/P	Grease Fitting Not Shown
3	738-1010A	1	/P	Spindle Shaft 5.75" Not Shown
3	941-0919	1	/P	Ball Bearing 20 x 47 x 14:62 Not Shown
3	748-0160A	1		Spacer .790 ID x 1.25 OD x .175 Not Shown
3	750-1000	1		Spacer .80 x 1.10 x 1.322 Not Shown
3	750-1349A	1	/P	Spacer .79 X 1.82 X .55 Not Shown
3	756-04216	1		Deck V Type Pulley 5.39" Not Shown
4	631-04070A	1	/P	Chute Assembly, Discharge
4	977S30145	1	/P	Graphic, Danger
5	683-0254B	1	/P	Bracket, Deck Hanger
6	703-3279	1		Bracket, Stop
7	710-0347	3	/P	Screw, Hex Cap, 3/8-16 x 1.75 GR5
8	710-1260A	12	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75
9	710-0599	7	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
10	710-0726	6	/P	Screw, Hex Wash. Hd. Tapp 5/16-12 x .75
11	710-0528	1	/P	Screw, Hex Cap, 5/16-18 x 1.25 GR5
12	710-3178	4	/P	Screw, Carriage, 3/8-16 x .75
13	912-0431	12	/P	Nut, Hex Flange Lock, 3/8-16 GRF ..
14	912-3019	1	/P	Nut, Hex, 7/16-14
15	712-0417A	3	/P	Nut, Hex Flange, 5/8-18
16	914-0470	2	/P	Pin, Cotter, 1/8 x 1.25
17	917-04074	1	/P	Gear, Deck Adjustment
18	932-0306A	2	/P	Spring, Compression
19	732-0459C	1	/P	Spring, Extension, .94 Dia. x 6.74
20	753-04856A	4	/P	Wheel, Deck Ball, 5.0
21	736-3072	3	/P	Washer, Flat, .38 x .93 x .110 HT
22	736-0407	1		Washer, Bell, .45 x 1.0 x .062
23	936-0119	1	/P	Washer, Lock, 5/16
24	937-3000	1	/P	Fitting, Lube, 3/16 Drive
25	938-0373	4	/P	Screw, Shoulder, .498 x 1.53:3/8-16
26	638-04012A	1	/P	Screw, Shoulder, .68 x 1.59
27	942-04053C	3	/P	Blade, 2 in 1, 17.9 Lg
27	742-04056C-0637	3	/P	Blade, Hi-Lift, 17.9 Lg
28	747-1116	2	/P	Rod, Deck Hanger
29	954-04044A	1	/P	Belt V, Type A Sec x 134
30	756-1229	2		Pulley, Idler, 4.06 Dia
31	756-04141	1		Pulley, Idler,
32	783-04399	1		Cover, Belt LH
33	783-04414A-0637	1	/P	Skirt, Center
34	783-04400	1		Cover, Belt RH
35	783-04415	1		Skirt, RH
36	912-0641	2	/P	Nut, Hex, M16-1.5
37	921-04041	1	/P	Adapter, Water Nozzle
38	936-0760	2	/P	Washer, Lock
39	737-04003D	2	/P	Nozzle, Deck Water

RZT50 B&S Intek
Mower Deck 50 inch

Page 26 of 47

Ref #	Part Number	Qty	S/P/F	Description
40	931-3131A	1	/P	Chute, Deflector
41	783-04470	1	/P	Bracket, Chute Mounting
42	732-3070A	1	/P	Spring, Torsion
43	711-1762	1		Pin, Hinge
44	703-3511A-0637	1	/P	Guard, Finger
45	710-3168	1	/P	Screw, Carriage, 3/8-16 x 1.0

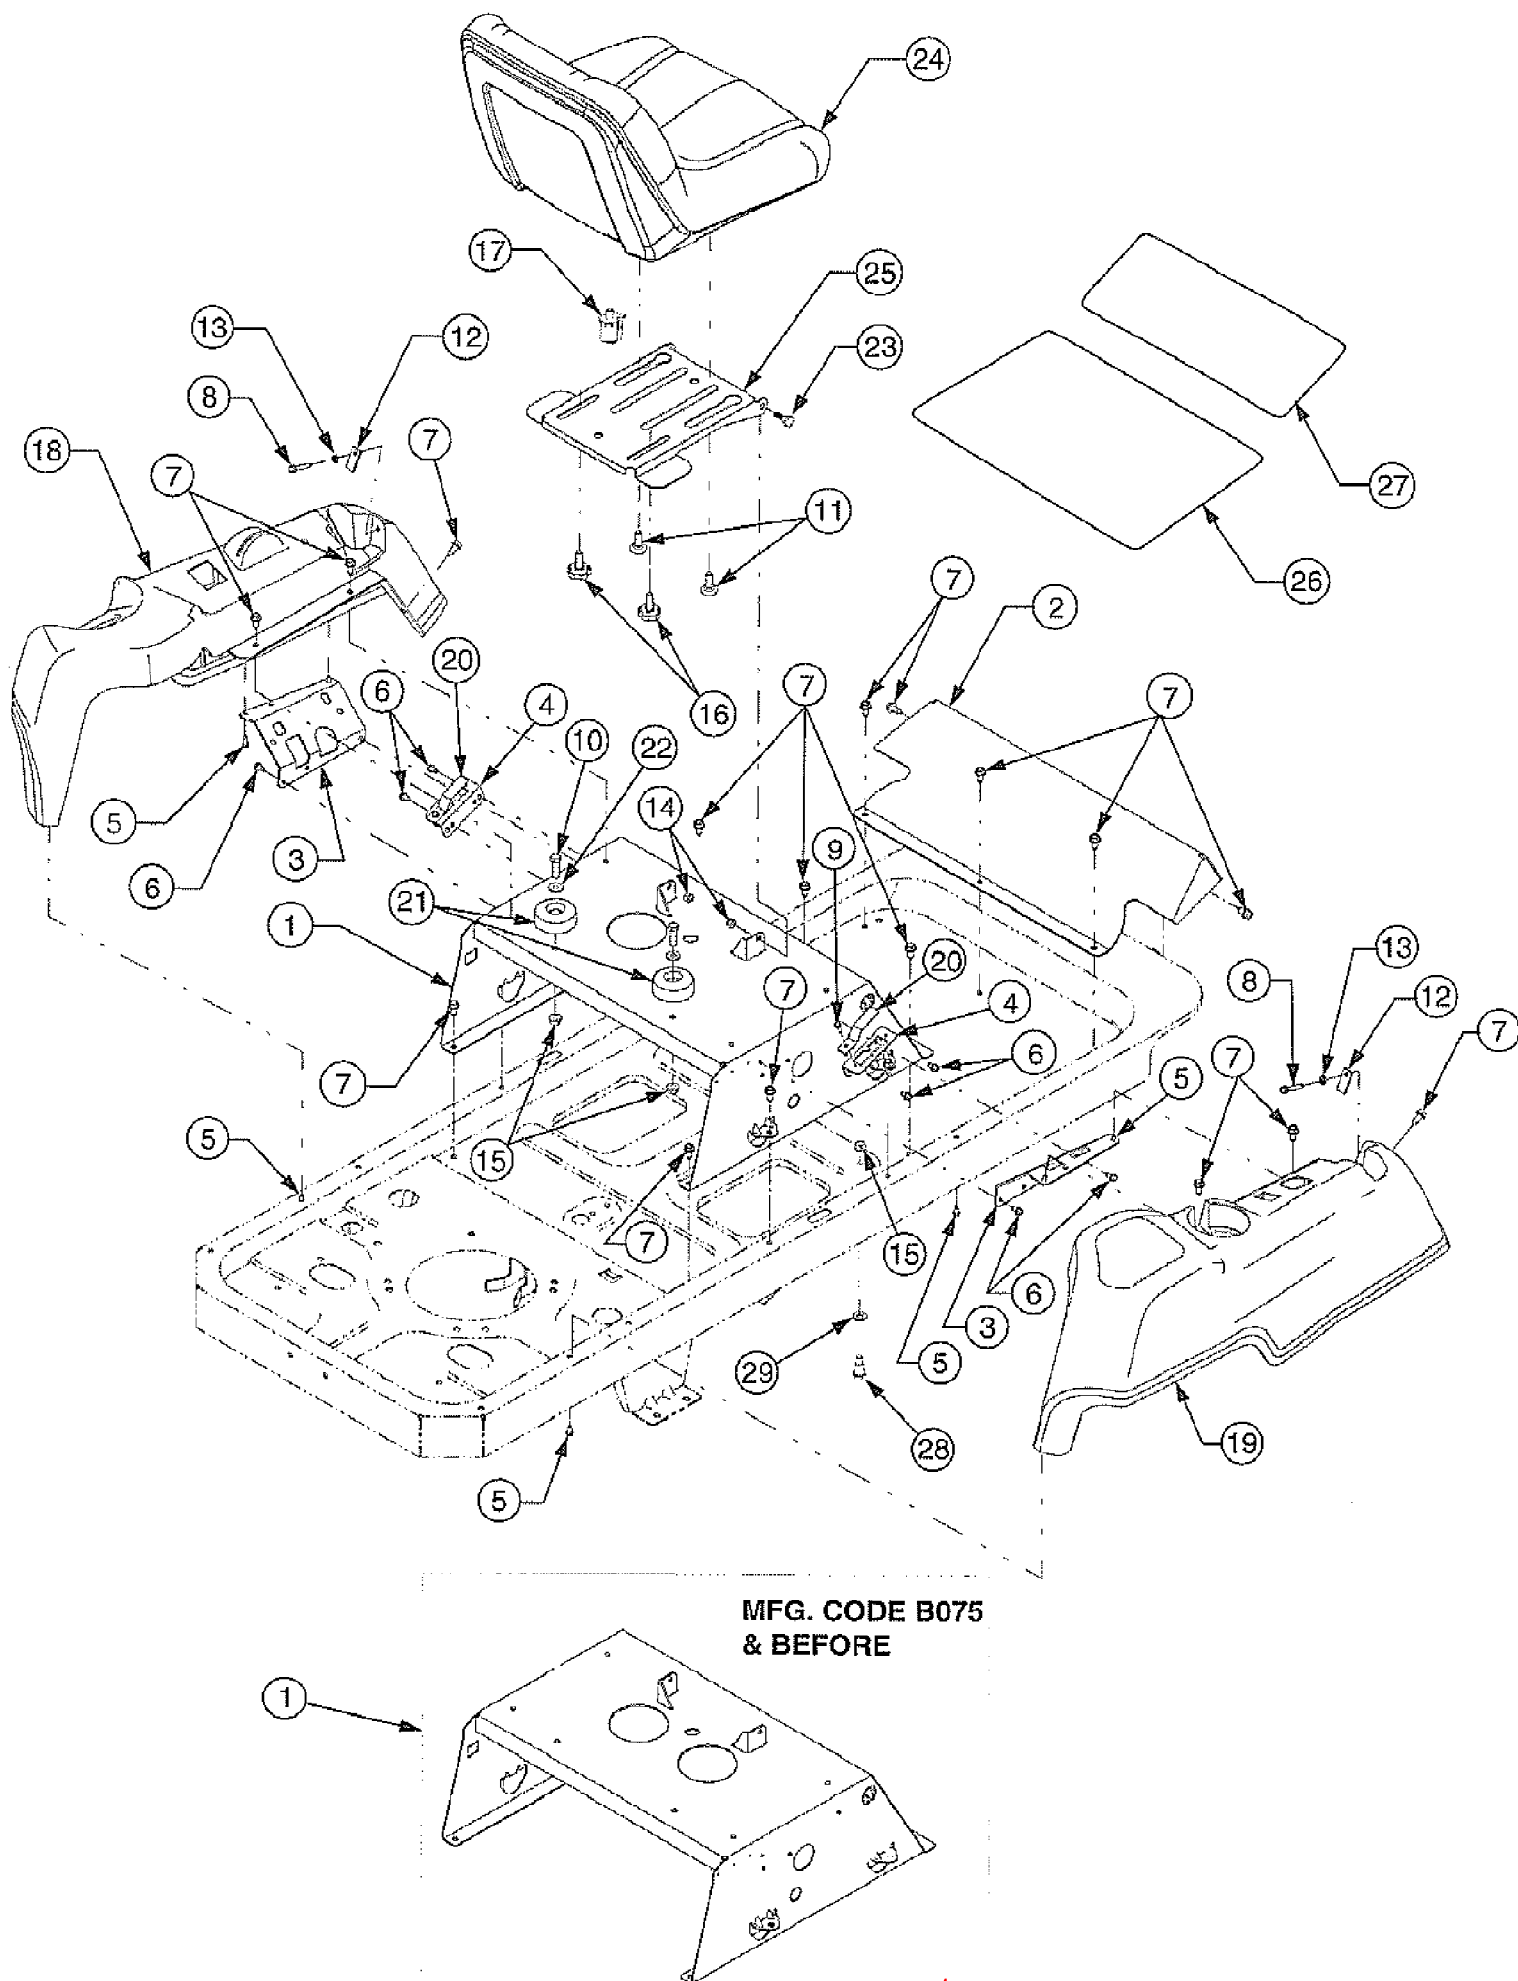


RZT50 B&S Intek
Operator's Platform

Page 28 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	603-04286B	1		Frame, Seat Box (Two expansion cup holes) Mfg.code B075 & before
1	603-04304	1		Frame, Seat Box (One expansion cup holes) Mfg.code B075 & before
	777I22278	1	S	Graphic, Park Brake
	777S32354	1	S	Graphic, Warning
	777I22275	1	S	Graphic, Deck Height
2	703-05373	1		Bracket, Foot Rest
	777D03479	1	/P	Graphic, Cub Cadet
3	703-05460A	2	/P	Bracket, Console Mounting
4	703-05467	2		Bracket, Switch Mounting
5	710-04261	8		Screw, Hex Wash. Hd Tapp #12-16 x .50
6	710-0599	8	/P	Screw, Hex Wash. Hd. Tapp. 1/4-20 x .5
7	710-0604A	20	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .625
8	710-0778	2	/P	Screw, Hex Wash. Hd. Tapp. 1/4-20 x 1.5
9	710-1268	2	/P	Screw, Hex Wash. Hd Tapp #10-16 x .375
10	710-3005	2	/P	Screw, Hex Cap, 3/8-16 x 1.25 GR5
11	738-04012A	2	/P	Screw, Shoulder, .625 x .175:3/8-16
12	712-04092	2		Nut, U Type Speed, 1/4-20
13	712-0298	2	S	Nut, Hex Jam, 1/4-20 GR2
14	712-0429	2	S	Nut, Hex Insert Lock, 5/16-18 GR5 ...
15	712-0431	4	S	Nut, Hex Flange Lock, 3/8-16 GRF
16	720-04009A	2	/P	Knob, 3/8-16:.625
17	725-3166	1	S	Switch, Seat, Snap Mount, N.C.
18	731-04662A	1	S	Console, LH
	777I22277	1	S	Graphic, Instruction
	777D08285	1	S	Graphic, Cub Cadet
	777I22279	1	S	Graphic, Throttle Control
19	731-04663	1		Console, RH
	777I22276	1	S	Graphic, Instruction
	777D08284	1	S	Graphic, Cub Cadet
20	732-04200	2	/P	Spring, Switch Actuator
21	735-04041	2		Pad, Seat
22	736-0267	2	S	Washer, Flat HT, .395 x .87 x .06
23	738-0296	2	S	Screw, Shoulder, .437 x .268: 5/16-18
24	757-04023	1	S	Seat
	777D06883	1	/P	Graphic, Cub Cadet
	777D01782	1	/P	Graphic, USA
25	783-04628	1		Bracket, Seat Pivot
26	723-04020	1		Pad, Abrasive Foot Plate
27	723-04021	1		Pad, Abrasive Toe Plate
28	738-0430	2		Screw, Shoulder, .50 x .685:3/8-16 Mfg code L164 & after
29	736-0300	2	S	Washer, Flat, .406 x .875 x .059

Mfg. Code A195 & Before

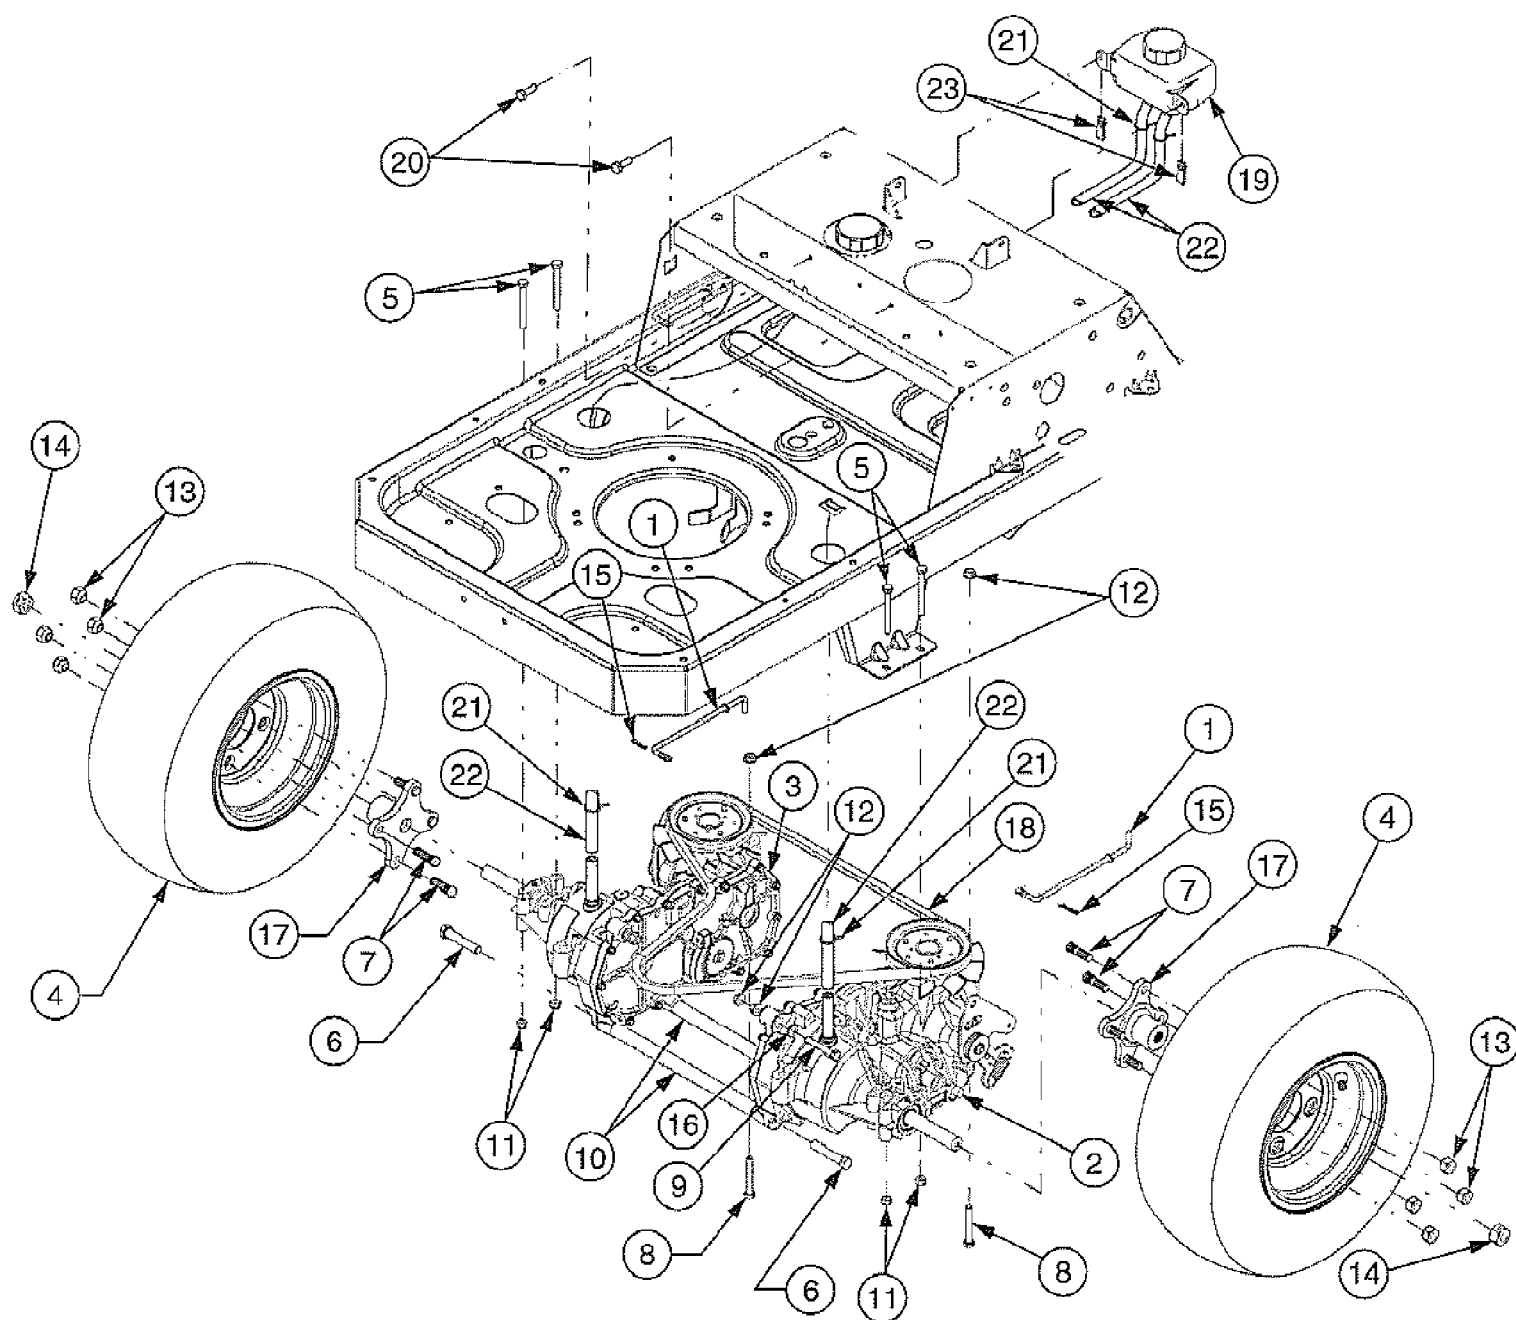

RZT50 B&S Intek
Rear Drive And Wheels





Page 30 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	747-04217A	2	S	Rod, Bypass
2	759-04145	1		Transmission Assembly, RH, Service Kit replaces 618-04163A NLA
	732-04448	1	/P	Neutral Return Spring Included in service kit, not shown, must have the same color neutral return spring on RH & LH transmission
	618-04432A	1	S	Transmission, RH Double D axle
3	759-04144	1		Transmission Assembly, LH, Service Kit replaces 618-04164A NLA
	732-04448	1	/P	Neutral Return Spring Included in service kit, not shown, must have the same color neutral return spring on RH & LH transmission
	618-04431A	1	S	Transmission, LH Double D axle
4	634-04128	2		Wheel Assembly, 18 x 9.5 x 8
4	734-1729	2		Tire, 18 x 9.5 x 8
4	734-0255	2	S	Valve Assembly
5	710-0176	4	/P	Screw, Hex Cap, 5/16-18 x 2.75 GR5
6	710-04308	4		Screw, Hex Lock, 7/16-14 x 2.25 GR5
7	710-0852	8	/P	Stud, Rib Neck, 7/16-14 x 1.6
8	710-0395	2	/P	Screw, Hex Cap, 5/16-18 x 2.25 GR5
9	710-3103	2	/P	Screw, Hex Cap, 5/16-18 x 2.0 GR5
10	711-04232	2		Brace, Transmission
11	712-0429	4	S	Nut, Hex Insert Lock, 5/16-18 GR5 ...
12	712-3004A	6	/P	Nut, Hex Flange Lock, 5/16-18 GR5
13	712-3050	8	/P	Nut, Lug, 7/16-14
14	712-04088	2	/P	Nut, Hex Lock, 9/16-18 GRC
15	714-0104	2	S	Pin, Internal Cotter
16	736-0275	2	S	Washer, Flat, .344 x .688 x .065
17	748-04055	2	S	Hub, Wheel
17	618-04317	1	S	Hub, Wheel Double D Included in service kit, not shown
18	754-04043	1	S	V-Belt, Type A Sec x 57.7
19	931-04170	2	/P	Reservoir, Expansion, Mfg code A195 & Before (2 single tanks) use with 618-04164A & 618-04163A
19	631-04168	1	S	Reservoir, Expansion, Mfg code A205 & After (1 single tank design) use with 618-04164A & 618-04163A
20	710-0599	4	/P	Screw, Hx Wash, Hd. Tapp, 1/4-20 x .5, Mfg code A195 & Before
20	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5, Mfg code A205 & After
21	726-04045	4		Clamp, Hose
22		1		Hose, Hydraulic, 54 inches
23	712-04092	2		Nut, U-Type Speed, 1/4-20, Mfg code A205 & After
	710-3119	1	/P	SCREW:3/8"-16 x .750:GR5:LOCK Included in service kit, not shown


RZT50 B&S Intek
Rear Drive And Wheels

Page 31 of 47

Ref #	Part Number	Qty	S/P/F	Description
	726-04059	1		CLAMP:HOSE: .750 Included in service kit, not shown
	736-0227	1	S	WASHER:FLAT: .390 x 1.50 x .134 Included in service kit, not shown
	751-10474	1		HOSE:BREATHER Included in service kit, not shown
	737-3120	1	/P	Drive System Fluid

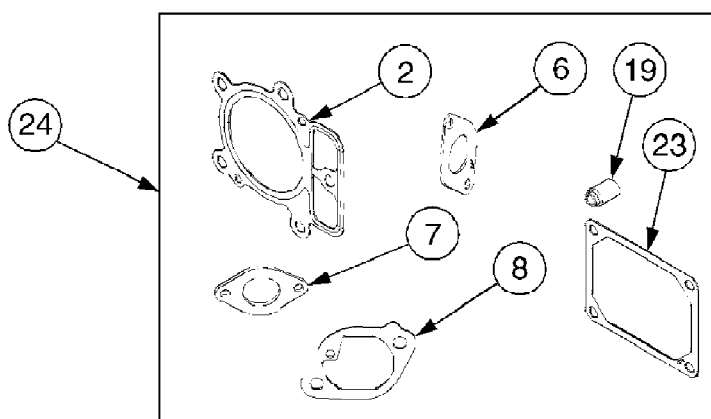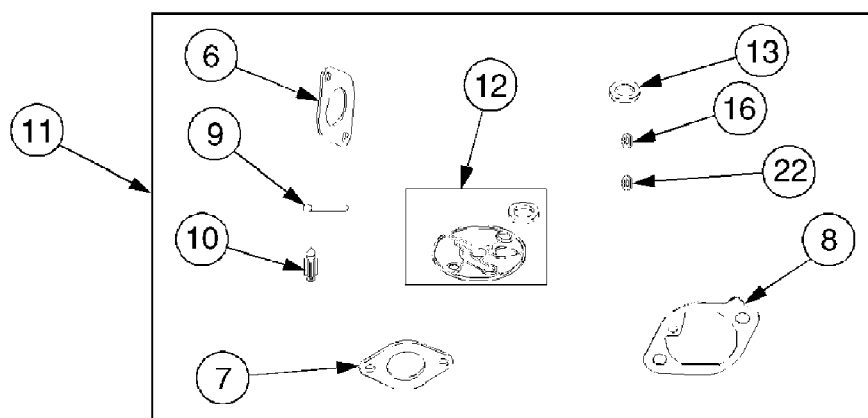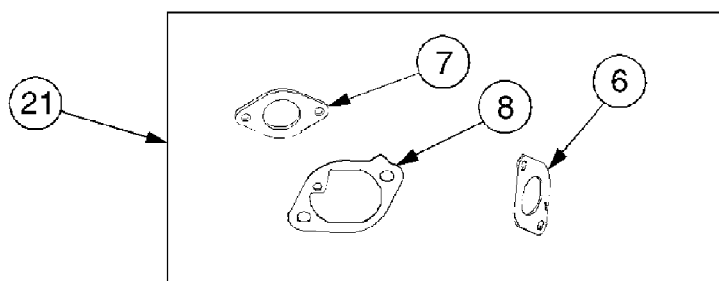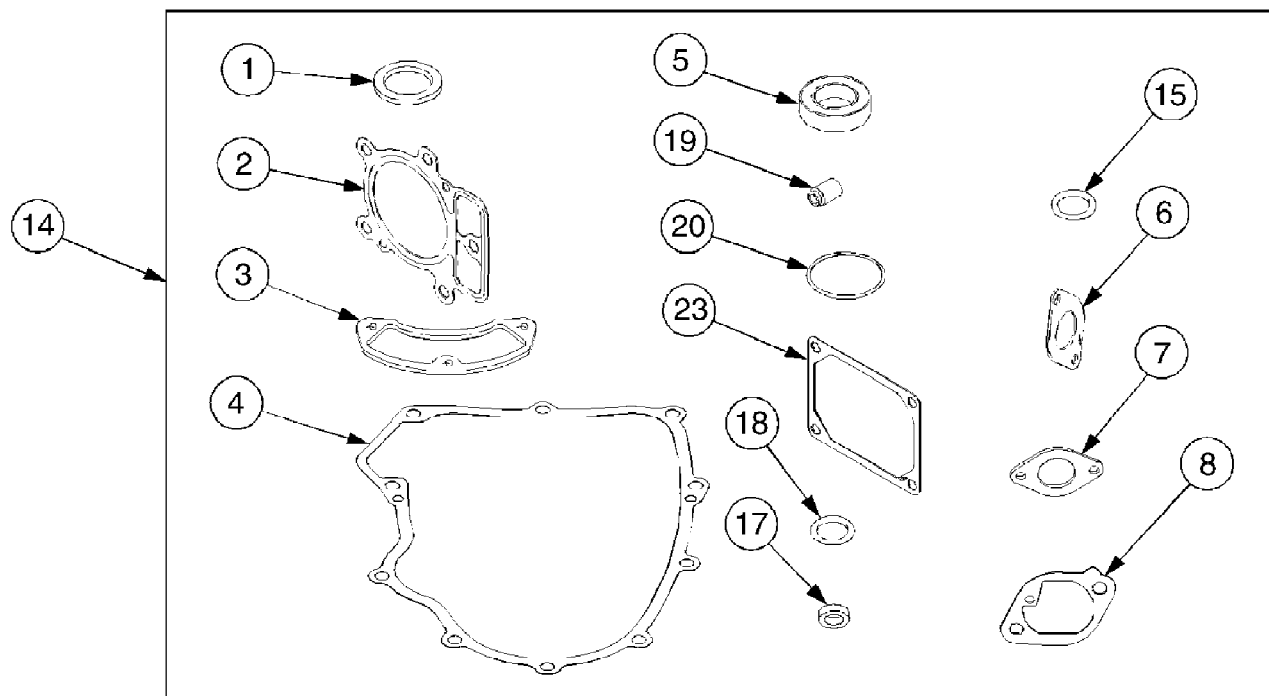


Ref #	Part Number	Qty	S/P/F	Description
1	BS-391086	1	S	Seal, Oil
2	BS-690962	2	S	Gasket, Cylinder Head
3	BS-690937	1		Gasket, Breather
4	BS-697227	1	/P	Gasket, Crankcase
5	BS-690947	1	S	Seal, Oil
6	BS-690949	2		Gasket, Intake
7	BS-699803	1		Gasket, Intake
8	BS-699800	1		Gasket, Intake
9	BS-694918	1		Pin, Float Hinge
10	BS-698537	1		Valve, Float Needle
11	BS-699814	1	/P	Kit, Carburetor Overhaul
12	BS-698781	1	/P	Gasket, Float Bowl
13	BS-695410	1		Washer, Sealing
14	BS-699823	1		Set, Engine Gasket
15	BS-691032	1		Seal, Dipstick Tube
16	BS-695414	1		Seal, Choke/Throttle Shaft
17	BS-690657	1		Seal, Governor Shaft
18	BS-691031	1	/P	Seal, Dipstick/Tube
19	BS-690968	1	/P	Seal, Valve
20	BS-690589	1	/P	Seal, O-Ring
21	BS-699815	1	S	Gasket Set, Carburetor
22	BS-699813	1		Seal, Throttle Shaft
23	BS-690971	1	/P	Gasket, Rocker Cover
24	BS-699822	1	/P	Gasket Set, Valve

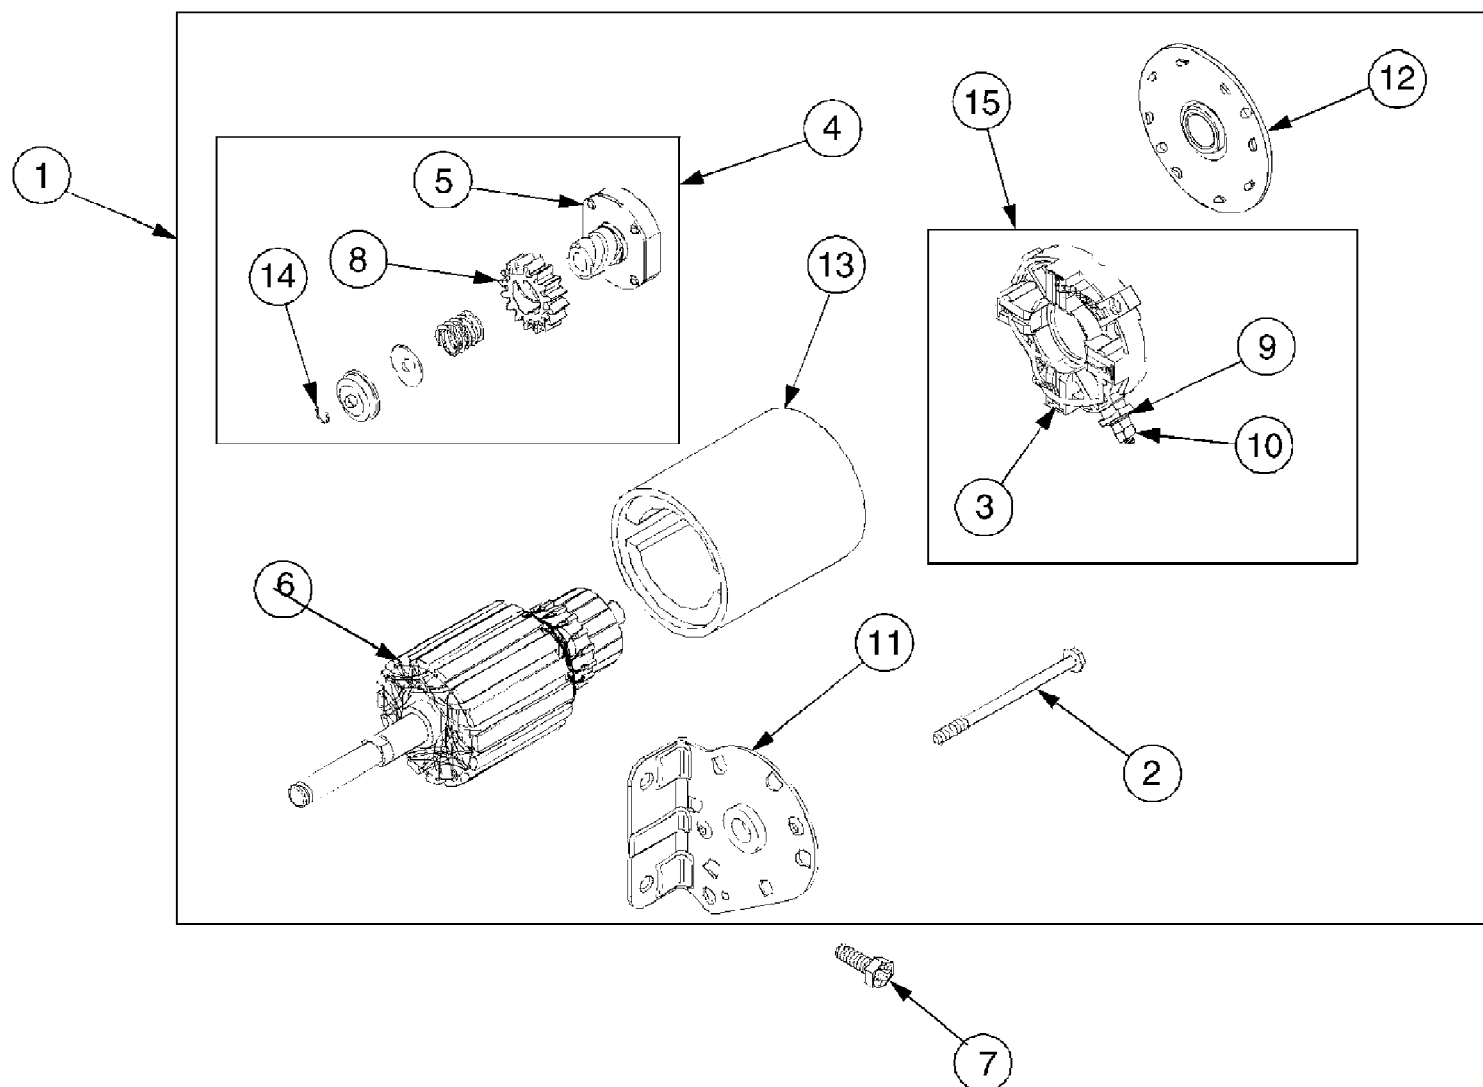

RZT50 B&S Intek
Starter Motor

Page 35 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	BS-497595	1	/P	Motor, Starter
2	BS-690323	2		Bolt
3	BS-497608	1	/P	Brush Set
4	BS-497606	1	S	Drive, Starter
5	BS-692024	1	/P	Clutch, Drive
6	BS-692034	1	/P	Armature, Starter
7	BS-690372	2	S	Screw, Drive Cap
8	BS-693058	1	S	Gear, Pinion
9	BS-691029	1		Nut (Brush Retainer)
10	BS-693167	1		Nut (Brush Retainer)
11	BS-691283	1		Cap, Drive
12	BS-691286	1	/P	Cap, End
13	BS-693757	1		Housing, Starter
14	BS-691265	1	/P	Ring, Retaining
15	BS-691293	1	/P	Retainer, Brush

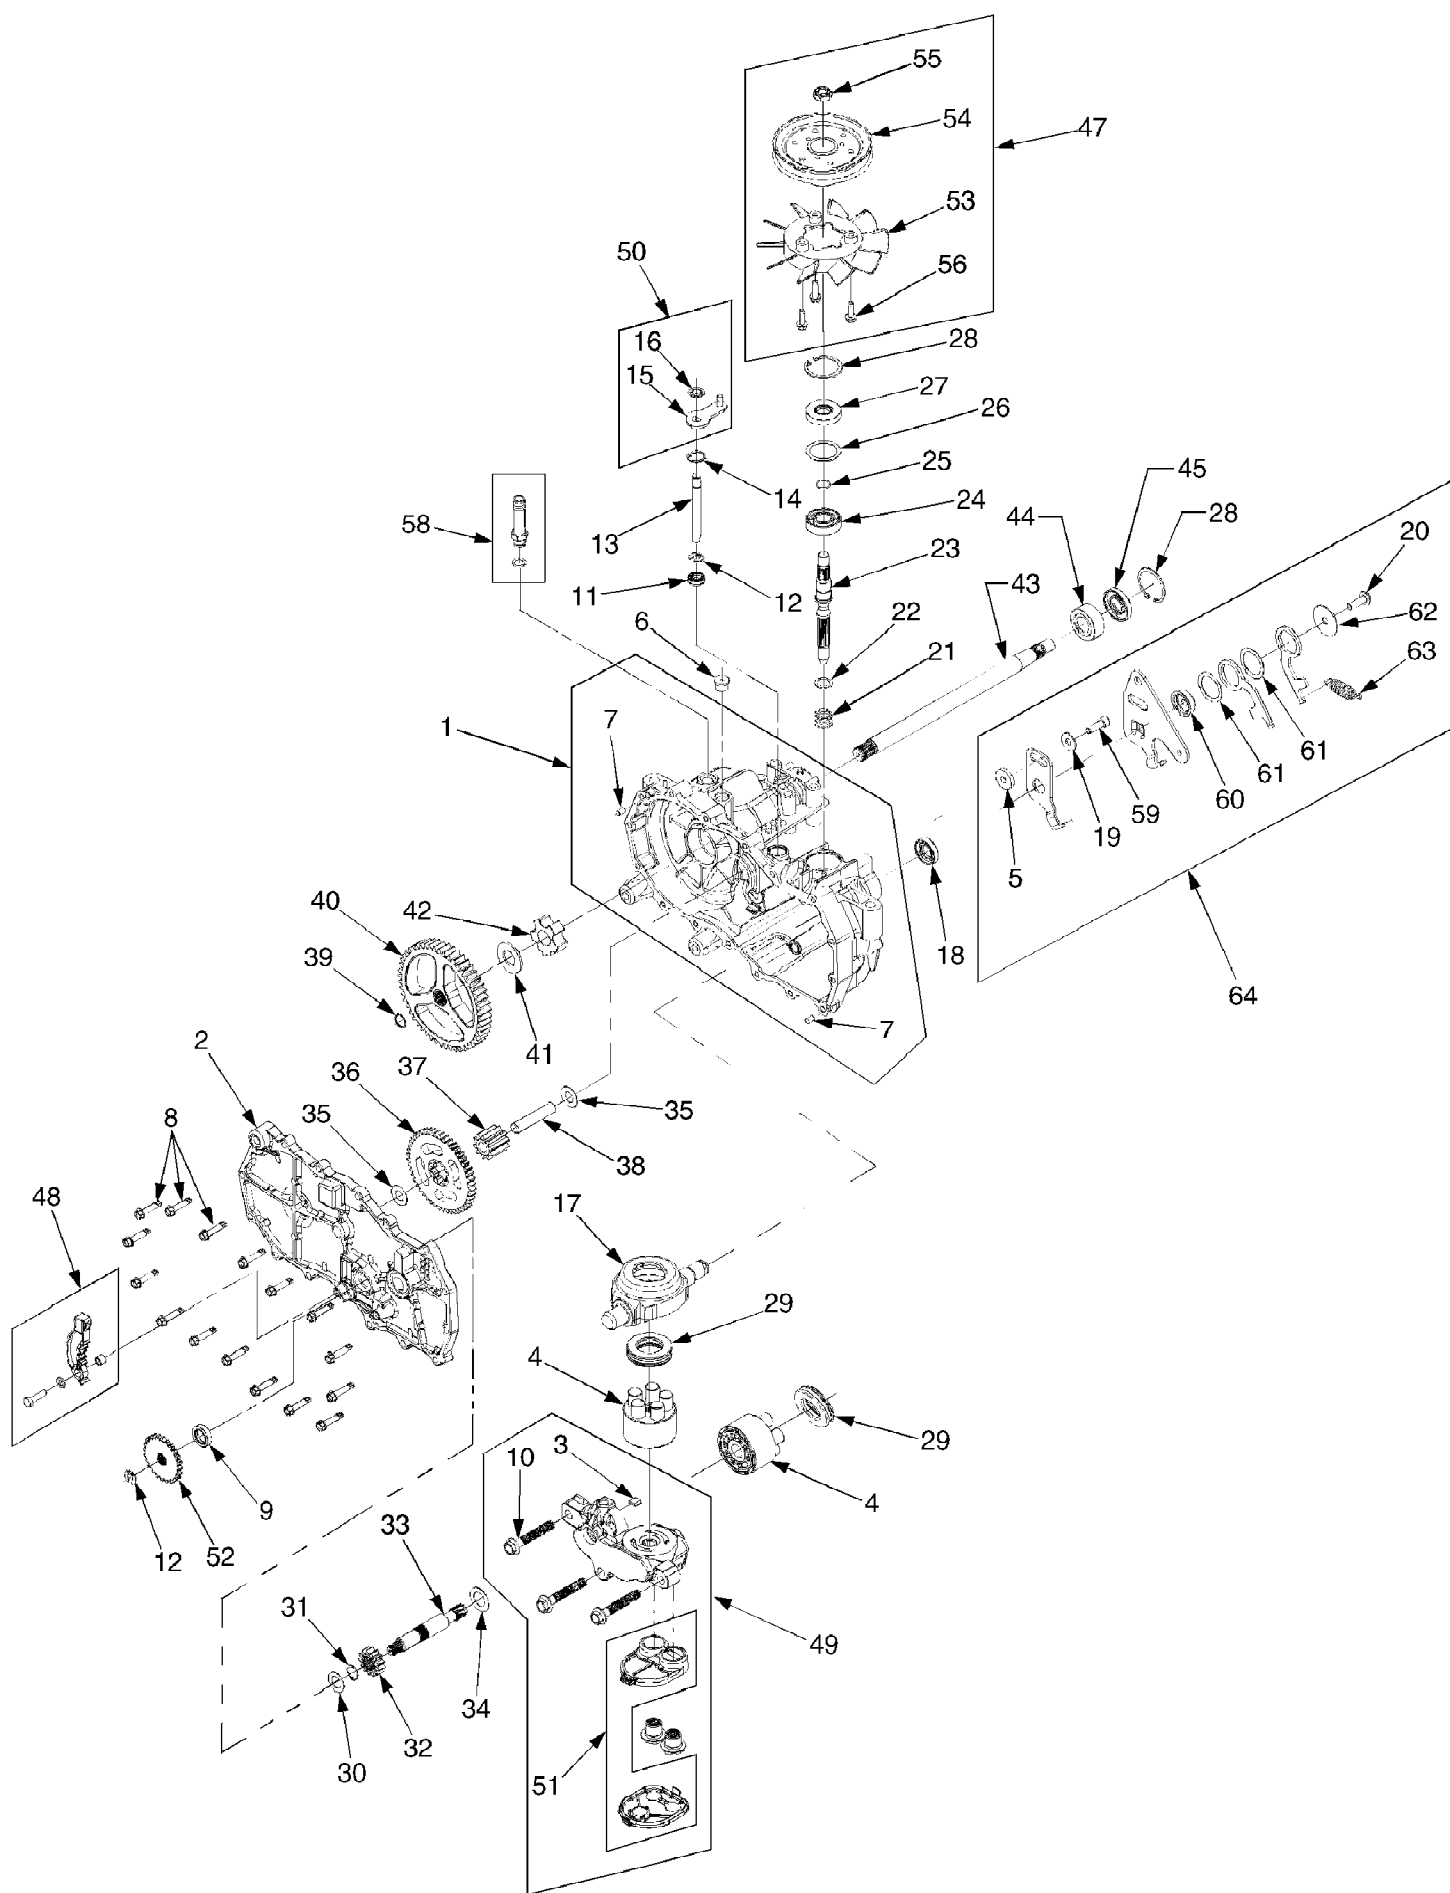

RZT50 B&S Intek
Transmission LH

Page 37 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	HG-70862L	1	/P	Housing Assembly, Main LH
2	HG-70863L	1	/P	Side Assembly
3	HG-51448	1		Plate, Bypass
4	HG-70331	1	/P	Block Assembly 5 piston
4	HG-70723	1	/P	Block Assembly 7 piston
5	HG-51949	1		Spacer, .32 x 1.005
6	HG-9005110-5600	1	/P	Plug, SAE #6
7	HG-9004800-2506	2	/P	Pin, Stainless
8	HG-51190	16	/P	Screw, Hex Self Tapping, 1/4-20 x 1.25
9	HG-44761	1	S	Seal, Lip, .625 x 1.0 x .25
10	HG-50016	3		Bolt, Hex Flange, 3/8-24 x 2.5
11	HG-51626	1		Seal, Lip, .375 x .75 x .25
12	HG-51628	2	/P	Ring, Retaining, .375 Ext.
13	HG-51625	1		Rod, Bypass
14	HG-51627	1		Ring, Retaining, .75 Int.
15	HG-51910	1		Arm, Bypass
16	HG-51630	1	/P	Ring, Retaining, .375 Push
17	HG-51048	1	/P	Swashplate, Trunnion
18	HG-51140	1	/P	Seal, Lip, 18 x 32 x 7
19	HG-44130	1	S	Washer, Flat, 11/32 x 7/8 x 1/16
20	HG-51812	1	/P	Screw, 5/16-24 x 1.0
21	HG-2003014	1	/P	Spring, Compression
22	HG-2003017	1	/P	Washer, .591 x .787 x .04
23	HG-51062	1	/P	Shaft, Input
24	HG-50315	1		Bearing, Ball, 17mm x 40 x 12
25	HG-2000022	1	/P	Ring, Wire Retaining, .561
26	HG-50951	1	/P	Spacer
27	HG-51161	1	/P	Seal, Lip, 17 x 40 x 7
28	HG-50329	2	/P	Ring, Retaining
29	HG-50551	2	S	Bearing, Thrust, 30 x 52 x 13
30	HG-44371	1	/P	Washer, Flat, 5/8 x 1.0 x .05
31	HG-44145	1		Ring, Retaining
32	HG-51130	1		Gear, Pinion, 13T
33	HG-51632	1		Shaft, Motor
34	HG-51069	1		Washer, .71 x 1.16 x .04
35	HG-50132	2	/P	Washer, HT, .5 x 1.0 x .032
36	HG-51129	1		Gear, 10T/48T
37	HG-51043	1	/P	Gear, Jackshaft, 10T
38	HG-51083	1		Pin, Jackshaft
39	HG-44871	1	/P	Ring, Spiral Retaining
40	HG-51633	1	S	Gear, Bull, 52T
41	HG-44875	1	/P	Washer, 3/4 x 1.5 x .13
42	HG-51088	1	/P	Bearing, Sleeve
43	HG-51954	1	S	Axle Taper Spline
44	HG-51089	1	/P	Bushing, .752 x 1.571 x .625
45	HG-51066	1	/P	Seal, Lip, .75 x 1.577 x .25
46	HG-70868L	1		Kit, Expansion Plate
47	N/A	1		Kit, Fan-Pulley (furnish components)
48	HG-70865	1	/P	Kit, Brake Arm
49	HG-70864L	1	/P	Kit, Center Section-Filter
50	HG-71006	1		Kit, Bypass Arm
51	HG-70911	1	S	Kit, Filter
52	HG-51635	1	/P	Disc, Brake Cog


RZT50 B&S Intek
Transmission LH

Page 38 of 47

Ref #	Part Number	Qty	S/P/F	Description
53	HG-51365	1		Fan, 6" 10 Blade
54	HG-50302	1	/P	Pulley Kit, 4.5
55	HG-51244	1	S	Nut, Hex Insert Lock, 1/2-20
56	HG-50752	3	/P	Screw, Hex Wash. Hd. Tapp 1/4-20
58	HG-52200	1	/P	Fitting/O-ring Assembly
59	HG-51616	1	S	Screw, Patch, 5/16-24 x 1.0
60	HG-51947	1		Bushing, Pilot, 1.125
61	HG-51948	2		Washer, Plastic
62	HG-51950	1		Washer, 1.5 x .34 x .062
63	HG-51399	1	S	Spring, Extension
64	N/A	1		Kit, Return Assembly (furnish components)
	HG-70853	1	/P	Kit, Seal
	HG-50928	1	/P	Sealant, Tube Not shown

RZT50 B&S Intek
Transmission LH DD axle

Page 39 of 47

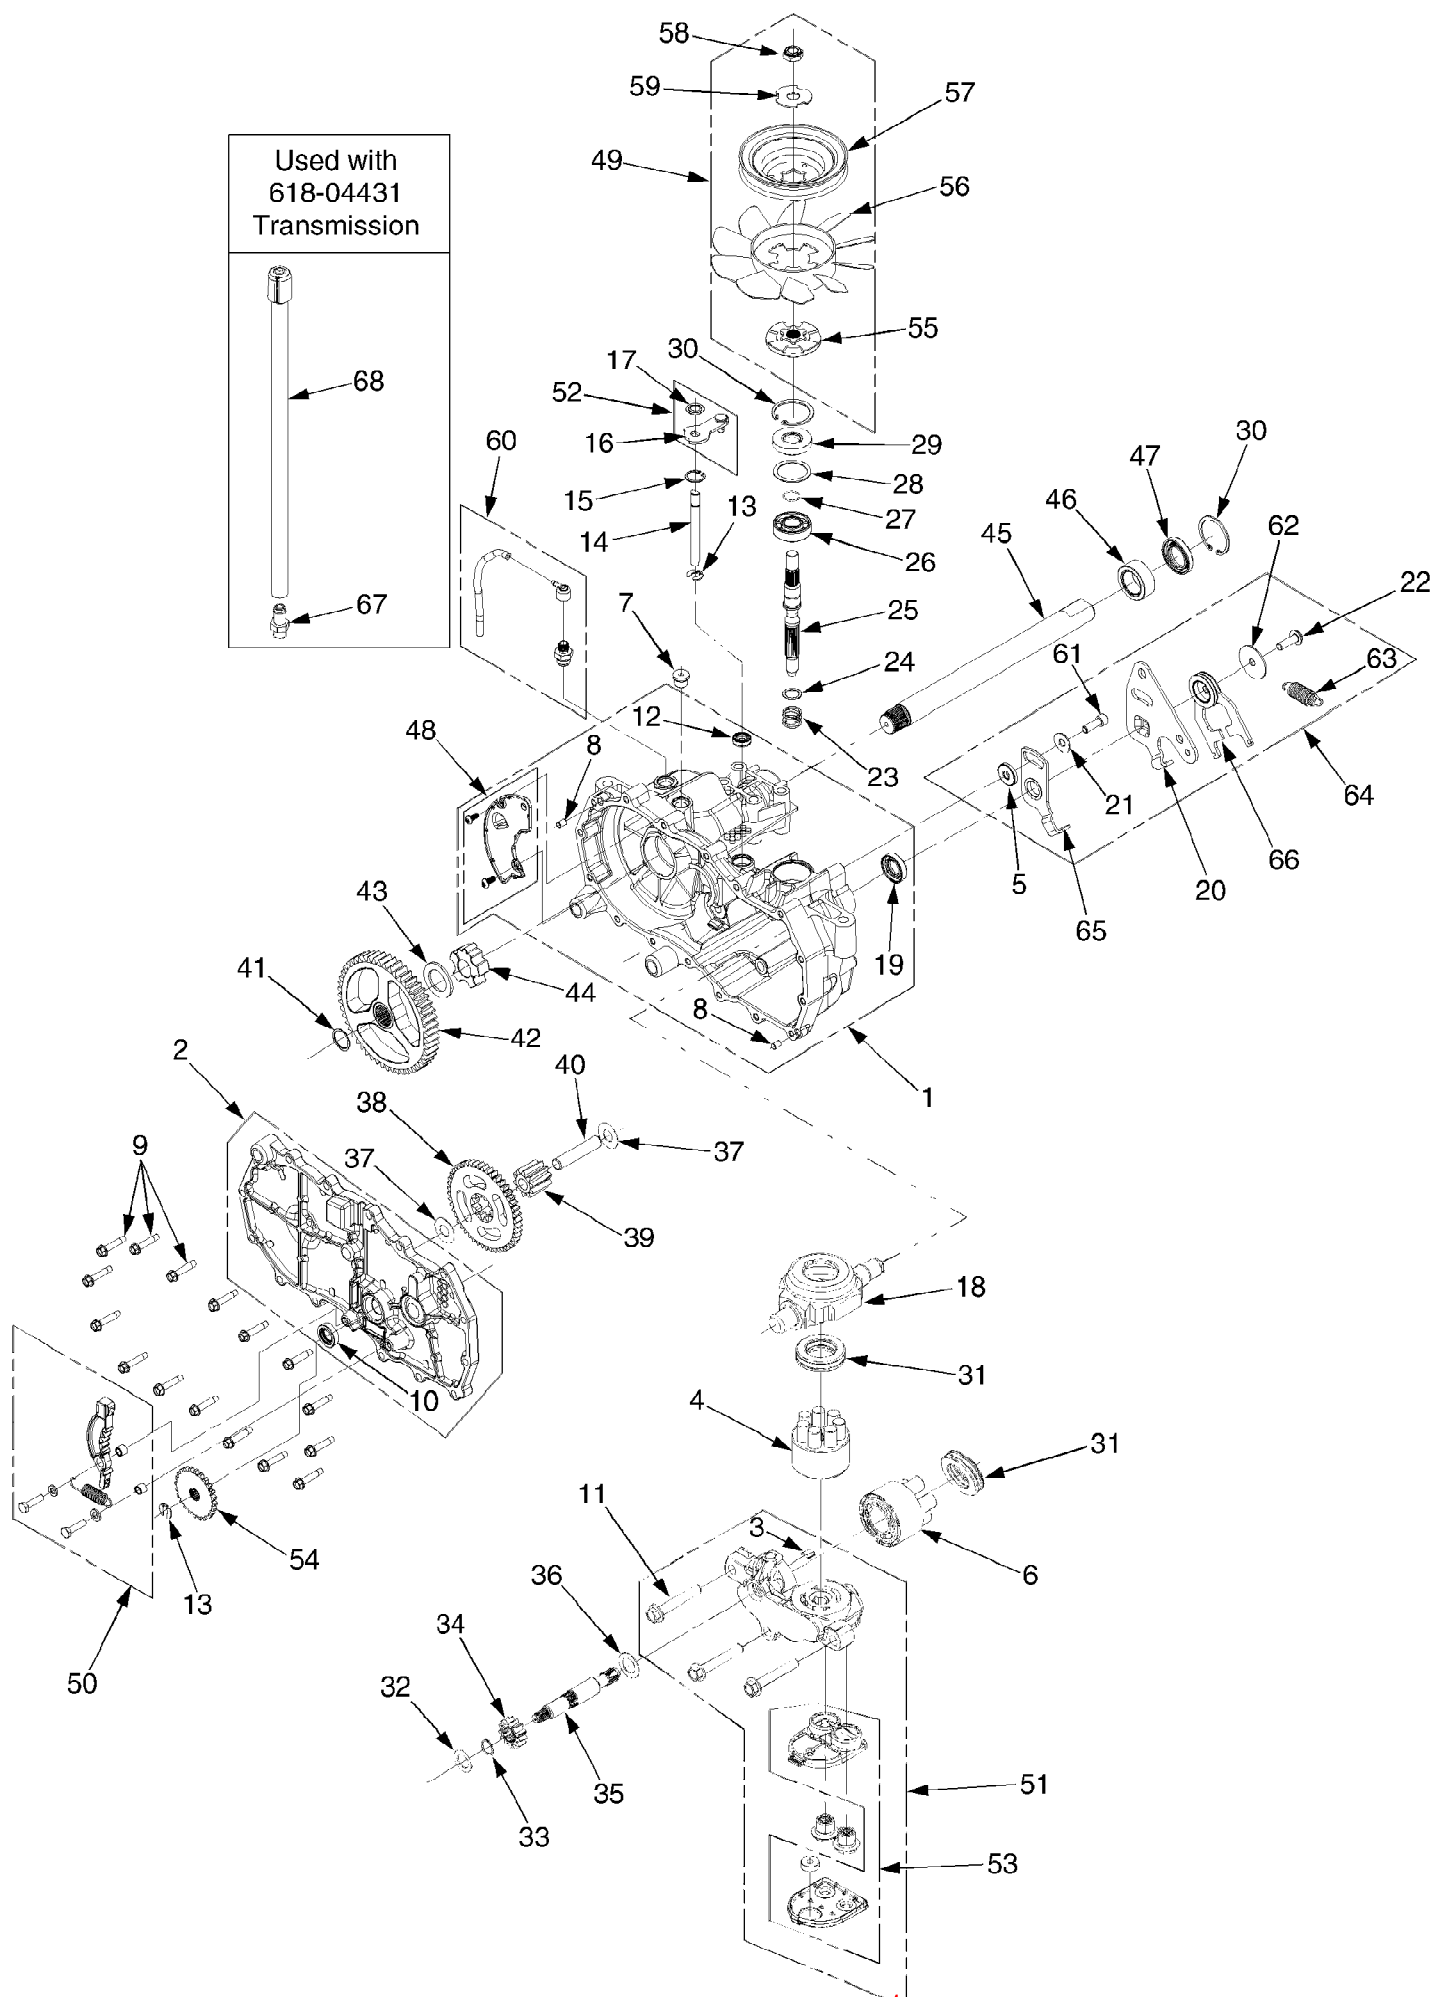

RZT50 B&S Intek
Transmission LH DD axle


Page 40 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	HG-70862L	1	/P	Housing Assembly, Main LH .
2	HG-70863L	1	/P	Side Assembly, LH
3	HG-51448	1		Plate, Bypass
4	HG-70723	1	/P	Pump Block Assembly
5	HG-52527	1		Spacer, .32 x 1.005
6	HG-70331	1	/P	Motor Block Assembly
7	HG-9005110-5600	1	/P	Plug, SAE #6
8	HG-9004800-2506	2	/P	Pin, Stainless
9	HG-51190	16	/P	Screw, Hex Self Tapping, 1/4-20 x 1.25
10	HG-44761	1	S	Seal, Brake
11	HG-50016	3		Bolt, Hex Flange, 3/8-24 x 2.5
12	HG-51626	1		Seal, Lip, .375 x .75 x .25
13	HG-51628	2	/P	Ring, Retaining, .375 Ext.
14	HG-51625	1		Rod, Bypass
15	HG-51627	1		Ring, Retaining, .75 Int.
16	HG-51910	1		Arm, Bypass
17	HG-51630	1	/P	Ring, Retaining, .375 Push
18	HG-51048	1	/P	Swashplate, Trunnion
19	HG-51140	1	/P	Seal, Lip, 18 x 32 x 7
20	HG-51842	1		Arm, Control LH
21	HG-44130	1	S	Washer, Flat, 11/32 x 7/8 x 1/16
22	HG-51812	1	/P	Screw, 5/16-24 x 1.0
23	HG-2003014	1	/P	Spring, Compression
24	HG-2003017	1	/P	Washer, .591 x .787 x .04
25	HG-51062	1	/P	Shaft, Input
26	HG-50315	1		Bearing, Ball, 17mm x 40 x 12
27	HG-2000022	1	/P	Ring, Wire Retaining, .561
28	HG-50951	1	/P	Spacer
29	HG-51161	1	/P	Seal, Lip, 17 x 40 x 7
30	HG-50329	2	/P	Ring, Retaining
31	HG-50551	2	S	Bearing, Thrust, 30 x 52 x 13
32	HG-44371	1	/P	Washer, Flat, 5/8 x 1.0 x .05
33	HG-44145	1		Ring, Retaining
34	HG-51130	1		Gear, Pinion, 13T
35	HG-51632	1		Shaft, Motor
36	HG-51069	1		Washer, .71 x 1.16 x .04
37	HG-50132	2	/P	Washer, HT, .5 x 1.0 x .032
38	HG-51129	1		Gear, 10T/48T
39	HG-51043	1	/P	Gear, Jackshaft, 10T
40	HG-51083	1		Pin, Jackshaft
41	HG-52531	1		Ring, Spiral Retaining
42	HG-52541	1		Gear, Bull, 52T
43	HG-52532	1		Washer, 1.018 x 1.571 x .105
44	HG-52542	1		Bearing, Sleeve
45	HG-52545	1		Shaft, Axle, 1.0 x 11.7 Double-D
46	HG-51517	1	/P	Bushing, Axle
47	HG-51518	1	/P	Seal, Lip, 1.0 x 1.57 x .25
48	HG-70868L	1		Kit, Expansion Plate, LH
49	HG-71351	1	S	Kit, Fan-Pulley
50	HG-71356	1	/P	Kit, Brake Arm
51	HG-71529	1		Kit, Center Section-Filter LH
52	HG-71006	1		Kit, Bypass Arm
53	HG-71497	1	/P	Kit, Filter

RZT50 B&S Intek
Transmission LH DD axle

Page 41 of 47

Ref #	Part Number	Qty	S/P/F	Description
54	HG-51635	1	/P	Disc, Brake Cog
55	N/A	1		Hub, Pulley furnish HG-71351
56	HG-52365	1	S	Fan, 7" 10 Blade
57	N/A	1		Pulley, 4.5 furnish HG-71351
58	HG-51244	1	S	Nut, Hex Insert Lock, 1/2-20
59	HG-51523	3		Washer, OD Slotted
60	HG-71510	1	/P	Kit, Breather
61	HG-51616	1	S	Screw, Hx Patch, 5/16-24 x 1.0
62	HG-51950	1		Washer, 1.5 x .34 x .062
63	732-04448	1	/P	Spring, Extension replaces HG-51833, RH & LH transmissions must have the same color return spring
64	HG-71094	1		Kit, Return AssemblyLH
65	HG-51946	1		Arm, Neutral RH
66	HG-52432	1		Assemble, Return, Bi-Direct.
67	HG-71393	1	/P	Fitting, w/Cap Used only on 618-04431 Transmissions w/ 751-10474 Breather Hose
68	751-10474	1		Hose Assembly Breather-Used Only with 618-04431 Transmissions Before Mfg. Date A267
	HG-70853	1	/P	Kit, Seal not shown
	HG-50928	1	/P	Sealant Tube, 10.3 oz not shown

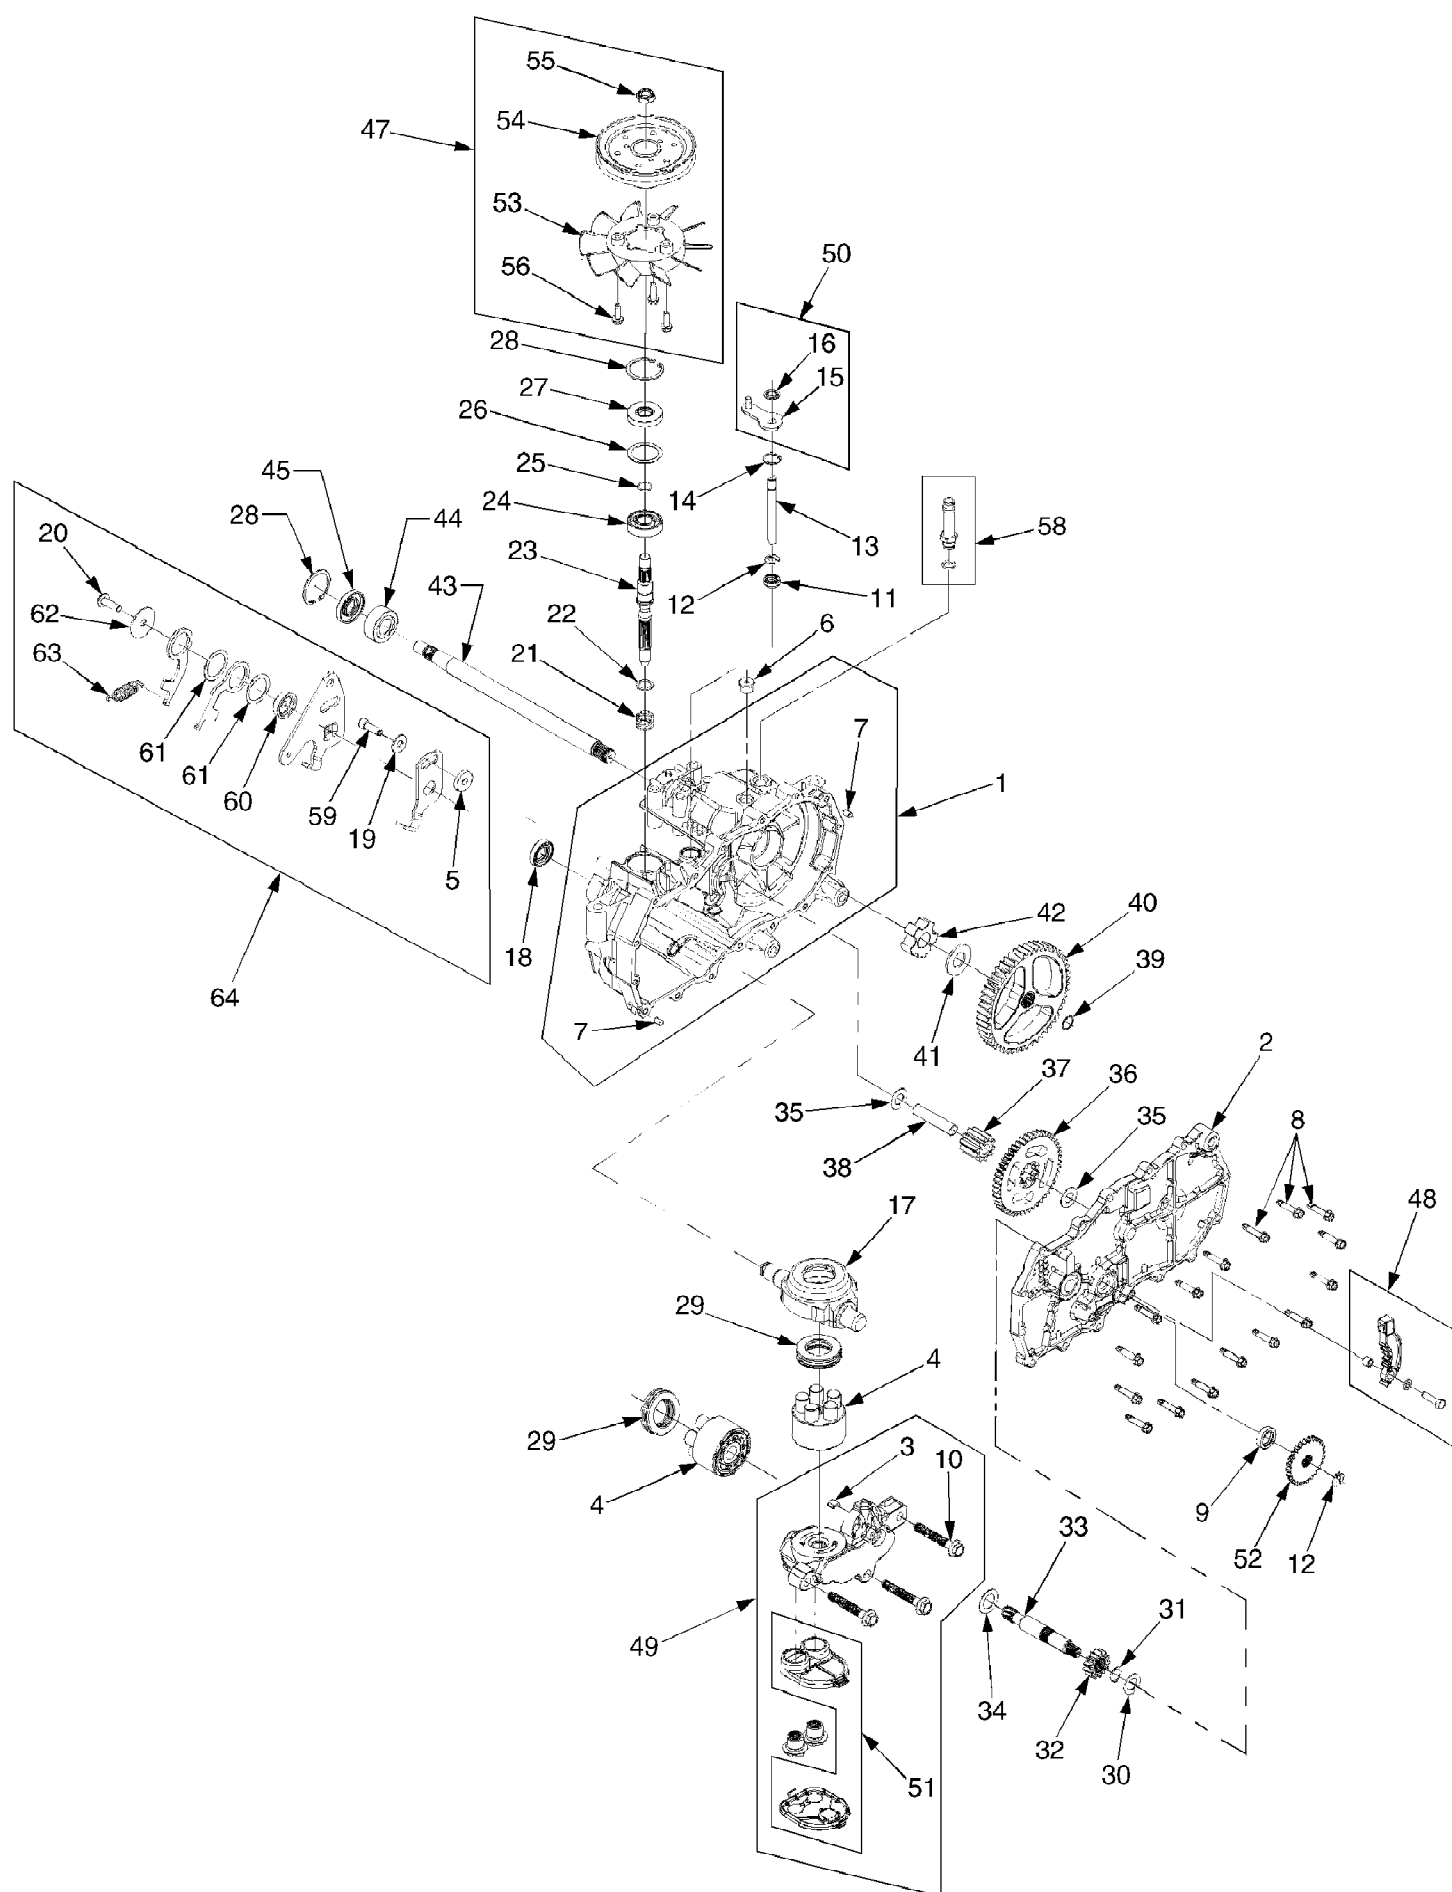

RZT50 B&S Intek
Transmission RH

Page 43 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	HG-70862R	1	/P	Housing Assembly, Main RH
2	HG-70863R	1	/P	Side Assembly, RH
3	HG-51448	1		Plate, Bypass
4	HG-70331	1	/P	Block Assembly 5 piston
4	HG-70723	1	/P	Block Assembly 7 piston
5	HG-51949	1		Spacer, .32 x 1.005
6	HG-9005110-5600	1	/P	Plug, SAE #6
7	HG-9004800-2506	2	/P	Pin, Stainless
8	HG-51190	16	/P	Screw, Hex Self Tapping, 1/4-20 x 1.25
9	HG-44761	1	S	Seal, Lip, .625 x 1.0 x .25
10	HG-50016	3		Bolt, Hex Flange, 3/8-24 x 2.5
11	HG-51626	1		Seal, Lip, .375 x .75 x .25
12	HG-51628	2	/P	Ring, Retaining, .375 Ext.
13	HG-51625	1		Rod, Bypass
14	HG-51627	1		Ring, Retaining, .75 Int.
15	HG-51910	1		Arm, Bypass
16	HG-51630	1	/P	Ring, Retaining, .375 Push
17	HG-51048	1	/P	Swashplate, Trunnion
18	HG-51140	1	/P	Seal, Lip, 18 x 32 x 7
19	HG-44130	1	S	Washer, Flat, 11/32 x 7/8 x 1/16
20	HG-51812	1	/P	Screw, 5/16-24 x 1.0
21	HG-2003014	1	/P	Spring, Compression
22	HG-2003017	1	/P	Washer, .591 x .787 x .04
23	HG-51062	1	/P	Shaft, Input
24	HG-50315	1		Bearing, Ball, 17mm x 40 x 12
25	HG-2000022	1	/P	Ring, Wire Retaining, .561
26	HG-50951	1	/P	Spacer
27	HG-51161	1	/P	Seal, Lip, 17 x 40 x 7
28	HG-50329	2	/P	Ring, Retaining
29	HG-50551	2	S	Bearing, Thrust, 30 x 52 x 13
30	HG-44371	1	/P	Washer, Flat, 5/8 x 1.0 x .05
31	HG-44145	1		Ring, Retaining
32	HG-51130	1		Gear, Pinion, 13T
33	HG-51632	1		Shaft, Motor
34	HG-51069	1		Washer, .71 x 1.16 x .04
35	HG-50132	2	/P	Washer, HT, .5 x 1.0 x .032
36	HG-51129	1		Gear, 10T/48T
37	HG-51043	1	/P	Gear, Jackshaft, 10T
38	HG-51083	1		Pin, Jackshaft
39	HG-44871	1	/P	Ring, Spiral Retaining
40	HG-51633	1	S	Gear, Bull, 52T
41	HG-44875	1	/P	Washer, 3/4 x 1.5 x .13
42	HG-51088	1	/P	Bearing, Sleeve
43	HG-51954	1	S	Axle Taper Spline
44	HG-51089	1	/P	Bushing, .752 x 1.571 x .625
45	HG-51066	1	/P	Seal, Lip, .75 x 1.577 x .25
47	N/A	1		Kit, Fan-Pulley (furnish components)
48	HG-70865	1	/P	Kit, Brake Arm
49	HG-70864R	1	/P	Kit, Center Section-Filter RH
50	HG-71006	1		Kit, Bypass Arm
51	HG-70911	1	S	Kit, Filter
52	HG-51635	1	/P	Disc, Brake Cog
53	HG-51365	1		Fan, 6" 10 Blade


RZT50 B&S Intek
Transmission RH

Page 44 of 47

Ref #	Part Number	Qty	S/P/F	Description
54	HG-50302	1	/P	Pulley, 4.5
55	HG-51244	1	S	Nut, Hex Insert Lock, 1/2-20
56	HG-50752	3	/P	Screw, Hex Wash. Hd. Tapp 1/4-20
58	HG-52200	1	/P	Fitting/O-ring Assembly
59	HG-51616	1	S	Screw, Patch, 5/16-24 x 1.0
60	HG-51947	1		Bushing, Pilot, 1.125
61	HG-51948	2		Washer, Plastic
62	HG-51950	1		Washer, 1.5 x .34 x .062
63	HG-51399	1	S	Spring, Extension
64	N/A	1		Kit, Return Assembly RH (furnish components)
	HG-70853	1	/P	Kit, Seal Not shown
	HG-50928	1	/P	Sealant, Tube Not shown

RZT50 B&S Intek
Transmission RH DD axle

Page 45 of 47

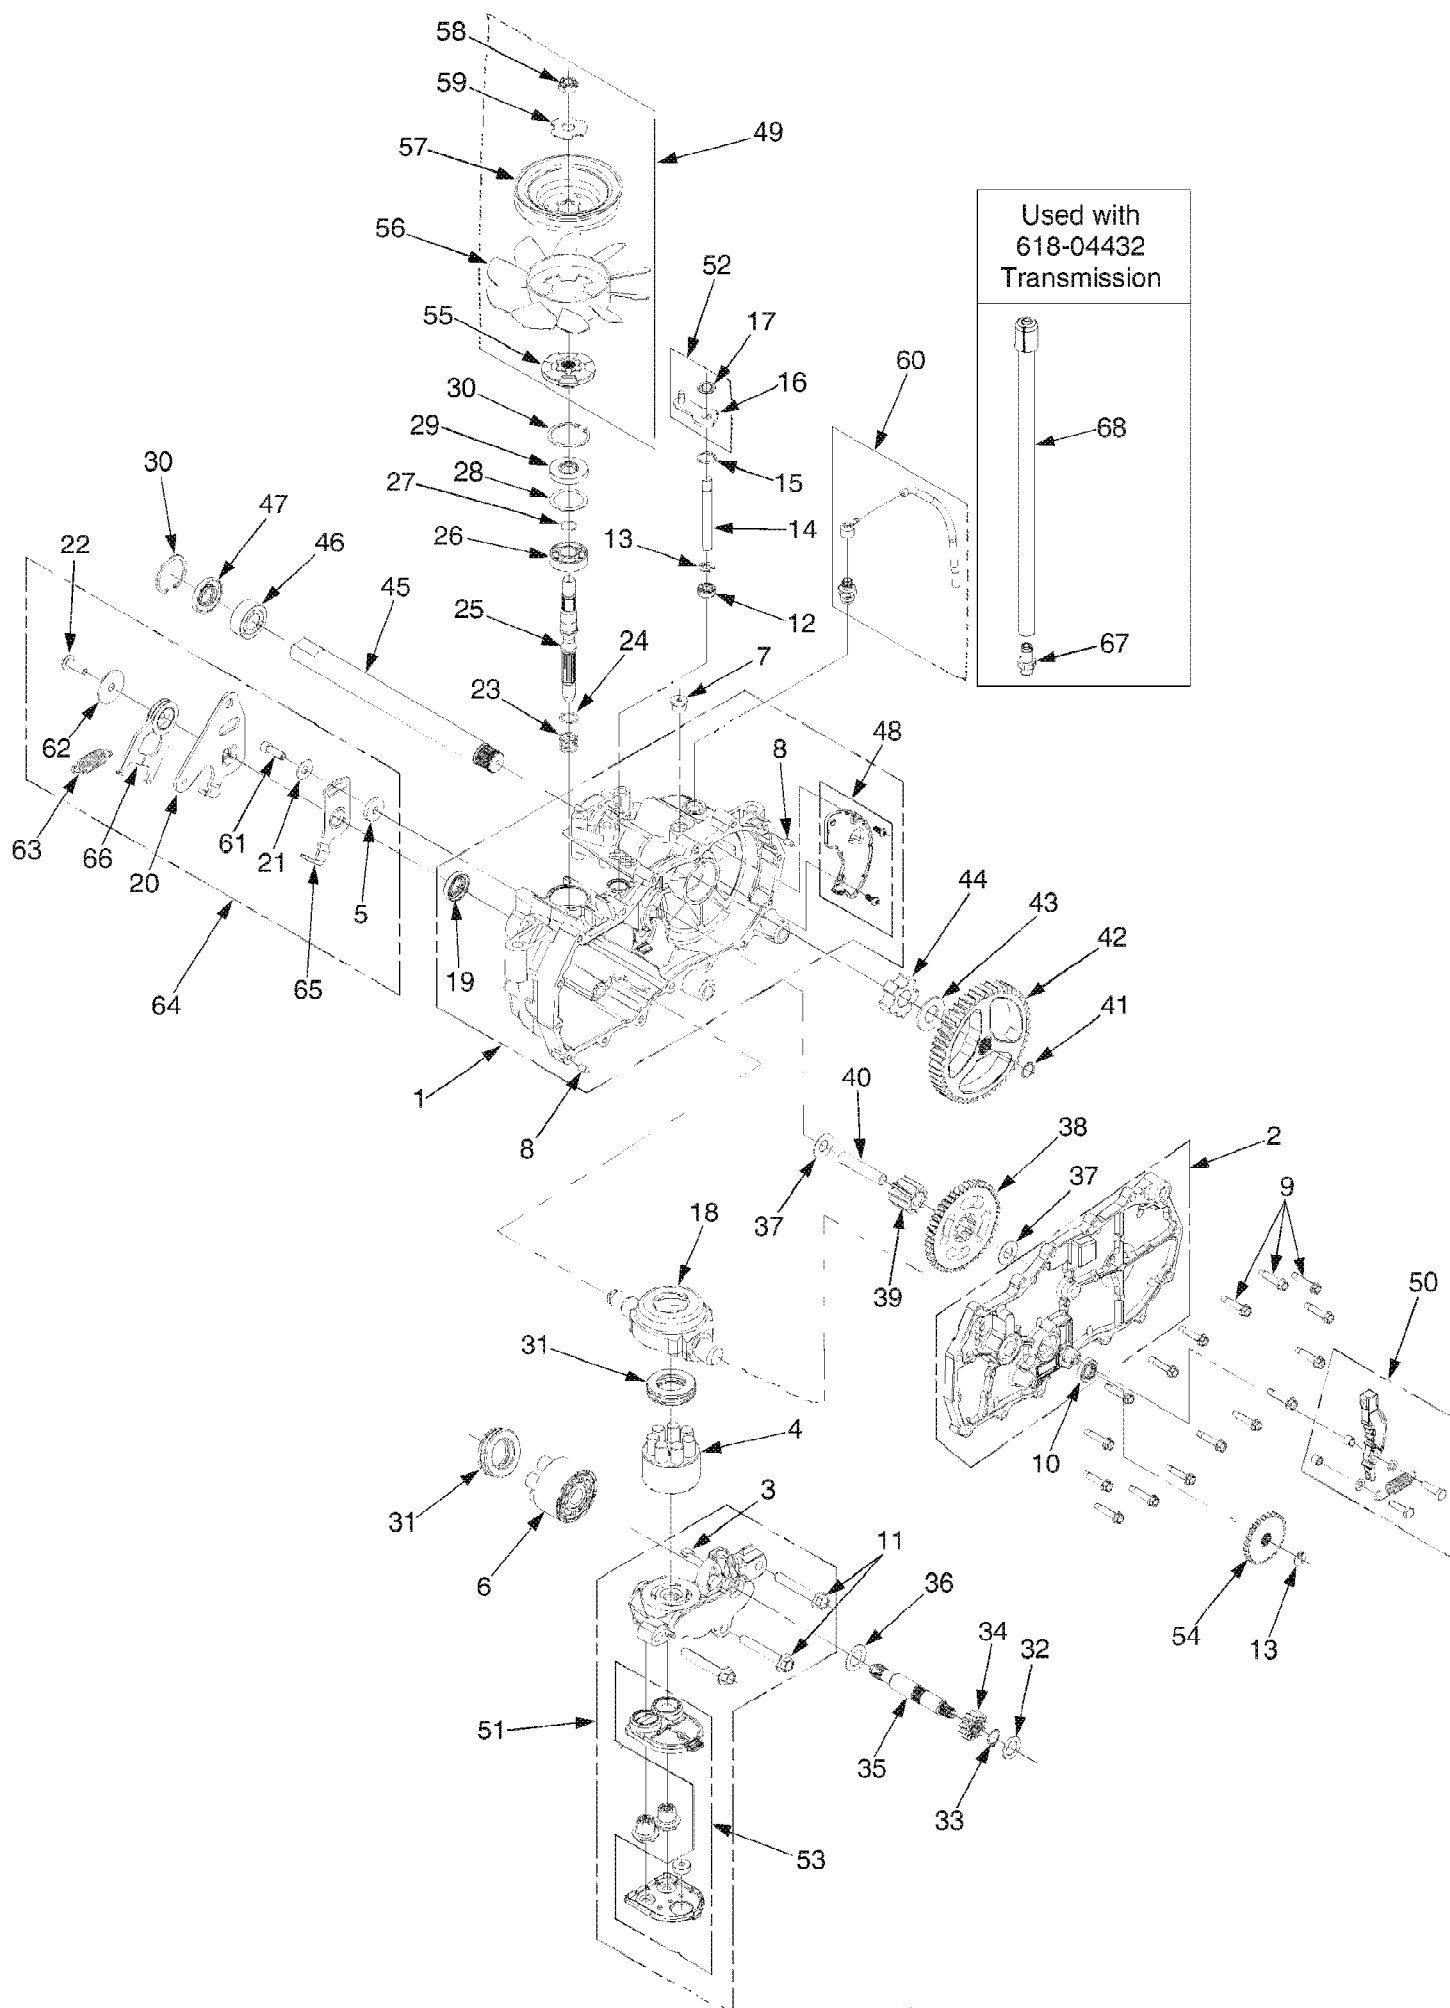

RZT50 B&S Intek
Transmission RH DD axle

Page 46 of 47

Ref #	Part Number	Qty	S/P/F	Description
1	HG-70862R	1	/P	Housing Assembly, Main RH
2	HG-70863R	1	/P	Side Assembly, RH
3	HG-51448	1		Plate, Bypass
4	HG-70723	1	/P	Pump Block Assembly
5	HG-52527	1		Spacer, .32 x 1.005
6	HG-70331	1	/P	Motor Block Assembly
7	HG-9005110-5600	1	/P	Plug, SAE #6
8	HG-9004800-2506	2	/P	Pin, Stainless
9	HG-51190	16	/P	Screw, Hex Self Tapping, 1/4-20 x 1.25
10	HG-44761	1	S	Seal, Brake
11	HG-50016	3		Bolt, Hex Flange, 3/8-24 x 2.5
12	HG-51626	1		Seal, Lip, .375 x .75 x .25
13	HG-51628	2	/P	Ring, Retaining, .375 Ext.
14	HG-51625	1		Rod, Bypass
15	HG-51627	1		Ring, Retaining, .75 Int.
16	HG-51910	1		Arm, Bypass
17	HG-51630	1	/P	Ring, Retaining, .375 Push
18	HG-51048	1	/P	Swashplate, Trunnion
19	HG-51140	1	/P	Seal, Lip, 18 x 32 x 7
20	HG-51841	1	/P	Arm, Control RH
21	HG-44130	1	S	Washer, Flat, 11/32 x 7/8 x 1/16
22	HG-51812	1	/P	Screw, 5/16-24 x 1.0
23	HG-2003014	1	/P	Spring, Compression
24	HG-2003017	1	/P	Washer, .591 x .787 x .04
25	HG-51062	1	/P	Shaft, Input
26	HG-50315	1		Bearing, Ball, 17mm x 40 x 12
27	HG-2000022	1	/P	Ring, Wire Retaining, .561
28	HG-50951	1	/P	Spacer
29	HG-51161	1	/P	Seal, Lip, 17 x 40 x 7
30	HG-50329	2	/P	Ring, Retaining
31	HG-50551	2	S	Bearing, Thrust, 30 x 52 x 13
32	HG-44371	1	/P	Washer, Flat, 5/8 x 1.0 x .05
33	HG-44145	1		Ring, Retaining
34	HG-51130	1		Gear, Pinion, 13T
35	HG-51632	1		Shaft, Motor
36	HG-51069	1		Washer, .71 x 1.16 x .04
37	HG-50132	2	/P	Washer, HT, .5 x 1.0 x .032
38	HG-51129	1		Gear, 10T/48T
39	HG-51043	1	/P	Gear, Jackshaft, 10T
40	HG-51083	1		Pin, Jackshaft
41	HG-52531	1		Ring, Spiral Retaining
42	HG-52541	1		Gear, Bull, 52T
43	HG-52532	1		Washer, 1.018 x 1.571 x .105
44	HG-52542	1		Bearing, Sleeve
45	HG-52545	1		Shaft, Axle, 1.0 x 11.7 Double-D
46	HG-51517	1	/P	Bushing, Axle
47	HG-51518	1	/P	Seal, Lip, 1.0 x 1.57 x .25
48	HG-70868R	1		Kit, Expansion Plate, RH
49	HG-71351	1	S	Kit, Fan-Pulley
50	HG-71356	1	/P	Kit, Brake Arm
51	HG-71530	1		Kit, Center Section-Filter RH
52	HG-71006	1		Kit, Bypass Arm
53	HG-71497	1	/P	Kit, Filter

RZT50 B&S Intek
Transmission RH DD axle

Page 47 of 47

Ref #	Part Number	Qty	S/P/F	Description
54	HG-51635	1	/P	Disc, Brake Cog
55		1		Hub, Pulley furnish HG-71351
56	HG-52365	1	S	Fan, 7" 10 Blade
57		1		Pulley, 4.5
58	HG-51244	1	S	Nut, Hex Insert Lock, 1/2-20
59	HG-51523	3		Washer, OD Slotted
60	HG-71510	1	/P	Kit, Breather
61	HG-51616	1	S	Screw, Hx Patch, 5/16-24 x 1.0
62	HG-51950	1		Washer, 1.5 x .34 x .062
63	732-04448	1	/P	Spring, Extension replaces HG-51833, RH & LH transmissions must have the same color return spring
64	HG-71095	1		Kit, Return Assembly RH
65	HG-51945	1		Arm, Neutral RH
66	HG-52432	1		Assemble, Return, Bi-Direct.
67	HG-71393	1	/P	Fitting, w/Cap Used only on 618-04432 Transmissions w/ 751-10474 Breather Hose
68	751-10474	1		Hose Assembly Breather-Used Only with 618-04432 Transmissions Before Mfg. Date A267
	HG-70853	1	/P	Kit, Seal not shown
	HG-50928	1	/P	Sealant Tube, 10.3 oz not shown