


Z48 (1999)  
48" Deck Assembly

Page 1 of 39

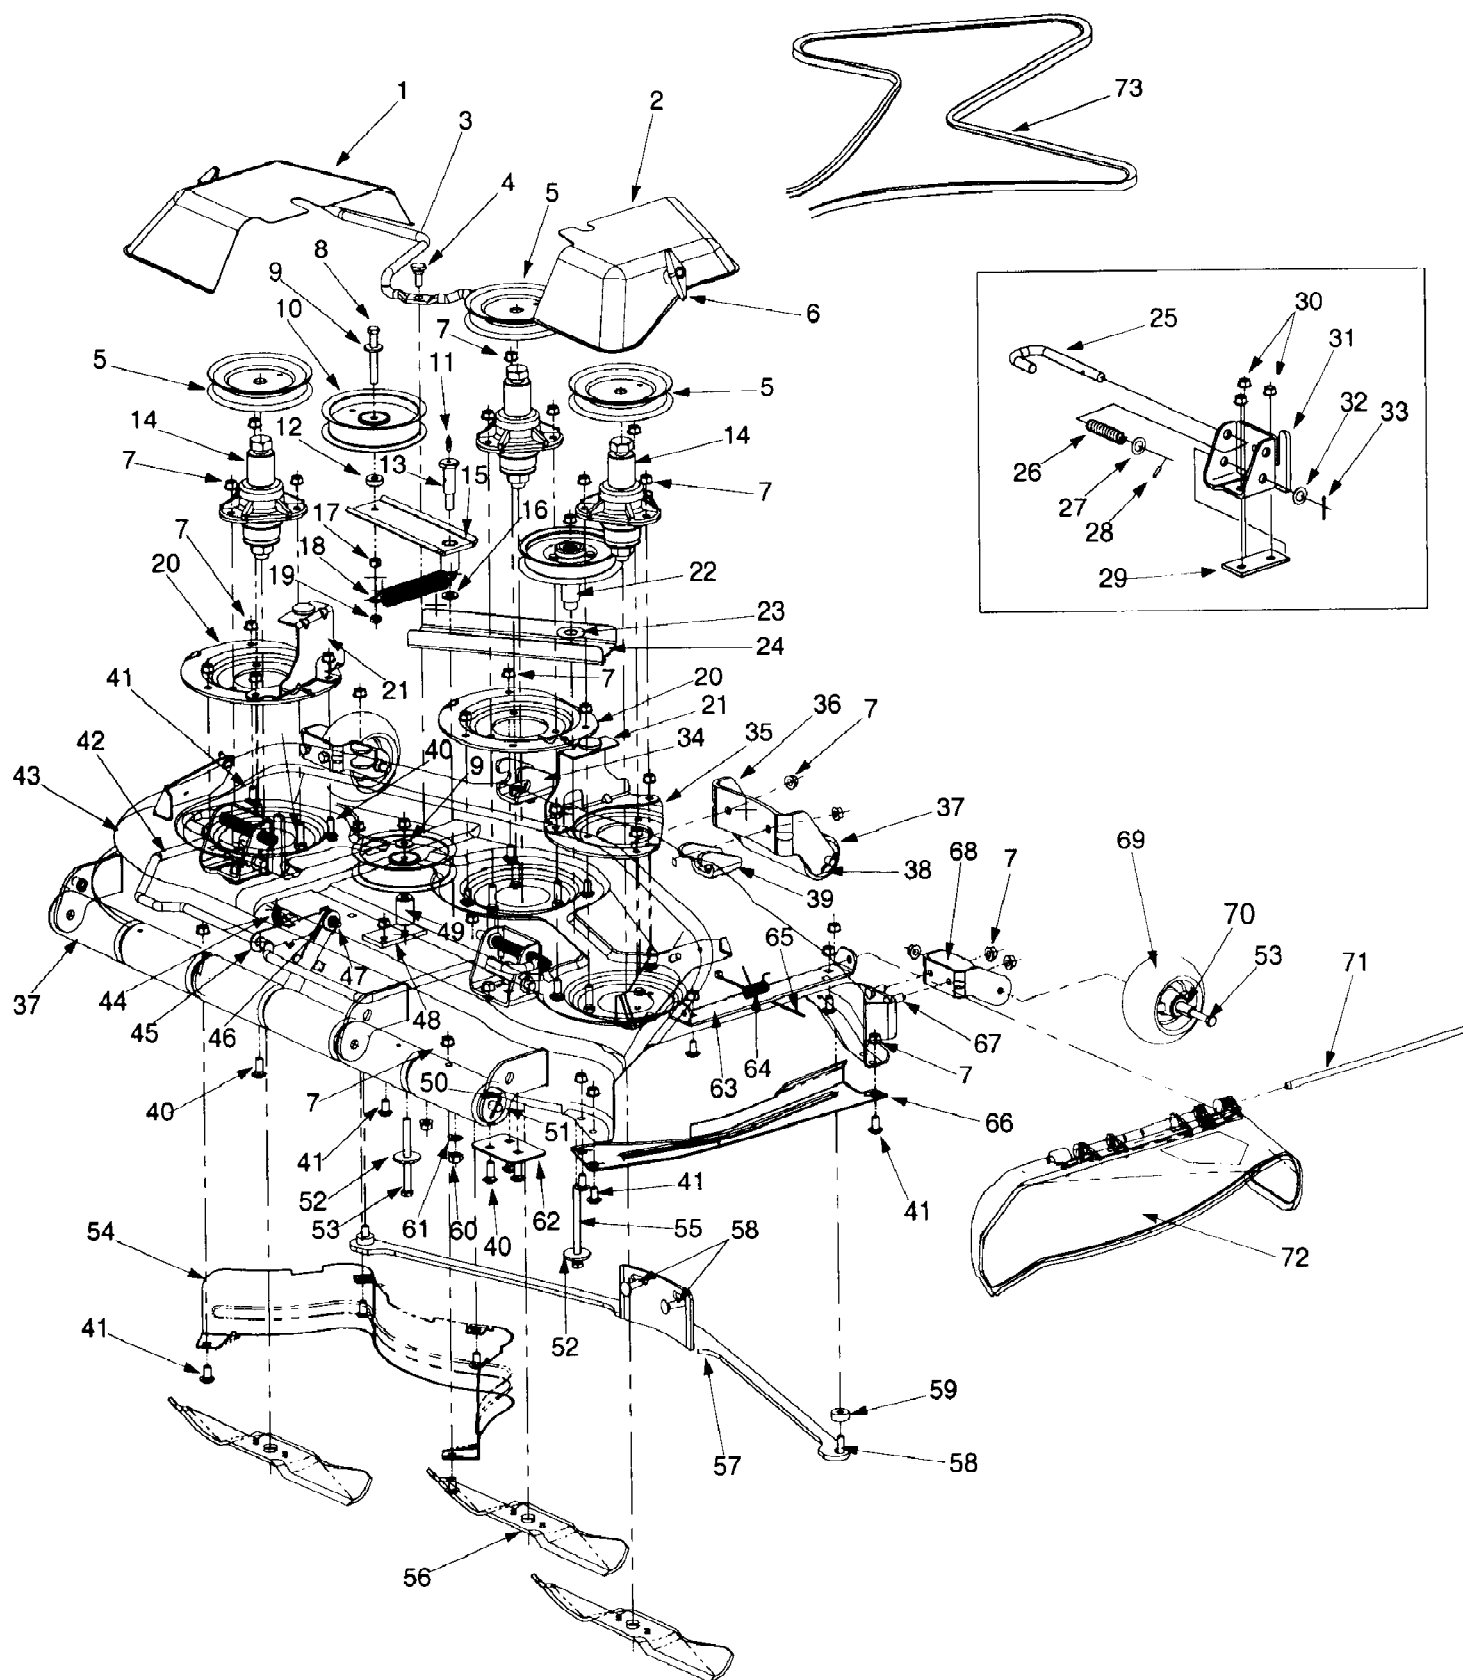

Z48 (1999)  
48" Deck Assembly

Page 2 of 39

| Ref # | Part Number | Qty | S/P/F | Description                       |
|-------|-------------|-----|-------|-----------------------------------|
| 1     | 703-2817    | 1   |       | LH Belt Cover                     |
| 2     | 703-2816    | 1   |       | RH Belt Cover                     |
| 3     | 747-3306    | 1   |       | Idler Spring Mounting Rod         |
| 4     | 738-0380    | 1   | S     | Shoulder Screw 3/8-16             |
| 5     | 756-3106    | 1   |       | Pulley                            |
| 6     | 720-0241    | 1   | S     | Wingnut Knob                      |
| 7     | 712-0431    | 1   | S     | Flange Lock Nut 3/8-16            |
| 8     | 710-0521    | 1   | /P    | Hex Cap Screw 3/8-16 x 3.0        |
| 9     | 736-0258    | 1   | /P    | Flat Washer .385 ID x 1.0 OD      |
| 10    | 756-3105    | 1   |       | Idler Pulley 5.0                  |
| 11    | 737-0280    | 1   | S     | Grease Fitting                    |
| 12    | 711-0242    | 1   | S     | Spacer                            |
| 13    | 738-3108    | 1   | /P    | Shoulder Bolt                     |
| 14    | 603-0690    | 1   |       | Spindle Ass'y                     |
| 15    | 603-0469A   | 1   | S     | Idler Bearing Arm Ass'y           |
| 16    | 736-3015    | 1   | S     | Flat Washer .469 ID x .875 OD     |
| 17    | 712-0375    | 1   | /P    | Lock Nut 3/8-16                   |
| 18    | 732-0942    | 1   |       | Extension Spring 1.0 OD x 5.78 Lg |
| 19    | 712-0342    | 1   | /P    | Jam Nut 3/8-16                    |
| 20    | 703-2089A   | 1   | S     | Reinforcement Disk                |
| 21    | 603-0326    | 1   |       | Belt Cover Bracket Ass'y          |
| 22    | 603-0407    | 1   |       | Idler Pulley Ass'y 5.0            |
| 23    | 736-0316    | 1   | S     | Flat Washer .78 ID x 1.59 OD      |
| 24    | 703-2849    | 1   | S     | Channel                           |
| 25    | 747-3013    | 1   | /P    | Mower Support Pin                 |
| 26    | 732-0802    | 1   |       | Compression Spring                |
| 27    | 736-0160    | 1   | S     | Flat Washer .536 ID X .93 QD      |
| 28    | 715-3003    | 1   | /P    | Spirol Spring Pin                 |
| 29    | 703-2683    | 1   | S     | Rear Deck Hanger Bracket Spacer   |
| 30    | 712-0431    | 1   | S     | Hex Flange Lock Nut 3/8-16        |
| 31    | 603-0351    | 1   |       | Rear Hanger Bracket LH            |
| 32    | 736-0160    | 1   | S     | Flat Washer .536 ID x .93 OD      |
| 33    | 714-0115    | 1   | S     | Cotter Pin                        |
| 34    | 703-2767    | 1   |       | Front End Deck Bracket LH         |
| 35    | 703-2090    | 1   |       | Reinforcement Disk RH             |
| 36    | 703-2091A   | 1   | /P    | Front Roller Bracket              |
| 37    | 731-3005    | 1   | /P    | Front Roller                      |
| 38    | 714-0115    | 1   | S     | Cotter Pin                        |
| 39    | 703-2430    | 1   |       | Front End Deck Bracket RH         |
| 40    | 710-3168    | 1   | /P    | Carriage Bolt 3/8-16              |
| 41    | 710-3178    | 1   | /P    | Carriage Bolt 3/8-16 x .75        |
| 42    | 747-3297A   | 1   | /P    | Support Deck Rod                  |
| 43    | 603-0348    | 1   |       | Mower Deck Ass'y 48"              |
| 44    | 732-0395    | 1   | S     | Extension Spring .50 OD x 2.51 Lg |
| 45    | 703-2929    | 1   | S     | Support Deck Link                 |
| 46    | 736-0231    | 1   | S     | Flat Washer .344 ID x 1.125 OD    |
| 47    | 731-3005    | 1   | /P    | Front Roller                      |
| 48    | 703-3381    | 1   |       | Idler Support Plate               |
| 49    | 750-3243    | 1   |       | Spacer .380 ID x 1.0 OD           |
| 50    | 714-0115    | 1   | S     | Cotter Pin                        |
| 51    | 711-1103    | 1   |       | Roller Pin                        |
| 52    | 736-0227    | 1   | S     | Flat Washer                       |
| 53    | 710-0944    | 1   | /P    | Hex Cap Screw 3/8-16 x 4.25       |


Z48 (1999)  
48" Deck Assembly

Page 3 of 39

| Ref # | Part Number | Qty | S/P/F | Description                  |
|-------|-------------|-----|-------|------------------------------|
| 54    | 703-2161    | 1   | S     | Deck Baffle                  |
| 55    | 710-0693    | 1   | /P    | Hex Cap Screw 3/8-16 x 4.5   |
| 56    | 759-3826    | 1   | /P    | Mower Blade                  |
| 57    | 603-0154    | 1   |       | Front Bar                    |
| 58    | 710-3034    | 1   | /P    | Carriage Screw 3/8-16 x 1.25 |
| 59    | 750-3119    | 1   | /P    | Spacer .406 ID x 1.0 OD      |
| 60    | 712-3019    | 1   | S     | Hex Nut 7/16-14              |
| 61    | 736-0171    | 1   | S     | Lock Washer 7/16             |
| 62    | 703-2988    | 1   | S     | Support Plate                |
| 63    | 703-2392    | 1   | S     | Bracket                      |
| 64    | 732-3070    | 1   | S     | Torsion Spring               |
| 65    | 725-0157    | 1   | /P    | Cable Tie                    |
| 66    | 603-0150    | 1   |       | Finger Guard                 |
| 67    | 710-3001    | 1   | /P    | Hex Cap Screw 3/8-16 x .880  |
| 68    | 703-2410    | 1   |       | Castor Bracket               |
| 69    | 634-3159    | 1   | /P    | Wheel Complete               |
| 70    | 750-3193    | 1   | /P    | Spacer                       |
| 71    | 711-3318    | 1   | /P    | Hinge Pin                    |
| 72    | 731-3131    | 1   | S     | Deflector Chute              |
| 73    | 754-3079    | 1   | S/F   | V-Belt                       |

Z48 (1999)  
48" Mulching Kit

Page 4 of 39

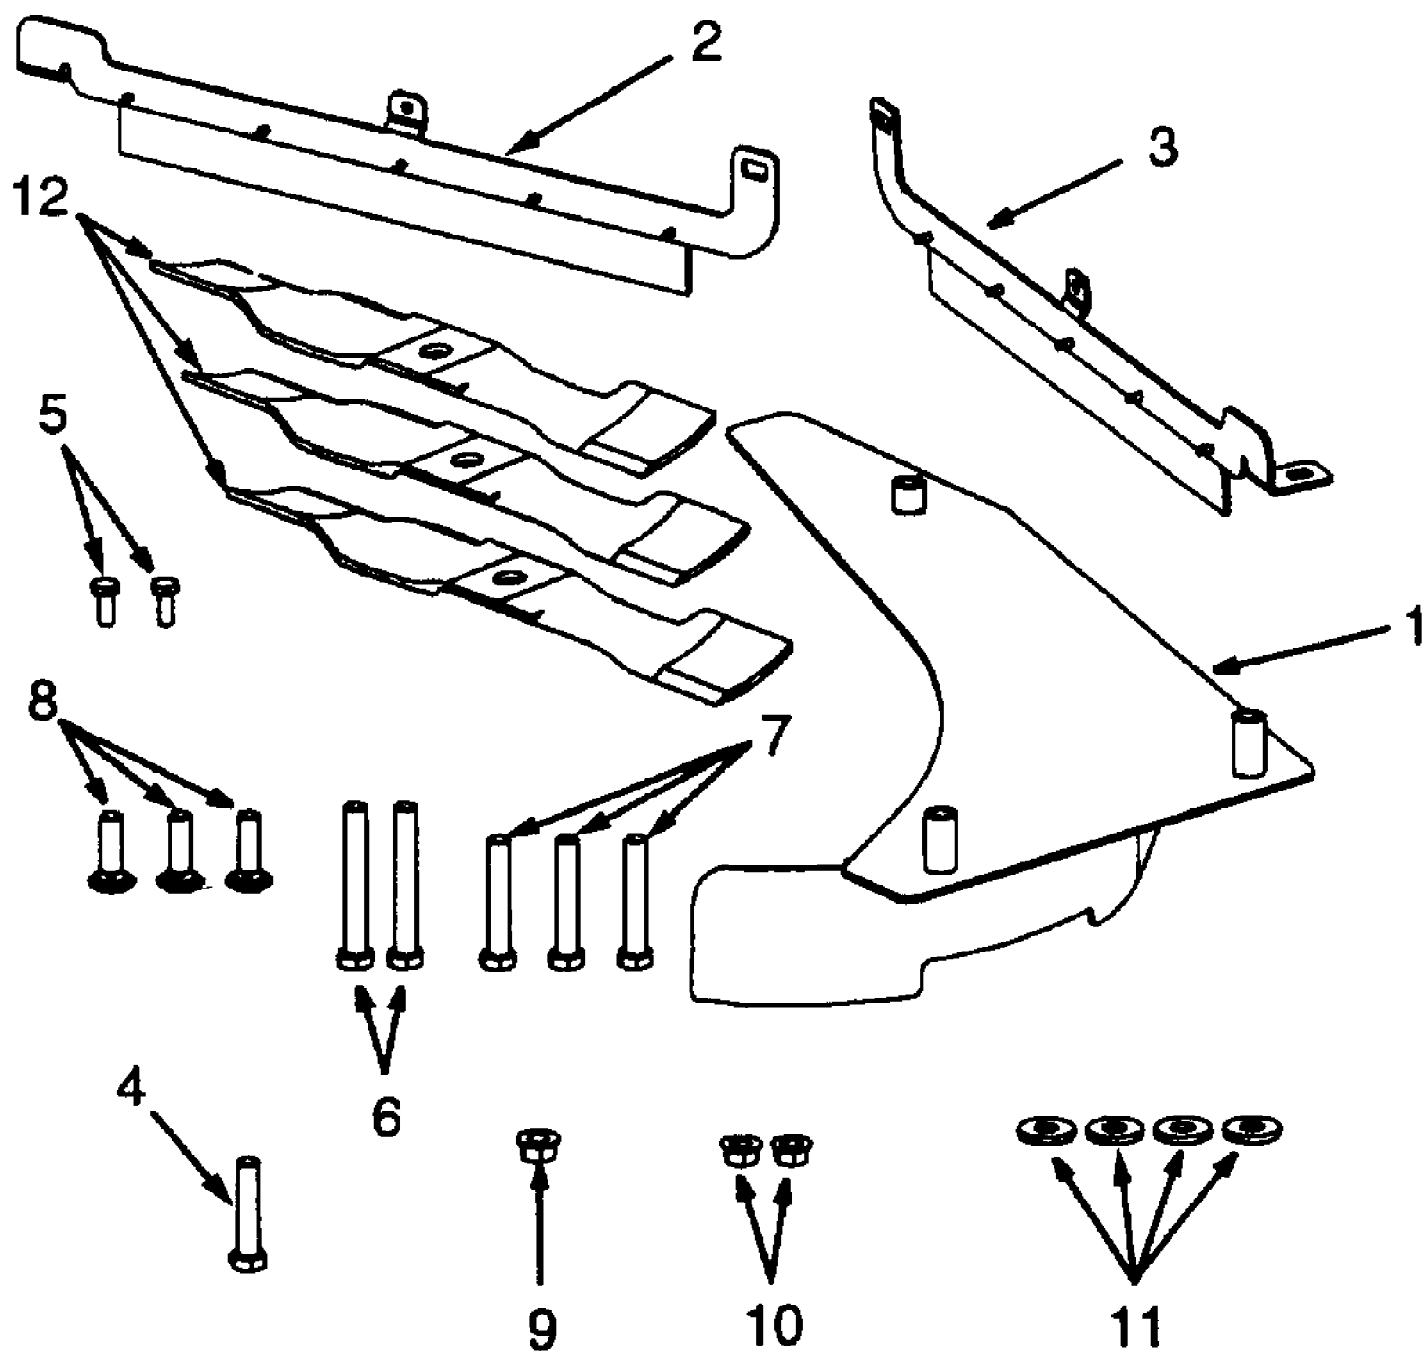

Z48 (1999)  
48" Mulching Kit


Page 5 of 39

| Ref # | Part Number | Qty | S/P/F | Description                       |
|-------|-------------|-----|-------|-----------------------------------|
| 1     | 603-0395    | 1   | S     | Baffle Ass'y, 48" Mulching        |
| 2     | 603-0439    | 1   | /P    | Bracket Ass'y, Rubber Flap/Mtg LH |
| 3     | 603-0440    | 1   | /P    | Bracket Ass'y, Rubber Flap/Mtg RH |
| 4     | 710-0520    | 1   | /P    | Screw, Hex Cap, 3/8-16 x 1.5 GR5  |
| 5     | 710-0751    | 2   | /P    | Screw, Hex Cap, 1/4-20 x.62 GR5   |
| 6     | 710-3011    | 2   | /P    | Screw, Hex Cap, 3/8-16 x 2.25 GR5 |
| 7     | 710-0347    | 3   | /P    | Screw, Hex Cap, 3/8-16 x 1.75     |
| 8     | 710-3168    | 3   | /P    | Bolt, Carriage, 3/8-16 x 1.0 GR5  |
| 9     | 712-0431    | 1   | S     | Nut, Hex Flange Lock, 3/8-16      |
| 10    | 712-3027    | 2   | S     | Nut, Hex Flange Lock, 1/4-20      |
| 11    | 736-3052    | 4   | /P    | Washer, Flat, .406 X 1.0 X .105   |
| 12    | 742-3028    | 3   | S     | Blade, Mulching, 16.5 Lg          |

Z48 (1999)

Page 6 of 39

Battery, Electrical Components And Switches

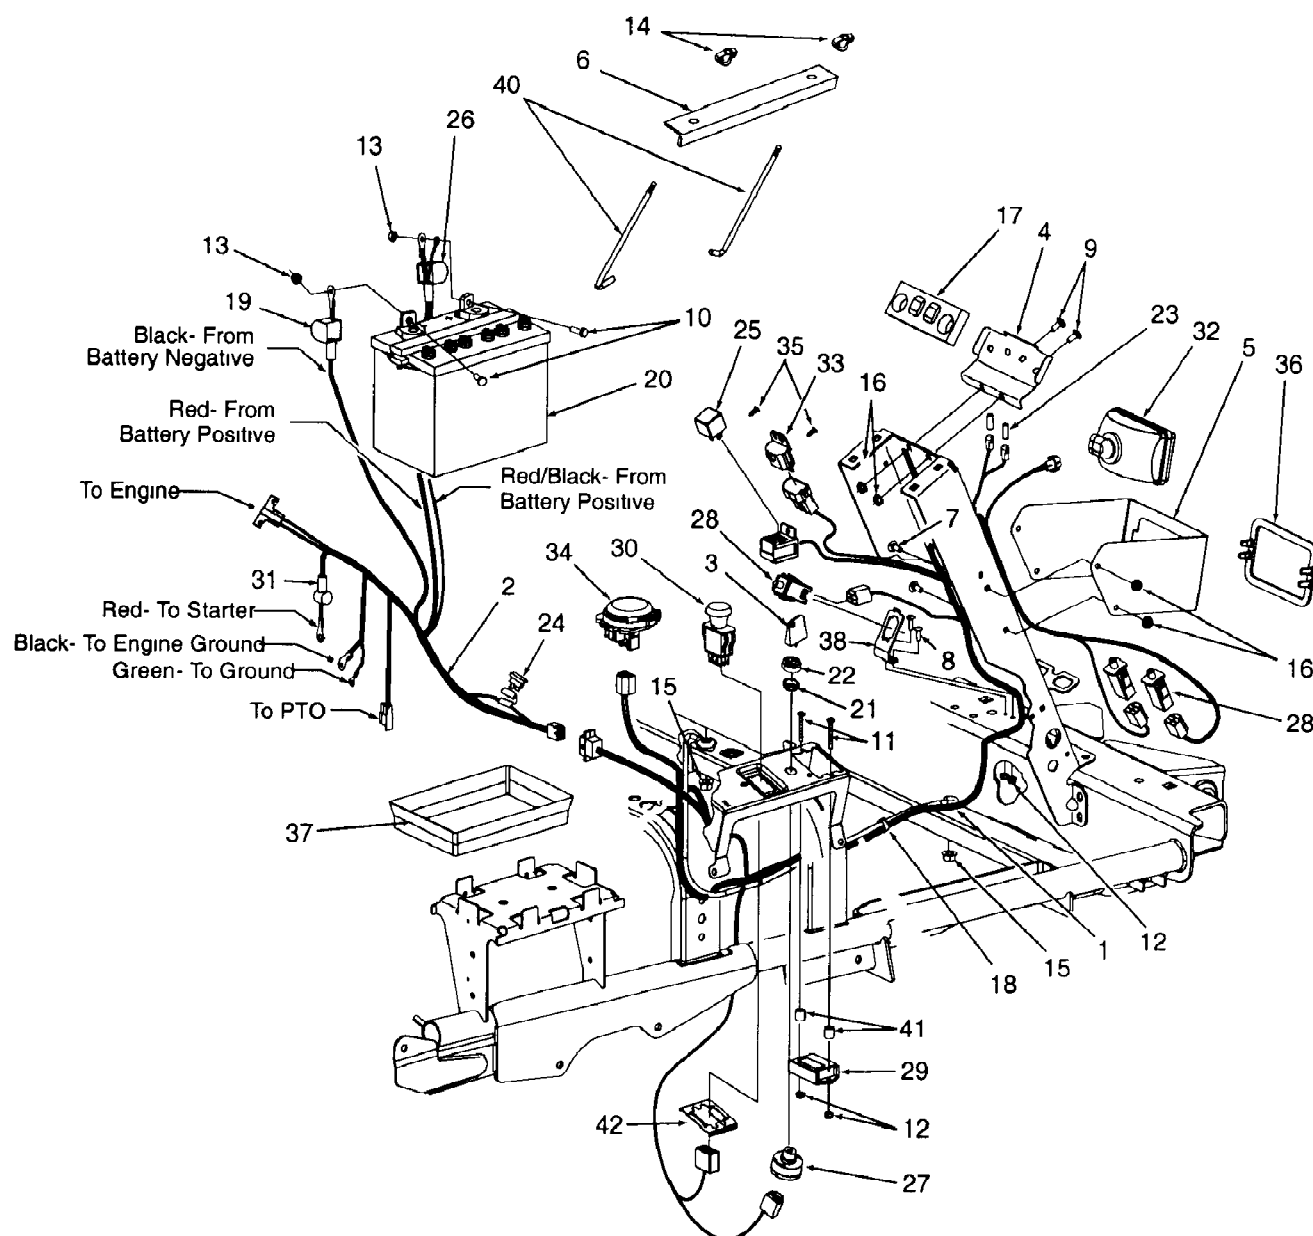

Z48 (1999)


Page 7 of 39

## Battery, Electrical Components And Switches

| Ref # | Part Number | Qty | S/P/F | Description                                |
|-------|-------------|-----|-------|--------------------------------------------|
| 1     | 629-3033    | 1   |       | Main Wire Harness                          |
| 2     | 629-3034    | 1   |       | Engine Wire Harness (Inc. 19, 24, 26 & 31) |
| 3     | 703-1345A   | 1   | S     | Ignition Key                               |
| 4     | 703-2809    | 1   | S     | Indicator Bulb Mounting Bracket            |
| 5     | 703-2836    | 1   |       | Headlight Mounting Bracket                 |
| 6     | 703-3149    | 1   | S     | Battery Retainer Strip                     |
| 7     | 710-0134    | 1   | /P    | Carriage Bolt 1/4-20 x .62                 |
| 8     | 710-0425    | 1   | /P    | Machine Screw #10-24 x 5/8                 |
| 9     | 710-3013    | 1   | /P    | Hex Cap Screw 1/4-20 x .50                 |
| 10    | 710-3015    | 1   | /P    | Hex Cap Screw 1/4-20 x .75                 |
| 11    | 710-3143    | 1   | /P    | Pan Head Cutting Screw #10-24              |
| 12    | 712-0161    | 1   | /P    | Hex Insert Lock Nut #10-24                 |
| 13    | 712-0271    | 1   | /P    | Hex Sems Nut 1/4-20                        |
| 14    | 712-0397    | 1   | S     | Nylon Wing Nut 1/4-20                      |
| 15    | 712-0431    | 1   | S     | Hex Flange Lock Nut 3/8-16                 |
| 16    | 712-3027    | 1   | S     | Hex Flange Lock Nut 1/4-20                 |
| 17    | 723-0455    | 1   |       | Indicator Light Foam Protector             |
| 18    | 725-0157    | 1   | /P    | Cable Tie                                  |
| 19    | 725-0340    | 1   |       | Battery Terminal Cover - Black             |
| 20    | 725-1722    | 1   | S     | Battery                                    |
| 21    | 725-1346    | 1   | S     | Ignition Switch Nut 5/8-32                 |
| 22    | 725-1347    | 1   | /P    | Ignition Switch Cap                        |
| 23    | 725-1365    | 1   | S     | Indicator Bulb                             |
| 24    | 725-1656    | 1   |       | Mini 20 Amp Fuse                           |
| 25    | 725-1718    | 1   | S     | Relay                                      |
| 26    | 725-3007A   | 1   | /P    | Battery Terminal Cover - Red               |
| 27    | 725-3163    | 1   | S     | Ignition Switch                            |
| 28    | 725-3164A   | 1   | S     | Plunger Safety Switch                      |
| 29    | 725-3229    | 1   |       | Hourmeter/Tachometer                       |
| 30    | 725-3233    | 1   | S     | PTO Switch                                 |
| 31    | 725-3237    | 1   |       | Terminal Cover - Red                       |
| 32    | 725-3250    | 1   | S     | Headlight Ass'y                            |
|       | 759-3864    | 1   | S     | Headlight Bulb                             |
| 33    | 725-3251    | 1   | S     | Voltage Sensor                             |
| 34    | 725-3253    | 1   | S     | Seat Switch                                |
| 35    | 726-0349    | 1   | S     | Ratcheet Retainer                          |
| 36    | 731-3184    | 1   |       | Headlight Bezel                            |
| 37    | 731-3233    | 1   |       | Battery Tray                               |
| 38    | 732-0816    | 1   |       | Switch Mounting Spring                     |
| 40    | 747-3347    | 1   |       | Battery Retainer Rod                       |
| 41    | 750-0539    | 1   | S     | Spacer                                     |
| 42    | 783-0462    | 1   | /P    | PTO Switch Retainer Bracket                |

Z48 (1999)  
Body Cover Panels

Page 8 of 39

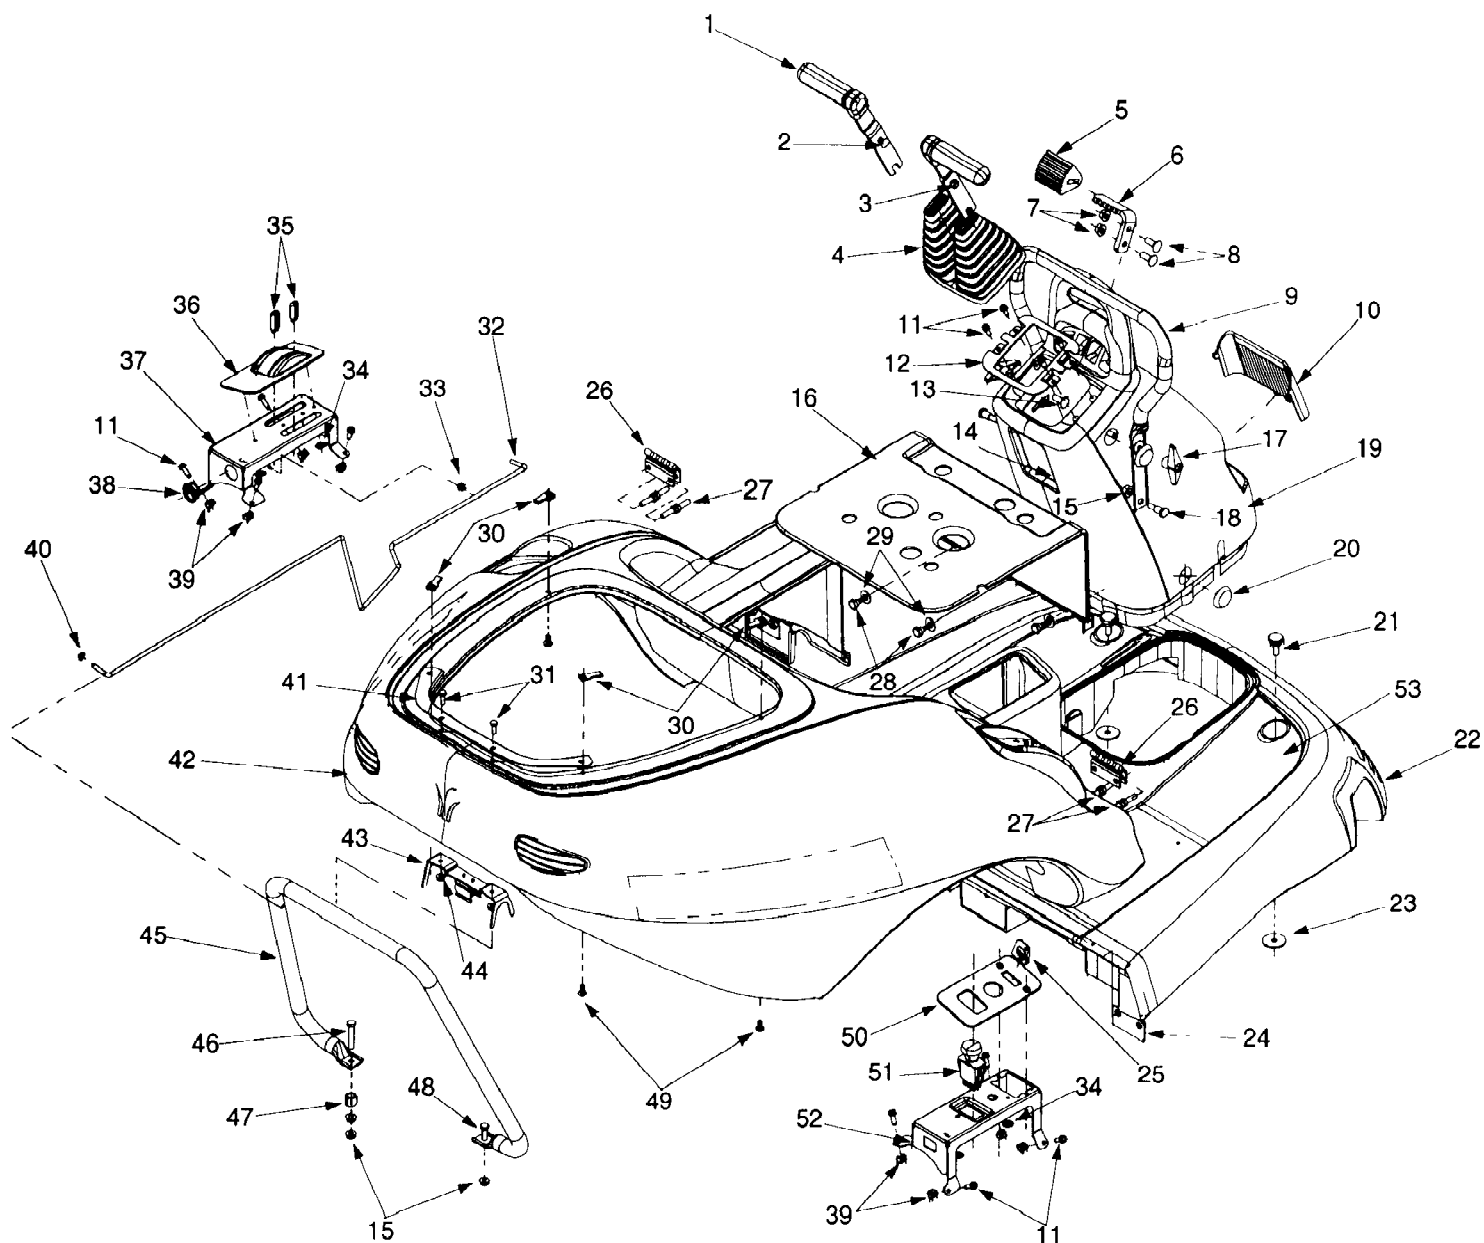



Z48 (1999)  
Body Cover Panels

Page 9 of 39

| Ref # | Part Number | Qty | S/P/F | Description                   |
|-------|-------------|-----|-------|-------------------------------|
| 1     | 731-3263    | 1   | S     | Control Handle                |
| 2     | 710-0451    | 1   | /P    | Carriage Bolt 5/16-18 x .75   |
| 3     | 712-3004A   | 1   | /P    | Flange Lock Nut 5/16-18       |
| 4     | 731-3185    | 1   |       | Control Bellow                |
| 5     | 735-0251    | 1   |       | Foot Pad                      |
| 6     | 703-2807B   | 1   | S     | Foot Pad Mounting Bracket     |
| 7     | 712-0431    | 1   | S     | Flange Lock Nut 3/8-16        |
| 8     | 710-3168    | 1   | /P    | Carriage Bolt 3/8-16          |
| 9     | 749-3081    | 1   |       | Cruise Control Tube           |
| 10    | 731-3128A   | 1   | /P    | Lens                          |
| 11    | 710-0642    | 1   | /P    | Hex Washer Screw 1/4-20 x .75 |
| 12    | 703-2648    | 1   |       | Bellow Retainer Bracket       |
| 13    | 710-0276    | 1   | /P    | Carriage Screw 5/16-18 x 1.0  |
| 14    | 703-3288    | 1   | S     | Control Tube Mounting Bracket |
| 15    | 712-3004A   | 1   | /P    | Flange Lock Nut 5/16-18       |
| 16    | 731-3264    | 1   |       | Seatbase Cover                |
| 17    | 720-0241    | 1   | S     | Wingnut Knob Assembly 5/16-18 |
| 18    | 738-0754    | 1   |       | Shoulder Screw                |
| 19    | 731-3284    | 1   |       | Console                       |
| 20    | 726-0289    | 1   |       | Plug                          |
| 21    | 738-3163A   | 1   | /P    | Shoulder Screw 3/8-16 x .75   |
| 22    | 731-3286    | 1   |       | Body                          |
| 23    | 736-3039    | 1   | S     | Flat Washer .406 ID x 1.5 OD  |
| 24    | 603-0578    | 1   |       | Body Plate Assembly           |
| 25    | 703-1345A   | 1   | S     | Key                           |
| 26    | 703-2928    | 1   |       | Body Hinge                    |
| 27    | 710-0376    | 1   | /P    | Hex Cap Screw 5/16-18 x 1.0   |
| 28    | 738-0296    | 1   | S     | Shoulder Screw                |
| 29    | 736-0226    | 1   | S     | Flat Washer .474 ID x .879 OD |
| 30    | 712-0185    | 1   |       | U-Type Nut 1/4-20             |
| 31    | 710-3015    | 1   | /P    | Hex Cap Screw 1/4-20 x .75    |
| 32    | 747-3303    | 1   |       | Support Rod                   |
| 33    | 732-0830    | 1   | S     | Clip                          |
| 34    | 726-3047    | 1   | S     | Push Nut                      |
| 35    | 720-0302    | 1   |       | Lever Knob                    |
| 36    | 731-3195A   | 1   |       | Control Panel Cover - LH      |
| 37    | 603-0424    | 1   | S     | Control Panel Assembly - LH   |
| 38    | 723-3042    | 1   | /P    | Snap Bushing                  |
| 39    | 712-0453    | 1   |       | Retainer Nut 1/4-20           |
| 40    | 726-0106    | 1   | S     | Cap Nut                       |
| 41    | 703-3078    | 1   | S     | Latch Mounting Plate          |
| 42    | 731-3187    | 1   |       | Rear Body                     |
| 43    | 603-0643    | 1   |       | Clip Spring Bracket Assembly  |
| 44    | 712-3027    | 1   | S     | Lock Nut 1/4-20               |
| 45    | 749-3082    | 1   | S     | Engine Tube Support           |
| 46    | 710-3180    | 1   | /P    | Hex Cap Screw 5/16-18 x 1.75  |
| 47    | 750-3200    | 1   |       | Spacer                        |
| 48    | 710-3078    | 1   |       | Hex Cap Screw 5/16-18 x 1.0   |
| 49    | 710-0946    | 1   | /P    | Screw 1/4-20 x .625           |
| 50    | 731-3196    | 1   | S     | Cover Panel - RH              |
| 51    | 725-3233    | 1   | S     | Electric Switch PTO           |
| 52    | 603-0425    | 1   |       | Control Panel Assembly - RH   |
| 53    | 735-0259    | 1   |       | Floor Pad LH                  |


Z48 (1999)  
Body Cover Panels

Page 10 of 39

| Ref # | Part Number | Qty | S/P/F | Description  |
|-------|-------------|-----|-------|--------------|
|       | 735-0260    | 1   |       | Floor Pad RH |

Z48 (1999)  
Complete Transmission Assembly (L.H.Shown)

Page 11 of 39

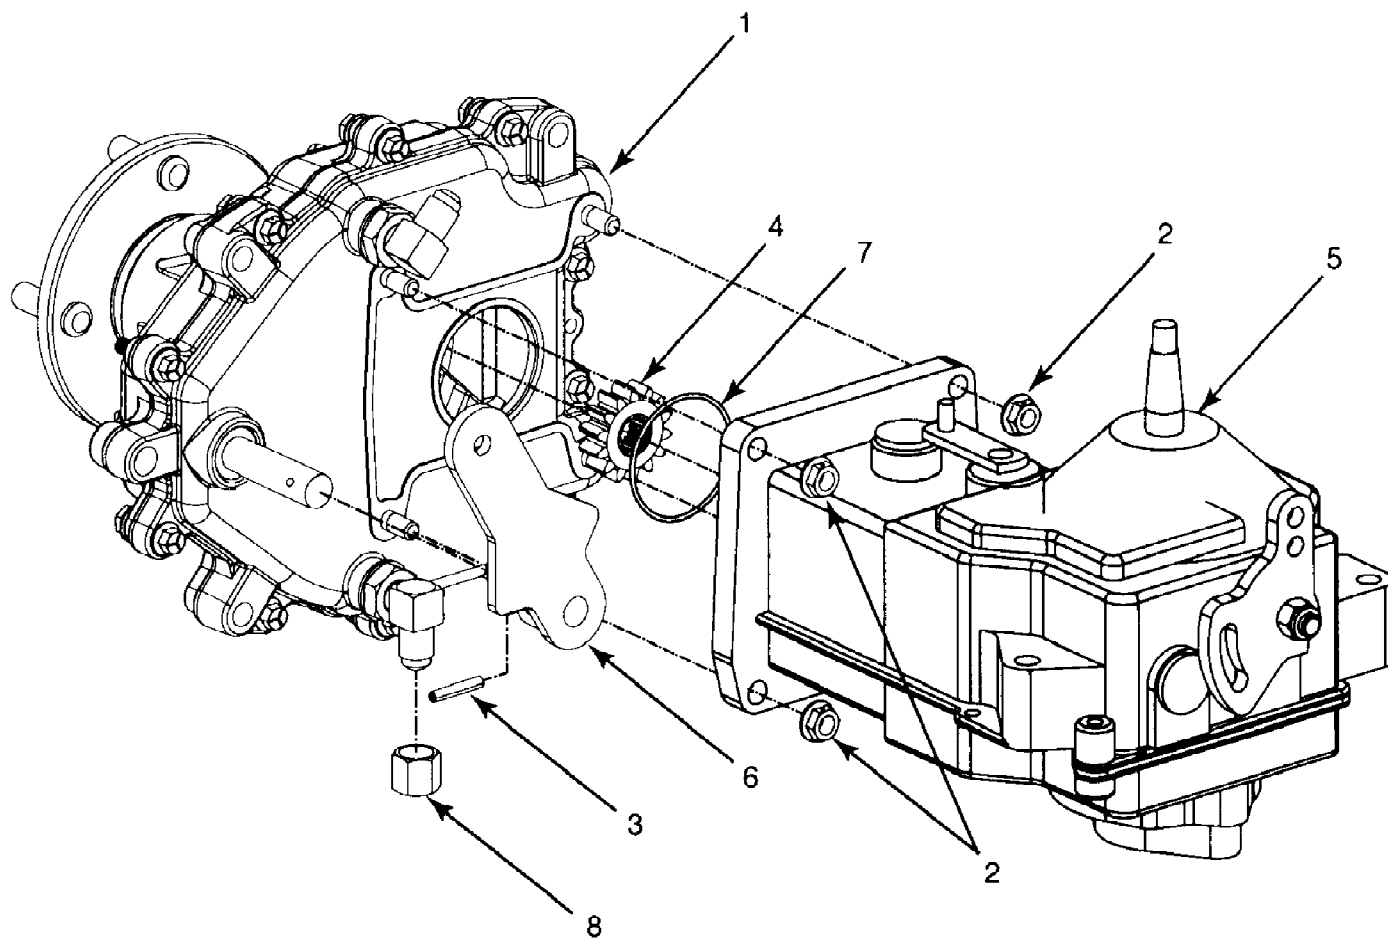

Z48 (1999)

Page 12 of 39


Complete Transmission Assembly (L.H.Shown)

| Ref # | Part Number | Qty | S/P/F | Description                 |
|-------|-------------|-----|-------|-----------------------------|
| 1     | 618-3110A   | 1   | S     | Drive Ass'y Complete        |
| 2     | 712-3004A   | 1   | /P    | Hex Flange Lock Nut 5/16-18 |
| 3     | 715-0136    | 1   | S     | Spirol Pin 3/16 x 1.25      |
| 4     | 717-3396    | 1   | S     | Spur Gear 14T               |
| 5     | 717-3455    | 1   | S     | Hydro Transmission          |
| 6     | 718-3053    | 1   |       | Parking Brake Lever         |
| 7     | 721-0343    | 1   |       | O-Ring 2.0 Dia.             |
| 8     | 727-3125    | 1   | S     | Cap Nut 3/8                 |

Z48 (1999)

Drive Controls And Support Tower

Page 13 of 39

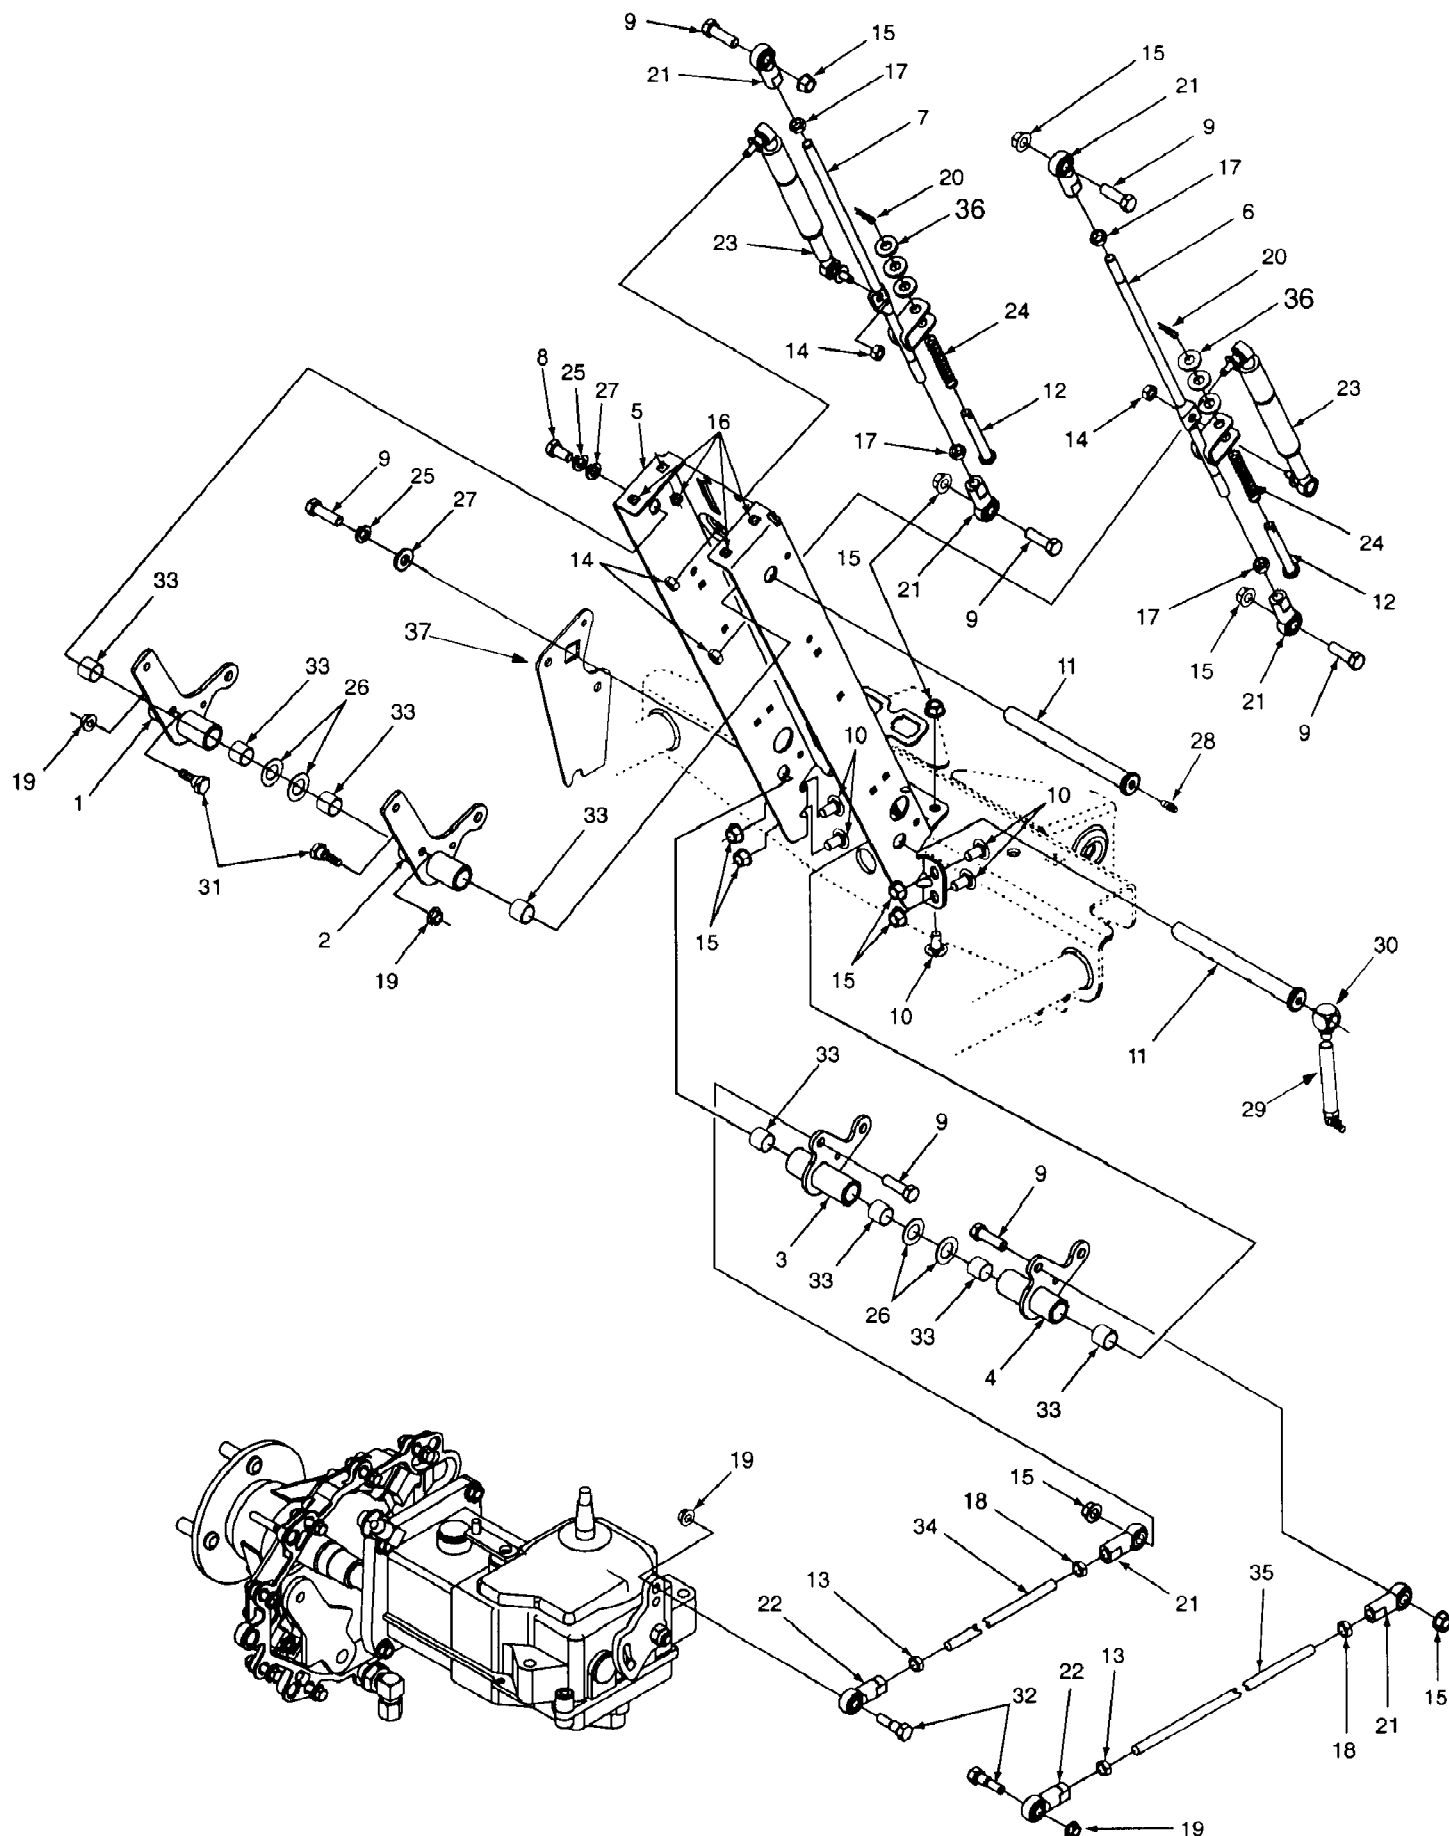

Z48 (1999)


Page 14 of 39

## Drive Controls And Support Tower

| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 1     | 603-0340    | 1   | S     | Bellcrank Ass'y Upper LH        |
| 2     | 603-0341    | 1   | S     | Bellcrank Ass'y Upper RH        |
| 3     | 603-0342    | 1   | S     | Bellcrank Ass'y Lower LH        |
| 4     | 603-0343    | 1   | S     | Bellcrank Ass'y Lower RH        |
| 5     | 603-0647    | 1   | S     | Support Ass'y Tower             |
| 6     | 603-0410    | 1   |       | Rod Ass'y Control RH            |
| 7     | 603-0411    | 1   |       | Rod Ass'y Control LH            |
| 8     | 710-0216    | 1   | /P    | Hex Cap Screw 3/8-16 x .75      |
| 9     | 710-3005    | 1   | /P    | Hex Cap Screw 3/8-16 x 1.25     |
| 10    | 710-3178    | 1   | /P    | Carriage Bolt 3/8-16 x .75      |
| 11    | 711-1111    | 1   |       | Control Shaft                   |
| 12    | 711-1124    | 1   |       | Pin                             |
| 13    | 712-0312    | 1   | S     | Hex Jam Nut LH 3/8-24           |
| 14    | 712-0365    | 1   |       | Hex Center Lock Nut             |
| 15    | 712-0431    | 1   | S     | Hex Flange Lock Nut 3/8-16      |
| 16    | 712-0453    | 1   |       | Retainer 1/4-20                 |
| 17    | 712-0711    | 1   | /P    | Hex Jam Nut 3/8-24              |
| 18    | 712-3001    | 1   | S     | Hex Jam Nut 3/8-24              |
| 19    | 712-3004A   | 1   | /P    | Hex Flange Lock Nut 5/16-18     |
| 20    | 714-0104    | 1   | S     | Cotter Pin                      |
| 21    | 723-0420    | 1   | S     | Spherical Rod End RH 3/8-24     |
| 22    | 723-0421    | 1   | S     | Spherical Rod End LH 3/8-24     |
| 23    | 727-3113    | 1   |       | Damper Cylinder                 |
| 24    | 732-3084    | 1   |       | Spring Compression              |
| 25    | 736-0169    | 1   | S     | Lock Washer 3/8                 |
| 26    | 736-0539    | 1   |       | Thrust Washer .625 ID x 1.12 OD |
| 27    | 736-3004    | 1   | S     | Flat Washer .406 ID x .875 OD   |
| 28    | 737-0280    | 1   | S     | Grease Fitting                  |
| 29    | 737-3072    | 1   |       | Grease Fitting w/Tube           |
| 30    | 737-3073    | 1   |       | Adapter 1/4-20                  |
| 31    | 738-0296    | 1   | S     | Shoulder Bolt .437 Dia. x .268  |
| 32    | 738-3153    | 1   |       | Shoulder Bolt                   |
| 33    | 741-3063    | 1   |       | Sleeve Bearing                  |
| 34    | 747-3281    | 1   |       | Control Rod LH 31-5/8           |
| 35    | 747-3282    | 1   |       | Control Rod RH 35-3/8           |
| 36    | 736-0300    | 1   | S     | Flat Washer .406 ID x .87 OD    |
| 37    | 703-3405    | 1   |       | Support Plate                   |

Z48 (1999)  
Drive Wheel

Page 15 of 39

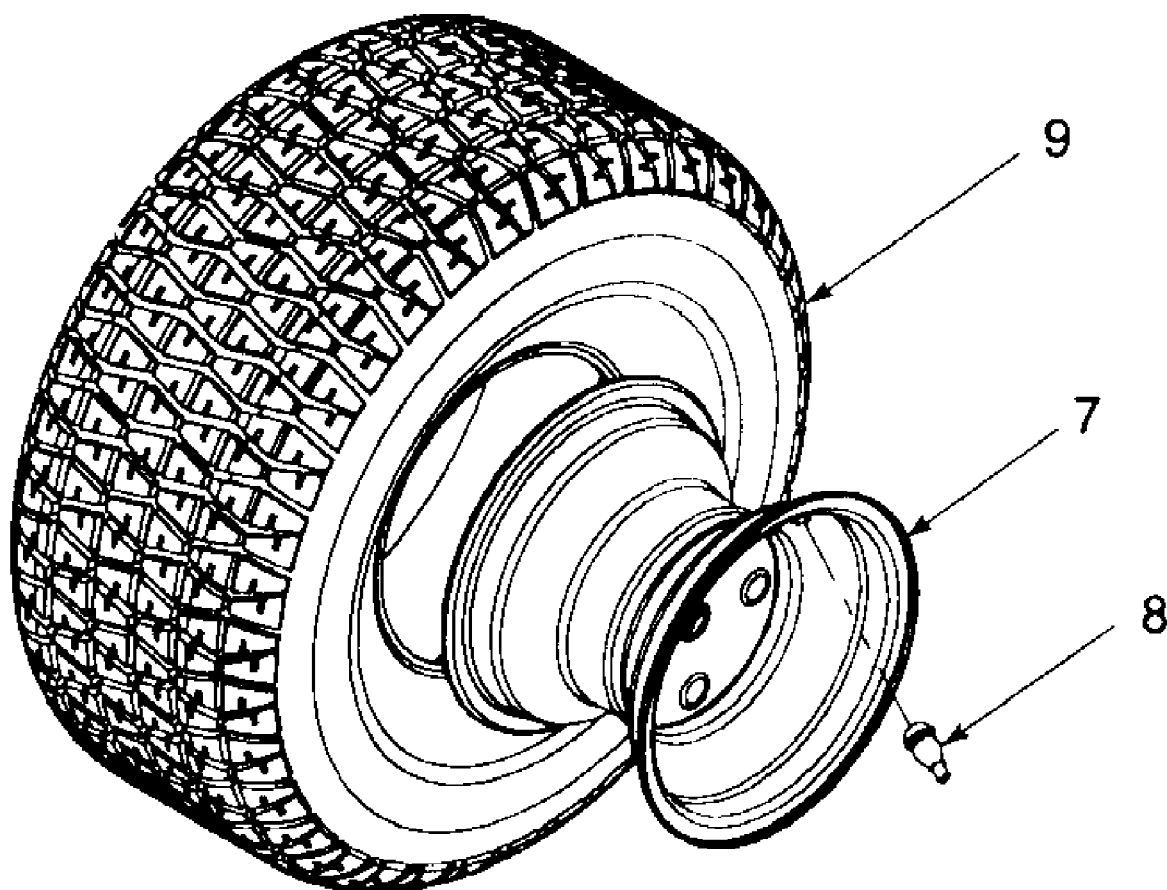

Z48 (1999)  
Drive Wheel


Page 16 of 39

| Ref # | Part Number | Qty | S/P/F | Description           |
|-------|-------------|-----|-------|-----------------------|
| 7     | 634-3030    | 1   | S     | Rim Ass'y 8.0 x 6.19  |
| 8     | 734-0255    | 1   | S     | Tubeless Air Valve    |
| 9     | 734-3160    | 1   | S     | Tire 20.0 x 9.0 x 8.0 |



Z48 (1999)  
Engine Mounting, Muffler, Controls And PTO Clutch

Page 17 of 39

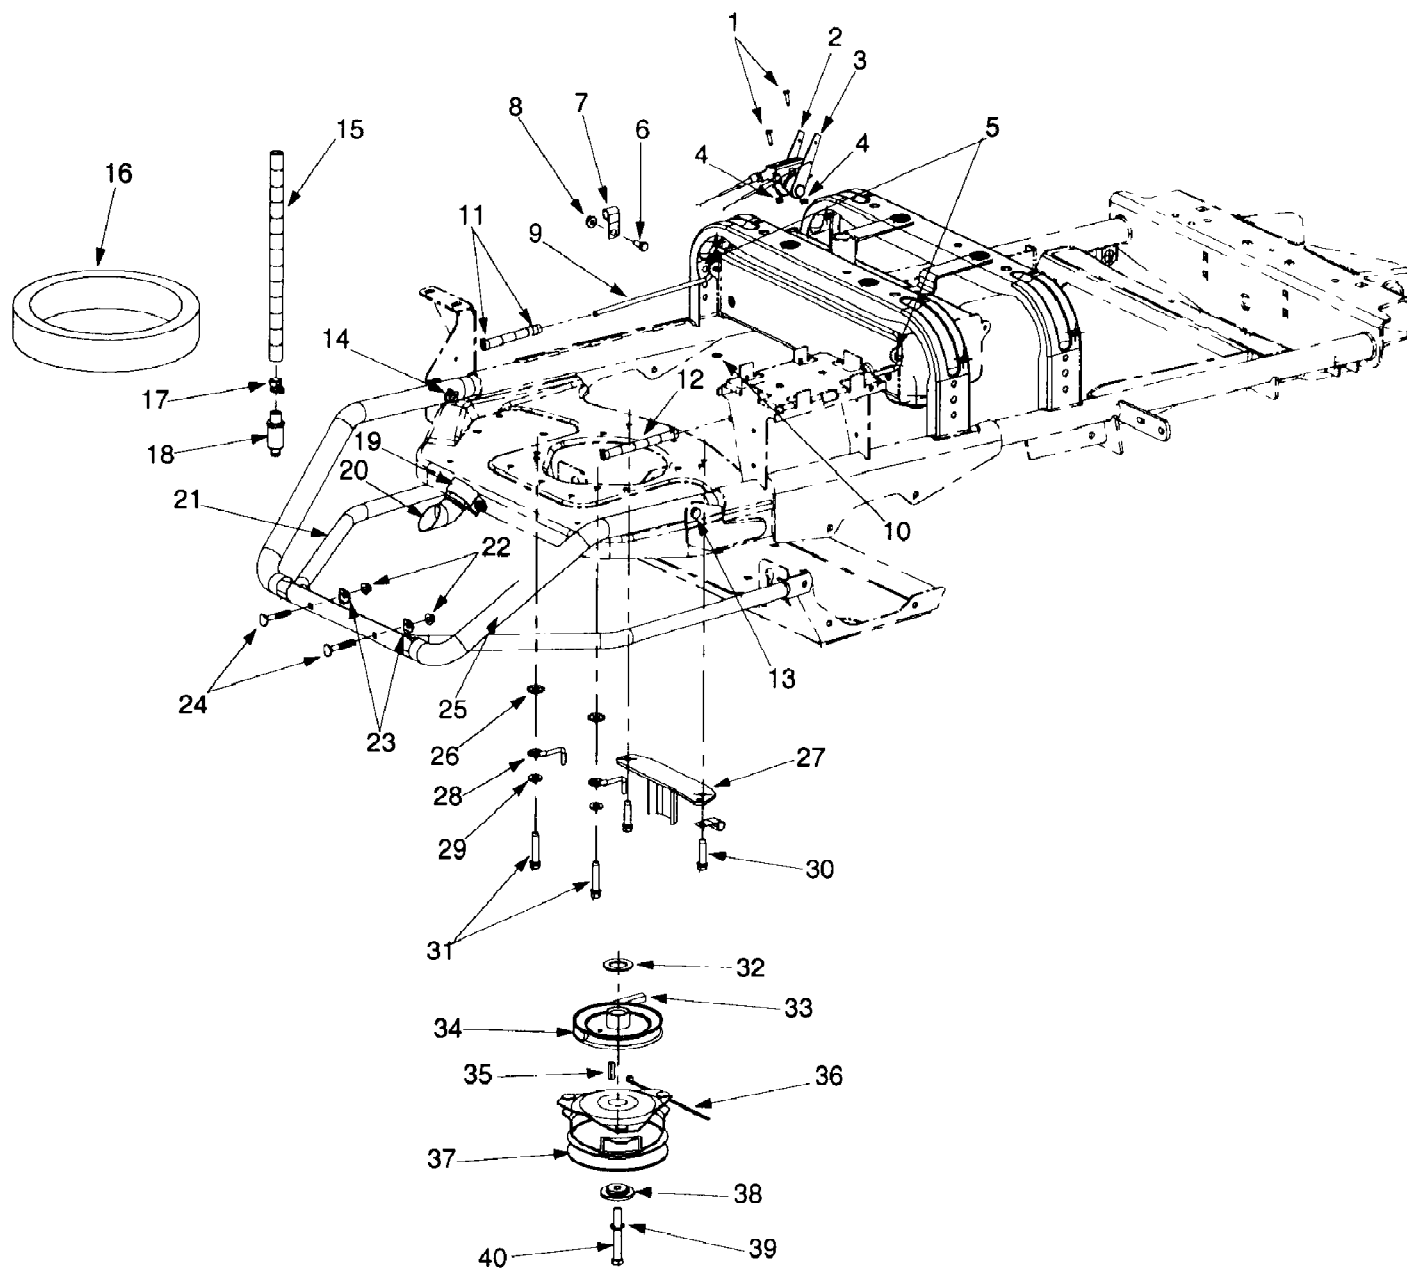

Z48 (1999)


Page 18 of 39

Engine Mounting, Muffler, Controls And PTO Clutch

| Ref # | Part Number | Qty | S/P/F | Description                      |
|-------|-------------|-----|-------|----------------------------------|
| 1     | 710-3009    | 1   | /P    | Screw #10-24 x .750              |
| 2     | 746-3070    | 1   |       | Throttle Control Cable 40.5"     |
| 3     | 746-3066    | 1   |       | Choke Control Cable 38.0"        |
| 4     | 712-0161    | 1   | /P    | Lock Nut #10-24                  |
| 5     | 725-1711    | 1   |       | Retainer Clip                    |
| 6     | 710-3008    | 1   | /P    | Hex Cap Screw 5/16-18 x .75      |
| 7     | 726-3008    | 1   | /P    | Cable Clip Heat Shield           |
| 8     | 712-3004A   | 1   | /P    | Hex Lock Nut 5/16-18             |
| 9     | 749-3048    | 1   |       | Fuel Line                        |
| 10    | 736-0607    | 1   | /P    | Lock Washer 5/16                 |
| 11    | 726-0205    | 1   | /P    | Hose Clamp                       |
| 12    | 751-0535    | 1   |       | Fuel Line Hose                   |
| 13    | 710-3144    | 1   | /P    | Hex Cap Screw 3/8-16 x 2.0       |
| 14    | 712-0431    | 1   | S     | Flange Lock Nut 3/8-16           |
| 15    | 751-3141    | 1   | S     | Oil Drain Hose                   |
| 16    | 723-0454    | 1   |       | Gasket Foam Seal Ring            |
| 17    | 751-3142    | 1   |       | Oil Drain Cap                    |
| 18    | 751-3140    | 1   | S     | Oil Drain                        |
| 19    | 751-3147    | 1   |       | Muffler Exhaust Clamp            |
| 20    | 749-3083    | 1   |       | Exhaust                          |
| 21    | 749-3061    | 1   |       | Lower Bumper Tube                |
| 22    | 712-3004A   | 1   | /P    | Hex Flange Lock Nut 5/16-18      |
| 23    | 736-0451    | 1   | S     | Shoulder Washer .320 ID x .93 OD |
| 24    | 710-1174    | 1   | /P    | Carriage Bolt 5/16-18 x 2.0      |
| 25    | 749-3062    | 1   |       | Upper Bumper Tube                |
| 26    | 736-0258    | 1   | /P    | Flat Washer .385 ID x 1.0 OD     |
| 27    | 603-0317    | 1   | S     | Clutch Retainer Ass'y            |
| 28    | 747-3362    | 1   |       | Rear Belt Retainer Rod           |
| 29    | 736-3010    | 1   | /P    | Flat Washer .407 I D x .812 OD   |
| 30    | 710-1007    | 1   | /P    | Hex Washer Screw 3/8-16 x 1.5    |
| 31    | 710-1008    | 1   |       | Hex Washer Screw 3/8-16 x 1.875  |
| 32    | 736-0250    | 1   | /P    | Flat Washer 1.0 ID x 1.75 OD     |
| 33    | 754-3076    | 1   | S     | V-Belt                           |
| 34    | 756-3060    | 1   |       | Drive Pulley                     |
| 35    | 714-0128    | 1   | /P    | Key                              |
| 36    | 725-0157    | 1   | /P    | Cable Tie                        |
| 37    | 717-3389    | 1   | S     | Electric PTO Clutch              |
| 38    | 750-3106    | 1   |       | Spacer Clutch                    |
| 39    | 736-0171    | 1   | S     | Lock Washer 7/16                 |
| 40    | 710-3157    | 1   | S     | Hex Cap Screw 7/16-20 x 3.25     |

Z48 (1999)  
Final Drive Assembly

Page 19 of 39

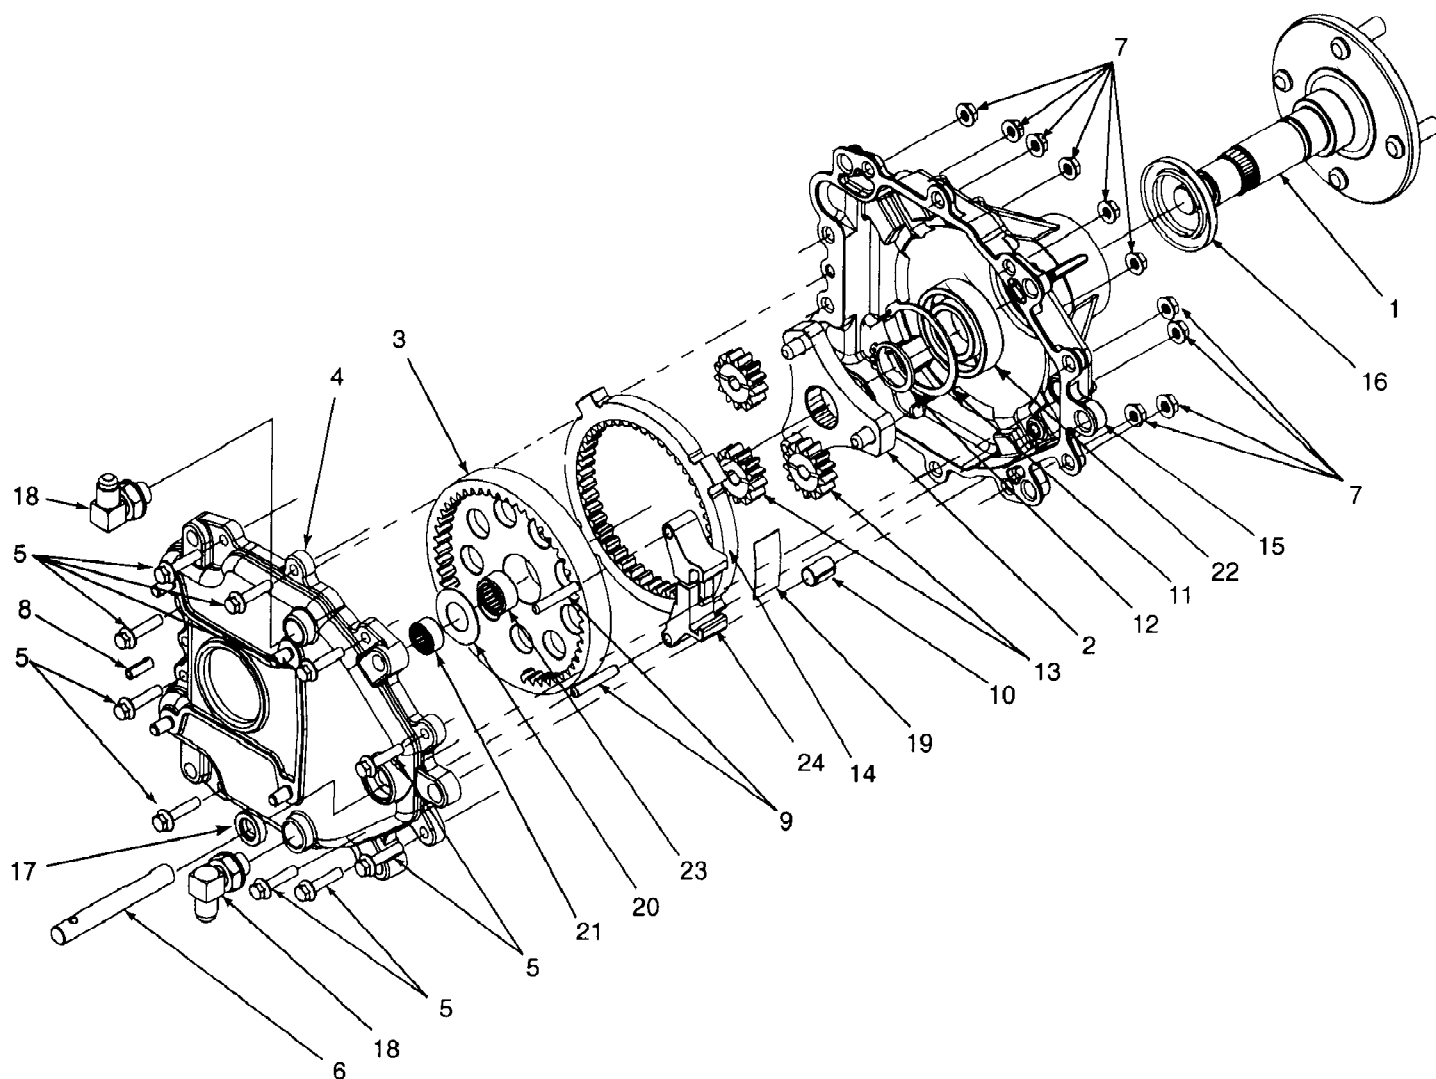


Z48 (1999)  
Final Drive Assembly

Page 20 of 39

| Ref # | Part Number | Qty | S/P/F | Description                       |
|-------|-------------|-----|-------|-----------------------------------|
|       | 618-3110A   | 1   | S     | Drive Ass'y Complete              |
| 1     | 611-3012    | 1   | S     | Axle Assembly                     |
|       | 710-0852    | 1   | /P    | Ribbed Neck Stud                  |
| 2     | 618-3106    | 1   | S     | Carrier Assembly, Output          |
| 3     | 618-3107    | 1   | S     | Gear Assembly, 51T Internal & 20T |
| 4     | 618-3109    | 1   | S     | Housing Ass'y                     |
| 5     | 710-1342    | 1   |       | Hex Washer Screw 1/4-20 x 1-1/8   |
| 6     | 711-1048    | 1   |       | Brake Shaft                       |
| 7     | 712-3027    | 1   | S     | Hex Flange Lock Nut 1/4-20        |
| 8     | 715-0156    | 1   |       | Roll Pin                          |
| 9     | 715-0219    | 1   |       | Dowel Pin                         |
| 10    | 715-3045    | 1   | S     | Bushing                           |
| 11    | 716-3015    | 1   |       | Inverted Retaining Ring           |
| 12    | 716-3018    | 1   |       | Snap Ring                         |
| 13    | 717-3395    | 1   |       | Spur Gear 13T                     |
| 14    | 717-3397    | 1   |       | Ring Gear 46T                     |
| 15    | 719-3114    | 1   | S     | Axle Outer Housing                |
| 16    | 721-0381    | 1   | S     | Oil Seal                          |
| 17    | 721-0393    | 1   |       | Oil Seal                          |
| 18    | 727-3124    | 1   | S     | Elbow Fitting                     |
| 19    | 732-0752    | 1   |       | Brake Shoe Spring                 |
| 20    | 736-0351    | 1   | S     | Shim Washer .76 x 1.5 x .030      |
|       | 736-0492    | 1   | S     | Shim Washer .76 x 1.5 x .010      |
|       | 736-0493    | 1   | S     | Shim Washer .76 x 1.5 x .020      |
| 21    | 741-0665    | 1   | /P    | Needle Bearing                    |
| 22    | 741-3033A   | 1   | S     | Ball Bearing                      |
| 23    | 741-3080    | 1   |       | Needle Bearing                    |
| 24    | 761-3049    | 1   |       | Shoe Brake                        |

Z48 (1999)  
Frame And Attachments

Page 21 of 39

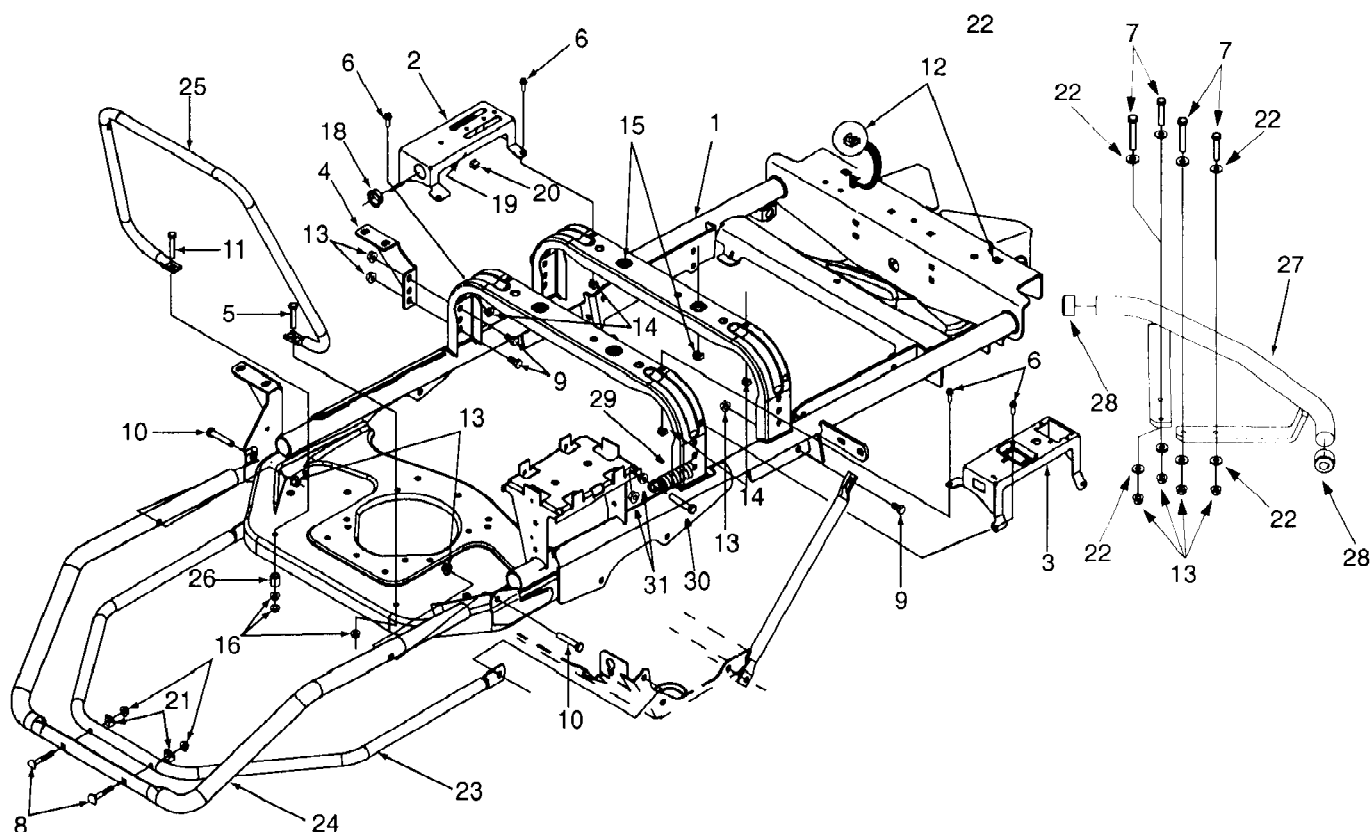


Z48 (1999)  
Frame And Attachments

Page 22 of 39

| Ref # | Part Number | Qty | S/P/F | Description                         |
|-------|-------------|-----|-------|-------------------------------------|
| 1     | 603-0258B   | 1   |       | Frame                               |
| 2     | 603-0424    | 1   | S     | Control Panel LH                    |
| 3     | 603-0425    | 1   |       | Control Panel RH                    |
| 4     | 703-2783    | 1   | S     | Fuel Tank Mounting Bracket          |
| 5     | 710-0376    | 1   | /P    | Hex Cap Screw 5/16-18 x 1.0         |
| 6     | 710-0642    | 1   | /P    | Hex Washer Screw 1/4-20 x .625      |
| 7     | 710-0520    | 1   | /P    | Hex Cap Screw 3/8-16 x 1.5          |
| 8     | 710-1174    | 1   | /P    | Curved Carriage Screw 5/16-18 x 2.0 |
| 9     | 710-0216    | 1   | /P    | Hex Cap Screw 3/8-16 x 3/4          |
| 10    | 710-0859    | 1   | /P    | Hex Cap Screw 3/8-16 x 2.5          |
| 11    | 710-3180    | 1   | /P    | Hex Cap Screw 5/16-18 x 1.75        |
| 12    | 712-0251    | 1   |       | Retainer Nut 3/8-16                 |
| 13    | 712-0431    | 1   | S     | Hex Flange Lock Nut 3/8-16          |
| 14    | 712-0453    | 1   |       | Retainer Nut 1/4-20                 |
| 15    | 712-0455    | 1   |       | Retainer Nut 3/8-16                 |
| 16    | 712-3004A   | 1   | /P    | Hex Flange Lock Nut 5/16-18         |
| 18    | 723-3042    | 1   | /P    | Snap Bushing                        |
| 19    | 728-0117    | 1   |       | Pop Rivet                           |
| 20    | 732-0830    | 1   | S     | Spring Clip                         |
| 21    | 736-0451    | 1   | S     | Saddle Washer                       |
| 22    | 736-3004    | 1   | S     | Flat Washer .406 ID x .875 OD       |
| 23    | 749-3061    | 1   |       | Lower Tube Bumper                   |
| 24    | 749-3062    | 1   |       | Upper Tube Bumper                   |
| 25    | 749-3082    | 1   | S     | Engine Support Tube                 |
| 26    | 750-3200    | 1   |       | Spacer                              |
| 27    | 603-0620    | 1   |       | Front Bumper                        |
| 28    | 726-0298    | 1   |       | End Cap                             |
| 29    |             | 1   |       | UNKNOWN                             |
| 30    |             | 1   |       | UNKNOWN                             |
| 31    |             | 1   |       | UNKNOWN                             |

Z48 (1999)  
Front Axle And Tire Assembly

Page 23 of 39

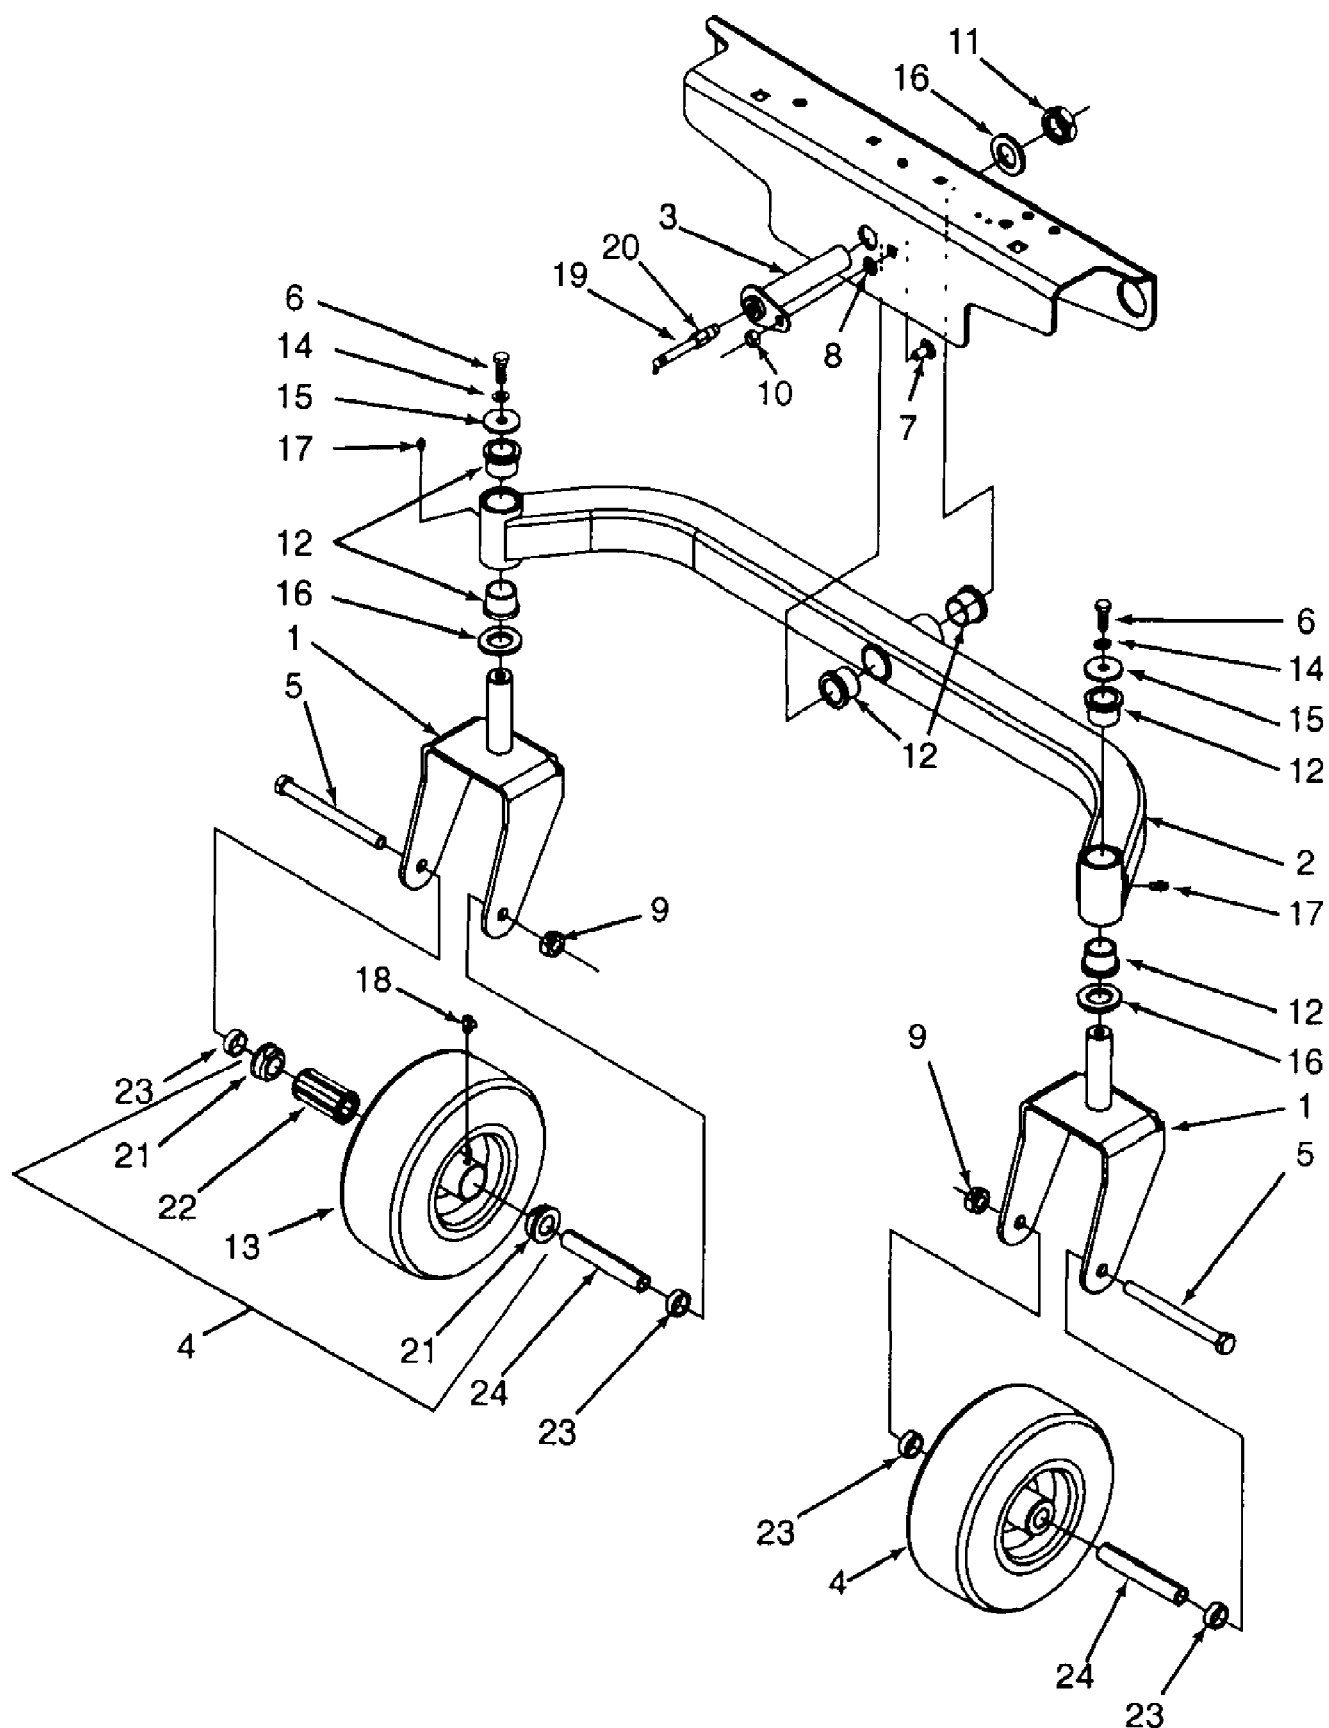

Z48 (1999)

Page 24 of 39


## Front Axle And Tire Assembly

| Ref # | Part Number | Qty | S/P/F | Description                      |
|-------|-------------|-----|-------|----------------------------------|
| 1     | 603-0363    | 1   |       | Bracket, Castor Wheel            |
| 2     | 603-0382    | 1   | S     | Axle Ass'y Front Inc. 12 & 17    |
| 3     | 603-0389A   | 1   |       | Pin Ass'y, Pivot                 |
| 4     | 634-3163    | 1   | /P    | Wheel Comp 11.0 x 4.0 x 5.0      |
| 5     | 710-0506    | 1   | /P    | Screw, Hex Cap, 1/2-20 x 5.5     |
| 6     | 710-0514    | 1   | /P    | Screw, Hex Cap, 3/8-16 x 1.0 GR5 |
| 7     | 710-3178    | 1   | /P    | Bolt, Carriage, 3/8-16 x .75     |
| 8     | 712-0229    | 1   |       | Push Nut, Retainer, 3/8 ID       |
| 9     | 712-0239    | 1   | S     | Nut, Hex Center Lock, 1/2-20     |
| 10    | 712-0431    | 1   | S     | Nut, Hex Flange Lock, 3/8-16     |
| 11    | 712-3075    | 1   | /P    | Nut, Hex Lock, 1.0-14            |
| 12    | 731-0374    | 1   | S     | Bearing, Flange, 1.0 ID          |
| 13    | 734-3179    | 1   |       | Tire, Urethane, Only             |
| 14    | 736-0169    | 1   | S     | Washer, Lock 3/8                 |
| 15    | 736-0227    | 1   | S     | Washer, Flat, .39 x 1.5 x .134   |
| 16    | 736-0274    | 1   | S     | Washer, Special Flat             |
| 17    | 737-0280    | 1   | S     | Fitting, Grease                  |
| 18    | 737-3004    | 1   | /P    | Fitting, Grease, 90° Tap 1/4-28  |
| 19    | 737-3072    | 1   |       | Fitting, Grease, 65° w/Extension |
| 20    | 737-3090    | 1   | S     | Adapter, 1/8 NPTF x 1/8 NPTF     |
| 21    | 741-3069    | 1   |       | Bearing, Flange                  |
| 22    | 741-3070    | 1   | S     | Bearing, Roller                  |
| 23    | 750-0456    | 1   | S     | Spacer, .79 ID x .347 Lg         |
| 24    | 750-3197    | 1   | S     | Spacer, Wheel                    |



Z48 (1999)  
Fuel Tank

Page 25 of 39

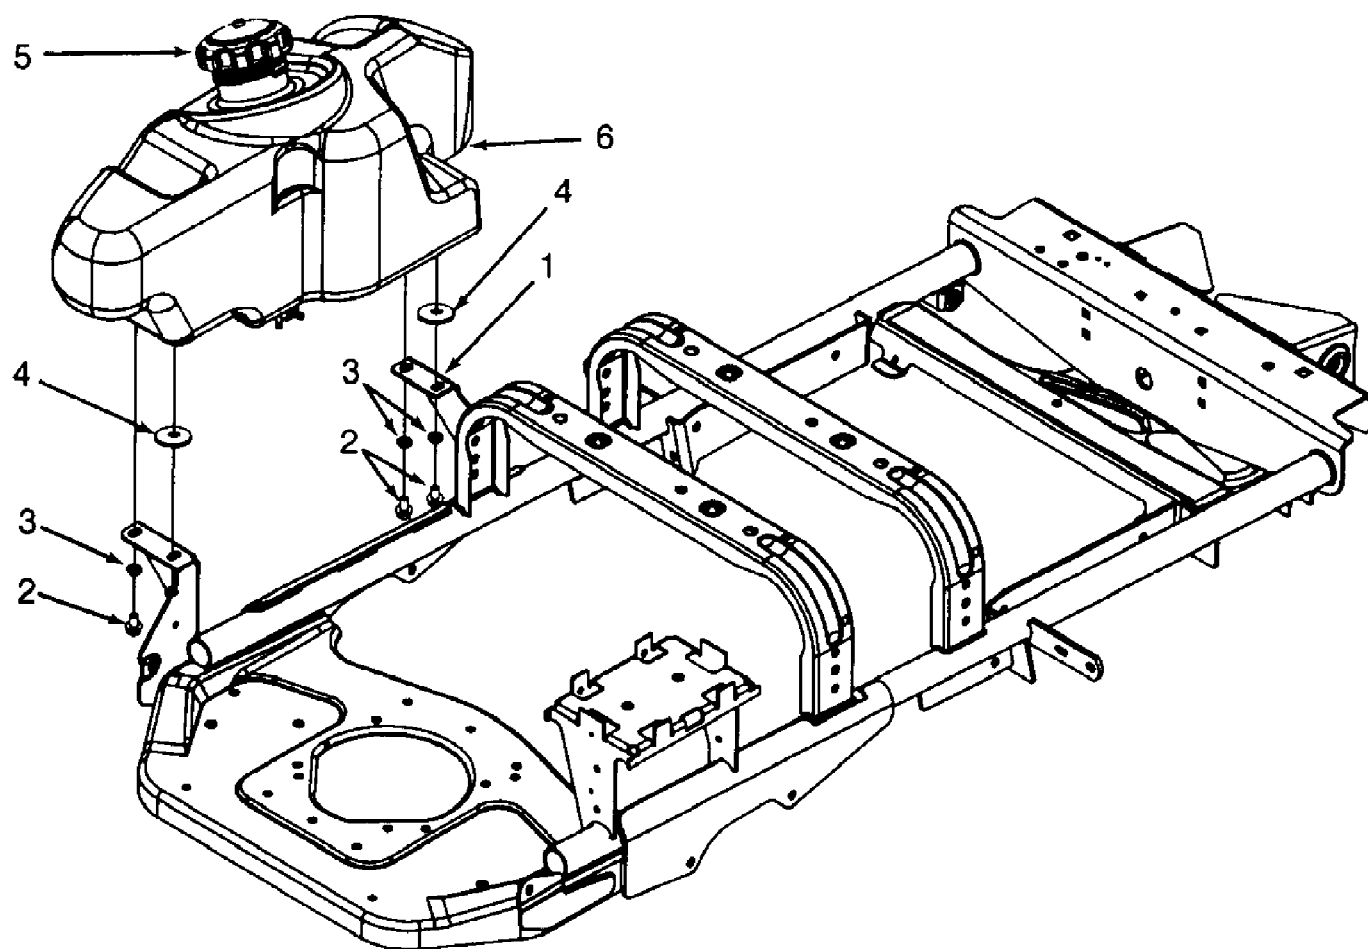


Z48 (1999)  
Fuel Tank

Page 26 of 39

| Ref # | Part Number | Qty | S/P/F | Description                  |
|-------|-------------|-----|-------|------------------------------|
| 1     | 703-2783    | 1   | S     | Fuel Tank Mounting Bracket   |
| 2     | 710-0870    | 1   | /P    | Hex Cap Screw 3/8-16 x .62   |
| 3     | 736-0169    | 1   | S     | Lock Washer 3/8              |
| 4     | 736-0227    | 1   | S     | Flat Washer .390 ID x 1.5 OD |
| 5     | 751-3124B   | 1   | S     | Fuel Cap                     |
| 6     | 751-3143    | 1   |       | Fuel Tank                    |

Z48 (1999)  
Hydraulic Drive, Lines And Filters

Page 27 of 39

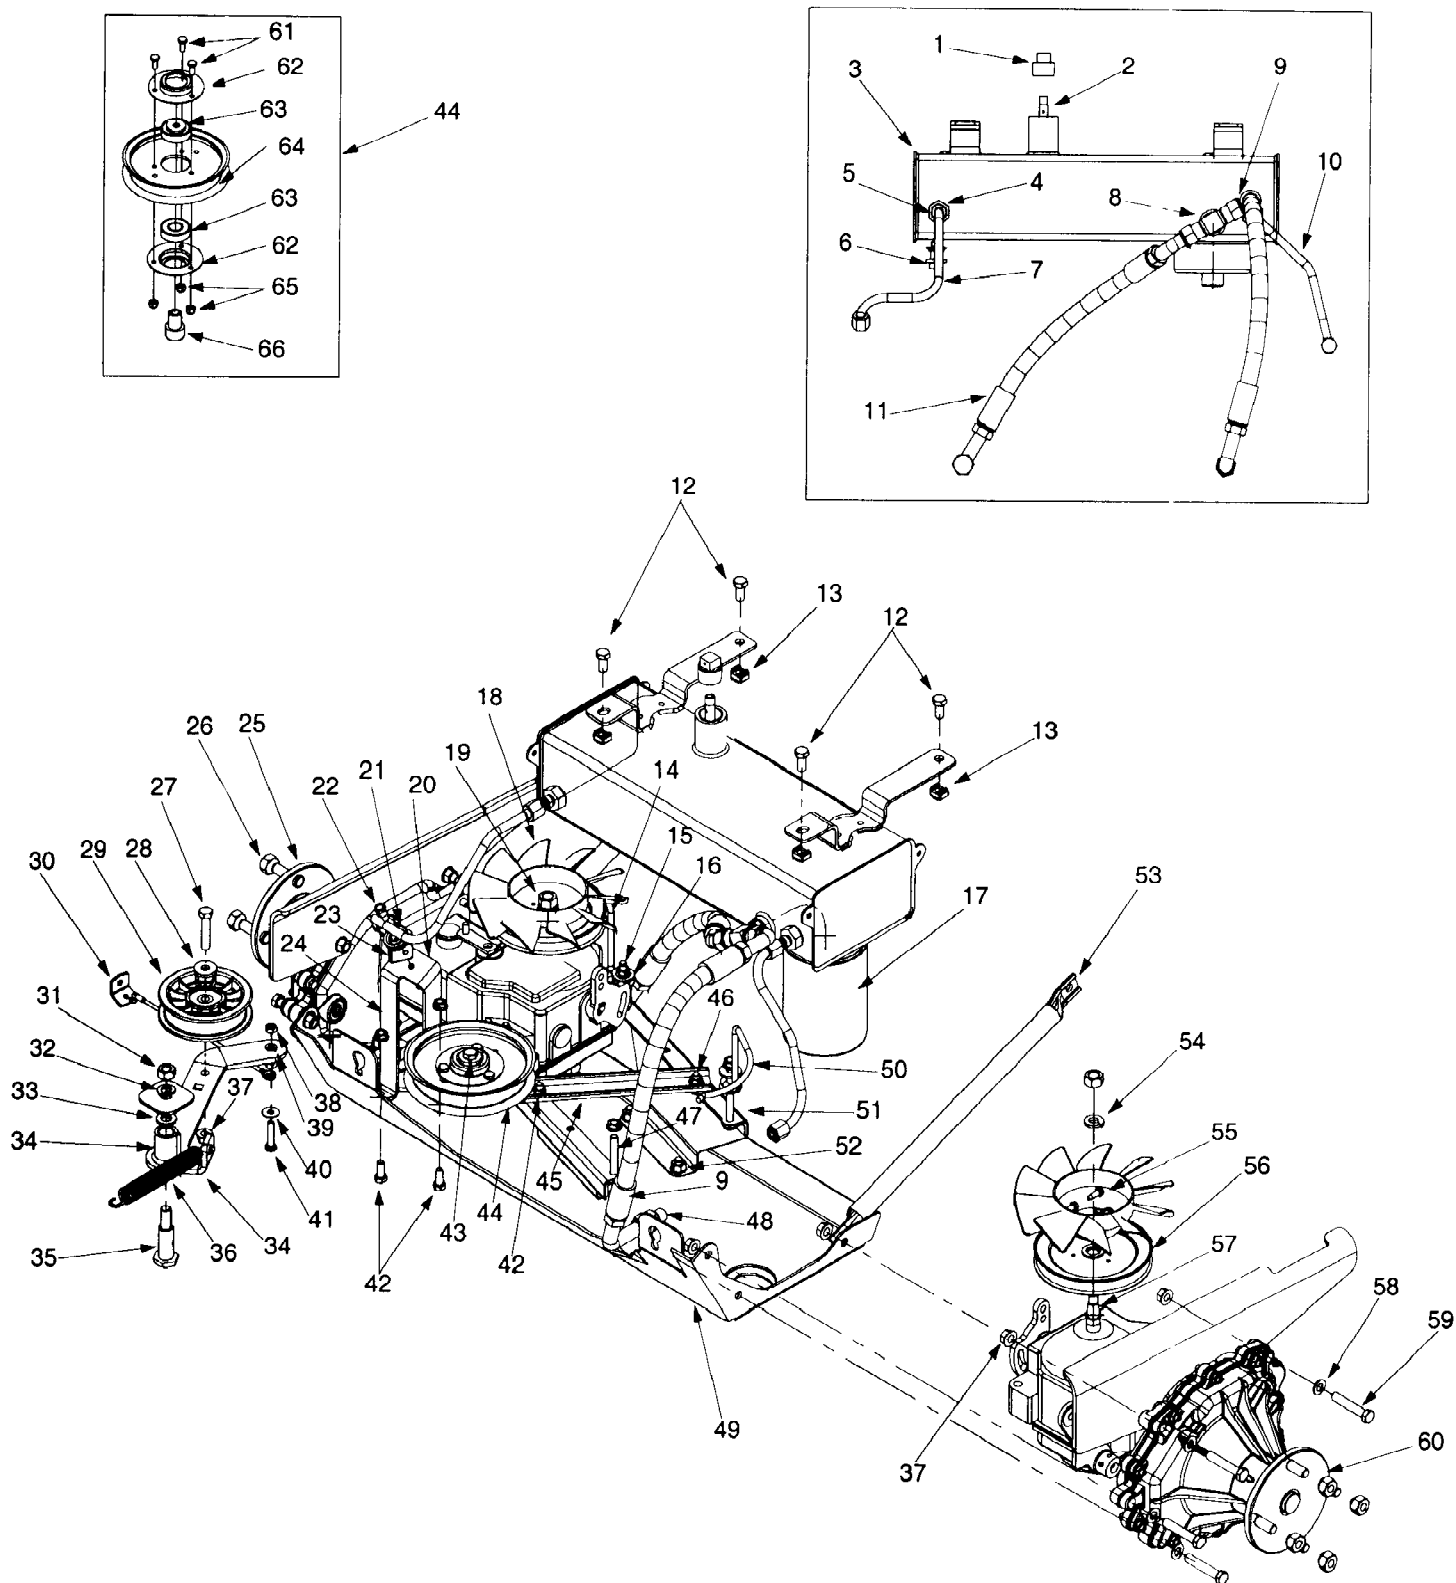

Z48 (1999)

Page 28 of 39

Hydraulic Drive, Lines And Filters

| Ref # | Part Number | Qty | S/P/F | Description                       |
|-------|-------------|-----|-------|-----------------------------------|
| 1     | 737-3069    | 1   |       | Pipe Plug                         |
| 2     | 737-3070A   | 1   |       | Pipe Dipstick                     |
| 3     | 603-0639    | 1   |       | Hydraulic Tank Assembly           |
| 4     | 727-3116    | 1   | S     | Connection Fitting                |
| 5     | 721-0223    | 1   | S     | Seal                              |
| 6     | 738-0940    | 1   | /P    | Drain Plug                        |
| 7     | 727-3120    | 1   |       | Inlet Tube LH                     |
| 8     | 727-3155    | 1   |       | Tee Fitting                       |
| 9     | 727-3154    | 1   |       | Outlet Hose RH                    |
| 10    | 727-3121    | 1   |       | Inlet Tube RH                     |
| 11    | 727-3153    | 1   |       | Outlet Hose LH                    |
| 12    | 710-0216    | 1   | /P    | Hex Cap Screw 3/8-16 x .75        |
| 13    | 712-0455    | 1   |       | Retainer Nut 3/8-16               |
| 14    | 747-3360    | 1   | S     | Belt Retainer Rod RH              |
| 15    | 710-0378    | 1   | /P    | Hex Cap Screw 5/16-18 x 2.5       |
| 16    | 736-3089    | 1   | /P    | Flat Washer 5/16                  |
| 17    | 723-3071    | 1   |       | Filter Element                    |
| 18    | 731-1449A   | 1   | S     | Fan Blade                         |
| 19    | 712-0333    | 1   | S     | Hex Nut 1/2-20                    |
| 20    | 703-3168    | 1   |       | Mounting Pulley Bracket           |
| 21    | 756-0625    | 1   |       | Roller Cable                      |
| 22    | 738-0924    | 1   | S     | Hex Shoulder Screw 1/4-28 x .375  |
| 23    | 703-3169    | 1   |       | Retainer Cable Bracket            |
| 24    | 712-0117    | 1   | S     | Lock Nut 1/4-28                   |
| 25    | 618-3165    | 1   |       | Complete Transmission Assembly LH |
| 26    | 712-3050    | 1   | /P    | Lug Nut                           |
| 27    | 710-0347    | 1   | /P    | Hex Cap Screw 3/8-16 x 1.75       |
| 28    | 736-0258    | 1   | /P    | Flat Washer .385 ID x 1.0 OD      |
| 29    | 756-0627    | 1   | S     | Flat Idler Pulley 3.5 OD          |
| 30    | 703-3174    | 1   |       | Mounting Bracket Cable            |
| 31    | 712-3019    | 1   | S     | Hex Nut 7/16-14                   |
| 32    | 736-0171    | 1   | S     | Lock Washer 7/16                  |
| 33    | 736-3015    | 1   | S     | Flat Washer .469 ID x .875 OD     |
| 34    | 603-0377A   | 1   | S     | Idler Arm Assembly                |
| 35    | 603-0102    | 1   |       | Shoulder Screw                    |
| 36    | 732-0478    | 1   | S     | Extension Spring 6.12 Lg          |
| 37    | 712-0431    | 1   | S     | Flange Lock Nut 3/8-16            |
| 38    | 712-0138    | 1   | S     | Hex Nut 1/4-28                    |
| 39    | 736-0329    | 1   | S     | Lock Washer 1/4                   |
| 40    | 736-0342    | 1   |       | Flat Washer .283 ID x .75 OD      |
| 41    | 710-0428    | 1   |       | Hex Cap Screw 1/4-28 x 1.25       |
| 42    | 710-3008    | 1   | /P    | Hex Cap Screw 5/16-18 x .75       |
| 43    | 710-3011    | 1   | /P    | Hex Cap Screw 3/8-16 x 2.25       |
| 44    | 603-0362    | 1   | S     | Idler Pulley Assembly 5.0"        |
| 45    | 703-2888    | 1   | S     | idler Bracket                     |
| 46    | 712-3004A   | 1   | /P    | Flange Lock Nut 5/16-18           |
| 47    | 710-3103    | 1   | /P    | Hex Cap Screw 5/16-18 x 2.0       |
| 48    | 727-3100    | 1   | S     | Connection Fitting 1/2 x 3/8      |
| 49    | 603-0358B   | 1   | S     | Skid Plate Assembly               |
| 50    | 747-3361    | 1   |       | Belt Rod LH                       |
| 51    | 603-0450    | 1   | S     | Support Pump Assembly             |
| 52    | 710-3178    | 1   | /P    | Carriage Bolt 3/8-16 x .75        |
| 53    | 749-3040    | 1   |       | Frame Strut                       |

Z48 (1999)


Page 29 of 39

Hydraulic Drive, Lines And Filters

| Ref # | Part Number | Qty | S/P/F | Description                      |
|-------|-------------|-----|-------|----------------------------------|
| 54    | 736-0921    | 1   | S     | Lock Washer 1/2                  |
| 55    | 710-1189    | 1   |       | Hex Washer Screw #12-24 x .625   |
| 56    | 756-0974    | 1   | /P    | Transmission Pulley              |
| 57    | 732-0729    | 1   | /P    | Wire Ring                        |
| 58    | 736-0185    | 1   | S     | Flat Washer                      |
| 59    | 710-3144    | 1   | /P    | Hex Cap Screw 3/8-16 x 2.0       |
| 60    | 618-3164    | 1   |       | Complete Tranmission Assembly RH |
| 61    | 710-0751    | 1   | /P    | Hex Cap Screw 1/4-20 x .62       |
| 62    | 703-2907    | 1   |       | Bearing Cup                      |
| 63    | 741-0600    | 1   | S     | Ball Bearing                     |
| 64    | 756-3085    | 1   |       | Idler Pulley 5.0"                |
| 65    | 712-0324    | 1   | /P    | Hex Lock Nut 1/4-20              |
| 66    | 750-3176    | 1   |       | Idler Spacer                     |

Z48 (1999)  
Hydrostatic Transmission

Page 30 of 39

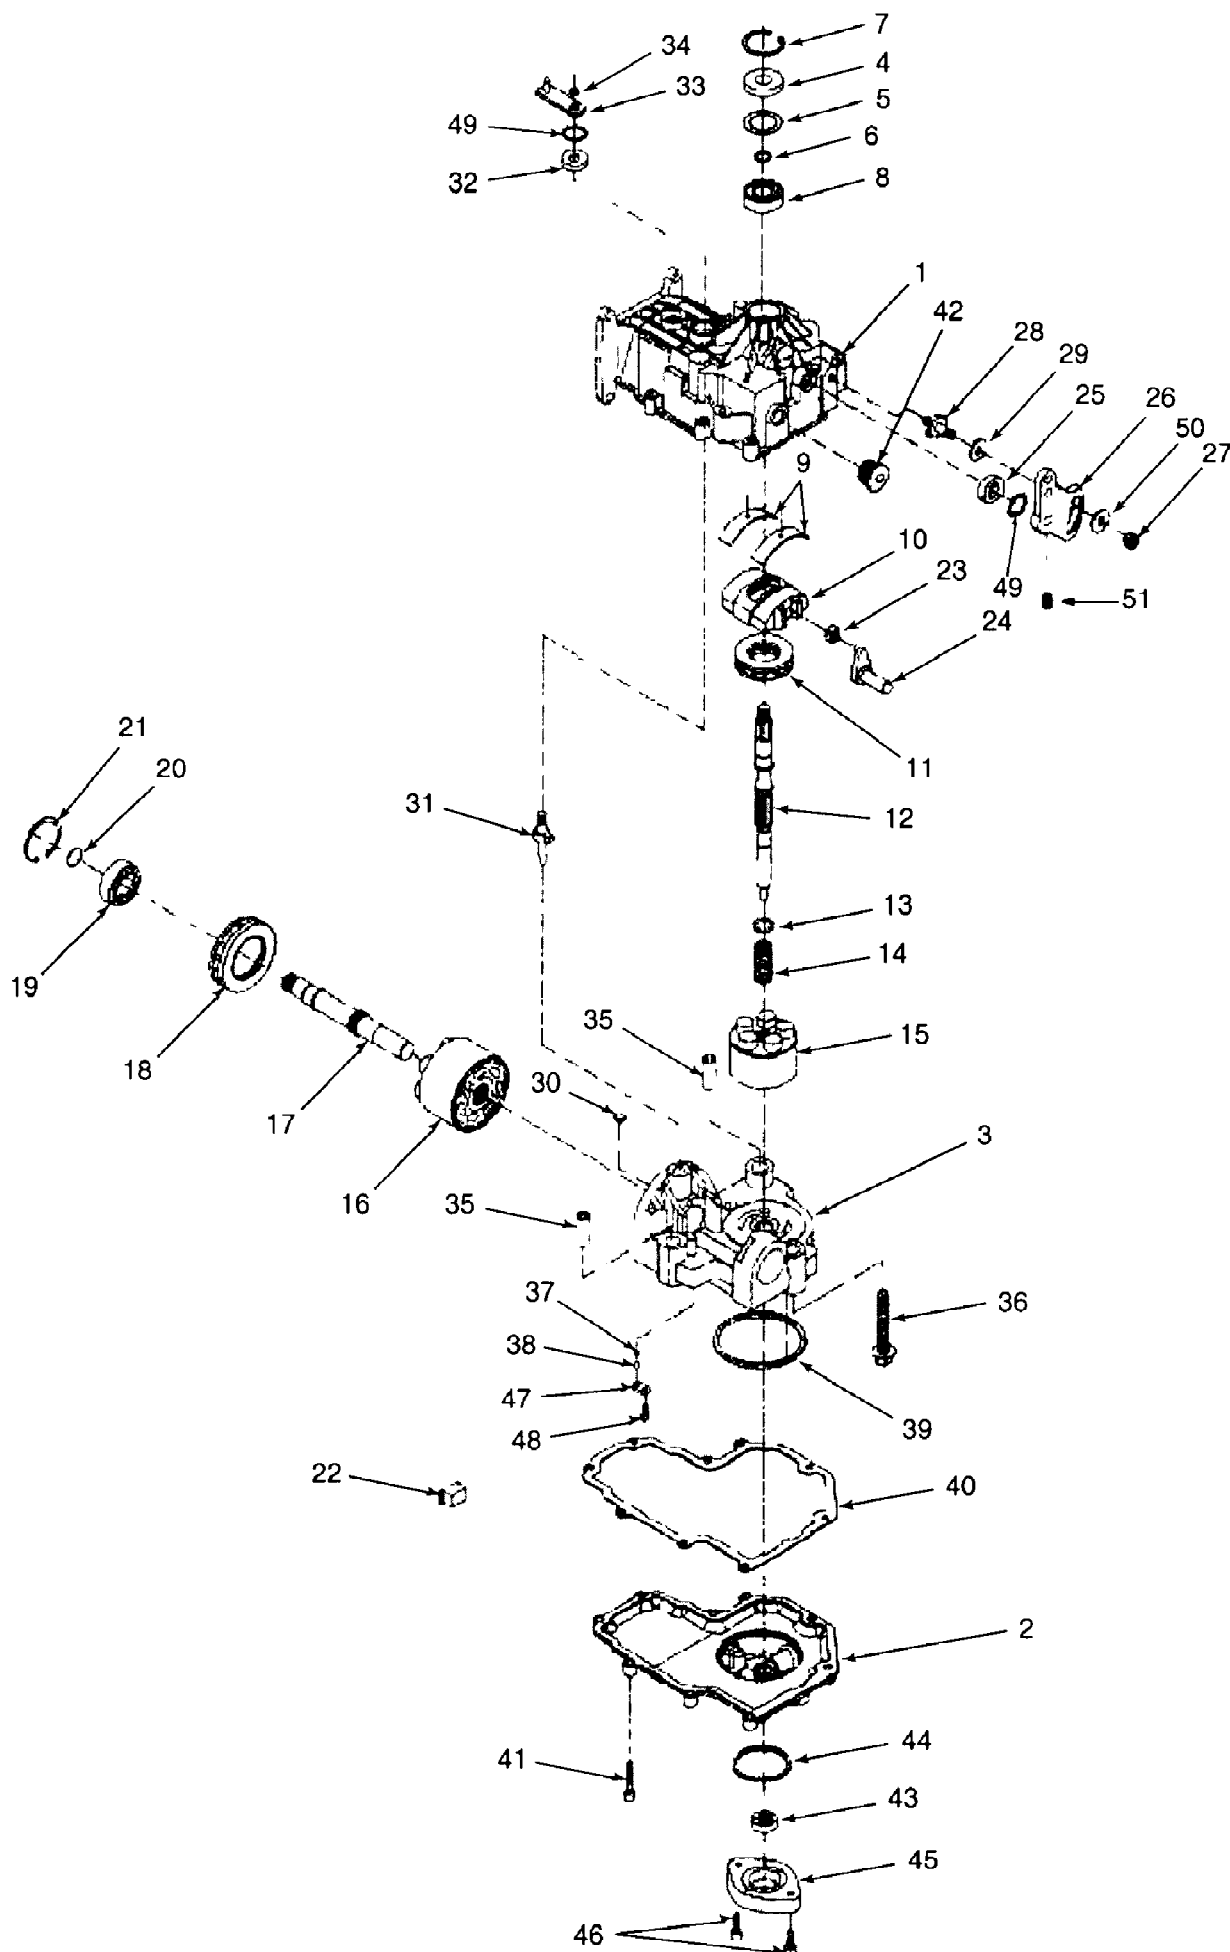


Z48 (1999)  
Hydrostatic Transmission

Page 31 of 39

| Ref # | Part Number     | Qty | S/P/F | Description              |
|-------|-----------------|-----|-------|--------------------------|
|       | 717-3455        | 1   | S     | Transmission Ass'y Hydro |
| 1     | HG-70304        | 1   |       | Housing Ass'y Upper      |
| 2     | HG-50301        | 1   |       | Lower Housing            |
| 3     | HG-70299        | 1   | S     | Center Section Assembly  |
| 4     | HG-9008000-0128 | 1   | /P    | Lip Seal                 |
| 5     | HG-2003018      | 1   | /P    | Spacer                   |
| 6     | HG-2003016      | 1   | /P    | Wire Retaining Ring      |
| 7     | HG-2003052      | 1   | /P    | Retaining Ring           |
| 8     | HG-2003043      | 1   | S     | Ball Bearing             |
| 9     | HG-2003023      | 1   | S     | Cradle Bearing           |
| 10    | HG-2003087      | 1   | /P    | Variable Swashplate      |
| 11    | HG-50551        | 1   | S     | Thrust Bearing           |
| 12    | HG-50303        | 1   |       | Input Shaft              |
| 13    | HG-2003017      | 1   | /P    | Block Thrust Washer      |
| 14    | HG-2003014      | 1   | /P    | Block Spring             |
| 15    | HG-70079        | 1   | S     | Cylinder Block Assembly  |
| 16    | HG-70082        | 1   | /P    | Cylinder Block Assembly  |
| 17    | HG-50304        | 1   |       | Output Shaft (Motor)     |
| 18    | HG-50552        | 1   | /P    | Thrust Bearing           |
| 19    | 741-0361        | 1   | S     | Ball Bearing             |
| 20    | HG-2000022      | 1   | /P    | Wire Retaining Ring      |
| 21    | HG-50329        | 1   | /P    | Retaining Ring           |
| 22    | HG-50649        | 1   |       | Motor Bearing Retaining  |
| 23    | HG-2000015      | 1   | /P    | Slot Guide               |
| 24    | HG-2003005      | 1   | /P    | Trunnion Arm             |
| 25    | HG-9008000-0126 | 1   | /P    | Lip Seal                 |
| 26    | HG-45007        | 1   | /P    | Control Arm              |
| 27    | 712-0237        | 1   | S     | Hex Lock Nut 5/16-24     |
| 28    | HG-50426        | 1   |       | Short Stud 5/16-24       |
| 29    | HG-50281        | 1   |       | Friction Puck            |
| 30    | HG-2003554      | 1   | S     | Bypass Plate             |
| 31    | HG-2003555      | 1   |       | Bypass Actuator          |
| 32    | HG-45074        | 1   | /P    | Lip Seal                 |
| 33    | HG-50270        | 1   |       | Bypass Arm               |
| 34    | HG-44870        | 1   |       | Retaining Ring           |
| 35    | HG-50002        | 1   | /P    | Pin                      |
| 36    | HG-50016        | 1   |       | Screw                    |
| 37    | HG-2000029      | 1   |       | Charge Relief Spring     |
| 38    | HG-9001214-2500 | 1   |       | Ball                     |
| 39    | HG-50578        | 1   | /P    | O-Ring                   |
| 40    | HG-50331        | 1   | /P    | Gasket                   |
| 41    | HG-44876        | 1   | /P    | Self Tapping Screw       |
| 42    | HG-9005110-8700 | 1   | /P    | Drain Plug               |
| 43    | HG-50273        | 1   | /P    | Gerotor Assembly         |
| 44    | HG-9004101-1340 | 1   | /P    | O-Ring                   |
| 45    | HG-50260        | 1   |       | Gerotor Cover            |
| 46    | HG-50095        | 1   |       | Screw                    |
| 47    | HG-50651        | 1   |       | Relief Plate             |
| 48    | HG-50653        | 1   | /P    | Screw                    |
| 49    | HG-50650        | 1   |       | Retaining Ring           |
| 50    | 736-0371        | 1   | /P    | Washer                   |
| 51    | HG-50018        | 1   |       | Set Screw                |

Z48 (1999)  
Lift Assist Spring

Page 32 of 39

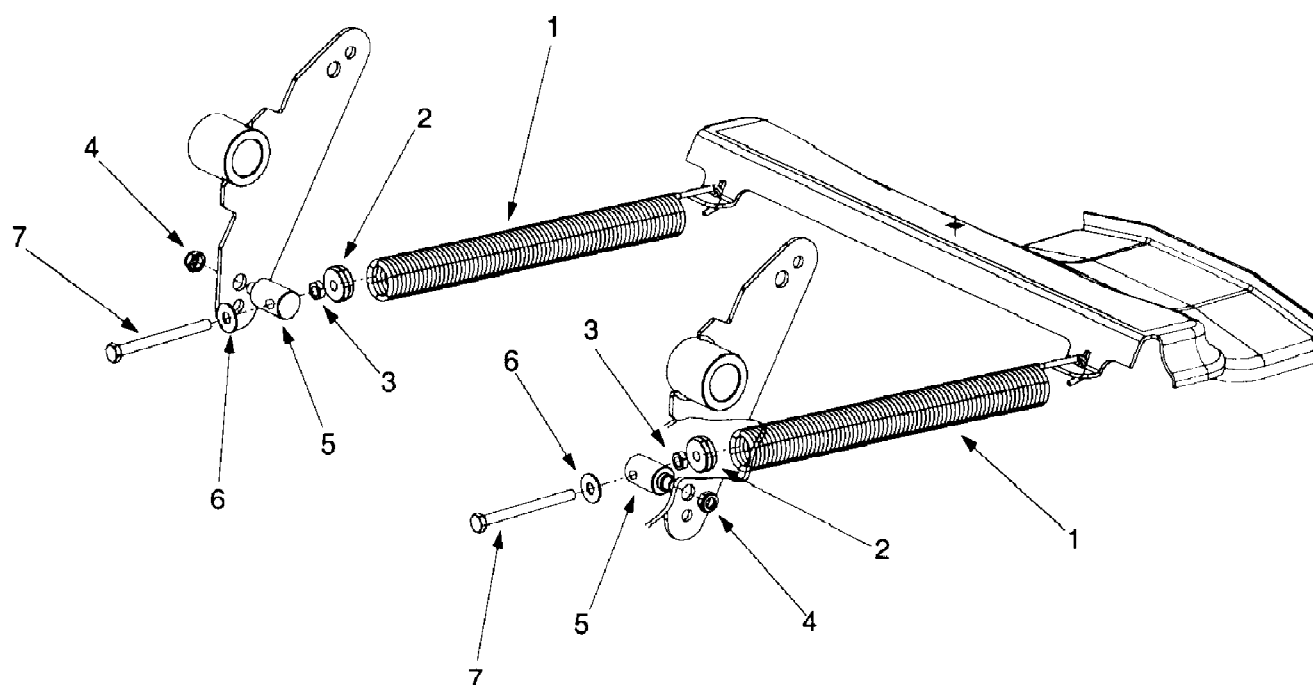




Z48 (1999)  
Lift Assist Spring

Page 33 of 39

| Ref # | Part Number | Qty | S/P/F | Description                        |
|-------|-------------|-----|-------|------------------------------------|
| 1     | 732-0772    | 1   |       | Extension Spring 1.25 OD x 11.5 Lg |
| 2     | 711-0509    | 1   | /P    | Spring                             |
| 3     | 712-3007    | 1   | /P    | Hex Jam Nut 5/16-18                |
| 4     | 712-0116    | 1   | S     | Jam Lock Nut 3/8-24                |
| 5     | 711-1059    | 1   |       | Ferrule                            |
| 6     | 736-0159    | 1   | S     | Washer 5/16                        |
| 7     | 710-1207    | 1   | /P    | Hex Cap Screw 5/16-18 x 3.50       |

Z48 (1999)  
Lift System And Linkage

Page 34 of 39

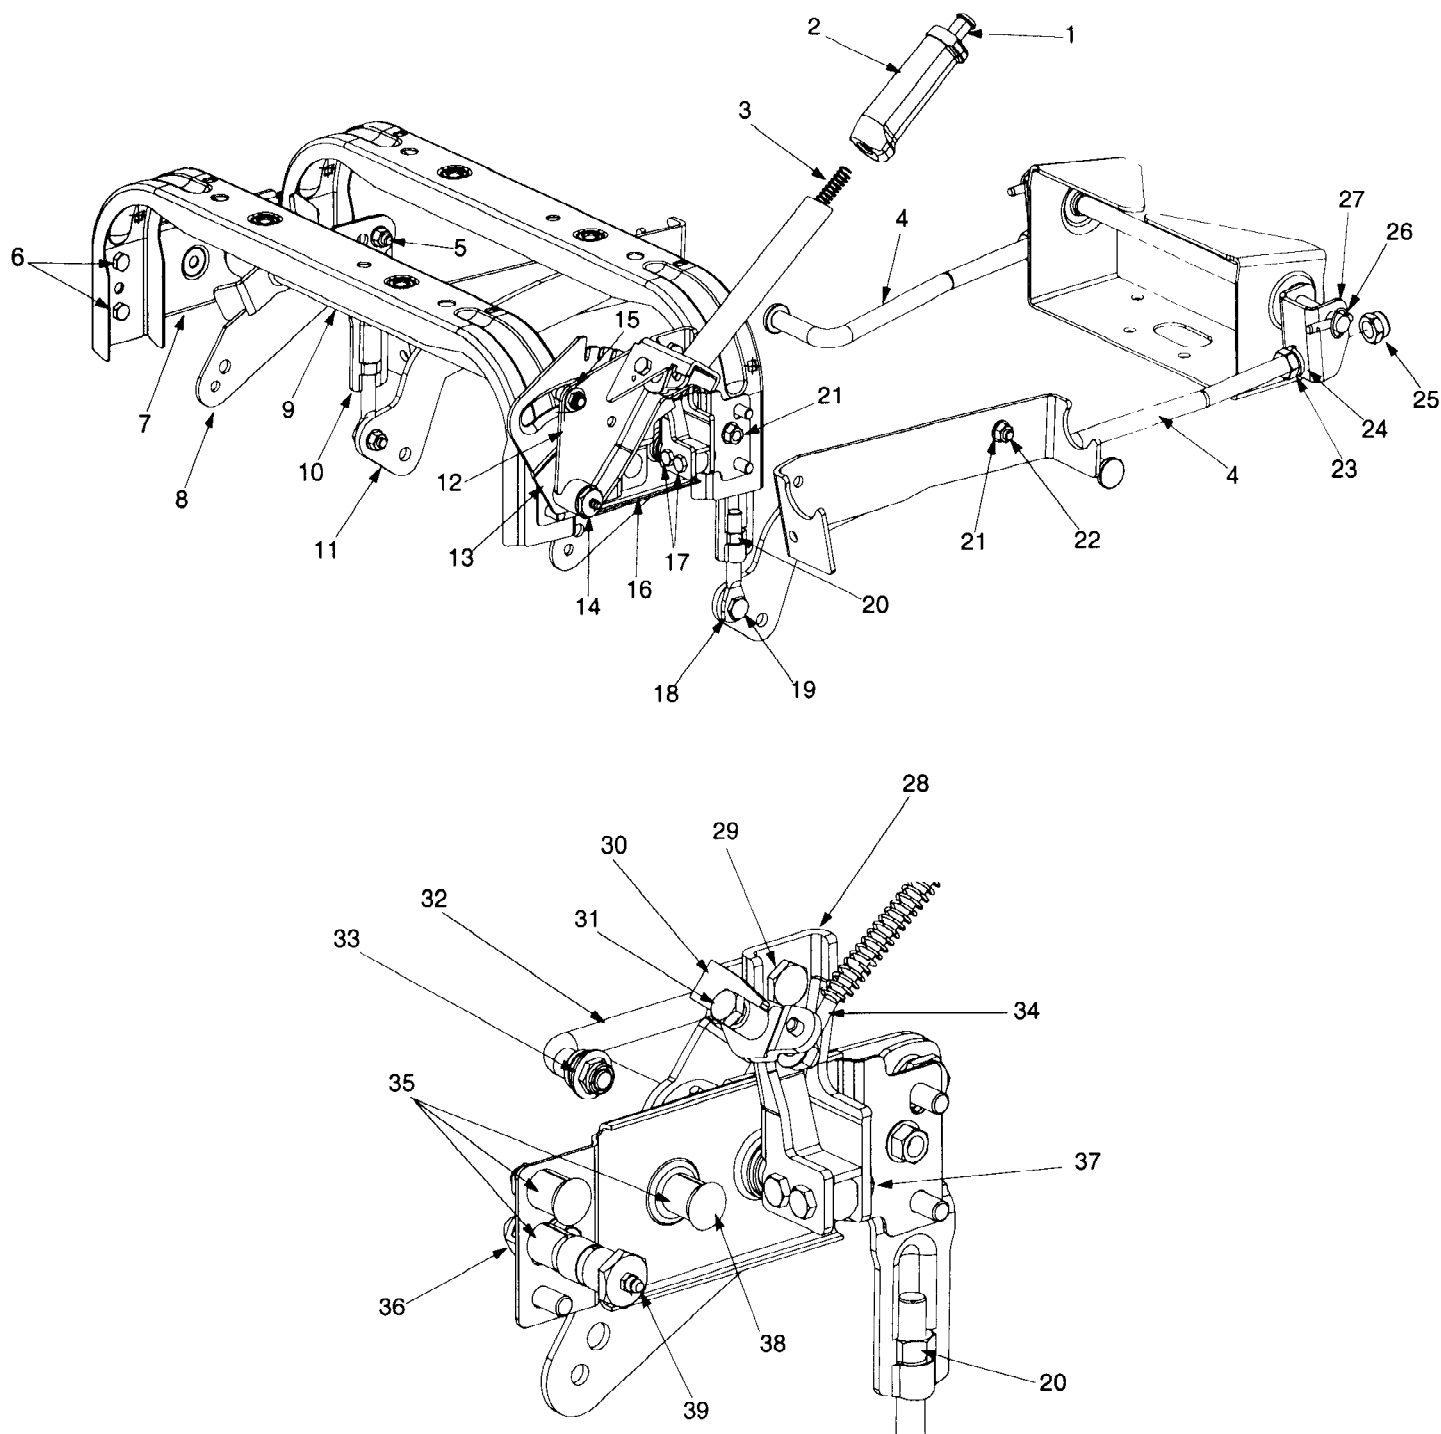


Z48 (1999)  
Lift System And Linkage

Page 35 of 39

| Ref # | Part Number | Qty | S/P/F | Description                     |
|-------|-------------|-----|-------|---------------------------------|
| 1     | 711-0642A   | 1   | /P    | Handle Button                   |
| 2     | 731-3158    | 1   | /P    | Handle Deck Lift Grip           |
| 3     | 732-3097    | 1   |       | Compression Spring              |
| 4     | 747-3405    | 1   |       | Front Lift Rod                  |
| 5     | 738-0507B   | 1   | S     | Shoulder Screw .500 Dia x .434  |
| 6     | 710-0216    | 1   | /P    | Hex Cap Screw 3/8-16 x .75      |
| 7     | 603-0422    | 1   | S     | Shaft Mounting Bracket - LH     |
| 8     | 603-0370    | 1   |       | Pivot Link Bearing Ass'y        |
| 9     | 603-0313    | 1   | S     | Lift Shaft Ass'y                |
| 10    | 703-2621    | 1   |       | Adjustable Deck Lift Link       |
| 11    | 703-2780    | 1   |       | Lift Parallel Link              |
| 12    | 603-0327    | 1   |       | Handle Bearing Ass'y            |
| 13    | 703-2772    | 1   |       | Deck Height Adjustable Plate    |
| 14    | 738-3150    | 1   |       | Lift Handle Shoulder Screw      |
| 15    | 712-3020    | 1   | S     | Top Lock Jam Nut 3/8-16         |
| 16    | 603-0423    | 1   |       | Shaft Mounting Bracket - RH     |
| 17    | 710-3083    | 1   | /P    | Hex Cap Screw 5/16-18 x 1.375   |
| 18    | 711-0773    | 1   |       | Eye Bolt Adjustable Link        |
| 19    | 738-0380    | 1   | S     | Shoulder Screw 3/8-16           |
| 20    | 712-0206    | 1   | S     | Hex Nut 1/2-13                  |
| 21    | 712-0431    | 1   | S     | Flange Lock Nut 3/8-16          |
| 22    | 738-3151    | 1   |       | Shoulder Screw 3/8-16 .56 x .27 |
| 23    | 712-3015    | 1   | S     | Jam Nut 5/8-11                  |
| 24    | 736-0158    | 1   | S     | Lock Washer 5/8                 |
| 25    | 712-3016    | 1   | /P    | Lock Hex Nut 5/8-11             |
| 26    | 711-3266    | 1   | S     | Clevis Pin                      |
| 27    | 703-3407    | 1   | S     | Front Lift Bracket              |
| 28    | 603-0401    | 1   | S     | Lift Arm Ass'y                  |
| 29    | 738-0183    | 1   | S     | Shoulder Screw 3/8-16 .50 x .21 |
| 30    | 603-0257    | 1   | /P    | Fork Lift Ass'y                 |
| 31    | 710-3011    | 1   | /P    | Hex Cap Screw 3/8-16 x 2.25     |
| 32    | 747-3276    | 1   |       | Lift Link Rod                   |
| 33    | 736-0300    | 1   | S     | Flat Washer .406 x .875         |
| 34    | 747-3267    | 1   |       | Handle Arm                      |
| 35    | 750-3200    | 1   |       | Spacer .448 ID x .688 OD        |
| 36    | 712-0290    | 1   | /P    | Lock Nut 7/16-14                |
| 37    | 712-3009    | 1   | S     | Hex Center L-Nut 5/16-18        |
| 38    | 710-0431    | 1   | /P    | Hex Screw 3/8-16 x 1.50         |
| 39    | 737-0280    | 1   | S     | Grease Fitting                  |

Z48 (1999)  
Parking Brake And Linkage

Page 36 of 39

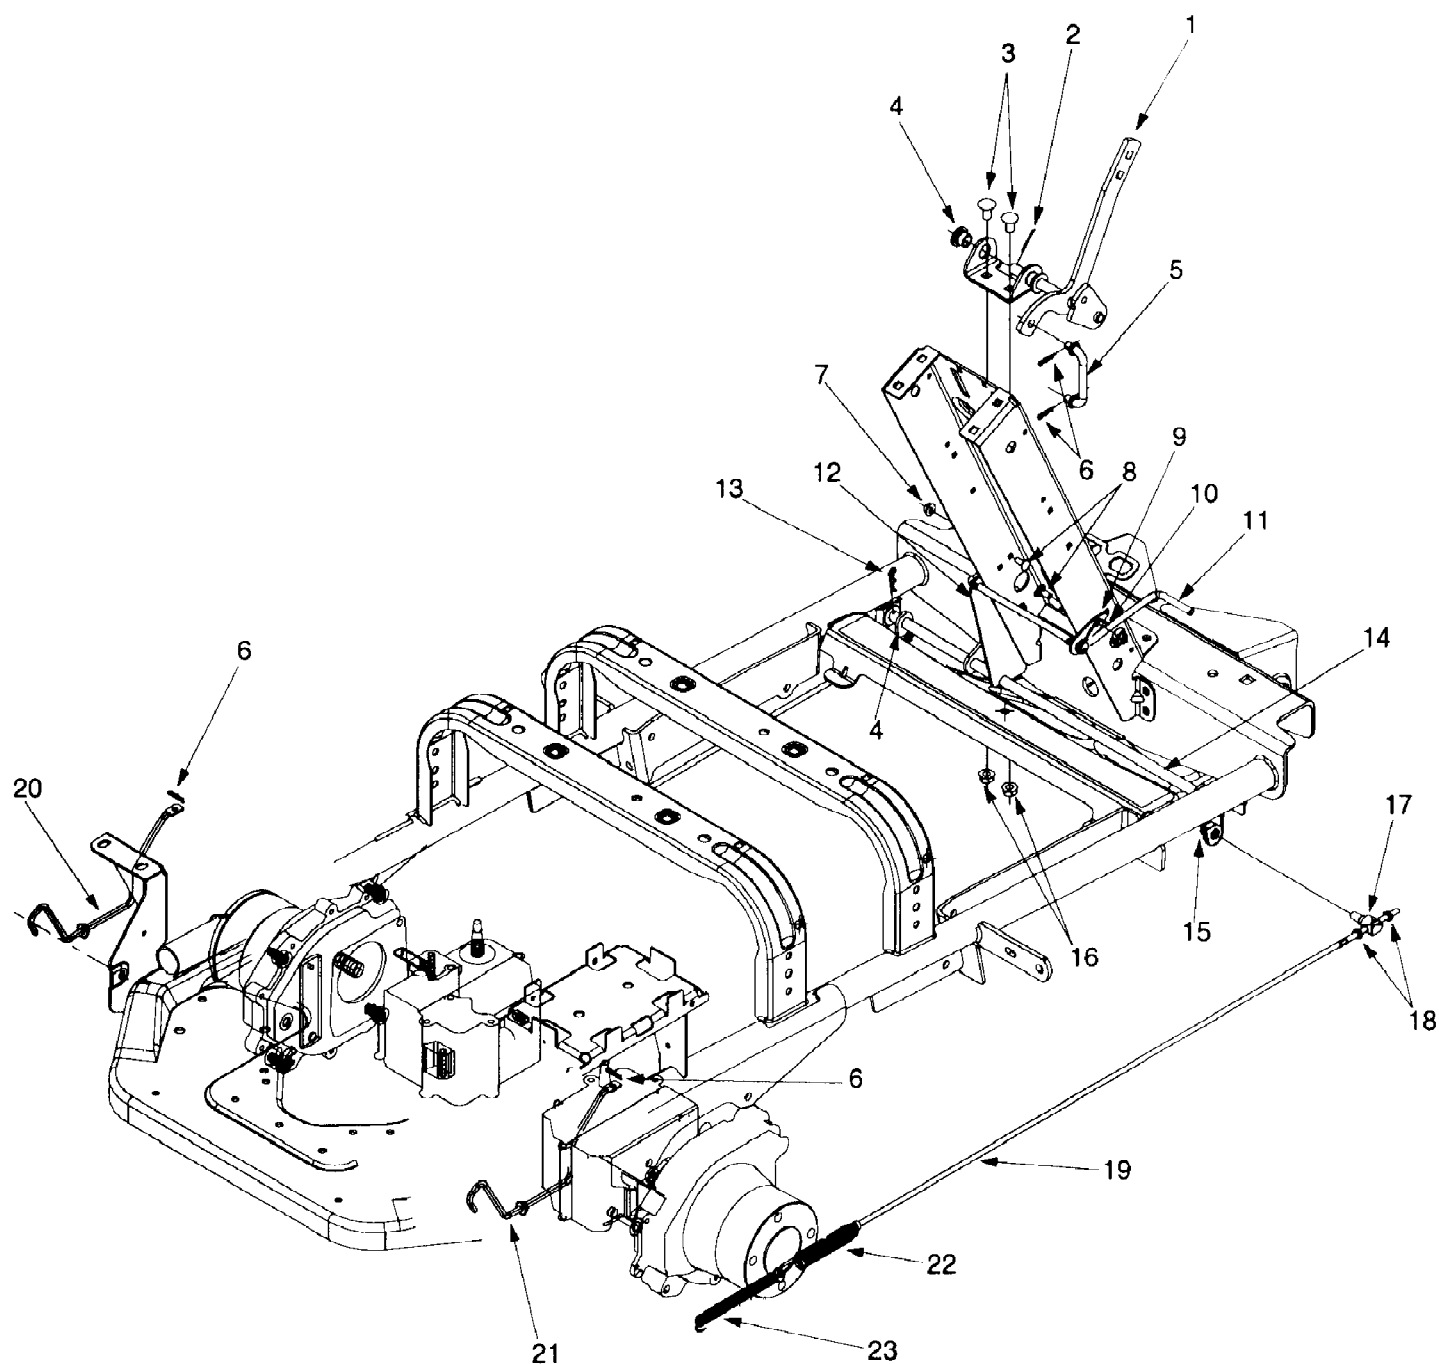

Z48 (1999)


Page 37 of 39

## Parking Brake And Linkage

| Ref # | Part Number | Qty | S/P/F | Description                       |
|-------|-------------|-----|-------|-----------------------------------|
| 1     | 603-0649    | 1   |       | Parking Brake Shift Ass'y         |
| 2     | 714-3004    | 1   |       | Cotter Pin                        |
| 3     | 710-3178    | 1   | /P    | Carriage Bolt 3/8-16 x .75        |
| 4     | 741-0324    | 1   | S     | Hex Flange Bearing .506 ID x .590 |
| 5     | 747-3404    | 1   |       | Connecting Brake Rod              |
| 6     | 714-0104    | 1   | S     | Cotter Pin                        |
| 7     | 712-3027    | 1   | S     | Hex Flange Lock Nut 1/4-20        |
| 8     | 710-0134    | 1   | /P    | Carriage Screw 1/4-20 x .62       |
| 9     | 703-2857    | 1   |       | Retaining Rod Bracket             |
| 10    | 732-0827    | 1   |       | Torsion Spring 5/16               |
| 11    | 747-3397    | 1   |       | Parking Brake Retaining Rod       |
| 12    | 703-3405    | 1   |       | Support Plate                     |
| 13    | 714-0101    | 1   | S     | Cotter Pin                        |
| 14    | 603-0683    | 1   |       | Brake Rod Ass'y                   |
| 15    | 736-0258    | 1   | /P    | Flat Washer .385 ID x 1.0 OD      |
| 16    | 712-0431    | 1   | S     | Flange Lock Nut 3/8-16            |
| 17    | 711-3357    | 1   | S     | Ferrule                           |
| 18    | 712-0314    | 1   |       | Jam Nut 1/4-28                    |
| 19    | 747-3266A   | 1   | /P    | Bracket Rod                       |
| 20    | 747-3363    | 1   |       | Release Pump Rod LH               |
| 21    | 747-3284    | 1   |       | Release Pump Rod RH               |
| 22    | 732-0463    | 1   | S     | Extension Spring                  |
| 23    | 732-0800    | 1   |       | Extension Spring                  |

Z48 (1999)  
Seat Assembly

Page 38 of 39

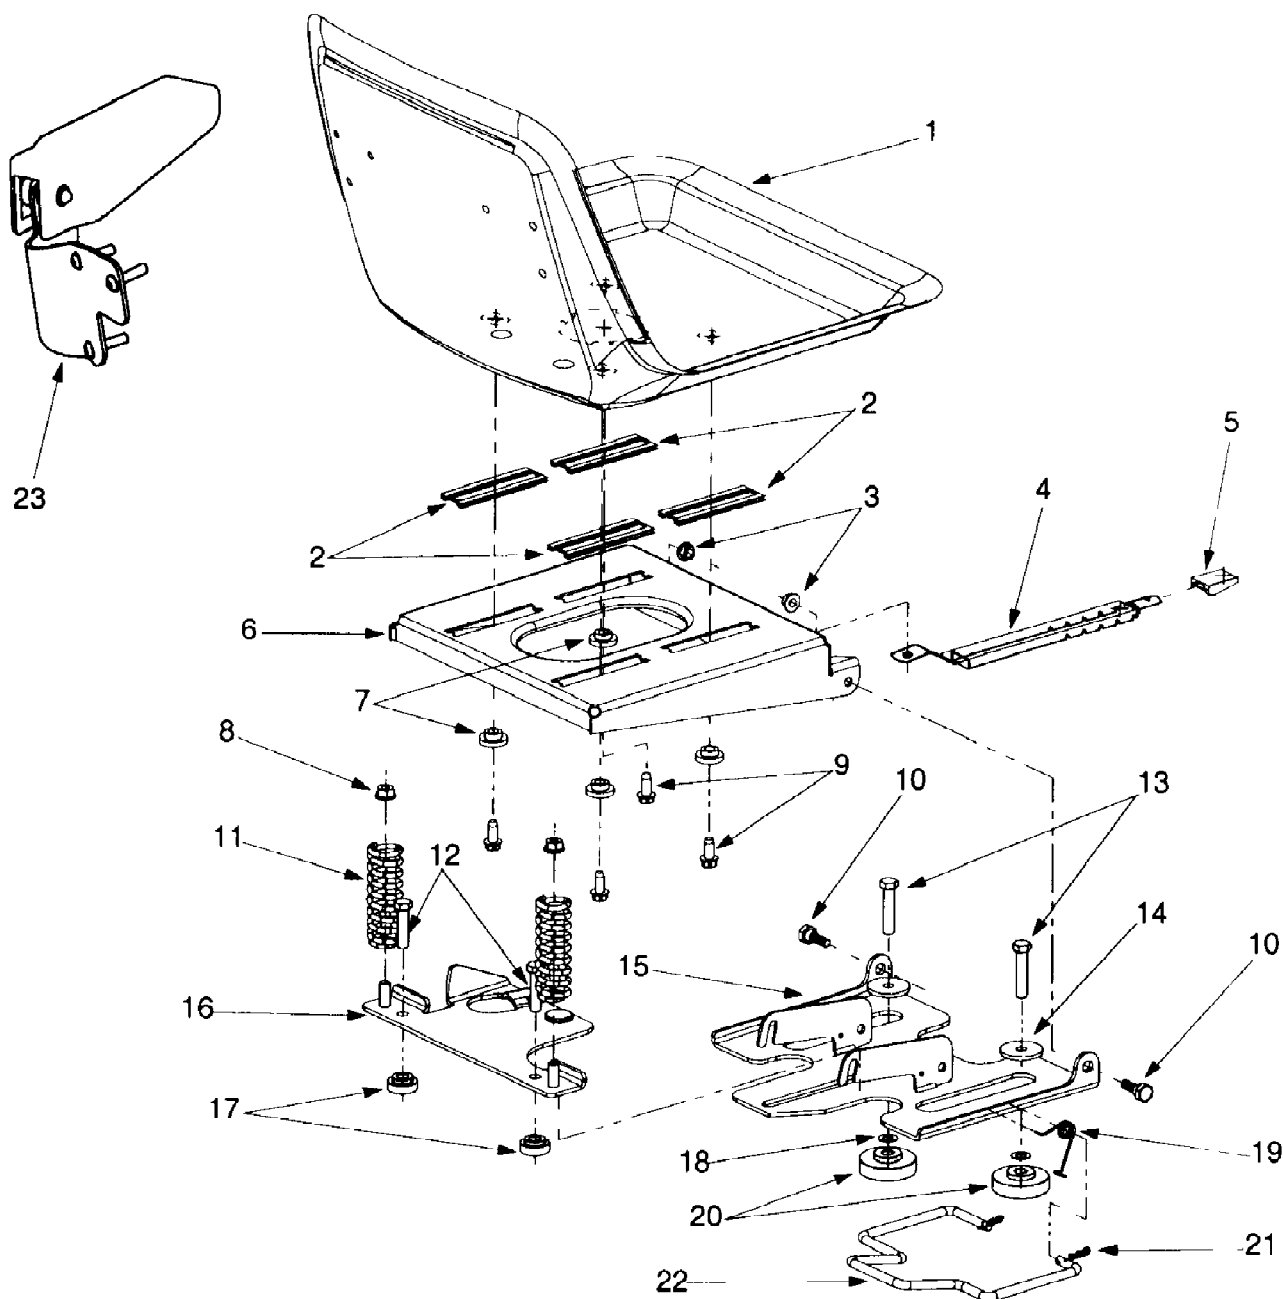

Z48 (1999)  
Seat Assembly

Page 39 of 39

| Ref # | Part Number | Qty | S/P/F | Description                      |
|-------|-------------|-----|-------|----------------------------------|
| 1     | 757-3006    | 1   |       | Seat Assembly                    |
| 2     | 731-3154    | 1   |       | Seat Slide                       |
| 3     | 712-3004A   | 1   | /P    | Flange Lock Nut 5/16-18          |
| 4     | 732-3098    | 1   |       | Spring Index                     |
| 5     | 720-0190    | 1   | S     | Knob                             |
| 6     | 603-0294    | 1   | S     | Bracket Assembly                 |
| 7     | 738-0372    | 1   | S     | Shoulder Spacer                  |
| 8     | 712-3005    | 1   | S     | Flange Lock Nut 3/8-16           |
| 9     | 710-1260A   | 1   | /P    | Hex Washer Screw 5/16-18 x .75   |
| 10    | 738-0296    | 1   | S     | Shoulder Screw                   |
| 11    | 732-3080    | 1   | S     | Compression Spring 1.28 OD x 3.5 |
| 12    | 710-0520    | 1   | /P    | Hex Cap Screw 3/8-16 x 1.5       |
| 13    | 710-0347    | 1   | /P    | Hex Cap Screw 3/8-16 x 1.75      |
| 14    | 736-0227    | 1   | S     | Flatwasher                       |
| 15    | 603-0470    | 1   | S     | Seat Bracket Assembly            |
| 16    | 603-0318A   | 1   |       | Seat Spring Plate Assembly       |
| 17    | 738-3156    | 1   |       | Shoulder Spacer                  |
| 18    | 736-0314    | 1   | S     | Thrust Washer                    |
| 19    | 732-0827    | 1   |       | Torsion Spring                   |
| 20    | 738-3166    | 1   |       | Shoulder Spacer                  |
| 21    | 714-0104    | 1   | S     | Cotter Pin                       |
| 22    | 747-3342    | 1   |       | Rod                              |
| 23    | 757-3009    | 1   |       | Seat Arm (Set of Two; Optional)  |