



MODEL **6 1 / 2 6 6**

NEW STOP SWITCH

The new stop switch is secured in the crankcase. The width of the terminal on the switch is now 4.8 mm. The previous one was 6.3 mm. Because of this, the ignition module changes its Ref. No. The heat switch is now grounded with round cable clip and changes its Ref. No., too.

<u>New Ref. No.</u>	<u>Description</u>	<u>Excluded Ref. No.</u>
503 08 97-01	Stop switch	501 81 52-01 (is excluded as a spare part)
729 22 75-05	Screw	—
501 51 61-02	Electronic module	501 51 61-01
501 52 66-02	Heat switch	501 52 66-01 (is excluded as a spare part)

The electronic module 501 51 61-01 is still available as a spare part during a transition period.

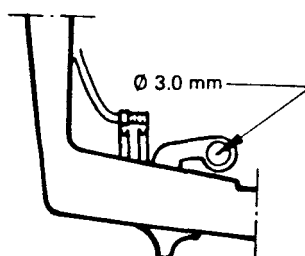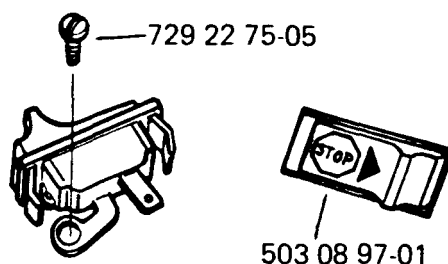

The new stop switch can be mounted on older saws if the terminals on the leads are changed and a hole \varnothing 3.0 mm is drilled in the crankcase. Use the switch as a template. For mounting of new switch there is a rebuilding kit available, which contains:

Stop switch 503 08 97-01, terminals,
screws and washers.

The Ref. No. of the kit is 503 48 71-01.

The change is introduced from serial number: 61	6504878
266 XP	6512275
266 XPG	6490662