


MODELS 61, 66, 266, 268, 272, 268 K

NEW STARTER COMPL. AS A SPARE PART REF. NO. 503 61 55-71

When we introduced the new starter with a so called golf club design on the model 272, a co-ordination is also done.

In order to use the new starter compl. to all the models above, the following is valid:

1. The air conductor Ref. no. 501 65 92-01 for the models 268/272 is modified in order to fit also saws with SEM ignition system, i.e. the models 61, 66 and 266.

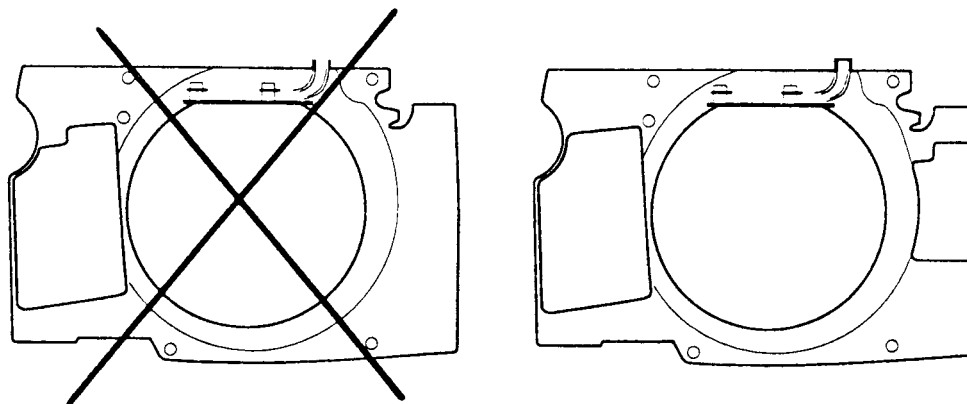

2. In the starter compl. with new Ref. no. 503 61 55-71, the modified air conductor Ref. no. 501 65 92-01 is included. The new starter therefore fits also on the models 61, 66 and 266. Starter compl. without an air conductor is excluded.

New Ref. no.	Description	Excluded Ref. no.	Remark
503 61 55-71	Starter compl.	{ 501 77 67-05 501 77 67-02	268,268 K 61,66,266
503 10 24-05	Pulley		
503 61 56-01	Starter housing		
503 20 34-16	Screw 4 pcs.		
503 47 57-01	Sticker 61 (to the starter)		
503 47 58-01	Sticker 66		
503 47 59-01	Sticker 268 XP		
503 47 59-02	Sticker 268 XPG		
503 47 59-03	Sticker 268		
503 47 60-01	Sticker 272 XP		
503 47 60-02	Sticker 272 XPG		
503 47 61-01	Sticker 268 K		
503 47 62-01	Sticker 266		

Please turn over!

Remain as spare parts:

Ref. no.	Description	Remark
503 10 24-02	Pulley	61, 66, 266
503 10 24-03	Pulley	268, 268 K
501 52 61-02	Air conductor	61, 66, 266
501 77 68-01	Starter housing	61, 66, 266, 268, 268 K

NOTE!

In order to prevent the pulley from touching the flywheel, the new starter Ref. no. 503 61 55-71 must not be used together with the air conductor Ref. no. 501 52 61-01.

The reverse case is valid for the excluded starter compl. Ref. no. 501 77 67-02 with the pulley Ref. no. 503 10 24-02. In order to prevent a too little engagement between pulley and starter pawls, these parts must not be used together with the air conductor Ref. no. 501 65 92-01.

