



FRAME AND DRIVE IDLER ASSEMBLY

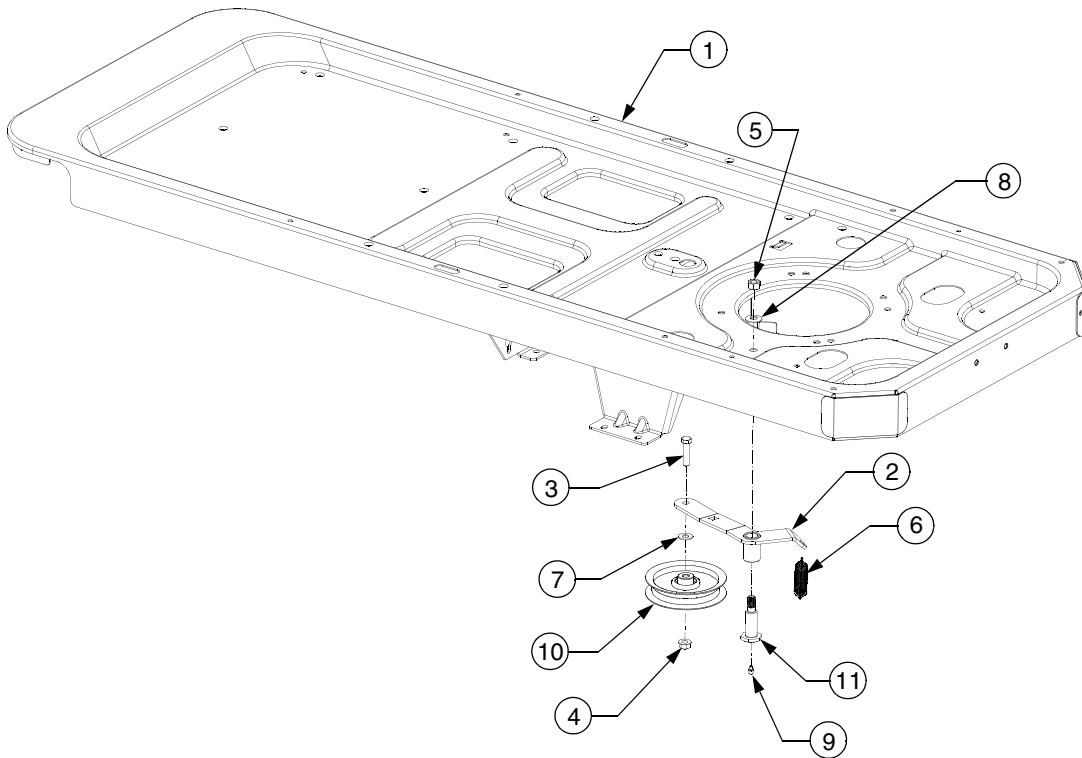

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04303	Frame Assembly	1
	777D03479	Graphic, Cub Cadet	1
2	603-04147A	Idler Arm, Drive	1
3	710-0520	Screw, Hex Cap, 3/8-16 x 1.5 GR5	1
4	712-0431	Nut, Hex Flange Lock, 3/16 GRF	1
5	712-0290	Nut, Hex Lock, 7/16-14 GRA	1
6	732-0626	Spring, Extension, .75 x 5.06	1
7	736-0300	Washer, Flat, .406 x .875 x .059	1
8	736-0322	Washer, Flat, .45 x 1.25 x .164 HT ...	1
9	737-3000	Fitting, Lube, 3/16 Drive	1
10	738-3005A	Screw, Shoulder, .68 x 1.59	1
11	756-1229	Pulley, Idler, 4.08 Dia.	1

ELECTRICAL

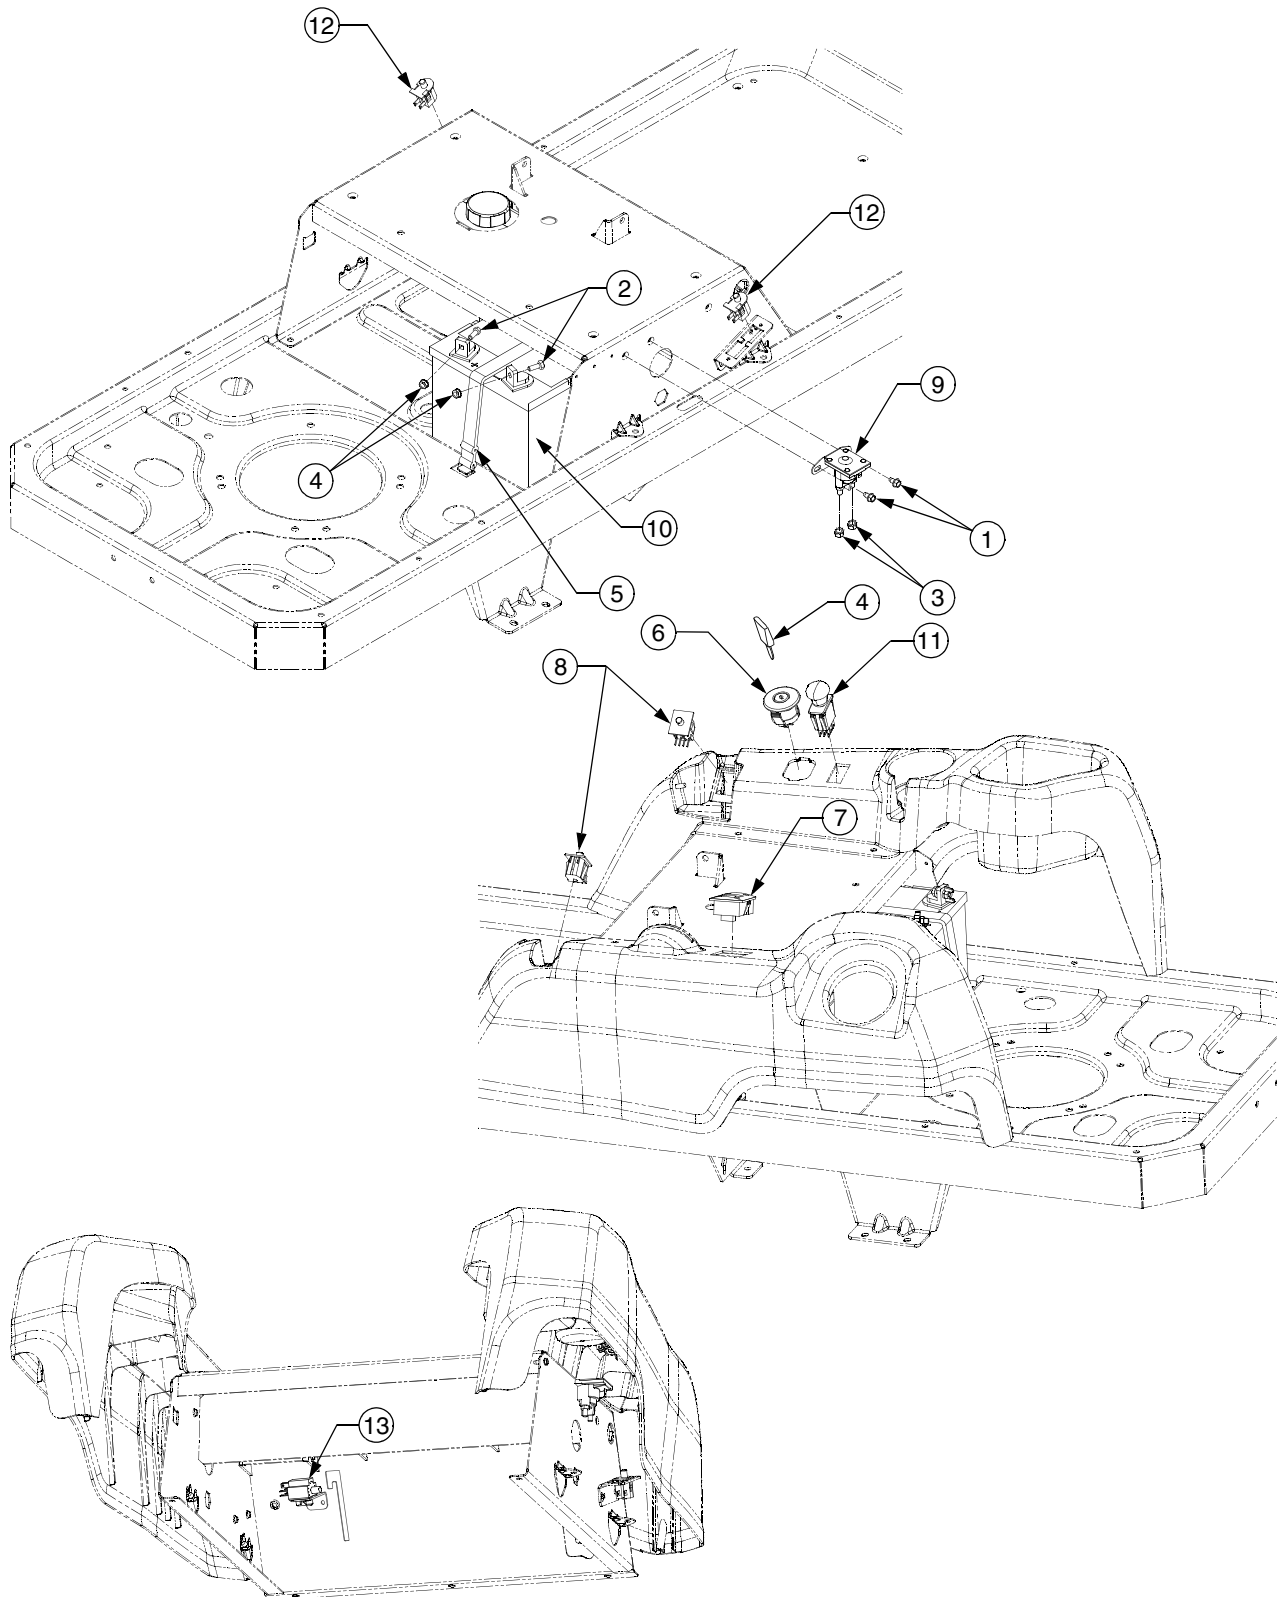


ELECTRICAL

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	710-0599	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5	2
2	710-3015	Screw, Hex Cap, 1/4-20 x .75 GR5 ..	2
3	712-0271	Nut, Hex Sems, 1/4-20	4
4	925-1745	Key	1
5	723-0467	Strap, Battery	1
	732-0696	Hook, Wire Rectangular	2
6	725-04228	Switch, Ignition	1
7	725-04036A	Meter, Hour	1
8	725-04165	Switch, Dbl. Pole - Neutral	2
9	725-1426	Solenoid	1
10	725-1707D	Battery, 245 CCA	1
11	725-04174	Switch, PTO	1
12	725-3166	Switch, Snap Mount (N.C.) - Reverse	2
13	725-04232	Switch, 3-Pole, (NC-NO-NO) - Brake	1
†	725-04244	Harness Assembly, Wire	1
†	725-04245	Jumper Harness, Neutral	2
†	725-04187	Cable Wire, Red - Starter	1
†	725-04188	Cable Wire, Black - to Ground	1
†	625-04023A	Cable Wire, Red - Solenoid	1

† NOT SHOWN


OPERATOR'S PLATFORM

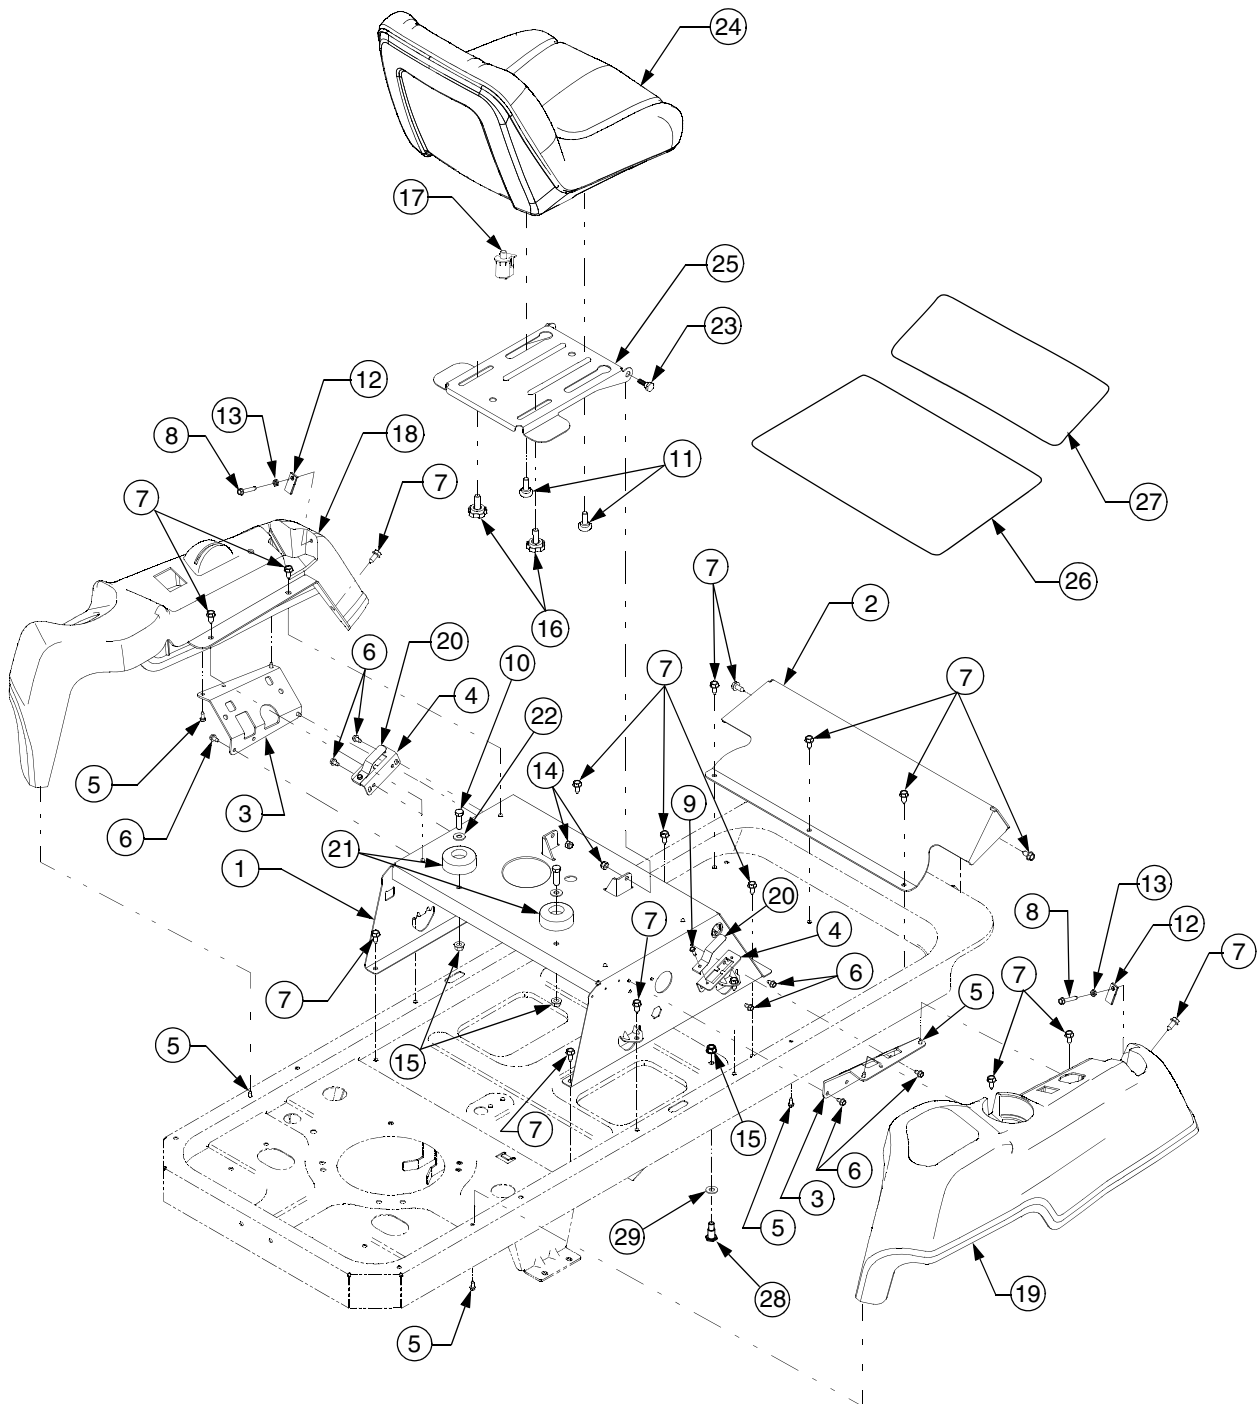

OPERATOR'S PLATFORM

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04304	Frame, Seat Box	1
	777I22278	Graphic, Park Brake	1
	777S32354	Graphic, Warning	1
	777I22275	Graphic, Deck Height	1
2	703-05373	Bracket, Foot Rest	1
	777D03479	Graphic, Cub Cadet	1
3	703-05460A	Bracket, Console Mounting	2
4	703-05467	Bracket, Switch Mounting	2
5	710-04261	Screw, Hex Wash. Hd Tapp	8
		#12-16 x .50	
6	710-0599	Screw, Hex Wash. Hd. Tapp.	8
		1/4-20 x .5	
7	710-0604A	Screw, Hex Wash. Hd. Tapp	20
		5/16-18 x .625	
8	710-0778	Screw, Hex Wash. Hd. Tapp.	2
		1/4-20 x 1.5	
9	710-1268	Screw, Hex Wash. Hd Tapp	2
		#10-16 x .375	
10	710-3005	Screw, Hex Cap, 3/8-16 x 1.25 GR5	2
11	738-04012A	Screw, Shoulder, .625 x .175:3/8-16	2
12	712-04092	Nut, U Type Speed, 1/4-20	2
13	712-0298	Nut, Hex Jam, 1/4-20 GR2	2
14	712-0429	Nut, Hex Insert Lock, 5/16-18 GR5 ...	2
15	712-0431	Nut, Hex Flange Lock, 3/8-16 GRF	4
16	720-04009A	Knob, 3/8-16: .625	2
17	725-3166	Switch, Seat, Snap Mount, N.C.	1
18	731-04662A	Console, LH	1
	777I22277	Graphic, Instruction	1
	777D08285	Graphic, Cub Cadet	1
	777I22279	Graphic, Throttle Control	1
19	731-04663	Console, RH	1
	777I22276	Graphic, Instruction	1
	777D08284	Graphic, Cub Cadet	1
20	732-04200	Spring, Switch Actuator	2
21	735-04041	Pad, Seat	2
22	736-0267	Washer, Flat HT, .395 x .87 x .06	2
23	738-0296	Screw, Shoulder, .437 x .268: 5/16-18	2
24	757-04023	Seat	1
	777D06883	Graphic, Cub Cadet	1
	777D01782	Graphic, USA	1
25	783-04628	Bracket, Seat Pivot	1
26	723-04020	Pad, Abrasive Foot Plate	1
27	723-04021	Pad, Abrasive Toe Plate	1
28	738-0430	Screw, Shoulder, .50 x .685:3/8-16 ...	2
29	736-0300	Washer, Flat, .406 x .875 x .059	2


CONTROLS AND DECK LIFT

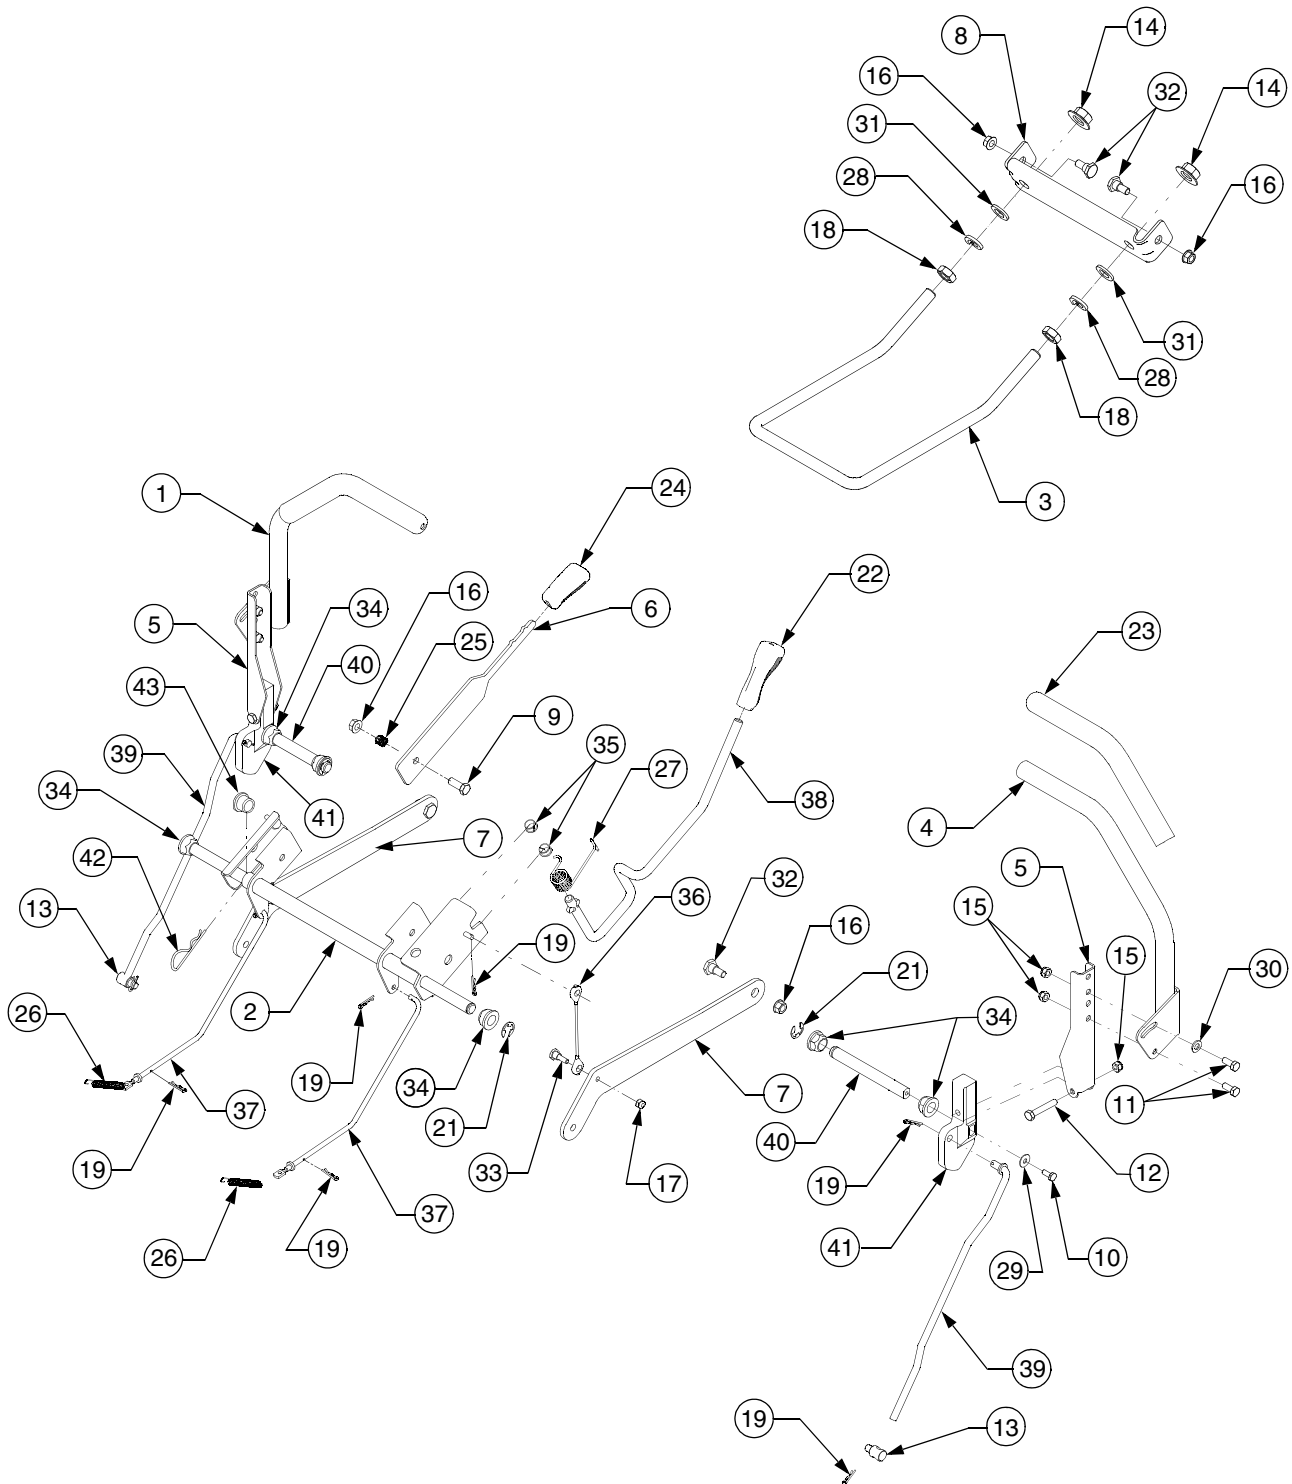

CONTROLS AND DECK LIFT


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04150	Lever, Lapbar, LH	1
2	603-04160	Shaft Assembly, Deck Lift	1
3	747-04123A	Rod, Deck Front Hanger	1
4	603-04181A	Lever, Lapbar, RH	1
5	703-05387	Bracket, Lapbar Pivot	2
6	703-05396	Handle, Brake	1
7	703-05401	Arm, Deck Lift	2
8	703-05414	Bracket, Front Deck Hanger	1
9	710-0514	Screw, Hex Cap, 3/8-16 x 1.0 GR5 ..	1
10	710-0433	Screw, Hex Lock, 1/4-20 x .62 GR5 ..	2
11	710-3008	Screw, Hex Cap, 5/16-18 x .75 GR5 ..	4
12	710-3180	Screw, Hex Cap, 5/16-18 x 1.75 GR5 ..	2
13	711-0832	Ferrule, 3/8-24 x .375	2
14	712-0417A	Nut, Hex Flange, 5/8-18	2
15	712-0429	Nut, Hex Insert Lock, 5/16-18 GR5 ..	6
16	712-0431	Nut, Hex Flange Lock, 3/8-16 GRF ..	5
17	712-0380	Nut, Hex Flange Lock, 1/4-28 GR2 ..	2
18	712-3056	Nut, Hex Jam, 5/8-18 GR5	2
19	714-0104	Pin, Internal Cotter	10
21	716-0106	E-Ring , .625 Dia. Shaft	4
22	720-0311	Grip, Handle	1
23	731-04719A	Grip, Lapbar	2
24	731-04735	Grip, Handle	1
25	732-0334	Spring, Compression	1
26	732-0611	Spring, Extension	2
27	732-0874	Spring, Torsion	1
28	736-0158	Washer, Lock, 5/8	2
29	736-0270	Washer, Bell, .265 x .75 x .062	2
30	736-0275	Washer, Flat, .344 x .688 x .065	2
31	736-0366	Washer, Flat, .64 x 1.12 x .125	2
32	738-0143	Screw, Shoulder, .498 x .340:3/8-16 ..	4
33	738-04100	Screw, Shoulder, 1/4-28 x .375	2
34	741-0225	Bearing, Hex Flange	6
35	741-0715	Bearing, Flange Snap, .50 ID	2
36	746-0970	Cable, Deck Lift, 5.05 Long	2
37	747-04218	Rod, Brake	2
38	747-04224	Rod, Deck Lift Handle	1
39	747-04225	Rod, Lapbar Control	2
40	747-04226	Shaft, Control	2
41	748-04052	Hub, Control	2
42	714-3020	Pin, Internal Cotter	1
43	741-3074	Bearing, Flange, .626 x .938 x .344 ..	2

FRONT AXLE

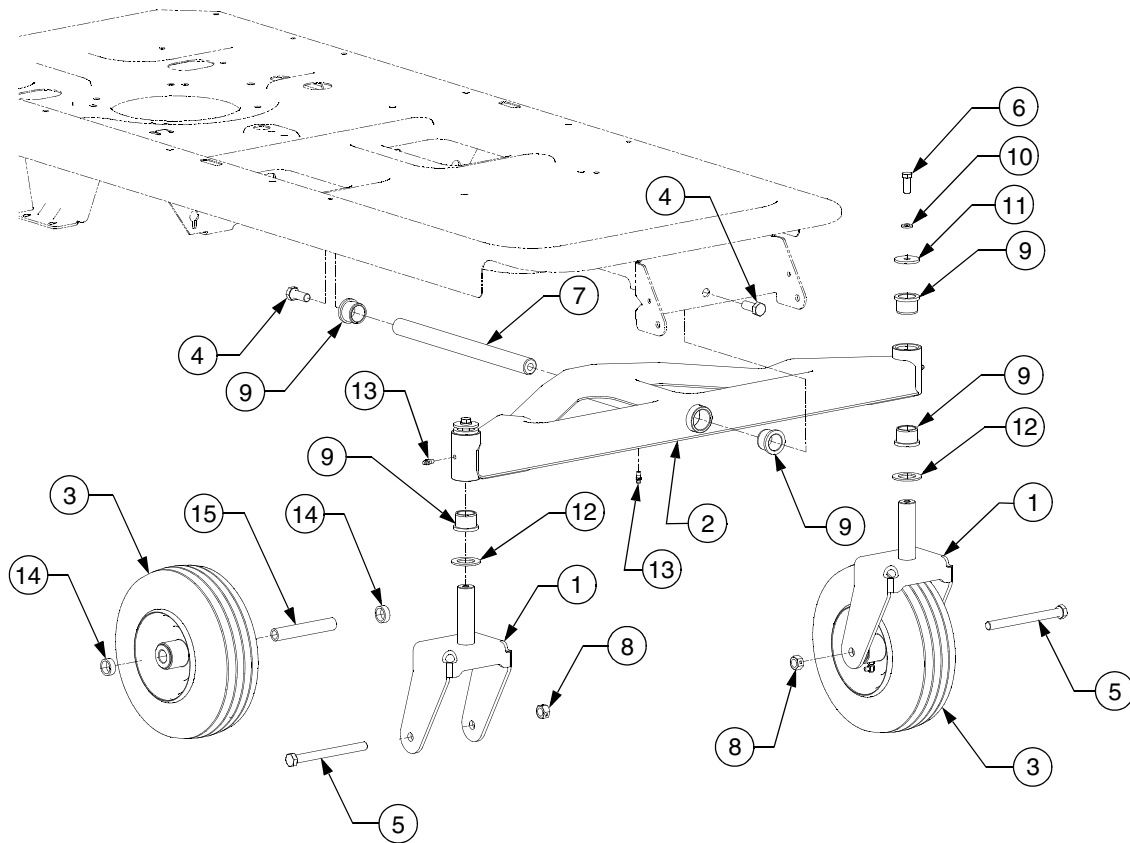


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-0363A	Bracket, Castor Wheel	2
2	603-04148	Axle, Front Pivot	1
3	634-3163	Wheel Assembly, 11.0 x 4.0 x 5.0	2
4	710-04186	Screw, Hex Lock, 1/2-13 x 1.25 GR5	2
5	710-0506	Screw, Hex Cap, 1/2-20 x 5.5 GR5	2
6	710-0514	Screw, Hex Cap, 3/8-16 x 1.0 GR5 ..	2
7	711-04228	Shaft, Axle	1
8	712-0239	Nut, Hex Lock, 1/2-20 GRA	2
9	731-0374	Bearing, Flange, 1.0 x 1.254	6
10	736-0169	Washer, Lock, 3/8	2
11	736-0227	Washer, Flat, .39 x 1.5 x .134	2
12	736-0250	Washer, Flat, 1.0 x 1.75 x .107	2
13	737-3000	Fitting, Lube, 3/16 Drive	3
14	750-0456	Spacer, .79 x .347	4
15	750-3197A	Spacer, Wheel	2

REAR DRIVE AND WHEELS

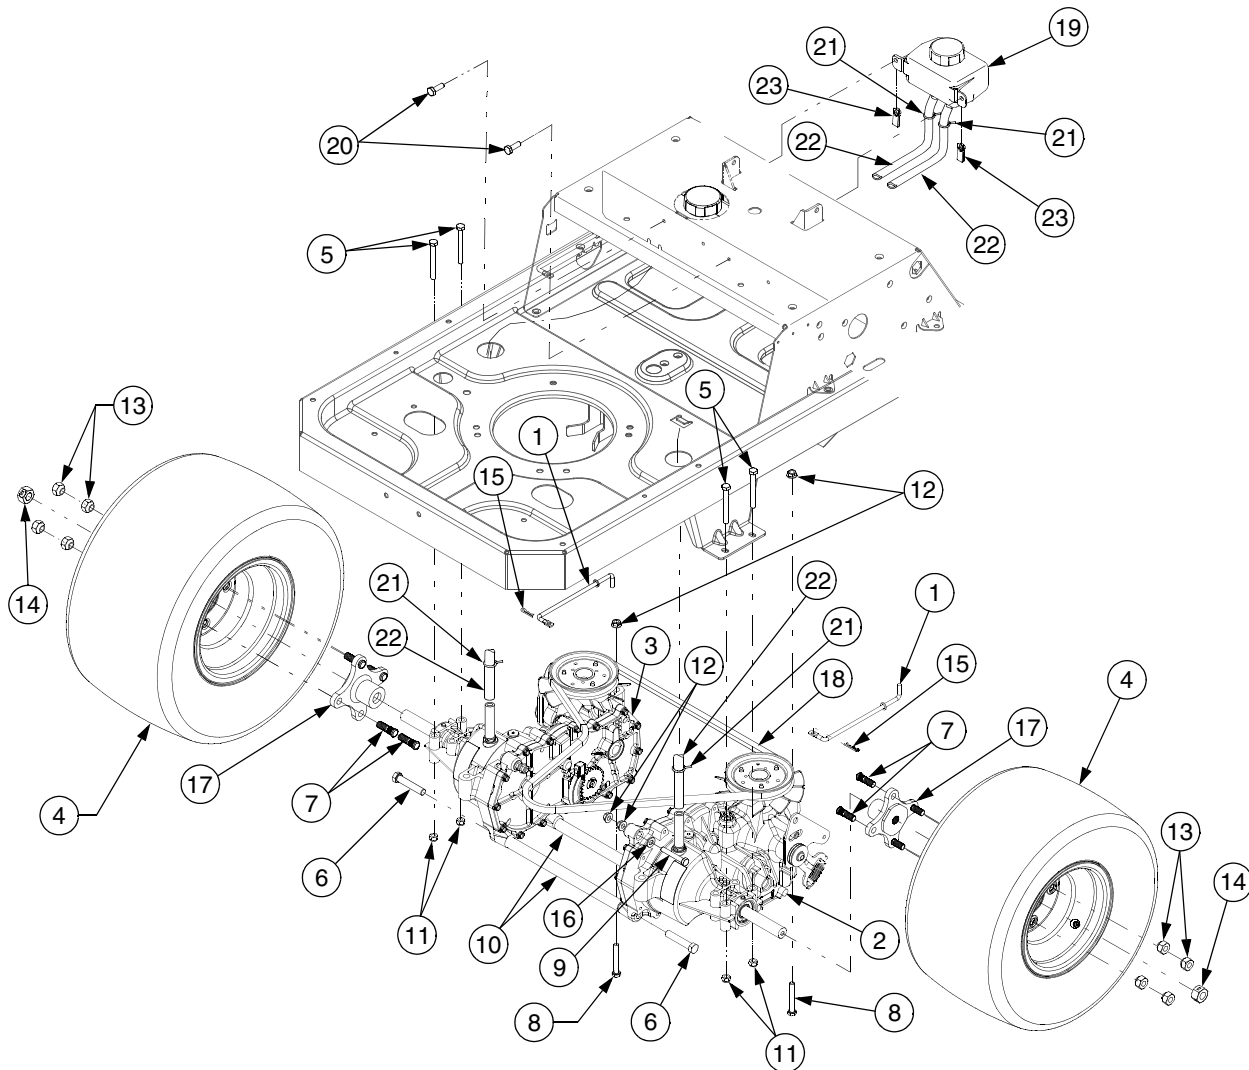

REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	747-04217A	Rod, Bypass	2	12	712-3004A	Nut, Hex Flange Lock, 5/16-18 GR5	6
2	618-04163A	Transmission Assembly, RH	1	13	712-3050	Nut, Lug, 7/16-14	8
3	618-04164A	Transmission Assembly, LH	1	14	712-04088	Nut, Hex Lock, 9/16-18 GRC	2
4	634-04128	Wheel Assembly, 18 x 9.5 x 8	2	15	714-0104	Pin, Internal Cotter	2
	734-1729	Tire, 18 x 9.5 x 8	2	16	736-0275	Washer, Flat, .344 x .688 x .065	2
	734-0255	Valve Assembly	2	17	748-04055	Hub, Wheel	2
5	710-0176	Screw, Hex Cap, 5/16-18 x 2.75 GR5	4	18	754-04043	V-Belt, Type A Sec x 57.7	1
6	710-04308	Screw, Hex Lock, 7/16-14 x 2.25 GR5	4	19	631-04168	Reservoir, Expansion.....	1
7	710-0852	Stud, Rib Neck, 7/16-14 x 1.6	8	20	710-3015	Screw, Hex Cap, 1/4-20 x .75 GR5 ..	2
8	710-0395	Screw, Hex Cap, 5/16-18 x 2.25 GR5	2	21	726-04045	Clamp, Hose	4
9	710-3103	Screw, Hex Cap, 5/16-18 x 2.0 GR5	2	22	751-10190	Hose, Hydraulic	54in
10	711-04232	Brace, Transmission	2	23	712-04092	Nut, U-Type Speed, 1/4-20	2
11	712-0429	Nut, Hex Insert Lock, 5/16-18 GR5 ..	4				


RH TRANSMISSION

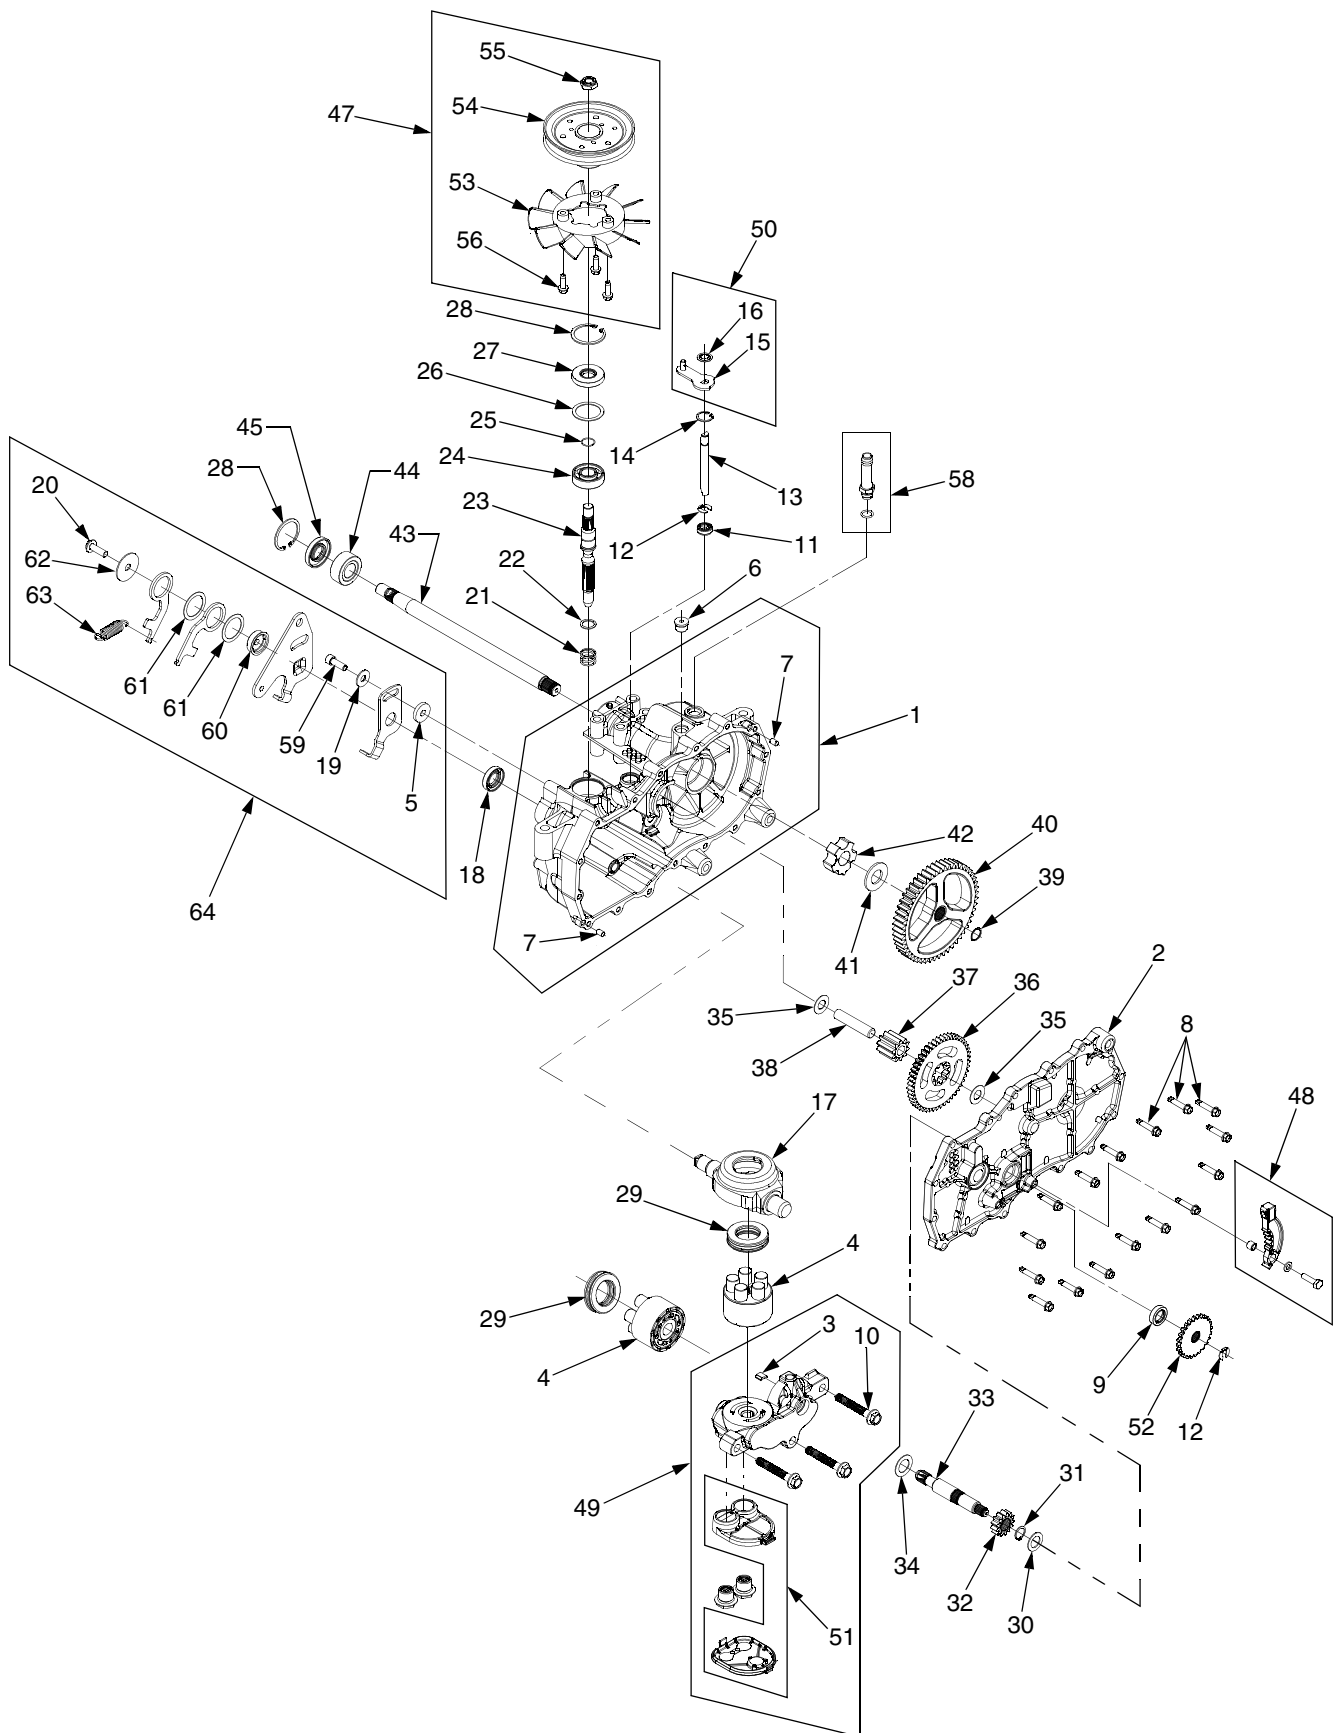

RH TRANSMISSION

REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	HG-70862R	Housing Assembly, Main RH	1	33	HG-51632	Shaft, Motor	1
2	HG-70863R	Side Assembly, RH	1	34	HG-51069	Washer, .71 x 1.16 x .04	1
3	HG-51448	Plate, Bypass	1	35	HG-50132	Washer, HT, .5 x 1.0 x .032 ..	2
4	HG-70331	Block Assembly	2	36	HG-51129	Gear, 10T/48T	1
5	HG-51949	Spacer, .32 x 1.005	1	37	HG-51043	Gear, Jackshaft, 10T	1
6	HG-9005110-5600	Plug, SAE #6	1	38	HG-51083	Pin, Jackshaft	1
7	HG-9004800-2506	Pin, Stainless	2	39	HG-44871	Ring, Spiral Retaining	1
8	HG-51190	Screw, Hex Self Tapping, 1/4-20 x 1.25	16	40	HG-51633	Gear, Bull, 52T	1
9	HG-44761	Seal, Lip, .625 x 1.0 x .25	1	41	HG-44875	Washer, 3/4 x 1.5 x .13	1
10	HG-50016	Bolt, Hex Flange, 3/8-24 x 2.5	3	42	HG-51088	Bearing, Sleeve	1
11	HG-51626	Seal, Lip, .375 x .75 x .25	1	43	HG-51954	Axle	1
12	HG-51628	Ring, Retaining, .375 Ext.	2	44	HG-51089	Bushing, .752 x 1.571 x .625	1
13	HG-51625	Rod, Bypass	1	45	HG-51066	Seal, Lip, .75 x 1.577 x .25 ...	1
14	HG-51627	Ring, Retaining, .75 Int.	1	47	HG-70583	Kit, Fan-Pulley	1
15	HG-51910	Arm, Bypass	1	48	HG-70865	Kit, Brake Arm	1
16	HG-51630	Ring, Retaining, .375 Push ...	1	49	HG-70864R	Kit, Center Section-Filter RH	1
17	HG-51048	Swashplate, Trunnion	1	50	HG-71006	Kit, Bypass Arm	1
18	HG-51140	Seal, Lip, 18 x 32 x 7	1	51	HG-70911	Kit, Filter	1
19	HG-44130	Washer, Flat, 11/32 x 7/8 x 1/16	1	52	HG-51635	Disc, Brake Cog	1
20	HG-51812	Screw, 5/16-24 x 1.0	1	53	HG-51362	Fan, 6" 10 Blade	1
21	HG-2003014	Spring, Compression	1	54	HG-51182	Pulley, 4.5	1
22	HG-2003017	Washer, .591 x .787 x .04	1	55	HG-51244	Nut, Hex Insert Lock, 1/2-20	1
23	HG-51062	Shaft, Input	1	56	HG-50752	Screw, Hex Wash. Hd. Tapp 1/4-20	3
24	HG-50315	Bearing, Ball, 17mm x 40 x 12	1	58	HG-52200	Fitting/O-ring Assembly	1
25	HG-2000022	Ring, Wire Retaining, .561	1	59	HG-51616	Screw, Patch, 5/16-24 x 1.0	1
26	HG-50951	Spacer	1	60	HG-51947	Bushing, Pilot, 1.125	1
27	HG-51161	Seal, Lip, 17 x 40 x 7	1	61	HG-51948	Washer, Plastic	2
28	HG-50329	Ring, Retaining	2	62	HG-51950	Washer, 1.5 x .34 x .062	1
29	HG-50551	Bearing, Thrust, 30 x 52 x 13	2	63	HG-51399	Spring, Extension	1
30	HG-44371	Washer, Flat, 5/8 x 1.0 x .05	1	64	HG-71095	Kit, Return Assembly RH	1
31	HG-44145	Ring, Retaining	1		HG-70853	Kit, Seal	1
32	HG-51130	Gear, Pinion, 13T	1				


LH TRANSMISSION

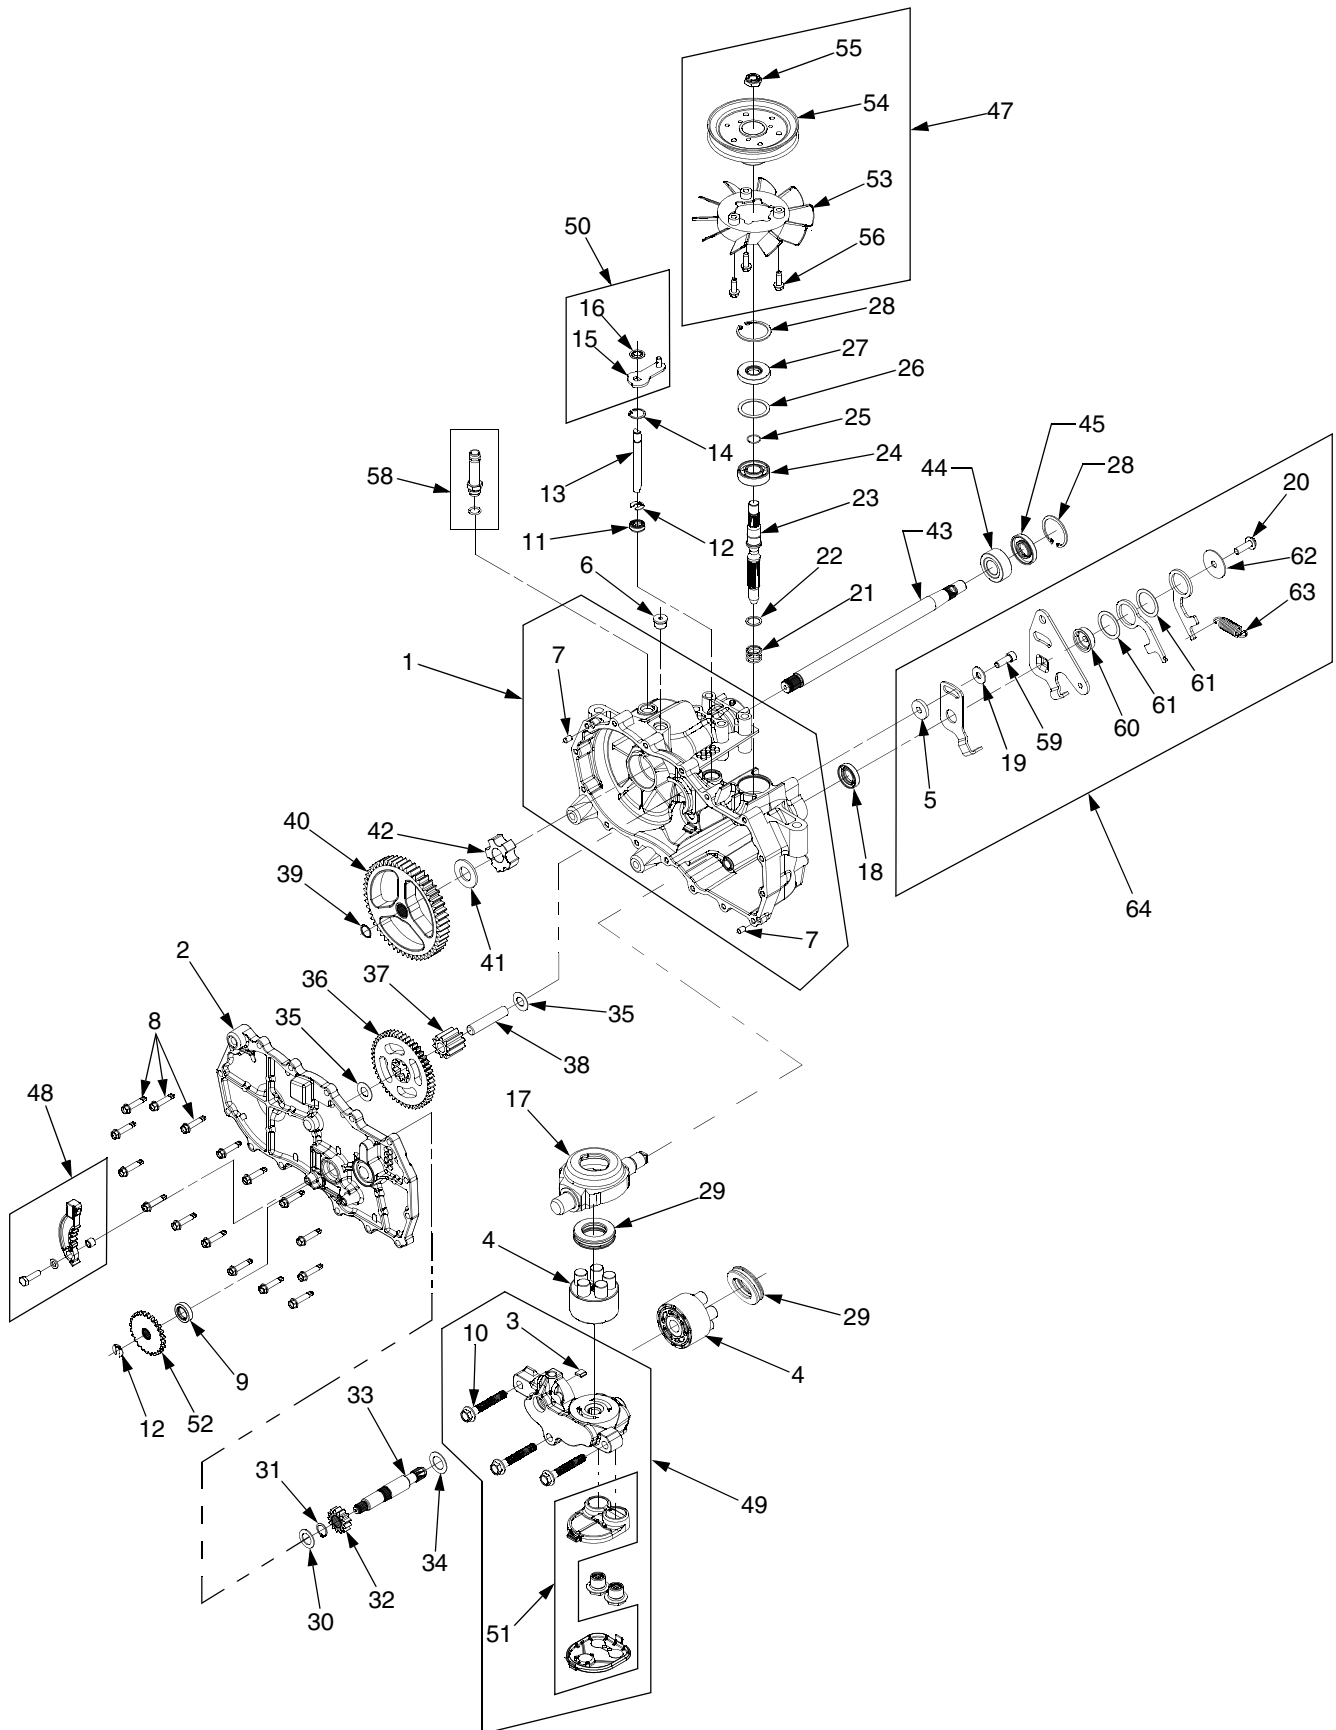

LH TRANSMISSION

REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	HG-70862L	Housing Assembly, Main RH	1	35	HG-50132	Washer, HT, .5 x 1.0 x .032 ..	2
2	HG-70863L	Side Assembly, RH	1	36	HG-51129	Gear, 10T/48T	1
3	HG-51448	Plate, Bypass	1	37	HG-51043	Gear, Jackshaft, 10T	1
4	HG-70331	Block Assembly	2	38	HG-51083	Pin, Jackshaft	1
5	HG-51949	Spacer, .32 x 1.005	1	39	HG-44871	Ring, Spiral Retaining	1
6	HG-9005110-5600	Plug, SAE #6	1	40	HG-51633	Gear, Bull, 52T	1
7	HG-9004800-2506	Pin, Stainless	2	41	HG-44875	Washer, 3/4 x 1.5 x .13	1
8	HG-51190	Screw, Hex Self Tapping, 1/4-20 x 1.25	16	42	HG-51088	Bearing, Sleeve	1
9	HG-44761	Seal, Lip, .625 x 1.0 x .25	1	43	HG-51954	Axle	1
10	HG-50016	Bolt, Hex Flange, 3/8-24 x 2.5	3	44	HG-51089	Bushing, .752 x 1.571 x .625	1
11	HG-51626	Seal, Lip, .375 x .75 x .25	1	45	HG-51066	Seal, Lip, .75 x 1.577 x .25 ...	1
12	HG-51628	Ring, Retaining, .375 Ext.	2	46	HG-70868L	Kit, Expansion Plate RH	1
13	HG-51625	Rod, Bypass	1	47	HG-70591	Kit, Fan-Pulley	1
14	HG-51627	Ring, Retaining, .75 Int.	1	48	HG-70865	Kit, Brake Arm	1
15	HG-51910	Arm, Bypass	1	49	HG-70864L	Kit, Center Section-Filter RH	1
16	HG-51630	Ring, Retaining, .375 Push ...	1	50	HG-71006	Kit, Bypass Arm	1
17	HG-51048	Swashplate, Trunnion	1	51	HG-70911	Kit, Filter	1
18	HG-51140	Seal, Lip, 18 x 32 x 7	1	52	HG-51635	Disc, Brake Cog	1
19	HG-44130	Washer, Flat, 11/32 x 7/8 x 1/16	1	53	HG-51365	Fan, 6" 10 Blade	1
20	HG-51812	Screw, 5/16-24 x 1.0	1	54	HG-50302	Pulley Kit, 4.5	1
21	HG-2003014	Spring, Compression	1	55	HG-51244	Nut, Hex Insert Lock, 1/2-20	1
22	HG-2003017	Washer, .591 x .787 x .04	1	56	HG-50752	Screw, Hex Wash. Hd. Tapp 1/4-20	3
23	HG-51062	Shaft, Input	1	57	HG-70921	Cap Assembly, Vent	1
24	HG-50315	Bearing, Ball, 17mm x 40 x 12	1	58	HG-52200	Fitting/O-ring Assembly	1
25	HG-2000022	Ring, Wire Retaining, .561	1	59	HG-51616	Screw, Patch, 5/16-24 x 1.0	1
26	HG-50951	Spacer	1	60	HG-51947	Bushing, Pilot, 1.125	1
27	HG-51161	Seal, Lip, 17 x 40 x 7	1	61	HG-51948	Washer, Plastic	2
28	HG-50329	Ring, Retaining	2	62	HG-51950	Washer, 1.5 x .34 x .062	1
29	HG-50551	Bearing, Thrust, 30 x 52 x 13	2	63	HG-51399	Spring, Extension	1
30	HG-44371	Washer, Flat, 5/8 x 1.0 x .05	1	64	HG-71094	Kit, Return Assembly RH	1
31	HG-44145	Ring, Retaining	1	65	HG-51401	Hose, .5 x 4.0	1
32	HG-51130	Gear, Pinion, 13T	1	66	HG-71004	Kit, Breather Assembly	1
33	HG-51632	Shaft, Motor	1				
34	HG-51069	Washer, .71 x 1.16 x .04	1		HG-70853	Kit, Seal	1


50" MOWER DECK

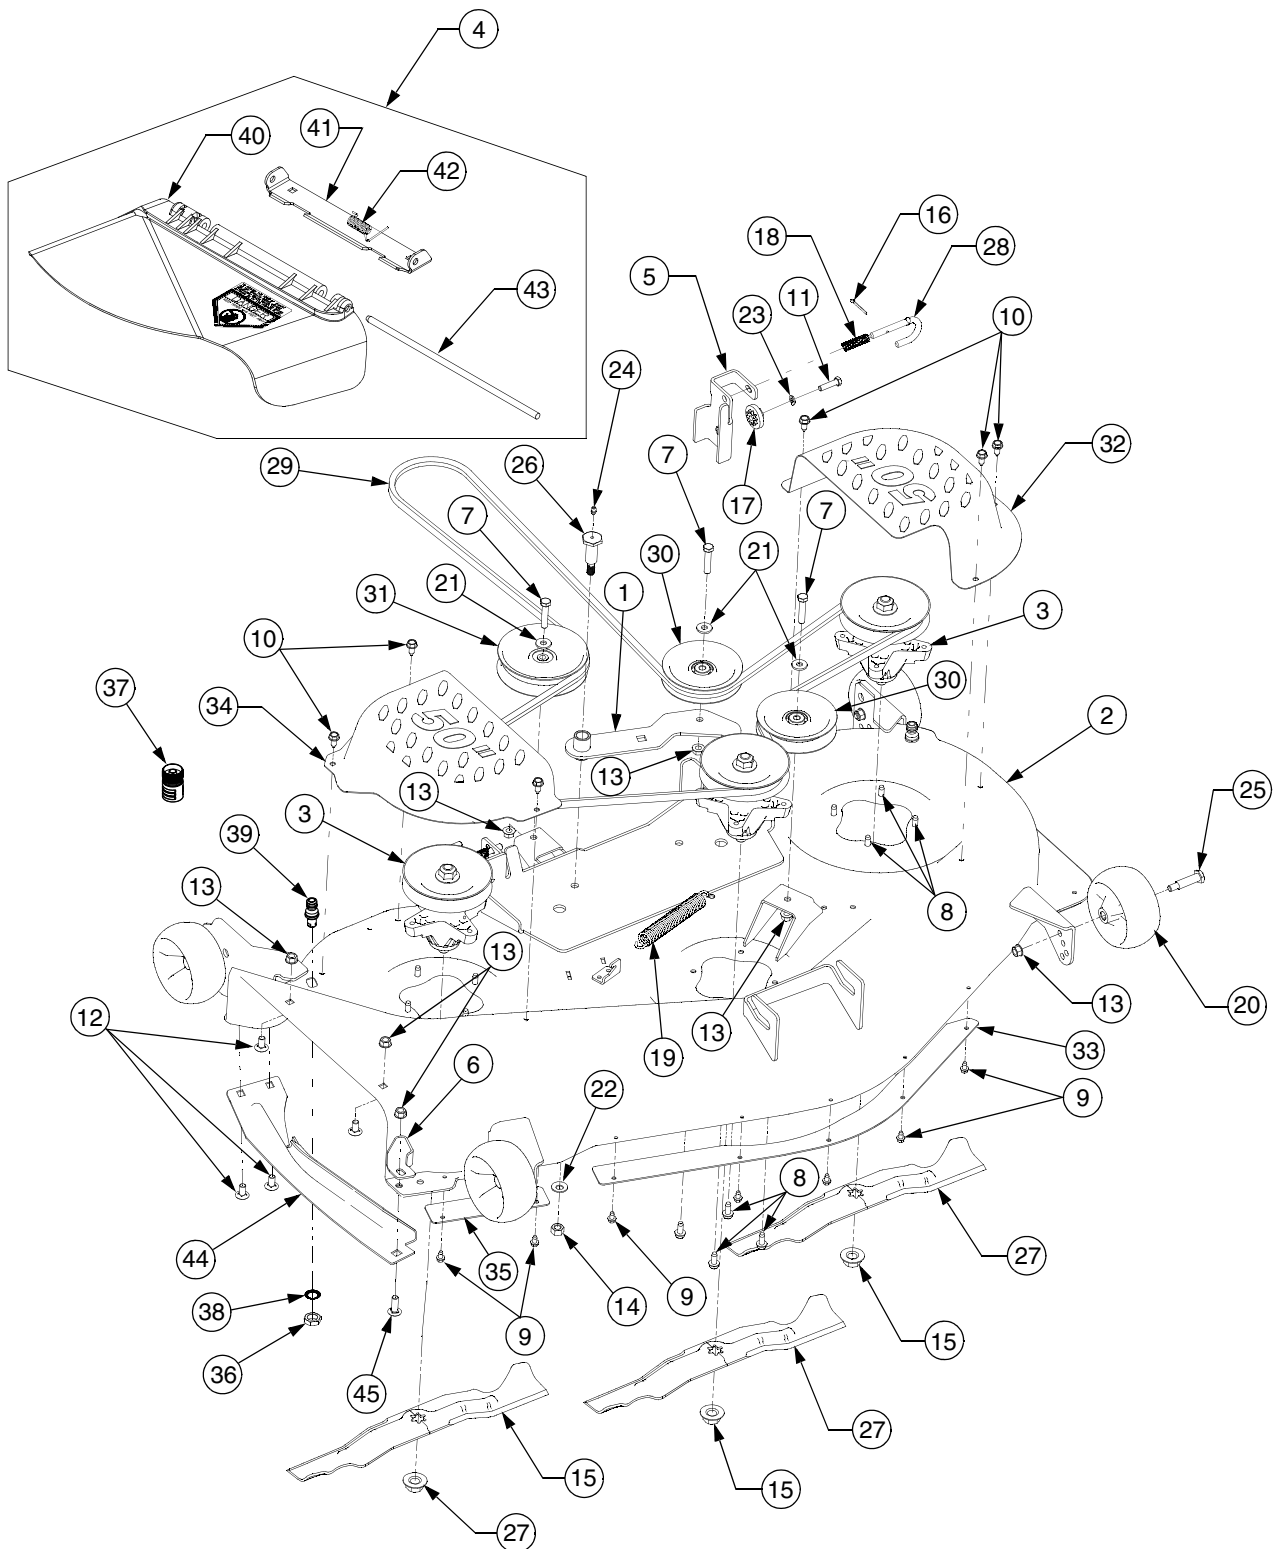

50" MOWER DECK

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04154	Arm, Idler	1
2	603-04284	Housing, Deck	1
	777S30015	Graphic, Danger	1
	777S30503	Graphic, Danger	1
	777I22282	Graphic, Instruction	1
3	618-04126	Spindle Assembly	1
	756-1171	Pulley, 5.39 Dia	1
4	631-04070	Chute Assembly, Discharge	1
	777S30284	Graphic, Danger	1
5	683-0254	Bracket, Deck Hanger	1
6	703-3279	Bracket, Stop	1
7	710-0347	Screw, Hex Cap, 3/8-16 x 1.75 GR5	3
8	710-1260A	Screw, Hex Wash. Hd. Tapp	12
		5/16-18 x .75	
9	710-0599	Screw, Hex Wash. Hd. Tapp	7
		1/4-20 x .5	
10	710-0726	Screw, Hex Wash. Hd. Tapp	6
		5/16-12 x .75	
11	710-0528	Screw, Hex Cap, 5/16-18 x 1.25 GR5	1
12	710-3178	Screw, Carriage, 3/8-16 x .75	4
13	712-0431	Nut, Hex Flange Lock, 3/8-16 GRF ..	12
14	712-3019	Nut, Hex, 7/16-14	1
15	712-0417A	Nut, Hex Flange, 5/8-18	3
16	714-0470	Pin, Cotter, 1/8 x 1.25	2
17	717-1553B	Gear, Deck Adjustment	1
18	732-0306A	Spring, Compression	2
19	732-0459	Spring, Extension, .94 Dia. x 6.74	1
20	734-04039	Wheel, Deck Ball, 5.0	4
21	736-3072	Washer, Flat, .38 x .93 x .110 HT	3
22	736-0407	Washer, Bell, .45 x 1.0 x .062	1
23	736-0119	Washer, Lock, 5/16	1
24	737-3000	Fitting, Lube, 3/16 Drive	1
25	738-0373	Screw, Shoulder, .498 x 1.53:3/8-16	4
26	738-3005A	Screw, Shoulder, .68 x 1.59	1
27	742-04053A	Blade, 2 in 1, 17.9 Lg	3
28	747-1116	Rod, Deck Hanger	2
29	754-04044	Belt V, Type A Sec x 134	1
30	756-1229	Pulley, Idler, 4.06 Dia	2
31	756-04141	Pulley, Idler,	1
32	783-04399	Cover, Belt LH	1
33	783-04414	Skirt, Center	1
34	783-04400	Cover, Belt RH	1
35	783-04415	Skirt, RH	1
36	712-0641	Nut, Hex, M16-1.5	2
37	721-04041	Adapter, Water Nozzle	1
38	736-0760	Washer, Lock	2
39	737-04003B	Nozzle, Deck Water	2
40	731-3131A	Chute, Deflector	1
41	783-04470	Bracket, Chute Mounting	1
42	732-3070	Spring, Torsion	1
43	711-1762	Pin, Hinge	1
44	703-3511	Guard, Finger	1
45	710-3168	Screw, Carriage, 3/8-16 x 1.0	1


ENGINE CONNECTIONS

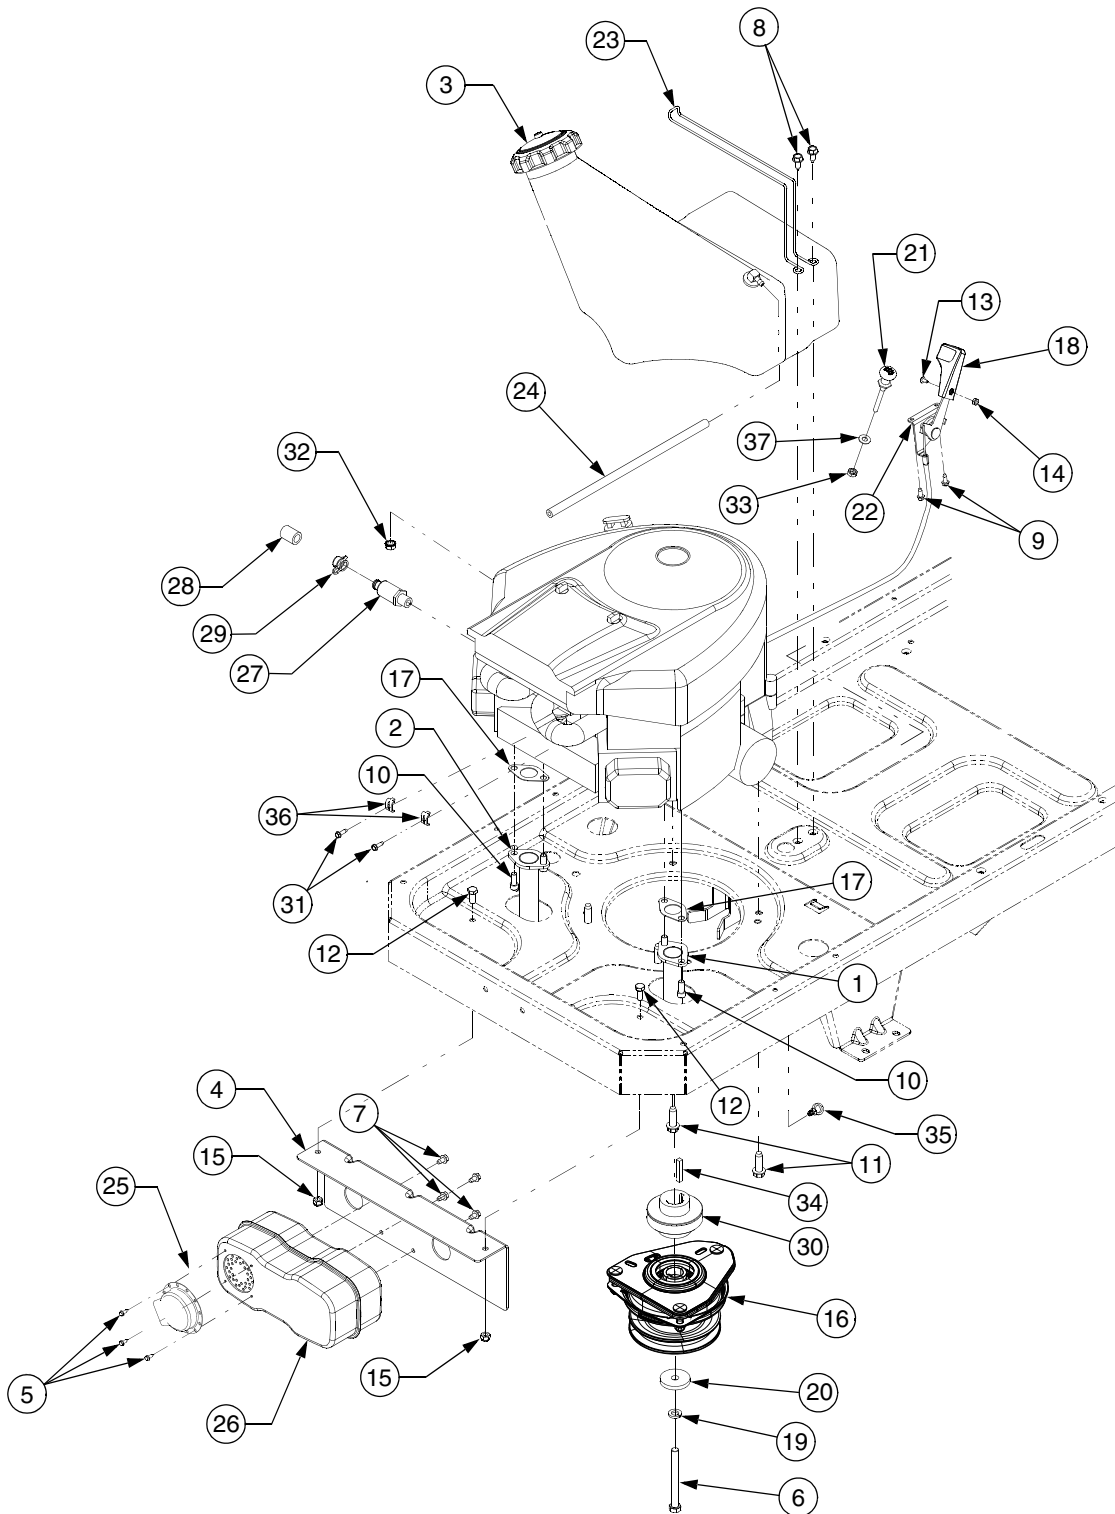

ENGINE CONNECTIONS

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04162	Tube, Exhaust RH	1
2	603-04163	Tube, Exhaust LH	1
3	651-04058A	Tank, Fuel, 3.0 Gal.	1
	751-3124B	Cap, Fuel	1
4	703-05441	Bracket, Muffler Mounting	1
5	710-0227	Screw, Hex Wash. Hd. Tapp	3
		#8-18 x .5	
6	710-04248	Screw, Hex Cap, 7/16-20 x 4.0 GR5	1
7	710-0599	Screw, Hex Wash. Hd. Tapp	4
		1/4-20 x .5	
8	710-0726	Screw, Hex Wash. Hd. Tapp	2
		5/16-12 x .75	
9	710-04261	Screw, Hex Wash. Hd. Tapp	2
		#12-16 x .5	
10	710-1314A	Screw, Socket Hd. 5/16-18 x .75	4
11	710-1315	Screw, Hex Wash. Hd. Tapp	4
		3/8-16 x 1.25	
12	710-3008	Screw, Hex Cap, 5/16-18 x .75 GR5	2
13	710-3217	Screw, Truss Hd. Mach. #8-32 x .375	1
14	712-0142	Nut, Hex, #8-32	1
15	712-0429	Nut, Hex Insert Lock, 5/16-18 GR5 ...	2
16	717-04183	Clutch Assembly, Electric PTO	1
17	721-0460	Gasket, Exhaust	2
18	731-04914	Knob, Throttle Control	1
19	736-0171	Washer, Lock, 7/16	1
20	736-04131	Washer, Flat, .438 x 1.75 x .25	1
21	746-04214	Cable, Choke, 61Lg	1
22	746-1086	Cable, Throttle, 39.0 Lg	1
23	747-04228	Wire, Tank Mounting	1
24	751-0535-12	Hose, Fuel Line	10in
	726-0205	Clamp, Hose	2
25	751-0564A	Deflector, Muffler	1
26	751-0616A	Muffler	1
27	751-3140	Valve, Oil Drain	1
28	751-3141	Hose, Oil Drain Extension	1
29	751-3142	Cap, Oil Drain Valve	1
30	756-04102A	Pulley, Drive, 4.0 Dia.	1
31	710-1237	Screw, Hex Wash. Hd. Tapp	2
		#10-32 x .625	
32	712-0271	Nut, Hex Sems, 1/4-20	1
33	712-3005	Nut, Hex Jam, 3/8-16 GR2	1
34	714-0118	Key, Square, 1/4 x 1.5	1
35	726-3055	Clip, Cable Retainer	1
36	BS-691024	Clamp, Casing	2
37	736-0300	Washer, Flat, .406 x .875 x .059	1


CRANKCASE, BREATHER, GOVERNOR AND LUBRICATION

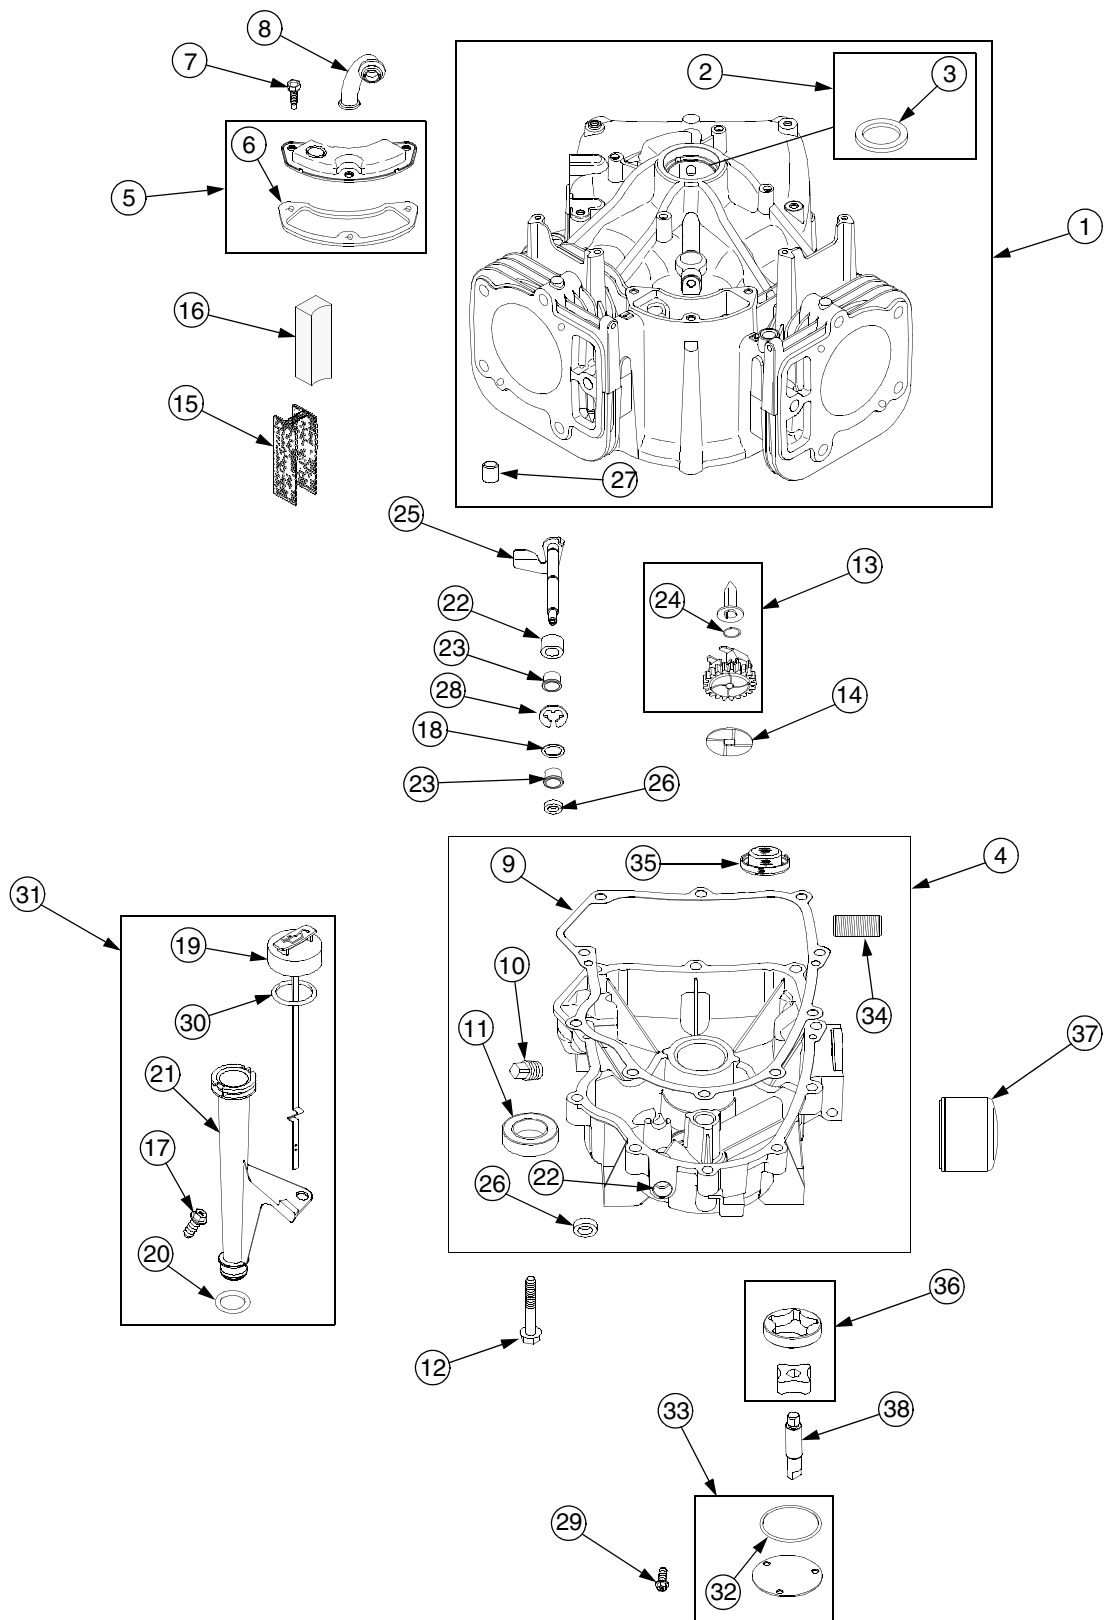

CRANKCASE, BREATHER, GOVERNOR AND LUBRICATION

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-699751	Cylinder Assembly	1
2	BS-499585	Kit, Bushing/Seat (Magneto Side)	1
3	BS-391086	Seal, Oil (Magnetor Side)	1
4	BS-699747	Sump, Engine	1
5	BS-499601	Breather Assembly	1
6	BS-690937	Gasket, Breather	1
7	BS-691108	Screw, Breather Assembly	3
8	BS-690942	Tube, Breather	1
9	BS-697227	Gasket, Crankcase	1
10	BS-690946	Plug, Oil Drain	1
11	BS-690947	Seal, Oil (PTO Side)	1
12	BS-694966	Screw, Engine Sump	10
13	BS-698231	Gear, Governor	1
14	BS-690412	Washer, Governor Lever	1
15	BS-690957	Retainer, Breather	1
16	BS-690956	Collector, Oil	1
17	BS-691108	Screw, Dipstick Tube	1
18	BS-690442	Washer, Governor Crank	1
19	BS-691036	Dipstick	1
20	BS-691032	Seal, Dipstick Tube	1
21	BS-691037	Tube, Dipstick	1
22	BS-690552	Bushing, Governor Crank	1
23	BS-690553	Bushing, Governor Crank	2
24	BS-698290	Retainer, Governor Shaft	1
25	BS-691045	Crank, Governor	1
26	BS-690657	Seal, Governor Shaft	1
27	BS-690959	Pin, Locating	2
28	BS-690328	Retainer, E-ring	1
29	BS-696999	Screw, Oil Pump Cover	3
30	BS-691031	Seal, Dipstick Tube	1
31	BS-499602	Dipstick Tube Assembly	1
32	BS-690589	Seal, O-ring (Oil Pump Cover)	1
33	BS-499613	Cover, Oil Pump	1
34	BS-690954	Nipple, Oil Filter	1
35	BS-690770	Screen, Oil Pump	1
36	BS-499054	Pump, Oil	1
37	BS-492932	Filter, Oil	1
38	BS-691042	Shaft, Pump	1
	BS-692714	Short Block	1
	BS-407577-0027	Engine, Service	1


CYLINDER HEAD, CRANKSHAFT, CAMSHAFT AND VALVES

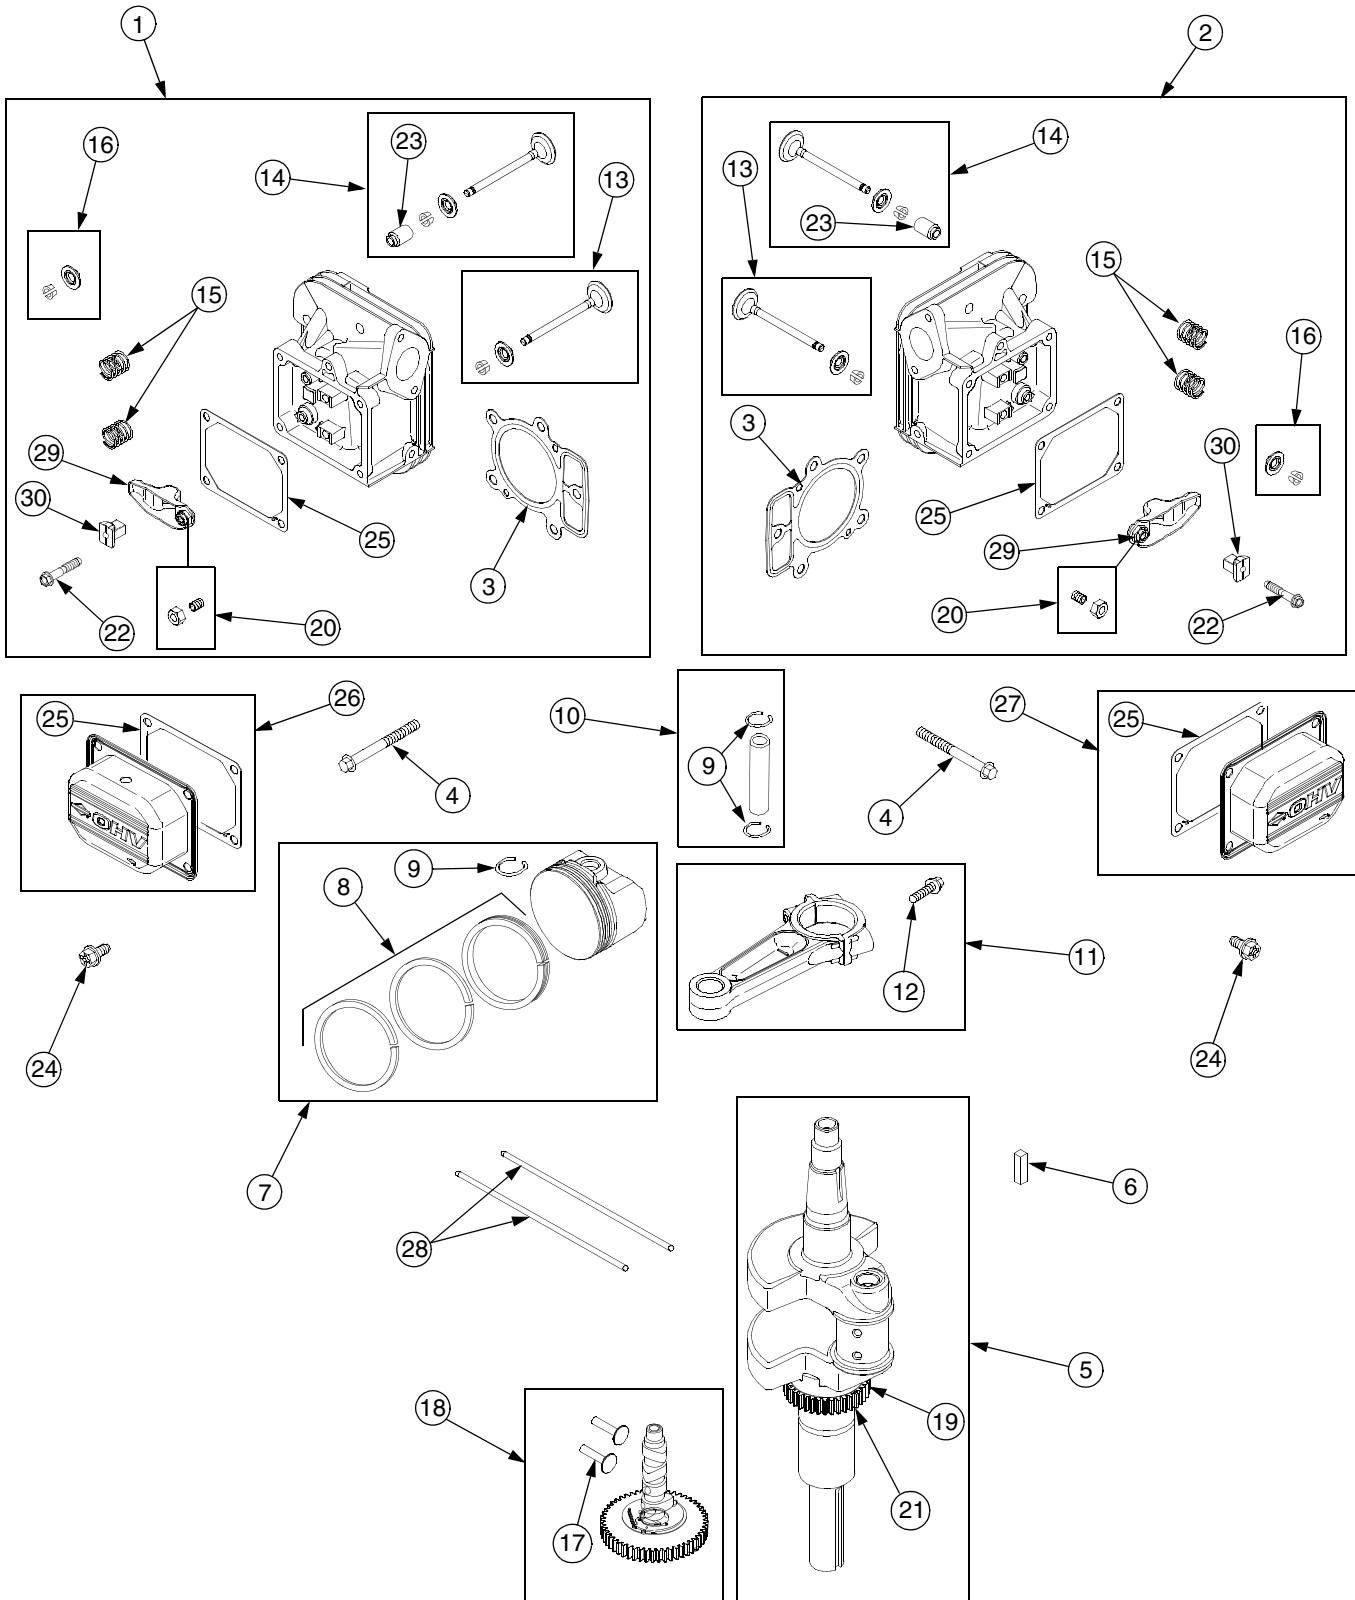

CYLINDER HEAD, CRANKSHAFT, CAMSHAFT AND VALVES

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-693998	Head, Cylinder (Cylinder 1)	1
2	BS-693999	Head, Cylinder (Cylinder 2)	1
3	BS-690962	Gasket, Cylinder Head	1
4	BS-690360	Screw, (Cylinder Head)	8
5	BS-790136	Crankshaft	1
6	BS-222698	Key, Flywheel	1
7	BS-499588	Piston Assembly (Standard)	2
	BS-499580	Piston Assembly, .020 Oversize	2
8	BS-499604	Ring Set, Piston (Standard)	2
	BS-499606	Ring Set, Piston .020 Oversize	2
9	BS-690975	Lock Ring, Piston Pin	4
10	BS-690229	Pin, Piston	2
11	BS-699699	Rod, Connecting	2
12	BS-690976	Screw (Connecting Rod)	4
13	BS-499596	Valve, Exhaust	2
14	BS-499597	Valve, Intake	2
15	BS-690963	Spring, Valve	4
16	BS-499586	Keeper, Valve	4
17	BS-690977	Tappet, Valve	4
18	BS-699748	Camshaft	1
19	BS-690979	Key, Timing	1
20	BS-690083	Adjuster, Rocker Arm	4
21	BS-690980	Gear, Timing	1
22	BS-697890	Screw (Rocker Arm)	4
23	BS-690968	Seal, Valve	2
24	BS-691127	Screw (Rocker Cover)	8
25	BS-690971	Gasket, Rocker Cover	2
26	BS-499599	Cover, Rocker (Cylinder 1)	1
27	BS-499600	Cover, Rocker (Cylinder 2)	1
28	BS-690981	Rod, Push (Steel)	4
	BS-690982	Rod, Push (Aluminum)	4
29	BS-690972	Arm, Rocker	4
30	BS-690973	Pivot, Rocker Arm	4


CARBURETOR AND INTAKE MANIFOLD

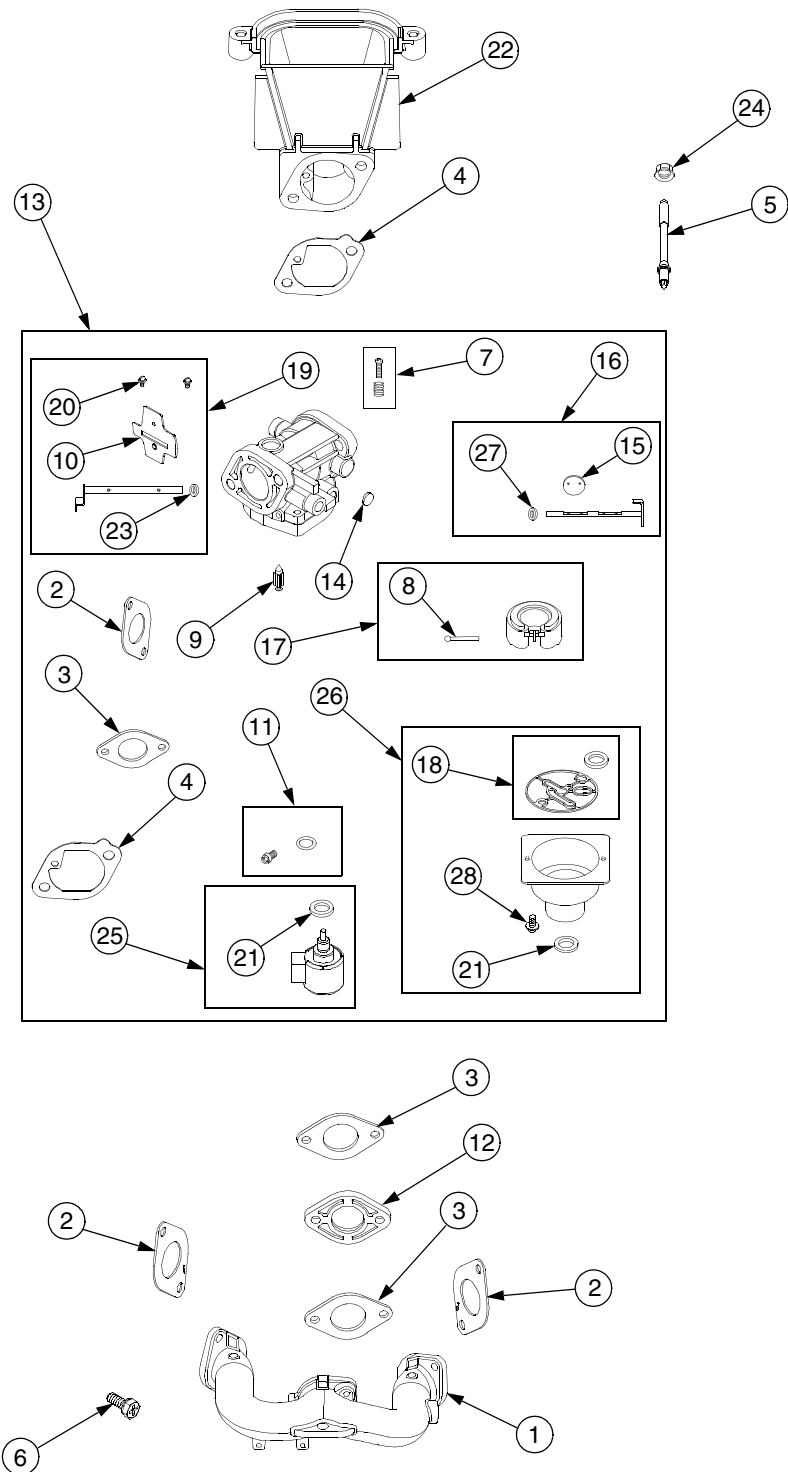

CARBURETOR AND INTAKE MANIFOLD


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-699801	Manifold, Intake	1
2	BS-690949	Gasket, Intake	2
3	BS-699803	Gasket, Intake	2
4	BS-699800	Gasket, Inake	1
5	BS-690951	Stud, Carburetor	1
6	BS-699816	Screw (Intake Manifold)	4
7	BS-699721	Kit, Idle Speed	1
8	BS-694918	Pin, Float	1
9	BS-698537	Valve, Float Needle	1
10	BS-699808	Valve, Choke	1
11	BS-698784	Jet, Main (Standard).....	1
	BS-699820	Jet, Main (High Altitude)	1
12	BS-699802	Spacer, Carburetor	1
13	BS-699807	Carburetor	1
14	BS-699810	Plug, Welch	1
15	BS-699809	Valve, Throttle	1
16	BS-699812	Kit, Throttle Shaft	1
17	BS-694914	Float, Carburetor	1
18	BS-698781	Gasket, Float Bowl	1
19	BS-699811	Kit, Choke Shaft	1
20	BS-690718	Screw (Choke Valve)	2
21	BS-695410	Washer, Sealing	1
22	BS-699806	Elbow, Intake	
23	BS-695414	Seal, Choke/Throttle Shaft	2
24	BS-690958	Nut (Carburetor)	2
25	BS-699728	Solenoid, Fuel	1
26	BS-699502	Bowl, Float	1
27	BS-699813	Seal, Throttle Shaft	1
28	BS-695407	Screw (Float Bowl)	1

FUEL SYSTEM AND CARBURETOR LINKAGE

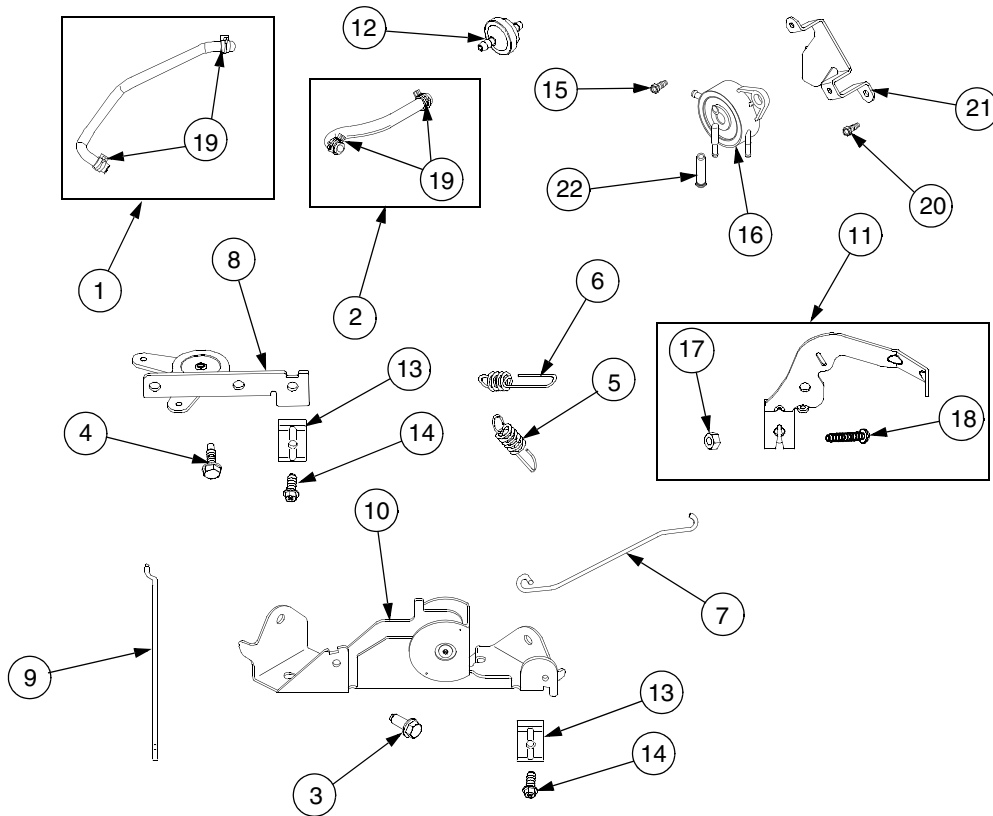


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-699799	Line, Fuel	1
2	BS-691049	Line, Fuel (Molded)	1
3	BS-691108	Screw (Control Bracket)	2
4	BS-691003	Screw (Control Bracket)	2
5	BS-698071	Spring, Governor	1
6	BS-691019	Spring, Governed Idle	1
7	BS-699805	Link, Throttle	1
8	BS-691021	Bracket, Choke Control	1
9	BS-691022	Link, Choke	1
10	BS-698761	Bracket, Control	1
11	BS-691048	Lever, Governor Control	1
12	BS-691035	Filter, Fuel	1
13	BS-691024	Clamp, Casing	2
14	BS-695134	Screw, Casing	2
15	BS-691108	Screw, Fuel Pump	2
16	BS-808656	Pump, Fuel	1
17	BS-691029	Nut (Governor Control Lever)	1
18	BS-690311	Bolt (Governor Control Lever)	1
19	BS-95162	Clamp, Hose	4
20	BS-691108	Screw, Fuel Pump Bracket	2
21	BS-691039	Bracket, Fuel Pump	1
22	BS-694000	Hose, Vacuum	1

FLYWHEEL AND ELECTRICAL

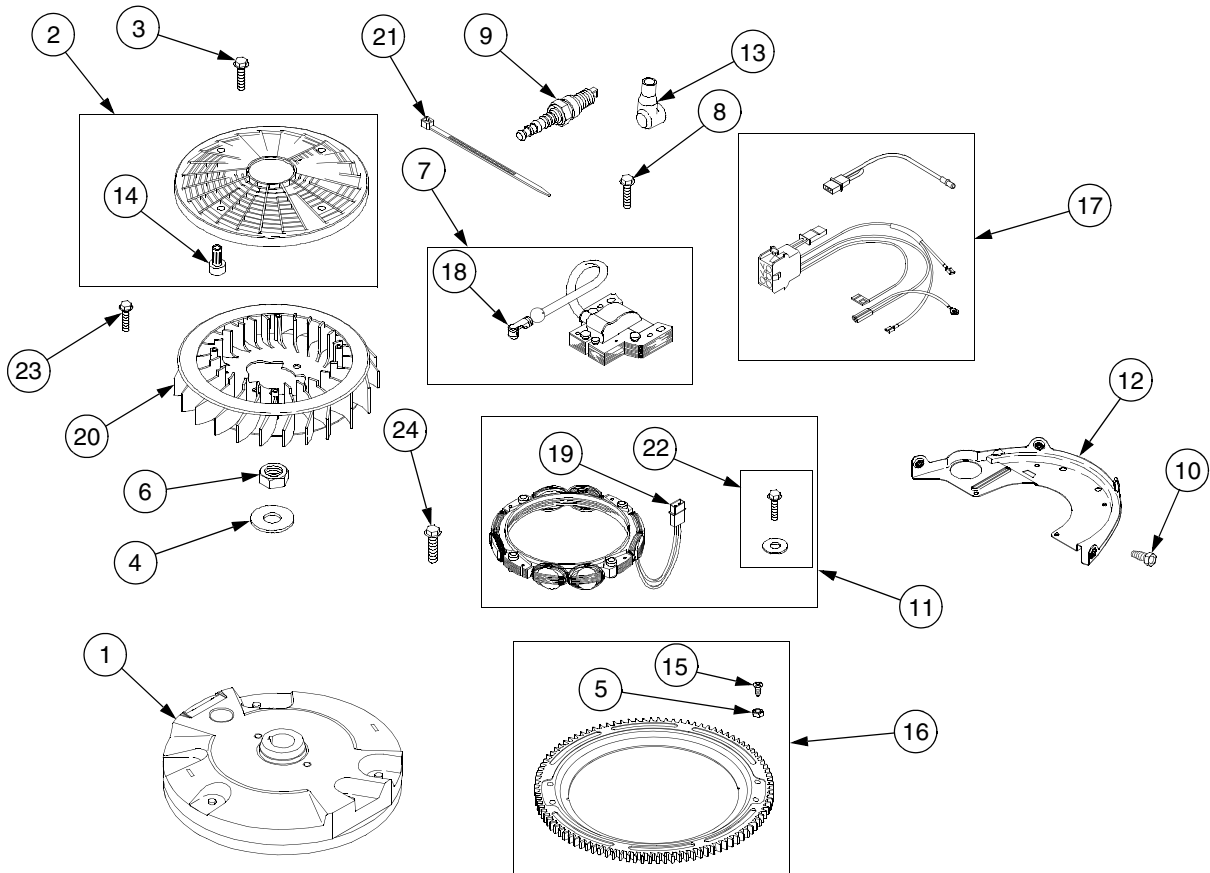


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-691053	Flywheel	1
2	BS-691055	Screen, Rotating	1
3	BS-698425	Screw (Rotating Screen)	4
4	BS-691056	Washer	1
5	BS-693148	Nut	4
6	BS-691059	Nut, Flywheel	1
7	BS-691060	Armature, Magneto	1
8	BS-691061	Screw	2
9	759-3336	Spark Plug (RC12YC)	2
10	BS-697820	Screw	4
11	BS-696457	Alternator	1
12	BS-691009	Plate, Back	1
13	BS-66538	Boot, Spark Plug	2
14	BS-691215	Spacer	4
15	BS-693149	Screw	4
16	BS-499612	Gear, Ring	1
17	BS-698330	Harness, Wiring	1
18	BS-493880	Terminal, Spark Plug	2
19	BS-399916	Wire/Connector, Alternator	1
20	BS-499603	Fan, Flywheel	1
21	BS-280275	Tie, Cable	1
22	BS-698516	Kit, Screw/Washer	1
23	BS-690372	Screw	4
24	BS-691183	Screw	2

AIR FILTER, BLOWER HOUSING AND ENGINE AIR GUIDES

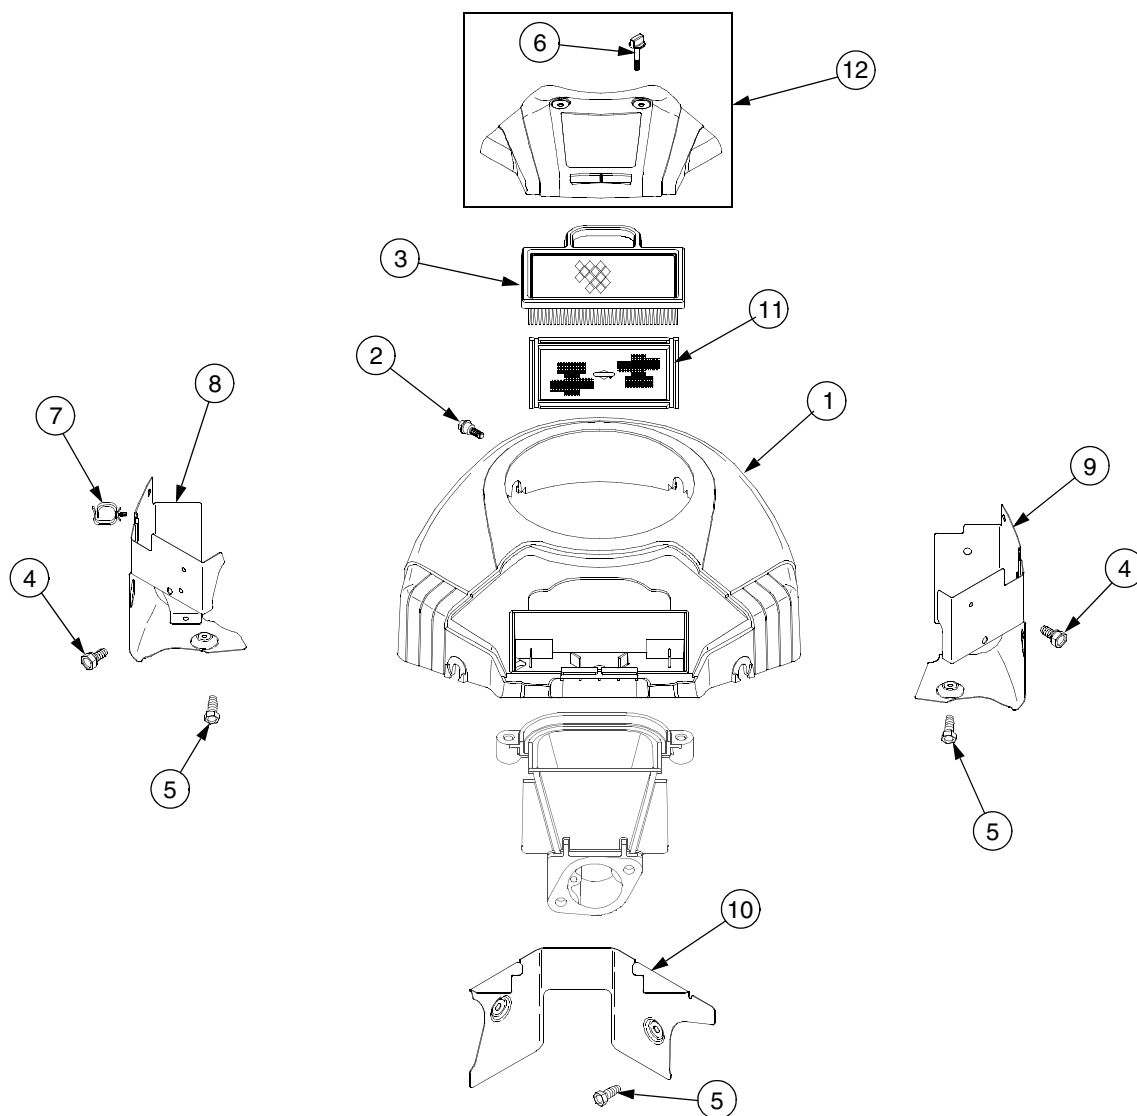





REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-695277	Housing, Blower	1
2	BS-691005	Screw (Blower Housing)	6
3	BS-499486	Filter, Air Cleaner Cartridge	1
4	BS-691003	Screw (Air Guide Cover)	2
5	BS-691108	Screw (Air Guide Cover)	4
6	BS-691008	Knob, Air Cleaner	2
7	BS-691010	Clip	1
8	BS-691012	Cover, Air Guide	1
9	BS-691014	Cover, Air Guide	1
10	BS-691015	Cover, Air Guide	1
11	BS-273638	Filter, Pre Cleaner	1
12	BS-499788	Cover, Air Cleaner	1

STARTER MOTOR

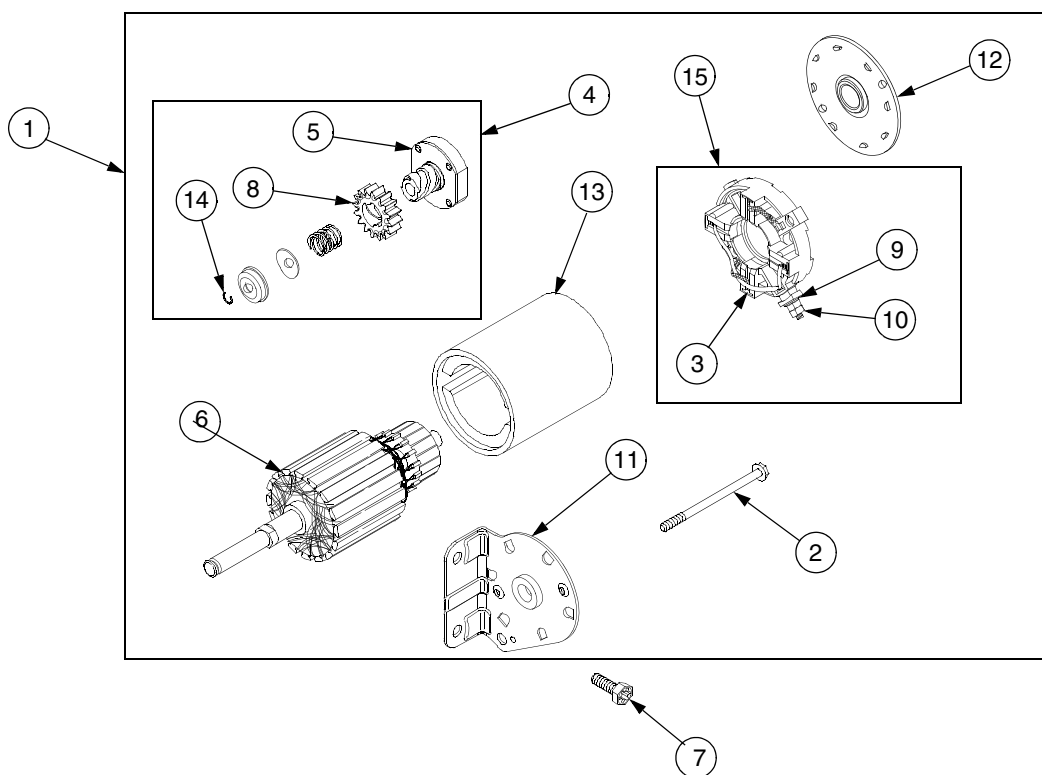

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-497595	Motor, Starter	1
2	BS-690323	Bolt	2
3	BS-497608	Brush Set	1
4	BS-497606	Drive, Starter	1
5	BS-692024	Clutch, Drive	1
6	BS-692034	Armature, Starter	1
7	BS-690372	Screw, Drive Cap	2
8	BS-693058	Gear, Pinion	1
9	BS-691029	Nut (Brush Retainer)	1
10	BS-693167	Nut (Brush Retainer)	1
11	BS-691283	Cap, Drive	1
12	BS-691286	Cap, End	1
13	BS-693757	Housing, Starter	1
14	BS-691265	Ring, Retaining	1
15	BS-691293	Retainer, Brush	1

SERVICE KITS

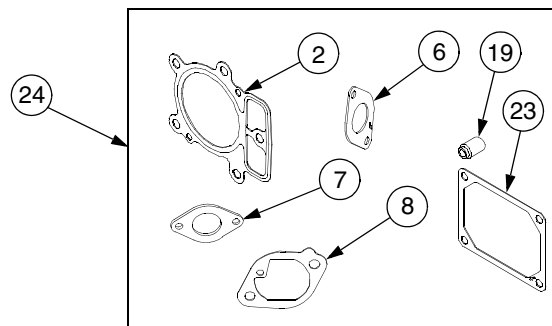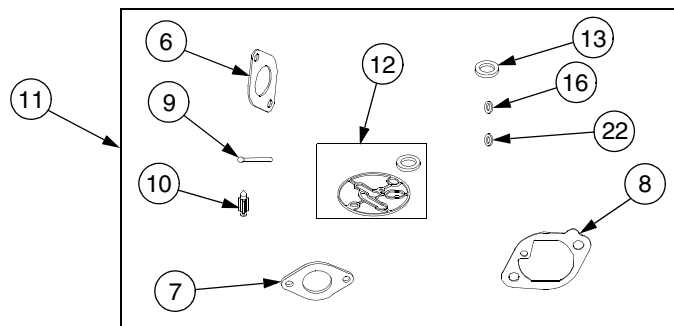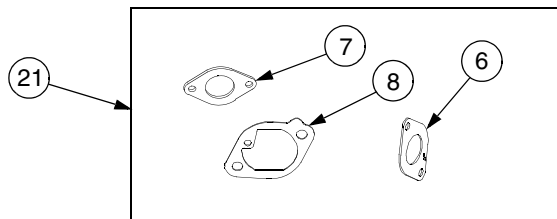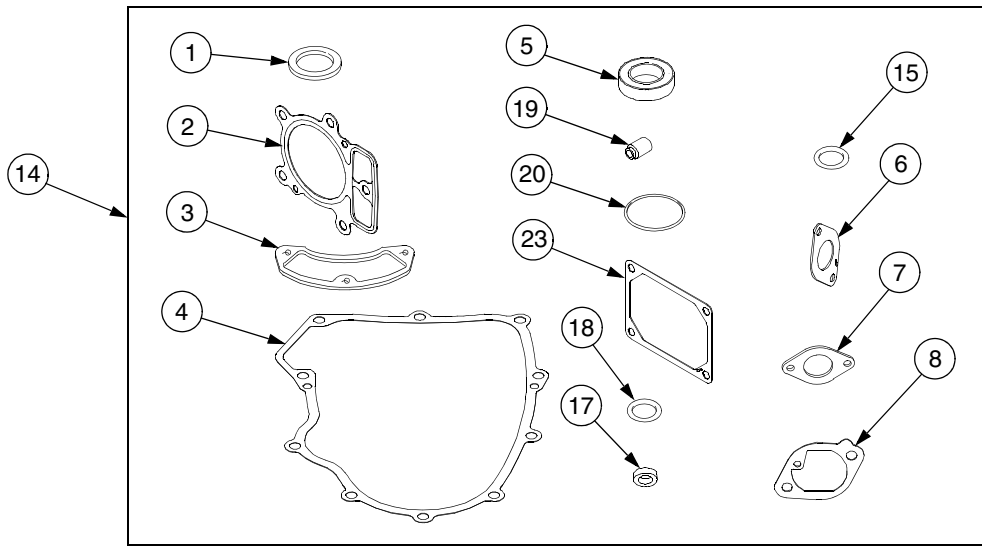

SERVICE KITS

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-391086	Seal, Oil	1
2	BS-690962	Gasket, Cylinder Head	2
3	BS-690937	Gasket, Breather	1
4	BS-697227	Gasket, Crankcase	1
5	BS-690947	Seal, Oil	1
6	BS-690949	Gasket, Intake	2
7	BS-699803	Gasket, Intake	1
8	BS-699800	Gasket, Intake	1
9	BS-694918	Pin, Float Hinge	1
10	BS-698537	Valve, Float Needle	1
11	BS-699814	Kit, Carburetor Overhaul	1
12	BS-698781	Gasket, Float Bowl	1
13	BS-695410	Washer, Sealing	1
14	BS-699823	Set, Engine Gasket	1
15	BS-691032	Seal, Dipstick Tube	1
16	BS-695414	Seal, Choke/Throttle Shaft	1
17	BS-690657	Seal, Governor Shaft	1
18	BS-691031	Seal, Dipstick/Tube	1
19	BS-690968	Seal, Valve	1
20	BS-690589	Seal, O-Ring	1
21	BS-699815	Gasket Set, Carburetor	1
22	BS-699813	Seal, Throttle Shaft	1
23	BS-690971	Gasket, Rocker Cover	1
24	BS-699822	Gasket Set, Valve	1