


PARTS MANUAL

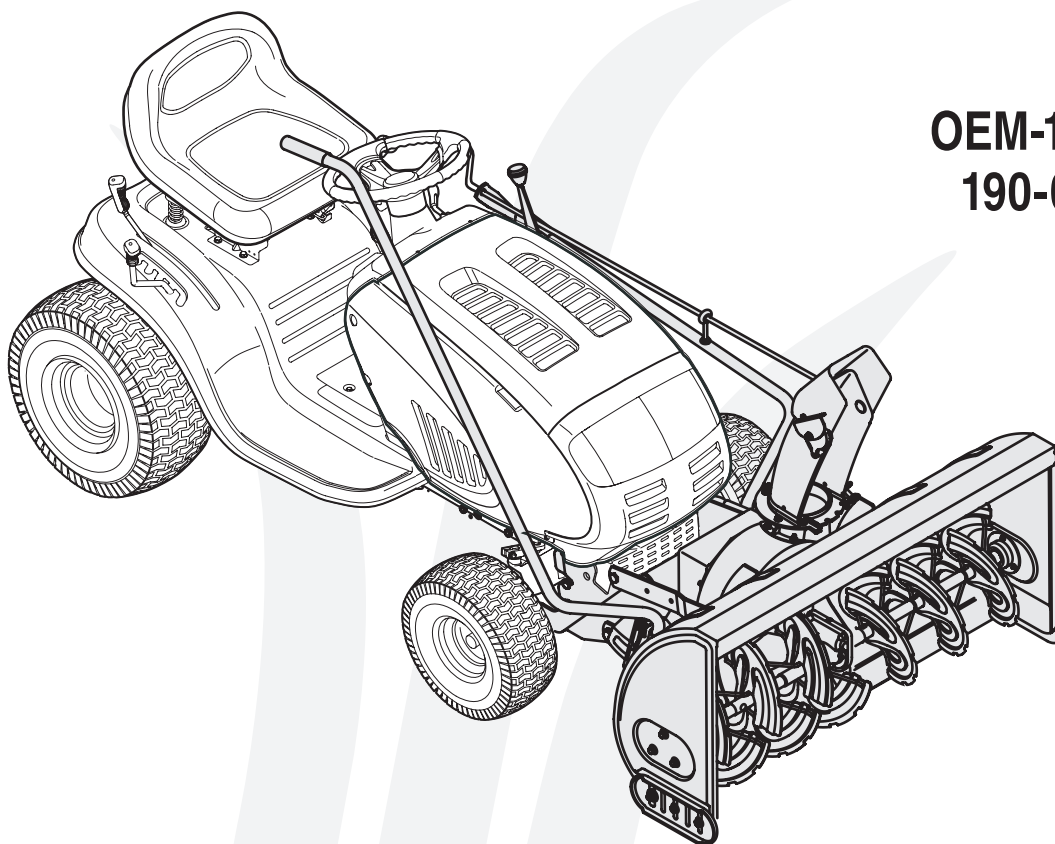

Model
OEM-190-032
190-032-101

42-inch Two-Stage Snow Thrower Attachment For FastAttach™ Compatible Lawn Tractors & Garden Tractors

IMPORTANT

READ SAFETY RULES AND INSTRUCTIONS CAREFULLY BEFORE OPERATION

Warning: This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest engine authorized service dealer or contact the service department, P.O. Box 361131 Cleveland, Ohio 44136-0019.

13

Part List: Snow Thrower Attachment



**For parts and/or
accessories
please call
1-800-800-7310, or
1-330-220-4683.
www.mtdproducts.com**

NOTE:

For painted parts, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part.

For instance, if a part numbered 700-xxxx is painted powder black, the part number to order would be 700-xxxx-0637.

Yardman Green - 0665
Black - 0637

REF NO.	PART NUMBER	DESCRIPTION	Qty	REF NO.	PART NUMBER	DESCRIPTION	Qty.
1	618-04315	Auger Gear Box (Incl. Ref. 23-41)	1	34	721-0327	Grease Seal	1
2	684-0158	Impeller Assembly, 12"	1	35	736-0351	Flat Washer, .76 x 1.5 x .030	2
3	684-0148	Housing Assembly	1	36	736-0369	Flat Washer, .508 x 1.0 x .020	4
4	703-2734	Housing Brace Bracket	1	37	736-0617	Thrust Washer, .75 x 1.25 x .0615	2
5	684-04163	LH Spiral Auger	3	38	741-0150	Thrust Bearing, .75 x 1.25 x .078	1
6	684-04164	RH Spiral Auger	3	39	748-0108	Flange Bearing, .503 x .75	1
7	710-0157	Hex Cap Screw, 5/16-24 x .75	2	40	741-0700	Flange Bearing, .75 x 1.0 x .59	1
8	710-0260A	Carriage Bolt, 5/16-18 x .62	10	41	721-0179	Grease Seal	2
9	710-0276	Splined Carriage Screw	2	42	684-0061	Chute Crank Assembly	1
10	710-0726	Self Tapping Screw	8	43	703-2735A	Chute Crank Bracket	1
11	714-04040	Bow-Tie Cotter Pin	8	44	705-5226	Chute Reinforcer	1
12	712-3010	Hex Nut, 5/16-18	6	45	710-0276	Splined Carriage Screw	2
13	712-3057	Hex Nut, 5/16-24	2	46	710-0262	Carriage Bolt, 5/16-18 x 1.5	1
14	715-0114	Spirol Pin, 1/4 x 1-1/2	2	47	710-04071	Carriage Screw, 5/16-18 x 1.0	1
15	736-0231	Flat Washer, .344 x 1.125 x .12	3	48	710-0703	Screw, 1/4-20 x .75	4
16	736-0242	Bell Washer, .340 x .872	17	49	710-0896	Hex Index Washer Screw	1
17	741-0245	Hex Flange Bearing, .75 ID	2	50	710-3015	Hex Cap Screw, 1/4-20 x .75	6
18	741-0493A	Flange Bushing, .80 x .91	12	51	712-04064	Nylon Hex Lock Nut, 1/4-20	10
19	784-0396A	Skid Plate Bracket, 42"	1	52	712-04063	Nylon Hex Lock Nut, 5/16-18	5
20	784-5038B	Slide Shoe	2	53	715-0129	Spirol Pin, .125 x .82	1
21	711-0469	Spacer, .75 x .125 x .5	4	54	731-0851A	Chute Flange Keeper	3
22	784-5618	Hex Bearing Housing, 1.0	2	55	731-1300D	Lower Chute	1
23	618-0123	RH Reducer Housing	1	56	731-1320	Upper Chute	1
24	618-0124	LH Reducer Housing	1	57	731-1379D	Adapter Chute	1
25	703-2733A	Housing Brace Plate	1	58	731-1313C	Chute Tilt Cable Guide	1
26	710-0642	Self Tapping Screw, 1/4-20 x .75	5	59	741-0475	Plastic Bushing	2
27	711-04468	Spiral Axle, 41.5"	1	60	784-5149	Joint Block Assembly	1
28	714-0161	Hi-Pro Key, 3/16 x 5/8	1	61	784-5594	Cable Bracket	1
29	715-0143	Spring Spirol Pin, .25 x 1.25	1	62	784-5647	Chute Crank Bracket	1
30	717-0528A	Worm Gear, 20-tooth	1	63	712-3004A	Flange Lock Nut, 5/16-18	6
31	717-3320	Worm Shaft	1	64	731-04870	Spacer 1.25 x .75 x 1.00	2
32	718-0513	Thrust Collar	1	65	731-1086A	Sleeve .758 x 1.00 x 2.70	4
33	721-0325	Grease Plug	1	66	738-04124	Shear Pin, .25 x 1.50	8



REF NO.	PART No.	DESCRIPTION	Qty.	REF NO.	PART No.	DESCRIPTION	Qty.
1	720-0232	Knob	1	38	736-0272	Flat Washer, .51 x 1.0 x .060	4
2	784-5604	Chute Tilt Handle	1	39	736-0366	Flat Washer, .64 x 1.12 x .125	4
3	731-1313C	Chute Tilt Cable Guide	1	40	736-0452	Bell Washer, .396 x 1.14 x .095	2
4	712-04063	Nylon Hex Lock Nut, 5/16-18	22	41	783-1014A	Drive Mounting Bracket	1
5	603-0302	Chute Tilt Bracket Assembly	1	42	738-0234	Shoulder Screw, .5 x .29, 3/8-16	2
6	710-0262	Carriage Bolt, 5/16-18 x 1.5	2	43	741-0170	Flange Bearing w/ Flats	2
7	736-0451	Saddle Washer, .32 x .93	2	44	756-1181A	Drive Pulley, 7"	1
8	741-0475	Plastic Bushing	1	45	747-1192	Rod, 1/2 x 11.55	1
9	735-0234	Rubber Grommet, .44 x .94 x .5	1	46	783-0876	Link, 5.875	2
10	747-0697	Eye Bolt	1	47	783-0877	Link, 15.4	2
11	736-0242	Bell Washer, .340 x .872	1	48	783-0878	Link, 13.35	2
12	750-04467	Support Chute Tube	1	49	783-1274B	Heat Shield	1
13	714-0507	Cotter Pin, 3/32 x .75	1	50	790-00110	Snow Thrower Lift Bracket	1
14	784-5149	Joint Block Assembly	1	51	710-1268	Hex Index Washer Screw #10-16	1
15	747-1201	Chute Crank Rod, .375 x 33	1	52	710-3143	Pan Phillips Screw, #10-24 x .75	1
16	746-1108	Chute Cable, 62"	1	53	710-3180	Hex Cap Screw, 5/16-18 x 1.75	2
17	746-1109	Chute Cable w/ Clip, 62"	1	54	715-0114	Heavy Duty Spirol Pin, 1/4 x 1.5	1
18	715-0138	Rolled Pin, 1/8 x .63	1	55	720-0274	Handle Grip	1
19	720-0201A	Crank Knob	1	56	725-0157	Cable Tie	5
20	726-0100	Push Cap, 3/8 ID	1	57	732-0306	Compression Spring	1
21	747-04400	Rod, .375 x 11.375	1	58	736-0140	Flat Washer, .385 x .62 x .063	1
22	715-0129	Spirol Pin, .125 x .82	2	59	736-0400	Flat Washer, .194 x .62 x .063	1
23	611-0132A	Rod Assembly	1	60	746-1103A	Lift Cable, 42" w/ Trigger Control	1
24	783-0880C	RH Support Plate Assembly	1	61	747-1203	Lift Index Rod	1
25	783-0879C	LH Support Plate Assembly	1	62	750-1221	Lift Handle Tube	1
26	683-04150	Lift Bracket Assembly	1	63	05931A	Bearing Housing, 1.85 ID	1
27	710-0805	Hex Cap Screw, 5/16-18 x 1.50	2	64	703-2736	Belt Cover	1
28	710-0964A	Hex Cap Screw, 5/8-18 x 1.31	2	65	710-0514	Hex Cap Screw, 3/8-16 x 1.0	8
29	710-3008	Hex Cap Screw, 5/16-18 x .75	4	66	710-3251	Socket Head Cap Screw	1
30	711-0332	Clevis Pin, .5 x .78	2	67	712-04065	Flange Lock Nut, 3/8-16	6
31	712-0386A	Slotted Hex Nut, 5/8-18	2	68	714-0122	Square Key, 3/16 x .75	1
32	712-3000	Hex Lock Nut, 3/8-16	4	69	714-0126	Hi-pro Key, 3/16 x .75	1
33	712-3022	Hex Lock Nut, 1/2-13	4	70	717-1714A	Right Angle Drive	1
34	714-0470	Cotter Pin, 1/8 x 1.25	2	71	718-0691	Coupling	1
35	714-0474	Cotter Pin, .125 x .75	4	72	741-0309	Flange Ball Bearing, .75 x 1.85	1
36	716-0102	Snap Ring	1	73	747-1257	Belt Keeper Rod	1
37	784-0402	Skid Plate	1				










* Refer to the table on page 6 for your tractor's applicable upper v-belt.

13

Part List: Snow Thrower Attachment



**For parts and/or
accessories
please call
1-800-800-7310, or
1-330-220-4683.
www.mtdproducts.com**

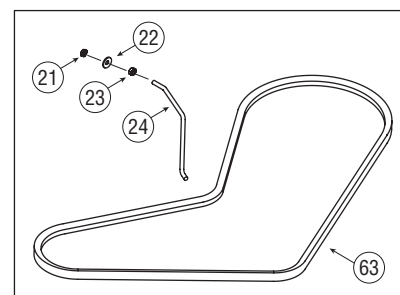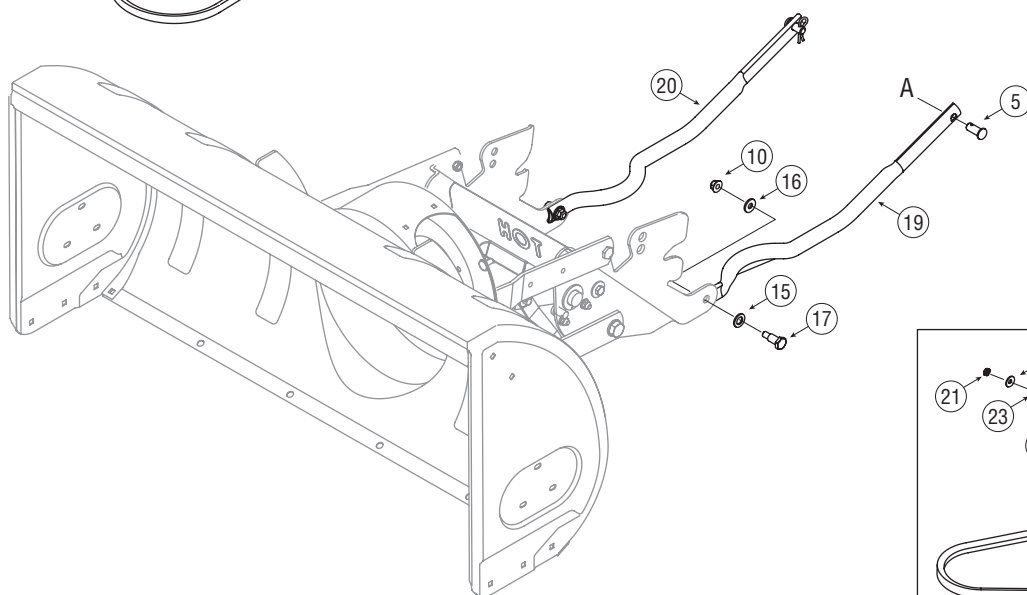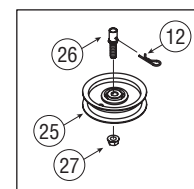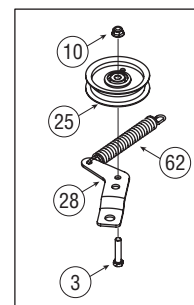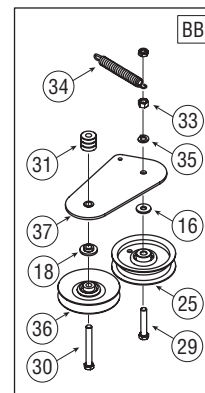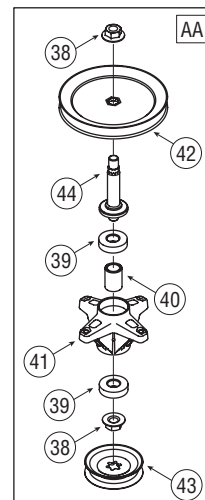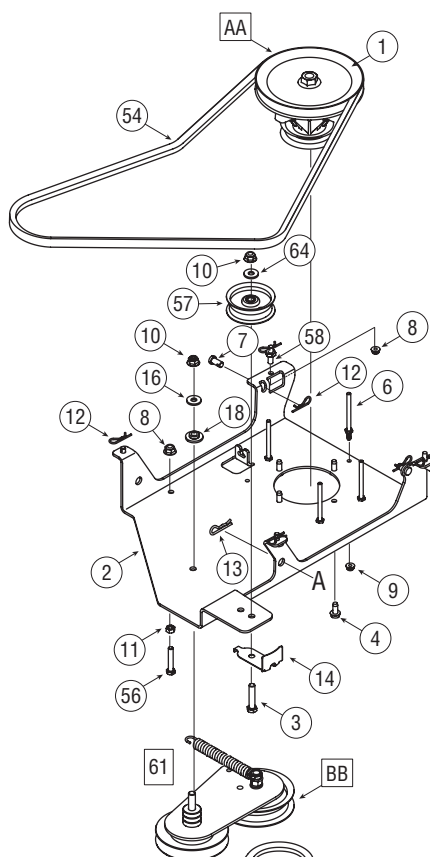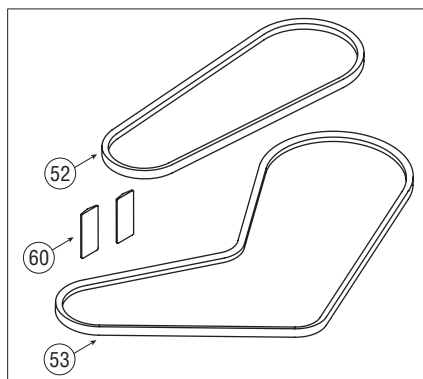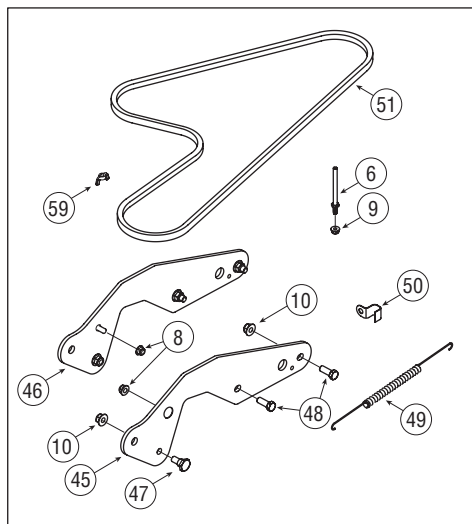

13

Part List: Snow Thrower Attachment



**For parts and/or
accessories
please call
1-800-800-7310, or
1-330-220-4683.
www.mtdproducts.com**

REF NO.	PART No.	DESCRIPTION	Qty.	REF NO.	PART No.	DESCRIPTION	Qty.
1	618-0411	Spindle Assembly (Incl. 38-44)	1	33	712-0241	Hex Nut, 3/8-24	1
2	683-04210	Pulley Mounting Bracket	1	34	732-0978	Extension Spring, .620 x 5.62	1
3	710-0347	Hex Cap Screw, 3/8-16 x 1.75	2	35	736-0169	Lock Washer, 3/8	1
4	710-1260A	Self Tapping Screw	4	36	756-0487	Idler pulley, 4" Diameter	1
5	711-0310	Clevis Pin, .5 x 1.18	2	37	784-5727	Idler Pivot Arm	1
6	711-1000	Belt Keeper Pin †	4	38	712-0417	Flange Nut 5/8-18	2
7	711-1421	Clevis Pin, 3/8 x .75	2	39	741-0919	Ball Bearing	2
8	712-04063	Nylon Hex Lock Nut, 5/16-18	4	40	750-1096	Spacer	1
9	712-04064	Nylon Hex Lock Nut, 1/4-20 †	4	41	619-0044	Deck Spindle Housing	1
10	712-04065	Hex Flange Lock Nut, 3/8-16	11	42	756-0999	Deck Pulley 7"	1
11	712-3010	Hex Nut, 5/16-18	1	43	756-1173	Pulley 3.75"	1
12	714-0145	Click Pin, .092 x 1.64	7	44	738-0976	Spindle Shaft	1
13	714-0147	Internal Cotter Pin, .125 x 1.75	2	45	683-04215	Snow Thrower Support Brackets LH †	1
14	732-04168	Belt Guard	1	46	683-04214	Snow Thrower Support Brackets RH †	1
15	736-0192	Flat Washer, .531 x .93 x .09	2	47	738-0143	Shoulder Screw †	2
16	736-3072	Flat Washer, .38 x .93 x .11	4	48	710-0514	Hex Head Screw 3/8-16 x 1.00 †	4
17	738-0145	Shoulder Screw, 3/8-16	2	49	732-04237	Extension Spring .50 x 12.00	1
18	738-0347	Shoulder Spacer, .625 x .169	2	50	726-0354	Clamp 16mm †	1
19	749-1103	LH Support Tube	1	51	754-0498	V-Belt †	1
20	749-1104	RH Support Tube	1	52	754-0435	Upper V-belt*	1
21	712-0298	Hex Lock Nut, 1/4-20	1	53	754-0481	Upper V-belt*	1
22	736-0270	Bell Washer.265 x .75 x .062	1	54	754-0371A	Upper V-belt*	1
23	712-3006	Hex Nut 1/4-20	1	55	754-0125A	V-Belt	1
24	747-04135	Belt Keeper Rod	1	56	710-3180	Hex Cap Screw, 5/16-18 x 1.75	1
25	756-0627D	Idler Pulley 3.50 dia.	3	57	756-04224	Idler Pulley, Flat 2.75 OD	1
26	650-0040	Idler Assembly Spacer	1	58	710-04511	Pin 5/16-18	1
27	712-0431	Flange Lock Nut 3/8-16	1	59	712-04100	Wing Nut 5/16-18 †	1
28	783-1291	Idler Bracket	1	60	730-3000	Reflector	2
29	710-0151	Hex Cap Screw, 3/8-24 x 2	1	61	684-0149	Double Idler Bracket Assembly	1
30	710-0521	Hex Cap Screw, 3/8-16 x 3	1	62	732-0594A	Extension Spring .91 x 7.33	1
31	711-0242	Spacer	3	63	754-0490	V-Belt	1
32	712-0116	Nylon Jam Lock Nut, 3/8-24	1	64	736-3010	Flat Washer	

* Refer to the table on page 6 for your tractor's applicable upper v-belt.

† Used only on the model 700-799 Series units