


For Parts Call 606-678-9623 or 606-561-4983

To The Owner • Carton Contents • Assembly • Parts Lists • Warranty

OPERATOR'S MANUAL

Twin Rear Bagger Kit

For Lawn Tractors & Garden Tractors
with a 46" Deck

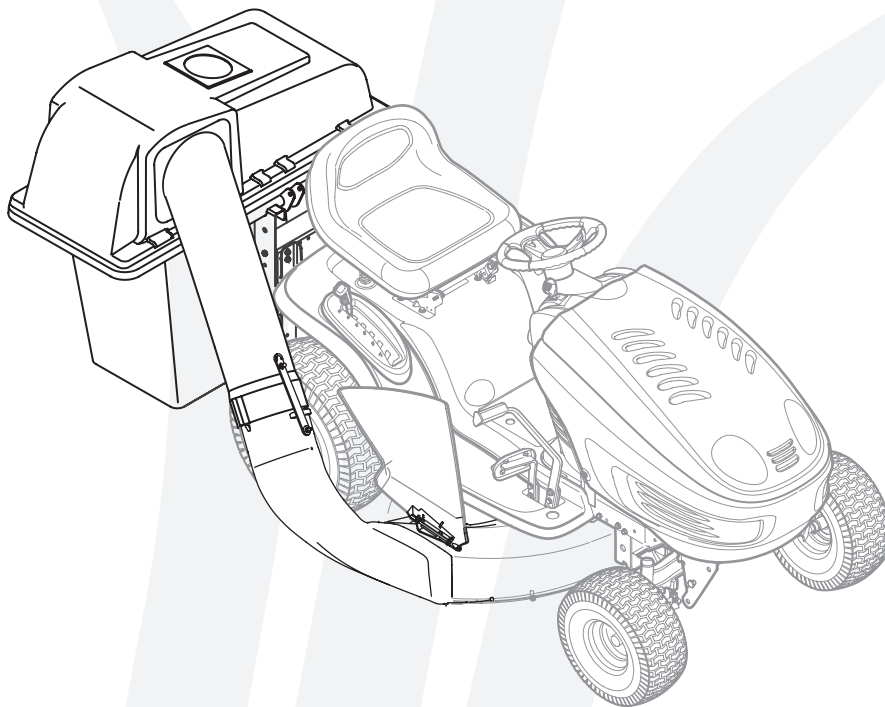

Model 190-182

IMPORTANT

READ SAFETY RULES AND INSTRUCTIONS CAREFULLY BEFORE OPERATION


This Operator's Manual is an important part of your new grass collector. It will help you assemble, prepare and maintain the unit for best performance. Please read and understand what it says.

Finding and Recording Model Number

BEFORE YOU START ASSEMBLING YOUR NEW EQUIPMENT,

please locate the model plate and copy the information from it in this Operator's Manual for future reference. The information on the model plate is very important if you need help from our Customer Support Department or your authorized dealer.

You can locate it by looking on the front, left portion of the plastic grass catcher cover as seen below:

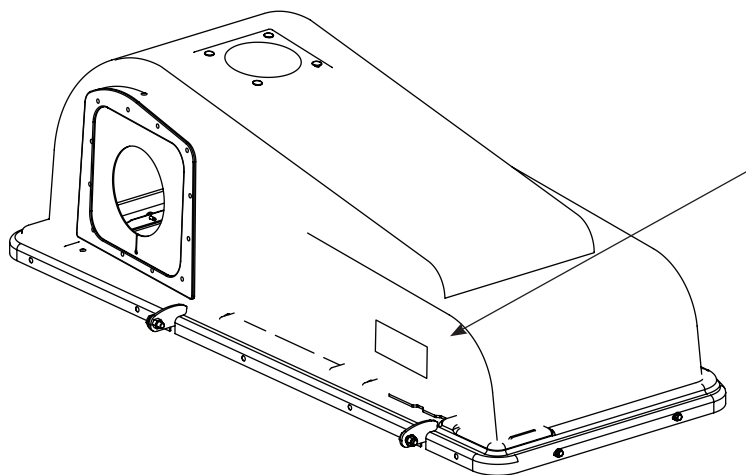

Model Number

Serial Number



MTD LLC
P.O. BOX 361131
CLEVELAND, OH 44136
330-220-4683
800-800-7310

*Locate the model plate on your bagger and copy the information from it in the space provided above for future reference.

Customer Support

Please do **NOT** return the unit to the retailer from which it was purchased, without first contacting Customer Support.

If you have difficulty assembling this product or have any questions regarding the controls, operation, or maintenance of this unit, you can seek help from the experts. Choose from the options below:

- Visit **mtdproducts.com**. Click on the Service & Support menu option.
- Phone a **Customer Support Representative** at 1-800-800-7310.
- Please have your unit's model number and serial number ready when you call. See previous section to locate this information. You will be asked to enter the serial number in order to process your call.

Yard-Man	Yard Machines	Manuals Online	Parts Online	Service Locator	Product Registration
----------	---------------	----------------	--------------	-----------------	----------------------

Need help using this site? Find instructions [here](#).
When searching this site, using fewer key words is more efficient than sentences or long phrases.

Answers **My Stuff** Login Help

Products & Services ⓘ
All Products ▼

Search Text (optional) Search Tips
Search

Search by
Similar Phrases ▼

Powered by RightNow

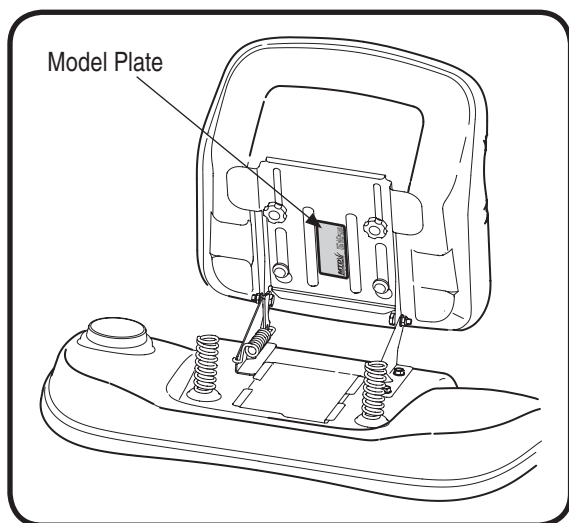


Figure 1-1

FastAttach™ Twin Bag Grass Collector

This Model 190-182 Twin Bag Grass Collector is a grass collection system designed for use on all MTD 46" cut FastAttach™ compatible lawn tractors (except 2001 MTD/Yard-Man Revolution).

The instructions in this manual are divided into sections. Carefully read all sections and study the illustrations to ensure proper installation and usage of this attachment. Read and observe all WARNING and CAUTION statements. They are included to provide for the protection of the equipment installer and user, and to ensure the prolonged service life of the equipment.

NOTE: References to LEFT and RIGHT indicate the left and right sides of the tractor when facing forward in the operator's position. Reference to the FRONT indicates the grille end; to the REAR, the rear end of the tractor.

Determine The Model of Your Rider

Since this manual is designed for installation of your new bagger on several different rider units, it is important for you to determine which model of rider you have. Therefore you will know which set of instructions in the following pages to follow.

To determine which model of rider you have, you will need to locate the rider's model plate, located under the seat. Simply flip the seat up and locate the model plate (See Fig. 1-1), which will consist of an 11 digit/letter model number and a serial number. For ease in this installation and for future use, copy your rider's model number & serial number below now:

Rider Model Number: _____

Rider Serial Number: _____

The 5th, 6th & 7th numbers from the left in your model number determine your rider's model series. See Fig. 1-2.

When you fill in your model number in the space above, the actual model series number should fall into the gray shaded area.

Now that you have determined what model rider you are attaching this grass bag collection system to, follow the instructions on the following pages according to your model of rider.

1

Rider Model Identification



NOTE: References to LEFT and RIGHT indicate the left and right sides of the tractor when facing forward in the operator's position. Reference to the FRONT indicates the grille end; to the REAR, the rear end of the tractor.

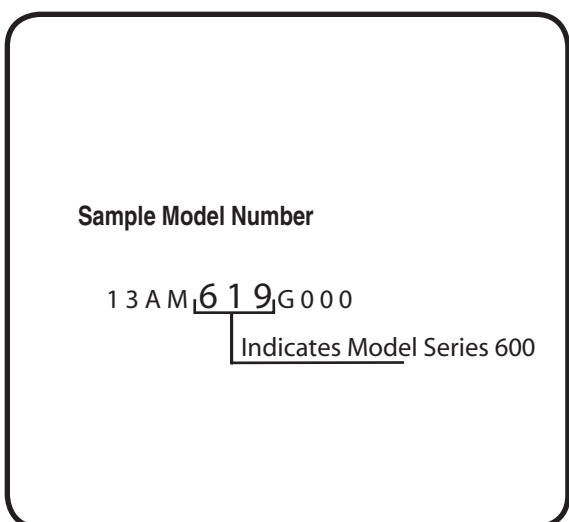


Figure 1-2

2

Carton Contents



If you are missing any parts, please do not contact the retailer where you purchased this unit, call MTD directly at 1-330-220-4MTD or toll free at 1-800-800-7310.

CONTENTS OF CARTON

Before beginning installation, remove all parts from the carton to make sure everything is present. Carton contents are listed below and shown in Fig. 2-1. Hardware part numbers are shown in parentheses.

One Chute Tube

One Grass Catcher Cover Assembly

One Discharge Chute Assembly

One Mounting Bracket

Two Grass Bag Assemblies

Three Blades

One Support Tube

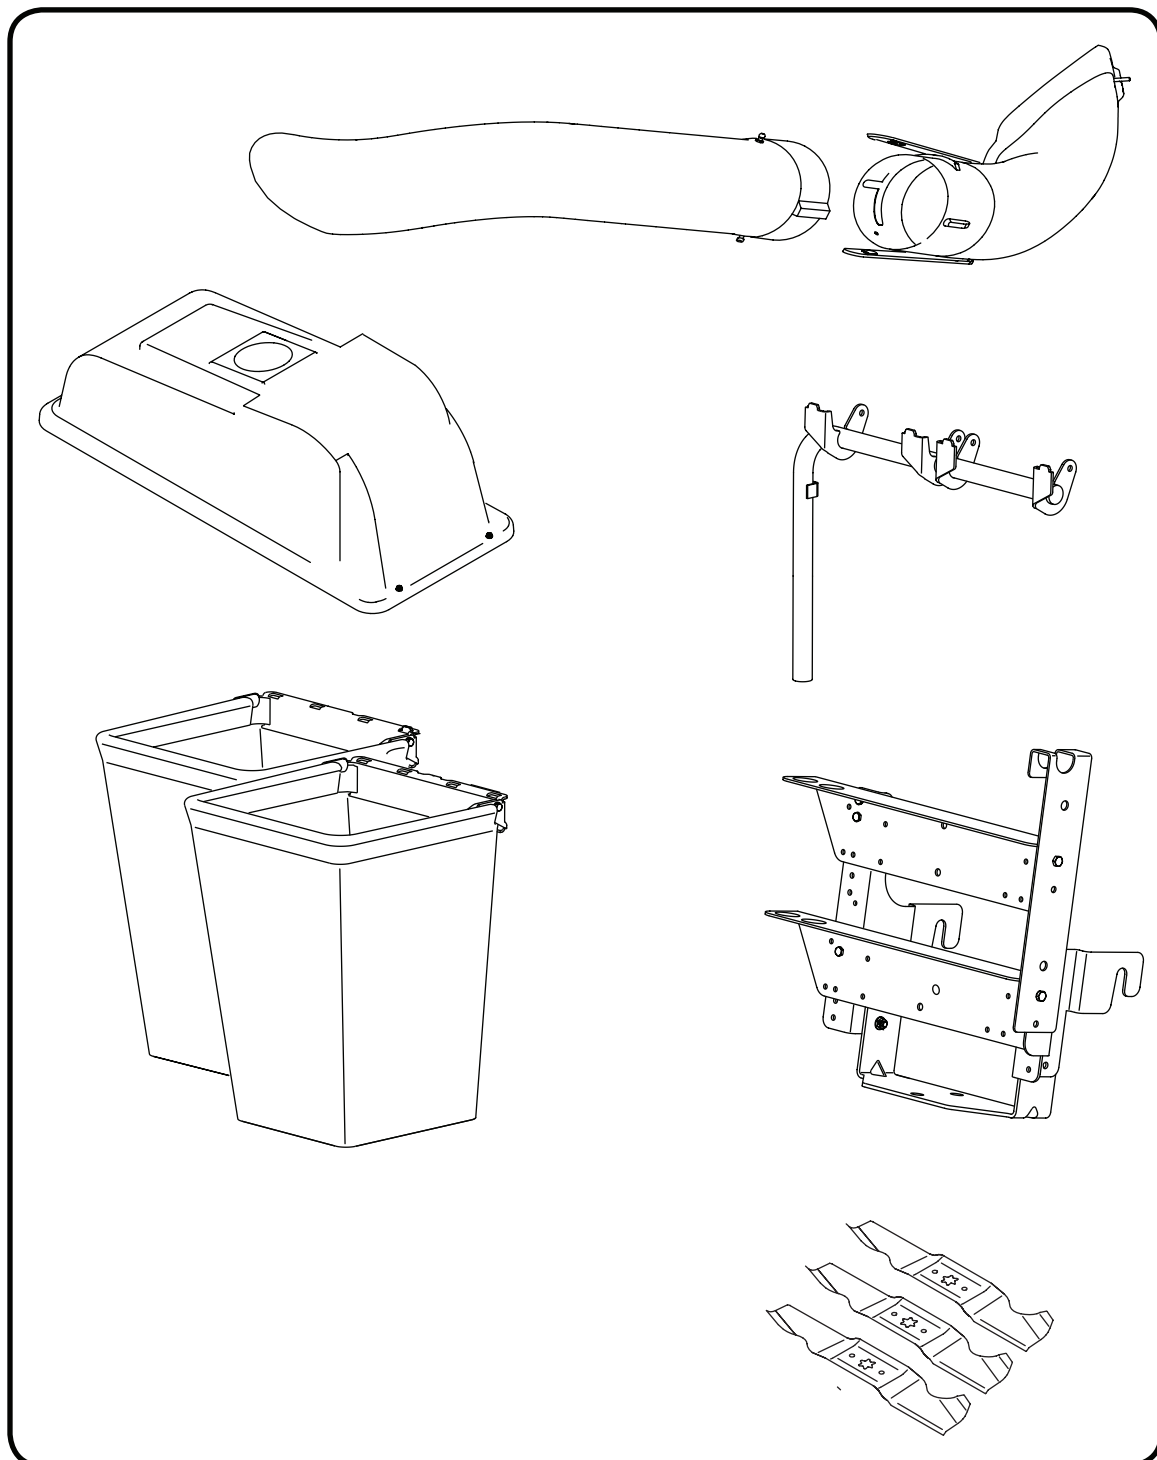


Figure 2-1

CONTENTS OF HARDWARE PACK

This grass collector kit is shipped with a hardware pack enclosed. This hardware pack may contain extra parts for installation on a different rider from which you have. Please check your hardware pack against the illustration below in accordance with your model of rider as determined in Section 1 of this manual.

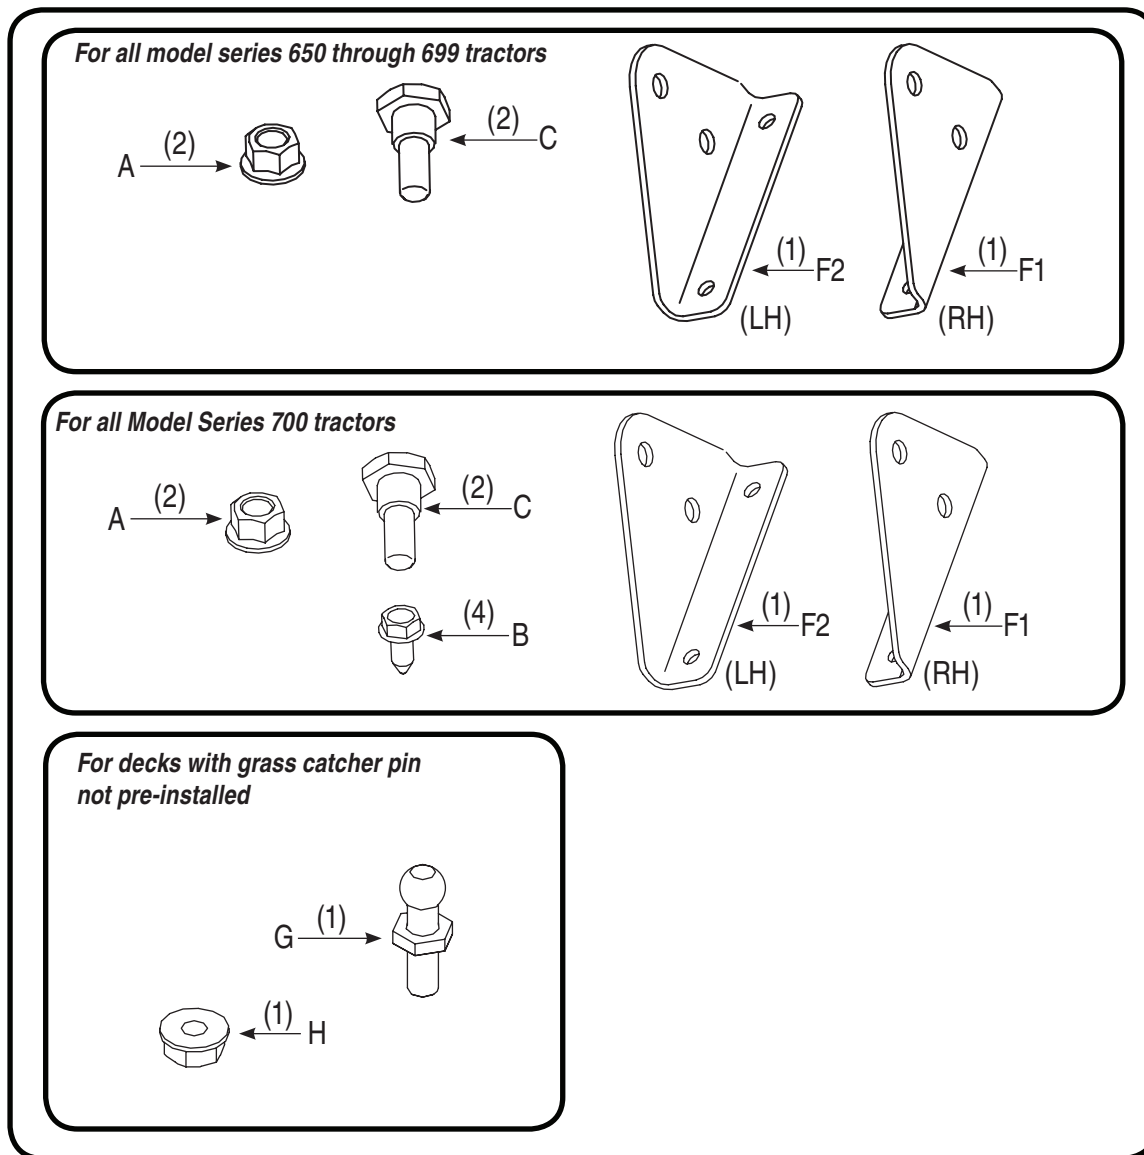


Figure 2-2

NOTE: Each item has been identified in above for ease of assembly, and the letter code assigned here is maintained in assembly instructions.

RH = Right Hand
LH = Left Hand

(#) = Quantity

2

Carton Contents



If you are missing any parts, please do not contact the retailer where you purchased this unit, call MTD directly at 1-330-220-4MTD or toll free at 1-800-800-7310.

NOTE: Each item has been identified in above for ease of assembly, and the letter code assigned here is maintained in assembly instructions.

RH = Right Hand
LH = Left Hand

3

Attaching Bracket Assembly

Model Series 600
through 619



IMPORTANT:
Before assembly, place
the tractor on a firm,
level surface, disengage
the PTO, stop the tractor
engine and set the park-
ing brake.

NOTE:
*There are two holes in
the clevis pin. Be sure
to insert the hairpin
clip in the upper hole
to properly secure the
bracket assembly to the
hitch plate.*

Attaching The Bracket Assembly

Model Series 600 through 619
Model Series 800 through 819

IMPORTANT: Before assembly, place the tractor on a firm, level surface, disengage the PTO, stop the tractor engine and set the parking brake.

1. For convenience, pivot the seat forward and leave it in that position until the grass collector is fully mounted and assembled.
2. Remove the hairpin clip and clevis pin from the rear of the mounting bracket assembly. See Fig. 3-1.
3. Position the hooked ends of the bracket assembly over the shoulder bolts (1). Swing in the bottom of the bracket assembly down and in (2) over the hitch plate and aligning with the hole on the hitch plate. See Fig. 3-1.
4. Reinsert the clevis pin through the aligned holes in both the bracket assembly and the hitch plate and secure with the hairpin clip removed earlier. Refer to Fig. 3-2.

NOTE: There are two holes in the clevis pin. Be sure to insert the hairpin clip in the upper hole to properly secure the bracket assembly to the hitch plate.

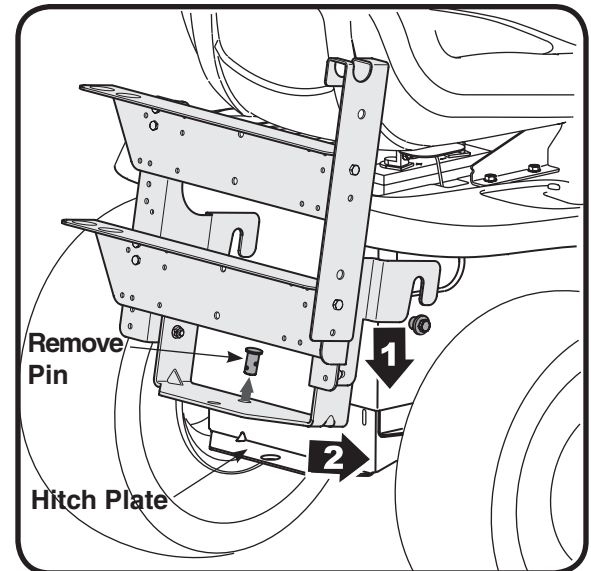


Figure 3-1

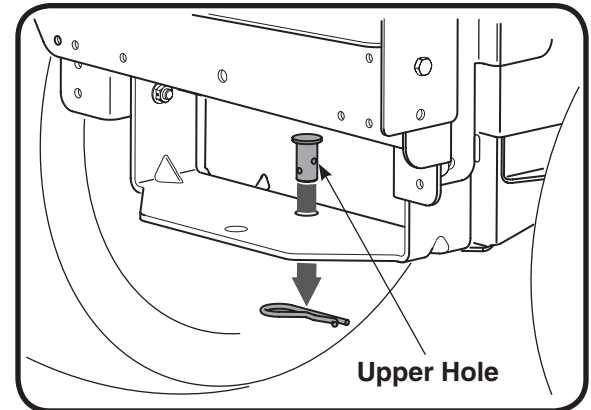


Figure 3-2

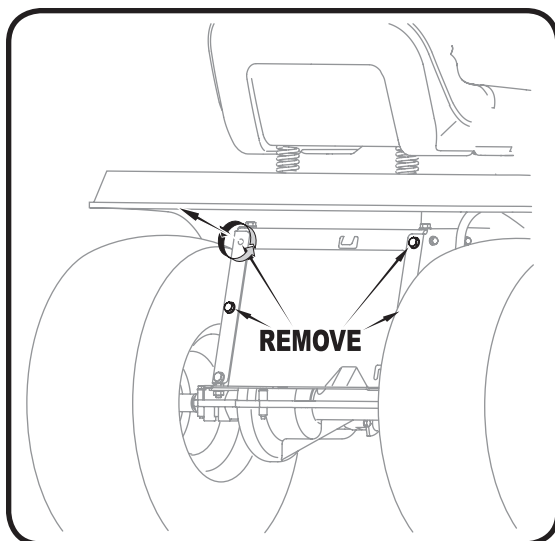


Figure 3-3

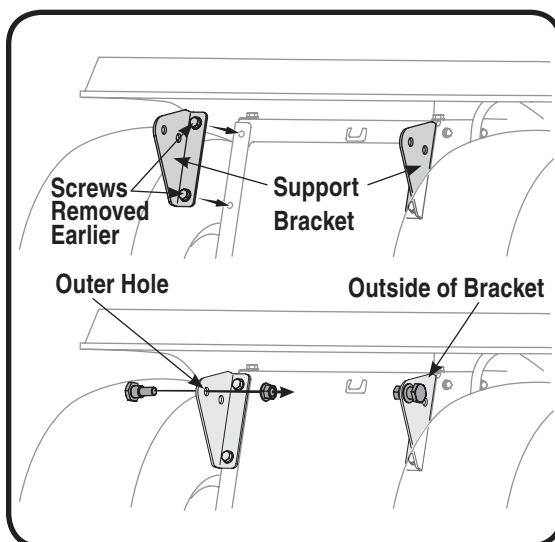


Figure 3-4

Assembling Support Brackets

Model Series 650 through 699

IMPORTANT: Before assembly, place the tractor on a firm, level surface, disengage the PTO, stop the tractor engine and set the parking brake.

1. Remove the top four self-tapping screws from the rear of the lawn tractor. See Fig. 3-3 on the previous page.
2. Place the right hand grass catcher support bracket (F1 from Fig. 2-2), in position, with the wide end on top and the narrow end pointing down as shown in Fig. 3-4.
3. Secure the support bracket to the tractor frame with two self-tapping screws earlier removed. Refer to Fig. 3-4. Repeat on the other side using part F2 from Fig. 2-2.

NOTE: If the grass collection system is removed for any reason, it is not necessary to remove the support brackets from the tractor.

4. Insert a shoulder bolt (C in Fig. 2-2) through a bell washer, (B in Fig. 2-2) and insert the bolt from the outside of the bracket through the outer hole on the support bracket. Secure with a nut (A in Fig. 2-2). See Fig. 3-4 for details. Repeat on other side.

NOTE: The reference above to “the outer hole” means the hole furthest away from the frame.

3

Attaching Support Bracket

Model Series
650 through 699



IMPORTANT:
Before assembly, place the tractor on a firm, level surface, disengage the PTO, turn off tractor engine and set the parking brake.

NOTE:
If the grass collection system is removed for any reason, it is not necessary to remove the support brackets from the tractor.

NOTE:
The reference above to “the outer hole” means the hole furthest away from the frame.

3

Attaching The Bracket Assembly

Model Series
650 through 699



IMPORTANT:

There are two holes in the clevis pin. Be sure to insert the hairpin clip in the upper hole to properly secure the bracket assembly to the hitch plate.

NOTE:

For some tractor models, this clevis pin is too large. Use a smaller clevis pin (E in Fig. 2-2) in its place with the same hairpin clip.

Attaching Bracket Assembly

Model Series 650 through 699

1. Remove the two nuts and bolts on each side of the mounting bracket holding the hitch plate.
2. Rotate the hitch plate 180° from its original position. Re-insert the four bolts through mounting bracket and hitch plate frame and secure with nuts removed earlier. Use the outer holes (furthest from the mounting hooks) on the mounting bracket. See Fig. 3-6.
3. For convenience, pivot the seat forward and leave it in that position until the grass collector is fully mounted and assembled.
4. Remove the hairpin clip and clevis pin from the rear of the mounting bracket assembly. See Fig. 3-5.
5. Position the hooked ends of the mounting bracket assembly to the outside of the support brackets and over the shoulder bolts just installed on both sides of the tractor frame. See Fig. 3-7.
6. Reinsert the clevis pin through the aligned holes in both the bracket assembly and the hitch plate and secure with the hairpin clip removed earlier. See Fig. 3-8 for reference.

IMPORTANT: There are two holes in the clevis pin. Be sure to insert the hairpin clip in the upper hole to properly secure the bracket assembly to the hitch plate.

NOTE: For some tractor models, this clevis pin is too large. Use a smaller clevis pin (E in Fig. 2-2) in its place with the same hairpin clip.

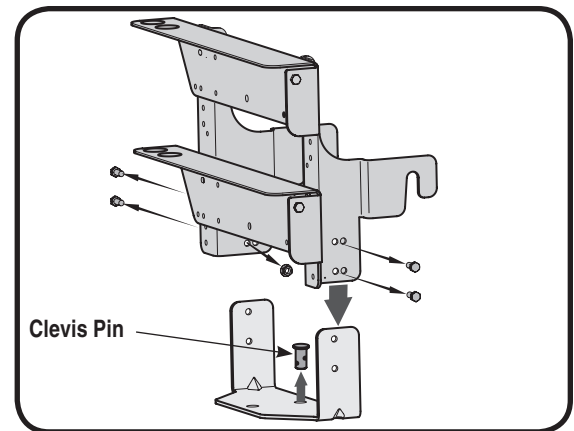


Figure 3-5

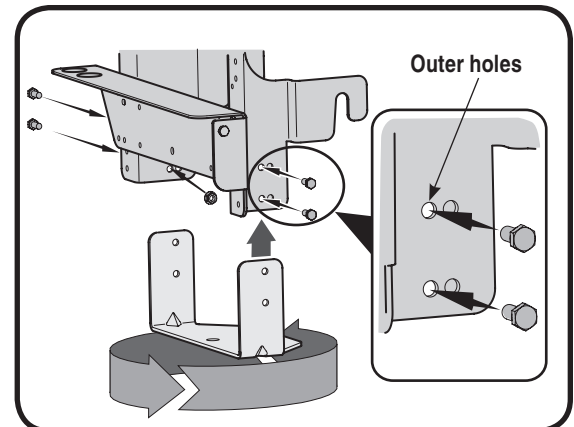


Figure 3-6

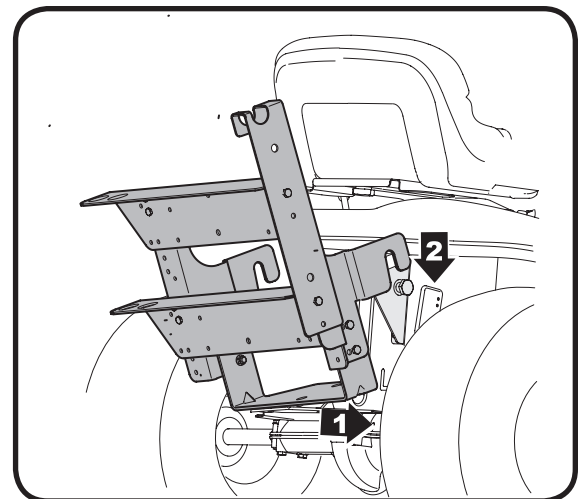


Figure 3-7

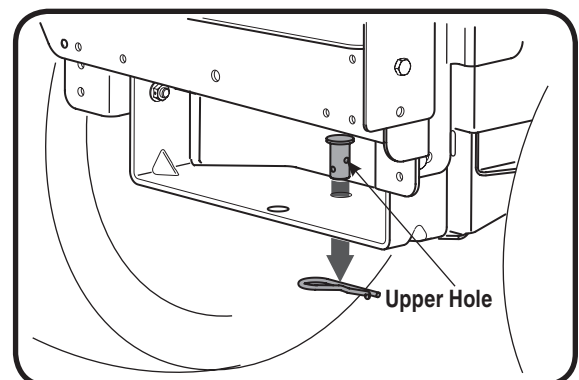


Figure 3-8

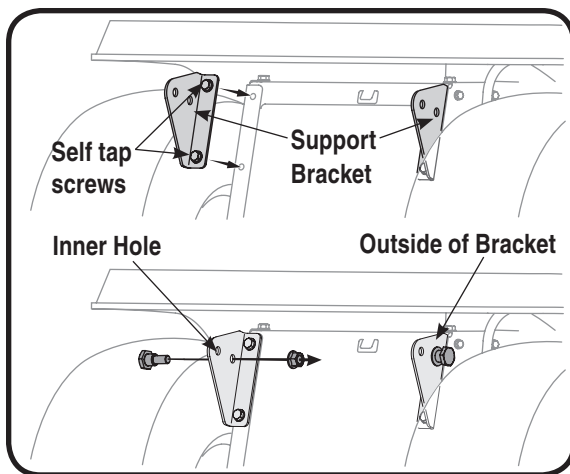


Figure 3-9

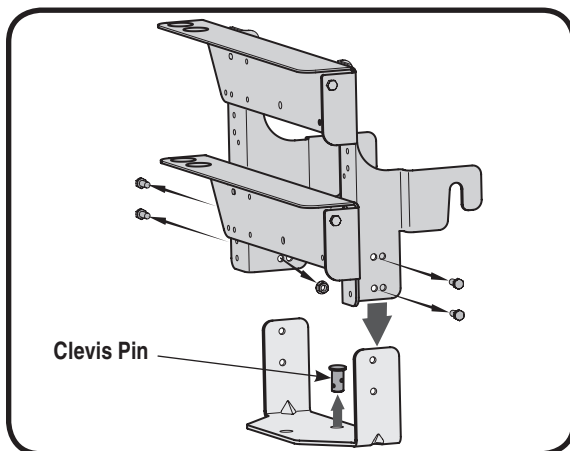


Figure 3-10

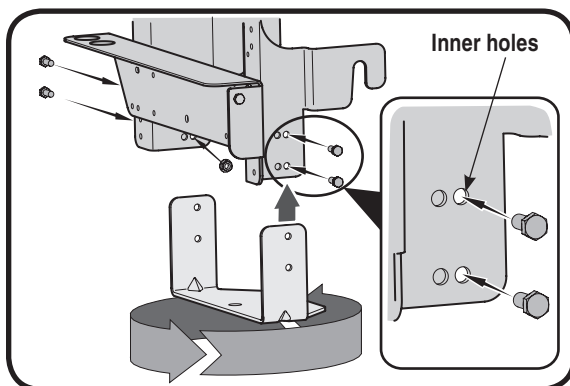


Figure 3-11

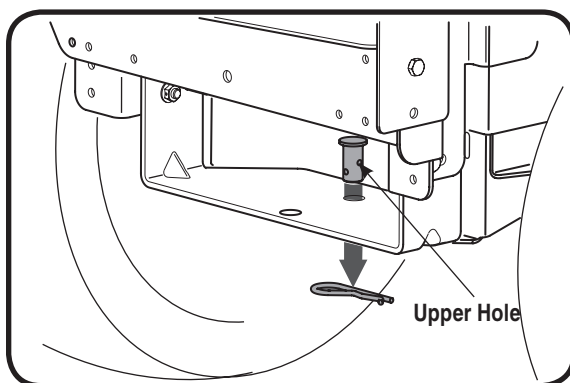


Figure 3-12

Assembling Support Brackets

Model Series 700

1. Locate the four self-tapping screws supplied in your hardware pack (B from Fig. 2-2). Attach the right hand grass catcher support bracket (F1 from Fig. 2-2) using two of the supplied screws in position as shown in Fig. 3-9. Place the left hand grass catcher support bracket (F2 from Fig. 2-2) in position and secure with the other two screws.
2. Insert a shoulder bolt (C in Fig. 2-2) through the Inner hole (closest to the frame) on the outside of the support bracket. Secure with a nut (A in Fig. 2-2). See Fig. 3-9 for details. Repeat on other side.

NOTE: If the grass collection system is removed for any reason, it is not necessary to remove the support brackets from the tractor.

Attaching The Bracket Assembly

1. Remove the two nuts and screws on each side of the mounting bracket holding the hitch plate. See Fig. 3-10.
2. Rotate the hitch plate 180° from its original position. Re-insert the four bolts through mounting bracket and hitch plate frame and secure with nuts removed earlier. Use the inner holes (closest to the mounting hooks) on the mounting bracket. Refer to Fig. 3-11.
3. Remove the hairpin clip and clevis pin from the hitch plate as seen in Fig. 3-10. Save the hardware.
4. Position the hooked ends of the mounting bracket assembly to the outside of the support bracket and over the shoulder bolts on both sides. Refer back to Fig. 3-7 for reference.
5. Reinsert the clevis pin through the aligned holes in both the bracket assembly and the hitch plate and secure with the hairpin clip removed earlier. See Fig. 3-12.

IMPORTANT: There are two holes in the clevis pin. Be sure to insert the hairpin clip in the upper hole to properly secure the bracket assembly to the hitch plate.

3

Attaching Support Bracket & Bracket Assembly

Model Series 700



NOTE:

If the grass collection system is removed for any reason, it is not necessary to remove the support brackets from the tractor.

IMPORTANT:

There are two holes in the clevis pin. Be sure to insert the hairpin clip in the upper hole to properly secure the bracket assembly to the hitch plate.

4

Attaching Grass Bags & Grass Bag Cover

All Model Series



NOTE:

Insert the clevis pins from the outside in as shown in the inset images of Figure 4-4.

NOTE:

It is very important to maintain this order and direction while installing these hardware pieces. After installation, make sure that the grass bag cover pivots on the support tube and opens.

Attaching Grass Bags & Grass Bag Cover

1. Place the support tube in position on the rear of unit by sliding the support tube down through the holes in the left side of the bracket assembly. Use the inside hole on the bracket assembly regardless of what size deck your tractor is equipped with. Refer to Fig. 4-1.
2. Attach the grass bags by hooking them onto the grass bag bracket using the slots in the grass bag and the tabs on the grass bag bracket as shown in Fig. 4-2.
3. Remove both clevis pins, belleville washers and hairpin clips from the hinges of the grassbag cover.
4. Place the grass bag cover on top of the grass bags and align the holes on the hinges of the grass bag cover with the corresponding holes on the support tube assembly. See Fig. 4-3.
5. Insert the clevis pin through the hinge on the support tube assembly and then through the grass bag cover. See Fig. 4-4.
6. Secure with belleville washer and hairpin clip with the crown side of the washer going against the hairpin clip. See inset images in Fig. 4-4.
7. Repeat with the second set of hardware through the second hinge of the grass bag and the tube assembly from the opposite direction.

NOTE: Insert the clevis pins from the outside in as shown in the inset images of Fig. 4-4.

NOTE: It is very important to maintain this order and direction while installing these hardware pieces. After installation, make sure that the grass bag cover pivots on the support tube and opens.

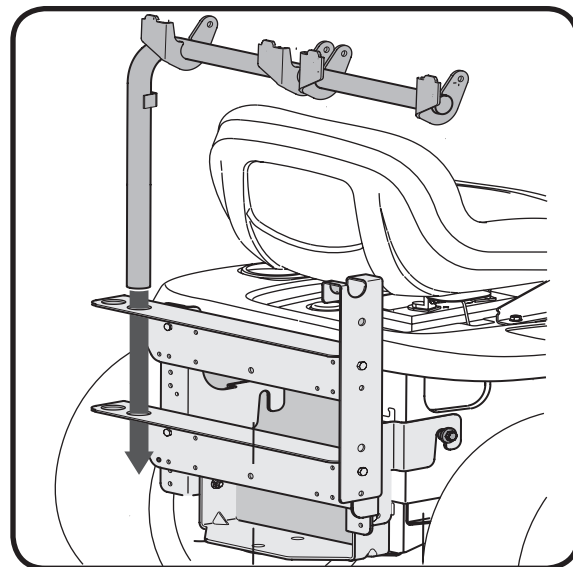


Figure 4-1

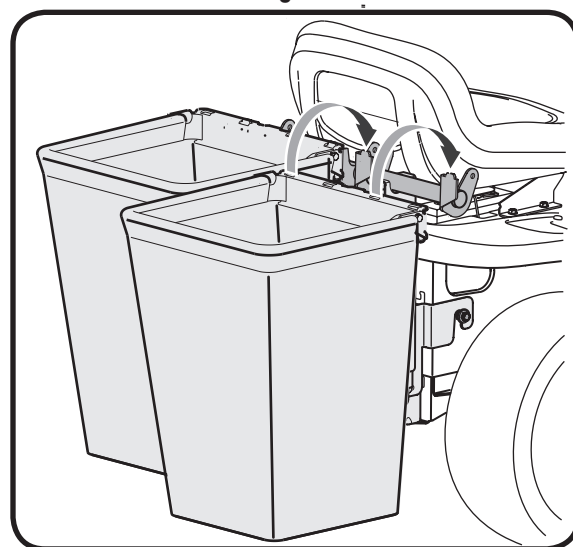


Figure 4-2

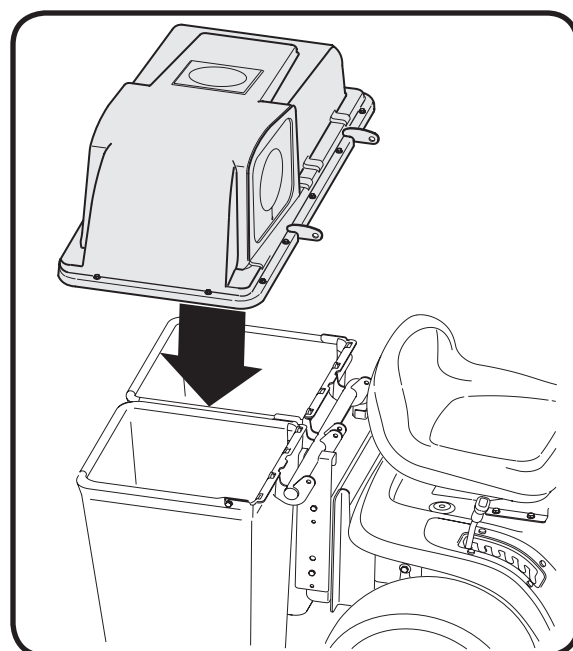


Figure 4-3

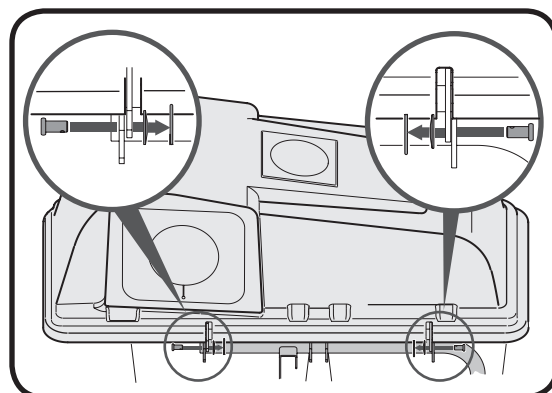


Figure 4-4

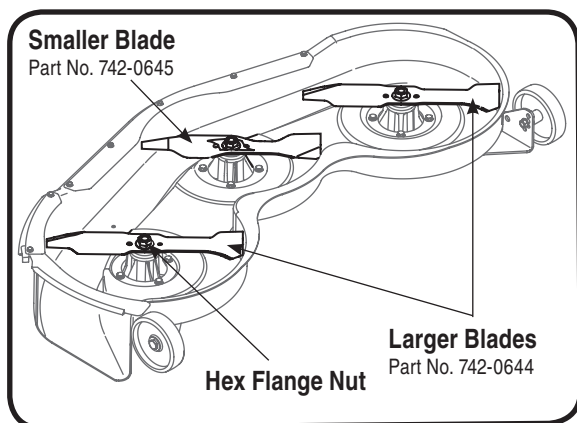


Figure 5-1

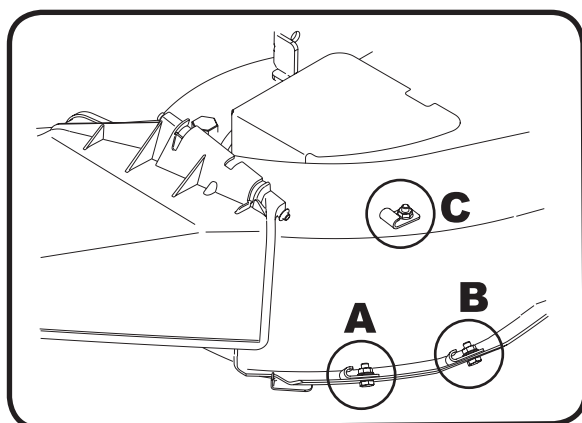


Figure 5-2

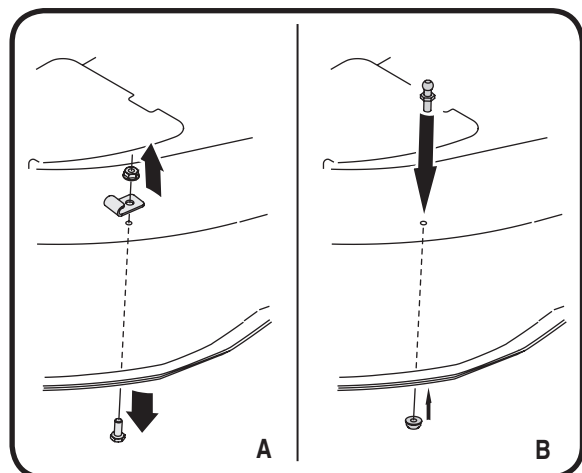


Figure 5-3

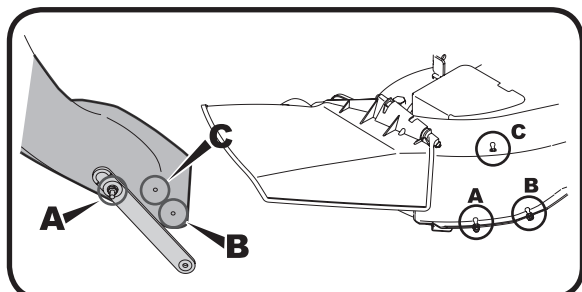


Figure 5-4

Attaching The Blades

Remove the blades from your tractor's cutting deck as follows:

1. Remove the cutting deck from beneath the tractor, (refer to Deck Removal in the MAINTENANCE section of your tractor's operator's manual for detailed instructions) then gently flip the deck over to expose its underside.
2. Place a block of wood between the center deck housing baffle and the cutting blade to act as a stabilizer, keeping the blades from turning when you loosen the hex flange nuts.
3. Use a 15/16" wrench to remove the hex flange nut that secures the blade to the spindle assembly.

NOTE: The hex flange nut has a normal (right-handed) thread pattern. Do NOT attempt to force the nut in the incorrect direction. Doing so may damage the nut and create a safety hazard.

4. Install the new blades packed with the bagger. Be sure to install the blade with the side of the blade marked "Bottom" (or with a part number stamped in it) facing the ground when the rider is in the operating position.
5. Mount the SMALLER of the three blades to the CENTER spindle. The remaining two blades are interchangeable. See Fig. 5-1.
6. Use a torque wrench to tighten the blade spindle hex flange nut to between 70 and 90 foot-pounds.
7. Remount the cutting deck.

Attaching Discharge Chute

1. **On older models:** Some older models may have a clip already installed on the deck (See Fig. 5-2) next to the discharge chute opening. If this is the case, the clip must be removed and a grass catcher pin, which is included in your hardware pack, installed. To remove clip, simply remove the lock nut, spring washer and hex bolt that secure it. See Fig. 5-3A.
2. **Installing Grass Catcher Pin:** A grass catcher pin (G in Fig. 2-2) and nut (H in Fig. 2-2) have been supplied in the hardware pack. Attach pin to the deck in place of the clip just removed. Some units may not have clip but will have an open hole for pin installation. Follow Fig. 5-3B for order of assembly. Make sure to secure the pin tightly.

NOTE: The retainers are fitted at position A on the discharge chute. However, on older models of tractors, you will have to change the position of the strap depending on the location of the grass catcher pin on the deck. Remove the retainers from position A on the discharge chute to position B or C corresponding to the position of the grass catcher pin at A, B or C on the deck. See Fig. 5-4.

5

Attaching The Blades And Discharge Chute

All Model Series



NOTE:

The hex flange nut has a normal (right-handed) thread pattern. Do NOT attempt to force the nut in the incorrect direction. Doing so may damage the nut and create a safety hazard.

NOTE:

The retainers are fitted at position B on the discharge chute. However, on older models of tractors, you will have to change the position of the strap depending on the location of the grass catcher pin on the deck. Remove the retainers from position B on the discharge chute to position A or C corresponding to the position of the grass catcher pin at A, B or C on the deck. See Figure 24.

5

Attaching Discharge Chute

All Model Series



NOTE:

When both grass bags are full, place the tractor on a firm, level surface, disengage the PTO, turn the tractor engine off and set the parking brake.

3. Raise the deck to its highest position.
4. Raise the chute deflector on the deck and hold it while you position the discharge chute over the chute opening. See Fig. 5-5.
5. Place the top rear edge of the discharge chute over the top rear edge of the chute opening.
6. Push down on the discharge chute so that its front bottom edge rolls around the bottom of the deck, then slide the chute forward to the stop on the deck.
7. Lock the discharge chute in position by hooking the retainer strap over the grass catcher pin on the deck. See Fig. 5-5.
8. Insert the curved end of chute tube into the hole in the grass bag cover. See Fig. 5-6.
9. Place the lower end of the chute tube over the discharge chute so that the tabs on the discharge chute fits into the pockets on the chute tube. See Fig. 5-7.
10. Secure by hooking the two retainer straps of the discharge chute to the pins on the chute tube. See Fig. 5-7.

Bagger Usage

NOTE: When both grass bags are full, place the tractor on a firm, level surface, disengage the PTO, turn the tractor engine off and set the parking brake.

1. Flip Seat up.
2. Lift up grass bag cover. Do not remove the chute tube assembly from the tractor.
3. Remove the grass bags by lifting these up and moving the bags away from the support tube assembly.
4. Empty the grass clippings at a proper disposal sight, use the handle at the bottom of each grass bag. Holding the bag firmly, empty the contents
5. Replace grass bags, close lid, flip down seat, restart your tractor and resume cutting your grass.

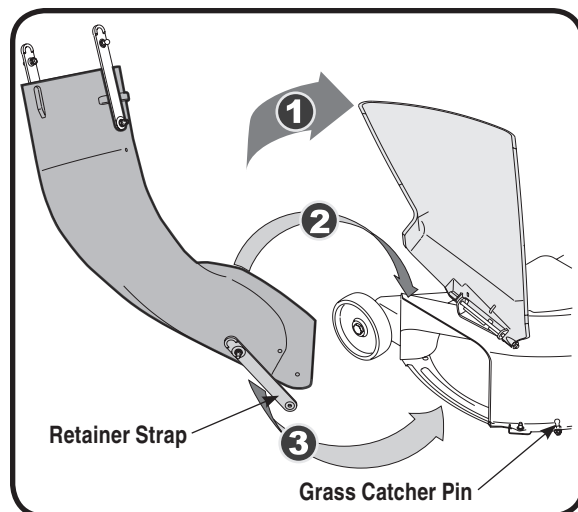


Figure 5-5

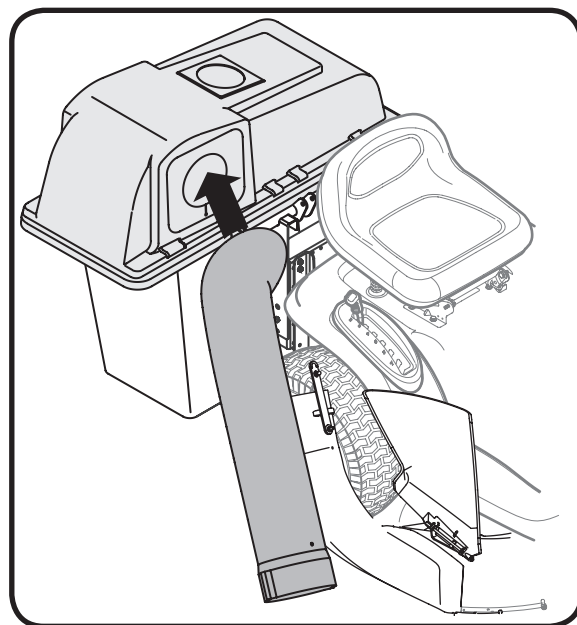


Figure 5-6

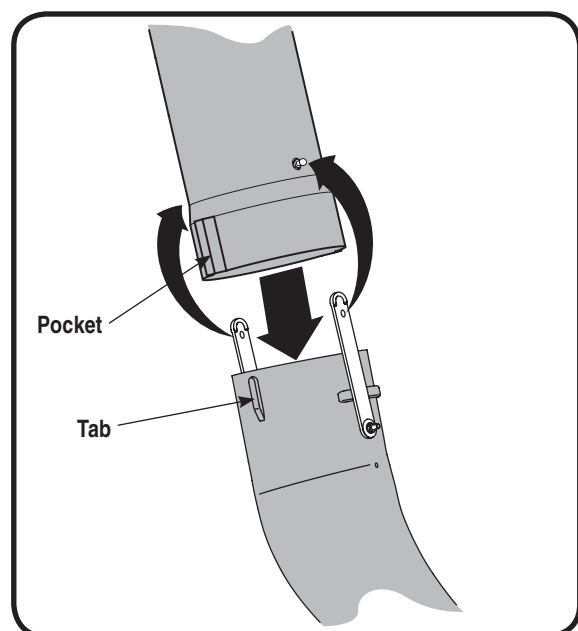


Figure 5-7


6

Part List: Rear Twin Bagger



For parts and/or
accessories
please call
1-800-800-7310, or
1-330-220-4683.

www.mtdproducts.com

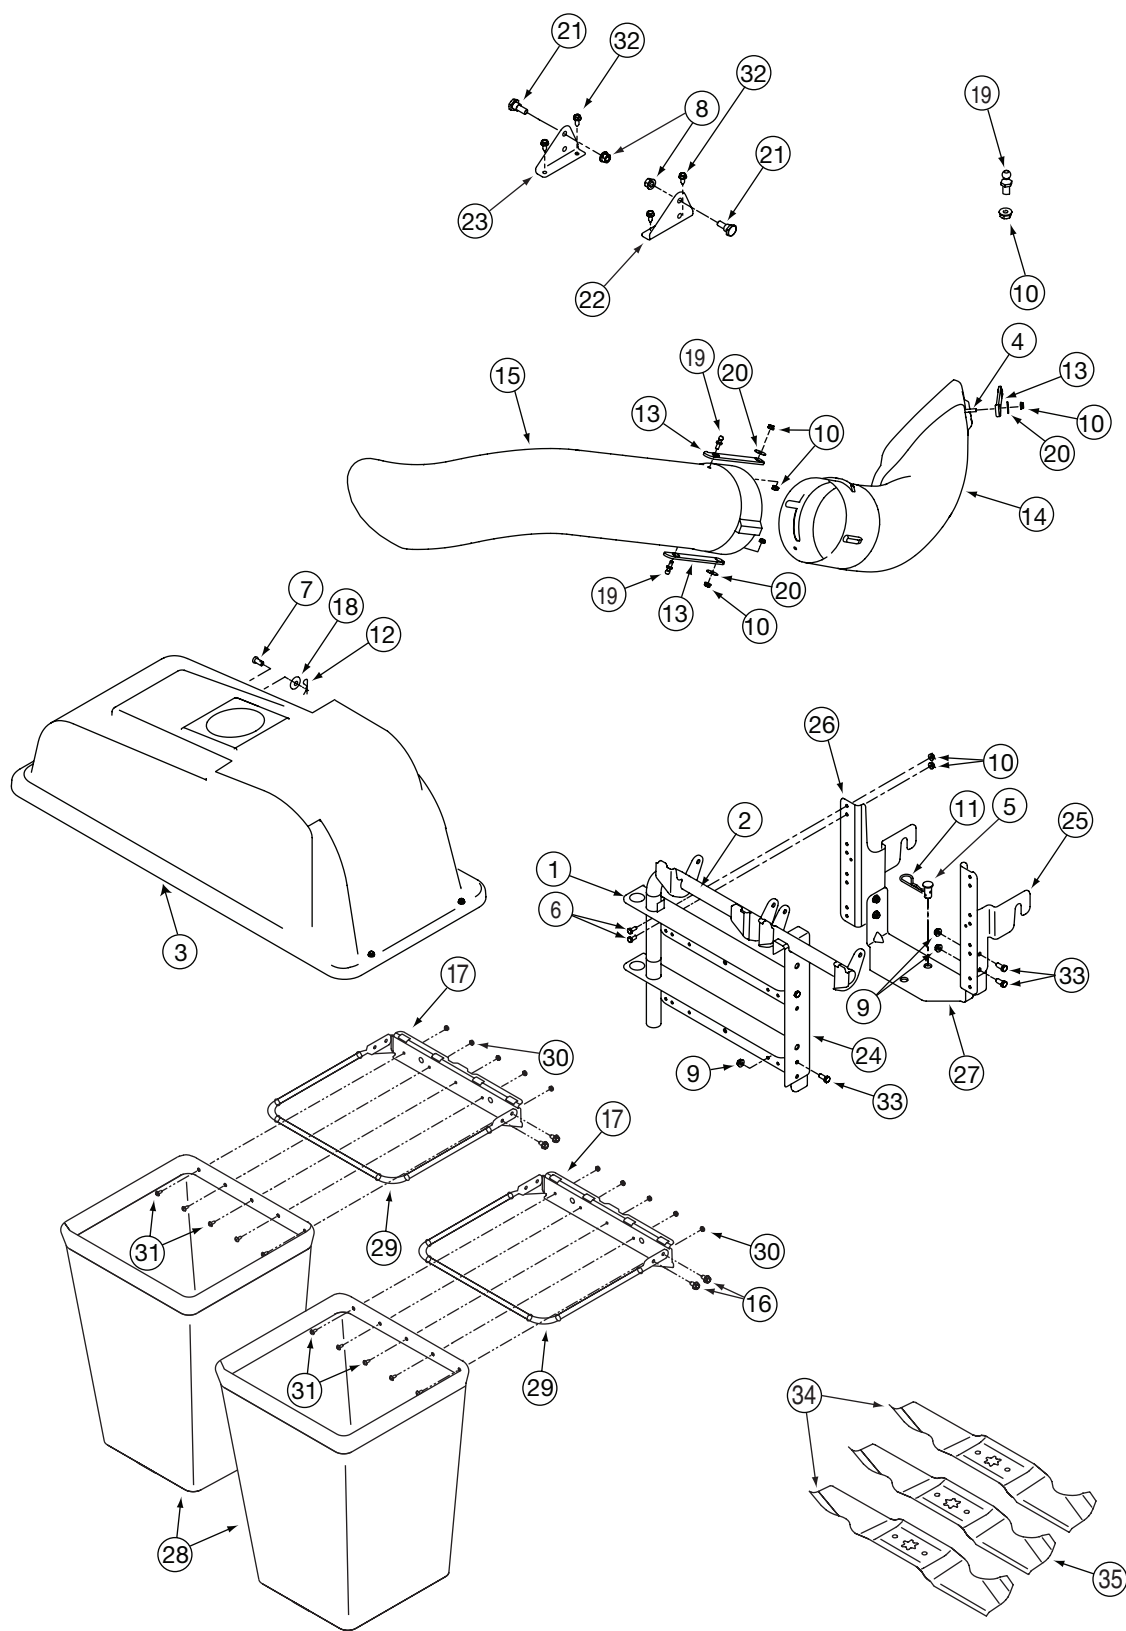

REF NO.	PART NUMBER	DESCRIPTION	Qty.
1	16587D	Support Bracket: Bagger	2
2	16592	Support Tube Assembly	1
3	664-04017	Grass catcher Cover Assembly	1
4	710-0597	Screw 1/4-20 x 1"	3
5	711-0309A	Clevis Pin	1
6	710-0751	Hex Head Screw 1/4-20	8
7	711-1421	Clevis Pin	2
8	712-0459	Lock Nut 7/16-20	2
9	712-3004A	Lock Nut 5/16-18	6
10	712-04064	Hex Flange Lock Nut, 1/4-20	14
11	714-0117	Hairpin Clip	1
12	714-0145	Click Pin	2
13	723-04008A	Chute Strap	3
14	731-04159	Discharge Chute 46"	1
15	731-0926B	Catcher Tube	1
16	710-0604A	Self-Tapping Screw 5/16-18	8
17	16591A	Bag Hanger Bracket	2
18	736-0331	Bell Washer	2
19	711-04069	Grass catcher Pin	3
20	736-3092	Flat Washer	3
21	738-1020	Shoulder Screw	2
22	783-04132A	Support Bracket (RH)	1
23	783-04137A	Support Bracket (LH)	1
24	783-0601	Mounting Bracket	1
25	783-0673A	Catcher Support Bracket (RH)	1
26	783-0764A	Catcher Support Bracket (LH)	1
27	783-0765	Bracket: Cross Support	1
28	764-0221	Catcher Bag	2
29	749-0701A	Grass Bag Frame	2
30	712-0272	Hex Sems Nut, #10-24	10
31	710-0473	Machine Screw, , #10-24 x .5	10
32	710-0726	AB Screw 5/16-12	4
33	710-3008	Hex Screw 5/16-18 x 0.75"	6
34	742-0644	Blade 16.28" Lg.	2
35	742-0645	Blade 14.88" Lg.	1

6

Part List: Rear Twin Bagger



*For parts and/or
accessories
please call
1-800-800-7310, or
1-330-220-4683.*

www.mtdproducts.com

MANUFACTURER'S LIMITED WARRANTY FOR



The limited warranty set forth below is given by MTD LLC with respect to new merchandise purchased and used in the United States, its possessions and territories.

"MTD" warrants this product against defects in material and workmanship for a period of two (2) years commencing on the date of original purchase and will, at its option, repair or replace, free of charge, any part found to be defective in materials or workmanship. This limited warranty shall only apply if this product has been operated and maintained in accordance with the Operator's Manual furnished with the product, and has not been subject to misuse, abuse, commercial use, neglect, accident, improper maintenance, alteration, vandalism, theft, fire, water, or damage because of other peril or natural disaster. Damage resulting from the installation or use of any part, accessory or attachment not approved by MTD for use with the product(s) covered by this manual will void your warranty as to any resulting damage.

Normal wear parts are warranted to be free from defects in material and workmanship for a period of thirty (30) days from the date of purchase. Normal wear parts include, but are not limited to items such as: batteries, belts, blades, blade adapters, grass bags, rider deck wheels, seats, snow thrower skid shoes, shave plates, auger spiral rubber and tires.

HOW TO OBTAIN SERVICE: Warranty service is available, WITH PROOF OF PURCHASE, through your local authorized service dealer. To locate the dealer in your area, check your Yellow Pages, or contact MTD LLC at P.O. Box 361131, Cleveland, Ohio 44136-0019, or call 1-800-800-7310 or 1-330-220-4683 or log on to our Web site at www.mtdproducts.com.

This limited warranty does **not** provide coverage in the following cases:

- a. The engine or component parts thereof. These items may carry a separate manufacturer's warranty. Refer to applicable manufacturer's warranty for terms and conditions.
- b. Log splitter pumps, valves, and cylinders have a separate one year warranty.
- c. Routine maintenance items such as lubricants, filters, blade sharpening, tune-ups, brake adjustments, clutch adjustments, deck adjustments, and normal deterioration of the exterior finish due to use or exposure.
- d. Service completed by someone other than an authorized service dealer.

e. MTD does not extend any warranty for products sold or exported outside of the United States, its possessions and territories, except those sold through MTD's authorized channels of export distribution.

f. Replacement parts that are not genuine MTD parts.

g. Transportation charges and service calls.

No implied warranty, including any implied warranty of merchantability of fitness for a particular purpose, applies after the applicable period of express written warranty above as to the parts as identified. No other express warranty, whether written or oral, except as mentioned above, given by any person or entity, including a dealer or retailer, with respect to any product, shall bind MTD. During the period of the warranty, the exclusive remedy is repair or replacement of the product as set forth above.

The provisions as set forth in this warranty provide the sole and exclusive remedy arising from the sale. MTD shall not be liable for incidental or consequential loss or damage including, without limitation, expenses incurred for substitute or replacement lawn care services or for rental expenses to temporarily replace a warranted product.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

In no event shall recovery of any kind be greater than the amount of the purchase price of the product sold. **Alteration of safety features of the product shall void this warranty.** You assume the risk and liability for loss, damage, or injury to you and your property and/or to others and their property arising out of the misuse or inability to use the product.

This limited warranty shall not extend to anyone other than the original purchaser or to the person for whom it was purchased as a gift.

HOW STATE LAW RELATES TO THIS WARRANTY: This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

IMPORTANT: Owner must present Original Proof of Purchase to obtain warranty coverage.