




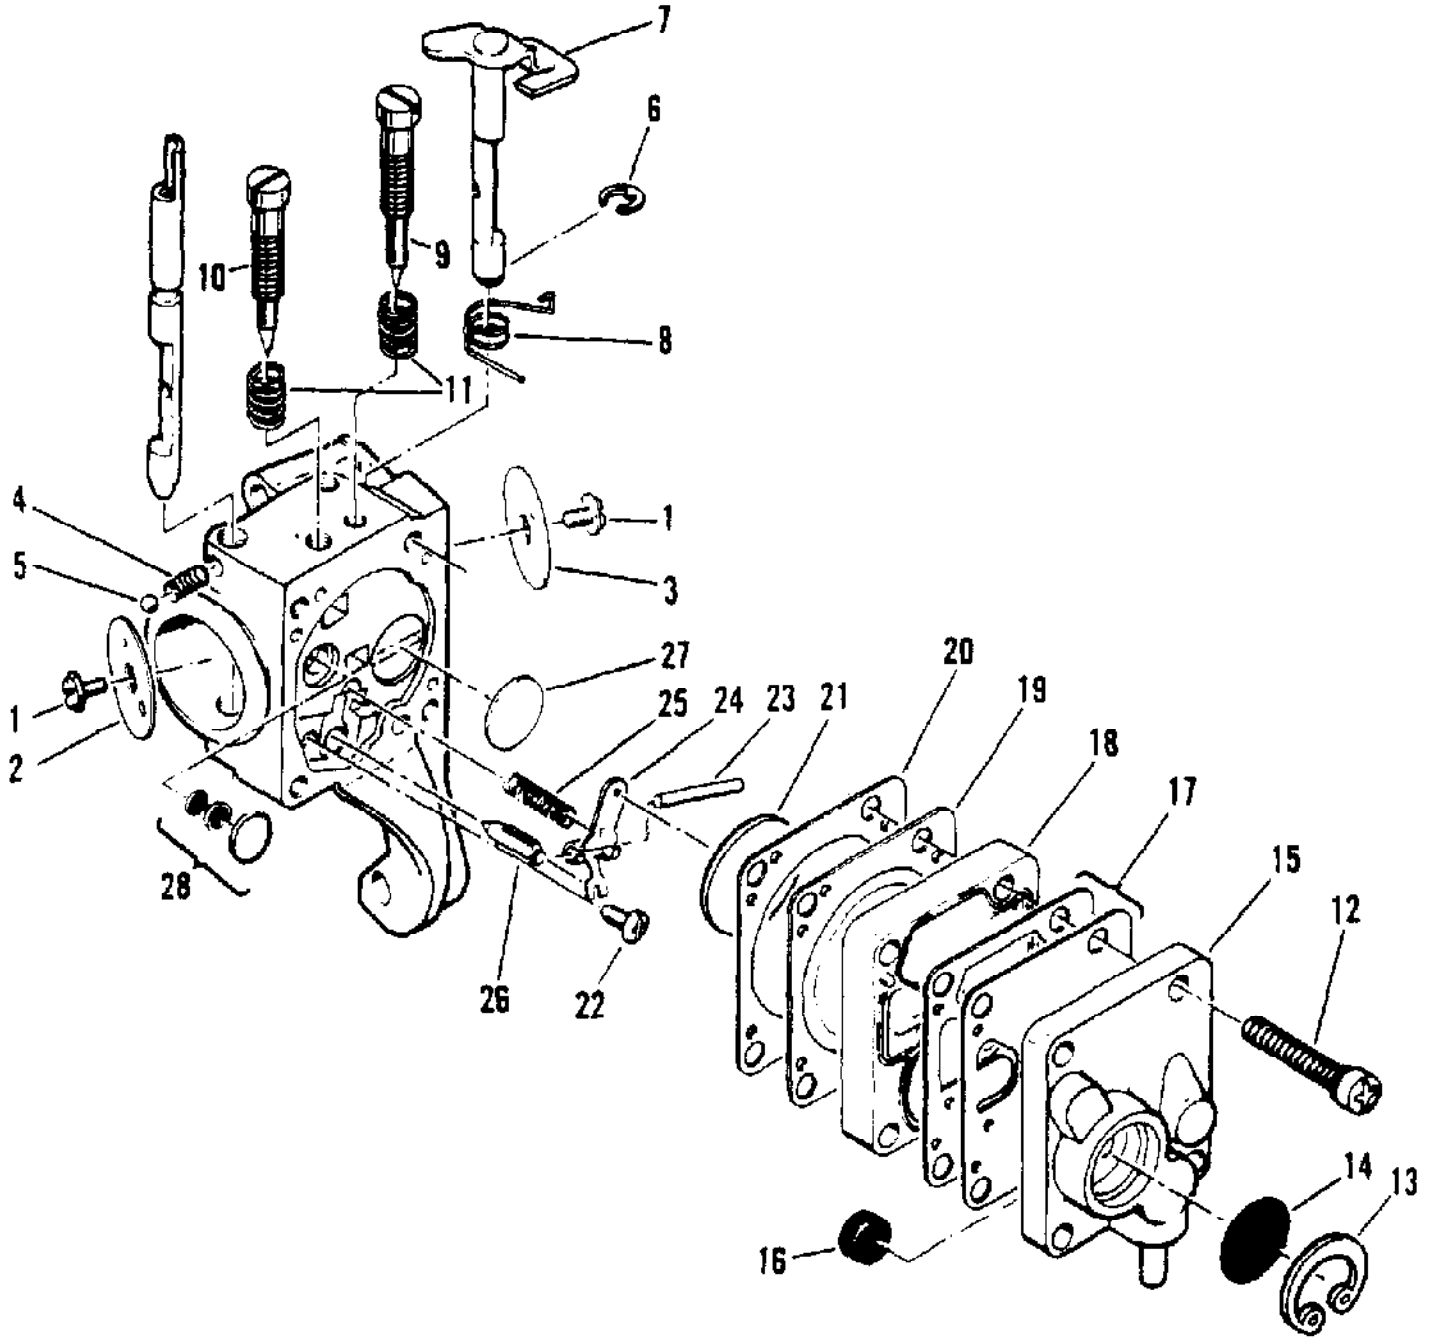


Ref #	Part Number	Qty	Description
	214082-01	1	Carburetor Asy - ZAMA M1-M7 Distributor stocked. Medium to slow moving part.
1		2	Screw - Plate Not available separately.
2		1	Valve - Choke Not available separately.
3		1	Valve - Throttle Not available separately.
4		1	Spring - Choke Not available separately.
5		1	Ball - Friction Not available separately.
6		1	Ring - "E" Not available separately.
7		1	Shaft Asy - Throttle Not available separately.
8		1	Spring - Throttle Return Not available separately.
9		1	Screw - Idle Adjustment Not available separately.
10		1	Screw - High Adjustment Not available separately.
11		2	Spring - Screw Not available separately.
12		4	Screw - Cover Not available separately.
13		1	Ring - "C" Not available separately.
14		1	Strainer Not available separately.
15		1	Cover - Pump Not available separately.
16		1	Screen Not available separately.
17		1	Kit - Pump Diaphragm Not available separately.
18		1	Body - Pump Not available separately.
19		1	Diaphragm - Main Not available separately.
20		1	Gasket - Main Not available separately.
21		1	Disk Not available separately.
22		1	Screw Not available separately.
23		1	Pin - Arm Not available separately.
24		1	Arm - Needle Valve Not available separately.
25		1	Spring - Arm Not available separately.
26		1	Valve - Needle Not available separately.
27		1	Plug - Welch Not available separately.
28		1	Valve Asy - Main Nozzle Not available separately.
	217079		Repair Kit
	216722		Gasket/Diaphragm Kit
	217086		Needle Kit

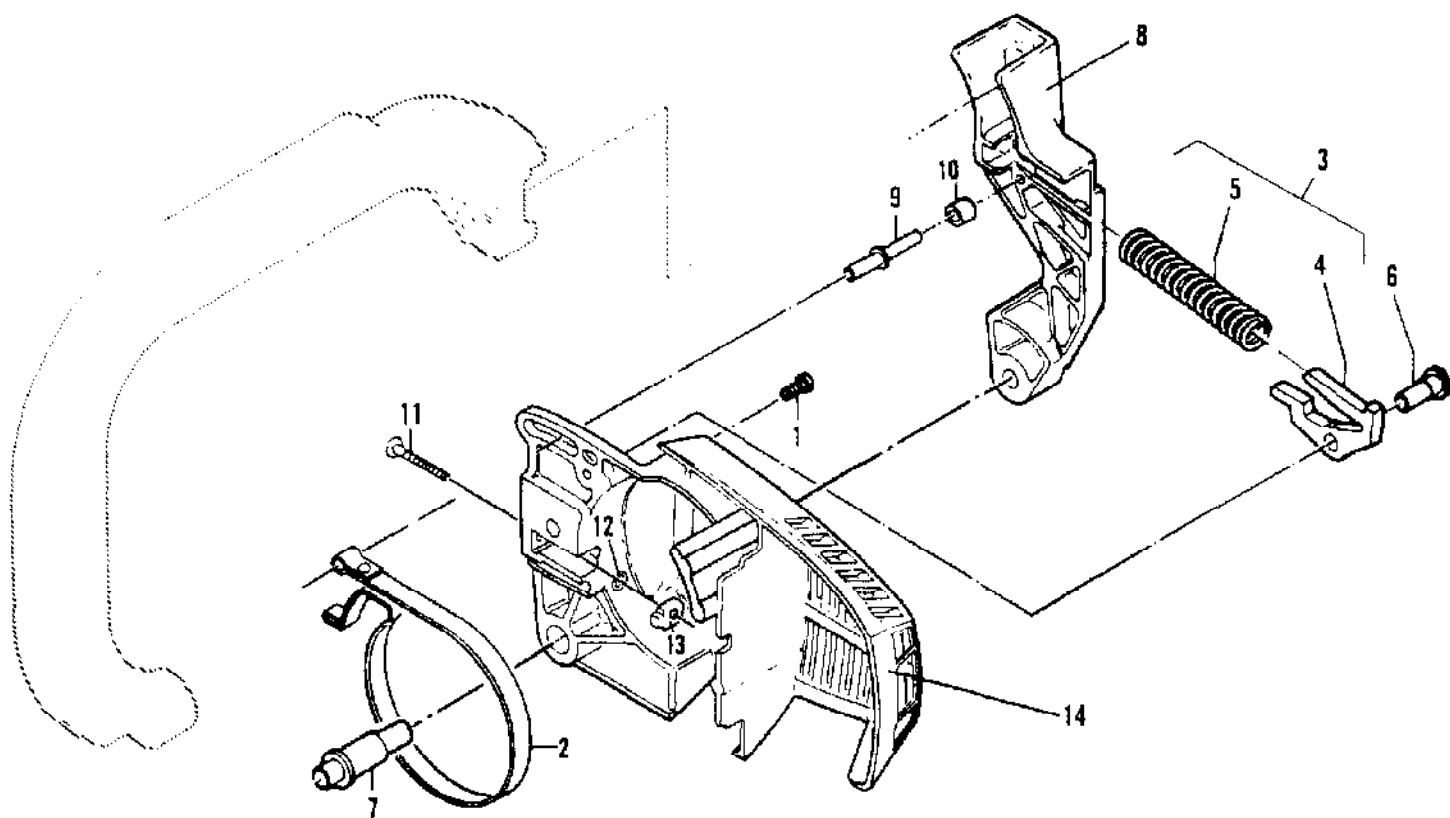

Ref #	Part Number	Qty	Description
	216416	1	Brake Assembly - Chain
1	111047	1	Screw - 8-32 x .625
2	94709	1	Band - Brake
3	215758	1	Kit - Latch
4	216755	1	Latch
5	215721	1	Spring - Compression
6	93602	1	Pivot - Latch
7	216549	1	Pivot - Lever
8	92867	1	Lever
9	213907	1	Pin - Roller
10	214368	1	Bearing - Roller
11	90658	1	Screw - Adjusting
12	110907	1	Ring - Retaining
13	68656	1	Nut - Bar Adjusting
14	216414	1	Housing - Brake

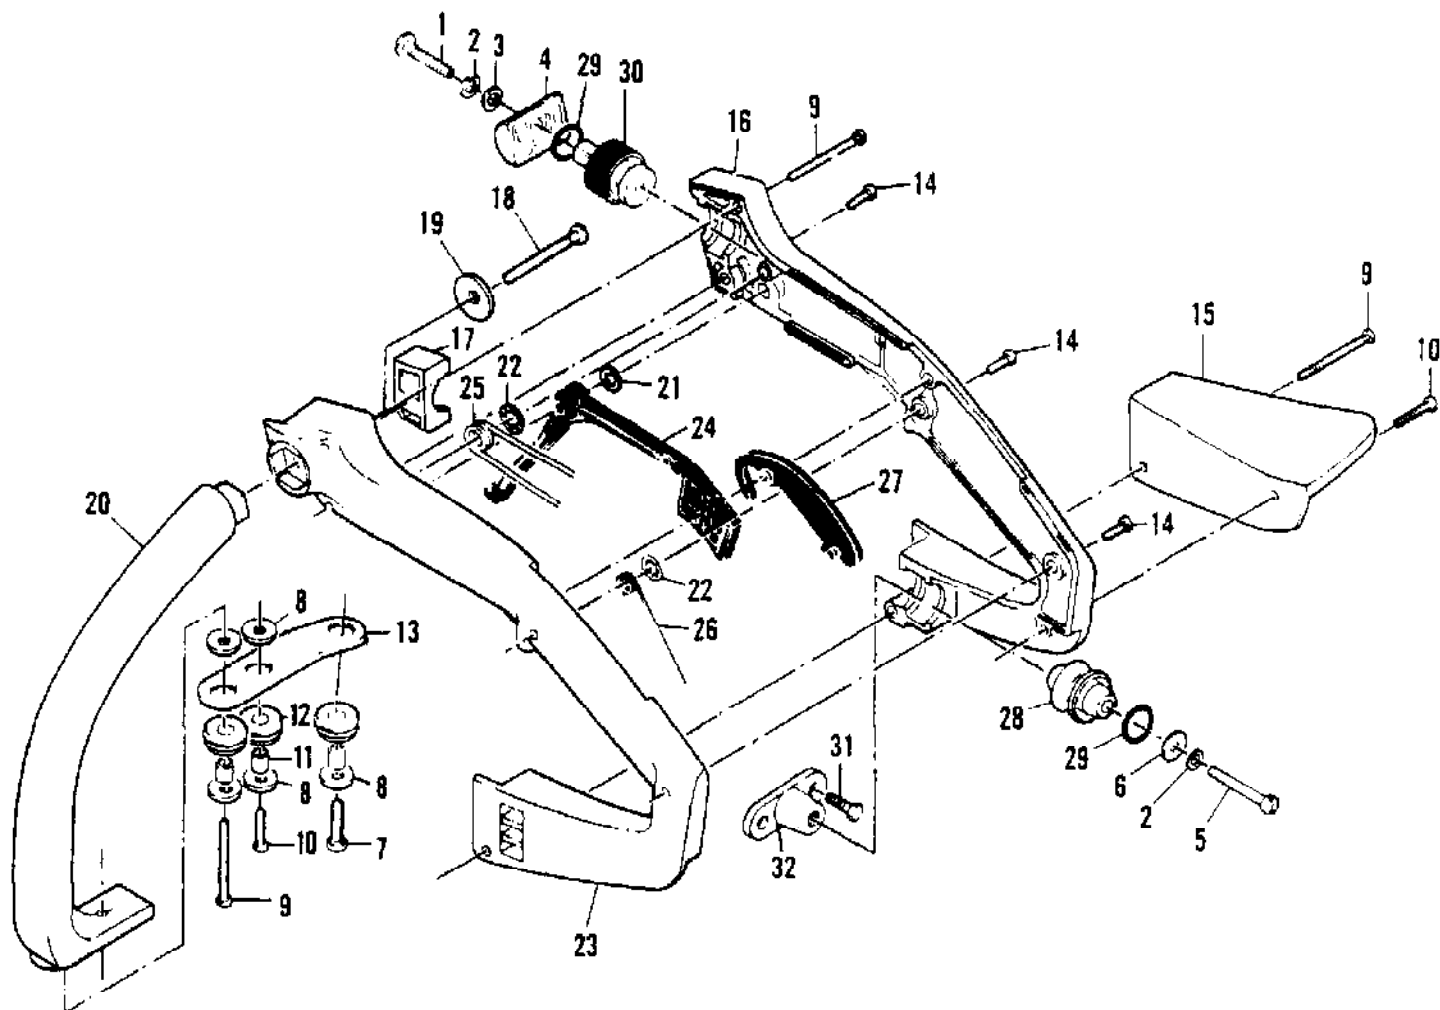


Ref #	Part Number	Qty	Description
1	213047	1	Screw - 1/4 x 1.50
2	216533	2	Washer - Spring Lock
3	216646	1	Washer - Flat
4	91168	1	Fitting - Shroud
5	213048	1	Screw - 1/4 - 20 x 1.75
6	111027	1	Washer
	93060-01	1	Handle/Frame Asy
7	216490	1	Screw - 12-24 x .76
8	110882	5	Washer
9	216537	3	Screw - 10- 16 x 1.62
10	216538	2	Screw - 10 - 16 x .875
11	93057	3	Spacer - Mount
12	110989	3	Grommet
13	93031	1	Link - Mount
14	110978	3	Screw - 8 - 16 x .625
15	93026	1	Guard - Chain
16	94051	1	Handle - Right Half
17	93030	1	Insert - Handle
18	222768	1	Screw
19	111027	1	Washer
20	94052	1	Frame
21	110960	1	Washer
22	110936	2	Retainer - Spring
23	94050	1	Handle - Left Half
24	216083	1	Trigger - Throttle
25	90606	1	Spring - Trigger
26	90615	1	Spring - Trigger Release
27	91504	1	Release - Trigger
28	91171	1	Mount
29	105615	2	Ring - "O"
30	91170	2	Mount and Adaptor
31	216490	2	Screw - HX 12-24 x .76
32	90436	1	Adaptor - Rear

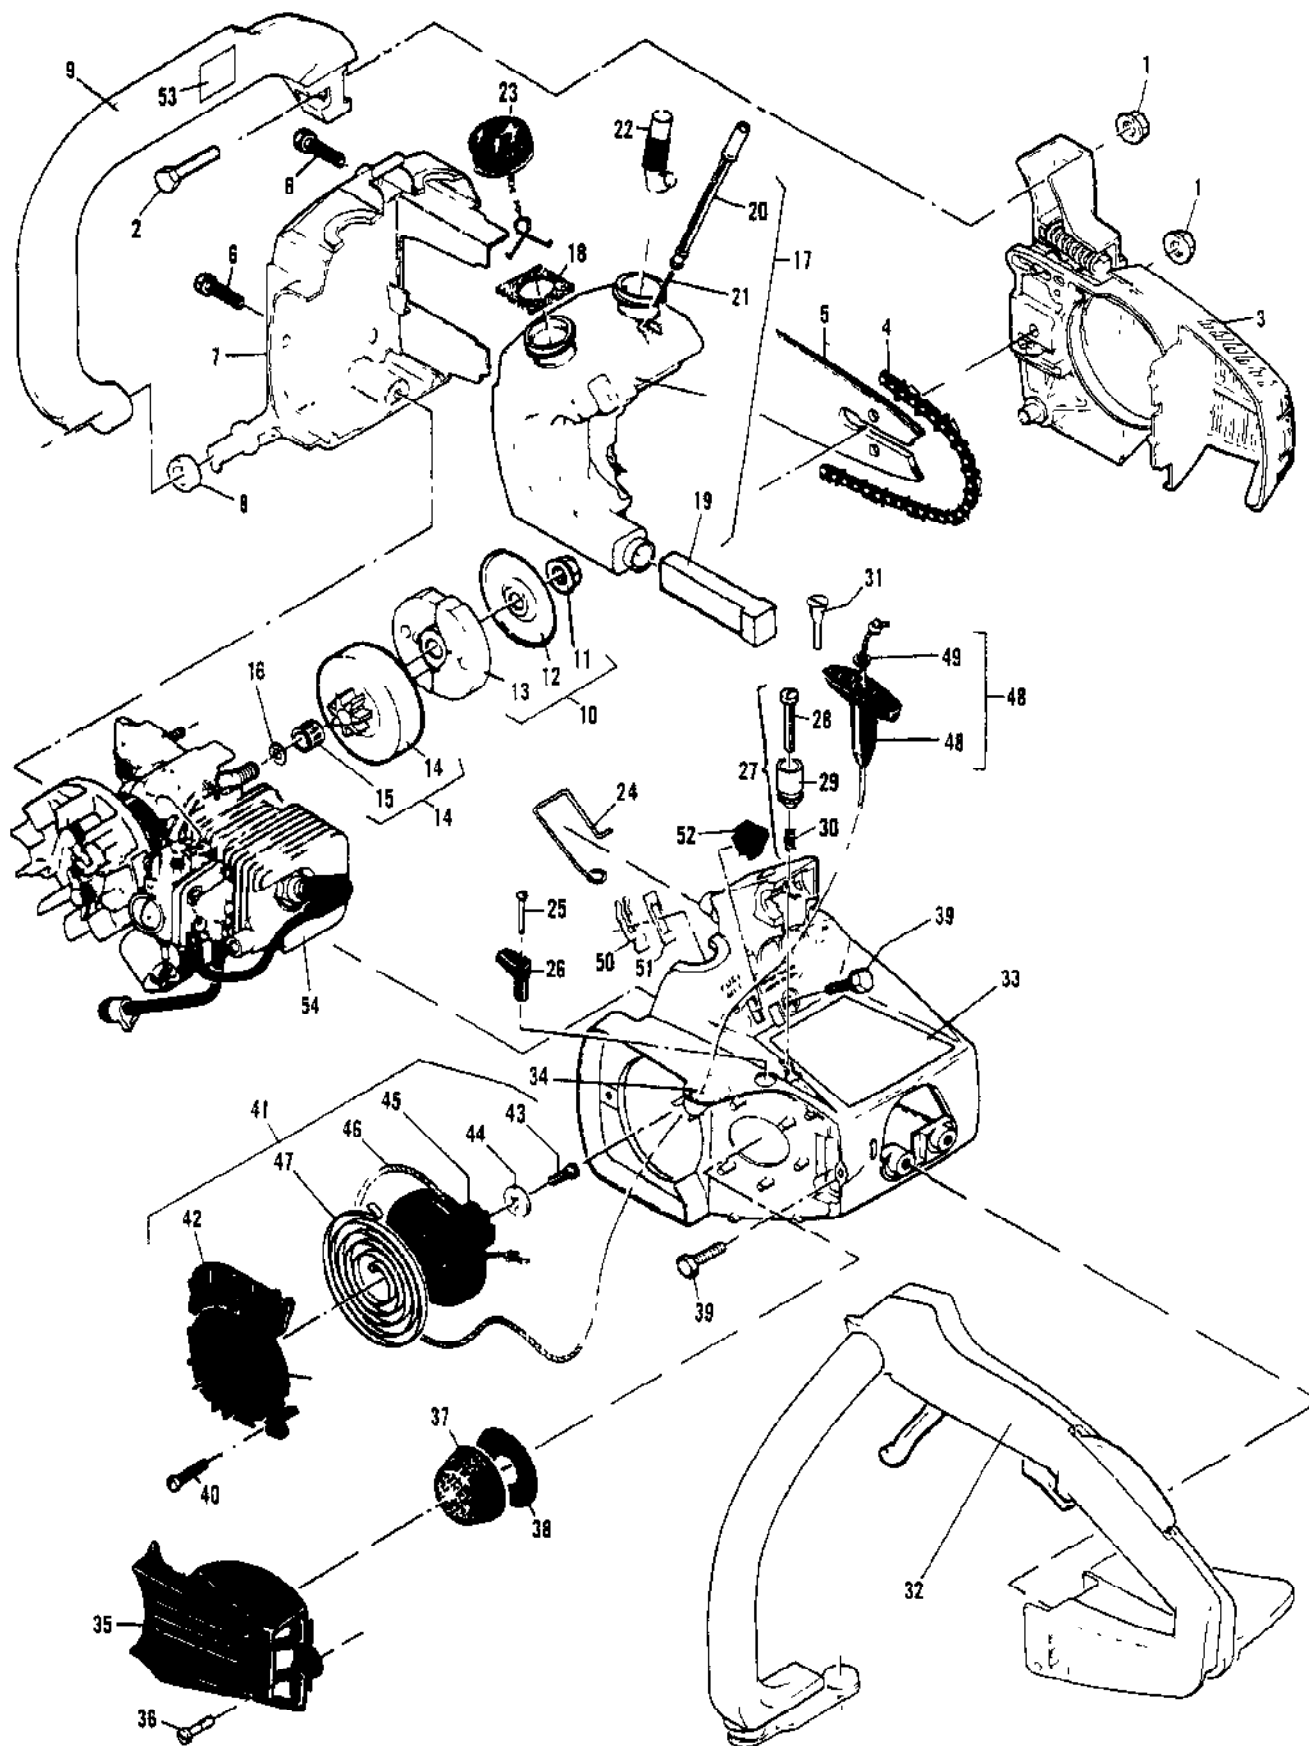

Ref #	Part Number	Qty	Description
1	110676	2	Nut - Hex 1/4-28
2	110972	1	Screw-Hex 1/4-28 x .75
3		1	Brake Assembly - Chain See "Chain Brake Assembly" illustration and parts list.
4		1	Chain - Saw Not available separately.
5		1	Bar - Guide Not available separately.
6	110639	2	Screw - Hex 12-24 x 1
7	218867	1	Cover - Fuel/Oil Tank
8	93194-01	1	Washer - Rubber
9	92479	1	Lever/Handguard
10	213278	1	Kit - Clutch
11	94244	1	Nut - Clutch
12	94243	1	Plate - Dust
13		1	Clutch Assembly Not available separately.
14	95646	1	Drum/Sprocket/Bearing Asy
15	91222	1	Bearing - Needle
16	215259	1	Washer - Sprocket
17	217761	1	Kit - Fuel/Oil Tank
18	91148	1	Seal - Fuel Vent
19	84956	1	Pickup - Fuel
20	217755	1	Piston - Manual Oiler
21	83946	1	Spring - Piston
22	85557	1	Body - Oiler
23	216668	1	Cap - Fuel/Oil w/ Retainer
24	218410	1	Rod - Manual Oiler
25	110672	1	Screw - 4-40 x 1.0
26	83870	1	Knob - Choke
27	93437	1	Throttle Latch
28	216440	1	Screw - Throttle Lock
29		1	Latch - Throttle Not available separately.
30		1	Spring - Compression Not available separately.
31	68566	1	Screw - Idle Adj./Throttle
32		1	Handle Assembly See "Handle/Frame Assembly" illustration and parts list.
33	222939	1	Shroud/Guide Asy
34	222938	1	Guide - Rope
35	91853	1	Cover - Air Filter
36	91796	1	Screw - A/C Cover
37	216905	1	Filter - Air Cleaner
38	84918	1	Washer - Air Seal
39	216490	3	Screw - Hex 12-24 x .76
40	110959	3	Screw-Hex 8-32 x .50 (25-30 in. lb. torque)
41	95773	1	Starter Asy
42	91692	1	Housing-Starter
43	110041	1	Screw - 8-32 x .50
44	91692	1	Washer - Special
45	213257	1	Drum/Rope Asy
46	83203	1	Rope - Starter (45-1/4")
47	83078	1	Spring - Rewind
48	87851	1	Handle Assembly - Starter
49	105490	2	Washer - Handle
50	83935	1	Contact - Stop Switch
51	83936	1	Protector - Switch
52	83934	1	Button - Stop Switch

Ref #	Part Number	Qty	Description
53	219058	1	Decal - Safety
54		1	Powerhead Assembly See "Powerhead Assembly" illustration and parts list.

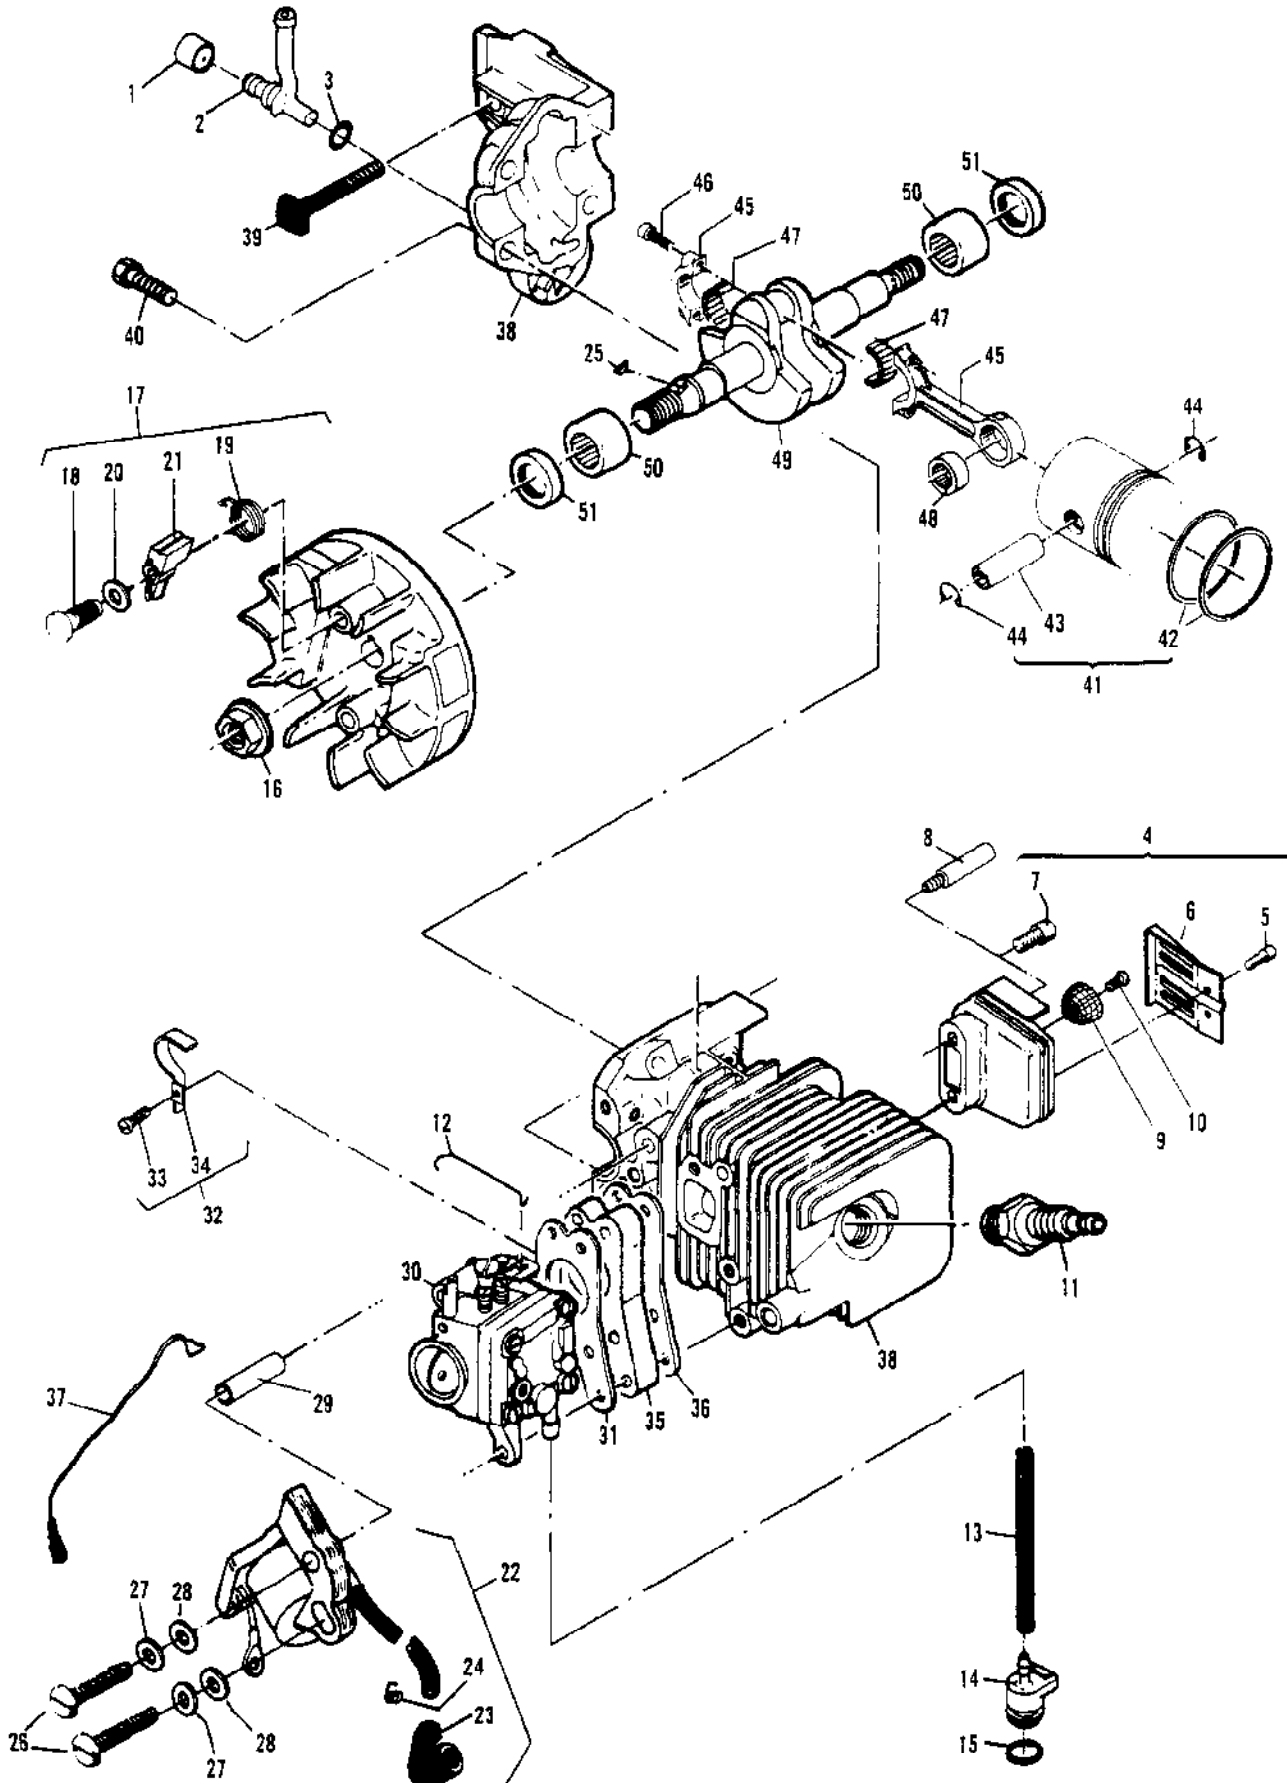

Ref #	Part Number	Qty	Description
1	86438	1	Valve - Manual Oil Pump
2	217156	1	Connector - Manual Oil Pump
3	105603	1	Ring - "O" .114 x .070
4	215411	1	Muffler/Deflector Asy
5	110681	2	Screw - 10-24 x .25
6	92961	1	Deflector - Exhaust
7	215394	2	Screw - Special
8	213327	1	Screw - Special Muffler
9	83407	1	Spark Arrestor Screen
10	101987	1	Screw - 6-32 x .25
11	62345	1	Plug - Spark DJSJ Champion
12	216039	1	Rod - Throttle
13	89059	1	Hose - Fuel
14	90660	1	Adaptor - Fuel Hose
15	110908	1	Ring - "O"
16	216640	1	Nut
17	217673	1	Flywheel/Pawl Assembly
18	216984	2	Pin - Starter Pawl
19	216982	2	Spring - Pawl
20	93469	2	Washer - Pawl
21	216983	2	Pawl - Starter
22	217031	1	Ignition Assembly
23	95266	1	Boot - Spark Plug
24	102556	1	Connector
25	102164	1	Key - Woodruff
26	222866	3	Screw - 8-2 x 1.75
27	105976	3	Washer - #8 Plain
28	67177	3	Washer - Insulating
29	68198	3	Tube - Insulating
30		1	Carburetor Assembly See "Carburetor Assembly" illustration and parts list.
31	68197	1	Gasket - Carburetor
32	219389	1	Connector/Stop Switch Asy
33		1	Screw - Connector Not available separately.
34		1	Connector - Stop Switch Not available separately.
35		1	Insulator - Carburetor Not available separately.
36	90714	1	Gasket - Insulator
37	217190	1	Wire - Stop Switch
38	216936	1	Cylinder/Crankcase
39	83856	1	Bolt - Bar Mounting
40	120097	4	Screw - Hex M5 x .8 x 25
41	94662	1	Piston Assembly
42	95143	2	Rings - Piston
43	92836	1	Pin - Piston
44	111026	2	Ring - Retaining
45	94135	1	Rod Assembly - Connecting
46	94654	2	Screw - Connecting Rod
47	68095	1	Roller - Needle (20)
48	110984	1	Bearing - Needle
49	217042	1	Crankshaft/Bearing Asy
50	213282	2	Bearing - Crankshaft
51	83859	2	Seal - Crankshaft

No
Diagram
Available

Parts List
Only

Ref #	Part Number	Qty	Description
	68915-01		KIT - Piston Pin Installation/Removal
	93900-00		KIT - Cylinder/C'Case Pressure
	215432-00		TOOL - Pressure Test
	214219-00		Wrench/Screwdriver
	216063-00		KEY - Socket 5/32"