


TB26TB 41ADT2BC966
Boom and Trimmer

Page 1 of 5

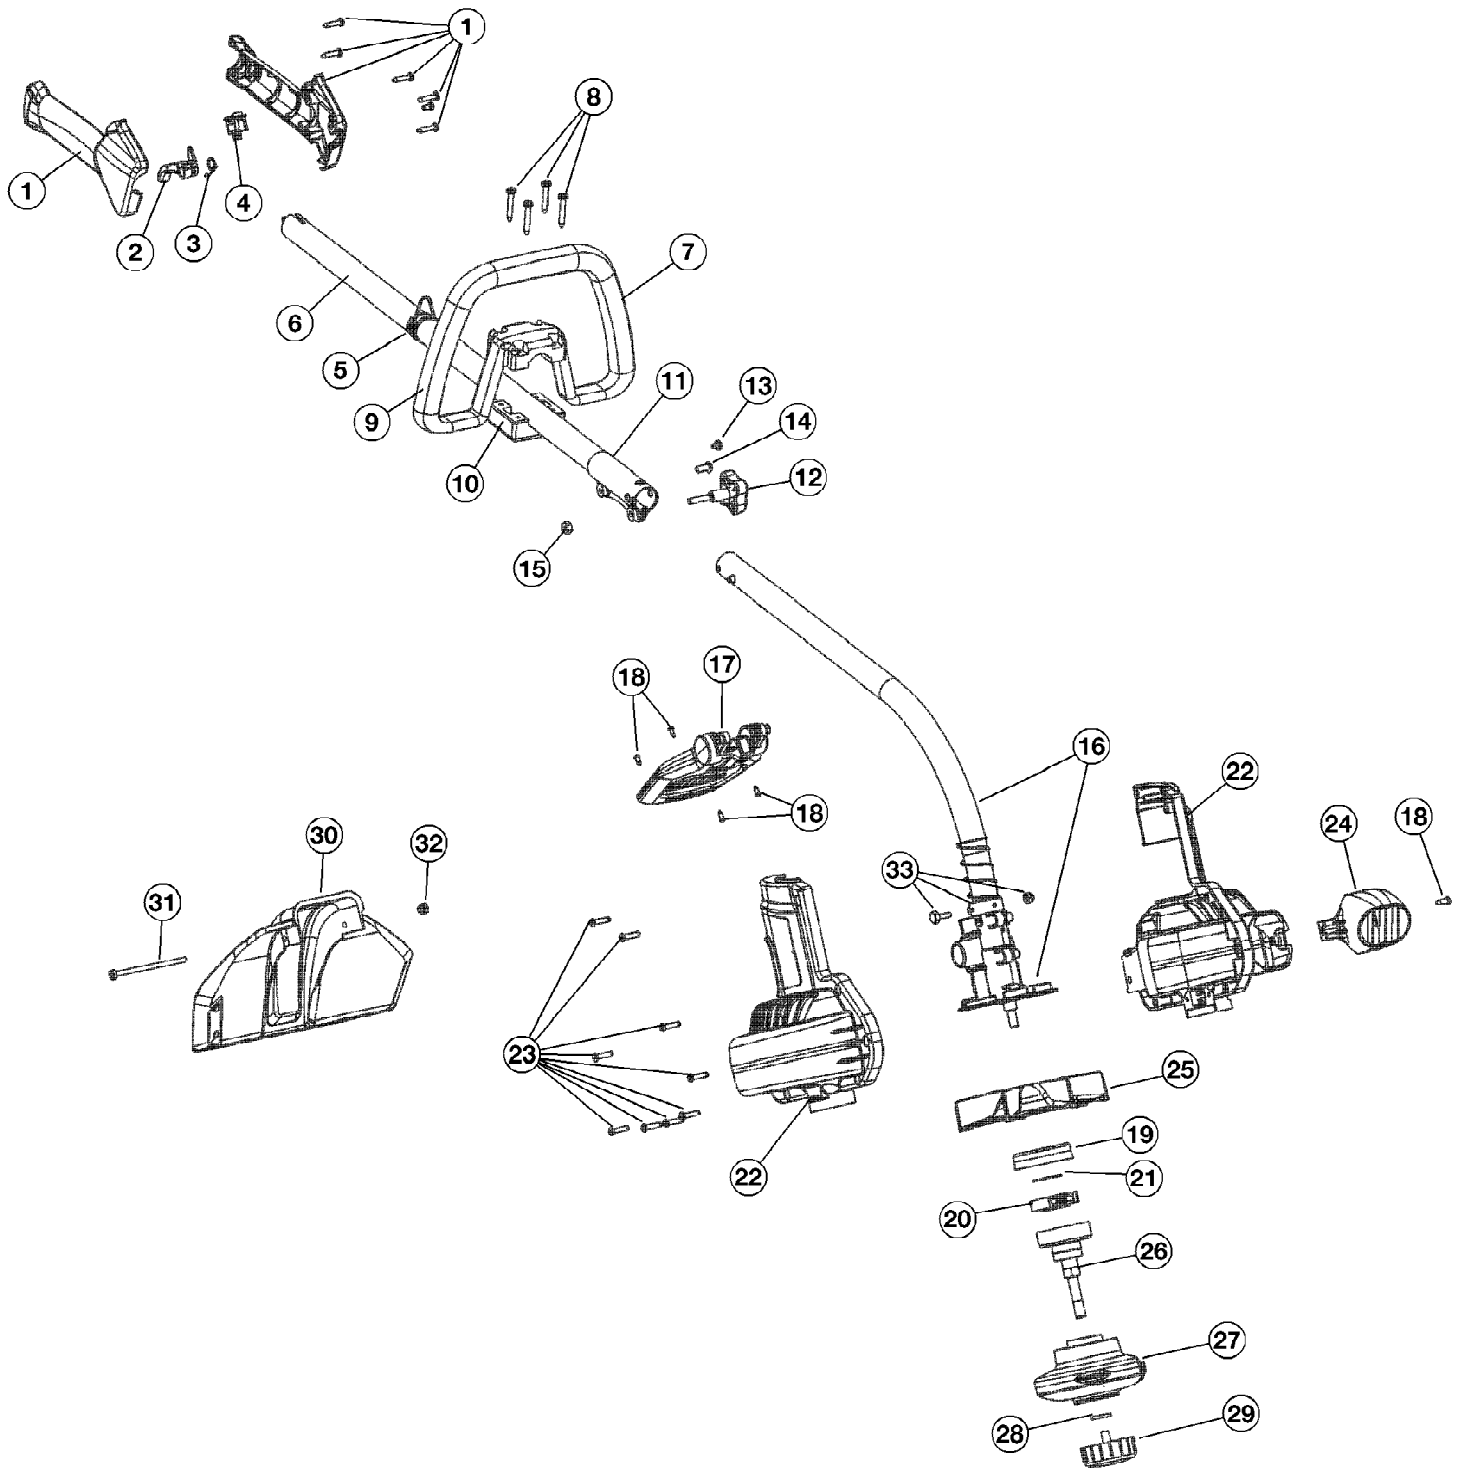


TB26TB 41ADT2BC966
Boom and Trimmer

Page 2 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-04234	1		Throttle Housing Assembly (includes 2-4)
2	753-04119	1	/P	Throttle Trigger
3	791-182690	1		Throttle Trigger Spring
4	791-182405	1	/P	Switch Assembly
5	791-610327	1		Harness Clip
6	753-04503	1	/P	Upper Drive Shaft Housing Assembly
7	791-180869	1		Deluxe D-Handle Assembly (includes 8-10)
8	791-181070	1		Screw
9	791-182167	1		D-Handle
10	791-182168	1		D-Handle Base
11	753-1190	1	/P	Split Boom Coupler (includes 12-15)
12	791-181981	1		Adjustment Knob (includes 15)
13	791-182057	1		Screw
14	791-181617	1		Bolt
15	753-04386	1	S	Nut
16	753-05272	1		Lower Drive Shaft Housing Assembly (includes 33)
17	753-05307	1		Shift Handle Assembly (includes 18)
18	753-1202	1		Screw
19	753-05233	1		Clutch Drum Container
20	753-05257	1		Clutch Assembly
21	791-182396	1	S	Washer
22	753-05273	1		Housing Assembly (includes 23)
23	753-05274	1	S	Screw
24	753-05275	1		Nozzle
25	753-05276	1		Impeller
26	753-05277	1		Clutch Drum Assembly w/Spool Shaft
27	753-05165	1		Fixed Line Head
28	791-182413	1	S	Washer
29	791-153066B	1	/P	Bump Knob Assembly
30	753-05282	1		Guard Assembly w/Blade (includes 31 & 34)
31	753-05283	1	S	Screw
32	791-180217	1	S	Nut
33	791-153597	1		Clamp

TB26TB 41ADT2BC966
Engine

Page 3 of 5

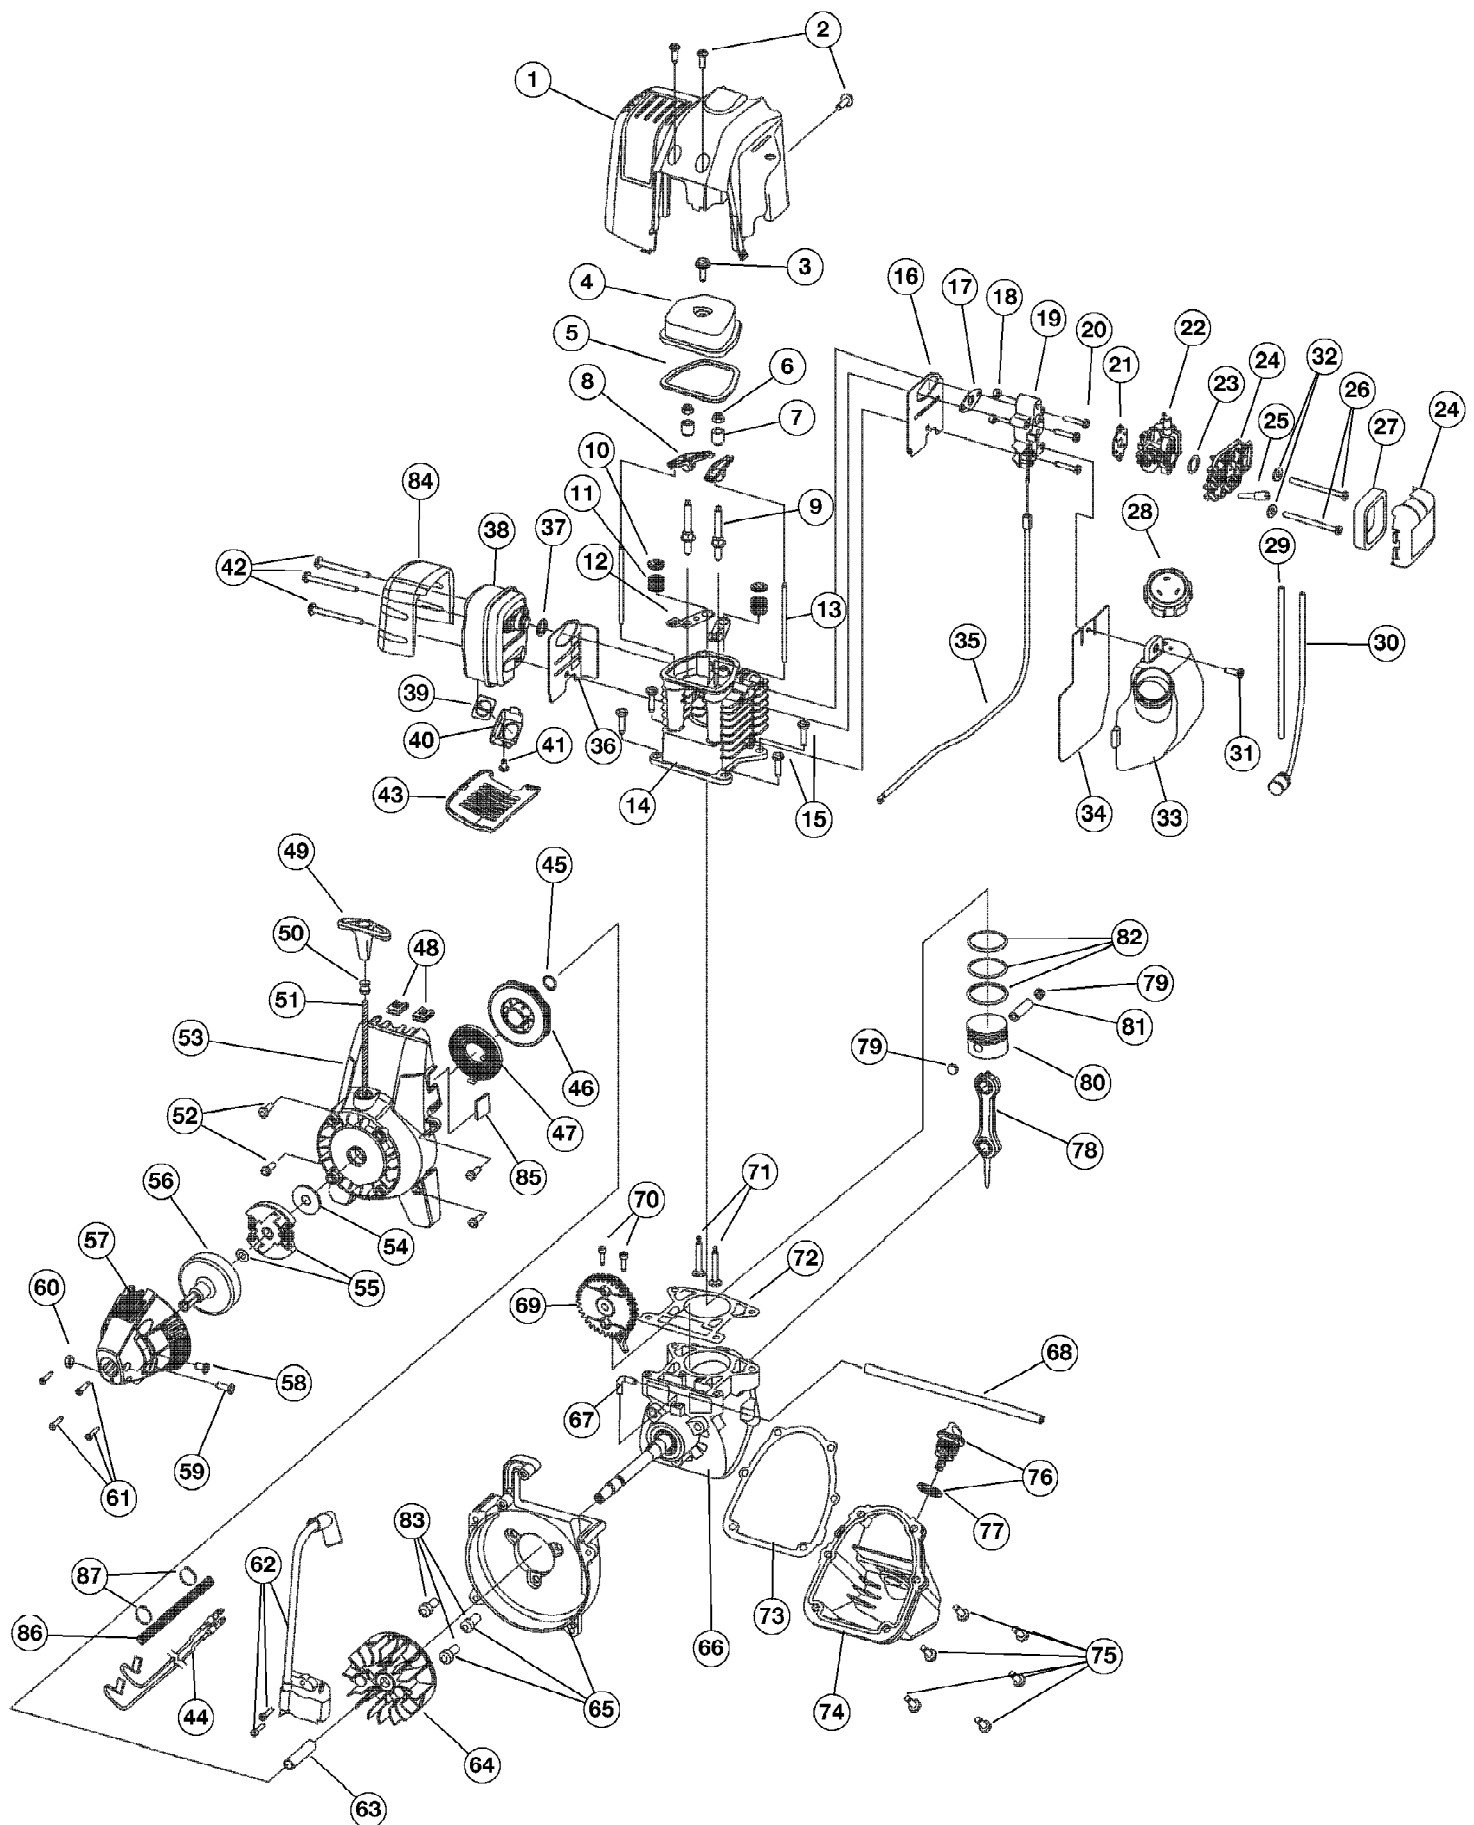

TB26TB 41ADT2BC966
Engine

Page 4 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-04083	1		Engine Cover
2	753-04994	1	/P	Engine Cover Screws
3	791-181025	1		Valve Cover Screw
4	791-182098	1		Valve Cover
5	791-182099	1	/P	Valve Cover Gasket
6	791-182340	1		Rocker Adjustment Nut
7	791-182101	1	/P	Rocker Arm Pivot
8	791-182100	1		Rocker Arm
9	791-182341	1		Rocker Arm Stud
10	791-182103	1		Valve Spring Retainer
11	791-181038	1		Valve Spring
12	791-182102	1		Push Rod Guide
13	791-181033	1		Push Rod
14	753-04816	1	/P	Cylinder Assembly (includes 9-12, 15, 71 & 72)
15	791-181003	1	/P	Cylinder Screw
16	791-182345	1		Intake Baffle
17	791-182749	1		Carburetor Mount Gasket
18	791-181034	1	S	Nut
19	791-182347	1		Carburetor Mount (includes 18)
20	791-182348	1		Carburetor Mount Screw
21	791-182732	1	/P	Carburetor Gasket
22	753-04745	1		Carburetor with Primer
23	791-181751	1		O-Ring, Carburetor
24	753-04305	1	/P	Air Filter Assembly (includes 27)
25	791-182097	1		Breather Tube
26	791-181750	1		Air Filter Mounting Screw
27	791-181757	1		Air Filter
28	753-1229	1		Fuel Cap
29	791-182352	1		Fuel Return Line
30	791-182353	1		Fuel Pick-Up Line with Filter
31	753-04510	1	S	Screw
32	791-182409	1		Washer
33	753-1230	1		Fuel Tank Assembly (includes 28-30)
34	791-182356	1		Fuel Tank Shield
35	753-04746	1		Throttle Cable
36	791-182358	1		Muffler Baffle
37	791-181048	1		Muffler Gasket
38	791-182359	1	/P	Muffler (includes 37, 39-41)
39	791-180890	1		Spark Arrestor Screen
40	791-181045	1		Screen Cover
41	791-181046	1		Screw
42	791-182361	1		Muffler Mounting Screw
43	753-04092	1		Muffler Cover
44	791-182804	1		Switch Wire Assembly
45	753-04288	1	/P	Pulley Retainer
46	753-1199	1		Recoil Pulley
47	753-04286	1		Recoil Spring
48	791-182366	1		Nut Clip
49	791-181079	1	S	Pull Handle
50	791-611061	1		Rope Guide
51	791-613103	1		Rope
52	791-181020	1		Starter Housing Screw

TB26TB 41ADT2BC966
Engine

Page 5 of 5

Ref #	Part Number	Qty	S/P/F	Description
53	753-1237	1	S	Starter Housing Assembly (includes 45-52)
54	791-182396	1	S	Clutch Washer
55	753-1238	1		Clutch with Spacer
56	791-153592	1	/P	Clutch Drum
57	753-1239	1		Clutch Cover
58	791-145569	1	/P	Anti-Rotation Screw
59	753-1240	1		Screw
60	753-1241	1		Nut
61	791-181345	1	/P	Clutch Cover Screw
62	753-04298	1		Ignition Module Assembly
63	791-181065	1		Spacer
64	753-04299	1		Flywheel
65	791-182743	1	/P	Shroud Assembly (includes 83)
66	791-182376	1	/P	Crankcase Assembly (includes 67 & 68)
67	791-182375	1		Breather Fitting
68	791-182379	1	/P	Breather Hose
69	753-04919	1		Cam Bracket Assembly (includes 70)
70	791-181012	1		Cam Bracket Screw
71	791-181040	1		Valves, Intake and Exhaust
72	791-182374	1		Cylinder Gasket
73	791-181018	1		Oil Pan Gasket
74	791-182377	1		Oil Pan (includes 73 & 75)
75	791-181020	1		Oil Pan Screw
76	753-04041	1	S	Dipstick Assembly (includes 77)
77	791-182290	1		O-Ring
78	791-181009	1		Connecting Rod
79	791-181008	1		Wrist Pin Button
80	753-1243	1	S	Piston (includes 82)
81	753-05176	1		Wrist Pin
82	791-182295	1	S	Piston Ring Set
83	791-181861	1		Shroud Screw
84	791-182360	1		Heat Shield
85	791-182537	1		Grommet
86	753-04098	1		Wire Cover
87	791-160428	1		Cable Clamp
	791-180852B	1	/P	Spark Plug (Parts not shown)
	753-04087	1	/P	Short Block Assembly (includes 3-15, 65-82) (Parts not shown)