


TB425CS 41ADT42C966
Boom & Trimmer Curved Shaft

Page 1 of 5

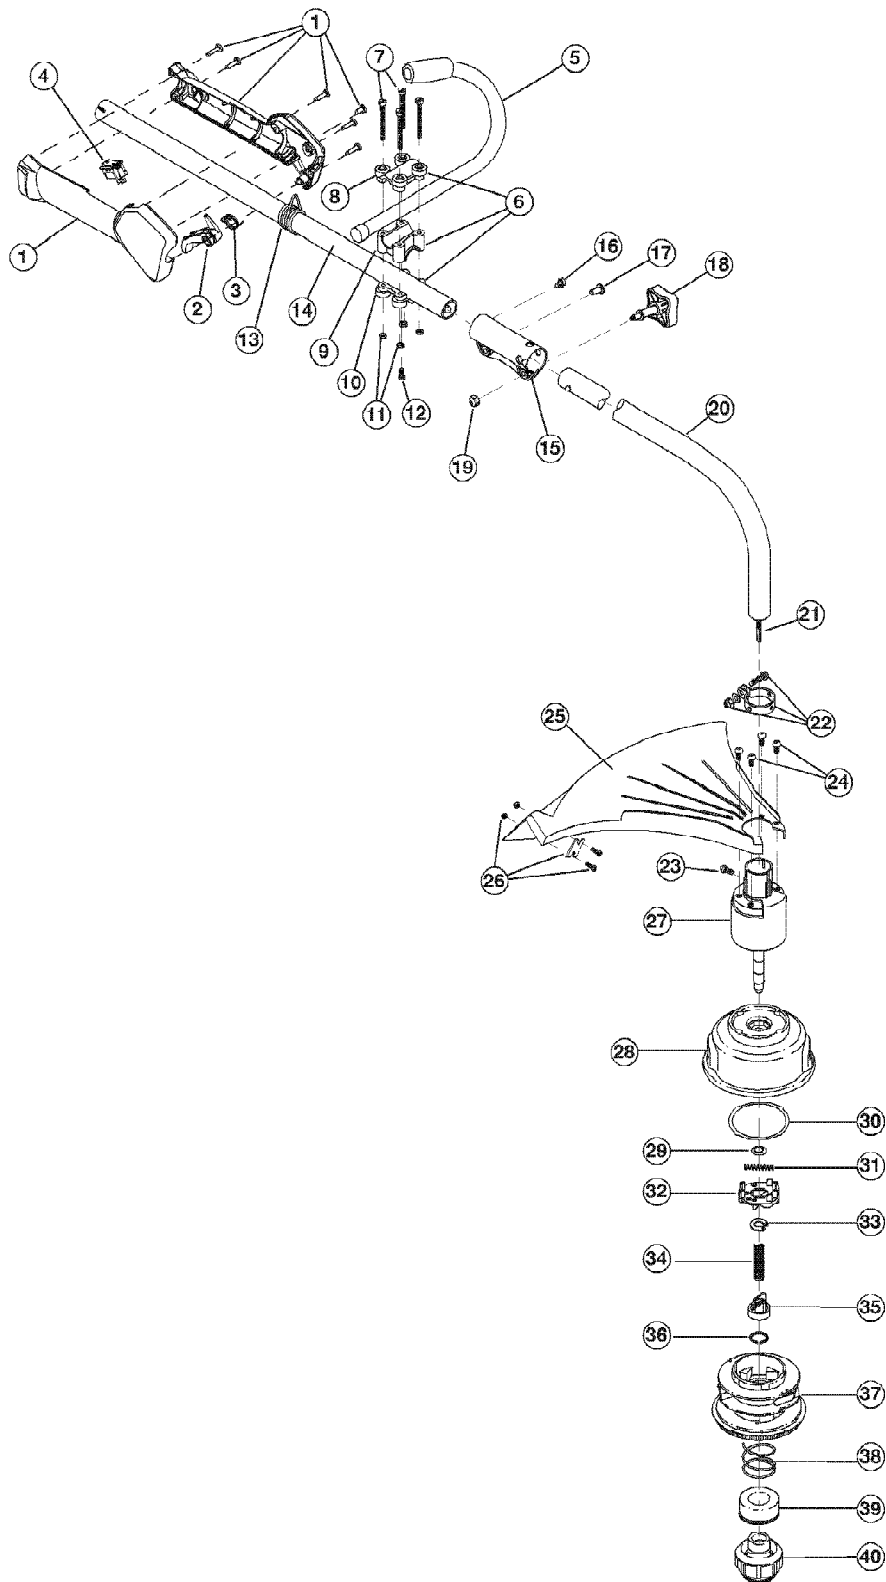


TB425CS 41ADT42C966
Boom & Trimmer Curved Shaft

Page 2 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-04234	1		Throttle Housing Assembly (includes 2-4)
2	753-04119	1	/P	Throttle Trigger
3	791-182690	1		Throttle Trigger Spring
4	791-182405	1	/P	Switch Assembly
5	791-180687	1		J-Handle Assembly
6	791-683295	1		Handle Bracket Assembly (includes 7-12)
7	791-181811	1		Screw
8	791-181812	1		Upper Handle Clamp
9	791-181813	1		Middle Handle Clamp
10	791-181814	1		Lower Handle Clamp
11	791-181815	1		Nut
12	791-145569	1	/P	Anti-Rotation Screw
13	791-610327	1		Harness Clip
14	753-1247	1	S	Upper Drive Shaft Housing Assembly
15	753-1190	1	/P	Split Boom Coupler (includes 16-19)
16	791-182057	1		Screw
17	791-181617	1		Bolt
18	791-181981	1		Adjustment Knob (includes 19)
19	753-04386	1	S	Knob Retaining Nut
20	753-04304	1		Lower Drive Shaft Housing Assembly
21	791-181852	1	/P	Lower Flexible Drive Shaft
22	791-153597	1		Lower Clamp Assembly
23	791-145569	1	/P	Anti-Rotation Screw
24	791-180531	1	S	Shield Mounting Hardware
25	791-181659	1	/P	Shield Assembly (includes 26)
26	791-181823	1		Blade Assembly
27	791-181857	1		Bushing Housing Assembly
28	791-181457	1		Outer Spool Assembly (includes 29)
29	791-181458	1		Retaining Ring
30	791-181561	1		Thrust Washer
31	791-181459	1		Small Spring
32	791-181461	1	S	Slider
33	791-181532	1		E-Clip
34	791-181531	1		Spring
35	791-181462	1		Plunger
36	791-181463	1		C-Clip
37	791-181464	1	S	Inner Reel
38	791-181465B	1		Large Spring
39	791-181467	1		Foam Seal
40	791-181468B	1	/P	Bump Head Knob Assembly (includes 38 & 39)
	791-180120	1	S	Replacement Line, 0.095 Diameter (NOT SHOWN)
	753-04218	1		Reel and Line Assembly (NOT SHOWN)
	791-682075B	1	/P	Shoulder Strap Assembly (NOT SHOWN)

TB425CS 41ADT42C966
Engine Parts

Page 3 of 5

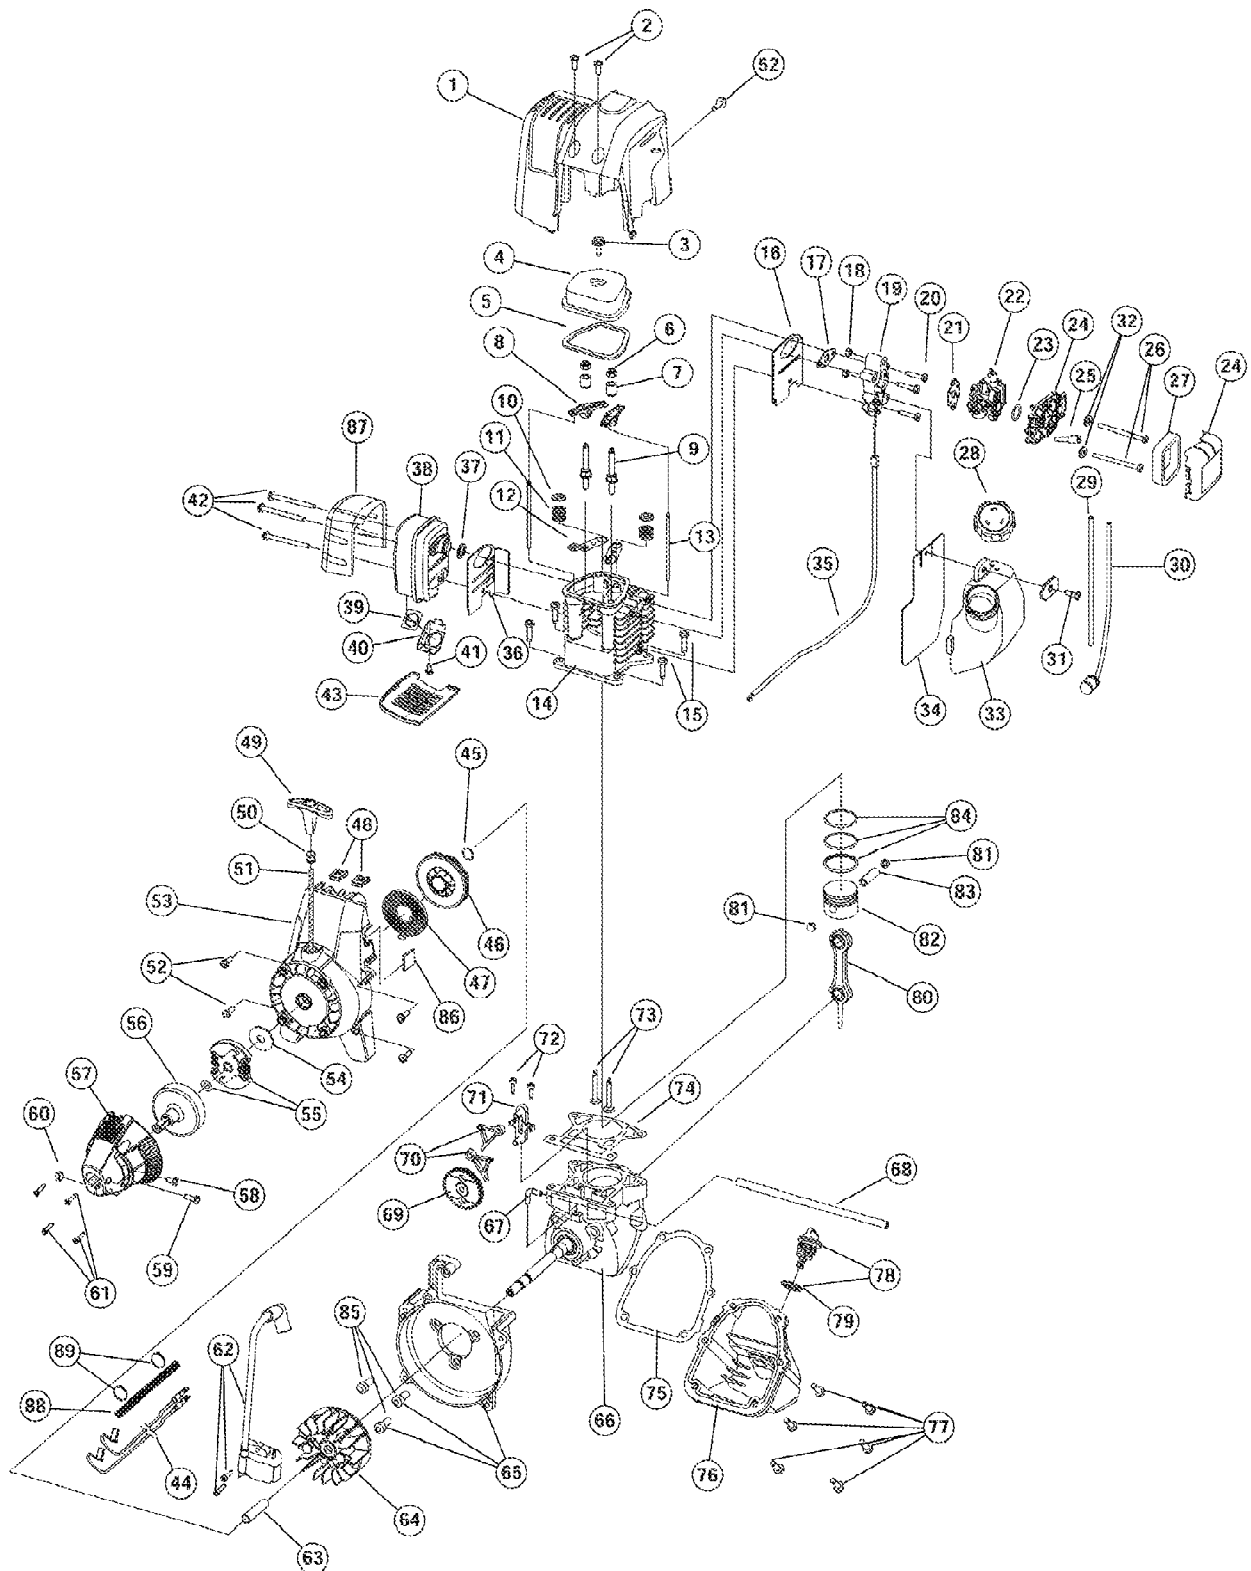

TB425CS 41ADT42C966
Engine Parts

Page 4 of 5

Ref #	Part Number	Qty	S/P/F	Description
1	753-04083	1		Engine Cover
2	791-182339	1	S	Engine Cover Screws
3	791-181025	1		Valve Cover Screw
4	791-182098	1		Valve Cover
5	791-182099	1	/P	Valve Cover Gasket
6	791-182340	1		Rocker Adjustment Nut
7	791-182101	1	/P	Rocker Arm Pivot
8	791-182100	1		Rocker Arm
9	791-182341	1		Rocker Arm Stud
10	791-182103	1		Valve Spring Retainer
11	791-181038	1		Valve Spring
12	791-182102	1		Push Rod Guide
13	791-181033	1		Push Rod
14	753-04816	1	/P	Cylinder Assembly (includes 9, 12 & 73)
15	791-182344	1	S	Cylinder Screw
16	791-182345	1		Intake Baffle
17	791-182749	1		Carburetor Mount Gasket
18	791-181034	1	S	Nut
19	791-182347	1		Carburetor Mount (includes 18)
20	791-182348	1		Carburetor Mount Screw
21	791-182732	1	/P	Carburetor Gasket
22	753-04296	1		Carburetor w/Primer
23	791-181751	1		O-Ring, Carburetor
24	753-04305	1	/P	Air Filter/Choke Cover Assembly (includes 32)
25	791-182097	1		Breather Tube
26	791-181750	1		Air Filter Mounting Screw
27	791-181757	1		Air Filter
28	753-1229	1		Fuel Cap
29	791-182352	1		Fuel Return Line
30	791-182353	1		Fuel Pick-Up Line with Filter
31	753-04185	1		Screw
32	791-182409	1		Washer
33	753-1230	1		Fuel Tank Assembly (includes 28-30)
34	791-182356	1		Fuel Tank Shield
35	753-04297	1		Throttle Cable
36	791-182358	1		Muffler Baffle
37	791-181048	1		Muffler Gasket
38	791-182359	1	/P	Muffler (includes 37, 39-41)
39	791-180890	1		Spark Arrestor Screen
40	791-181045	1		Screen Cover
41	791-181046	1		Screw
42	791-182361	1		Muffler Mounting Screw
43	753-04092	1		Muffler Cover
44	791-182804	1		Switch Wire Assembly
45	791-181247	1	S	Palnut
46	753-1199	1		Recoil Pulley
47	753-04286	1		Recoil Spring
48	791-182366	1		Nut Clip
49	791-181079	1	S	Pull Handle
50	791-611061	1		Rope Guide
51	791-613103	1		Rope
52	791-181020	1		Starter Housing Screw

TB425CS 41ADT42C966
Engine Parts

Page 5 of 5

Ref #	Part Number	Qty	S/P/F	Description
53	753-1237	1	S	Starter Housing Assembly (includes 45-52)
54	791-182396	1	S	Clutch Washer
55	753-1238	1		Clutch w/Spacer
56	791-153592	1	/P	Clutch Drum
57	753-1239	1		Clutch Cover
58	791-145569	1	/P	Anti-Rotation Screw
59	753-1240	1		Screw
60	753-1241	1		Nut
61	791-181345	1	/P	Clutch Cover Screw
62	753-04298	1		Ignition Module with Screws
63	791-181065	1		Spacer
64	753-04299	1		Flywheel
65	791-182743	1	/P	Shroud Assembly (includes 86)
66	791-182376	1	/P	Crankcase Assembly (includes 67 & 68)
67	791-182375	1		90° Elbow
68	791-182379	1	/P	Breather Hose
69	791-181015	1		Cam Gear
70	753-1242	1	S	Cam Follower Set
71	791-181013	1		Cam Bracket
72	791-181012	1		Cam Bracket Screw
73	791-181040	1		Valves, Intake and Exhaust
74	791-182374	1		Cylinder Gasket
75	791-181018	1		Oil Pan Gasket
76	791-182377	1		Oil Pan (includes 75 & 77)
77	791-181020	1		Oil Pan Screw
78	753-04041	1	S	Dipstick Assembly ((ncludes 79)
79	791-182290	1		O-Ring
80	791-181009	1		Connecting Rod
81	791-181008	1		Wrist Pin Button
82	753-1243	1	S	Piston (includes 84)
83	791-181006	1		Wrist Pin
84	791-182295	1	S	Piston Ring Set
85	791-181861	1		Shroud Screw
86	791-182537	1		Grommet
87	791-182360	1		Heat Sheild
88	753-04098	1		Wire Cover
89	791-160428	1		Cable Clamp
	791-180852B	1	/P	Spark Plug (NOT SHOWN)
	753-04818	1		Short Block Assembly (includes 3-14, 65-84) (NOT SHOWN)
	791-180142	1	S	Starter Pawl Repair Kit (NOT SHOWN)