


137-336-190 LT-11 (1987)
Body Assembly

Page 1 of 20

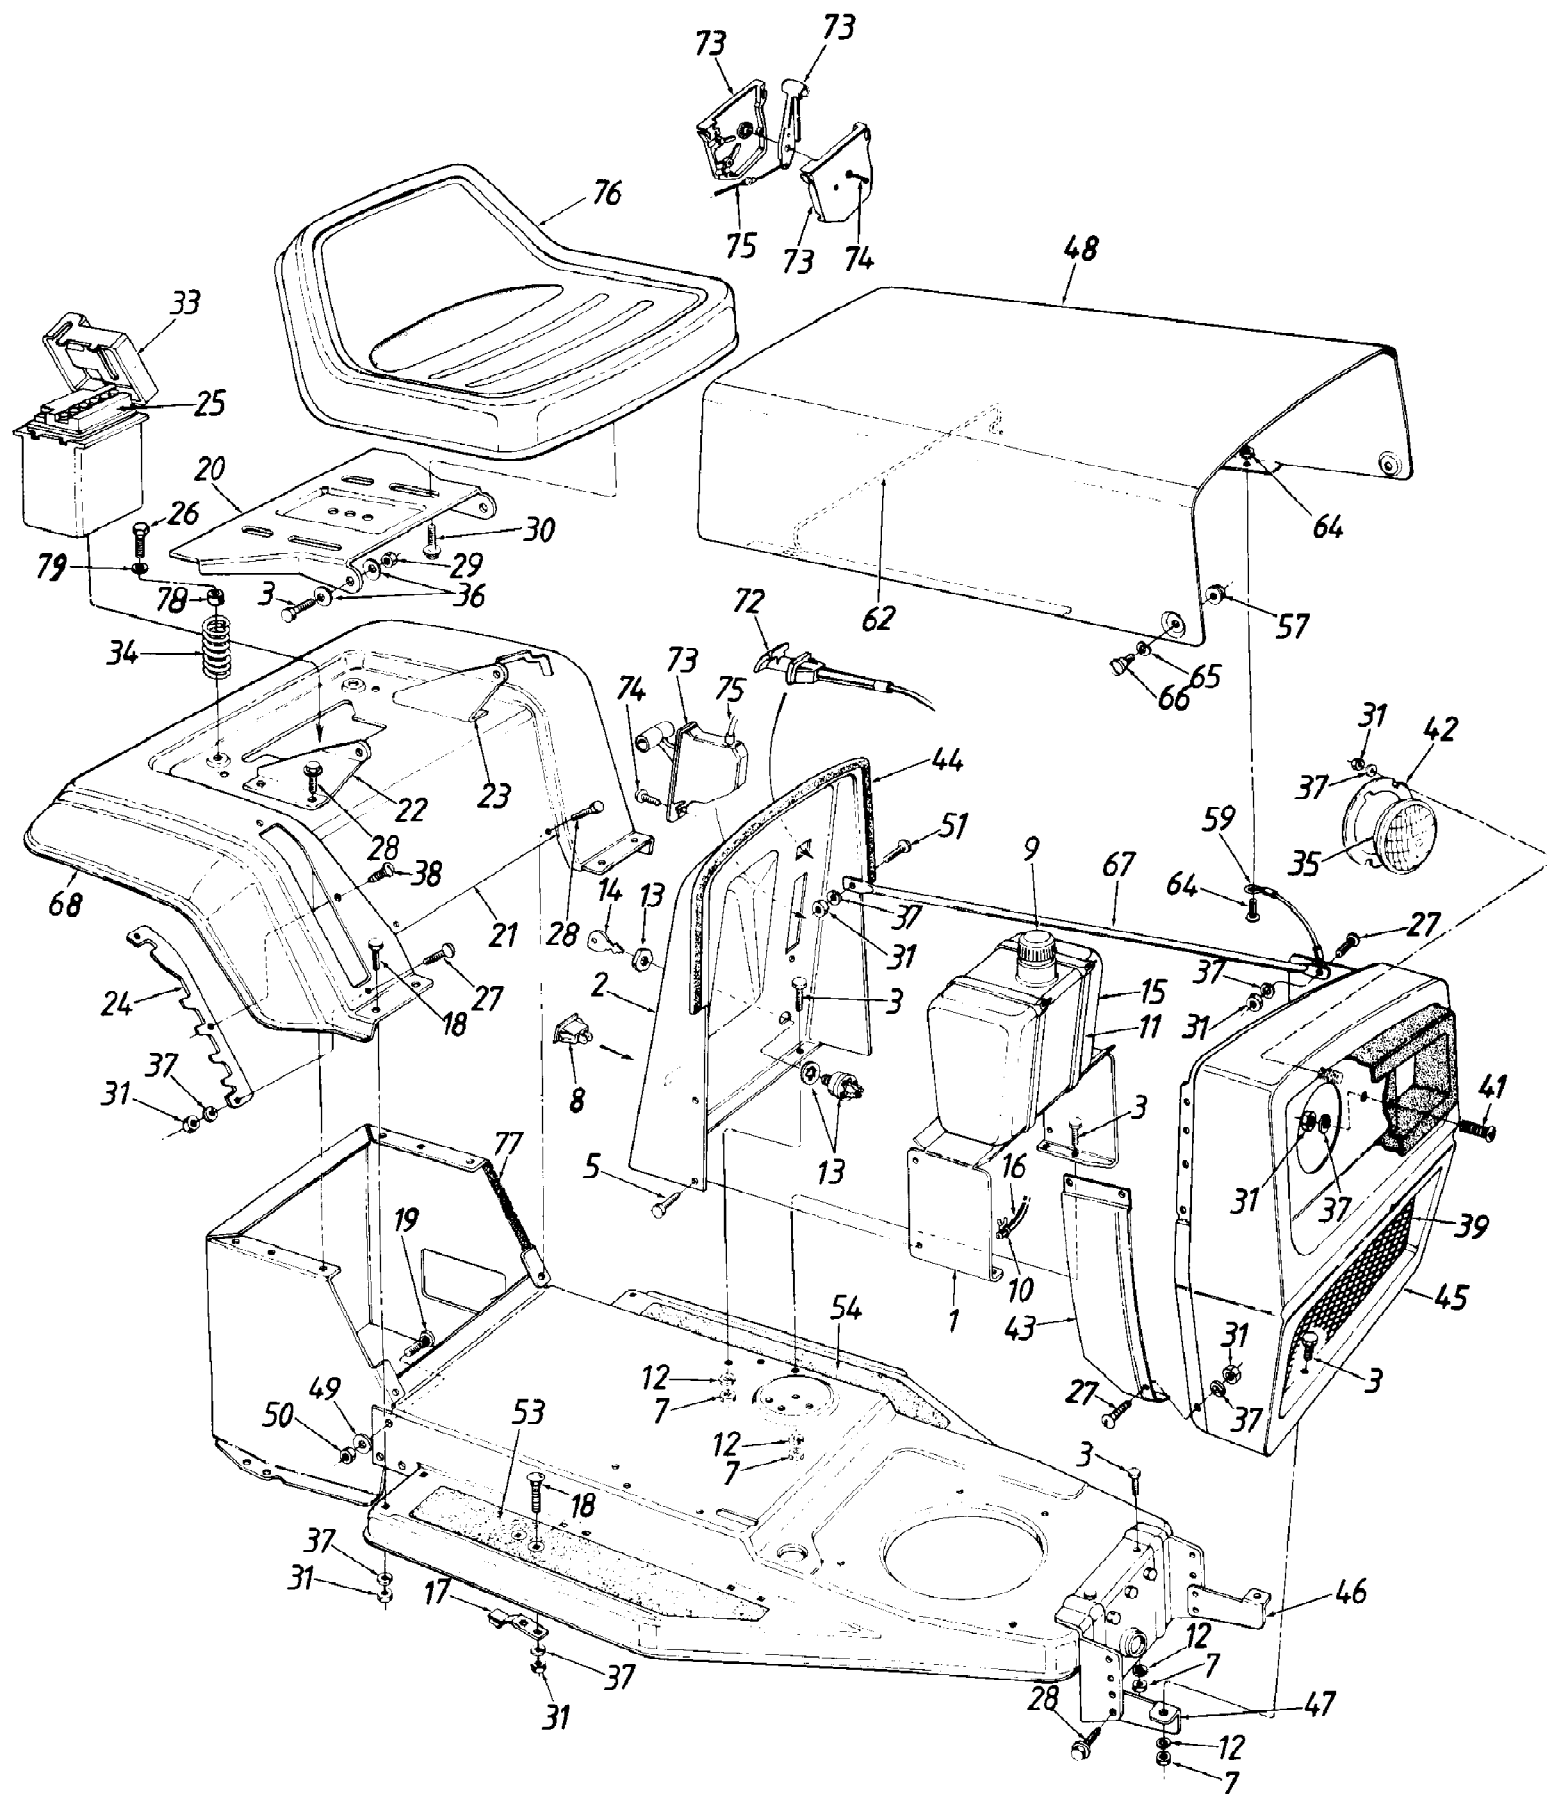

137-336-190 LT-11 (1987)
Body Assembly

Page 2 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	16655	1		Dash Panel Support Brkt.
2	16656	1		Dash Panel
3	710-0118	1	S	Hex Bolt 5/16-18 x .75" Lg.
5	710-0776	1	S	Hex AB-Tap Scr. 1/4 x .62"
7	712-0267	1	S	Hex Nut 5/16-18 Thd.
8	725-0634	1	S	Light Switch
9	723-0333	1	S	Gas Gauge
10	726-0207	1		Hose Clamp
11	726-0209	1	/P	Cable Tie
12	736-0119	1	S	L-Wash. 5/16" I.D.
13	725-0267	1	S	Ignition Switch
14	725-0201	1	S	Ignition Key
15	751-0172	1	S	Fuel Tank
16	751-0173	1	S	Ga ne
17	761-0157	1	S	Blade Brake Ass'y.
18	710-0134	1	/P	Carriage Bolt 1/4-20 x .62"
19	710-0793	1		Ribbed Neck Bolt 3/8-24 x .8"
20	15607	1	S	Seat Pivot Brkt.
21	16660	1		Rear Fender
22	16664	1		Seat Hinge Support Brkt.-R.H.
23	16665	1		Seat Hinge Support Brkt.-L.H.
24	17133	1		Deck Lift Index Brkt.
25	725-0514	1	S	Battery
26	710-0602	1	/P	Hex Self-Tap Screw 5/6-18 x 1" Lg.
27	710-0255	1	S	Truss Mach. Scr. 1/4-20 x .75" Lg.
28	710-0726	1	/P	Hex AB-Tap Scr. 5/16 x .75" Lg.
29	712-0158	1	S	Hex L-Nut 5/16-18 Thd.
30	710-0623	1	/P	Hex Self-Tap Scr. 3/8-16 x .75" Lg.
31	712-0287	1	S	Hex Nut 1/4-20 Thd.
33	731-0871	1	S	Battery Box w/Cover
34	732-0548	1		Compression Spring
35	725-0222	1	S	Headlight
36	736-0242	1	/P	Bell-Wash. 5/16" I.D.
37	736-0329	1	S	L-Wash. 1/4" I.D.
38	710-0224	1	S	Hex Wash. Hd. Self-Tap Scr. #10 x .5" Lg.
39	731-0881	1		Grille Insert
	731-0465	1		Bezel
41	710-0346	1		C-Sunk Mach. Scr. 1/4-20 x 1.5"
42	09960	1		Headlight Retainer
43	14748	1		Side Panel-R.H.
	14749	1		Side Panel-L.H. (Not Shown)
44	731-0511	1	/P	Trim Strip 26l/2n Lg.
45	14787	1		Grille
46	17143	1		Grille Mtg. Brkt.-L.H.
47	17144	1		Grille Mtg. Brkt.-R.H.
48	16681	1		Hood
49	746-0217	1	S	L-Wash. 3/8" H.D.
50	712-0241	1	/P	Hex L-Nut 3/8-24 Thd.
51	710-0258	1	S	Hex Bolt 1/4-20 x .62" Lg.
	710-0473	1	/P	Truss Mach. Scr. #10-24 x .5" Lg.
53	723-0308	1		Foot Pad-R.H.
54	723-0309	1	S	Foot Pad-L.H.
57	712-0380			18 Thd.

137-336-190 LT-11 (1987)
Body Assembly

Page 3 of 20

Ref #	Part Number	Qty	S/P/F	Description
	722-0157	1		Foam Strip (Optional)
59	723-0302	1		Hood Stop
62	732-0414	1		Hood Spring
64	712-0272	1	/P	Hex Sems Nut #10-24 Thd.
65	736-0413	1	/P	Spr. Wash. .39" I.D. x .62" O.D.
66	738-0724	1	S	Shld. Bolt
67	749-0722	1	S	Grille Support
68	731-0511	1	/P	Trim Strip 79" Lg.
72	746-0617	1		Choke Control
73	831-0823	1	S	Throttle Control Box
74	710-0779	1	S	Truss AB-Tap Scr. #10 x .5"
75	746-0501	1	/P	Throttle Wire
76	757-0343	1		Seat Asse-nbly
77	731-0511	1	/P	Trim Strip 5" Lg.
78	735-0126	1	S	Rubber Washer
79	736-0159	1	S	Flat Wash. .344" I.D. x .88" O.D.




137-336-190 LT-11 (1987)
Deck Assembly

Page 5 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	16607	1	S	Belt Guard Deck-L.H.
2	16608	1	S	Belt Guard Deck-R.H.
3	16666	1		Rear Deck Brkt.-R.H.
4	17101	1		32" Deck Ass'y.
	17134	1		32" Deck Ass'y. Comp. (Service Only)
5	710-0152	1	S	Hex Bolt 3/8-24 x 1.0" Lg.
6	710-0195	1	S	Hex Bolt 1/4-28 x .62" Lg.
7	710-0888	1	/P	Hex Bolt 5/16-24 x 1.0" Lg. (Special)
8	712-0123	1	/P	Hex Nut 5/16-24 Thd.
9	712-0138	1	S	Hex Nut 1/4-28 Thd.
10	712-0181	1	S	Hex L-Nut 3/8-16 Thd.
12	734-0973	1	/P	Deck Wheel
13	736-0105	1	/P	Bell-Wash. .380" I.D. x .88
14	736-0119	1	S	L-Wash. 5116" I.D.
15	736-0217	1	S	L-Wash. 318" I.D. H.D.
16	736-0270	1	/P	Bell-Wash. .265" I.D. x .75
17	738-0373	1	S	Shld. Bolt .498" Dia. x 1.53 Lg.
18	742-0477	1		L.H High-Lift Blade
19	742-0480	1		R.H. High-Lift Blade
20	748-0300	1		Blade Adapter
21	754-0342	1	S	V-Belt
22	08253	1	S	Bearing Housing
23	09164	1	S	Reinforcement Plate
24	09322	1		Brake Disc
25	13703	1		Bearing Shield
27	712-0123	1	/P	Hex Nut 5/16-24 Thd.
28	712-0318	1	/P	Hex Jam Nut 5/8-18 Thd.
29	736-0119	1	S	L-Wash. 5/16" I.D.
30	736-0158	1	S	L-Wash. 5/8" I.D.
31	738-0707	1	S	Blade Spindle
32	741-0919	1	S	Ball Bearing
33	750-0456	1	S	Spacer
34	756-0486	1		5" Dia. Pulley
35	710-0258	1	S	Hex Scr. 1/4-20 x .62" Lg.
36	712-0287	1	S	Hex Nut 1/4-20 Thd.
37	736-0329	1	S	L-Wash. 1/4" I.D.
43	17136	1	S	Chute Ass'y.
44	17137	1		Chute Bracket
45	710-0255	1	S	Truss-Mach. Scr. 1/4-20 x .75" Lg.
46	711-0808	1		Hinge Pin
47	712-0298	1	S	Hex Jam Nut 1/4-20 Thd.
48	732-0542	1	S	Torsion Spring 1.14" Lg.

137-336-190 LT-11 (1987)
Dive Assembly

Page 6 of 20

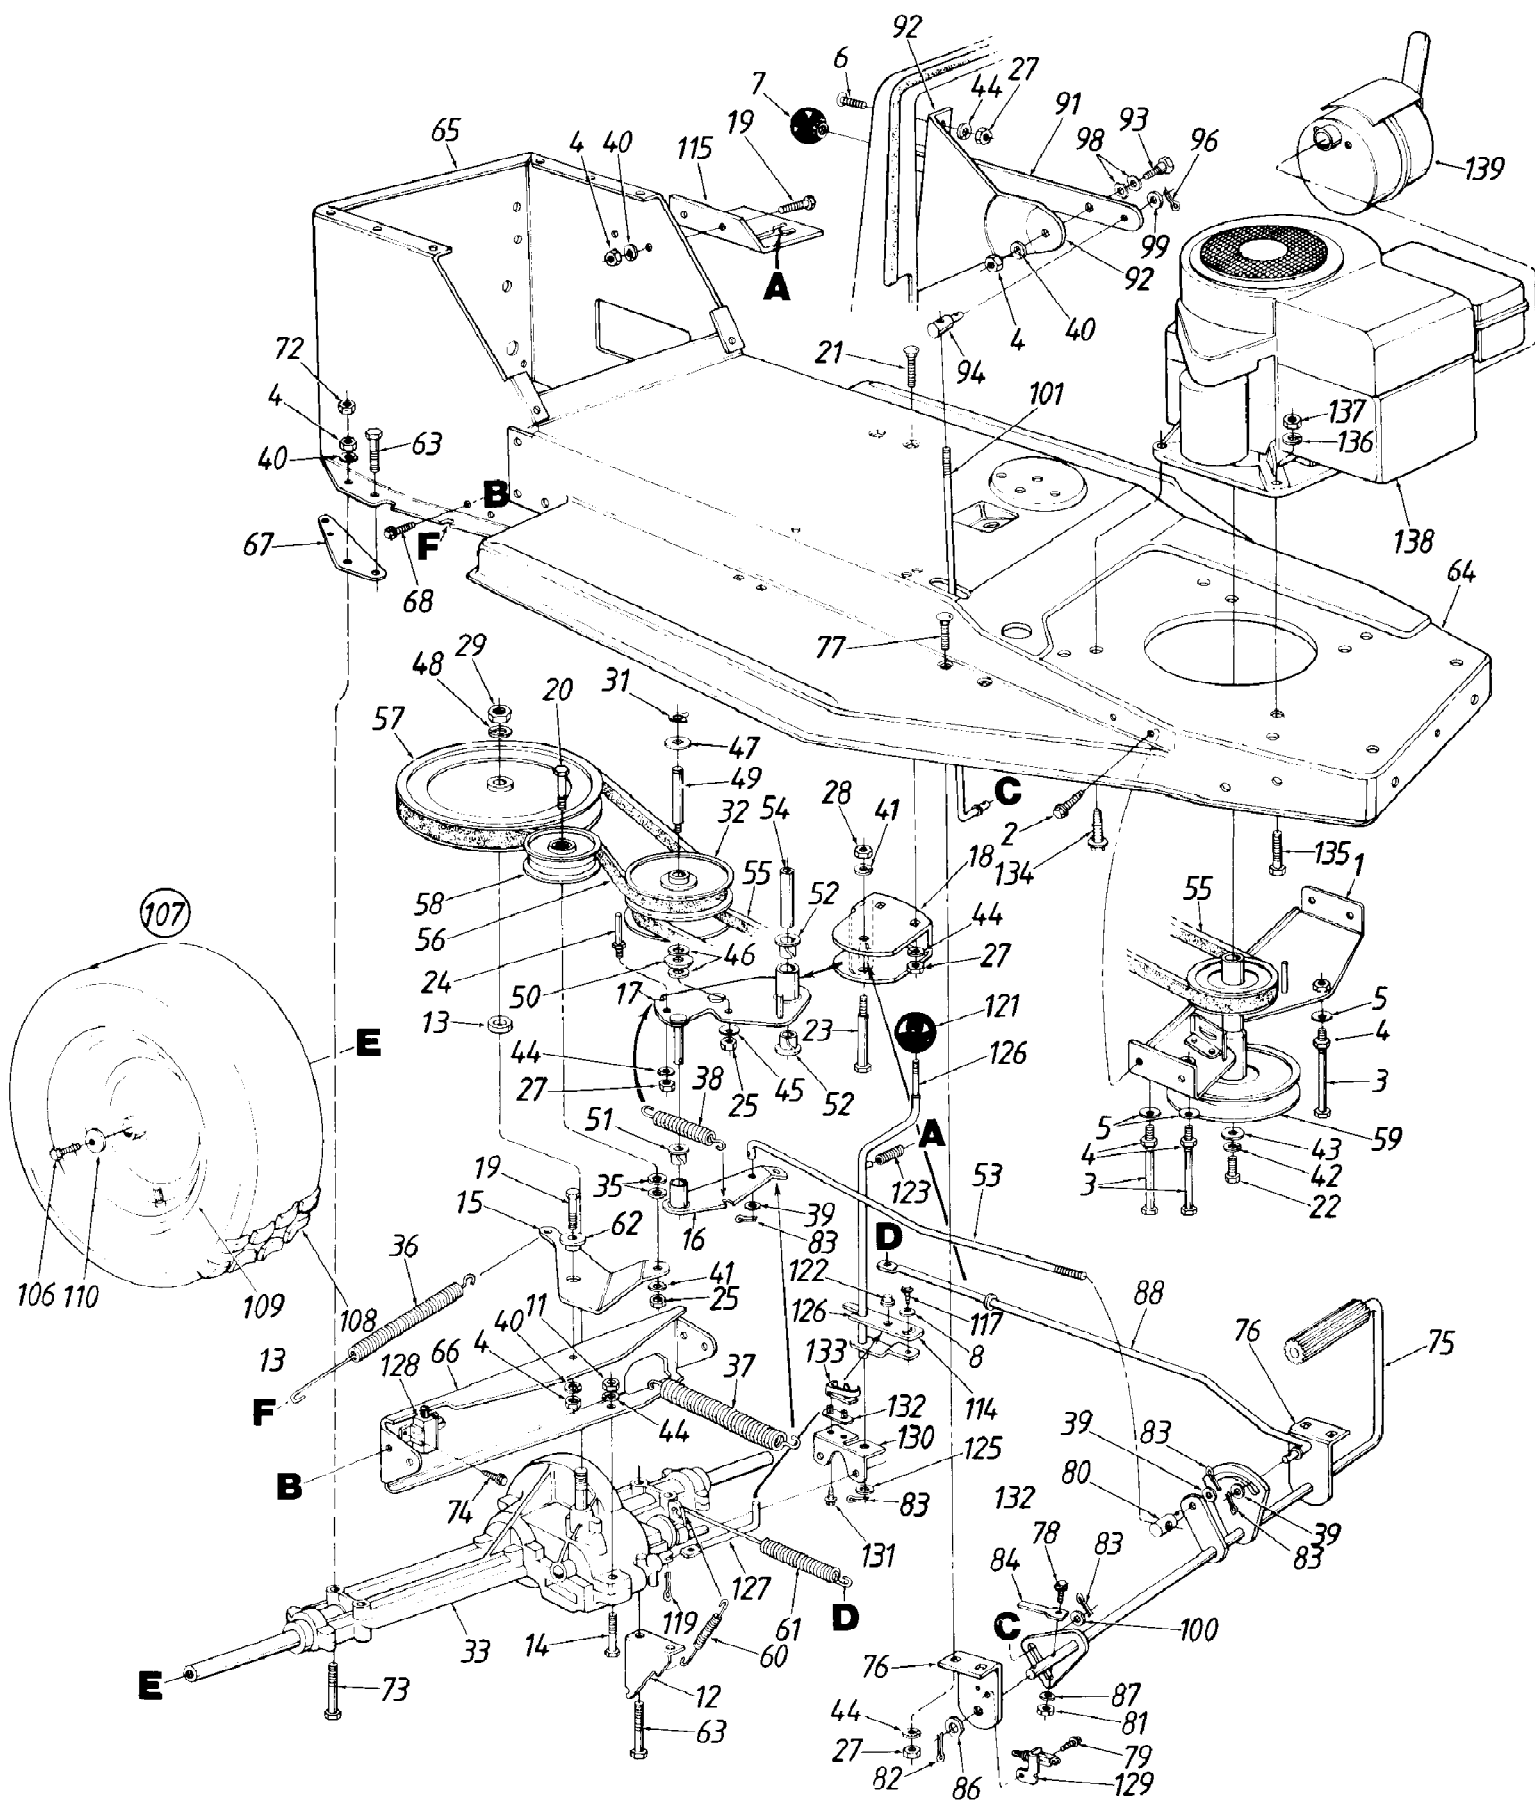

137-336-190 LT-11 (1987)
Dive Assembly

Page 7 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	16670	1	S	Engine Pulley Belt Guard Ass'y.
2	710-0776	1	S	Hex AB-Tap Scr. 1/4 X .62"
3	710-0833	1	/P	Hex Bolt 5/16-18 X 5 1/4" Lg.
4	712-0267	1	S	Hex Nut 5/16-18 Thd.
5	736-0242	1	/P	Bell-Wash. .345" I.D. x .88
6	710-0286	1	/P	Truss-Mach. Scr. 1/4-20 x .50" Lg.
7	720-0165	1	S	Gear Shift Knob
8	736-0270	1	/P	Bell-Wash. .265" I.D. x .75
	723-0308	1		Foot Pad-R.H.
	723-0309	1	S	Foot Pad-L.H.
11	712-0138	1	S	Hex Nut 1/4-28 Thd.
12	17128	1	S	Spring Retainer Brkt.
13	750-0721	1		Spacer .5" I.D. x .93"
14	710-0559	1		Hex Bolt 1/4-28 x 1.75" Lg.
15	15891	1	S	Idler Bracket
16	16352	1		Variable Speed Torque Brkt. Ass'y.
17	16676	1	S	Variable Speed Brkt. Ass'y.
18	16679	1		Variable Speed Pivot Brkt.
19	710-0118	1	S	Hex Bolt 5/16-18 X .75" Lg.
20	710-0539	1	/P	Hex Bolt 3/8-24 X 1 3/4" Lg. Gr. 5
21	710-0703	1	/P	Carr. Bolt 1/4-20 x .75" Lg.
22	710-0757	1	/P	Hex Bolt 7/16-20 x 1.5" Lg.
23	710-0937	1	S	Hex Bolt 3/8-16 X 2.5" Lg.
24	711-0768	1	S	Belt Guard Pin
25	712-0241	1	/P	Hex Nut 3/8-24 Thd.
27	712-0287	1	S	Hex Nut 1/4-20 Thd.
28	712-0798	1	/P	Hex Nut 3/8-16 Thd.
29	712-0922	1	/P	Hex Jam Nut 1/2-20 Thd.
31	716-0114	1	S	Snap Ring
32	717-0800	1	S	Variable Speed Pulley Ass'y.
33	717-0775	1	S	Transaxle Complete
35	736-0258	1	/P	Fl-Wash. 3/8" I.D. x 1"
36	732-0384	1	S	Extension Spring 6.12" Lg.
37	732-0459	1	S	Extension Spring 7.5" Lg.
38	732-0568	1	S	Extension Spring 2.59" Lg.
39	736-0117	1	S	Fl-Wash. .385" I.D. x .620"
40	736-0119	1	S	L-Wash. 5/16" I.D.
41	736-0169	1	S	L-Wash. 3/8" I.D.
42	736-0171	1	S	L-Wash. 7/16" I.D.
43	736-0322	1	/P	Fl-Wash. .450" I.D. x 1.25"
44	736-0329	1	S	L-Wash. 1/4" I.D.
45	736-0331	1	/P	Bell-Wash. .39" I.D. x 1.13"
46	736-0355	1	/P	Fl-Wash. .56" I.D. x 1.0" O.D.
47	736-0414	1	S	Washer "Teflon" .565 I.D.
48	736-0921	1	S	L-Wash. 7/2" I.D.
49	738-0569	1	S	Shaft .56" Dia. x 3.875" Lg.
50	741-0405	1	S	Thrust Brg. 1.25 O.D.
51	741-0419	1		Flanged Nyliner Brg.
52	741-0495	1	/P	Nyliner Flanged Brg.
53	747-0688	1		Speed Control Link
54	750-0703	1		Spacer
55	754-0280	1	S	V-Belt
56	754-0281	1		

137-336-190 LT-11 (1987)
Dive Assembly

Page 8 of 20

Ref #	Part Number	Qty	S/P/F	Description
57	756-0374	1	/P	1/2 V-Pulley .500" I.D. x 8.00"
58	756-0437	1	S	Idler Pulley 3-1/8" Dia.
59	756-0508	1		Dbl. Pulley 6.0" Dia. x 3.56"
60	732-0303	1	S	Extension Spring 3.18" Lg.
61	732-0413	1	S	Extension Spring 7.08" Lg.
62	748-0234	1	/P	Shld. Spacer .500" Dia.
63	710-0176	1	/P	Hex Bolt 5/16-18 x 2.75" Lg.
64	16652	1		Front Frame
65	16653	1		Rear Frame
66	16654	1	S	Transaxle Support Brkt.
67	16659	1	S	Transaxle Brkt. Reinforcement
68	710-0726	1	/P	Hex Wash. AB-Tap Scr. 5/16 0 x.75" Lg.
72	712-0158	1	S	Hex L-Nut 5/16-18 Thd.
73	710-0189	1	/P	Hex Bolt 5/16-18 x 3.0" Lg.
74	710-0351	1	/P	Truss Mach. B-Tap Scr. #10 0 x.50" Lg.
75	16689	1		Clutch/Brake Pedal Ass'y.
76	16691	1		Clutch/Brake Pedal Mounting Brkt.
77	710-0134	1	/P	Carr. Bolt 1/4-20 x .62" Lg.
78	710-0597	1	/P	Hex Bolt 1/4-20 x 1.0" Lg.
79	710-0599	1	/P	Hex TT-Tap Scr. 1/4-20 x .5"
80	711-0198	1	S	Ferrule
81		1		UNKNOWN
82	714-0111	1	S	Cot-Pin 3/32" Dia. x 1.0" Lg.
83	714-0507	1	S	Cot-Pin 3/32" Dia. x .75" Lg.
84	732-0435	1		Switch Actuator
86	736-0256	1	S	FI-Wash. .635" I.D. x 1.0"
87		1		UNKNOWN
88	747-0686	1		Brake Rod
91	16663	1	S	Speed Selector Lever
92	16694	1		7 Speed Selector Brkt.
93	738-0141	1	S	Shld. Bolt .437" x .35
94	711-0677	1	S	Ferrule
96	714-0104	1	S	Intern. Cot-Pin 5/16" Dia.
98	736-0141	1	S	Wave Wash. .445" I.D.
99	736-0264	1	S	FI-Wash. .344" I.D. x .62"
100	736-0463	1	S	FI-Wash. .25" I.D. x .62" O.D.
101	747-0675	1	S	Speed Control Rod
106	710-0627	1	/P	Hex L-Bolt 5/16-24 x .75" Lg.
107	734-1424	1		Rear Wheel Ass'y. Comp.
108	734-1423	1		Turf Tread 16.0 x 7.50 Rear
109	734-1450	1		Rear Wheel Rim Ass'y.
110	736-0242	1	/P	Bell-Wash. .345" I.D. x .88"
114	17178	1	S	Shift Lever Adjusting Link
115	16482	1		Shift Lever Spring Brkt.
117	710-0289	1	S	Hex Bolt 1/4-20 x .50 Lg.
119	714-0149	1	S	Intern. Cotter Pin
121	720-0175	1	S	Ball Knob
122	726-0231	1	S	Retaining Ring
123	732-0499	1		Compression Spring 1.5" Lg.
125	736-0226	1	S	FI-Wash. .469" I.D. x .88"
126	747-0680	1		Shift Rod Ass'y.
127	747-0685	1	S	Shift Rod
128	725-0465			


137-336-190 LT-11 (1987)
Dive Assembly

Page 9 of 20

Ref #	Part Number	Qty	S/P/F	Description
129	725-0577	1		Safety Switch
130	17179	1		Shift Lever Support
131	710-0227	1	/P	Hex Wash. Hd. AB-Tap Scr. #8 x .5" Lg.
132	726-0222	1	S	Insulator Nut Plate
133	725-0758	1	S	Spring Switch
134	710-0502	1	S	Hex Wash. Hd. Tap Scr. 3/8-16 x 1.25" Lg.
135	710-0672	1	/P	Hex Bolt 5/16-24 x 1-1 /4" Lg. Grade 5
136	736-0119	1	S	L-Wash. 5/16" I.D.
137	712-0123	1	/P	Hex Nut 5/16-24 Thd.
138		1		Engine
139	751-0450	1		Muffler

137-336-190 LT-11 (1987)
Electrical System

Page 10 of 20

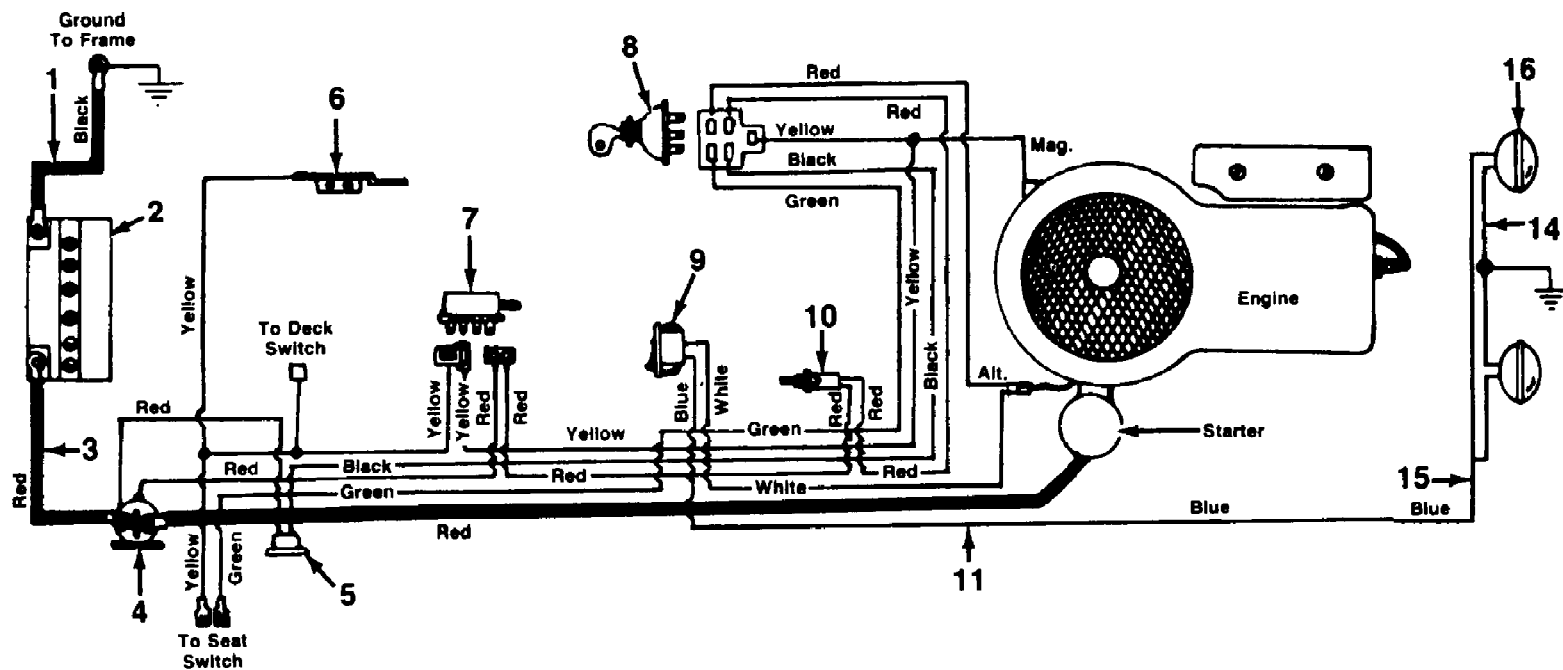


137-336-190 LT-11 (1987)
Electrical System

Page 11 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	725-0976	1	S	Ground Wire
2	725-0514	1	S	Battery
3	725-0926	1	/P	Electric Wire
4	725-0771	1	S	Solenoid
5	725-0459	1	S	Circuit Breaker
6	732-0420	1		Spring Switch
7	725-0465	1	S	Safety Switch
8	725-0267	1	S	Key Switch
9	725-0634	1	S	Light Switch
10	725-0577	1		Safety Switch (Black)
11	725-1239	1		Harness
14	725-0916	1	S	Ground Wire
15	725-1243	1		Headlight Harness
16	725-0222	1	S	Lamp

137-336-190 LT-11 (1987)
Lift Assembly

Page 12 of 20

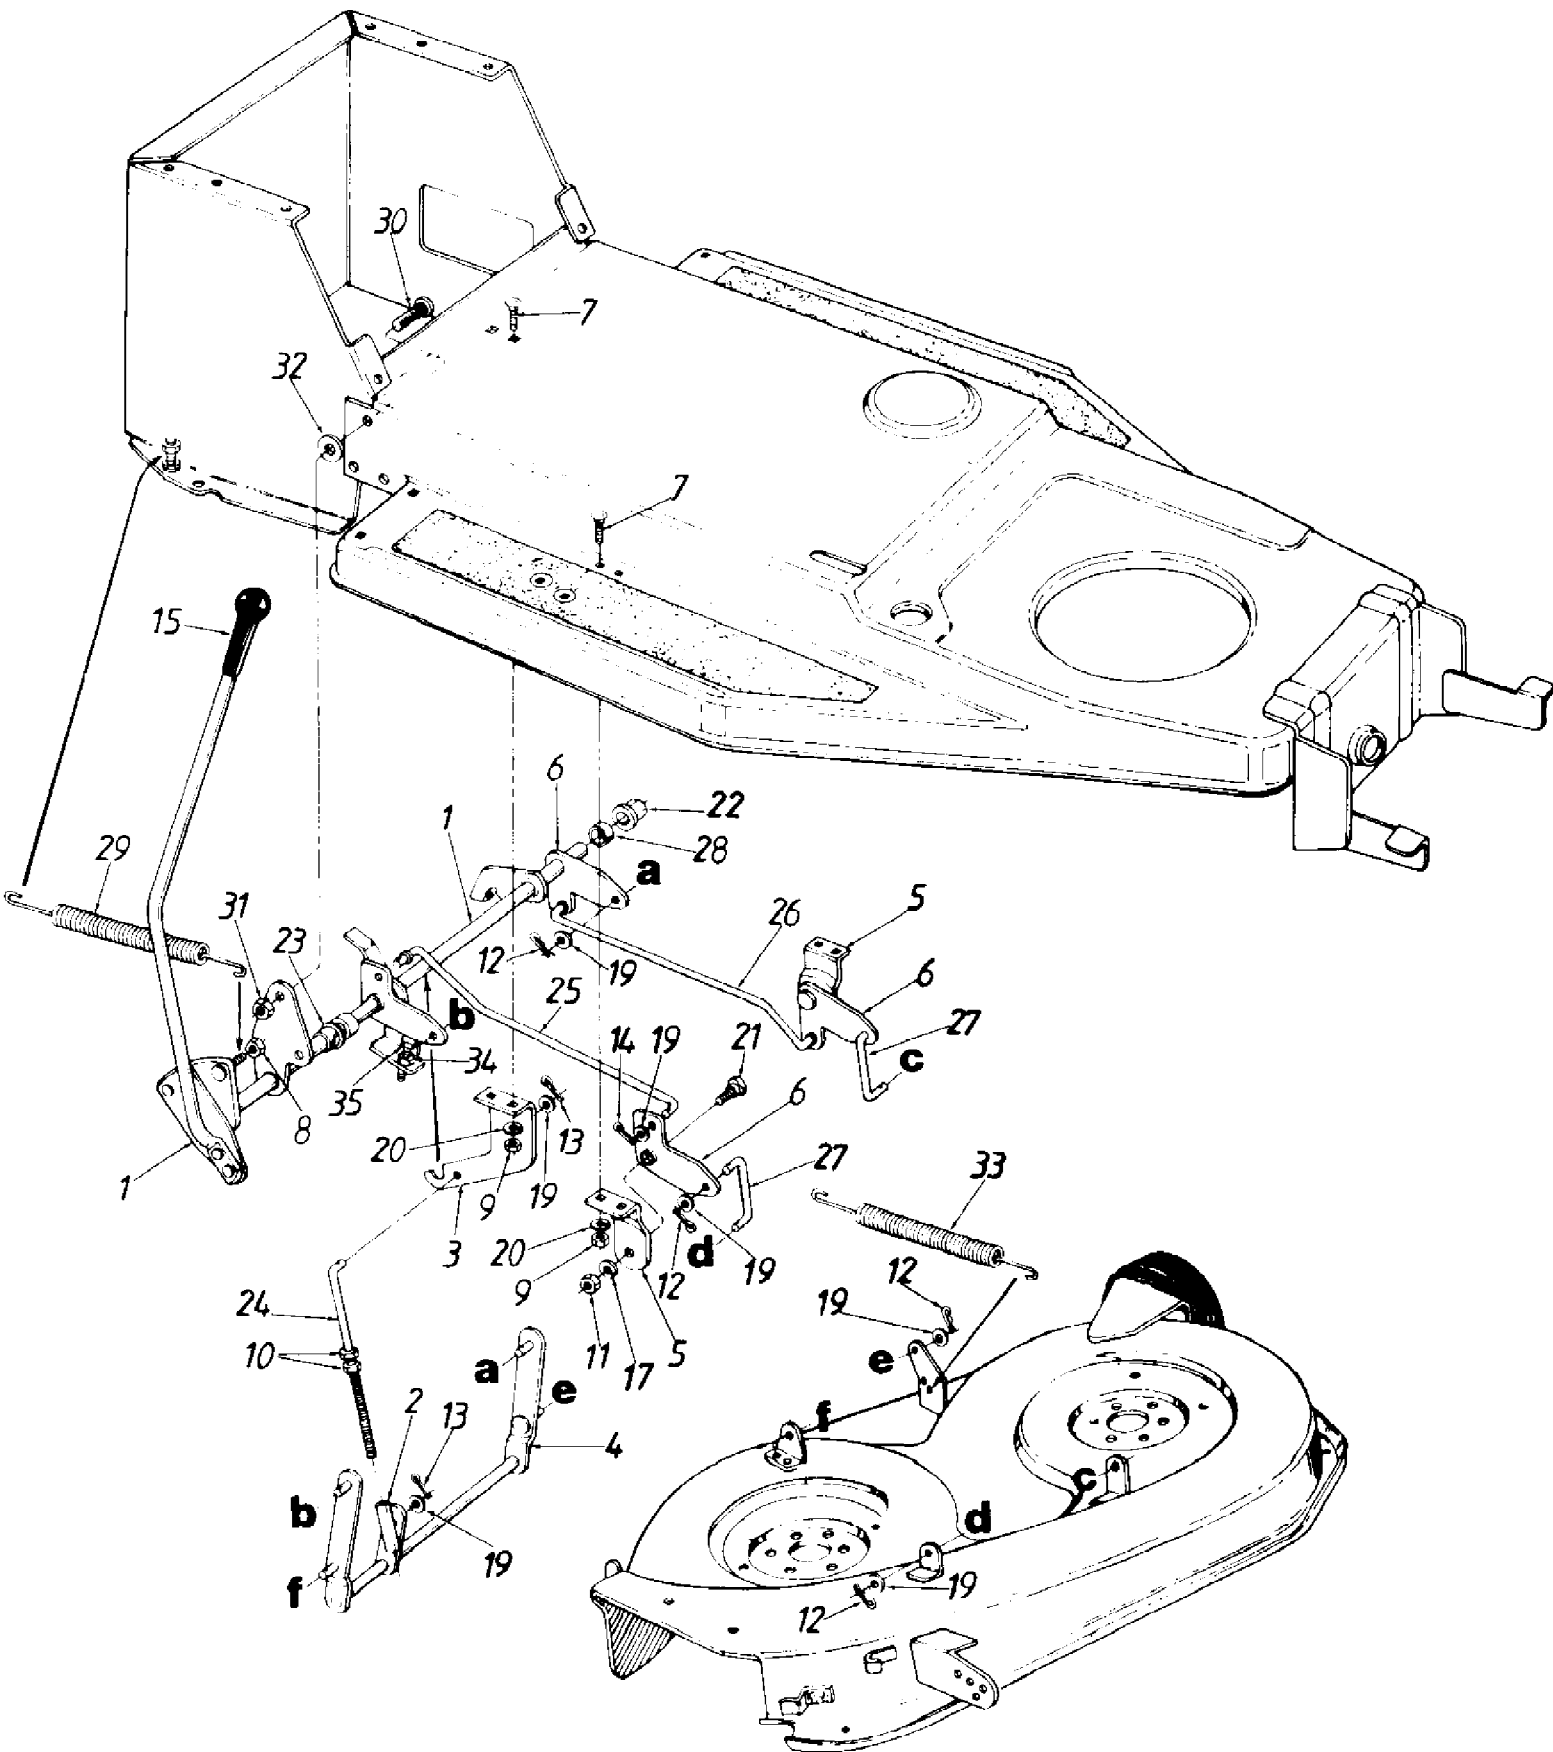


137-336-190 LT-11 (1987)
Lift Assembly

Page 13 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	16661	1	S	Lift Shaft Ass'y.
2	16682	1		Pivot Sleeve Ass'y.
3	16683	1		Deck Lock Out 8rkt.
4	16688	1	S	Stabilizer Ass'y.
5	16692	1		Deck Lift Hanger
6	16698	1		Deck Lift Float Brkt.
7	710-0134	1	/P	Carr. Bolt 1/4-20 X .62" Lg.
8	712-0158	1	S	Hex L-Nut 5/16-18 Thd.
9	712-0287	1	S	Hex Nut 1/4-20 Thd.
10	712-0711	1	/P	Hex L-Nut 3/8-24 Thd.
11	712-0798	1	/P	Hex Nut 3/8-16 Thd.
12	714-0104	1	S	Intern. Cot-Pin 5/16" Dia.
13	714-0115	1	S	Cot-Pin 1/8" Dia.
14	714-0507	1	S	Cot-Pin 3/32" Dia.
15	720-0143	1		Grip
17	736-0169	1	S	L-Wash. 3/8" I.D.
19	736-0185	1	S	Fl-Wash. .406" I.D. x .75" O.D.
20	736-0329	1	S	L-Wash. 1/4" I.D.
21	738-0281	1	S	Shld Bolt .625 Dia. x .425" Lg.
22	741-0225	1	S	Hex Flange Brg.
23	741-0495	1	/P	Nyliner Flanged Brg.
24	747-0677	1		J-Bolt 3/8-16 x 5.25" Lg.
25	747-0678	1		Connecting Rod-R.H.
26	747-0679	1		Connecting Rod-L.H.
27	747-0689	1		Lift Link
28	750-0547	1		Spacer
29	732-0153	1	/P	Spring 8.65" Lg.
30	710-0793	1		Ribbed Neck Bolt 3/8-24 x .80" Lg. (Special)
31	712-0241	1	/P	Hex Nut 3/8-24 Thd.*
32	736-0354	1		Fl-Wash. 3/8" I.D.
33	732-0564	1	S	Deck Spring 10.33" Lg.
34	712-0267	1	S	Hex Nut 5/16-18 Thd.*
35	710-0602	1	/P	Hex Wash. Hd. Tap Scr. 5/16-18 x 1.0" Lg.

137-336-190 LT-11 (1987)
Shift Lever Assemblies

Page 14 of 20

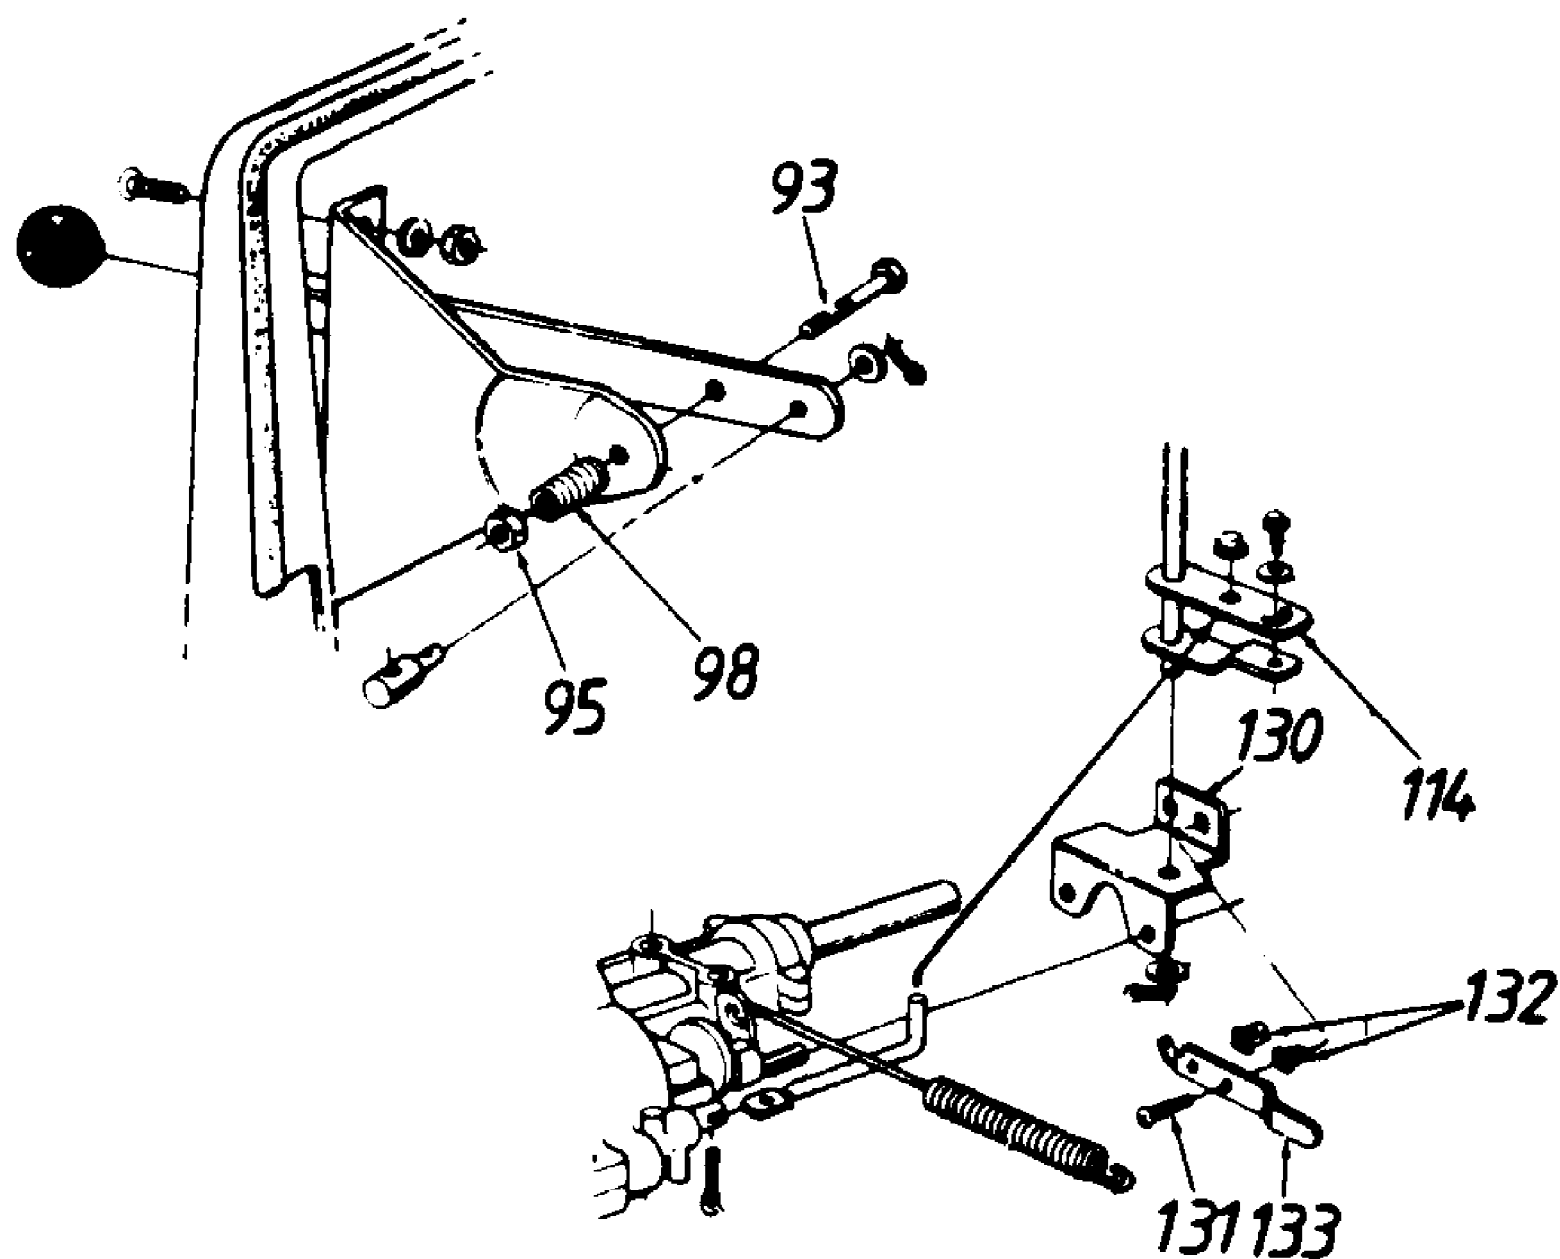


137-336-190 LT-11 (1987)
Shift Lever Assemblies

Page 15 of 20

Ref #	Part Number	Qty	S/P/F	Description
93	710-0698	1	/P	Hex Bolt 1/4-28 x 1.5" Lg.
95	712-0677	1		Hex L-Nut 1/4-28 Thd.
98	732-0499	1		Comp. Spring 1" Lg.
114	16476	1		Shift Lever Adjusting Link
	747-0680	1		Shift Rod Ass'y.
130	16695	1		Shift Lever Support
131	710-0789	1		Countersunk AB-Tap Scr. #8 x .5" Lg.
132	726-0206	1		Push Nut
133	732-0420	1		Spring Switch

137-336-190 LT-11 (1987)
Single Speed Transaxle Left Hand

Page 16 of 20

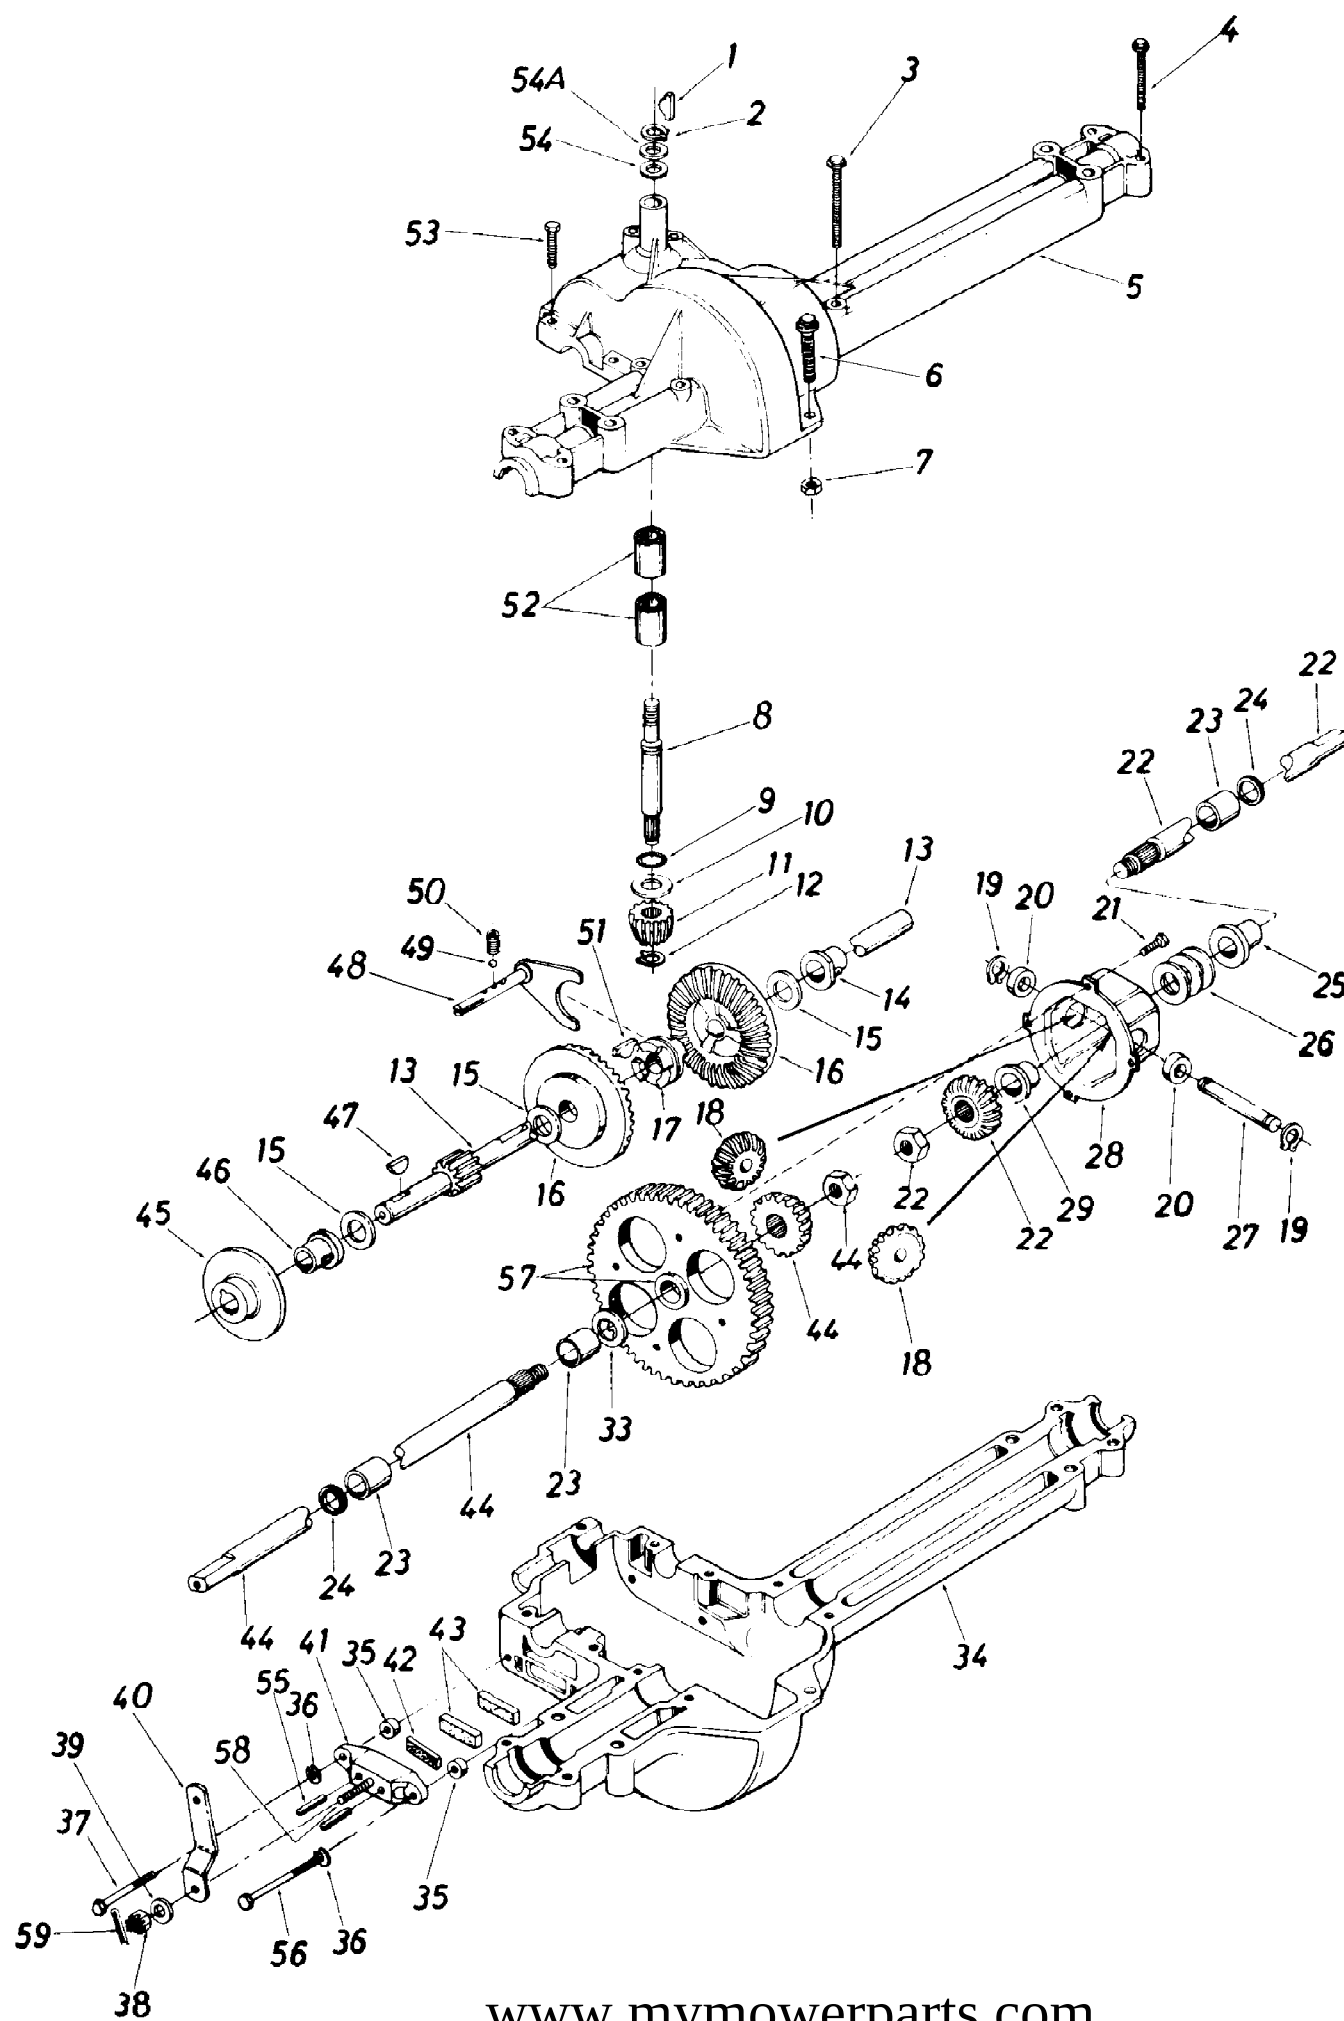

137-336-190 LT-11 (1987)
Single Speed Transaxle Left Hand

Page 17 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	714-0129	1	S	#4 Hi-Pro Key 3/32 x 5/8" Dia
2	716-0115	1	S	Snap Ring .625" Shaft
3	710-0854	1	S	Hex Bolt 1/4-20 x 1.75" Lg.
4	710-0378	1	/P	Hex Bolt 5/16-18 x 2.5"
5	717-0764	1	S	Upper Housing
6	710-0889	1		Hex Fl-Bolt 1/4-20 x .88" Lg.
7	712-0287	1	S	Hex Nut 1/4-20 Thd.
8	717-0634	1	S	Input Shaft
9	721-0178	1	S	Square Seal 5/8" I.D.
10	736-0335	1	S	Thrust Washer 5/8" I.D. x 1.25" O.D.
11	717-0633	1	S	Pinion Input 14T
12	716-0108	1	S	Retaining Ring 7/16" Ext.
13	717-0768	1		Drive Shaft
14	741-0336	1	S	Flange Brg. 518" I.D. x 3/4" Lg.
15		1		Fl-Wash.
	736-0349	1	S	Fl-Wash. 5/8" I.D. x 1.0" O.D. x .020" Thk.
	736-0336	1	S	Fl-Wash. 5/8" I.D. x 1.0" O.D. x .030" Thk.
	736-0337	1	S	Fl-Wash. 5/8" I.D. x 1.0" O.D. x .040" Thk.
16	717-0757	1		Bevel Gear 42T
17	717-0667	1	S	Clutch Collar
18	717-1020	1	/P	Miter Gear 15T (H.D.)
19	716-0142	1	S	Snap Ring
20	717-0690	1	S	Thrust Bearing 1/2" I.D. x 1.0" O.D.
21	710-0862	1	S	Pan Head Scr. 1/4-20 x .50" Lg. w/Patch
22	717-0766	1	S	Axle R.H. Ass'y.-Kit
23	741-0340	1	S	Sleeve Bearing 3/4" I.D. x 1.0" Lg.
24	721-0179	1	S	Oil Seal 3/4" I.D.
25	741-0339	1	S	Flange Bearing 3/4" I.D. x 15/16" Lg.
26	736-0188	1	/P	Fl-Wash. .760" I.D. x 1.49" O.D.
27	717-0673	1	S	Cross Shaft
28	717-0777	1	S	Differential Housing Ass'y.
29		1		Part of Ref. 28
33	736-0188	1	/P	Fl-Wash. .760" I.D. x 1.49" O.D.
34	717-0761	1	S	Lower Housing
35	750-0555	1		Spacer .53" O.D. x 3/8" Lg.
36	736-0329	1	S	L-Wash. 1/4" I.D.
37	710-0886	1	S	Hex Bolt 1/4-20 x 1.50" Lg. (Grade 5)
38	712-0335	1	S	Castle Nut 5/16-24 Thd.
39	736-0159	1	S	Fl-Wash. .344" I.D. x .875" O.D.
40	717-0772	1	S	Actuating Arm
41	717-0679	1		Brake Yoke
42	717-0682	1	S	Puck Plate
43	717-0678	1	S	Brake Puck
44	717-0765	1	S	Axle L.H. Ass'y.-Kit
45	717-0677	1	/P	Brake Disc
46	741-0337	1	S	Flange Bearing 5/8" I.D. x 15/16" Lg.
47	714-0161	1	S	Woodruff Key 3/16 x 5/8 HT
48	717-0754	1	S	Shift Fork Ass'y.
49	741-0862	1	/P	Ball Detent .250" Dia.
50	732-0863	1	S	Spring Detent
51	714-0169	1	S	#9 Hi-Pro Key 3/16" x 3/4" Dia. HT
52	741-0335	1	S	Needle Brg. 5/8" I.D. x 1/2" Lg.
53	710-0855			Ball Detent .250" Dia. x 1.00" Lg.


137-336-190 LT-11 (1987)
Single Speed Transaxle Left Hand

Page 18 of 20

Ref #	Part Number	Qty	S/P/F	Description
54	736-0336	1	S	FI-Wash. 5/8" I.D. x .030
54A	736-0337	1	S	FI-Wash. 5/8" I.D. x .040
55	741-0343	1	S	Actuating Pin 5/16" Dia.
56	710-0966	1		Hex Bolt 1/4-20 x 2.50" Lg. (Grade 5)
57	717-0767	1	S	Differential Gear 72T Ass'y. w/Bearing
58	717-0681	1	S	Sq. Hd. Bolt 5/16-24 Thd.
59	1544-013	1	S	Cotter Pin 3/32" Dia. x .50" Lg.
	737-0148	1	S	Grease-Shell (10 oz.)

137-336-190 LT-11 (1987)
Steering Assembly

Page 19 of 20

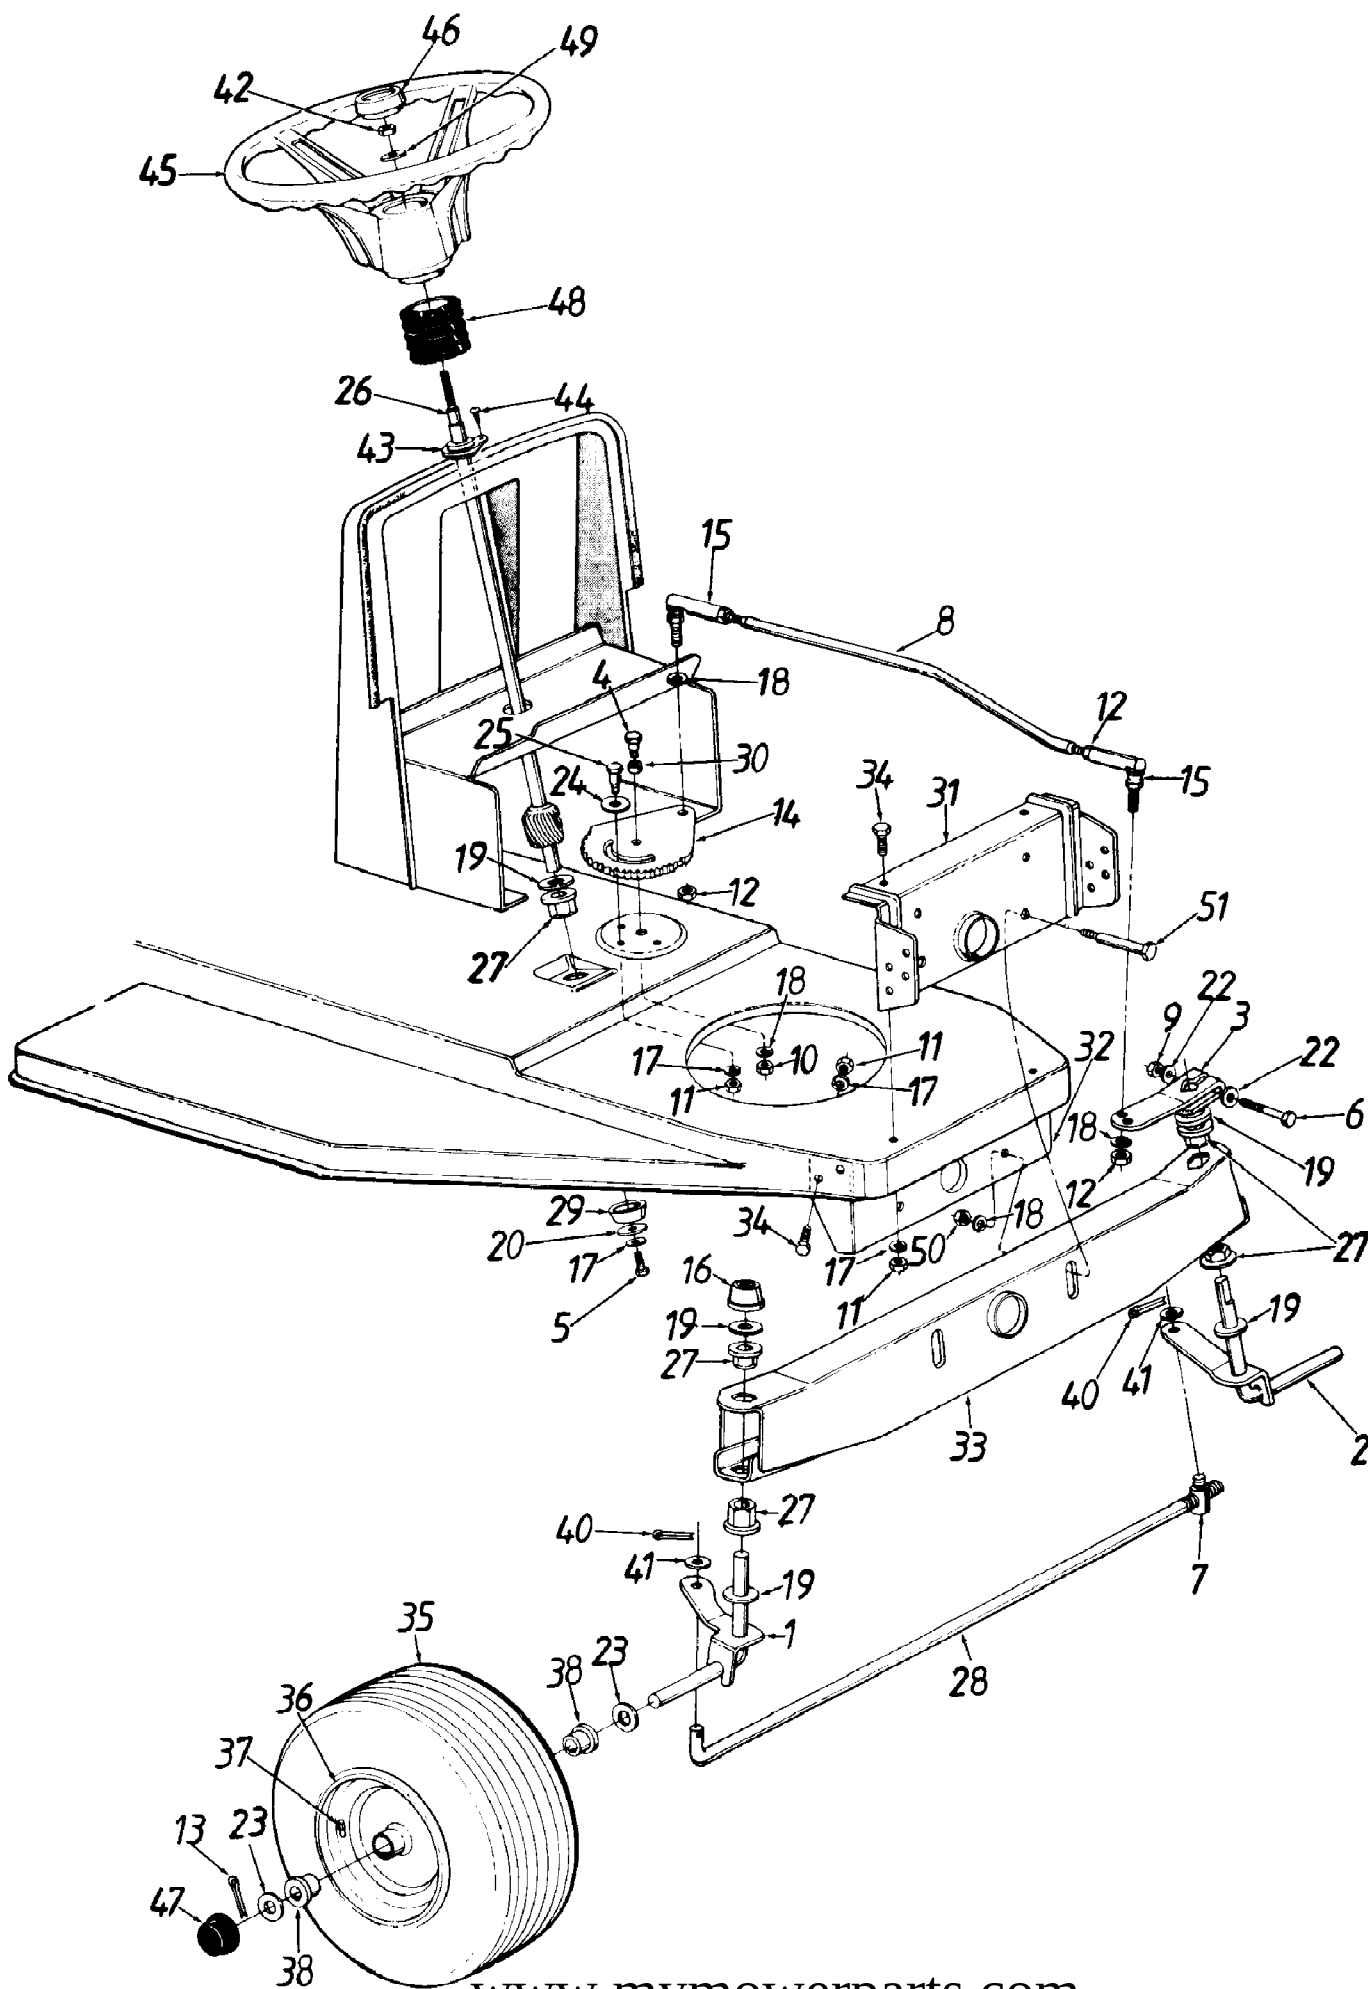

137-336-190 LT-11 (1987)
Steering Assembly

Page 20 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	14650	1	S	Front Axle Ass'y.-R . H .
2	16479	1	S	Front Axle Ass'y.-L.H.
3	16677	1	S	Steering Arm
4	710-0152	1	S	Hex Bolt 3/8-24 x 1" Lg.
5	710-0538	1	/P	Hex Bolt 5/16-18 x .62" (Spec.)
6	710-0772	1	/P	Hex Bolt 5/16-24 x 2" Lg.
7	711-0198	1	S	Ferrule
8	711-0809	1		Steering Drag Link
9	712-0237	1	S	Hex L-Nut 5/16-24 Thd.
10	712-0241	1	/P	Hex Nut 3/8-24 Thd.
11	712-0267	1	S	Hex Nut 5/16-18 Thd.
12	712-0711	1	/P	Hex Jam Nut, 3/8-24
13	714-0470	1	S	Cotter Pin 1/8 Dia.
14	717-0622	1	S	Steering Gear Segment
15	723-3018	1	S	Drag Link Ball Joint 3/8-24 Thd.
16	726-0214	1	/P	Push Cap
17	736-0119	1	S	L-Wash. 5/16" I.D.
18	736-0169	1	S	L-Wash. 3/8" I.D.
19	736-0187	1	/P	Fl-Wash. .64" I.D. x 1.24"
20	736-0231	1	S	Fl-Wash. .344" I.D. x 1.125"
22	736-0271	1	S	Spr. Wash. .32 I.D. x .62
23	736-0285	1	/P	Fl-Wash. .635 I.D. x 1.585
24	736-0319	1	S	Fl-Wash. .44 I.D. x 1.38
25	738-0141	1	S	Shld. Bolt .437 Dia. x .350
26	738-0730	1		Steering Shaft
27	741-0225	1	S	Hex Flange Brg. .634 Dia.
28	747-0558	1		Tie Rod 18.37 Lg.
29	750-0532	1	S	Spacer .985 I.D.
30	750-0535	1	S	Spacer .380 I.D.
31	16657	1		Front Pivot Bar Support Brkt.
32	16658	1		Rear Pivot Bar Support Brkt.
33	17127	1		Pivot Bar Ass'y.
34	710-0118	1	S	Hex Bolt 5/16-18 x .75" Lg.
35	734-1422	1		Front Wheel Ass'y. Comp. 13 x 6
	734-1421	1		Tire Only
36	734-0997	1	S	Rim Ass'y. Only
37	734-0255	1	S	Air Valve
38	741-0487	1	S	Flange Bearing .632 I.D.
40	714-0111	1	S	Cotter Pin 3132" Dia.
41	736-0185	1	S	Fl-Wash. .406" I.D. x .75"
42	712-0123	1	/P	Hex Nut 5/16-24 Thd.
43	741-0501	1	S	Steering Column Brg.
44	710-0837	1		Cr-Sunk Scr. #10 x 518" Lg.
45	731-0805	1	S	Steering Wheel
46	731-0220	1	S	Steering Wheel Cap
47	731-0484	1	S	Hub Cap
48	731-0559	1	S	Bellow Steering Column
49	736-0242	1	/P	Bell-Wash. .345 I.D. x .88
50	712-0798	1	/P	Hex Nut 3/8-16 Thd.
51	738-0728	1		Shld. Bo't 1/2" Dia. x 2.32"