


13AT686H190 LT-18 (1999)
Deck Assembly

Page 1 of 25

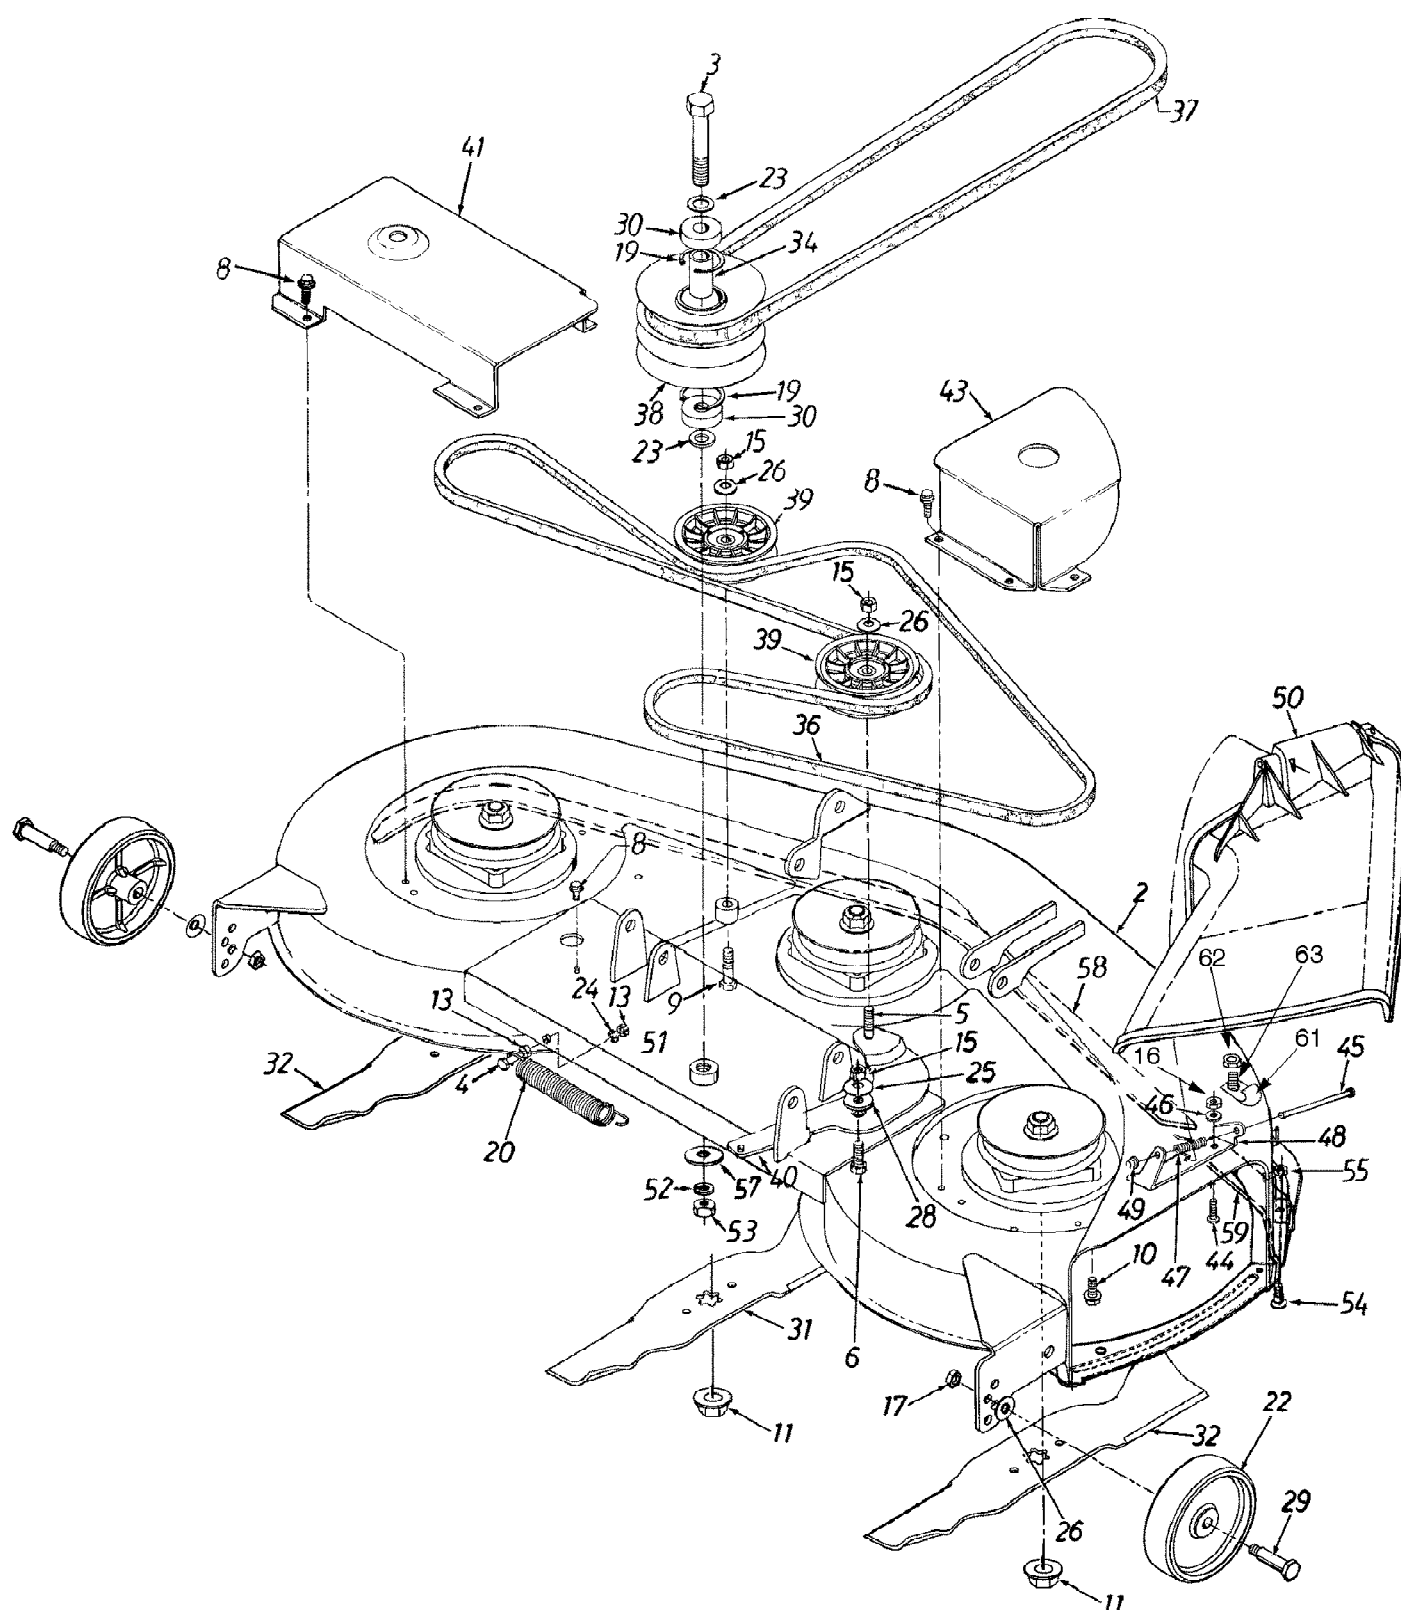

13AT686H190 LT-18 (1999)
Deck Assembly

Page 2 of 25

Ref #	Part Number	Qty	S/P/F	Description
?1	618-0240	1	S	Blade Spindle Ass'y.
2	983-0120A	1		46" Deck Ass'y.
	913-06922	1	/P	46" Deck Ass'y. Comp. (For Service)
3	710-3151	1	/P	Hex Bolt 5/8-18 x 4.25" Lg.
4	710-0428	1		Hex Bolt 1/4-28 x 1.25" Lg.
5	710-0459A	1	/P	Hex Bolt 3/8-24 x 1.5" Lg.
6	710-1039	1	/P	Hex Bolt 3/8-24 x 1" Lg.
8	710-0599	1	/P	Hex Wash. Hd. TT-Tap Scr.1/4-20 x .5"
9	710-0151	1	/P	Hex Bolt 3/8-24 x 2" Lg.
10	710-1260A	1	/P	Hex Flange Bolt 5/16-24 x .75" Lg.
11	712-0417A	1	/P	Hex Flange L-Nut 5/8-18 Thd.
?12	711-0993	1	S	Belt Guard Pin
13	712-0138	1	S	Hex Nut 1/4-28 Thd.
?14	712-0429	1	S	Hex Ins. L-Nut 5/16-18 Thd.
15	712-0241	1	/P	Hex Nut 3/8-24 Thd.
16	712-3006	1	/P	Hex Nut 1/4-20 Thd. (Gr. 5)
17	712-0181	1	S	Hex Top Jam Nut 3/8-16 Thd.
19	716-3020	1	S	Int. Snap Ring
20	732-0594A	1	S	Ext. Spring .88" O.D. x 6.17"
22	734-0973	1	/P	Deck Wheel
23	736-0290	1	/P	FI-Wash. .635" I.D. x 1" O.D. x .06"
24	736-0329	1	S/F	L-Wash. 1/4" I.D.
25	736-0331	1	/P	Bell-Wash. 3/8" x 1.125" x .062"
26	736-0105	1	/P	Bell-Wash. 3/8" x .87" x .064"
28	738-0347	1	S	Shoulder Spacer .625" I.D. x .169"
29	738-0373	1	S	Shld. Bolt .498" x 1.525"
30	741-0524	1	S	Ball Brg. .625" I.D. x 1.574" O.D. x .47"
31	742-0645	1	S	Blade 14.88" Lg.
32	742-0644	1	S	Blade 16.28" Lg.
34	750-0932A	1	S	Spacer .635" I.D. x .088" O.D.
36	754-0440	1	S	V-Belt
37	754-0439	1	S	V-Belt
38	756-0638	1		Pulley Double Deck 5" O.D.
39	756-0627	1	S	Flat Idler Pulley 3.5 O.D.
40	783-0046	1	S	Idler Deck Bracket
41	783-0063A	1	/P	Belt Cover L.H.
43	17258A	1	S	Belt Cover Brkt. R.H.
44	710-0258	1	S	Hex Bolt 1/4-20 x .62" Lg.
45	711-0792	1	S	Hinge Pin
46	736-0270	1	/P	Bell-Wash. 1/4" I.D.
47	732-0602	1	S	Torsion Spring
48	703-1693	1	S	Hinge Mtg. Brkt.
49	726-0106	1	S	Push Nut
50	731-1032	1	S	Chute Ass'y. (Incl. Ref. 45, 47, 48, 49, 50)
51	750-0960	1	S	Spacer .635" I.D. x 1" O.D.
52	736-0158	1	S	L-Wash. 5/8" I.D.
53	712-0337	1		Hex Nut 5/8-18 Thd.
54	710-0167	1	/P	Carriage Bolt 1/4-20 x .5" Lg.
55	712-0271	1	/P	Hex Sems Nut 1/4-20 Thd.
57	736-3088	1		FI-Wash. .635" I.D.
58	783-0141	1		Center Deck Skirt
59	783-0142	1	S	R.H. Deck Skirt
61	16606	1	S	Retainer Hook Bracket


13AT686H190 LT-18 (1999)
Deck Assembly

Page 3 of 25

Ref #	Part Number	Qty	S/P/F	Description
62	712-3027	1	S	Hex Lock Nut 1/4-20
63	710-0751	1	/P	Hex Cap Screw 1/4-20 x .620

13AT686H190 LT-18 (1999) Deck Lift Assembly

Page 4 of 25

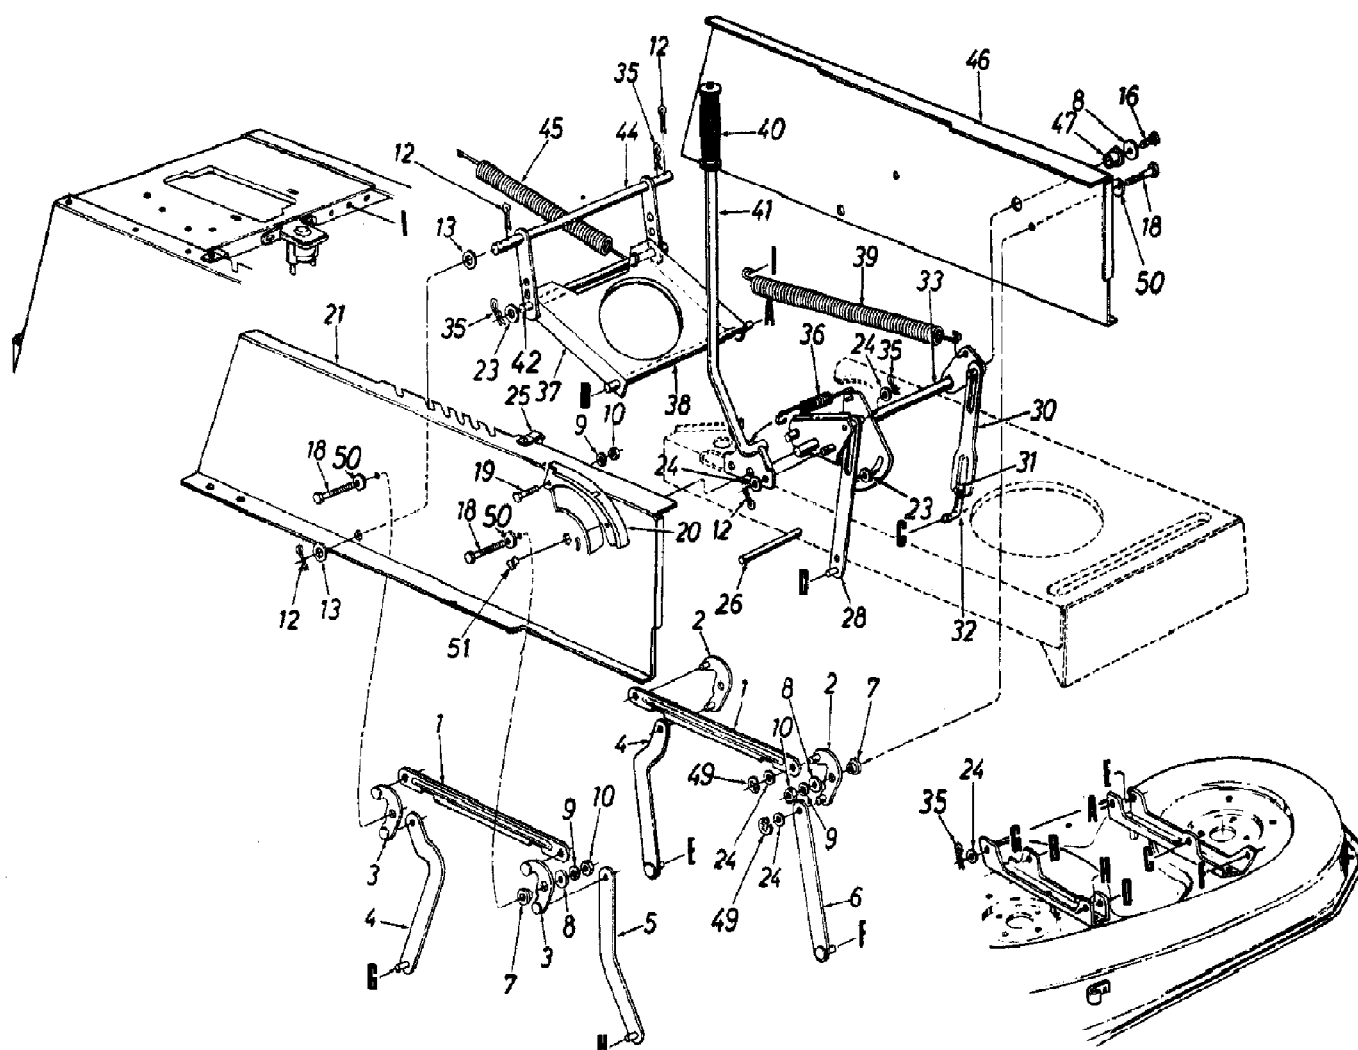


13AT686H190 LT-18 (1999)
Deck Lift Assembly

Page 5 of 25

Ref #	Part Number	Qty	S/P/F	Description
1	783-0103	1	S	Connecting Rod
2	683-0029A	1	S	Pivot Link Ass'y.-L.H.
3	683-0028A	1		Pivot Link Ass'y.-R.H.
4	17710	1	S	Deck Hanger Link Ass'y.
5	14800A	1	S	Deck Hanger Link Ass'y.
6	14804A	1		Deck Hanger Link Ass'y.
7	748-0331	1	S	Shld. Spacer .318" I.D.
8	736-0231	1	S	Fl-Wash. .344" I.D. x .62" O.D.
9	736-0119	1	S/F	L-Wash. 5/16" I.D.
10	712-3010	1	S/F	Hex Nut 5/16-18 Thd.
12	714-0470	1	S	Cotter Pin 1/8" Dia.
13	736-0256	1	S	Fl-Wash. .635" I.D. x 1.0" O.D.
16	710-0604	1	S	Hex Wash. TT-Tap Scr. 5/16-18 x .75" Lg.
18	710-1238	1	/P	Hex Wash. Hd. Scr. 5/16-18 x .875" Lg.
19	710-0118	1	S	Hex Bolt 5/16-18 x .75" Lg.
20	783-0185	1		Index Brkt.
21	783-0042B	1	S	Upper Frame-R.H.
23	736-0267	1	S	Fl-Wash. .385" I.D. x .87" O.D.
24	736-0160	1	S	Fl-Wash. .531" I.D. x .93" O.D.
25	726-0272	1	/P	Clamp
26	738-0526	1		Running Board Rod
28	14802A	1	S	Link Deck Lift Ass'y.
30	17712	1	S	Adj. Deck Lift Link
31	712-3066	1	S	Hex Nut 1/2-20 Thd. (Gr. 5)
32	711-0841	1	S	Lift Link Adjuster
33	683-0059	1	S	Lift Shaft Ass'y.
35	714-0145	1	S	Inter. Cotter Pin 3/8" Dia.
36	732-0637	1	S	Extension Spring
37	17636C	1	S	Stabilizer Bracket
38	738-0670	1	S	Shaft 1/2" Dia. x 10.28" Lg.
39	732-0638	1		Extension Spring
40	720-0233	1	S	Grip (Lift Handle)
41	17675A	1	S	Deck Lift Handle Ass'y.
42	738-0669	1		Shaft 3/8" Dia. x 9.34" Lg.
44	17624	1	S	Stabilizer Shaft Ass'y.
45	732-0556	1	S	Extension Spring 7.58" Lg.
46	783-0043	1	/P	Upper Frame-L.H.
47	741-0487A	1	S	Flange Brg. .632" I.D.
49	716-0104	1	S	"E"-Ring
50	736-0425	1	S	Bell-Wash. .325" I.D.
51	748-0176	1		Flange Bearing .631 ID x .62 Lg.

13AT686H190 LT-18 (1999)
Differential Assembly

Page 6 of 25

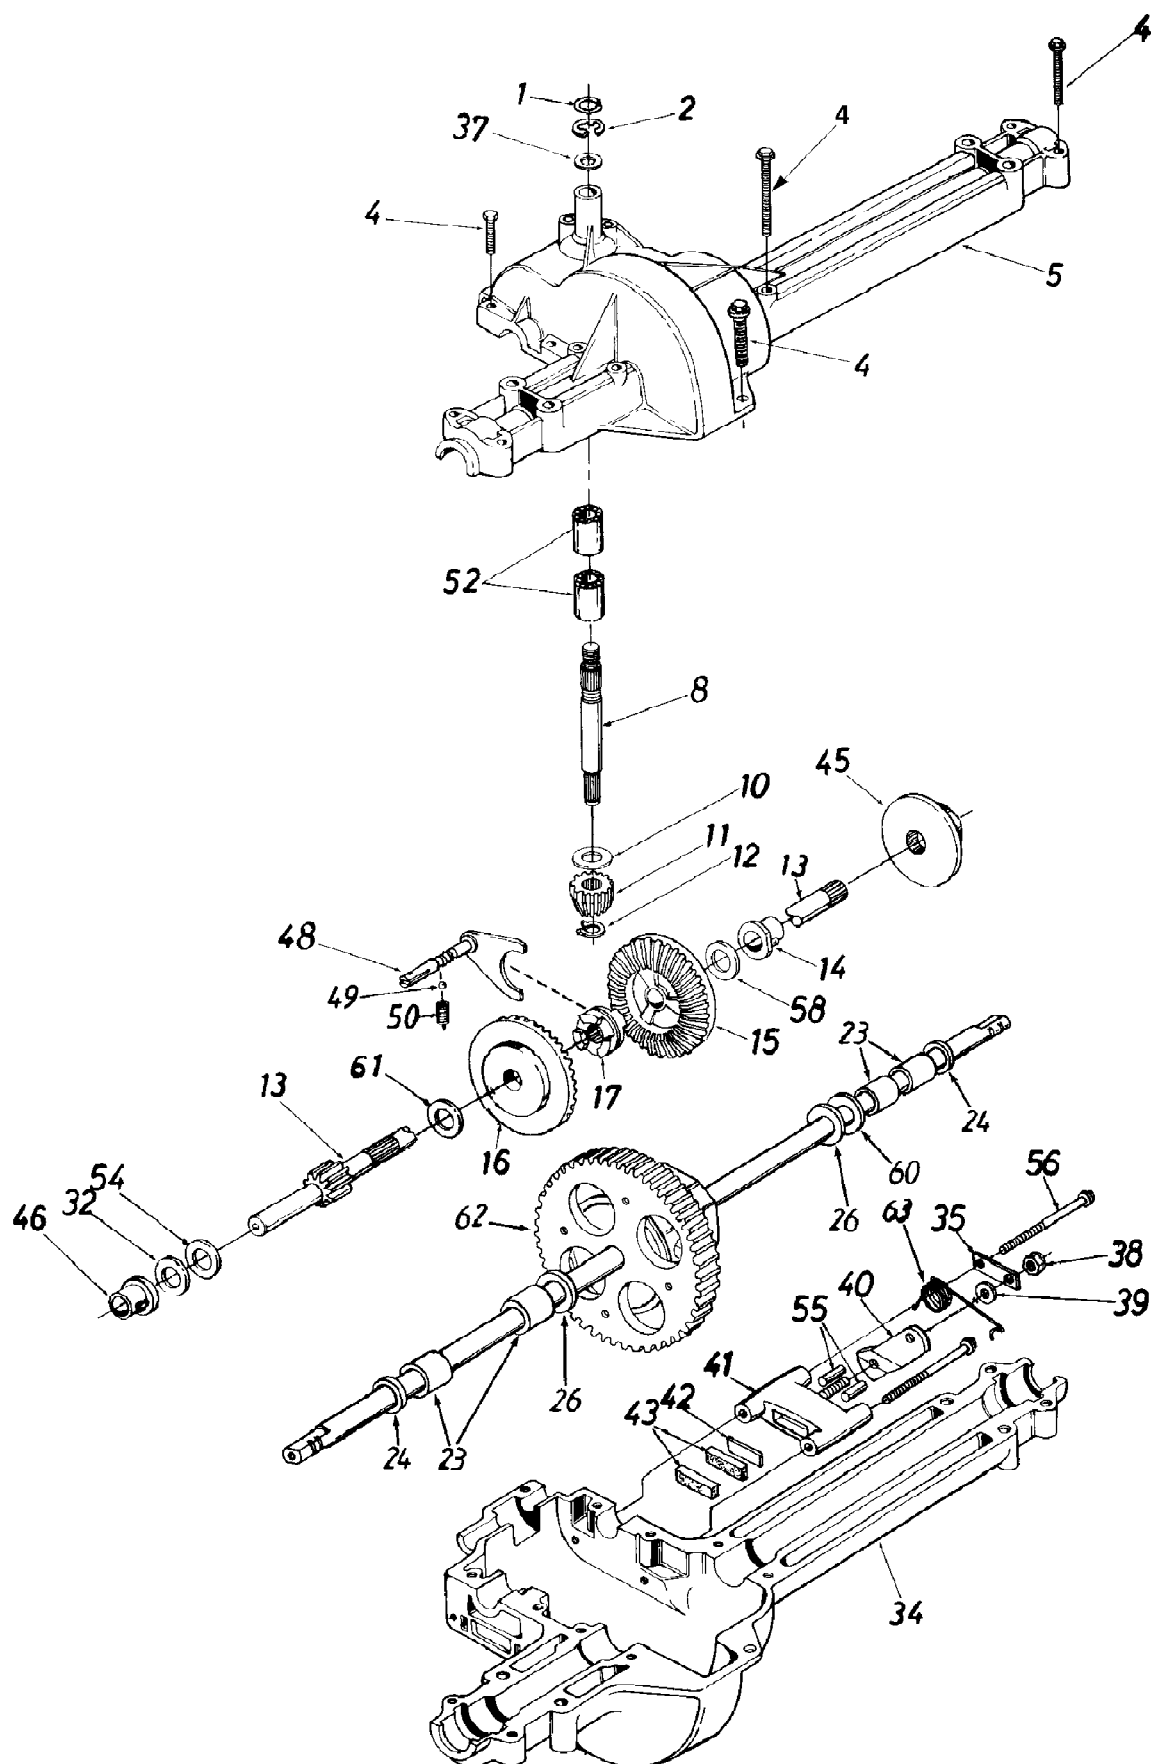

Single Speed Transaxle-RH
618-0163B


13AT686H190 LT-18 (1999)
Differential Assembly

Page 7 of 25

Ref #	Part Number	Qty	S/P/F	Description
1	732-0614	1		Wire Ring
2	716-0231	1	S	"E"-Ring
4	710-1325	1	/P	Hex Tap Scr. 1/4-20 x 1.625 Lg.
5	719-0367	1		Upper Housing
8	711-1109	1		Input Shaft
10	736-0335	1	S	Thrust Washer 5/8" I.D. x 1.25" O.D.
11	717-1464	1		Pinion Input 14T
12	716-0108	1	S	Retaining Ring
13	711-1003	1	S	Drive Shaft-R.H. Brake
14	741-0336	1	S/F	Flange Brg. 5/8" I.D. x 3/4" Lg.
15	717-1362	1	S	Bevel Gear 42T Small I.D.
16	717-1363	1	S	Bevel Gear 42T Large I.D.
17	718-0228	1		Clutch Collar
?21	710-0862A	1	/P	Pan Head Scr. 1/4-20 x .50" Lg. w/Patch
23	741-0340	1	S	Sleeve Bearing 3/4" I.D. x 1.0" Lg.
24	721-0338	1	S	Oil Seal 3/4" I.D.
26	736-0445	1	S	FI-Wash. .760" I.D. x 1.5" O.D.
32	736-0495	1	S	Thrust Wash. 5/8" I.D. x 1" O.D. x .025" Thk.
	736-0336	1	S	FI-Wash. 5/8" I.D. x 1" O.D. x .030" Thk.
	736-0494	1		Thrust Wash. 5/8" I.D. x 1" O.D. x .035" Thk.
	736-0337	1	S	FI-Wash. 5/8" I.D. x 1" O.D. x .040" Thk.
34	719-0313B	1	/P	Lower Housing
35	718-0150	1		Anti-Rotation Brkt.
37	736-0349	1	S	FI-Wash. 5/8" I.D. x 1" O.D. x .020" Thk.
	736-0336	1	S	FI-Wash. 5/8" I.D. x 1" O.D. x .030" Thk.
	736-0337	1	S	FI-Wash. 5/8" I.D. x 1" O.D. x .040" Thk.
38	712-0273	1	S	Hex Nut 5/16-24 Thd.
39	736-0371	1	/P	FI-Wash. .344" I.D. x .875" O.D.
40	717-0700	1	/P	Actuating Arm
41	761-0198	1	S	Brake Yoke
42	717-0682	1	S	Puck Plate
43	717-0678	1	S	Brake Puck
45	761-0202	1		Brake Disc
46	741-0337	1	S	Flange Bearing 5/8" I.D. x 15/16" Lg.
48	611-0011	1	S	Shift Fork Ass'y.
49	741-0862	1	/P	Ball Detent .250" Dia.
50	732-0863	1	S	Spring Detent
52	741-0335	1	S	Needle Brg. 5/8" I.D. x 1/2" Lg.
54	736-0349	1	S	FI-Wash. 5/8" I.D. x 1" O.D. x .020 Thk.
55	741-0343	1	S	Actuating Pin 5/16" Dia.
56	710-1206	1	/P	Hex Wash Hd. Self-Tap Scr. 1/4-20 Thd.
58	736-0349	1	S	FI-Wash. 5/8" I.D. x 1" O.D. x .020 Thk.
	736-0495	1	S	Thrust Wash. 5/8" I.D. x 1" O.D. x .025"
60	736-0492	1	S	FI-Wash. .76" I.D. x 1.5" O.D. x .010" Thk.
	736-0493	1	S	FI-Wash. .76" I.D. x 1.5" O.D. x .020" Thk.
	736-0351	1	S	FI-Wash. .76" I.D. x 1.5" O.D. x .030" Thk.
	736-0445	1	S	FI-Wash. .76" I.D. x 1.5" O.D. x .060" Thk.
61	736-0519	1	S	Thrust Washer
62	618-0162	1	S	Differential Ass'y.
63	732-0742	1	S	R.H. Brake Spring
	737-0148	1	S	Grease-Shell (15 oz.)
618-0163B	618-0163B	1	S	Single Speed Transaxle-RH

13AT686H190 LT-18 (1999)
Engine Accessories

Page 8 of 25

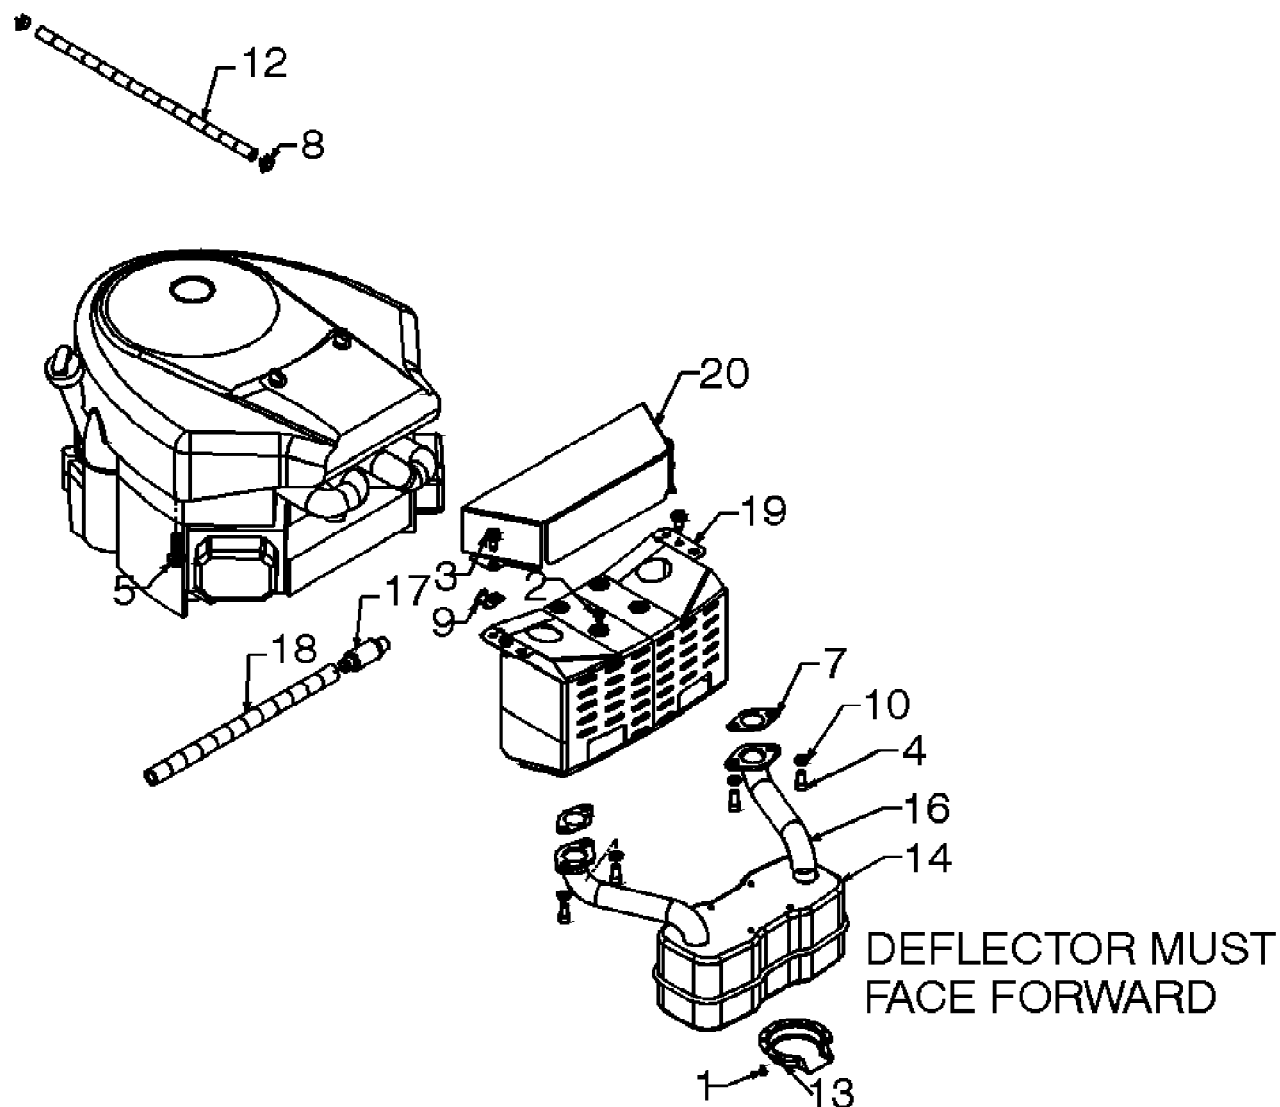


13AT686H190 LT-18 (1999)
Engine Accessories

Page 9 of 25

Ref #	Part Number	Qty	S/P/F	Description
1	710-0148	1	/P	Hex Tap Scr. #8-32 x .38" Lg.
2	710-0599	1	/P	Hex Washer TT-Tap Scr. 1/4-20 x 5" Lg.
3	710-0604	1	S	Hex Washer TT-Tap Scr. 5/16-18 x .62"
4	710-1314	1	S	Hex Washer TT-Tap Scr. 3/8-16 x 1.25"
5	710-1315	1	/P	Scr. 3/8-16 x 1.25 Lg.
7	721-0460	1		Exhaust Gasket
8	726-0205	1	/P	Hose Clamp
9	726-0272	1	/P	Clamp
10	736-0119	1	S	Lock Washer 5/16 Reg.
12	751-0535-14	1		Hose, Fuel Line
13	751-0564	1	S	Dfl, Muffler
14	751-0616	1	S	Muffler, Twin Inlet
?15	751-0650	1	S	Exhaust Tube-R.H.
16	751-0651	1	S	Exhaust Tube-L.H.
17	751-3140	1	S	Oil Drain
18	783-3141	1		Oil Drain Hose - 12"
19	783-0615	1	S	Heat Shield
20	783-0625	1	S	Heat Shield

13AT686H190 LT-18 (1999)
Hood And Fender Assembly

Page 10 of 25

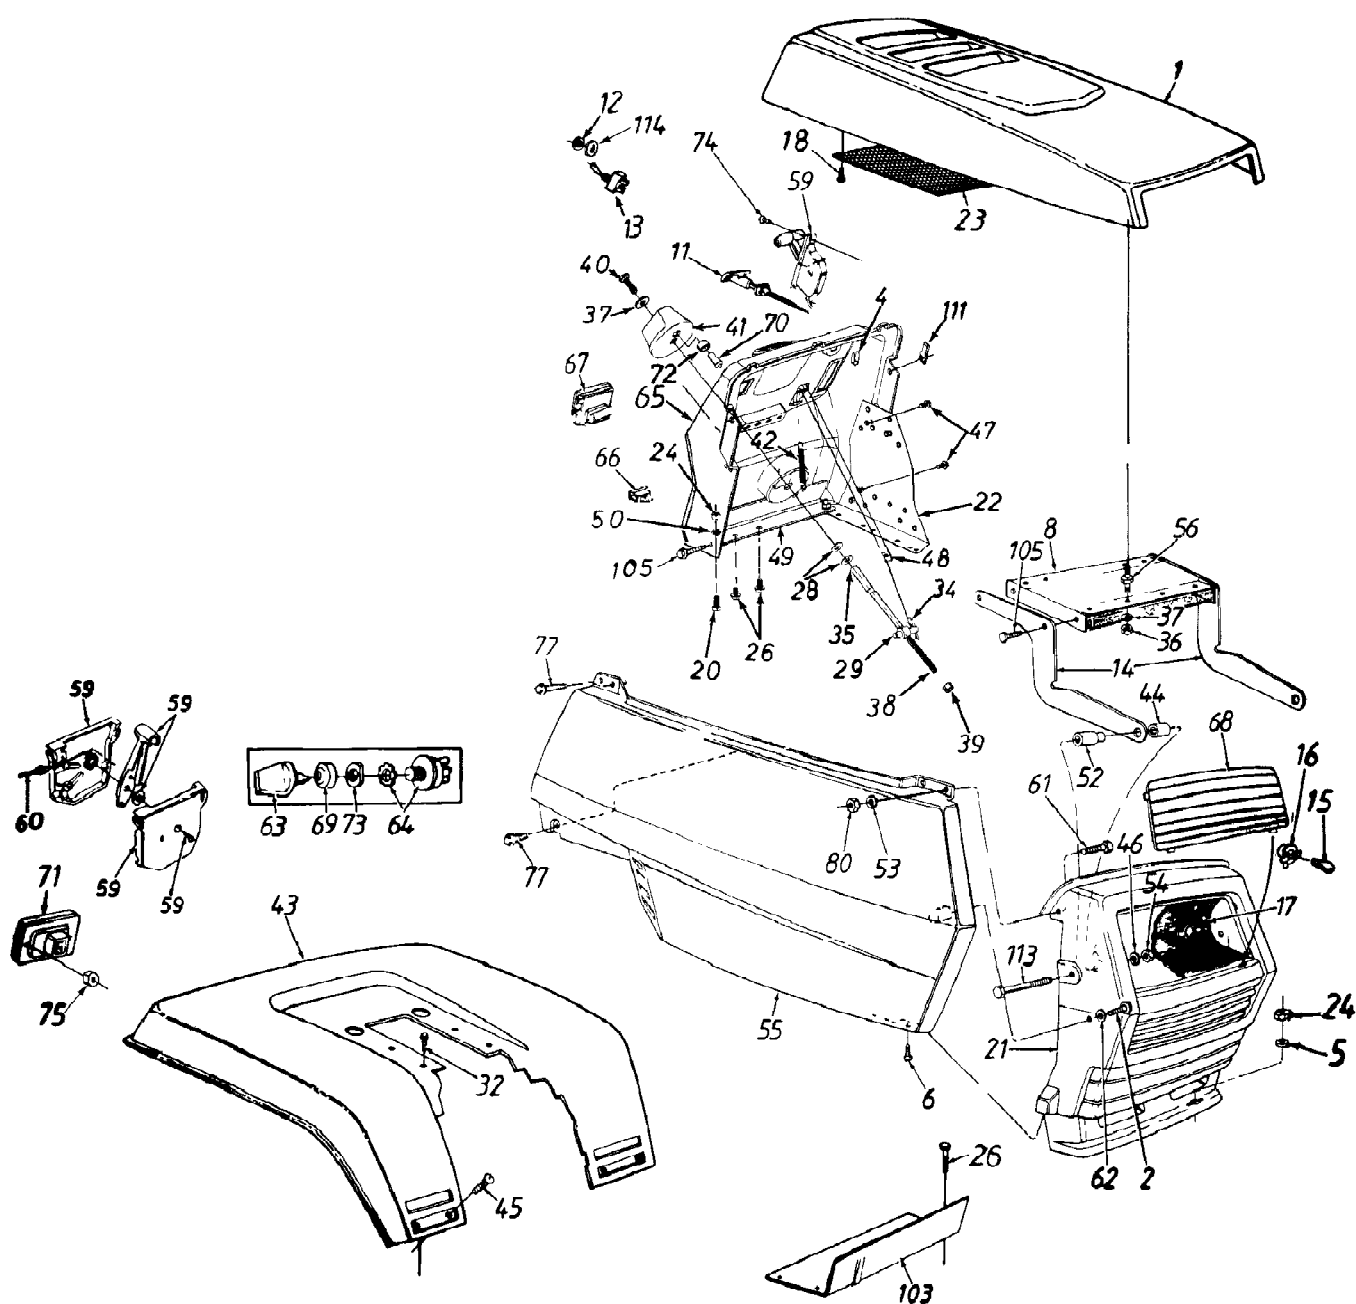

13AT686H190 LT-18 (1999)
Hood And Fender Assembly

Page 11 of 25

Ref #	Part Number	Qty	S/P/F	Description
1	17445	1		Hood
2	710-0896	1	/P	Hex Wash. B-Tap Scr. 1/4 x .62" Lg.
4	17782	1		Retainer Clip
5		1		UNKNOWN
6	710-0351	1	/P	Truss Mach. B-Tap Scr. #10 x .5" Lg.
?7	726-0211	1	S	U-Nut 5/16-18 Thd.
8	16903A	1	S	Hood Plate
11	746-0614A	1	/P	Choke Control
12	712-3014	1		Hex Nut 1/2-27 Thd.
13	725-0893	1	S	PTO Switch
14	16902A	1		Hood Hinge
15	725-0963	1	S	Lamp
16	725-1649	1	S	Twist Lock-Lamp Socket
17	777-8516	1		Reflector-Headlight
18	710-0227	1	/P	Hex Wash. Hd. AB-Tap Scr. #8 x .5" Lg.
20	710-0118	1	S/F	Hex Bolt 5/16-18 x .75" Lg.
21	731-1430B	1	S	Grille
22	17300E	1		Dash Support Bracket
23	723-0416	1		Screen
24	712-0265	1	/P	Hex Sems Nut 5/16-18 Thd.
26	710-0607	1	/P	Hex Wash. SF Tap Scr. 5/16-18 x .5" Lg.
28	736-0267	1	S	FI-Wash. 3/8" I.D. x .875" O.D.
29	711-1002	1		Adj. Ferrule 3/8-8 Thd.
32		1		UNKNOWN
34	714-0101	1	S	Hairpin Clip
35	716-0125	1	S	"E"-Ring .375" Dia.
36	712-3006	1	/P	Hex Nut 1/4-20 Thd. (Gr. 5)
37	736-0270	1	/P	Bell-Wash. .265" I.D. x .75"
38	747-0898	1		Adjustment Rod
39	712-0449A	1		Hex Nut 3/8-8 Twin Thd.
40	710-3015	1	/P	Hex Bolt 1/4-20 x .75" Lg.
41	720-0236	1	S	Plastic Knob
42	732-0732	1		Ext. Spring 3.21" Lg.
43	783-0329A	1	/P	Rear Fender
44	750-0755	1		Spacer .33" I.D. x .625" O.D.
45	710-0286	1	/P/F	Pan Screw 1/4-20 x .50" Lg.
46	736-0278	1		FI-Wash. .328" I.D. x .68" O.D.
47	710-0599	1	/P	Hex Wash. Hd. Scr. 1/4-20 x .5" Lg.
48	727-0460	1	S	Indicator Strip
49	783-0120	1	S	Indicator Bracket
50		1		UNKNOWN
52	750-0754	1		Shld. Spacer .33" I.D.
53	736-0142	1	S	FI-Wash. .281" I.D. x .5" O.D.
54	712-0158	1	S	Hex Cent. L-Nut 5/16-18 Thd.
55	731-1890	1	/P	Side Cover-R.H.
	731-1891	1		Side Cover-L.H.
56	710-1034	1		Double Ended Stud 1/4-20 Thd.
59	831-0823A	1	/P	Throttle Control Box Ass'y.
60	746-0634	1	S	Throttle Control Wire 22" Lg.
61	710-0258	1	S/F	Hex Bolt 1/4-20 x .62" Lg.
62	736-0173	1	/P	FI-Wash. .281" I.D. x .73" O.D.
63	725-1341B	1	/P	Ignition Key
64	725-1396	1	S	Ignition Switch

13AT686H190 LT-18 (1999)
Hood And Fender Assembly


Page 12 of 25

Ref #	Part Number	Qty	S/P/F	Description
65	731-1510	1	S	Dash Panel
66	725-0634	1	S	Light Switch
67	725-0925	1	S	Ammeter
68	731-1038A	1	S	Lens
69	725-1347	1	/P	Ignition Switch Cap
70	732-0675	1		Ball Plunger
71	725-1729	1		Taillight
72	750-0526	1		Spacer
73	725-1346	1	S	Ignition Switch Nut
74	710-0779A	1	/P	Truss Mach. AB-Tap Scr. #10 x .5" Lg.
75	712-0349	1	/P	Hex Nut 10-32
77	710-0642	1	/P	Hex Wash. Hd. Tap Scr. 1/4 x .75" Lg.
80	712-0291	1	S	Hex L-Nut 1/4-20 Thd.
103	17633A	1	S	Gasoline Tank Support
105	710-0599	1	/P	Hex Tap Scr. 1/4-20 x .5" Lg.
111	712-0185	1		Speed Nut 1/4-20 Thd.
113	710-0176	1	/P	Hex Bolt 5/16-18 x 2.75"
	629-0309	1	S	Headlight Harness (Not Shown)
114	736-0114	1	/P	Lock Washer 1/2: Internal tooth

13AT686H190 LT-18 (1999)

Lower Frame And Wheel Assembly

Page 13 of 25

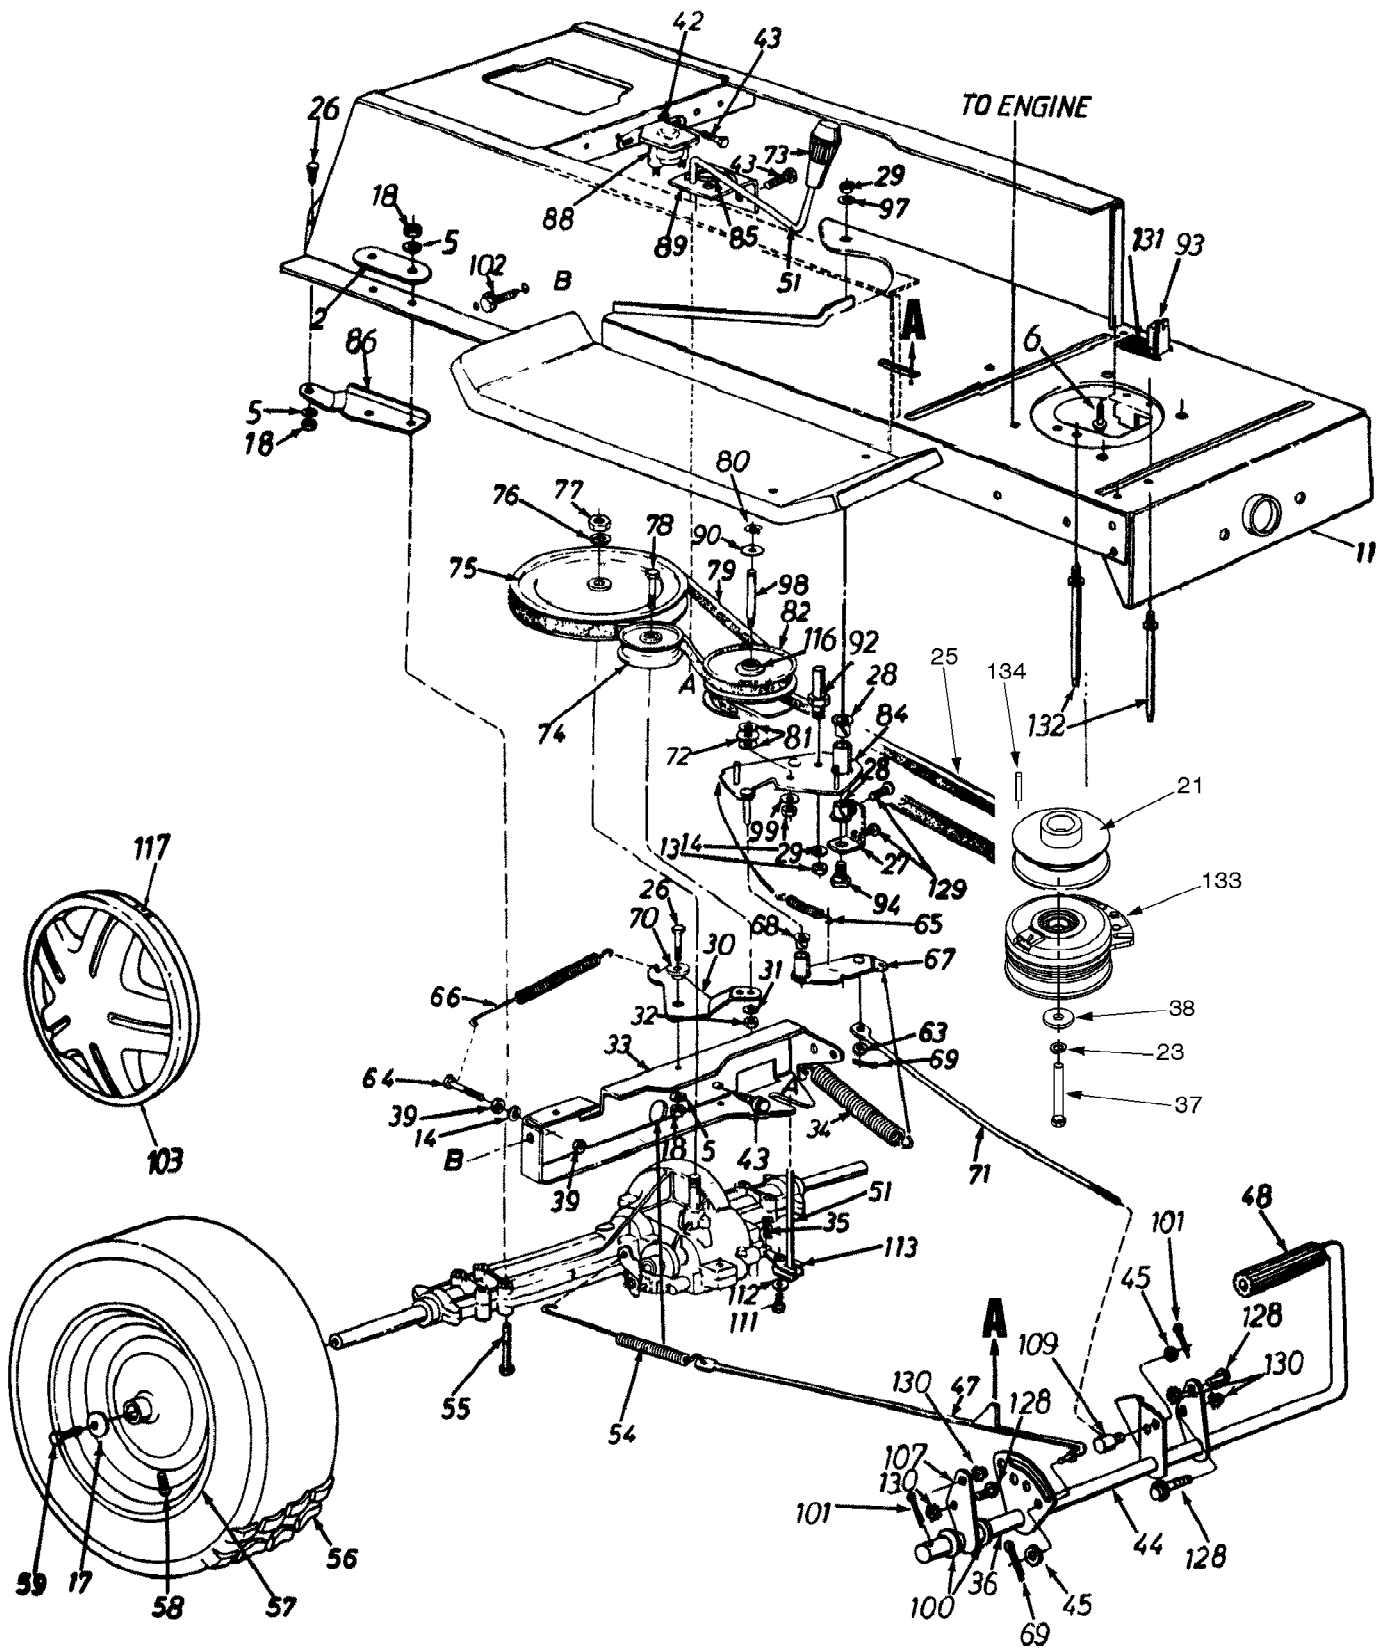

13AT686H190 LT-18 (1999)
Lower Frame And Wheel Assembly

Page 14 of 25

Ref #	Part Number	Qty	S/P/F	Description
2	17840	1	S	Transaxle Mtg. Brkt.
5	736-0119	1	S/F	L-Wash. 5/16" I.D.
6		1		UNKNOWN
11	783-0310E	1	S	Lower Frame Ass'y.
13	712-0287	1	S/F	Hex Nut 1/4-20 Thd.
14	736-0329	1	S/F	L-Wash. 1/4" I.D.
17	736-0242	1	/P	Bell-Wash. .345" I.D. x .88"
18	712-0267	1	S/F	Hex Nut 5/16-18 Thd.
21	756-0639	1	S	Engine Pulley
23	736-0171	1	S	Lock Washer 7/16
25	754-0280	1	S	Variable-Speed Belt
26	710-3008	1	/P	Hex Bolt 5/16-18 x .75" Lg.
27	17963	1		Bearing Shaft Bracket Ass'y.
28	741-0591	1	S	Flanged Nyliner Brg. 5/8" I.D. x .88" Lg.
29	712-0241	1	/P/F	Hex Nut 3/8-24 Thd.
30	17694	1	S	Idler Bracket
31	736-0169	1	S/F	L-Wash. 3/8" I.D.
32	712-0241	1	/P/F	Hex Nut 3/8-24 Thd.
33	17629A	1	S	Transaxle Support Brkt.
34	732-0556	1	S	Ext. Spring .94" O.D. x 7.58"
35	714-0149B	1	S	Inter. Cotter Pin
36	750-0802	1		Spacer .63" I.D.
37	710-3157	1	S	Hex Cap Screw 7/16-20 x 3.25
38	736-3082A	1	/P	Flat Washer .45 ID x 1.5 OD
39	712-0138	1	S	Hex Nut 1/4-28 Thd.
40	710-0776	1	S	Hex AB-Tap Scr. 1/4" x .62" Lg.
41	711-0747	1	S	Belt Guard Pin
42	736-0222	1	S	Ext. L-Wash. 1/4" I.D.
43	710-0599	1	/P	Hex Wash. Hd. S-Tap Scr. 1/4-20 x .50"
44	683-0123	1		Clutch/Brake Pedal Ass'y.
45	736-0140	1	S	Fl-Wash. .344" I.D. x .62"
47	747-0755A	1		Brake Rod Ass'y.
48	735-0196	1	S	Foot Pad
51	17705	1	/P	Shift Lever Ass'y.
53	732-0264	1	S	Ext. Spring .38" O.D. x 2.5"
54	732-0642	1	S	Ext. Spring 7.33" Lg.
55	710-1266	1	/P	Hex Bolt 5/16-18 x 3.5" Lg.
56	734-1675	1		Wheel Ass'y. Comp.
	734-1596	1		Tire Only
57	634-0070	1	/P	Wheel Rim Only
58	734-0255	1	S	Air Valve (Service Only)
59	710-0627	1	/P/F	Hex Bolt 5/16-24 x .75" Lg.
61	732-0722	1	S	Brake Return Spring Anchor
63	736-0275	1	S	Fl-Wash. .34" I.D. x .68" O.D.
64	710-0428	1	F	Hex Bolt 1/4-28 x 1.25" Lg.
65	732-0568	1	S	Ext. Spring
66	732-0384	1	S	Ext. Spring .62" O.D. x 6.12"
67	16554A	1	S	Variable Speed Torque Brkt. Ass'y.
68	741-0419	1		Flanged Bearing
69	714-0111	1	S/F	Cotter Pin 3/32" Dia.
70	748-0234	1	/P	Shoulder Spacer .27" Lg.
71	747-0530A	1	/P	Speed Control Link
72	741-0405	1	S	Truss Bearing .56 Dia. x 1.25"


13AT686H190 LT-18 (1999)
Lower Frame And Wheel Assembly

Page 15 of 25

Ref #	Part Number	Qty	S/P/F	Description
73	720-0232	1	S	Shift Knob
74	756-0437	1	S	FI-Idler Pulley 3.25" x .75"
75	656-0005	1		"V" Pulley
76	736-0427	1	S	Bell-Wash. .56" I.D. x 1.125"
77	712-3035	1	/P	Hex Jam Nut 5/16-18 Thd.
78	710-0539	1	/P	Hex Bolt 3/8-24 x 1.75" Lg.
79	754-0370	1	S	Variable Speed Belt
80	716-0114	1	S	Snap Ring .56" Dia.
81	736-0355	1	/P	FI-Wash.
82	717-0800A	1	S	Variable Speed Pulley Ass'y. 5" O.D.
84	16354B	1	S	Variable Speed Brkt. Ass'y.
85	732-0525	1		Comp. Spring-Clip
86	17668	1	S	Axle Support Brkt.-R.H.
	17669	1	S	Axle Support Brkt.-L.H. (Not Shown)
88	725-1426	1	S	Solenoid
89	17630	1	S	Shift Lever Bracket
90	736-0414	1	S	Teflon Washer .565" I.D.
92	711-1000	1	S	Belt Keeper 3" Lg.
93	725-1657A	1	S	Safety Switch (Clutch)
94	738-0755	1	S	Shld. Bolt 3/8-24 x 3.12" Lg.
97	736-0105	1	/P	Bell-Wash. .38" I.D. x .88"
98	738-0569	1	S	Shaft .56" Dia. x 3.875" Lg.
99	736-0331	1	/P	Bell-Wash. .39" I.D. x 1.12"
100	736-0256	1	S	FI-Wash. .64" I.D. x .94"
101	714-0470	1	S	Cotter Pin 1/8" Dia. x 1.25"
102	710-0604	1	S	Hex Wash. Hd. Scr. 5/16-18 x .62" Lg.
103	734-1784A	1	S	Hub Cap
107	17860	1	S	Pedal Bracket
109	711-0198	1	S	Ferrule
111	710-0195	1	S	Hex Bolt 1/4-28 x .50" Lg.
112	736-0270	1	/P	Bell-Wash. .265" I.D. x .75"
113	17707	1		Shift Lever Link Ass'y.
115	736-0140	1	S	FI-Wash. .385" I.D. x .62"
116	741-0404	1	S	Needle Brgs.
117	727-0425A	1	S	Spring Clip (Used w/Ref. No. 103)
119	710-0427	1	S	Hex Bolt 3/8-16 x 1.25" Lg.
120	756-0217	1	S	FI-Idler w/Flanges 2.75" O.D.
121	736-0280	1		FI-Wash. .39" I.D. x 1.12" O.D.
122	712-0798	1	/P	Hex Nut 3/8-16 Thd.
128	710-0650	1	/P	Hex Wash. TT-Tap Scr. 5/16-18 x .75" Lg.
129	710-0726	1	/P	Hex Wash. AB-Tap Scr. 5/16-18 x .75" Lg.
130	712-0265	1	/P	Hex Sems Nut 5/16-18 Thd.
131	732-0750A	1	S	Spring Switch
132	711-1044	1	S	Belt Guard Pin
133	717-1459	1	S	Electric Clutch
134	714-0118	1	/P	Key

13AT686H190 LT-18 (1999)
Schematic


Page 16 of 25

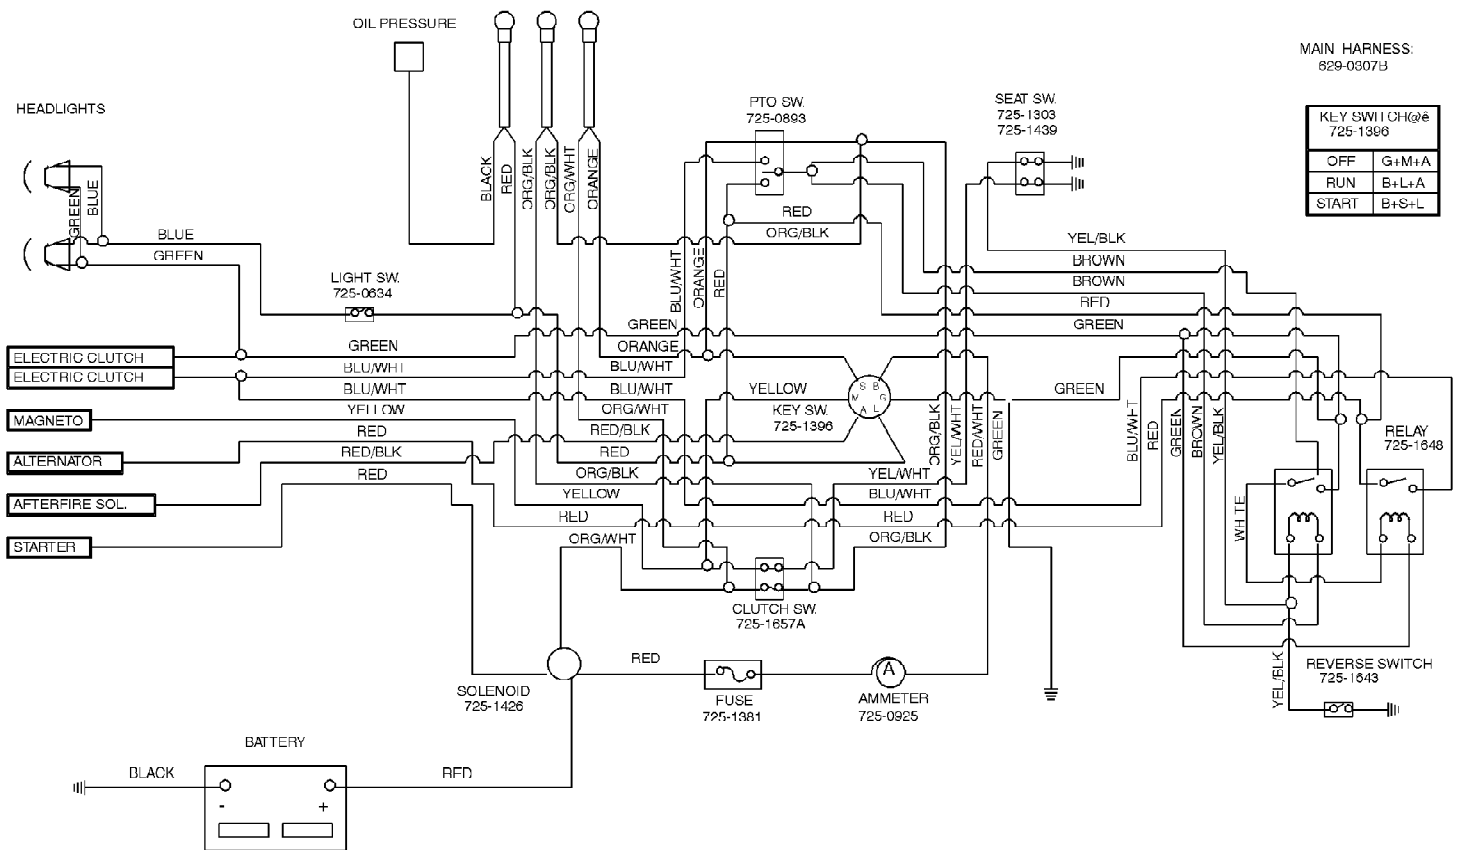

13AT686H190 LT-18 (1999)
Schematic

Page 17 of 25

Ref #	Part Number	Qty	S/P/F	Description
725-0634	725-0634	1	S	Light SW.
725-1426	725-1426	1	S	Solenoid
725-1381	725-1381	1	S	Fuse
725-0925	725-0925	1	S	Ammeter
725-1657A	725-1657A	1	S	Clutch SW.
725-1396	725-1396	1	S	Key SW.
725-0893	725-0893	1	S	PTO SW.
725-1303	725-1303	1	S	Seat SW.
725-1439	725-1439	1		Seat SW.
725-1643	725-1643	1		Reverse Switch
725-1648	725-1648	1	S	Relay
725-1396	725-1396	1	S	Key Switch
629-0307B	629-0307B	1	S	Main Harness

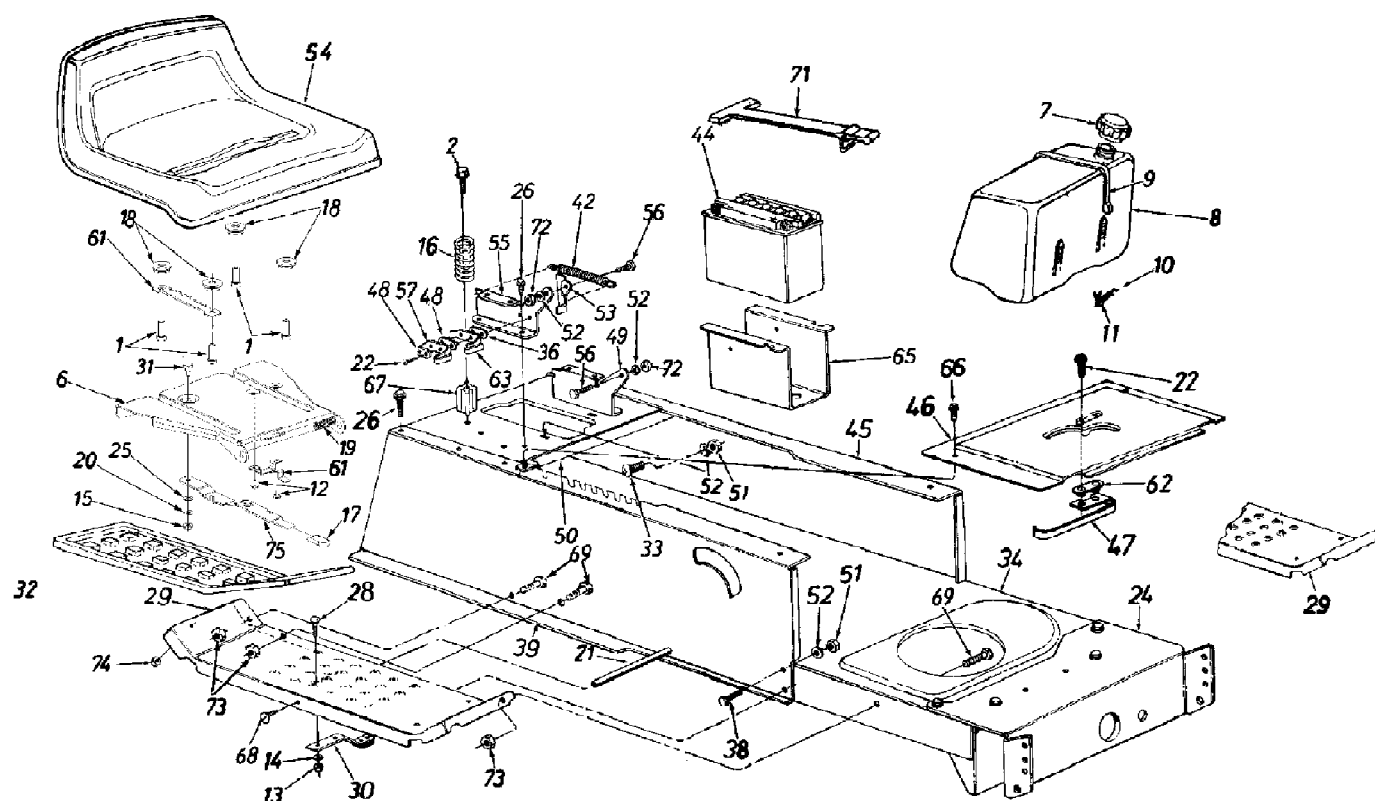

13AT686H190 LT-18 (1999)

Page 19 of 25

Seat, Fuel Tank, And Frame Assembly

Ref #	Part Number	Qty	S/P/F	Description
1	738-1007	1		Shoulder Screw 3/8-16 x .5
2	710-1208	1	/P	Hex Wash. Hd. Tap Scr. 5/16-18 x 3.25" Lg.
6	783-0607A	1	S	Seat Pivot Bracket
7	751-0603	1	S	Fuel Cap
8	751-0657	1		Fuel Tank
9	726-0209	1	/P	Tie Strap
10	751-0535-13	1	S	Fuel Line
11	726-0205	1	/P	Hose Clamp
12	710-1268	1	/P	Hex B-Tapp Scr. #10-16 x .38
13	712-0287	1	S/F	Hex Nut 1/4-20 Thd.
14	736-0329	1	S	L-Wash. 1/4" I.D.
15	712-3027	1	S	Lock Nut 1/4-20
16	732-0735	1	/P	Compression Spring
17	720-0309A	1	/P	Grip
18	731-1989	1		Seat Spacer
19	732-0499	1		Compression Spring
20	736-0175	1	S	Spr. Wash. .265 x .562 x .025
21	738-0526	1		Running Board Rod
22	710-0227	1	/P	Hex Wash. Hd. AB-Tap Scr. #8 x .50" Lg.
24	783-0041B	1	/P	Front Pivot Brkt.
25	736-0726	1		Fl. Wash. .344 x .62 x .03
26	710-0870	1	/P	Hex Wash. Hd. AB-Tap Scr. 5/16 x .75" Lg.
28	710-0703	1	/P/F	Carriage Bolt 1/4-20 x .75"
29	17770C	1	S	Running Board (R.H. & L.H.)
30	761-0168B	1	S	Blade Brake Ass'y.
31	738-0137A	1	S	Shld. Bolt 1/4-20 Thd.
32	731-0909	1	S	Rubber Foot Pad-L.H
	731-0910	1	S	Rubber Foot Pad-R.H
33		1		UNKNOWN
34	783-0310E	1	S	Lower Frame
36	726-0278	1		Insulator Boss Plate
38	710-3008	1	/P/F	Hex Bolt 5/16-18 x .75" Lg.
39	783-0042A	1	S	Upper Frame-R.H.
42	732-0581B	1	S	Extension Spring 5.31" Lg.
44	725-1750	1	S	12-V Battery
45	783-0043	1	/P	Upper Frame-L.H.
46	17286B	1	S	Shift Cover
47	725-1643	1		Safety Switch (Reverse)
48	726-0279	1		Insulator Plate
49	17951	1	S	Seat Pivot Brkt. Support-L.H.
50	783-0355A	1	/P	Hitch Plate
51	712-0267	1	S/F	Hex Nut 5/16-18 Thd.
52	736-0119	1	S/F	L-Wash. 5/16" I.D.
53	17239A	1	S	Seat Lift Brkt.
54	757-0370A	1	S	Seat - Grey
55	17950	1	S	Seat Pivot Brkt. Support-R.H.
56	738-0296	1	S	Shld. Bolt .437" Dia. x .268"
57	725-1303	1	S	Spring Switch (Seat-Outer)
?59	710-0650	1	/P	Hx Wash TT-Tap Scr. 5/16-18 x 7/8" Lg.
?60	783-0611	1		Seat Stop
61	783-0753	1		Seat Selector
62	726-0320	1	S	Insulator Nut Plate
63	725-1439	1		Safety Switch (Seat-Inner)

13AT686H190 LT-18 (1999)


Page 20 of 25

Seat, Fuel Tank, And Frame Assembly

Ref #	Part Number	Qty	S/P/F	Description
65	783-0345	1	S	Battery Tray
66	710-0351	1	/P	Tr. Mach. B-Tap Scr. #10 x .5" Lg.
67	748-0347	1	S	Spring Spacer
68	710-0323	1	/P	Truss Mach. Scr. 5/16-18 x .75"
69	710-3008	1	/P/F	Hex Bolt 5/16-18 x .75" Lg.
71	723-3064	1		Battery Retainer Strap
72	712-3010	1	S	Hex Nut 5/16-18 Thd.
73	712-0265	1	/P	Hex Sems Nut 5/16-18 Thd.
74	712-0271	1	/P	Hex Sems Nut 1/4-20 Thd.
75	783-0609	1		Seat Lever

13AT686H190 LT-18 (1999)
Speed Control

Page 21 of 25

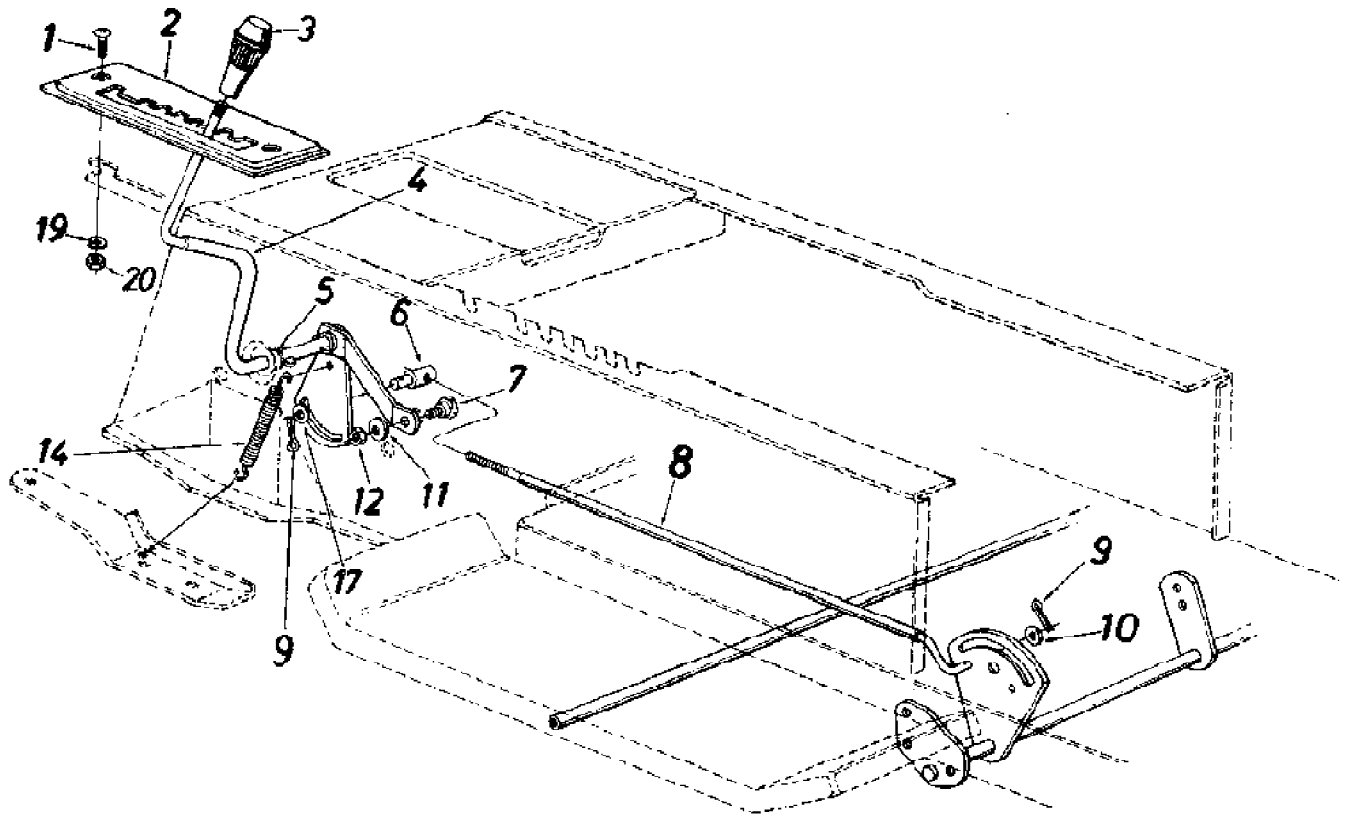

13AT686H190 LT-18 (1999)
Speed Control

Page 22 of 25

Ref #	Part Number	Qty	S/P/F	Description
1	710-0924	1	/P	Truss Mach. Scr. 1/4-20 x .75" Lg.
2	783-0341	1		8-Speed Selector Plate
3	720-0218	1	/P	Shift Knob
4	16192A	1	/P	Speed Selector Lever Ass'y.
5	736-0192	1	S	Flat Washer .53" I.D. x .93"
6	711-0198	1	S	Ferrule 3/8-24 x .37" Dia.
7	738-0155	1	S	Shoulder Bolt
8	747-0503A	1		Speed Control Link
9	714-0111	1	S/F	Cotter Pin 3/32" Dia. x 1.0"
10	736-0226	1	S	Fl-Wash. .469" I.D. x .88"
11	736-0119	1	S/F	L-Wash. 5/16" I.D.
12	712-3010	1	S	Hex Nut 5/16-18 Thd. (Gr. 5)
14	732-0303	1	S	Spring .38" O.D. x 3.18" Lg.
17	736-0300	1	S	Fl-Wash. .385" I.D. x 7/8"
19	736-0329	1	S/F	L-Wash. 1/4" I.D.
20	712-3006	1	/P	Hex Nut 1/4-20 Thd. (Gr.5)



13AT686H190 LT-18 (1999)
Steering Assembly

Page 24 of 25

Ref #	Part Number	Qty	S/P/F	Description
1	731-1509A	1	/P	Steering Wheel Cap
2	710-0643	1	/P	Hex Bolt 5/16-18 x 1" Lg.
3	736-0242	1	/P	Belleville Wash. .345" I.D.
4	731-1686	1	S	Steering Wheel
9	17198A	1	S	Retainer Plate
10	738-0141	1	S	Shld Bolt .437" Dia. x .35" Lg.-5/16-18
11	710-1039	1	/P	Hex Bolt 3/8-24 x 1.0" Lg. (Grade 5)
13	750-0535	1	S	Spacer .380" I.D. x .625" O.D. x .227
14	736-0217	1	S	L-Wash. 3/8" I.D. (H.D.)
15	710-0726	1	/P	Hex Wash. Hd. Self-Tap Scr.
16	711-1107	1	S	Steering Drag Link
17	783-0041A	1	S	Pivot Bar Brkt.
18	738-0527	1	S	Shld Bolt .498" Dia. x 2.04" Lg.-3/8-16
19	712-0431	1	S/F	Flanged Hex Nut 3/8-16 Thd.
21	712-0411	1	S	Hex L-Nut 5/16-24 Thd.
22	683-0055	1	S	Steering Arm Front Axle
?23	710-0772	1	/P	Hex Bolt 5/16-24 x 2.00" Lg.(Grade 5)
25	719-0342A	1	S	Pivot Bar Ass'y.
26	683-0127	1	S	Front Axle Ass'y.-L.H.
27	712-0241	1	/P/F	Hex Nut 3/8-24 Thd.
28	736-0169	1	S/F	L-Wash. 3/8" I.D.
29	723-3018	1	S	Ball Joint 3/8-24 Thd.
30	747-0753	1		Tie Rod
31	712-0711	1	/P/F	Hex Jam Nut 3/8-24 Thd.
32	683-0126	1	S	Front Axle Ass'y.-R.H.
33	634-0059	1		Wheel Ass'y. Comp.
	734-0864	1	/P	Tire Only
	734-0255	1	S	Air Valve
34	634-0051	1	S	Front Wheel Rim Only
35	741-0569	1	S	Bearing
36	736-0285	1	/P	FI-Wash. .635" I.D. x 1.59" O.D.
37	731-1783A	1		Hub Cap
38	714-0470	1	S/F	Cotter Pin 1/8" Dia. x 1.25"
?39	736-0531	1	S	FI-Wash. .640" I.D. x 1.24" O.D.
40	726-0214	1	/P	Push Cap 5/8" Dia. Rod
42	712-0262	1	/P	Hex Jam Nut 3/8-24 Thd.
43	710-1309	1	/P	Torx Bolt 5/16-18 x .63" Lg.
44	736-0119	1	S/F	L-Wash. 5/16" I.D.
?45	736-0343	1	/P	FI-Wash. .33" I.D. x 1.25" O.D.
46	748-0389	1	S	Cap
47	712-0214	1	S	Hex Cent. L-Nut 3/8-24 Thd.
49	712-0158	1	S	Hex Cent. L-Nut 5/16-18 Thd.
50	736-0119	1	S/F	L-Wash. 5/16" I.D.
51	717-0622A	1	S	Steering Gear Segment
52	741-0656	1	S	Hex. Flg. Brg. 5/8" I.D.
53	736-0187	1	/P	FI-Wash. (Hardened)
54	738-0919	1	S	Steering Shaft
58	736-0271	1	S	Wave-Wash. .32" I.D. x .62" O.D.
59	736-0187	1	/P	FI-Wash. (Hardened)
60	723-0448	1	S	Drag Link Ball Joint 7/16-20 Thd.
63	727-0425A	1	S	Spring Clip
64	736-0356	1	S	Bell-Wash. .39" I.D. x 1.38" O.D.
67	737-0211	1	S	Grease Fitting

13AT686H190 LT-18 (1999)
Steering Assembly

Page 25 of 25

Ref #	Part Number	Qty	S/P/F	Description
68	737-3000	1	S	Grease Fitting
69	712-0240	1	S	Hex Jam Nut 7/16-20 Thd.