
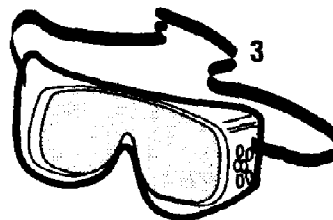
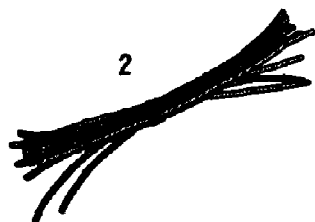


25AE110-190 HWT-5E Trimmer/Mower (2000)
Accessories And Kits


Page 1 of 12

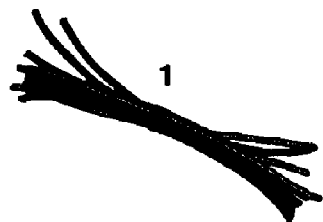

25AE110-190 HWT-5E Trimmer/Mower (2000)
Accessories And Kits

Page 2 of 12

Ref #	Part Number	Qty	S/P/F	Description
1	1915754	1	S	Trimmer String Kit, .155" Includes 24 pieces
2	1915755	1	S	Trimmer String Kit, .130" Includes 24 pieces
3	5003	1	S	Safety Goggles
4	1768449	1	/P	Battery Charger Model HWT-5E

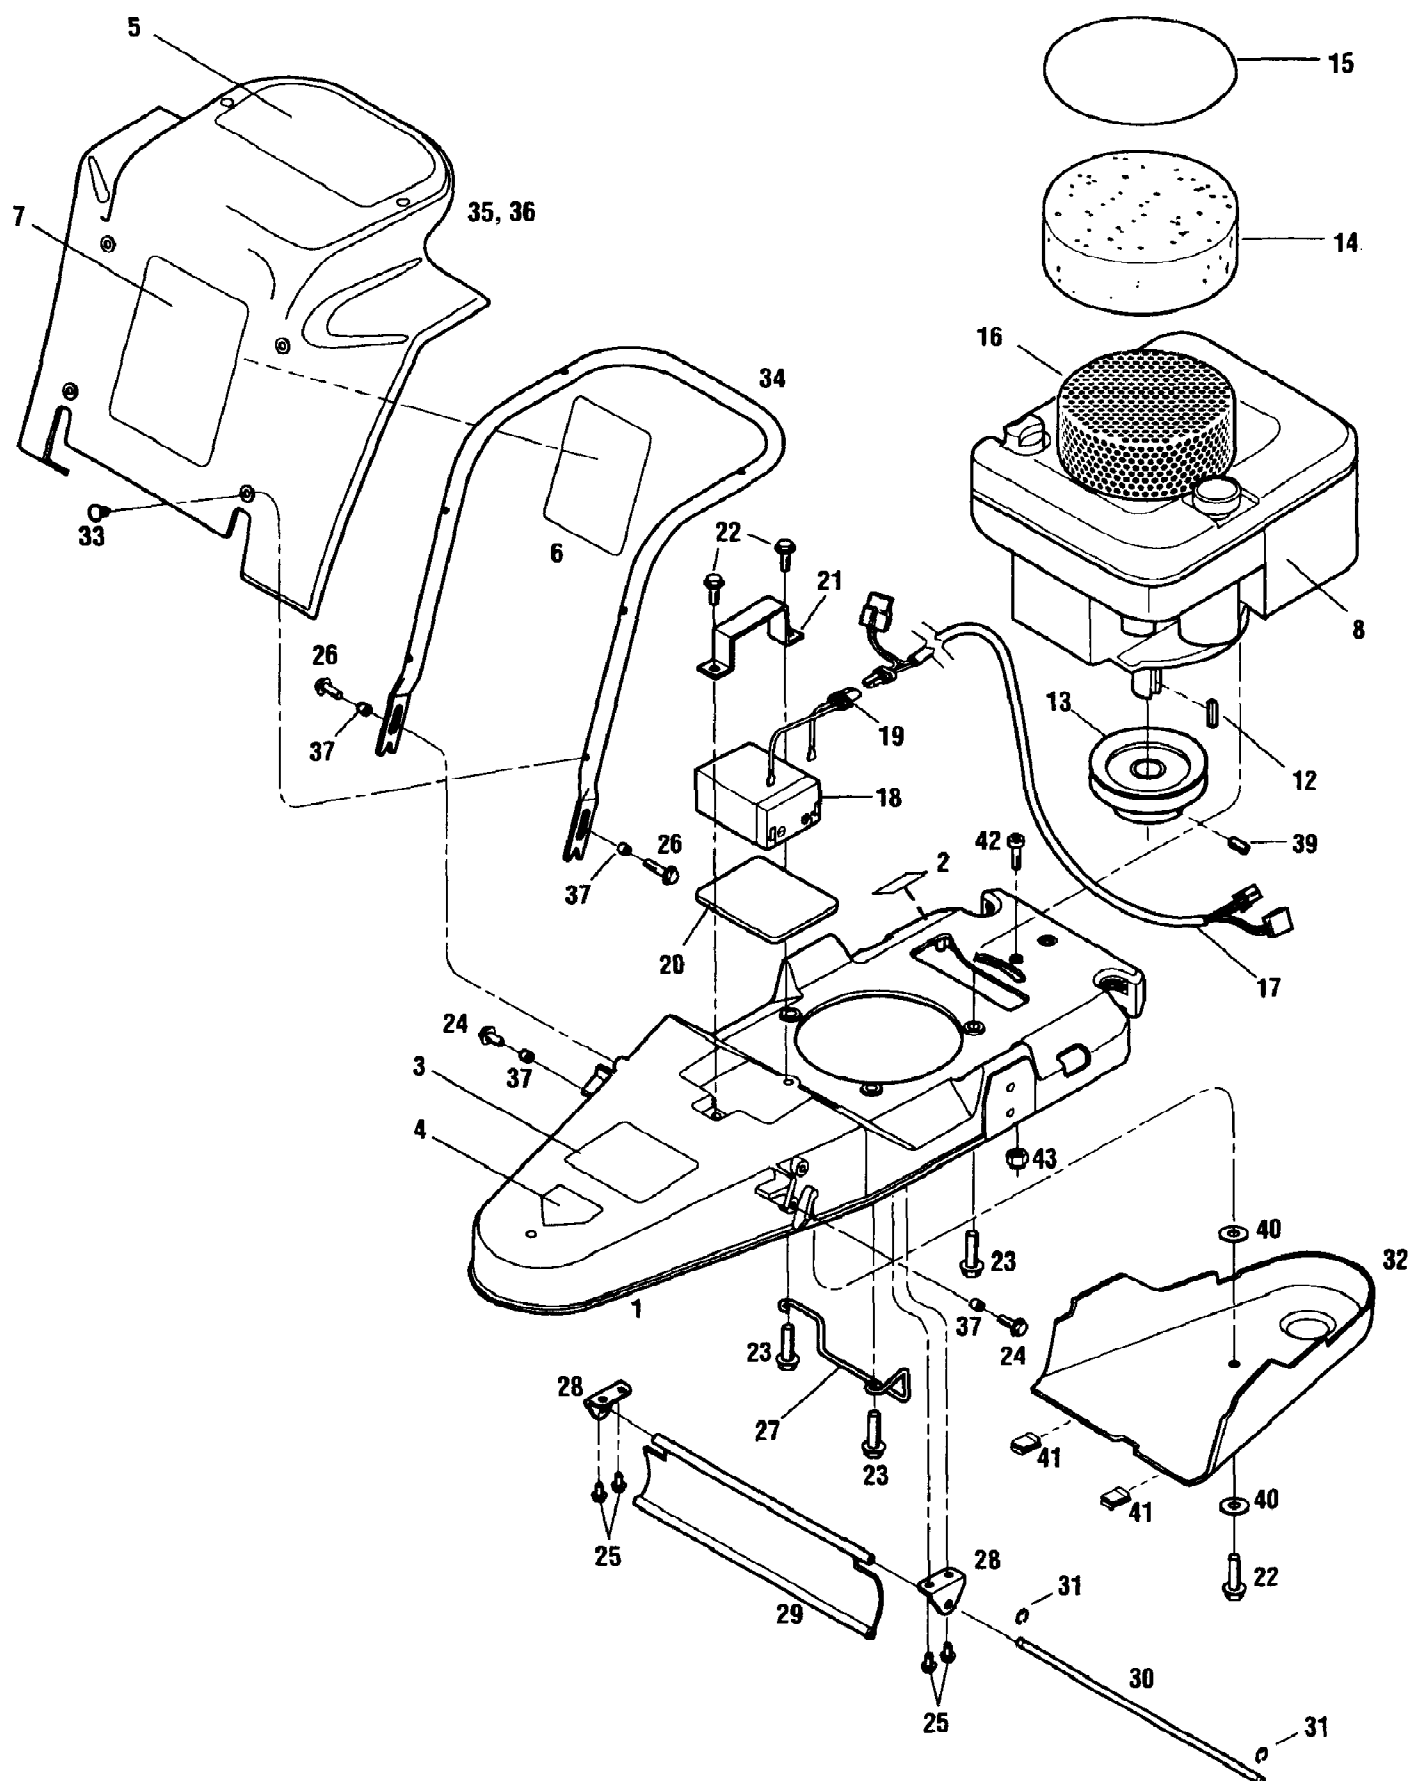


25AE110-190 HWT-5E Trimmer/Mower (2000)
Engine, Deck, Covers And Guards

Page 4 of 12

Ref #	Part Number	Qty	S/P/F	Description
1	1915722	1		Deck with decals
2	1904511	1		Decal-Hot Surface
3	1904403	1	/P	Decal-Warning/Thrown Objects
4	1739687	1	/P	Decal-Danger Feet/Hands
5	1904404	1		Decal-Engine Cover
6	1904405	1		Decal-Parallel Trim Control
7	1917614	1	/P	Decal-Logo, 5HP Model HWT-5E
	1917615	1	/P	Decal-Logo, 4HP Model HWT-4
8		1		Engine-Quantum, 4HP Model HWT-4. Order parts from your local Briggs and Stratton engine dealer. Refer to engine for model/type number
		1		Engine-Quantum, 5HP Model HWT-5E. Order parts from your local Briggs and Stratton engine dealer. Refer to engine for model/type number
12	9301	1	S	Key, 3/16" x 1" Sq
13	1915240	1	/P	Pulley, 4" OD
14	1915276	1	S	Engine Debris Guard/Foam
15	1915304	1	/P	O-Ring/Engine Debris Guard
16	1916571	1		Engine Debris Guard
17	1910835	1	S	Wire Harness Model HWT-5E
18	1909647	1	/P	Battery Model HWT-5E
19	1909697	1	/P	Battery Connector Model HWT-5E
20	1915268	1		Battery Pad Model HWT-5E
21	1915204001	1	/P	Battery Bracket Model HWT-5E
22	90063	3	S/F	Hex Hd. Flange Screw, 5/16-18 x 1
23	1768194	3	S	Hex Hd. Flange Screw, 3/8-16 x 1-1/2
24	1754128	2	/P	Hex Hd Flange Screw, 1/4-20 x 3/4
25	1909301	4	/P	Hex Hd Flange Screw, 1/4-20 x 5/8
26	1763187	2		Hex Hd Flange Screw, 1/4-20 x 1
27	1910865	1	/P	Belt Guide
28	1915219001	2		Flap Bracket
29	1915211	1	/P	Deflector Shield
30	1915212	1	/P	Deflector Shield Rod
31	1185304	2	/P	E-Ring, 5/16"
32	1915205	1	/P	Belt Cover
33	1915290	6	/P	Push-in Fastener
34	1915238001	1		Engine Cover Support
35	1916668	1		Engine Cover w/decals Model HWT-5E
36	1916745	1		Engine Cover w/decals Model HWT-4
37	1915320	4	/P	Spacer
39	9677	1	S	Set Screw
40	94018	2	S	Washer
41	9218	2	S	Clip
42	9719	1	S	Socket Hd Capscrew, 1/4-20 x 1
43	1185814	1	S	Toplock Nut, 1/4-20

25AE110-190 HWT-5E Trimmer/Mower (2000)
Handlebar Assembly

Page 5 of 12

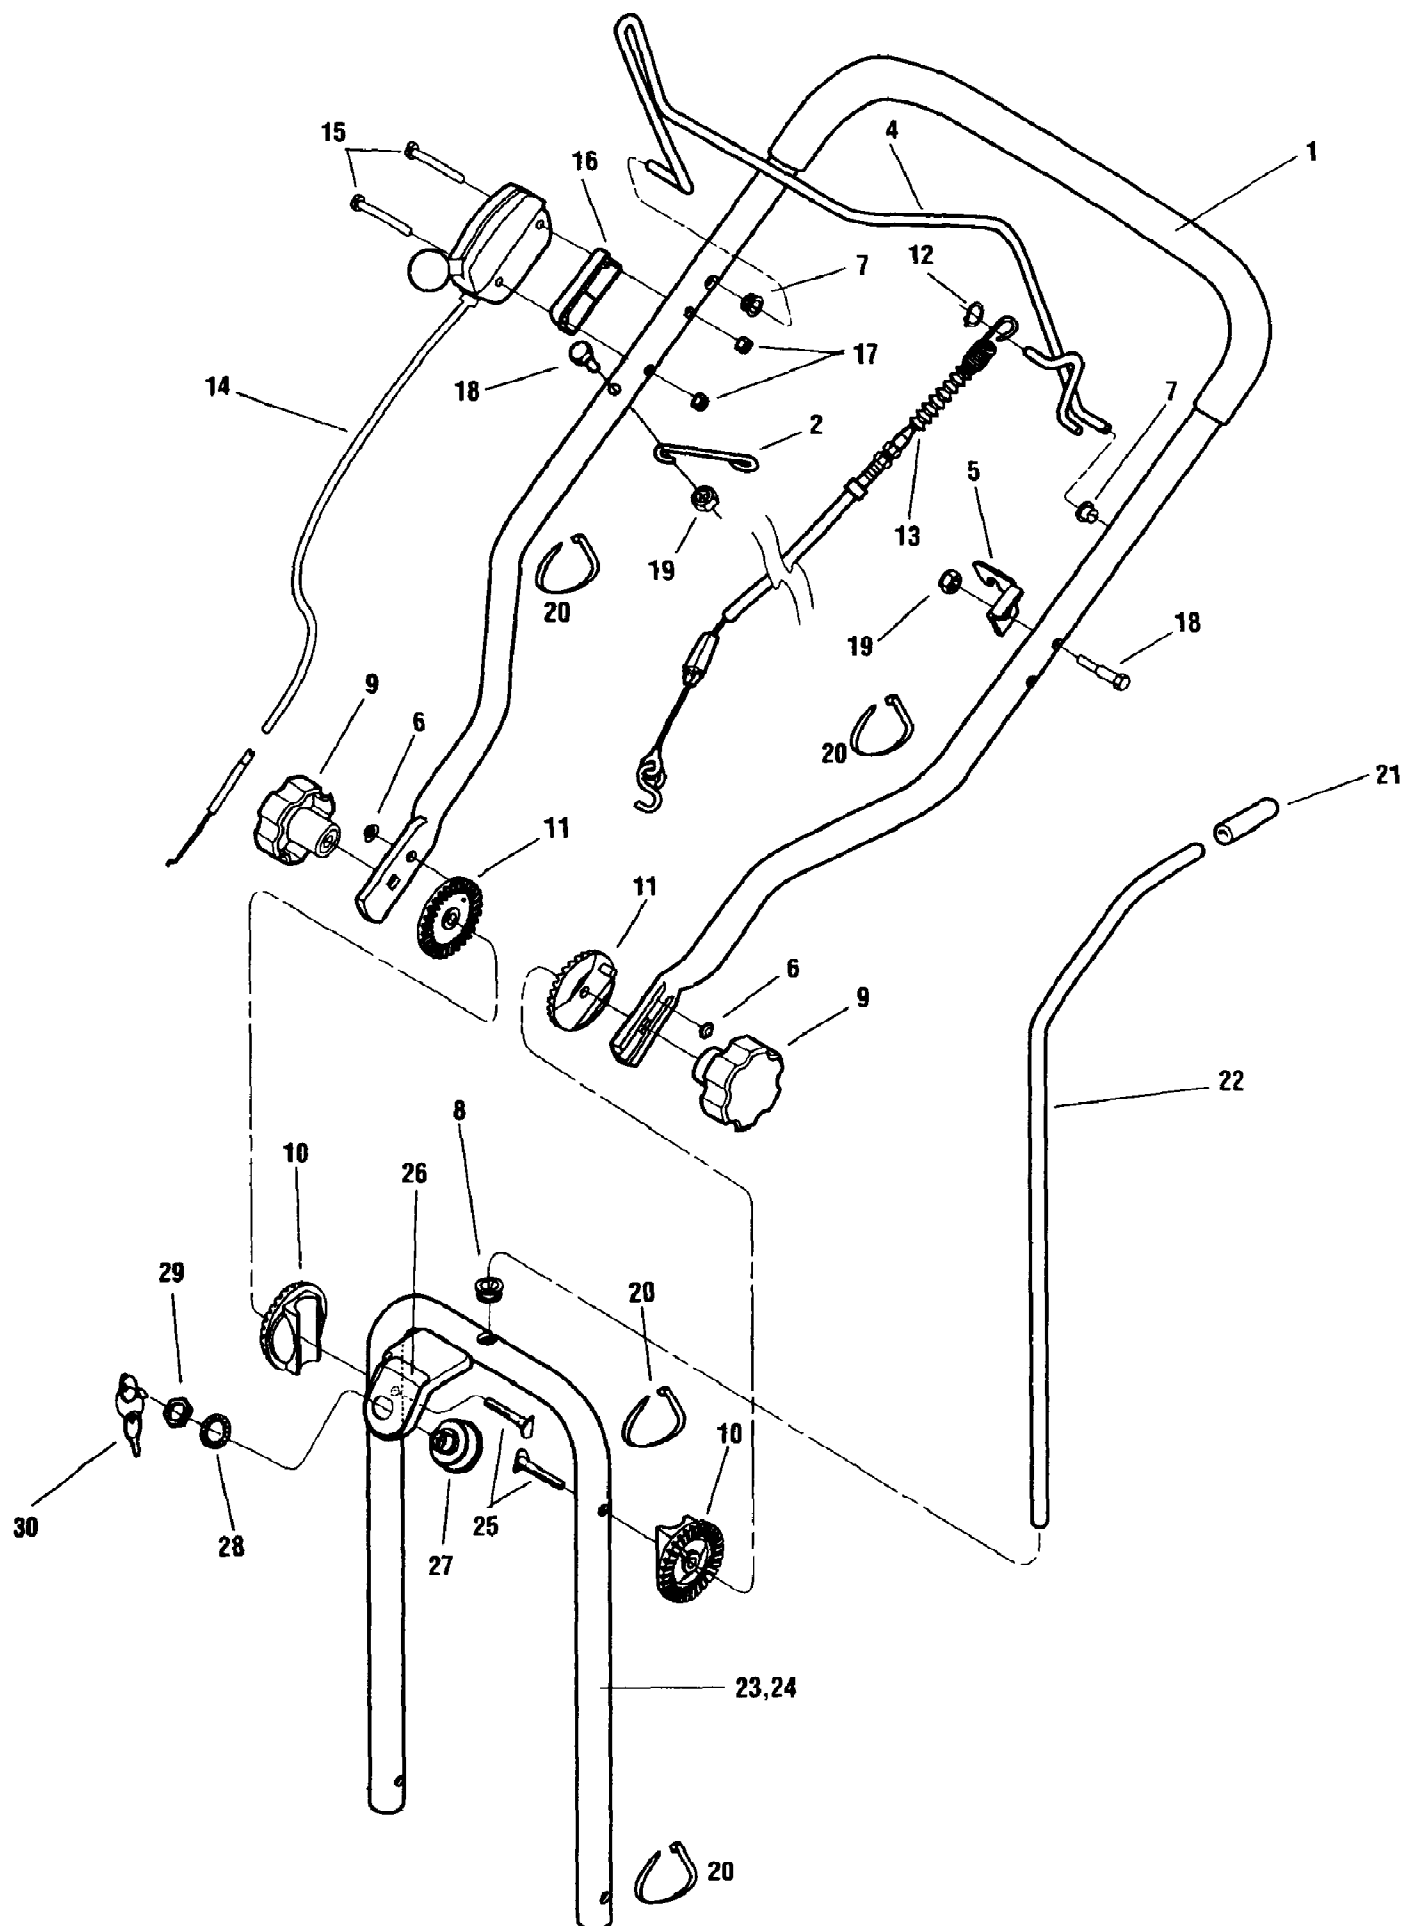


25AE110-190 HWT-5E Trimmer/Mower (2000)
Handlebar Assembly

Page 6 of 12

Ref #	Part Number	Qty	S/P/F	Description
1	1904422	1	/P	Upper Handlebar w/sleeve
2	1915309	1		Rope Guide Model HWT-5E
4	1917175001	1	/P	Bail
5	1749977001	1	/P	Cable Bracket
6	1765879	2	/P	Push-on Retainer
7	1908677	2	/P	Nyliner Bushing
8	1761046	1	/P	Nyliner Bushing
9	1909250	2		Adjusting Knob
10	1903403	2	/P	Inside Hndlbr. Adj. Quadrant
11	1903404	2	S	Outside Hndlbr Adj. Quadrant
12	1908673	1	/P	Retaining Ring, external .312" I.D.
13	1910852	1	S	Control Cable
14	1910833	1	/P	Throttle Cable
15	1908793	2	/P	Screw, 10-24 x 2
16	1909291	1		Spacer
17	1983039	2	/P	Lock Nut, 10-24
18	1983658	2		Hex Hd Screw, 1/4-20 x 1-1/8
19	1185814	2	S	Top Lock Nut, 1/4-20
20	1763682	4	/P	Cable Tie
21	1718534	1		Steering Rod Grip
22	1915279001	1		Upper Steering Rod
23	1910809001	1	/P	Lower Handlebar Model HWT-4
24	1904508	1		Lower Handlebar Model HWT-5E
25	1731025	2	/P	Curved Hd Bolt, 5/16-18 x 2
26	1904406	1		Decal-Keyswitch Model HWT-5E
27	1900455	1	S	Ignition Switch Model HWT-5E
28	1187950	1	S	Lockwasher, 5/8 Model HWT-5E
29	92018	1	S	Hex Nut, 5/8-32 Model HWT-5E
30	96520	1	S	Ignition Key Model HWT-5E

25AE110-190 HWT-5E Trimmer/Mower (2000)
Lower Steering Assembly

Page 7 of 12

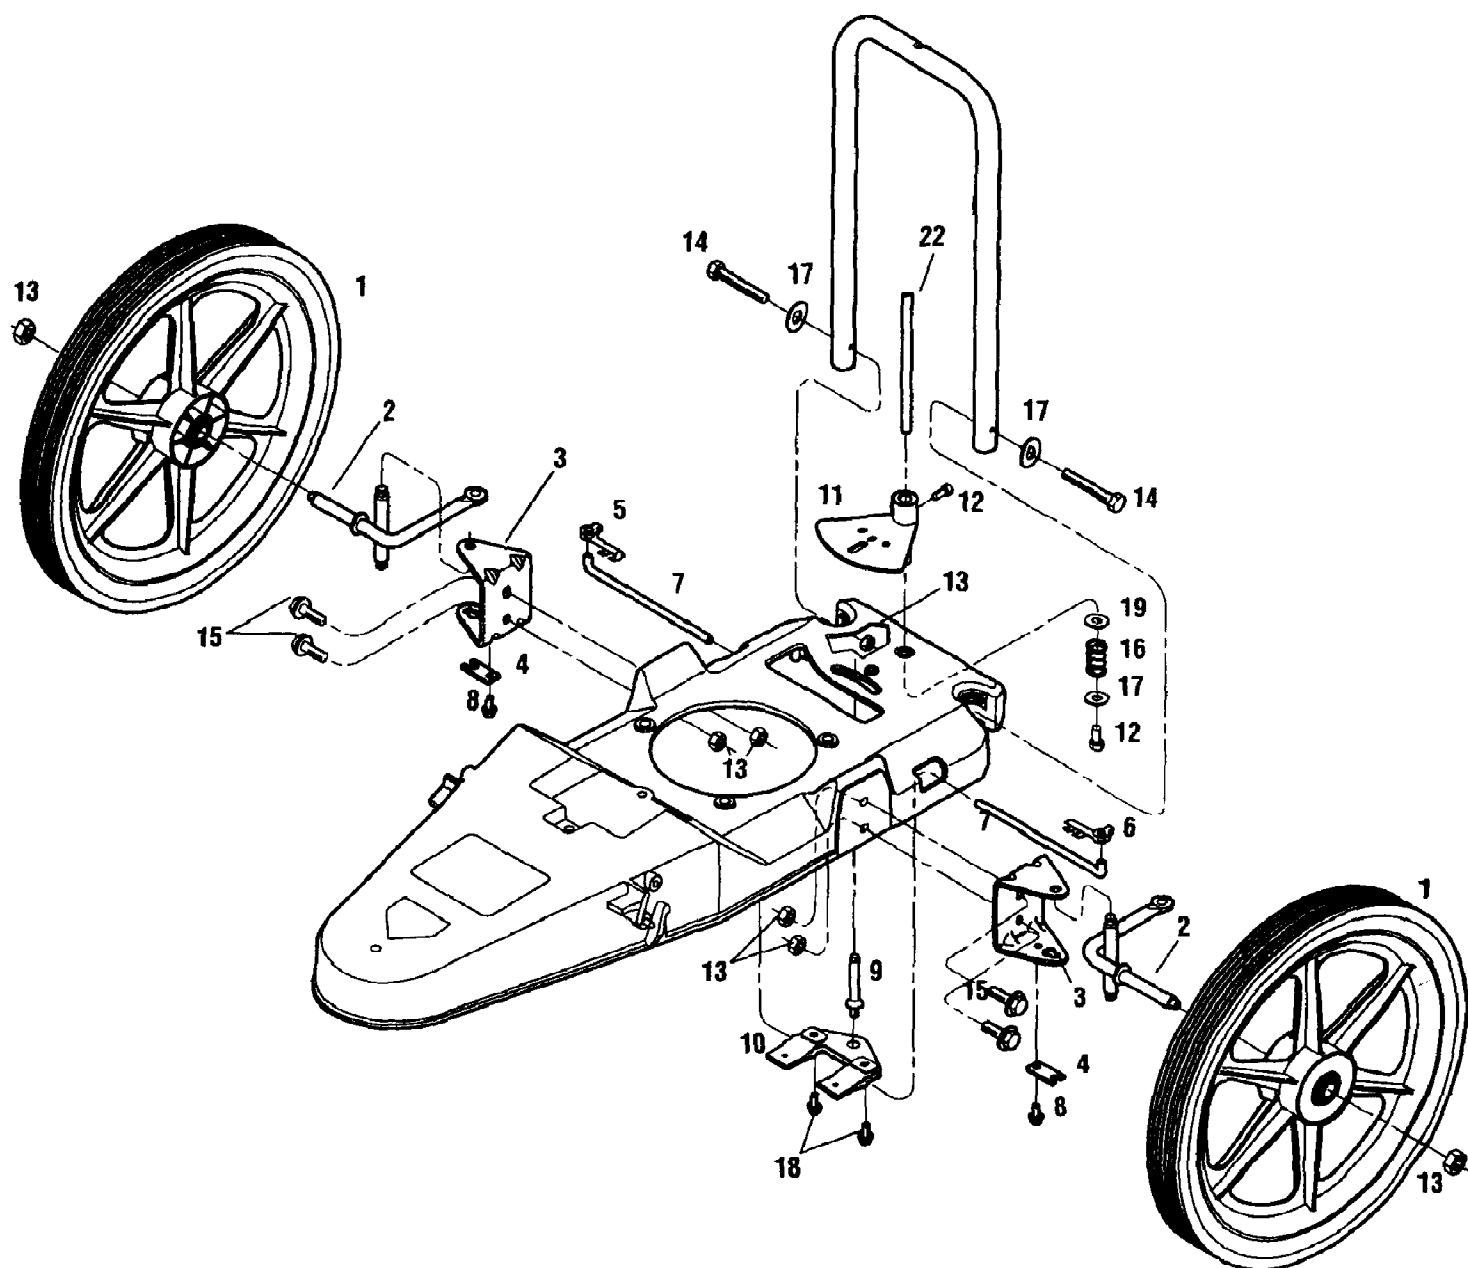


25AE110-190 HWT-5E Trimmer/Mower (2000)
Lower Steering Assembly

Page 8 of 12

Ref #	Part Number	Qty	S/P/F	Description
1	1910823	2	S	Wheel - 6 spoke
2	1910820001	2	/P	Wheel Arm Weldment
3	1915213001	2		Wheel Mounting Bracket
4	1915218001	2		Wheel Arm Retainer
5	1765550	1	/P	Rod End Clip/Right Side
6	1765551	1	/P	Rod End Clip/Left Side
7	1910819	2		Steering Link
8	1909301	2	/P	Hex Flange Screw, 1/4-20 x 5/8
9	1915802	1		Shoulder Stud
10	1915803001	1		Clamp Link
11	1910811001	2		Trim Plate
12	1111696	2		Screw, 5/16-24 x 1/2
13	1744708	8	/P	Hex Lock Nut, 5/16-18
14	1111606	2		Hex Head Bolt, 5/16-18 x 2
15	1186331	4	S	Hex Flange Screw, 5/16-18 x 1
16	1725279	1		Spring
17	9901	3		Washer, 5/16 ID
18	1186328	2	S	Hex Flange Screw, 5/16-18 x 5/8
19	1107385	1	S	Washer
22	1915279001	1		Upper Steering Rod See "Handlebar Assembly" illustration and part lists.

25AE110-190 HWT-5E Trimmer/Mower (2000)
Spindle Plate Assembly

Page 9 of 12

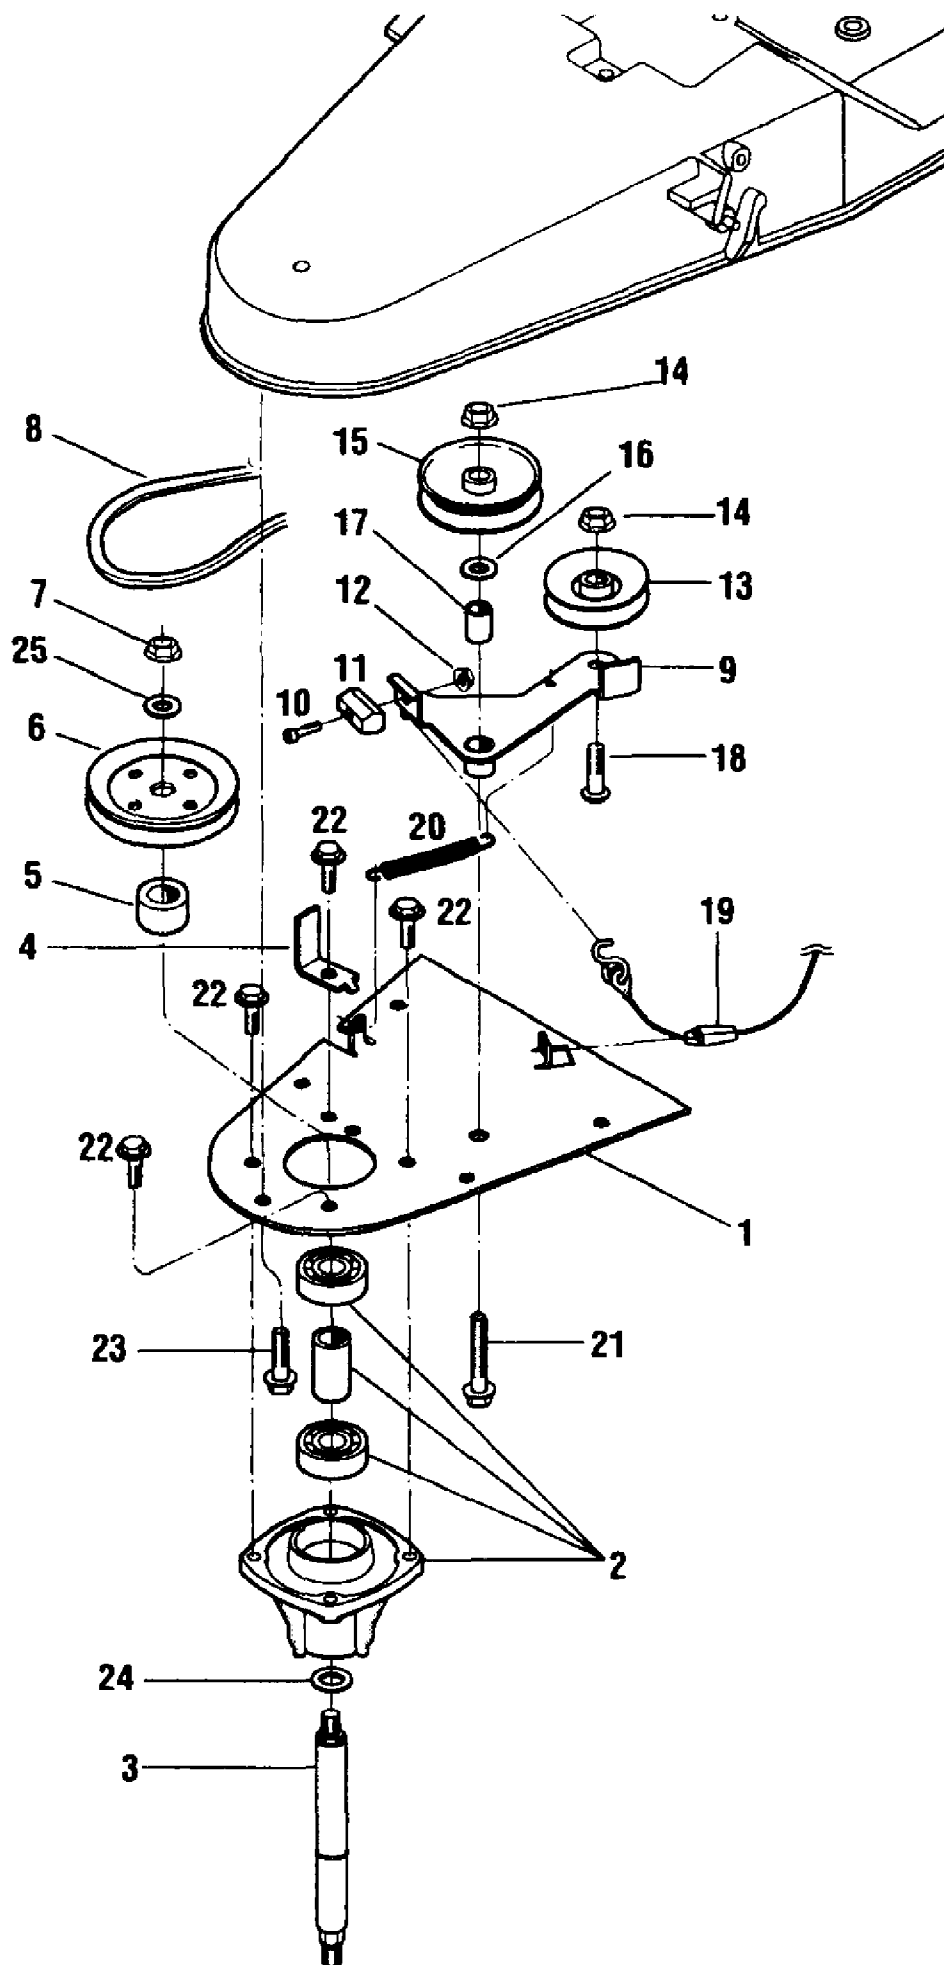


25AE110-190 HWT-5E Trimmer/Mower (2000)
Spindle Plate Assembly

Page 10 of 12

Ref #	Part Number	Qty	S/P/F	Description
1	1910850001	1	/P	Spindle Mounting Plate
2	1910839	1	S	Spindle Assembly
3	1915477	1	/P	Spindle Shaft Assembly Incl. Ref. 25
4	1910860001	1	/P	Belt Guide
5	1910856	1	/P	Spindle Spacer
6	1910842	1		Spindle Pulley
7	1904308	1	S	Hex Flange Nut, 1/2-13
8	1915555	1		V-Belt
9	1904479	1	/P	Idler Arm/Brake Shoe Assembly
10	1910859	1	/P	Socket Hd Capscrew, 10-24 x 3/4
11	1910847	1	/P	Brake Shoe
12	1983039	1	/P	Hex Lock Nut, 10-24
13	1727978	1	/P	V-Groove Idler Pulley
14	1186393	2	/P	Hex Flange Nut, 3/8-16
15	1910855	1	/P	Flat Idler Pulley
16	1915261	1	S	Washer, .88 x .382 x .275
17	1910854	1	/P	Idler Arm Spacer
18	1910857	1		Button Head Screw, 3/8-16 x 1-1/2
19	1910852	1	S	Control Cable Also Ref. 13, Pg. 4
20	1910849	1	/P	Idler Tension Spring
21	1910858	1	/P	Hex Flange Screw , 3/8 x 16 x 2-1/4
22	1909304	4	S	Hex Flange Screw, 5/16-18 x 3/4
23	90063	5	S	Hex Flange Screw, 5/16-18 x 1
24	9953	1	S	Hardened Shim, 3/4 ID x 1.022 OD x .060 thick
25	9928	1	S	Belleville Washer, 5/8

25AE110-190 HWT-5E Trimmer/Mower (2000)
Trim Head Assembly

Page 11 of 12

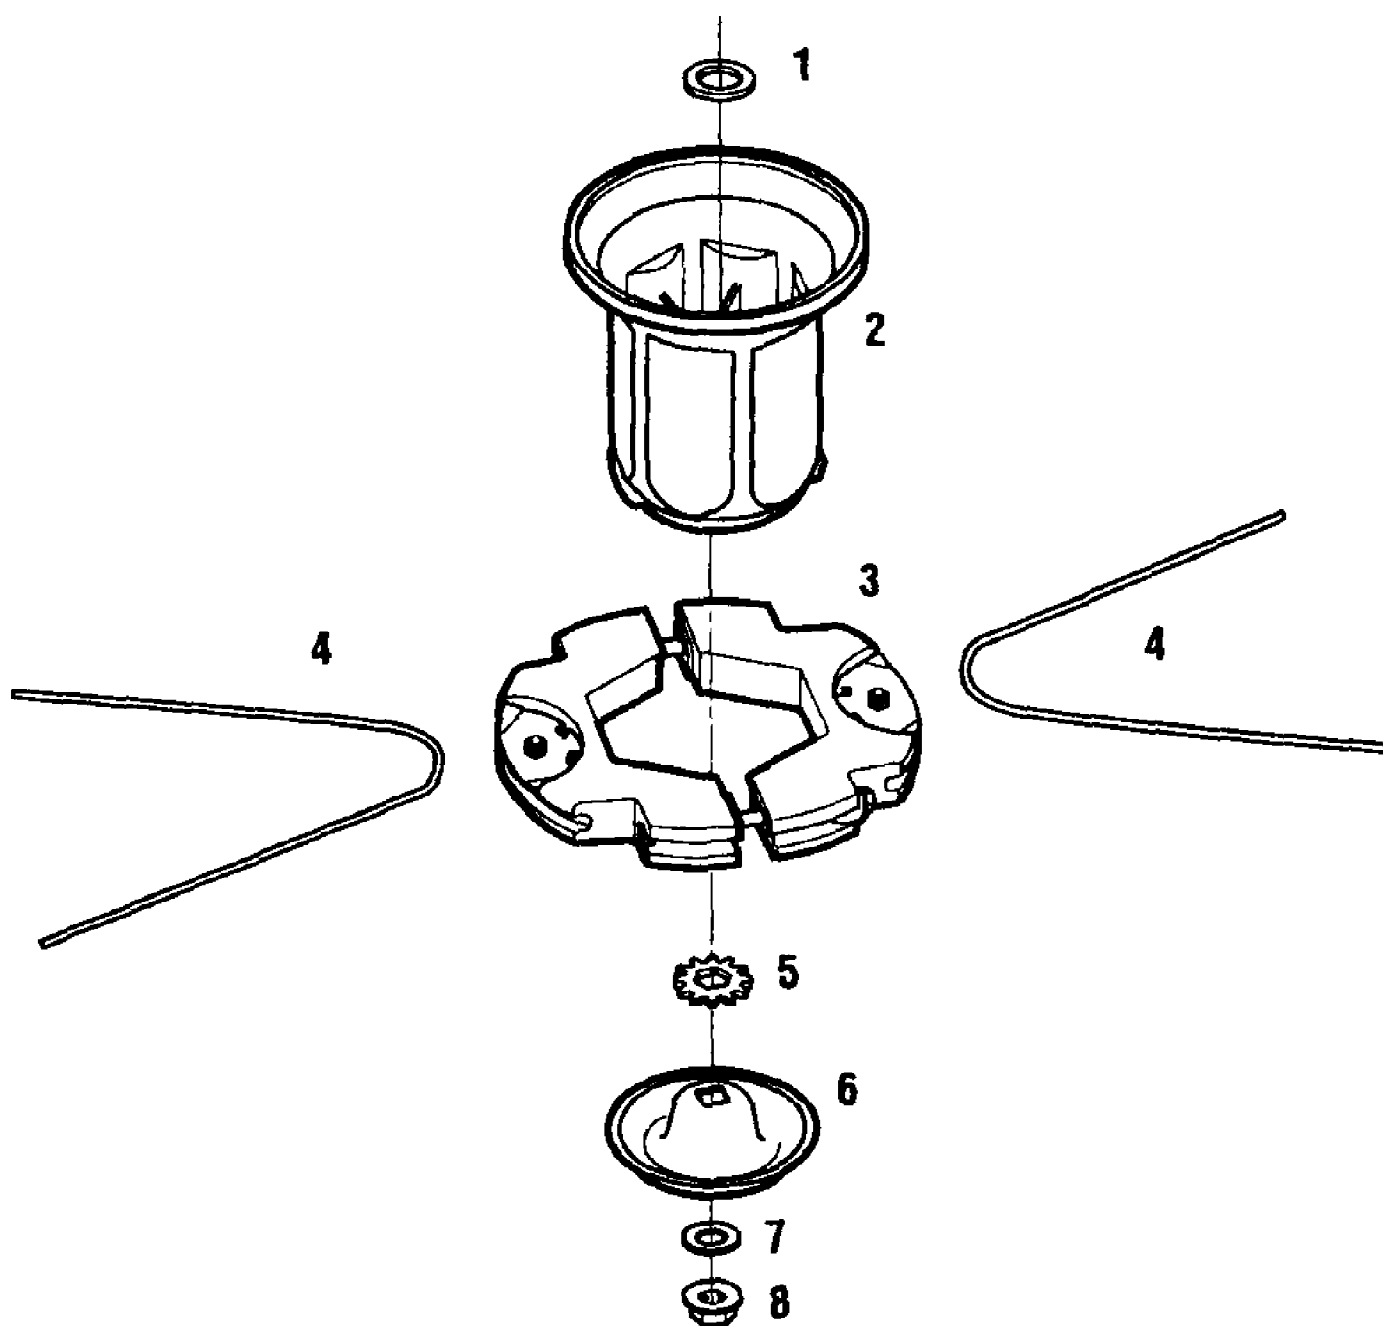

25AE110-190 HWT-5E Trimmer/Mower (2000)
Trim Head Assembly

Page 12 of 12

Ref #	Part Number	Qty	S/P/F	Description
1	1910863	1		Shoulder Washer
2	1910861	1		Spindle Head
3	1915857	1	S	Trimmer Head
4		1		Trimmer String See "Accessories And Kits" illustration and parts list, Ref. 1 and 2.
5	1910862	1	/P	Hex Spline Washer
6	1915220001	1	/P	Wear Cup
7	1915239	1	/P	Washer
8	1904308	1	S	Hex Flange Nut, 1/2-13