

31AH6WFG790 (2008)
Auger & Auger Housing


Page 2 of 34

Ref #	Part Number	Qty	S/P/F	Description
1	618-0123A	1	S	Housing Assembly, RH
2	618-0124A	1	S	Housing Assembly, LH
3	710-0642	1	/P	Hex Washer Screw, 1/4-20 x .750
4	711-04283	1		Auger Axle, 28"
5	714-0161	1	S	Hi-Pro Key
6	715-04021	1		Dowel Pin, .25 OD x 1.25 LG
7	717-04126	1	S	Worm Shaft, .75 OD
8	717-04449	1	S	Worm Gear 2OT, 24"
8	717-04449	1	S	Worm Gear 2OT, 26"
8	717-0528A	1	S	Worm Gear 2OT, 28"& 30"
9	718-04071	1		Thrust Collar, .756 ID x .600
10	721-0325	1		Plug, 1/4 x .437
11	721-0327	1		Oil Seal, .75 x 1.131 x .188
12	736-0351	1	S	Flat Washer, .760 ID x 1.50 ID
13	736-3084	1	/P	Flat Washer, .51 x 1.12 x .06
14	741-0662	1		Flng. Bearing, .75 ID x 1.00 OD x .59
15	741-0663	1		Flange Bearing, .50 ID x .75 OD x .59
16	618-04173A	1	S	Gearbox Assembly, 28"
17	684-04107	1		Spiral Assembly, LH
18	684-04108	1		Spiral Assembly, RH
19	684-04268	1		Auger Housing Assembly, 28"
20	714-04040	1		Bow-Tie Cotter Pin
21	731-04870	1		Spacer, 1.2500 x .75 ID x 1.00 LG
22	731-04871	1		Spacer, 1.250 x .75 ID x 3/16 LG Spacer used on 30" augers only
23	736-0188	1	/P	Flat Washer, .76 x 1.49 x .06
24	738-04124A	1	/P	Shear Pin, .25 x 1.50
25	741-0493A	1	/P	Flange Bushing, .800 ID x .910 OD
26	790-00087A	1		Bearing Housing, 1"
27	790-00118	1		Shave Plate, 28"
28	731-2643	1	S	Chute Cleanout Tool
29	731-2635	1		Cleanout Tool Mount
30	684-04057A	1	S	Impeller Assembly, 12"
31	710-0347	1	/P	Hex Screw, 3/8 -16 x 1.75
32	710-04484	1		Hex Washer Screw, 5/16-18 x .750
33	710-0451	1	/P	Carriage Bolt, 5/16-18 x .750
34	710-0703	1	/P	Carriage Screw, 1/4-20 x .75
35	712-04063	1	/P	Flange Lock Nut, 5/16-18
36	712-04064	1	/P	Flange Lock Nut, 1/4-20
37	712-04065	1	/P	Flange Lock Nut, 3/8 -16
38	725-0157	1	/P	Cable Tie, 3/16 x .05 x 7.4
39	726-04012	1	S	Push Nut, .25 Dia.
40	731-04705C	1	/P	Chute Adapter, 5"
41	736-0242	1	/P	Bell Washer, .340 x .872 x .060
42	738-0143	1	/P	Shoulder Bolt, .496 x .336 x 3/8 -16
43	738-0281	1	S	Shoulder Screw, .625 x .17 x 3/8 -16
44	741-0245	1	S	Hex Flange Bearing, .75 ID
45	741-0309	1	S	Ball Bearing, .75 ID x 1.85 OD
46	756-0981B	1	S	Idler Pulley, .275 OD
47	790-00075	1		Bearing Housing, 1.85 ID
48	790-00080A	1	S	Auger Idler Bracket
49	736-0174	1	/P	Wave Washer, .625 x .885 x .015

31AH6WFG790 (2008)
Auger & Auger Housing

Page 3 of 34

Ref #	Part Number	Qty	S/P/F	Description
50	746-04230	1		Auger Drive Cable
51	629-0071	1	S	Extension Cord (Electric Start Only)
52	710-0451	1	/P	Carriage Bolt, 5/16-18 x .750
53	712-04063	1	/P	Flange Lock Nut, 5/16-18
54	784-5580	1		Skid Shoe
55	731-06439	1		Polymer Skid Shoe
56	736-0159	1	S	Flat Washer, .349 x .879 x .063
57	731-05984A	1	/P	Deluxe Polymer Skid Shoe
58	790-00091	1		Deluxe Skid Shoe
59	732-04460	1		Extension Spring

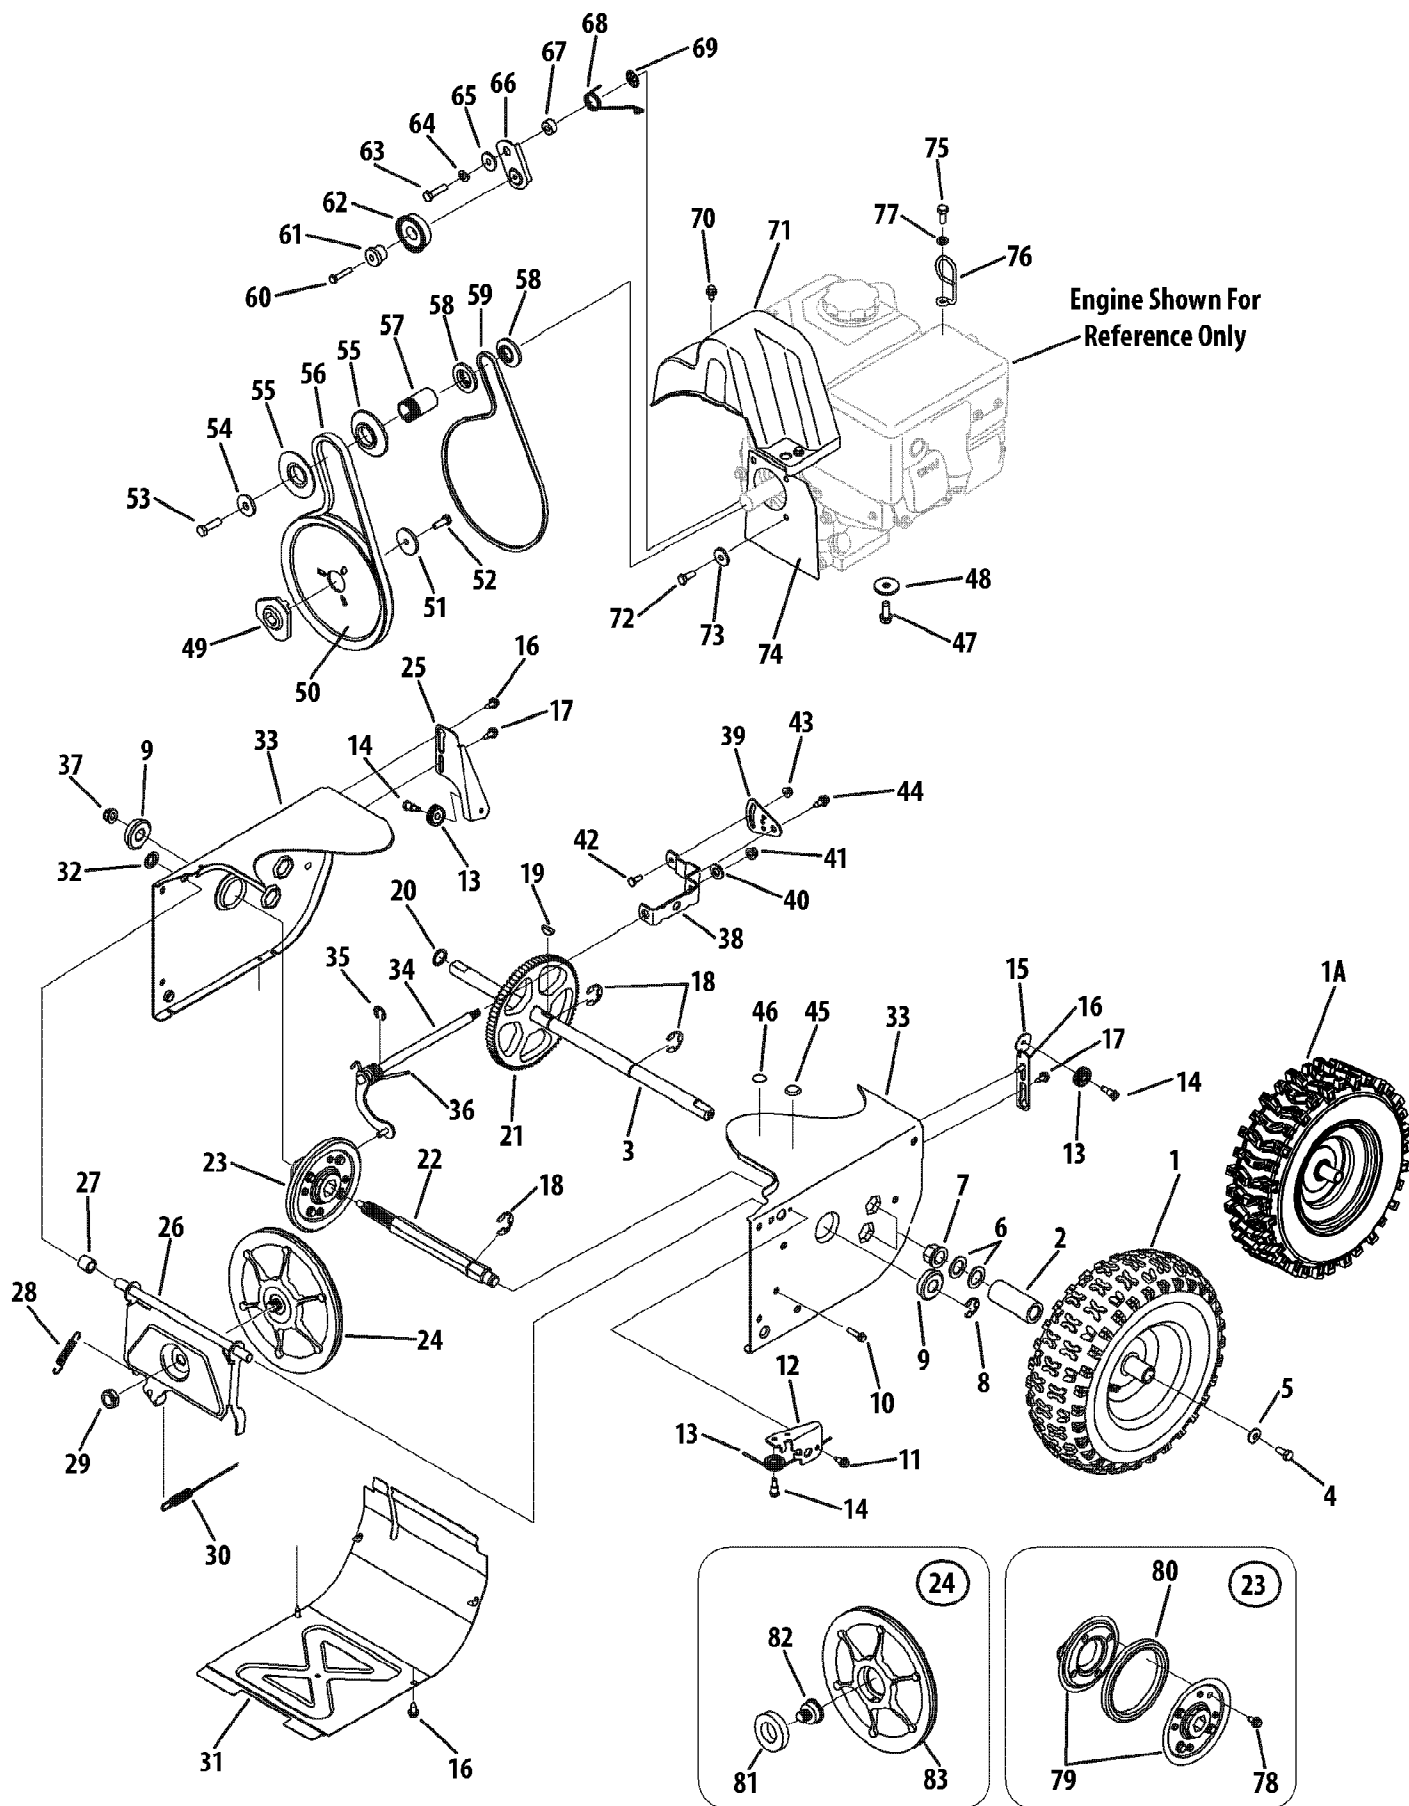

31AH6WFG790 (2008)
Drive System



Page 5 of 34

Ref #	Part Number	Qty	S/P/F	Description
1	634-04142A	1	/P	Snow Hog Wheel, 15 x 5
2	731-04873	1		Spacer, 1.25 OD x .75 ID x 3.00
3	738-04168	1	S	Axle, .75 x 22
4	710-0627	1	/P	Hex Lock Screw, 5/16-24 x .750
5	736-0242	1	/P	Bell Washer, .340 x .872 x .060
6	736-0287	1	S	Flat Washer, .793 x 1.24 x .06
7	741-0245	1	S	Hex Flange Bearing, .75 ID
8	716-0231	1	S	E-Ring, .750
9	741-0563	1	S	Ball Bearing, 17 x 40 x 12
10	710-0788	1	/P	Hex Washer Screw, 1/4-20 x 1.000
11	710-1652	1	/P	Hex Washer Screw, 1/4-20 x .625
12	790-00096	1	S	Auger Cable Guide Bracket
13	756-0625	1		Cable Roller
14	738-0924A	1	/P	Shoulder Screw, .340 x .335 x 1/4-28
15	790-00206A	1	S	Clutch Cable Guide Bracket
16	710-1652	1	/P	Hex Washer Screw, 1/4-20 x .625
17	738-04184A	1		Shoulder Screw, .368 x .113 x 1/4-20
18	716-0136	1		E-Ring, .875
19	714-0126	1	S	Hi-Pro Key, 3/16 x 3/4
20	736-04161	1		Flat Washer, .75 x 1.00 x .06
21	717-04230	1	S	Gear, 80 Tooth
22	717-04209A	1	S	Hex Shaft, .8125 7 Tooth
23	684-04153	1		Friction Wheel Assembly, 5.5 OD
23	618-0063A	1		Bearing Assembly (Not Shown)
24	656-04025A	1	/P	Friction Disc Assembly
25	790-00207B	1		Drive Cable Guide Bracket
26	684-04154	1	S	Friction Wheel Support Bracket
27	748-0190	1	/P	Spacer, .508 ID x .750 OD x .68
28	732-0264	1	S	Extension Spring, .380 OD x 2.500
29	712-0417A	1	/P	Flange Nut, 5/8 -18
30	746-04229	1		Wheel Drive Cable
31	790-00316	1		Frame Cover
32	726-0221	1	/P	Speed Nut, .500
33	790-00180A	1		Wheel Drive Frame
34	684-04156A	1		Rod Shift Assembly
35	716-0104	1	S	E-Ring
36	732-04311	1		Torsion Spring, .750 ID x .968
37	712-04065	1	/P	Flange Lock Nut, 3/8-16
38	790-00218A	1	S	Speed Selector Shift Bracket
39	790-00217A	1	S	Speed Selector Pivot Bracket
40	736-3015	1	S	Flat Washer, .469 x .875 x .105
41	710-04063	1	/P	Flange Lock Nut, 5/16-18
42	710-0751	1	/P	Hex Screw, 1/4-20 x .620
43	712-04064	1	/P	Flange Lock Nut, 1/4-20
44	738-04184A	1		Shoulder Screw, .368 x .113 x 1/4-20
45	735-04099	1		Plug, 3/8 ID
46	735-04100	1		Plug, 1/2 ID
47	710-0654A	1	/P	Hex Washer Screw, 3/8-16 x 1.000
48	736-0320	1	/P	Flat Wsh., .38 x 1.38 x .125 (Tec/B&S)
49	748-04053A	1	/P	Pulley Adapter
50	756-04109	1		Auger Belt Pulley
51	736-0505	1		Flat Washer, .34 x 1.50 x .150
52	710-1245B	1		Hex Screw, 5/16-24 x .875

31AH6WFG790 (2008)
Drive System

Page 6 of 34

Ref #	Part Number	Qty	S/P/F	Description
53	710-0191	1	/P	Hex Screw, 3/8 -24 x 1.25
54	736-0247	1	/P	Flat Washer, .406 x 1.25 x .157
55	756-04113	1		Pulley Half
56	754-04050	1	S	Belt
57	750-04303	1		Spacer, .875 ID x 1.185 OD
58	756-04252	1		Pulley Half
59	754-0367	1	S	V-Belt
60	710-0809	1		Hex Washer Screw, 1/4-20 x 1.250
61	750-04571	1		Shoulder Spacer, .260 x .785 x .538
62	684-04169	1		Idler Puller Assembly
63	710-0672	1	/P	Hex Screw, 5/16-24 x 1.25
64	736-0119	1	S	Lock Washer, 5/16
65	748-04112B	1	/P	Shlder. Sprc., .3175 ID x .500 x .0975
66	790-00208C	1	/P	Wheel Drive Idler Bracket
67	750-04477	1		Spacer, .340 x .750 x .360
68	732-04308A	1	/P	Torsion Spring, .850 ID x .333
69	726-04012	1	S	Push-on Nut, .25
70	710-1652	1	/P	Hex Washer Screw, 1/4-20 x .625
71	731-05353	1		Belt Cover
71	731-04792A	1	/P	Belt Cover
72	710-0627	1	/P	Hex Lock Screw, 5/16-24 x .750
73	748-0234	1	/P	Shoulder Spacer
74	790-00289A	1	S	Cover Plate
75	710-04022	1		Hex Screw, 1.25 x 20 (ZS Engine)
76	732-0705	1		Cable Control Wire (ZS)
77	736-0264	1	S	Flat Washer, .330 x .630 x .0635 (ZS)
78	710-0896	1	/P	Hex Washer Screw, 1/4-14 x .625
79	790-00174	1		Friction Wheel Plate
80	735-04054	1	S	Friction Wheel
81	738-04164A	1		Friction Disc Bearing Pin
82	741-04098	1		Ball Bearing, 30 x 55 x 13
83	756-04177	1	S	Friction Wheel Disc, .060 x 8.0

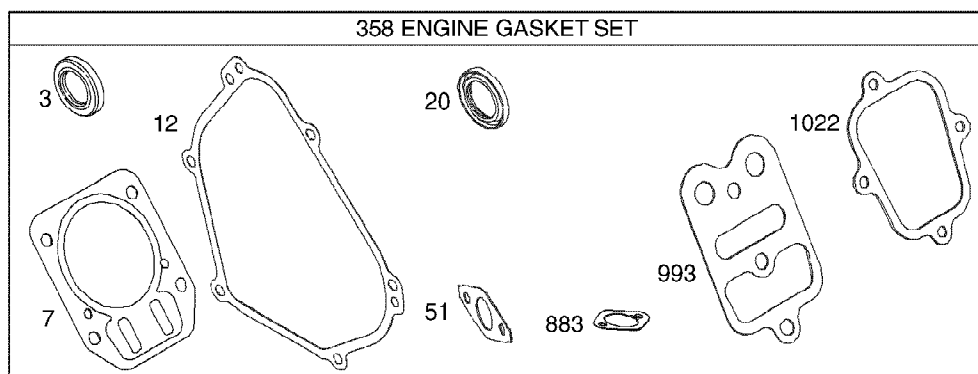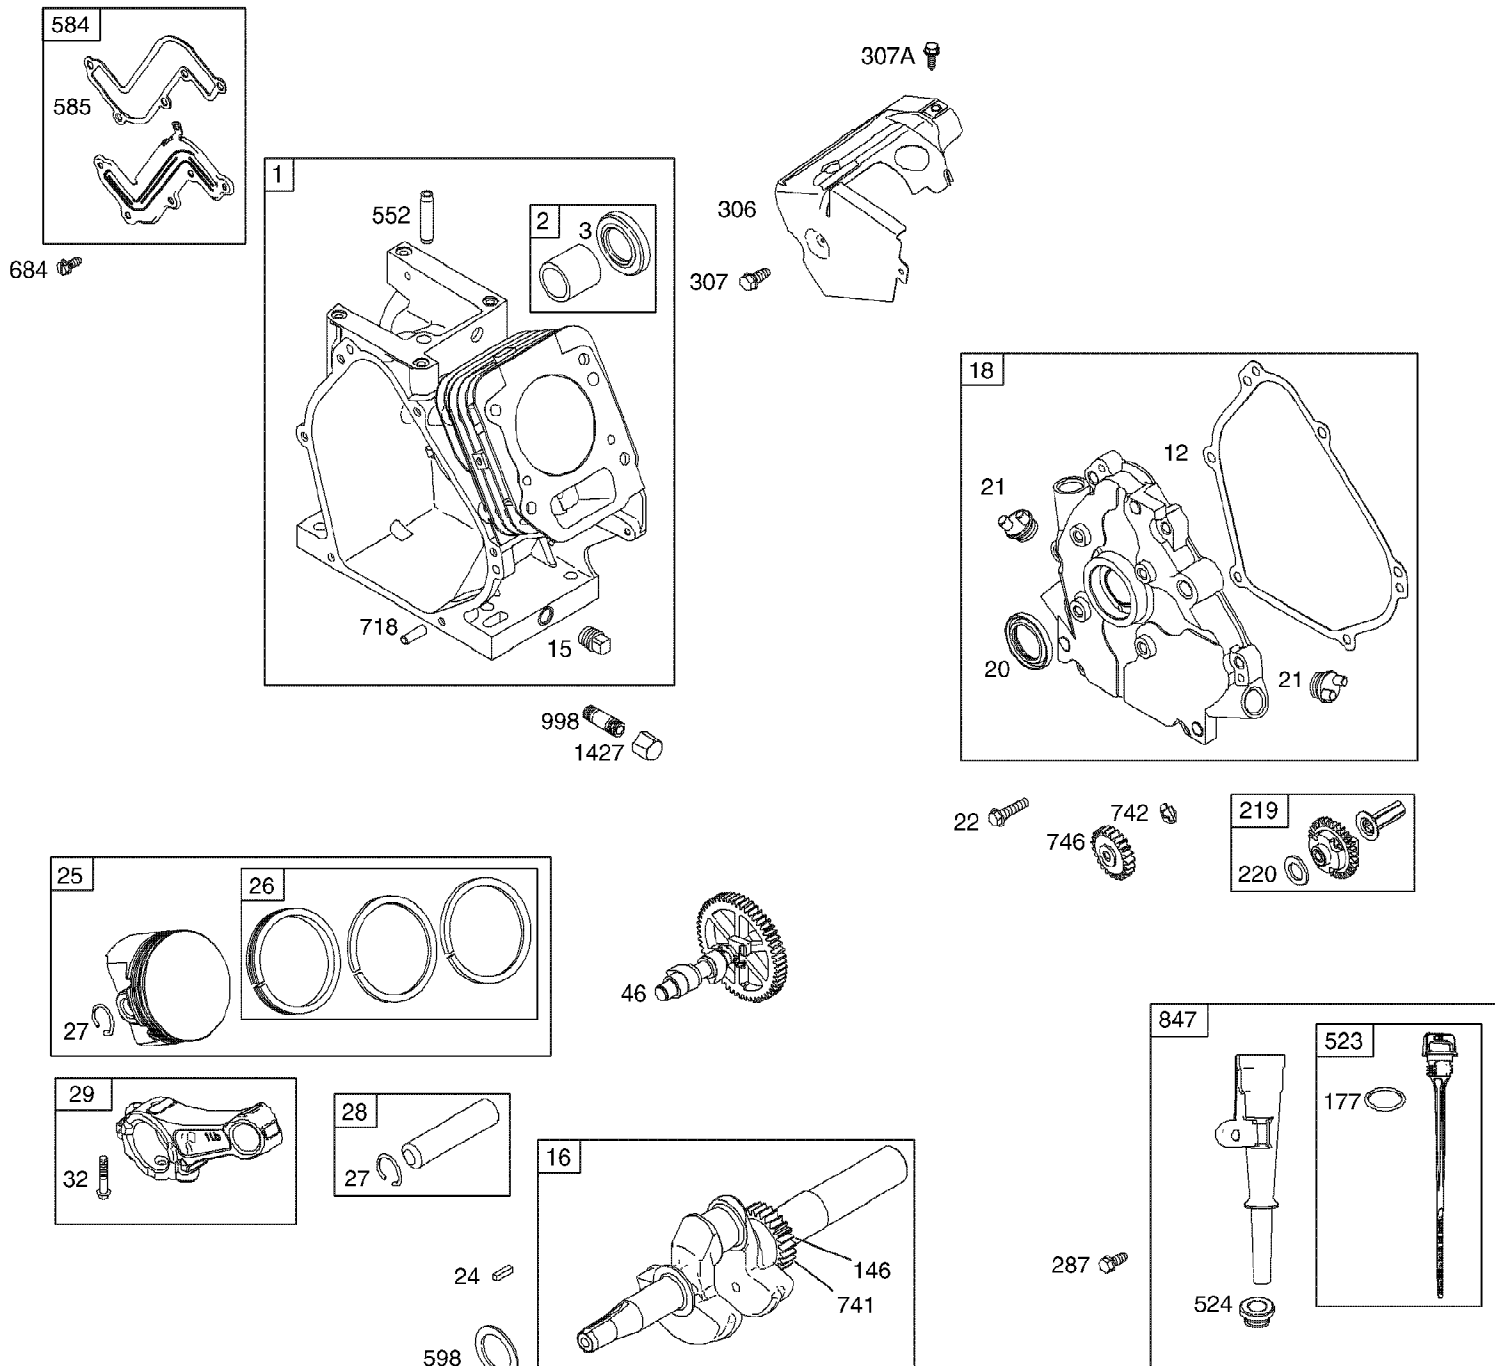

31AH6WFG790 (2008)
Engine Assembly 1

Page 8 of 34

Ref #	Part Number	Qty	S/P/F	Description
1	BS-794188	1	/P	Cylinder Assembly
2	BS-399269	1	/P	Kit-Bushing/Seal (Magneto Side)
3	BS-299819	1		Seal-Oil (Magneto Side) Incl. in Ref No. 358
5	BS-791720	1		Head-Cylinder
7	BS-791716	1		Gasket-Cylinder Head Incl. in Ref No. 358 & 1095
11	BS-695745	1		Tube-Breather
12	BS-699485	1		Gasket-Crankcase Incl. in Ref No. 358
13	BS-699482	1		Screw (Cylinder Head)
15	BS-691686	1	/P	Plug-Oil Drain
16	BS-795116	1		Crankshaft
18	BS-699696	1		Cover-Crankcase
20	BS-692550	1		Seal-Oil (PTO Side) Incl. in Ref No. 358
21	BS-281658S	1	/P	Cap-Oil Fill
22	BS-699478	1		Screw (Crankcase Cover/Sump)
23	BS-699516	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-791786	1		Piston Assembly (Standard)
25	BS-791791	1		Piston Assembly (.020" Oversize)
26	BS-791787	1		Ring Set (Standard)
26	BS-791792	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-690229	1		Pin-Piston
29	BS-791783	1		Rod-Connecting
32	BS-791784	1		Screw (Connecting Rod)
33	BS-499642	1		Valve-Exhaust
34	BS-499641	1	S	Valve-Intake
35	BS-691304	1		Spring-Valve (Intake)
36	BS-691304	1		Spring-Valve (Exhaust)
40	BS-692194	1		Retainer-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-693404	1		Camshaft
48	N/A	1		Short Block
51	BS-791718	1		Gasket-Intake Incl. in Ref No. 358, 121 & 1095
55	BS-696710	1		Housing-Rewind Starter
58	BS-693389	1		Rope-Starter
60	BS-699334	1		Grip-Starter Rope
65	BS-690937	1		Screw (Rewind Starter) (SAE)
65A	BS-699228	1		Screw (Rewind Starter) (Metric)
95	BS-691636	1	/P	Screw (Throttle Valve)
97	BS-690024	1		Shaft-Throttle
98	BS-398185	1		Kit-Idle Speed Incl. in Ref No. 121
104	BS-691242	1	/P	Pin-Float Hinge Incl. in Ref No. 121
108	BS-695807	1		Valve-Choke
109	BS-791954	1		Shaft-Choke
117	BS-691428	1		Jet-Main (Standard)
118	BS-690048	1		Jet-Main (High Altitude)
121	BS-792006	1		Kit-Carburetor Overhaul Incl. Ref No. 51, 98, 104, 127, 137 & 633
122	BS-791717	1		Spacer-Carburetor

31AH6WFG790 (2008)
Engine Assembly 1

Page 9 of 34

Ref #	Part Number	Qty	S/P/F	Description
125	BS-794588	1		Carburetor
127	BS-691739	1		Plug-Welch Incl. in Ref No. 121
130	BS-691181	1		Valve-Throttle
133	BS-398187	1		Float-Carburetor
134	BS-398188	1	/P	Kit-Needle/Seat
137	BS-693981	1	/P	Gasket-Float Bowl Incl. in Ref No. 121
146	BS-690979	1	/P	Key-Timing
155	BS-698214	1		Plate-Cylinder Head
177	BS-795015	1		Seal-O Ring (Dipstick)
186	BS-692317	1	/P	Connector-Hose (Carburetor)
187	BS-791874	1		Line-Fuel (Formed)
188	BS-699479	1		Screw (Control Bracket)
190	BS-699220	1		Screw (Fuel Tank)
192	BS-694543	1	/P	Ball-Rocker Arm
209	BS-692571	1		Spring-Governor
219	BS-693578	1		Gear-Governor
220	BS-691724	1		Washer (Governor Gear)
222	BS-793100	1		Bracket-Control
227	BS-794367	1		Lever-Governor Control
238	BS-691300	1	/P	Cap-Valve
276	BS-271716	1		Washer-Sealing
281	BS-793122	1		Panel-Control
300	BS-794728	1		Muffler
304	BS-699598	1		Housing-Blower
305	BS-699480	1	S	Screw (Blower Housing)
306	BS-695710	1		Shield-Cylinder
307	BS-699483	1		Screw (Cylinder Shield) (M4)
307A	BS-699234	1		Screw (Cylinder Shield) (M5)
307B	BS-790557	1		Screw (Cylinder Shield) (M4)
309	BS-793667	1	/P	Motor-Starter
318	BS-690370	1		Screw (Mounting Bracket)
332	BS-792723	1		Nut (Flywheel)
333	BS-695711	1	S	Armature-Magneto
334	BS-699477	1		Screw (Magneto Armature)
337	BS-491055	1		Plug-Spark
347	BS-698338	1	S	Switch-Rocker
356	BS-695630	1		Wire-Stop
358	BS-791797	1		Gasket Set-Engine Incl. Ref No. 3, 7, 12, 20, 51, 883 & 1009
363	BS-19203	1		Puller-Flywheel
365	BS-699484	1		Screw (Carburetor)
383	BS-19374S	1		Wrench-Spark Plug
455	BS-692591	1		Cup-Flywheel
456	BS-692299	1		Plate-Pawl Friction
459	BS-281505S	1	/P	Pawl-Ratchet
472	BS-791948	1		Knob-Choke Shaft
474	BS-793118	1		Alternator
493	BS-695744	1		Bracket-Mounting
505	BS-691251	1		Nut (Governor Control Lever)
523	BS-790546	1		Dipstick
524	BS-281370S	1	/P	Seal-Dipstick Tube
528	BS-793006	1		Hose-Primer

31AH6WFG790 (2008)
Engine Assembly 1






Page 10 of 34

Ref #	Part Number	Qty	S/P/F	Description
552	BS-692346	1		Bushing-Governor Crank
562	BS-691119	1		Bolt (Governor Control Lever)
564	BS-699854	1		Screw (Control Cover)
578	BS-791956	1		Wire Assembly
584	BS-791759	1		Cover-Breather Passage
585	BS-791760	1		Gasket-Breather Passage
592	BS-690800	1	S	Nut (Rewind Starter)
597	BS-691696	1	/P	Screw (Pawl Friction Plate)
598	BS-220624	1		Shim-End Play
601	BS-791850	1	/P	Hose-Clamp
604	BS-793134	1		Cover-Control
604A	BS-790473	1		Cover-Control
608	BS-699335	1		Starter-Rewind
610	BS-794614	1		Arrester-Intake
613	BS-791972	1	/P	Screw (Muffler)
615	BS-692576	1		Retainer-Governor Shaft
616	BS-692547	1		Crank-Governor
619	BS-699480	1	S	Screw (Cylinder Head Plate)
632	BS-692653	1		Spring/Link-Mechanical Governor
633	BS-691321	1		Seal-Choke/Throttle Shaft (Throttle Shaft) Incl. in Ref No. 121
635	BS-692927	1		Boot-Spark Plug
663	BS-699854	1		Screw (Control Panel)
682	BS-698039	1		Shield-Starter
684	BS-791761	1		Screw (Breather Passage Cover)
689	BS-691855	1	/P	Spring-Friction
692	BS-690572	1	/P	Spring-Detent
718	BS-690959	1	/P	Pin-Locating (Cylinder)
731	BS-794589	1		Hood-Snow
731A	BS-793643	1		Hood-Snow
741	BS-695087	1		Gear-Timing
742	BS-692564	1		Retainer - E Ring
746	BS-790278	1		Gear-Idler
830	BS-694544	1		Stud-Rocker Arm
832	BS-793193	1		Guard-Muffler
836	BS-699584	1		Screw (Muffler Guard)
847	BS-790545	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
883	BS-691893	1	/P	Gasket-Exhaust Incl. in Ref No. 358
892	BS-791944	1		Switch-Key
914	BS-699480	1	S	Screw (Rocker Cover) (M6)
914A	BS-692557	1		Screw (Rocker Cover) (1/3 Inches Long)
914B	BS-697551	1		Screw (Rocker Cover) (2/3 Inches Long)
957	BS-795027	1	/P	Cap-Fuel Tank
972	BS-694260	1	/P	Tank-Fuel
975	BS-790559	1		Bowl-Float
976	BS-793382	1		Primer-Carburetor
990	BS-794696	1	/P	Key Set
993	BS-694088	1	/P	Gasket-Cylinder Head Plate
996	BS-794687	1		Shield-Carburetor
998	BS-794701	1		Pipe-Oil
1005	BS-692592	1		Fan-Flywheel


31AH6WFG790 (2008)
Engine Assembly 1

Page 11 of 34

Ref #	Part Number	Qty	S/P/F	Description
1009	BS-790537	1	/P	Screw (Starter Motor) Incl. in Ref No. 358 & 1095
1022	BS-691890	1	/P	Gasket-Rocker Cover
1023	BS-499924	1		Cover-Rocker
1026	BS-790287	1		Rod-Push
1029	BS-691230	1	/P	Arm-Rocker
1034	BS-691343	1	/P	Guide-Push Rod
1036	N/A	1		Label-Emissions (Available from Briggs & Stratton)
1054	BS-280275	1		Tie-Cable
1070	BS-699201	1		Screw (Flywheel Fan)
1095	BS-791798	1		Gasket Set-Valve Incl. Ref No. 7, 51, & 1009
1119	BS-699772	1		Screw (Alternator)
1196	BS-696692	1		Screw (Snow Hood)
1196A	BS-699854	1		Screw (Snow Hood)
1210	BS-498144	1	/P	Pulley/Spring Assembly (Pulley)
1210A	BS-498144	1	/P	Pulley/Spring Assembly (Spring)
1230	BS-699847	1		Stud (Control Bracket)
1251	BS-790555	1		Shield-Snow
1251A	BS-790556	1		Shield-Snow
1252	BS-699234	1		Screw (Snow Shield) (M5)
1252A	BS-699632	1		Screw (Snow Shield) (M6)
1329	BS-15D11140017	1		Replacement Engine
1347	BS-699200	1		Screw (Starter Shield)
1427	BS-695757	1		Cap-Pipe

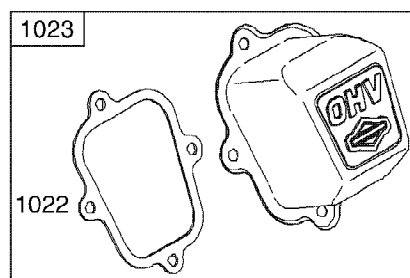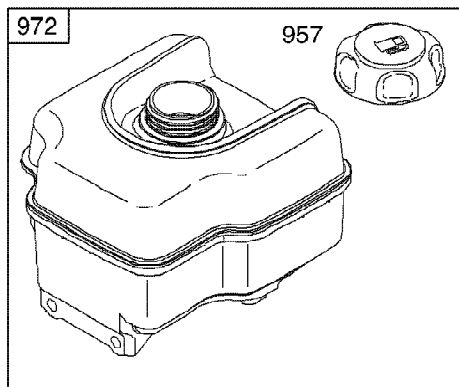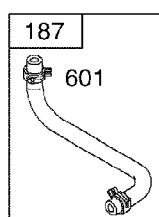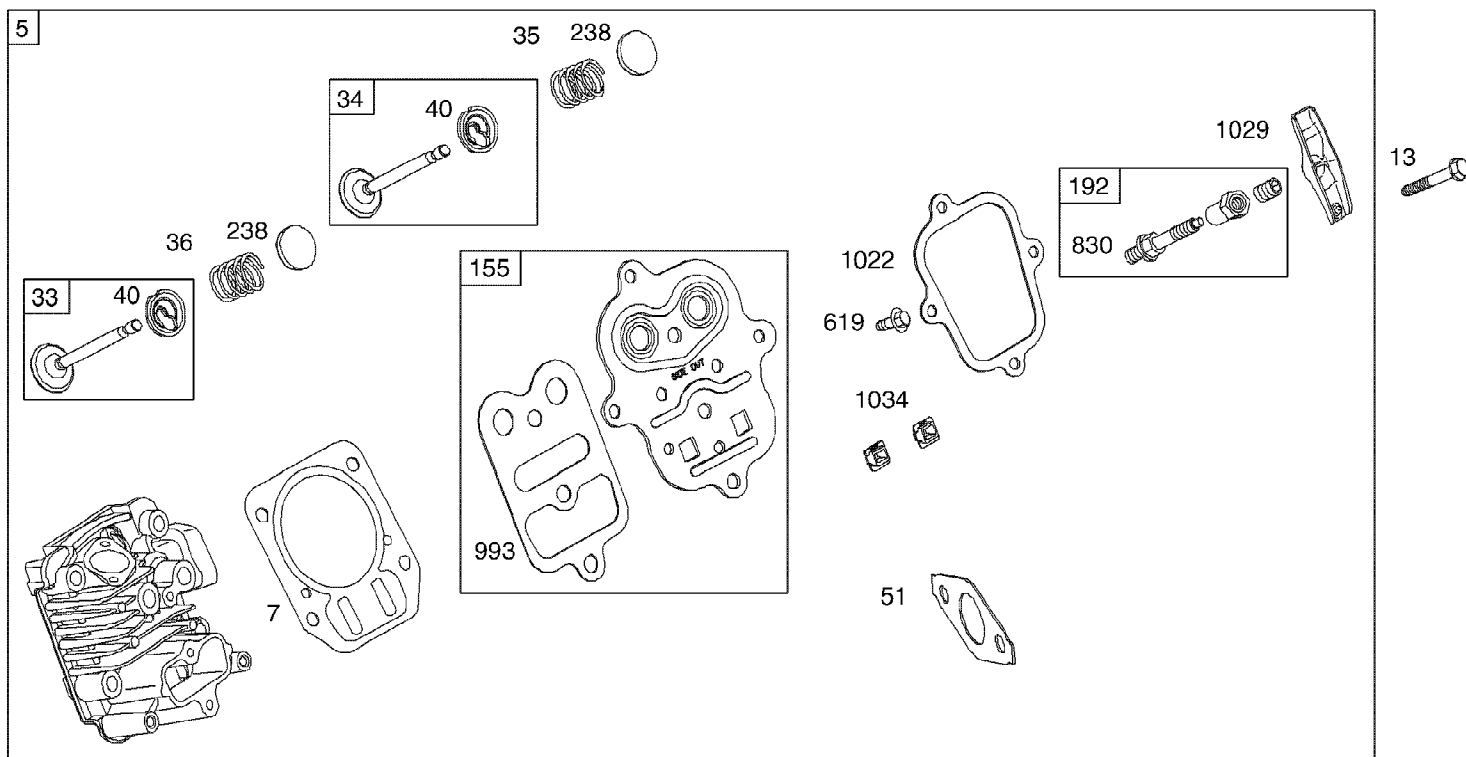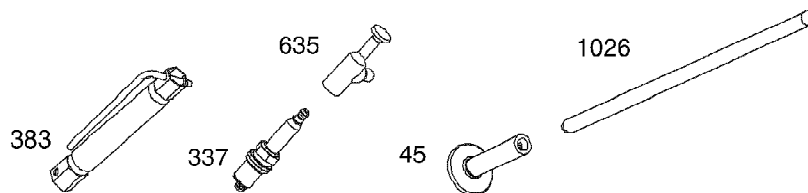

- 914A
- 914B
- 914

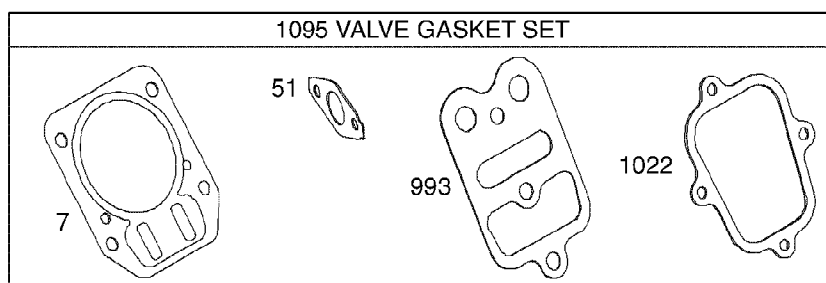

31AH6WFG790 (2008)
Engine Assembly 2

Page 13 of 34

Ref #	Part Number	Qty	S/P/F	Description
1	BS-794188	1	/P	Cylinder Assembly
2	BS-399269	1	/P	Kit-Bushing/Seal (Magneto Side)
3	BS-299819	1		Seal-Oil (Magneto Side) Incl. in Ref No. 358
5	BS-791720	1		Head-Cylinder
7	BS-791716	1		Gasket-Cylinder Head Incl. in Ref No. 358 & 1095
11	BS-695745	1		Tube-Breather
12	BS-699485	1		Gasket-Crankcase Incl. in Ref No. 358
13	BS-699482	1		Screw (Cylinder Head)
15	BS-691686	1	/P	Plug-Oil Drain
16	BS-795116	1		Crankshaft
18	BS-699696	1		Cover-Crankcase
20	BS-692550	1		Seal-Oil (PTO Side) Incl. in Ref No. 358
21	BS-281658S	1	/P	Cap-Oil Fill
22	BS-699478	1		Screw (Crankcase Cover/Sump)
23	BS-699516	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-791786	1		Piston Assembly (Standard)
25	BS-791791	1		Piston Assembly (.020" Oversize)
26	BS-791787	1		Ring Set (Standard)
26	BS-791792	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-690229	1		Pin-Piston
29	BS-791783	1		Rod-Connecting
32	BS-791784	1		Screw (Connecting Rod)
33	BS-499642	1		Valve-Exhaust
34	BS-499641	1	S	Valve-Intake
35	BS-691304	1		Spring-Valve (Intake)
36	BS-691304	1		Spring-Valve (Exhaust)
40	BS-692194	1		Retainer-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-693404	1		Camshaft
48	N/A	1		Short Block
51	BS-791718	1		Gasket-Intake Incl. in Ref No. 358, 121 & 1095
55	BS-696710	1		Housing-Rewind Starter
58	BS-693389	1		Rope-Starter
60	BS-699334	1		Grip-Starter Rope
65	BS-690937	1		Screw (Rewind Starter) (SAE)
65A	BS-699228	1		Screw (Rewind Starter) (Metric)
95	BS-691636	1	/P	Screw (Throttle Valve)
97	BS-690024	1		Shaft-Throttle
98	BS-398185	1		Kit-Idle Speed Incl. in Ref No. 121
104	BS-691242	1	/P	Pin-Float Hinge Incl. in Ref No. 121
108	BS-695807	1		Valve-Choke
109	BS-791954	1		Shaft-Choke
117	BS-691428	1		Jet-Main (Standard)
118	BS-690048	1		Jet-Main (High Altitude)
121	BS-792006	1		Kit-Carburetor Overhaul Incl. Ref No. 51, 98, 104, 127, 137 & 633
122	BS-791717	1		Spacer-Carburetor

31AH6WFG790 (2008)
Engine Assembly 2

Page 14 of 34

Ref #	Part Number	Qty	S/P/F	Description
125	BS-794588	1		Carburetor
127	BS-691739	1		Plug-Welch Incl. in Ref No. 121
130	BS-691181	1		Valve-Throttle
133	BS-398187	1		Float-Carburetor
134	BS-398188	1	/P	Kit-Needle/Seat
137	BS-693981	1	/P	Gasket-Float Bowl Incl. in Ref No. 121
146	BS-690979	1	/P	Key-Timing
155	BS-698214	1		Plate-Cylinder Head
177	BS-795015	1		Seal-O Ring (Dipstick)
186	BS-692317	1	/P	Connector-Hose (Carburetor)
187	BS-791874	1		Line-Fuel (Formed)
188	BS-699479	1		Screw (Control Bracket)
190	BS-699220	1		Screw (Fuel Tank)
192	BS-694543	1	/P	Ball-Rocker Arm
209	BS-692571	1		Spring-Governor
219	BS-693578	1		Gear-Governor
220	BS-691724	1		Washer (Governor Gear)
222	BS-793100	1		Bracket-Control
227	BS-794367	1		Lever-Governor Control
238	BS-691300	1	/P	Cap-Valve
276	BS-271716	1		Washer-Sealing
281	BS-793122	1		Panel-Control
300	BS-794728	1		Muffler
304	BS-699598	1		Housing-Blower
305	BS-699480	1	S	Screw (Blower Housing)
306	BS-695710	1		Shield-Cylinder
307	BS-699483	1		Screw (Cylinder Shield) (M4)
307A	BS-699234	1		Screw (Cylinder Shield) (M5)
307B	BS-790557	1		Screw (Cylinder Shield) (M4)
309	BS-793667	1	/P	Motor-Starter
318	BS-690370	1		Screw (Mounting Bracket)
332	BS-792723	1		Nut (Flywheel)
333	BS-695711	1	S	Armature-Magneto
334	BS-699477	1		Screw (Magneto Armature)
337	BS-491055	1		Plug-Spark
347	BS-698338	1	S	Switch-Rocker
356	BS-695630	1		Wire-Stop
358	BS-791797	1		Gasket Set-Engine Incl. Ref No. 3, 7, 12, 20, 51, 883 & 1009
363	BS-19203	1		Puller-Flywheel
365	BS-699484	1		Screw (Carburetor)
383	BS-19374S	1		Wrench-Spark Plug
455	BS-692591	1		Cup-Flywheel
456	BS-692299	1		Plate-Pawl Friction
459	BS-281505S	1	/P	Pawl-Ratchet
472	BS-791948	1		Knob-Choke Shaft
474	BS-793118	1		Alternator
493	BS-695744	1		Bracket-Mounting
505	BS-691251	1		Nut (Governor Control Lever)
523	BS-790546	1		Dipstick
524	BS-281370S	1	/P	Seal-Dipstick Tube
528	BS-793006	1		Hose-Primer

31AH6WFG790 (2008)
Engine Assembly 2


Page 15 of 34

Ref #	Part Number	Qty	S/P/F	Description
552	BS-692346	1		Bushing-Governor Crank
562	BS-691119	1		Bolt (Governor Control Lever)
564	BS-699854	1		Screw (Control Cover)
578	BS-791956	1		Wire Assembly
584	BS-791759	1		Cover-Breather Passage
585	BS-791760	1		Gasket-Breather Passage
592	BS-690800	1	S	Nut (Rewind Starter)
597	BS-691696	1	/P	Screw (Pawl Friction Plate)
598	BS-220624	1		Shim-End Play
601	BS-791850	1	/P	Hose-Clamp
604	BS-793134	1		Cover-Control
604A	BS-790473	1		Cover-Control
608	BS-699335	1		Starter-Rewind
610	BS-794614	1		Arrester-Intake
613	BS-791972	1	/P	Screw (Muffler)
615	BS-692576	1		Retainer-Governor Shaft
616	BS-692547	1		Crank-Governor
619	BS-699480	1	S	Screw (Cylinder Head Plate)
632	BS-692653	1		Spring/Link-Mechanical Governor
633	BS-691321	1		Seal-Choke/Throttle Shaft (Throttle Shaft) Incl. in Ref No. 121
635	BS-692927	1		Boot-Spark Plug
663	BS-699854	1		Screw (Control Panel)
682	BS-698039	1		Shield-Starter
684	BS-791761	1		Screw (Breather Passage Cover)
689	BS-691855	1	/P	Spring-Friction
692	BS-690572	1	/P	Spring-Detent
718	BS-690959	1	/P	Pin-Locating (Cylinder)
731	BS-794589	1		Hood-Snow
731A	BS-793643	1		Hood-Snow
741	BS-695087	1		Gear-Timing
742	BS-692564	1		Retainer - E Ring
746	BS-790278	1		Gear-Idler
830	BS-694544	1		Stud-Rocker Arm
832	BS-793193	1		Guard-Muffler
836	BS-699584	1		Screw (Muffler Guard)
847	BS-790545	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
883	BS-691893	1	/P	Gasket-Exhaust Incl. in Ref No. 358
892	BS-791944	1		Switch-Key
914	BS-699480	1	S	Screw (Rocker Cover) (M6)
914A	BS-692557	1		Screw (Rocker Cover) (1/3 Inches Long)
914B	BS-697551	1		Screw (Rocker Cover) (2/3 Inches Long)
957	BS-795027	1	/P	Cap-Fuel Tank
972	BS-694260	1	/P	Tank-Fuel
975	BS-790559	1		Bowl-Float
976	BS-793382	1		Primer-Carburetor
990	BS-794696	1	/P	Key Set
993	BS-694088	1	/P	Gasket-Cylinder Head Plate
996	BS-794687	1		Shield-Carburetor
998	BS-794701	1		Pipe-Oil
1005	BS-692592	1		Fan-Flywheel

31AH6WFG790 (2008)
Engine Assembly 2

Page 16 of 34

Ref #	Part Number	Qty	S/P/F	Description
1009	BS-790537	1	/P	Screw (Starter Motor) Incl. in Ref No. 358 & 1095
1022	BS-691890	1	/P	Gasket-Rocker Cover
1023	BS-499924	1		Cover-Rocker
1026	BS-790287	1		Rod-Push
1029	BS-691230	1	/P	Arm-Rocker
1034	BS-691343	1	/P	Guide-Push Rod
1036	N/A	1		Label-Emissions (Available from Briggs & Stratton)
1054	BS-280275	1		Tie-Cable
1070	BS-699201	1		Screw (Flywheel Fan)
1095	BS-791798	1		Gasket Set-Valve Incl. Ref No. 7, 51, & 1009
1119	BS-699772	1		Screw (Alternator)
1196	BS-696692	1		Screw (Snow Hood)
1196A	BS-699854	1		Screw (Snow Hood)
1210	BS-498144	1	/P	Pulley/Spring Assembly (Pulley)
1210A	BS-498144	1	/P	Pulley/Spring Assembly (Spring)
1230	BS-699847	1		Stud (Control Bracket)
1251	BS-790555	1		Shield-Snow
1251A	BS-790556	1		Shield-Snow
1252	BS-699234	1		Screw (Snow Shield) (M5)
1252A	BS-699632	1		Screw (Snow Shield) (M6)
1329	BS-15D11140017	1		Replacement Engine
1347	BS-699200	1		Screw (Starter Shield)
1427	BS-695757	1		Cap-Pipe

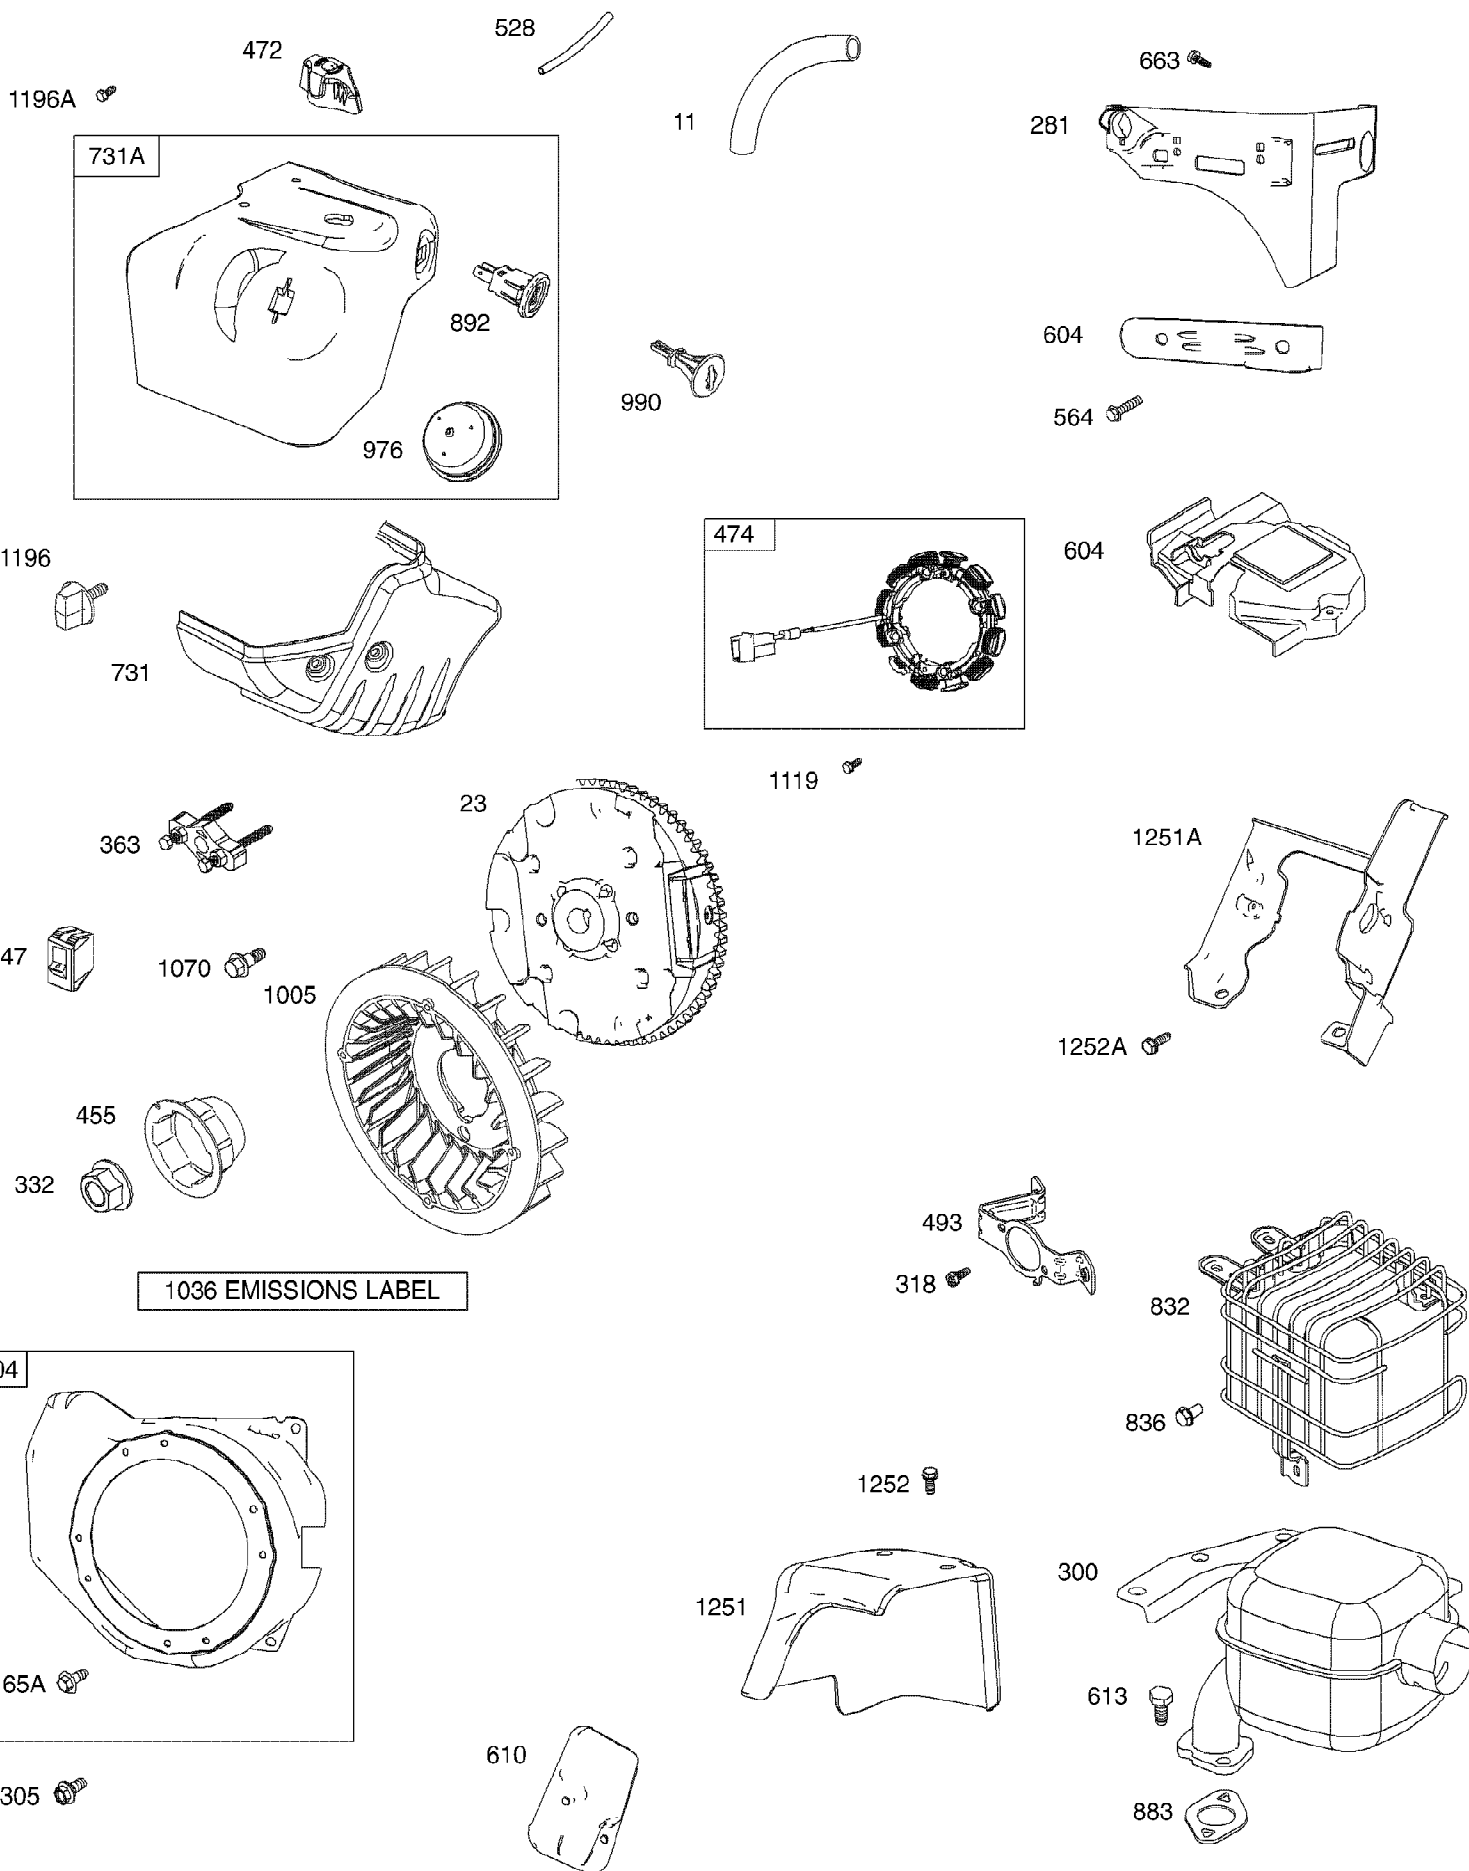

31AH6WFG790 (2008)
Engine Assembly 3

Page 18 of 34

Ref #	Part Number	Qty	S/P/F	Description
1	BS-794188	1	/P	Cylinder Assembly
2	BS-399269	1	/P	Kit-Bushing/Seal (Magneto Side)
3	BS-299819	1		Seal-Oil (Magneto Side) Incl. in Ref No. 358
5	BS-791720	1		Head-Cylinder
7	BS-791716	1		Gasket-Cylinder Head Incl. in Ref No. 358 & 1095
11	BS-695745	1		Tube-Breather
12	BS-699485	1		Gasket-Crankcase Incl. in Ref No. 358
13	BS-699482	1		Screw (Cylinder Head)
15	BS-691686	1	/P	Plug-Oil Drain
16	BS-795116	1		Crankshaft
18	BS-699696	1		Cover-Crankcase
20	BS-692550	1		Seal-Oil (PTO Side) Incl. in Ref No. 358
21	BS-281658S	1	/P	Cap-Oil Fill
22	BS-699478	1		Screw (Crankcase Cover/Sump)
23	BS-699516	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-791786	1		Piston Assembly (Standard)
25	BS-791791	1		Piston Assembly (.020" Oversize)
26	BS-791787	1		Ring Set (Standard)
26	BS-791792	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-690229	1		Pin-Piston
29	BS-791783	1		Rod-Connecting
32	BS-791784	1		Screw (Connecting Rod)
33	BS-499642	1		Valve-Exhaust
34	BS-499641	1	S	Valve-Intake
35	BS-691304	1		Spring-Valve (Intake)
36	BS-691304	1		Spring-Valve (Exhaust)
40	BS-692194	1		Retainer-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-693404	1		Camshaft
48	N/A	1		Short Block
51	BS-791718	1		Gasket-Intake Incl. in Ref No. 358, 121 & 1095
55	BS-696710	1		Housing-Rewind Starter
58	BS-693389	1		Rope-Starter
60	BS-699334	1		Grip-Starter Rope
65	BS-690937	1		Screw (Rewind Starter) (SAE)
65A	BS-699228	1		Screw (Rewind Starter) (Metric)
95	BS-691636	1	/P	Screw (Throttle Valve)
97	BS-690024	1		Shaft-Throttle
98	BS-398185	1		Kit-Idle Speed Incl. in Ref No. 121
104	BS-691242	1	/P	Pin-Float Hinge Incl. in Ref No. 121
108	BS-695807	1		Valve-Choke
109	BS-791954	1		Shaft-Choke
117	BS-691428	1		Jet-Main (Standard)
118	BS-690048	1		Jet-Main (High Altitude)
121	BS-792006	1		Kit-Carburetor Overhaul Incl. Ref No. 51, 98, 104, 127, 137 & 633
122	BS-791717	1		Spacer-Carburetor

31AH6WFG790 (2008)
Engine Assembly 3

Page 19 of 34

Ref #	Part Number	Qty	S/P/F	Description
125	BS-794588	1		Carburetor
127	BS-691739	1		Plug-Welch Incl. in Ref No. 121
130	BS-691181	1		Valve-Throttle
133	BS-398187	1		Float-Carburetor
134	BS-398188	1	/P	Kit-Needle/Seat
137	BS-693981	1	/P	Gasket-Float Bowl Incl. in Ref No. 121
146	BS-690979	1	/P	Key-Timing
155	BS-698214	1		Plate-Cylinder Head
177	BS-795015	1		Seal-O Ring (Dipstick)
186	BS-692317	1	/P	Connector-Hose (Carburetor)
187	BS-791874	1		Line-Fuel (Formed)
188	BS-699479	1		Screw (Control Bracket)
190	BS-699220	1		Screw (Fuel Tank)
192	BS-694543	1	/P	Ball-Rocker Arm
209	BS-692571	1		Spring-Governor
219	BS-693578	1		Gear-Governor
220	BS-691724	1		Washer (Governor Gear)
222	BS-793100	1		Bracket-Control
227	BS-794367	1		Lever-Governor Control
238	BS-691300	1	/P	Cap-Valve
276	BS-271716	1		Washer-Sealing
281	BS-793122	1		Panel-Control
300	BS-794728	1		Muffler
304	BS-699598	1		Housing-Blower
305	BS-699480	1	S	Screw (Blower Housing)
306	BS-695710	1		Shield-Cylinder
307	BS-699483	1		Screw (Cylinder Shield) (M4)
307A	BS-699234	1		Screw (Cylinder Shield) (M5)
307B	BS-790557	1		Screw (Cylinder Shield) (M4)
309	BS-793667	1	/P	Motor-Starter
318	BS-690370	1		Screw (Mounting Bracket)
332	BS-792723	1		Nut (Flywheel)
333	BS-695711	1	S	Armature-Magneto
334	BS-699477	1		Screw (Magneto Armature)
337	BS-491055	1		Plug-Spark
347	BS-698338	1	S	Switch-Rocker
356	BS-695630	1		Wire-Stop
358	BS-791797	1		Gasket Set-Engine Incl. Ref No. 3, 7, 12, 20, 51, 883 & 1009
363	BS-19203	1		Puller-Flywheel
365	BS-699484	1		Screw (Carburetor)
383	BS-19374S	1		Wrench-Spark Plug
455	BS-692591	1		Cup-Flywheel
456	BS-692299	1		Plate-Pawl Friction
459	BS-281505S	1	/P	Pawl-Ratchet
472	BS-791948	1		Knob-Choke Shaft
474	BS-793118	1		Alternator
493	BS-695744	1		Bracket-Mounting
505	BS-691251	1		Nut (Governor Control Lever)
523	BS-790546	1		Dipstick
524	BS-281370S	1	/P	Seal-Dipstick Tube
528	BS-793006	1		Hose-Primer

31AH6WFG790 (2008)
Engine Assembly 3













Page 20 of 34

Ref #	Part Number	Qty	S/P/F	Description
552	BS-692346	1		Bushing-Governor Crank
562	BS-691119	1		Bolt (Governor Control Lever)
564	BS-699854	1		Screw (Control Cover)
578	BS-791956	1		Wire Assembly
584	BS-791759	1		Cover-Breather Passage
585	BS-791760	1		Gasket-Breather Passage
592	BS-690800	1	S	Nut (Rewind Starter)
597	BS-691696	1	/P	Screw (Pawl Friction Plate)
598	BS-220624	1		Shim-End Play
601	BS-791850	1	/P	Hose-Clamp
604	BS-793134	1		Cover-Control
604A	BS-790473	1		Cover-Control
608	BS-699335	1		Starter-Rewind
610	BS-794614	1		Arrester-Intake
613	BS-791972	1	/P	Screw (Muffler)
615	BS-692576	1		Retainer-Governor Shaft
616	BS-692547	1		Crank-Governor
619	BS-699480	1	S	Screw (Cylinder Head Plate)
632	BS-692653	1		Spring/Link-Mechanical Governor
633	BS-691321	1		Seal-Choke/Throttle Shaft (Throttle Shaft) Incl. in Ref No. 121
635	BS-692927	1		Boot-Spark Plug
663	BS-699854	1		Screw (Control Panel)
682	BS-698039	1		Shield-Starter
684	BS-791761	1		Screw (Breather Passage Cover)
689	BS-691855	1	/P	Spring-Friction
692	BS-690572	1	/P	Spring-Detent
718	BS-690959	1	/P	Pin-Locating (Cylinder)
731	BS-794589	1		Hood-Snow
731A	BS-793643	1		Hood-Snow
741	BS-695087	1		Gear-Timing
742	BS-692564	1		Retainer - E Ring
746	BS-790278	1		Gear-Idler
830	BS-694544	1		Stud-Rocker Arm
832	BS-793193	1		Guard-Muffler
836	BS-699584	1		Screw (Muffler Guard)
847	BS-790545	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
883	BS-691893	1	/P	Gasket-Exhaust Incl. in Ref No. 358
892	BS-791944	1		Switch-Key
914	BS-699480	1	S	Screw (Rocker Cover) (M6)
914A	BS-692557	1		Screw (Rocker Cover) (1/3 Inches Long)
914B	BS-697551	1		Screw (Rocker Cover) (2/3 Inches Long)
957	BS-795027	1	/P	Cap-Fuel Tank
972	BS-694260	1	/P	Tank-Fuel
975	BS-790559	1		Bowl-Float
976	BS-793382	1		Primer-Carburetor
990	BS-794696	1	/P	Key Set
993	BS-694088	1	/P	Gasket-Cylinder Head Plate
996	BS-794687	1		Shield-Carburetor
998	BS-794701	1		Pipe-Oil
1005	BS-692592	1		Fan-Flywheel

31AH6WFG790 (2008)
Engine Assembly 3

Page 21 of 34

Ref #	Part Number	Qty	S/P/F	Description
1009	BS-790537	1	/P	Screw (Starter Motor) Incl. in Ref No. 358 & 1095
1022	BS-691890	1	/P	Gasket-Rocker Cover
1023	BS-499924	1		Cover-Rocker
1026	BS-790287	1		Rod-Push
1029	BS-691230	1	/P	Arm-Rocker
1034	BS-691343	1	/P	Guide-Push Rod
1036	N/A	1		Label-Emissions (Available from Briggs & Stratton)
1054	BS-280275	1		Tie-Cable
1070	BS-699201	1		Screw (Flywheel Fan)
1095	BS-791798	1		Gasket Set-Valve Incl. Ref No. 7, 51, & 1009
1119	BS-699772	1		Screw (Alternator)
1196	BS-696692	1		Screw (Snow Hood)
1196A	BS-699854	1		Screw (Snow Hood)
1210	BS-498144	1	/P	Pulley/Spring Assembly (Pulley)
1210A	BS-498144	1	/P	Pulley/Spring Assembly (Spring)
1230	BS-699847	1		Stud (Control Bracket)
1251	BS-790555	1		Shield-Snow
1251A	BS-790556	1		Shield-Snow
1252	BS-699234	1		Screw (Snow Shield) (M5)
1252A	BS-699632	1		Screw (Snow Shield) (M6)
1329	BS-15D11140017	1		Replacement Engine
1347	BS-699200	1		Screw (Starter Shield)
1427	BS-695757	1		Cap-Pipe

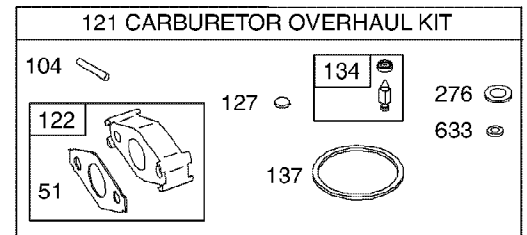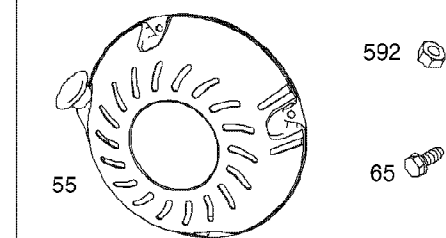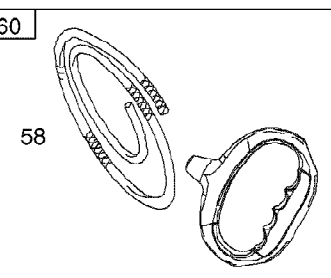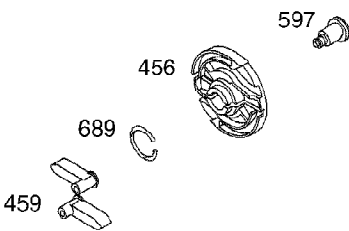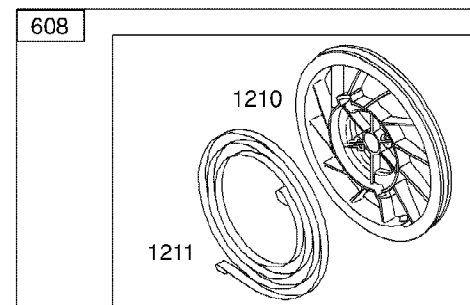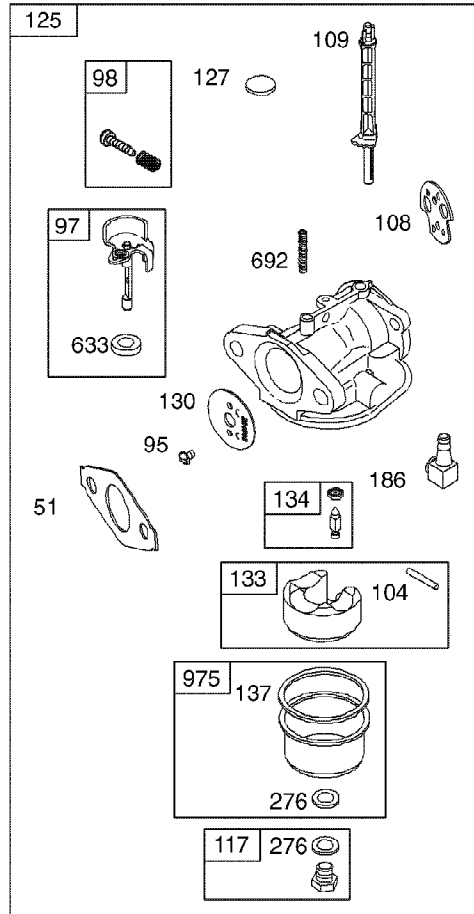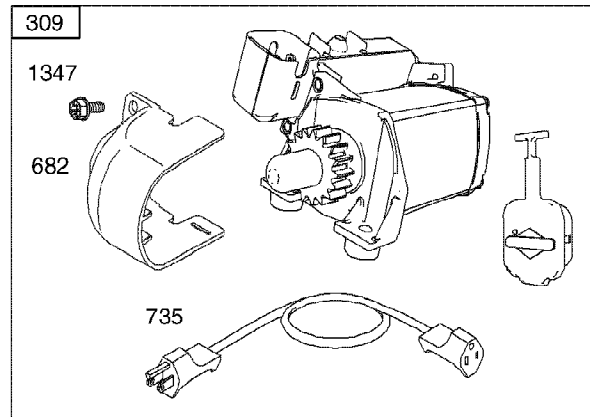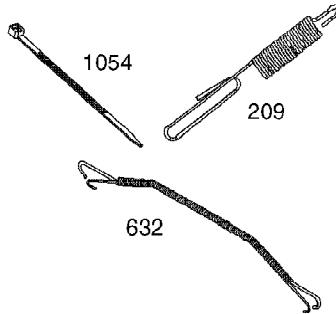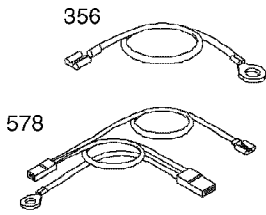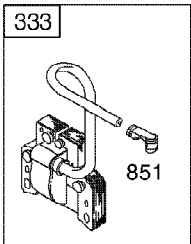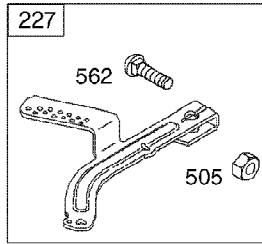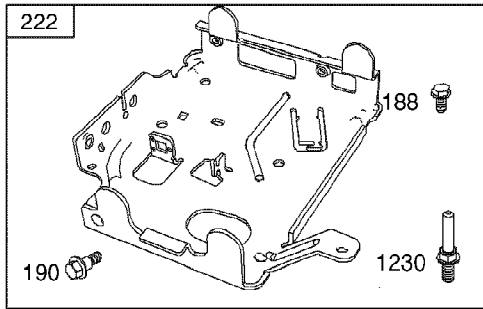

31AH6WFG790 (2008)
Engine Assembly 4

Page 23 of 34

Ref #	Part Number	Qty	S/P/F	Description
1	BS-794188	1	/P	Cylinder Assembly
2	BS-399269	1	/P	Kit-Bushing/Seal (Magneto Side)
3	BS-299819	1		Seal-Oil (Magneto Side) Incl. in Ref No. 358
5	BS-791720	1		Head-Cylinder
7	BS-791716	1		Gasket-Cylinder Head Incl. in Ref No. 358 & 1095
11	BS-695745	1		Tube-Breather
12	BS-699485	1		Gasket-Crankcase Incl. in Ref No. 358
13	BS-699482	1		Screw (Cylinder Head)
15	BS-691686	1	/P	Plug-Oil Drain
16	BS-795116	1		Crankshaft
18	BS-699696	1		Cover-Crankcase
20	BS-692550	1		Seal-Oil (PTO Side) Incl. in Ref No. 358
21	BS-281658S	1	/P	Cap-Oil Fill
22	BS-699478	1		Screw (Crankcase Cover/Sump)
23	BS-699516	1		Flywheel
24	BS-222698S	1	/P	Key-Flywheel
25	BS-791786	1		Piston Assembly (Standard)
25	BS-791791	1		Piston Assembly (.020" Oversize)
26	BS-791787	1		Ring Set (Standard)
26	BS-791792	1		Ring Set (.020" Oversize)
27	BS-690975	1		Lock-Piston Pin
28	BS-690229	1		Pin-Piston
29	BS-791783	1		Rod-Connecting
32	BS-791784	1		Screw (Connecting Rod)
33	BS-499642	1		Valve-Exhaust
34	BS-499641	1	S	Valve-Intake
35	BS-691304	1		Spring-Valve (Intake)
36	BS-691304	1		Spring-Valve (Exhaust)
40	BS-692194	1		Retainer-Valve
45	BS-690977	1	/P	Tappet-Valve
46	BS-693404	1		Camshaft
48	N/A	1		Short Block
51	BS-791718	1		Gasket-Intake Incl. in Ref No. 358, 121 & 1095
55	BS-696710	1		Housing-Rewind Starter
58	BS-693389	1		Rope-Starter
60	BS-699334	1		Grip-Starter Rope
65	BS-690937	1		Screw (Rewind Starter) (SAE)
65A	BS-699228	1		Screw (Rewind Starter) (Metric)
95	BS-691636	1	/P	Screw (Throttle Valve)
97	BS-690024	1		Shaft-Throttle
98	BS-398185	1		Kit-Idle Speed Incl. in Ref No. 121
104	BS-691242	1	/P	Pin-Float Hinge Incl. in Ref No. 121
108	BS-695807	1		Valve-Choke
109	BS-791954	1		Shaft-Choke
117	BS-691428	1		Jet-Main (Standard)
118	BS-690048	1		Jet-Main (High Altitude)
121	BS-792006	1		Kit-Carburetor Overhaul Incl. Ref No. 51, 98, 104, 127, 137 & 633
122	BS-791717	1		Spacer-Carburetor

31AH6WFG790 (2008)
Engine Assembly 4

Page 24 of 34

Ref #	Part Number	Qty	S/P/F	Description
125	BS-794588	1		Carburetor
127	BS-691739	1		Plug-Welch Incl. in Ref No. 121
130	BS-691181	1		Valve-Throttle
133	BS-398187	1		Float-Carburetor
134	BS-398188	1	/P	Kit-Needle/Seat
137	BS-693981	1	/P	Gasket-Float Bowl Incl. in Ref No. 121
146	BS-690979	1	/P	Key-Timing
155	BS-698214	1		Plate-Cylinder Head
177	BS-795015	1		Seal-O Ring (Dipstick)
186	BS-692317	1	/P	Connector-Hose (Carburetor)
187	BS-791874	1		Line-Fuel (Formed)
188	BS-699479	1		Screw (Control Bracket)
190	BS-699220	1		Screw (Fuel Tank)
192	BS-694543	1	/P	Ball-Rocker Arm
209	BS-692571	1		Spring-Governor
219	BS-693578	1		Gear-Governor
220	BS-691724	1		Washer (Governor Gear)
222	BS-793100	1		Bracket-Control
227	BS-794367	1		Lever-Governor Control
238	BS-691300	1	/P	Cap-Valve
276	BS-271716	1		Washer-Sealing
281	BS-793122	1		Panel-Control
300	BS-794728	1		Muffler
304	BS-699598	1		Housing-Blower
305	BS-699480	1	S	Screw (Blower Housing)
306	BS-695710	1		Shield-Cylinder
307	BS-699483	1		Screw (Cylinder Shield) (M4)
307A	BS-699234	1		Screw (Cylinder Shield) (M5)
307B	BS-790557	1		Screw (Cylinder Shield) (M4)
309	BS-793667	1	/P	Motor-Starter
318	BS-690370	1		Screw (Mounting Bracket)
332	BS-792723	1		Nut (Flywheel)
333	BS-695711	1	S	Armature-Magneto
334	BS-699477	1		Screw (Magneto Armature)
337	BS-491055	1		Plug-Spark
347	BS-698338	1	S	Switch-Rocker
356	BS-695630	1		Wire-Stop
358	BS-791797	1		Gasket Set-Engine Incl. Ref No. 3, 7, 12, 20, 51, 883 & 1009
363	BS-19203	1		Puller-Flywheel
365	BS-699484	1		Screw (Carburetor)
383	BS-19374S	1		Wrench-Spark Plug
455	BS-692591	1		Cup-Flywheel
456	BS-692299	1		Plate-Pawl Friction
459	BS-281505S	1	/P	Pawl-Ratchet
472	BS-791948	1		Knob-Choke Shaft
474	BS-793118	1		Alternator
493	BS-695744	1		Bracket-Mounting
505	BS-691251	1		Nut (Governor Control Lever)
523	BS-790546	1		Dipstick
524	BS-281370S	1	/P	Seal-Dipstick Tube
528	BS-793006	1		Hose-Primer

31AH6WFG790 (2008)
Engine Assembly 4


Page 25 of 34

Ref #	Part Number	Qty	S/P/F	Description
552	BS-692346	1		Bushing-Governor Crank
562	BS-691119	1		Bolt (Governor Control Lever)
564	BS-699854	1		Screw (Control Cover)
578	BS-791956	1		Wire Assembly
584	BS-791759	1		Cover-Breather Passage
585	BS-791760	1		Gasket-Breather Passage
592	BS-690800	1	S	Nut (Rewind Starter)
597	BS-691696	1	/P	Screw (Pawl Friction Plate)
598	BS-220624	1		Shim-End Play
601	BS-791850	1	/P	Hose-Clamp
604	BS-793134	1		Cover-Control
604A	BS-790473	1		Cover-Control
608	BS-699335	1		Starter-Rewind
610	BS-794614	1		Arrester-Intake
613	BS-791972	1	/P	Screw (Muffler)
615	BS-692576	1		Retainer-Governor Shaft
616	BS-692547	1		Crank-Governor
619	BS-699480	1	S	Screw (Cylinder Head Plate)
632	BS-692653	1		Spring/Link-Mechanical Governor
633	BS-691321	1		Seal-Choke/Throttle Shaft (Throttle Shaft) Incl. in Ref No. 121
635	BS-692927	1		Boot-Spark Plug
663	BS-699854	1		Screw (Control Panel)
682	BS-698039	1		Shield-Starter
684	BS-791761	1		Screw (Breather Passage Cover)
689	BS-691855	1	/P	Spring-Friction
692	BS-690572	1	/P	Spring-Detent
718	BS-690959	1	/P	Pin-Locating (Cylinder)
731	BS-794589	1		Hood-Snow
731A	BS-793643	1		Hood-Snow
741	BS-695087	1		Gear-Timing
742	BS-692564	1		Retainer - E Ring
746	BS-790278	1		Gear-Idler
830	BS-694544	1		Stud-Rocker Arm
832	BS-793193	1		Guard-Muffler
836	BS-699584	1		Screw (Muffler Guard)
847	BS-790545	1		Dipstick/Tube Assembly
851	BS-493880S	1	/P	Terminal-Spark Plug
883	BS-691893	1	/P	Gasket-Exhaust Incl. in Ref No. 358
892	BS-791944	1		Switch-Key
914	BS-699480	1	S	Screw (Rocker Cover) (M6)
914A	BS-692557	1		Screw (Rocker Cover) (1/3 Inches Long)
914B	BS-697551	1		Screw (Rocker Cover) (2/3 Inches Long)
957	BS-795027	1	/P	Cap-Fuel Tank
972	BS-694260	1	/P	Tank-Fuel
975	BS-790559	1		Bowl-Float
976	BS-793382	1		Primer-Carburetor
990	BS-794696	1	/P	Key Set
993	BS-694088	1	/P	Gasket-Cylinder Head Plate
996	BS-794687	1		Shield-Carburetor
998	BS-794701	1		Pipe-Oil
1005	BS-692592	1		Fan-Flywheel

31AH6WFG790 (2008)
Engine Assembly 4

Page 26 of 34


Ref #	Part Number	Qty	S/P/F	Description
1009	BS-790537	1	/P	Screw (Starter Motor) Incl. in Ref No. 358 & 1095
1022	BS-691890	1	/P	Gasket-Rocker Cover
1023	BS-499924	1		Cover-Rocker
1026	BS-790287	1		Rod-Push
1029	BS-691230	1	/P	Arm-Rocker
1034	BS-691343	1	/P	Guide-Push Rod
1036	N/A	1		Label-Emissions (Available from Briggs & Stratton)
1054	BS-280275	1		Tie-Cable
1070	BS-699201	1		Screw (Flywheel Fan)
1095	BS-791798	1		Gasket Set-Valve Incl. Ref No. 7, 51, & 1009
1119	BS-699772	1		Screw (Alternator)
1196	BS-696692	1		Screw (Snow Hood)
1196A	BS-699854	1		Screw (Snow Hood)
1210	BS-498144	1	/P	Pulley/Spring Assembly (Pulley)
1210A	BS-498144	1	/P	Pulley/Spring Assembly (Spring)
1230	BS-699847	1		Stud (Control Bracket)
1251	BS-790555	1		Shield-Snow
1251A	BS-790556	1		Shield-Snow
1252	BS-699234	1		Screw (Snow Shield) (M5)
1252A	BS-699632	1		Screw (Snow Shield) (M6)
1329	BS-15D11140017	1		Replacement Engine
1347	BS-699200	1		Screw (Starter Shield)
1427	BS-695757	1		Cap-Pipe

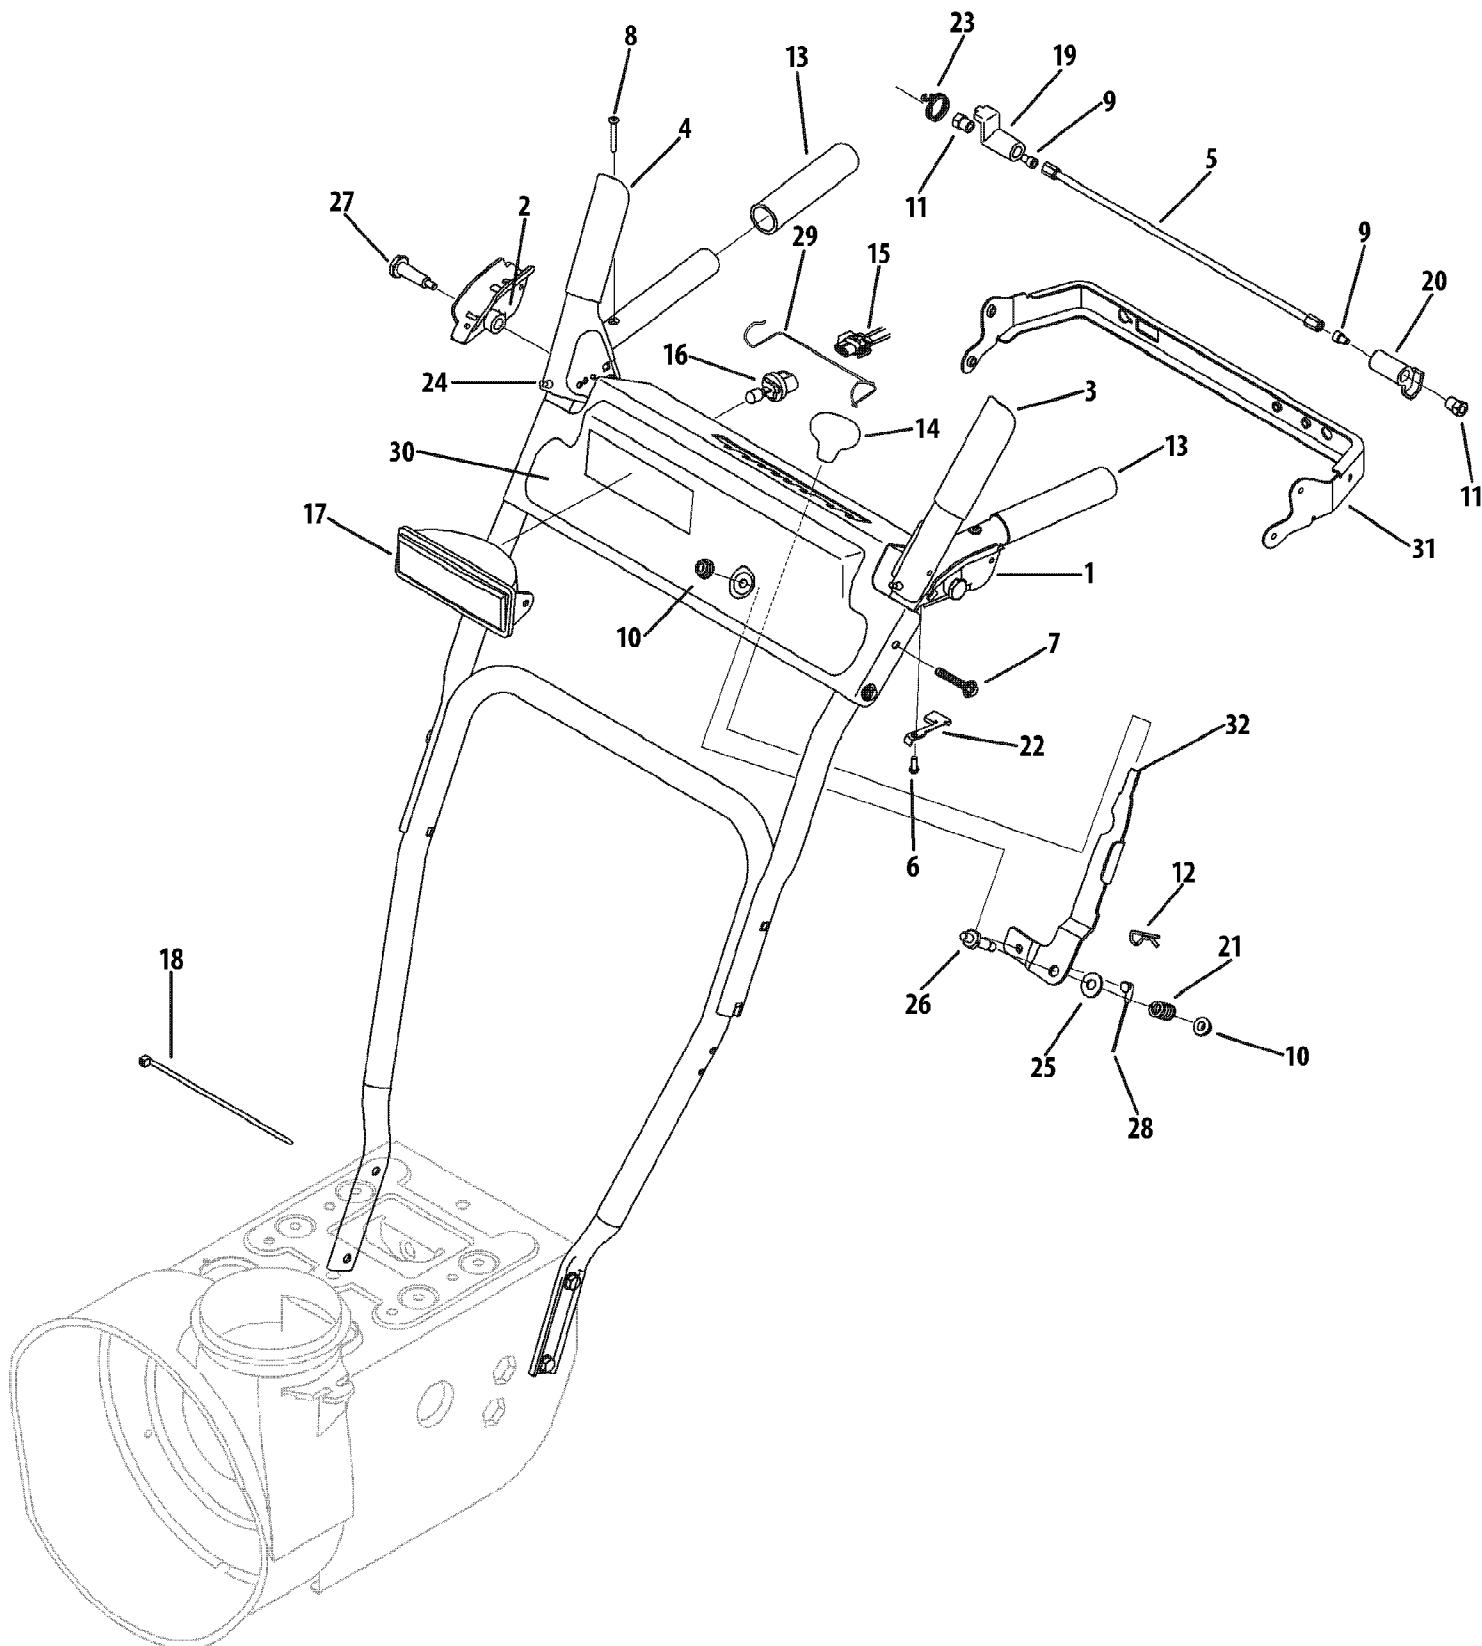

31AH6WFG790 (2008)
Handle Panel

Page 28 of 34


Ref #	Part Number	Qty	S/P/F	Description
1	631-04133A	1	/P	Clutch Lock Handle Assembly, LH
2	631-04134B	1		Clutch Lock Handle Assembly, RH
3	684-04105B	1	/P	Engagement Assembly, LH
4	684-04106B	1	/P	Engagement Assembly, RH
5	684-04250	1	/P	Clutch Pivot Lock Rod Assembly
6	710-04326	1		Hex Washer Screw, #8-16 x .50
7	710-04586	1		Hex Washer Screw, 1/4-20 x .620
8	710-1233	1	/P	Machine Screw, #10-24 x 1.375
9	710-3069	1	/P	Socket Screw, 1/4-20 x .50
10	712-04063	1	/P	Flange Lock Nut, 5/16-18
11	712-04081A	1		Hex Nut, 1/4-20
12	714-0145	1	S	Click Pin, .092 x 1.64
13	720-0274	1	/P	Grip, 1.0 ID x 5.0 LG
14	720-04039	1		Shift Knob
15	725-04622	1		Snow Thrower Harness
16	725-1658	1	S	Halogen Lamp
17	725-1672	1	S	Lens/Lamp Assembly Housing
18	726-0154	1	S	Cable Tie
19	731-04894D	1	/P	Lock Plate
20	731-04896B	1	/P	Clutch Lock Cam
21	732-0193	1	/P	Compression Spring, .39 x .60 x .88
22	732-04219C	1	/P	Clutch Lock Spring
23	732-04238	1		Torsion Spring, .8156 ID x .3038
24	735-0199A	1	S	Rubber Bumper, .62 OD x .22 Thick
25	736-0262	1	/P	Flat Washer, .385 x .870 x .092
26	738-04118	1		Shoulder Bolt, 5/16-18 x .905
27	738-04348	1	/P	Shoulder Screw, .437 x 1.345 x 1/4-20
28	746-04397	1	S	Speed Selector Cable
29	747-1136	1	/P	Headlight Retainer
30	790-00209	1	/P	Handle Panel
31	790-00248B	1	S	Panel Bracket
32	790-00313	1	S	Speed Shift Lever

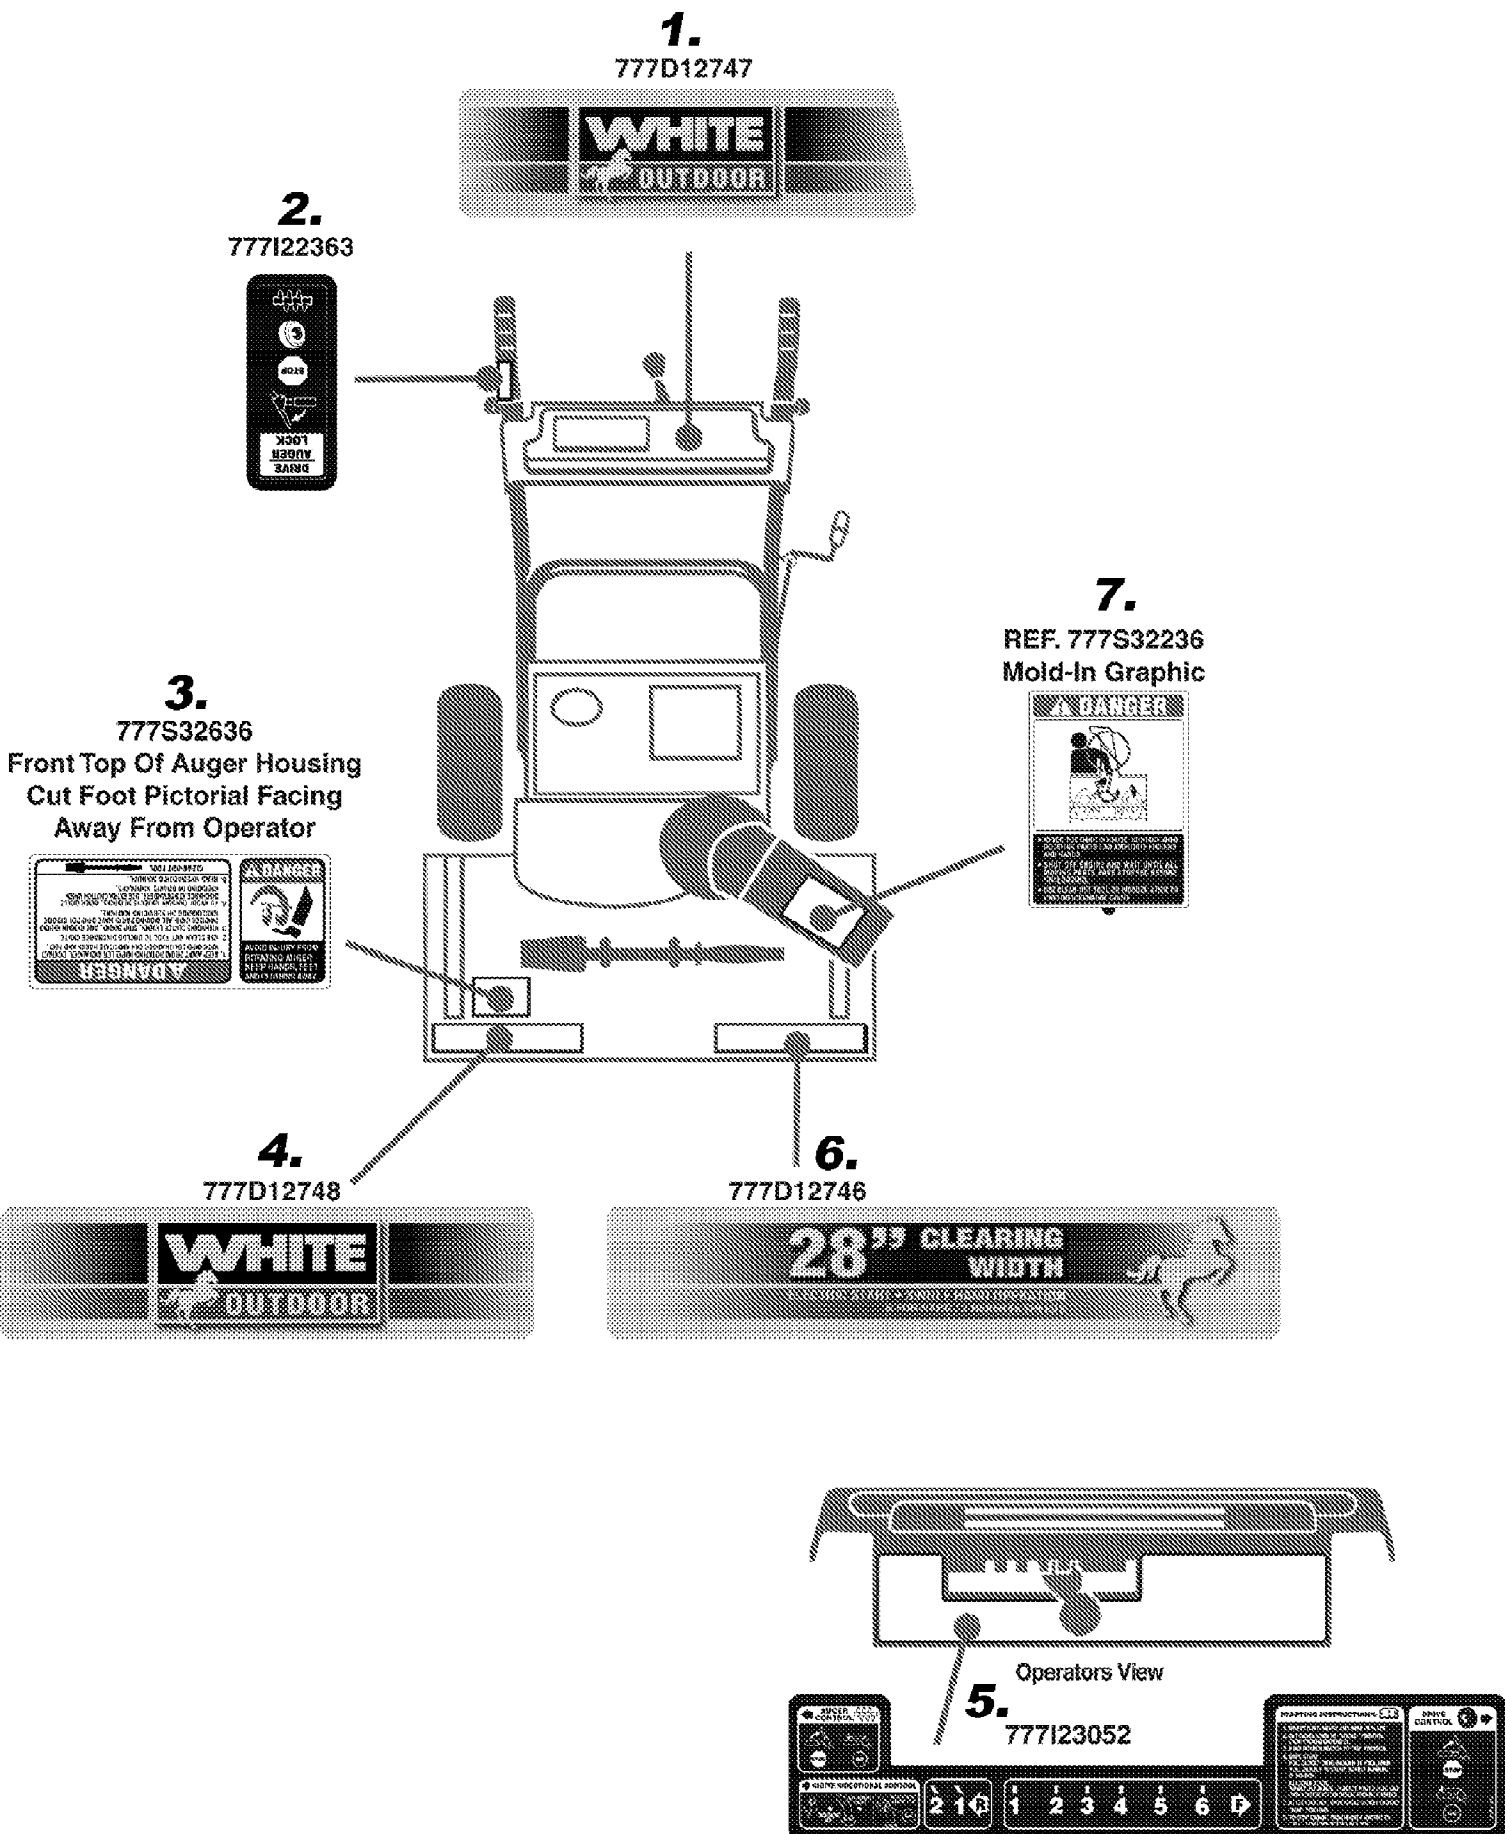

31AH6WFG790 (2008)
Label Map

Page 30 of 34

Ref #	Part Number	Qty	S/P/F	Description
1	777D12747	1		LABEL-SNOW:F PNL:WHITE
2	777I22363	1		LABEL-DRV/AUGR LOCK
3	777S32636	1		LABEL-SNOW HOUSING
4	777D12748	1		LABEL-SNOW:HSG:WHITE LOGO
5	777I23052	1		LABEL-SNOW E,F PANEL
6	777D12746	1		LABEL-SNOW:HSG:WHITE 28"
7	777S32236	1		LABEL-SNOW CHUTE

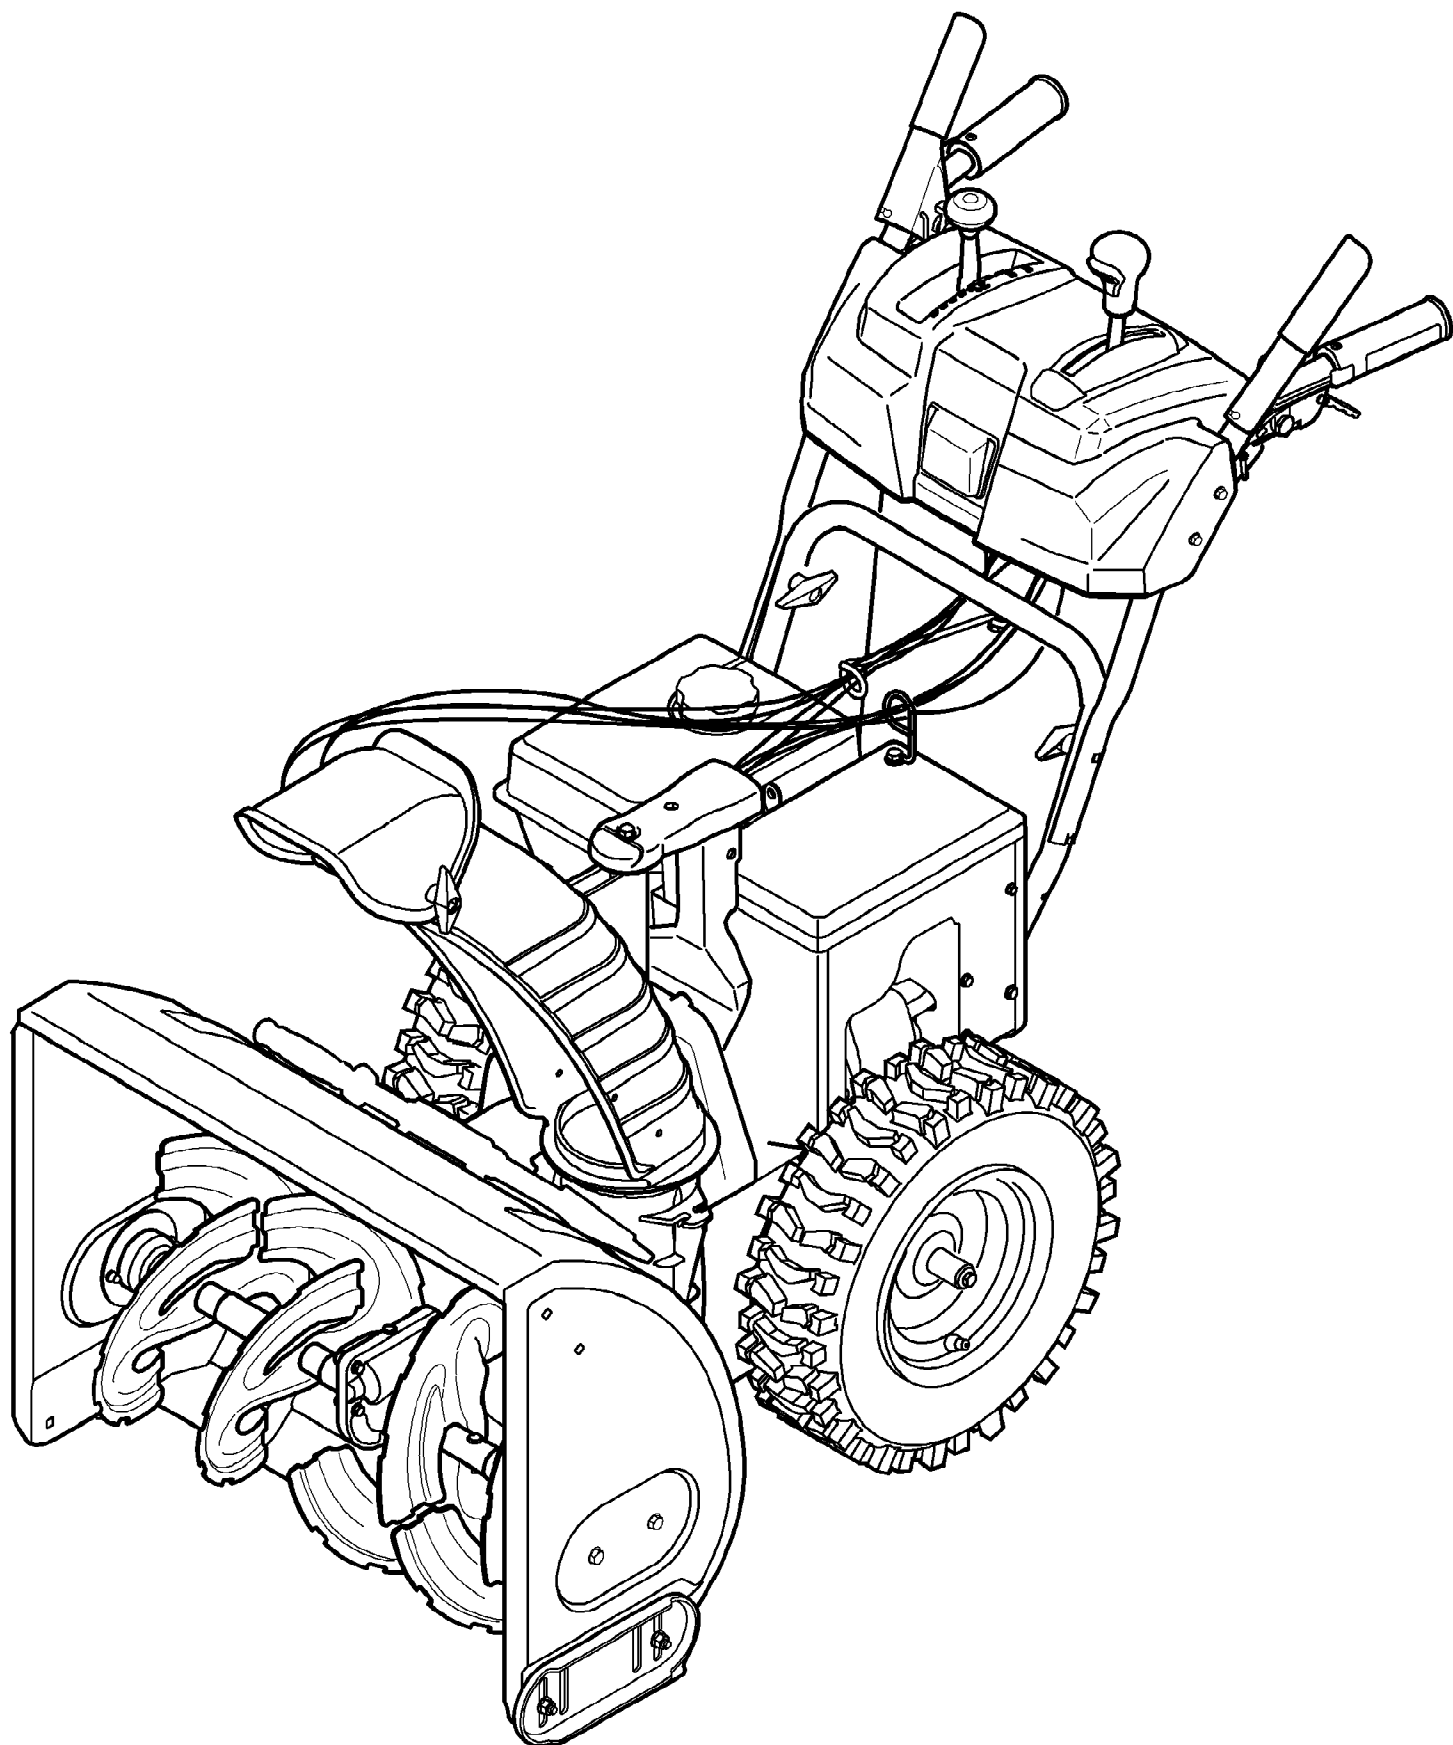


31AH6WFG790 (2008)
Quick Reference

Page 32 of 34

Ref #	Part Number	Qty	S/P/F	Description
	759-3336	1	/P	Spark Plug
	BS-695756	1	S	Key
	629-0071	1	S	Extension Cord
	731-2643	1	S	Snow Removal Tool
	746-04229	1		Drive Cable
	746-04230	1		Auger Cable
	746-04397	1	S	Speed Cable
	N/A	1		Wheel Cable
	684-04107	1		Auger Assembly - LH
	684-04108	1		Auger Assembly - RH
	790-00118	1		Shave Plate
	684-04057A	1	S	Impeller Assembly
	784-5580	1		Slide Shoe
	731-06439	1		Slide Shoe - Polymer
	731-05984A	1	/P	Slide Shoe - Deluxe Polymer
	790-00091	1		Slide Shoe - Deluxe
	738-04124A	1	/P	Shear Pin
	714-04040	1		Bow Tie Cotter Pin
	725-1658	1	S	Lamp - Halogen
	754-04050	1	S	Auger Belt
	754-0367	1	S	Wheel Belt
	N/A	1		Spiral Crescent
	N/A	1		Rubber Paddle
	684-04153	1		Friction Wheel
	656-04025A	1	/P	Friction Wheel Rubber
	634-04142A	1	/P	Snow Hog Wheel - 15 x 5

31AH6WFG790 (2008)
Standard 2 way Chute

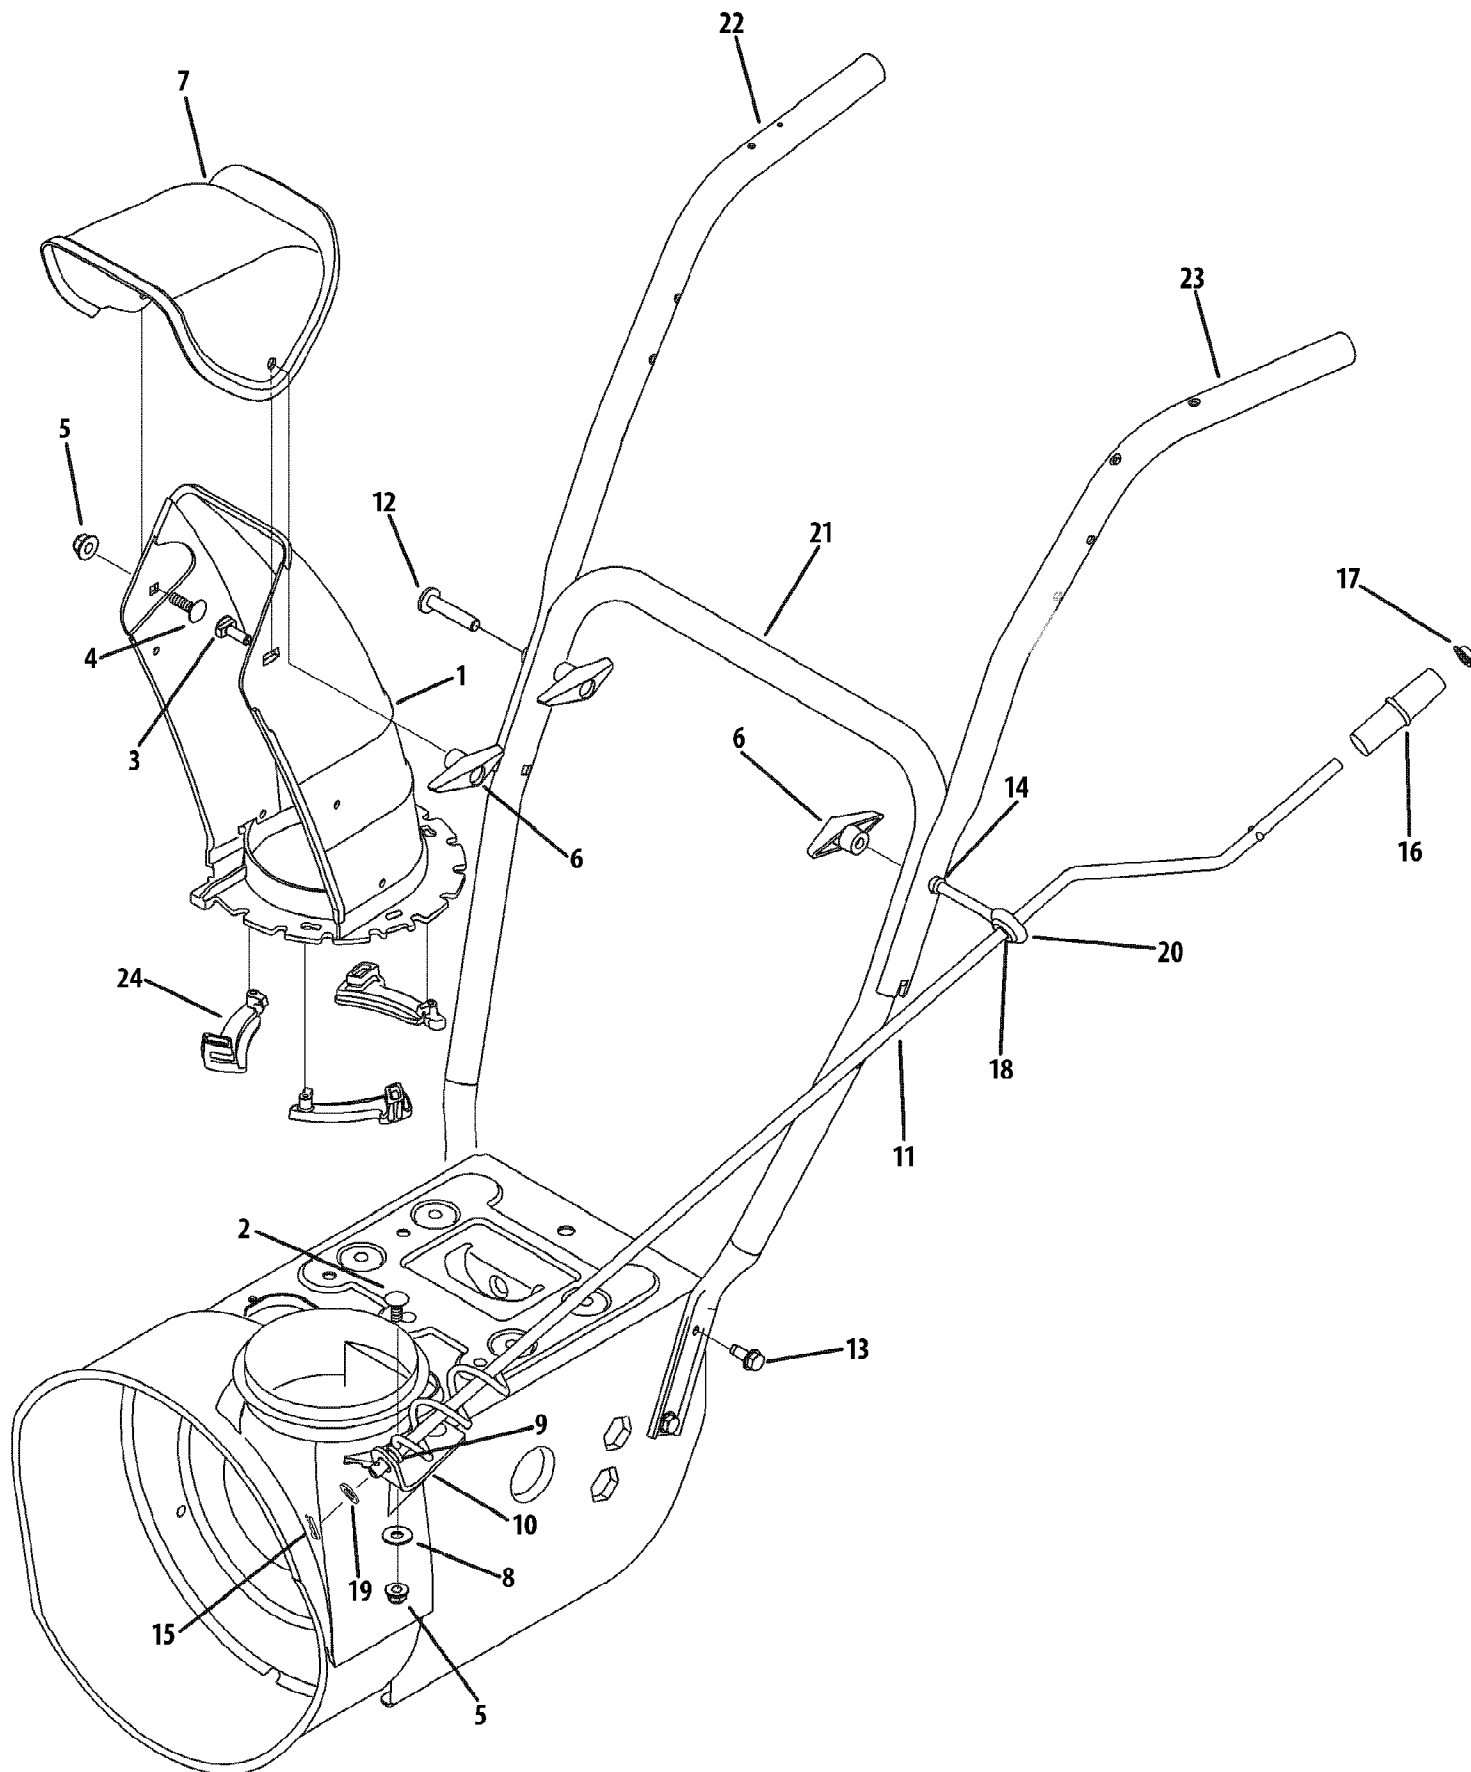

31AH6WFG790 (2008)
Standard 2 way Chute

Page 34 of 34

Ref #	Part Number	Qty	S/P/F	Description
1	631-04131B	1	/P	Chute Assembly
2	710-0276	1	/P	Carriage Screw, 5/16-18 x 1.00
3	710-04071	1		Carriage Bolt, 5/16-18 x 1.00
4	710-0451	1	/P	Carriage Bolt, 5/16-18 x .750
5	712-04063	1	/P	Flange Lock Nut, 5/16-18
6	720-0284	1	S	Wing Knob
7	731-04426A	1	/P	Upper Chute
8	736-0159	1	S	Flat Washer, .349 x .879 x .063
9	741-0475	1	S	Plastic Bushing, .380 ID
10	784-5647	1	S	Chute Crank Bracket
11	684-04104	1	S	Chute Crank Assembly
12	710-0449	1	S	Carriage Screw, 5/16-18 x 2.25
13	710-04484	1		Hex Washer Screw, 5/16-18 x .750
14	712-3010	1	S	Hex Nut, 5/16-18
15	714-0104	1	S	Cotter Pin, .072 x 1.13
16	720-0201A	1	/P	Chute Crank Knob
17	726-0100	1	S	Push Rod Cap, 3/8
18	735-0234	1		Rubber Grom., .44 ID x .94 OD x .50
19	736-0185	1	S	Flat Washer, .375 x .738 x .063
20	747-0697	1	/P	Chute Crank Eye Bolt, .70
21	749-04138A	1	/P	Lower Handle
22	749-04190A	1	/P	Upper Handle, RH
23	749-04191A	1		Upper Handle, LH
24	731-04869	1	S	Chute Flange Keeper