


ZT-4200 (2007)
Drive

Page 1 of 20

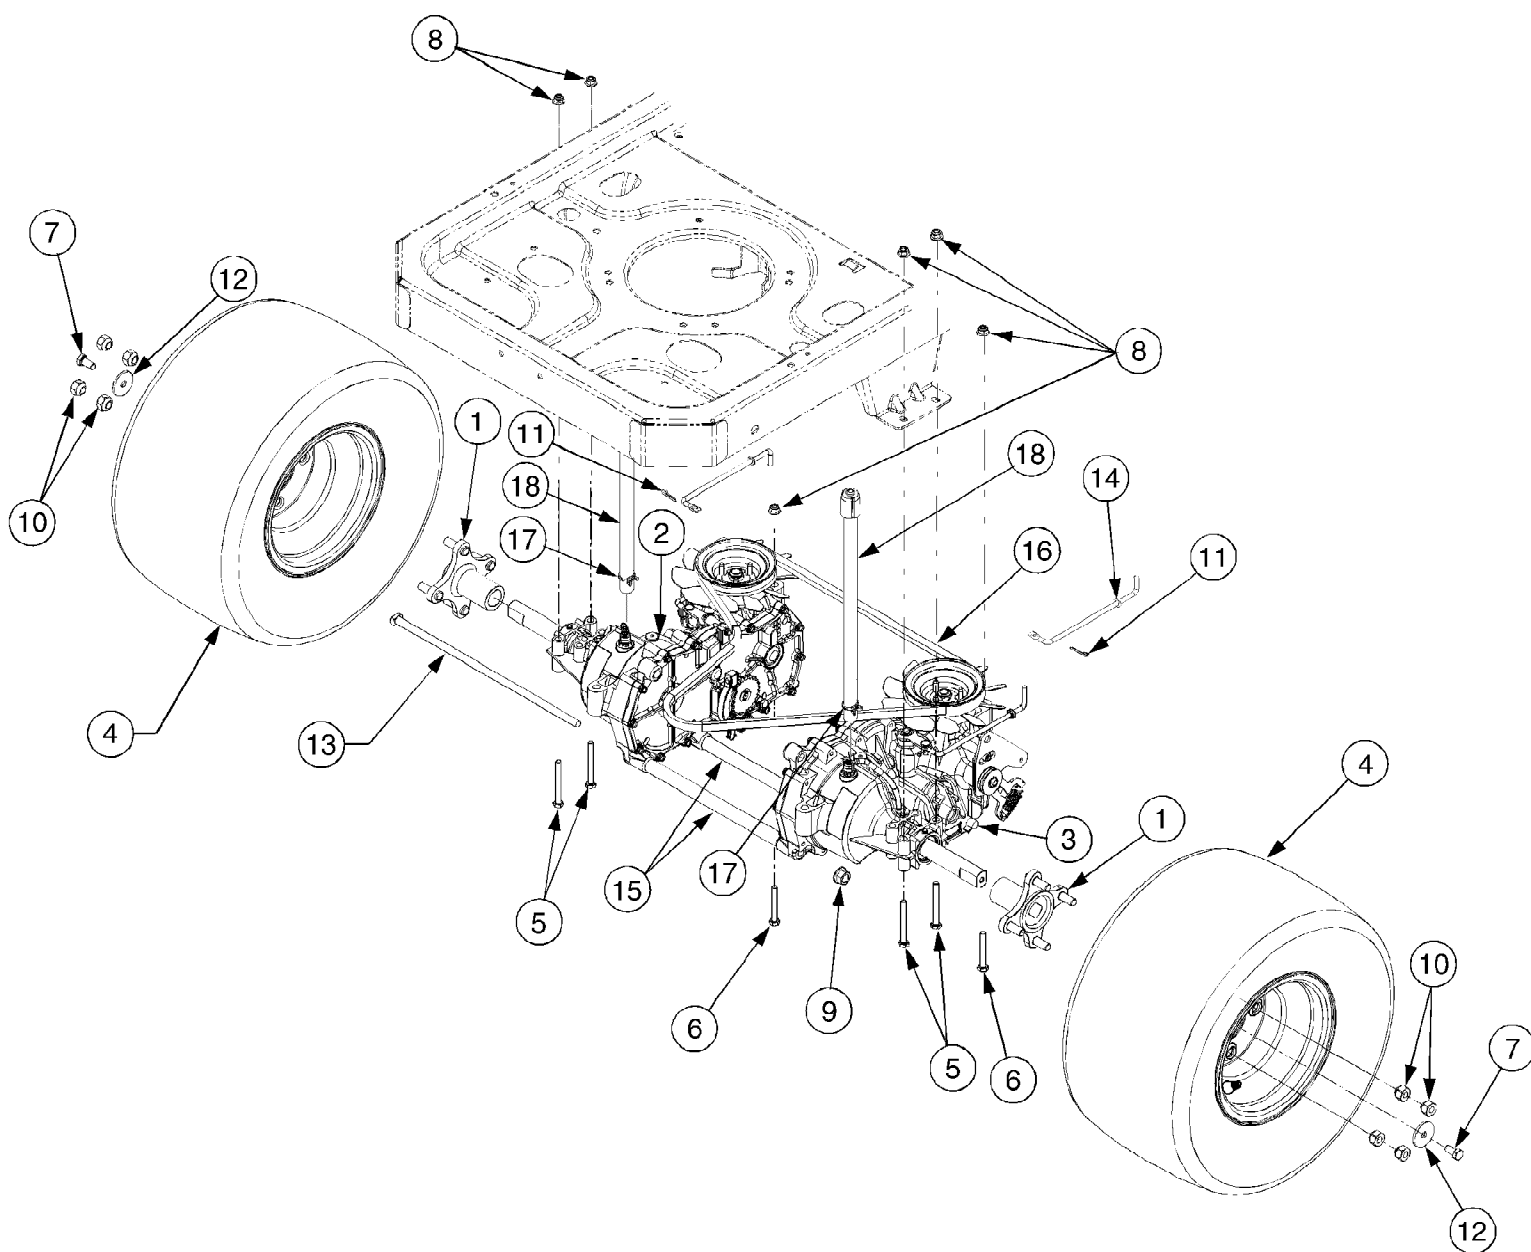


ZT-4200 (2007)
Drive

Page 2 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	918-04317	2	/P	Hub, Wheel
1	710-0852	8	/P	Stud, Rib Neck, 7/16-14 x 1.6 not shown
2	618-04431	1	S	Transmission Assembly LH -Before Mfg. Date A267
2	618-04431A	1	S	Transmission Assembly LH -Mfg. Date A267 & After - Replaces 618-04431
	732-04448	1	/P	Neutral Return Spring must have the same color neutral return spring on RH & LH transmission, not shown
3	618-04432	1	S	Transmission Assembly RH -Before Mfg. Date A267
3	618-04432A	1	S	Transmission Assembly RH -Mfg.Date A267 & After - Replaces 618-04432
	732-04448	1	/P	Neutral Return Spring must have the same color neutral return spring on RH & LH transmission, not shown
4	634-04294	2		ZT4200 Wheel Ass'y, 18 x 6.5 x 8
4	734-04246	2		ZT4200 Tire, 18 x 6.5 x 8 not shown
4	603-04173	2		ZT4200 Rim Assembly not shown
4	734-0255	2	S	Valve Assembly not shown
4	634-04171	2	S	ZT5000 Wheel Ass'y, 18 x 9.5 x 8
4	734-1729	2		ZT5000 Tire, 18 x 9.5 x 8 not shown
4	603-04175	2		ZT5000 Rim Assembly not shown
4	734-0255	2	S	Valve Assembly not shown
5	710-0176	4	/P	Screw, Hex Cap, 5/16-18 x 2.75 GR5
6	710-0395	2	/P	Screw, Hex Cap, 5/16-18 x 2.25 GR5
7	710-3119	2	/P	Screw, Hex Cap Lock, 3/8-16 x .75 GR5
8	712-04063	6	/P	Nut, Hx Flnge Insert Lck, 5/16-18 GrF
9	712-0459	2	/P	Nut, Hex Flange Lock, 7/16-20 GrB .
10	712-3050	8	/P	Nut, Lug, 7/16-14
11	714-0507	2	S	Pin, Cotter, 3/32 x .75
12	736-0227	2	S	Washer, Flat, .39 x 1.5 .134
13	738-04192	2		Rod, .405 x 14.0
14	747-04217C	2	S	Rod, Bypass
15	750-04561	2		Tube, .45 x .69 x 10.2
16	754-04043	1	S	V-Belt, Type A Sec x 57.7
17	726-04059	2		Clamp, Hose
18	751-10474	2		Hose, Breather
	737-3120	1	/P	Drive System Fluid not shown

ZT-4200 (2007)
Electrical

Page 3 of 20

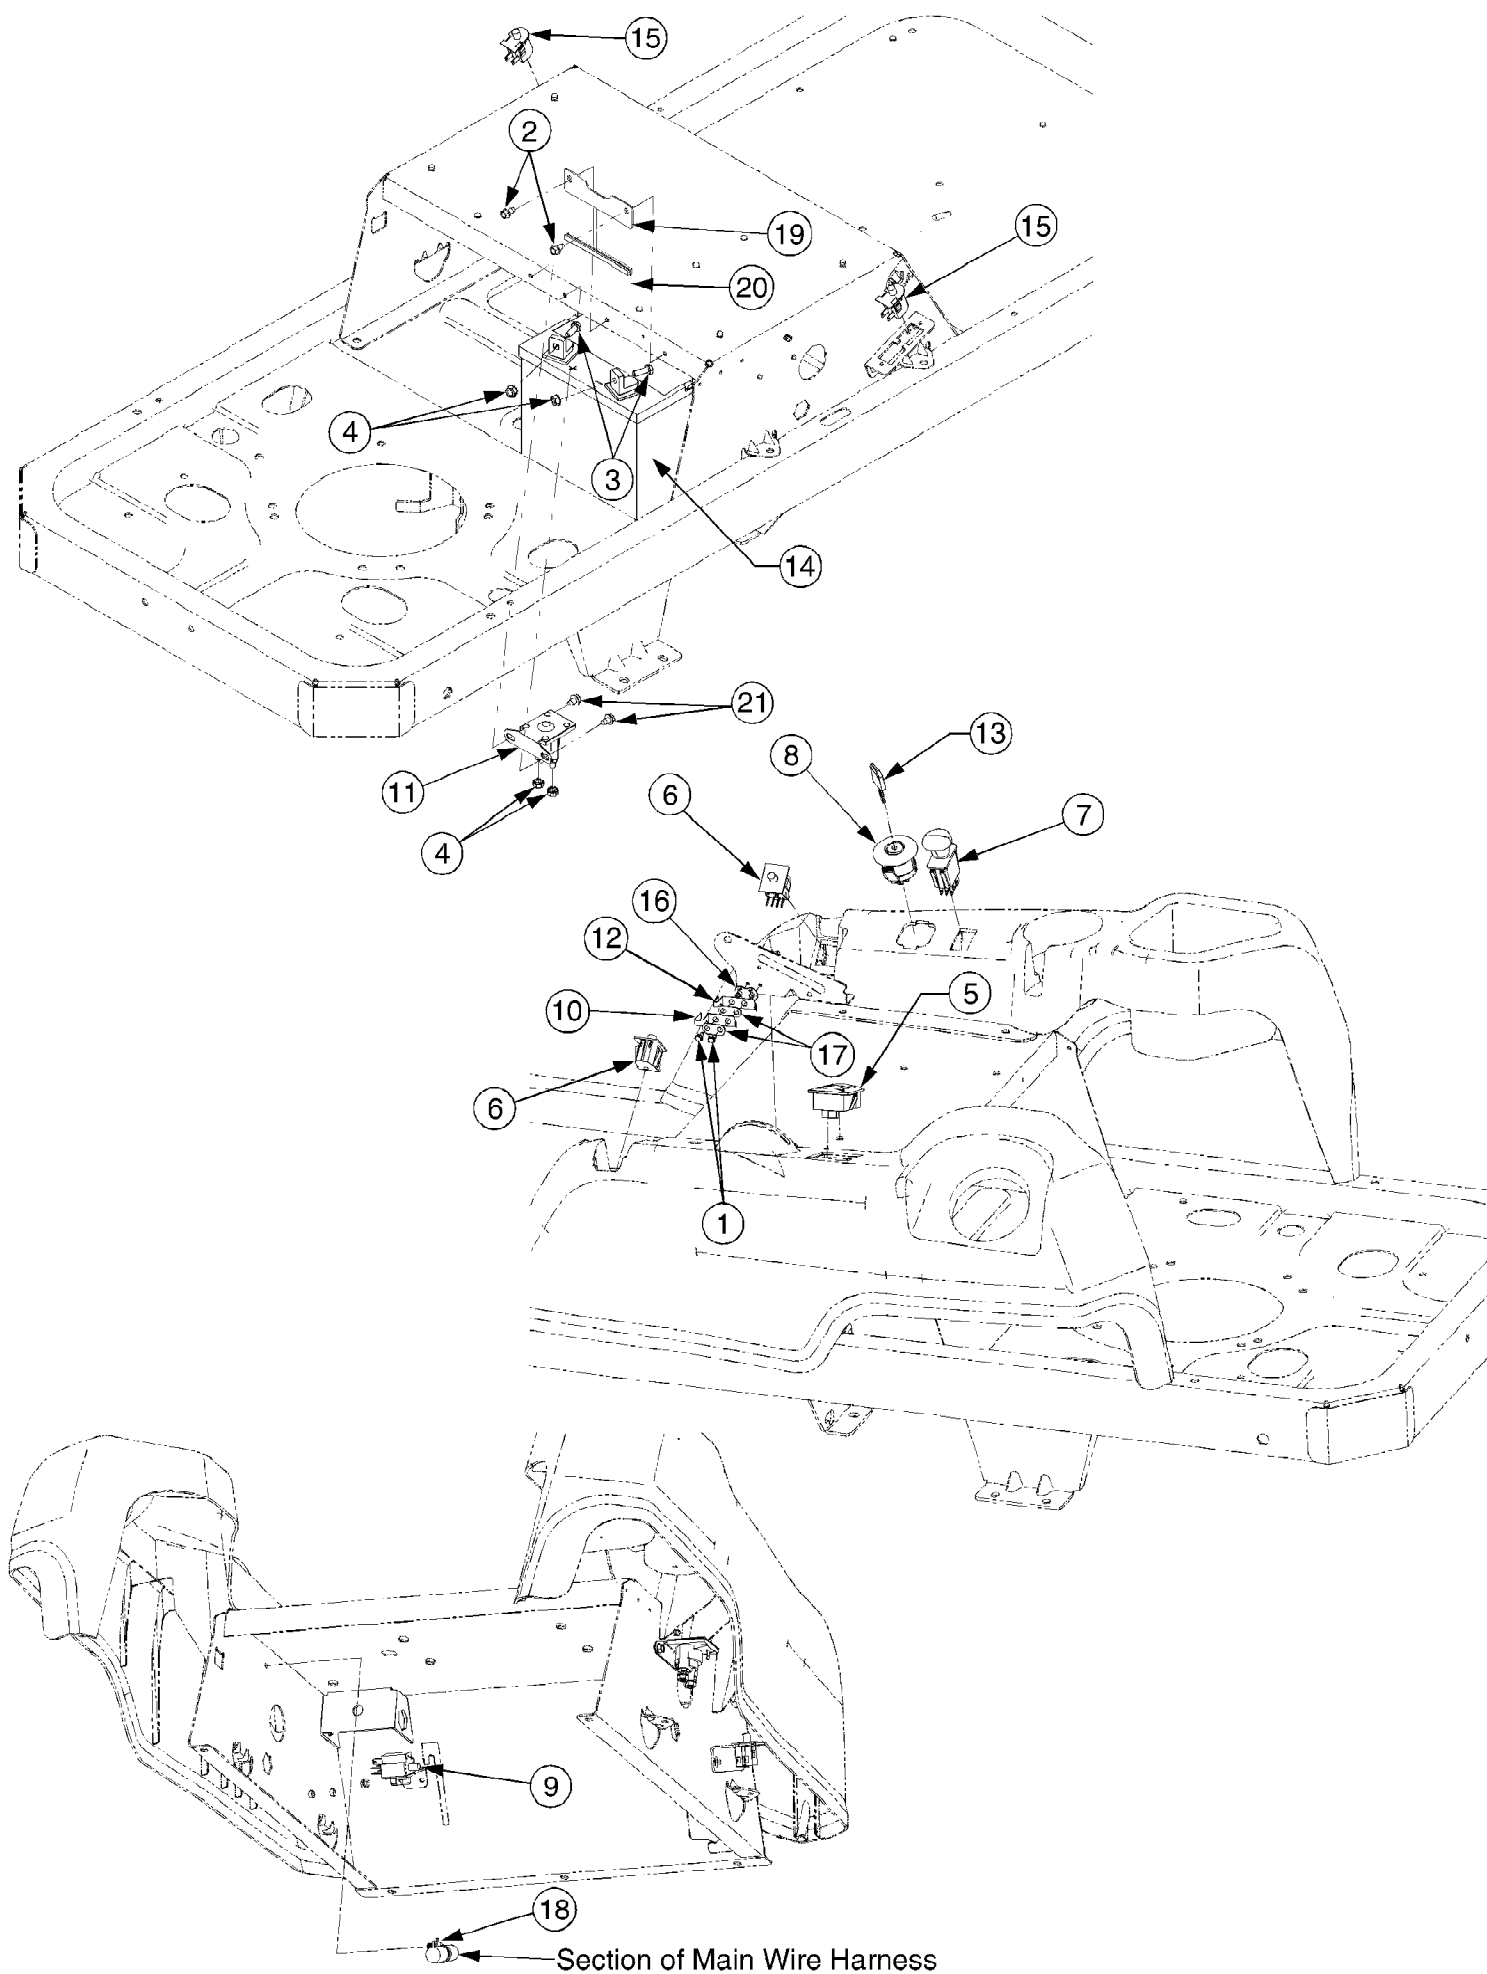


ZT-4200 (2007)
Electrical

Page 4 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	710-0227	2	/P	Screw, Hex Wash. Hd. Tapp #8-18 x .5
2	710-0599	2	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5
3	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
4	712-0271	4	/P	Nut, Hex Sems, 1/4-20
5	725-04022B	1	S	Meter, Hour
6	725-04165	2	S	Switch, Dbl. Pole - Neutral
7	725-04174	1	S	Switch, PTO
8	725-04228	1	S	Switch, Ignition
9	725-04232	1		Switch, 3-Pole, (NC-NO-NO) - Brake
10	725-1303	1	S	Switch, Outer Seat Spring
11	725-1426A	1	S	Solenoid
12	725-1439	1		Switch, Inner Seat Spring
13	925-1745	1	S	Key
14	725-1707D	1	S	Battery, 235 CCA
15	725-3166	2	S	Switch, Snap Mount (N.C.) - Reverse
16	726-0278	1		Plate, Insulator Boss
17	726-0279	2		Plate, Insulator
18	726-0470	2		Tie, Cable
19	703-05894	1	S	Bracket, Battery Holddown
20	731-0511-5	1		Strip, Trim 4.5 in
21	710-0653	2	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .375
	725-04434	1		Harness Assembly, Wire not shown

ZT-4200 (2007)
Engine Connections Model ZT-4200

Page 5 of 20

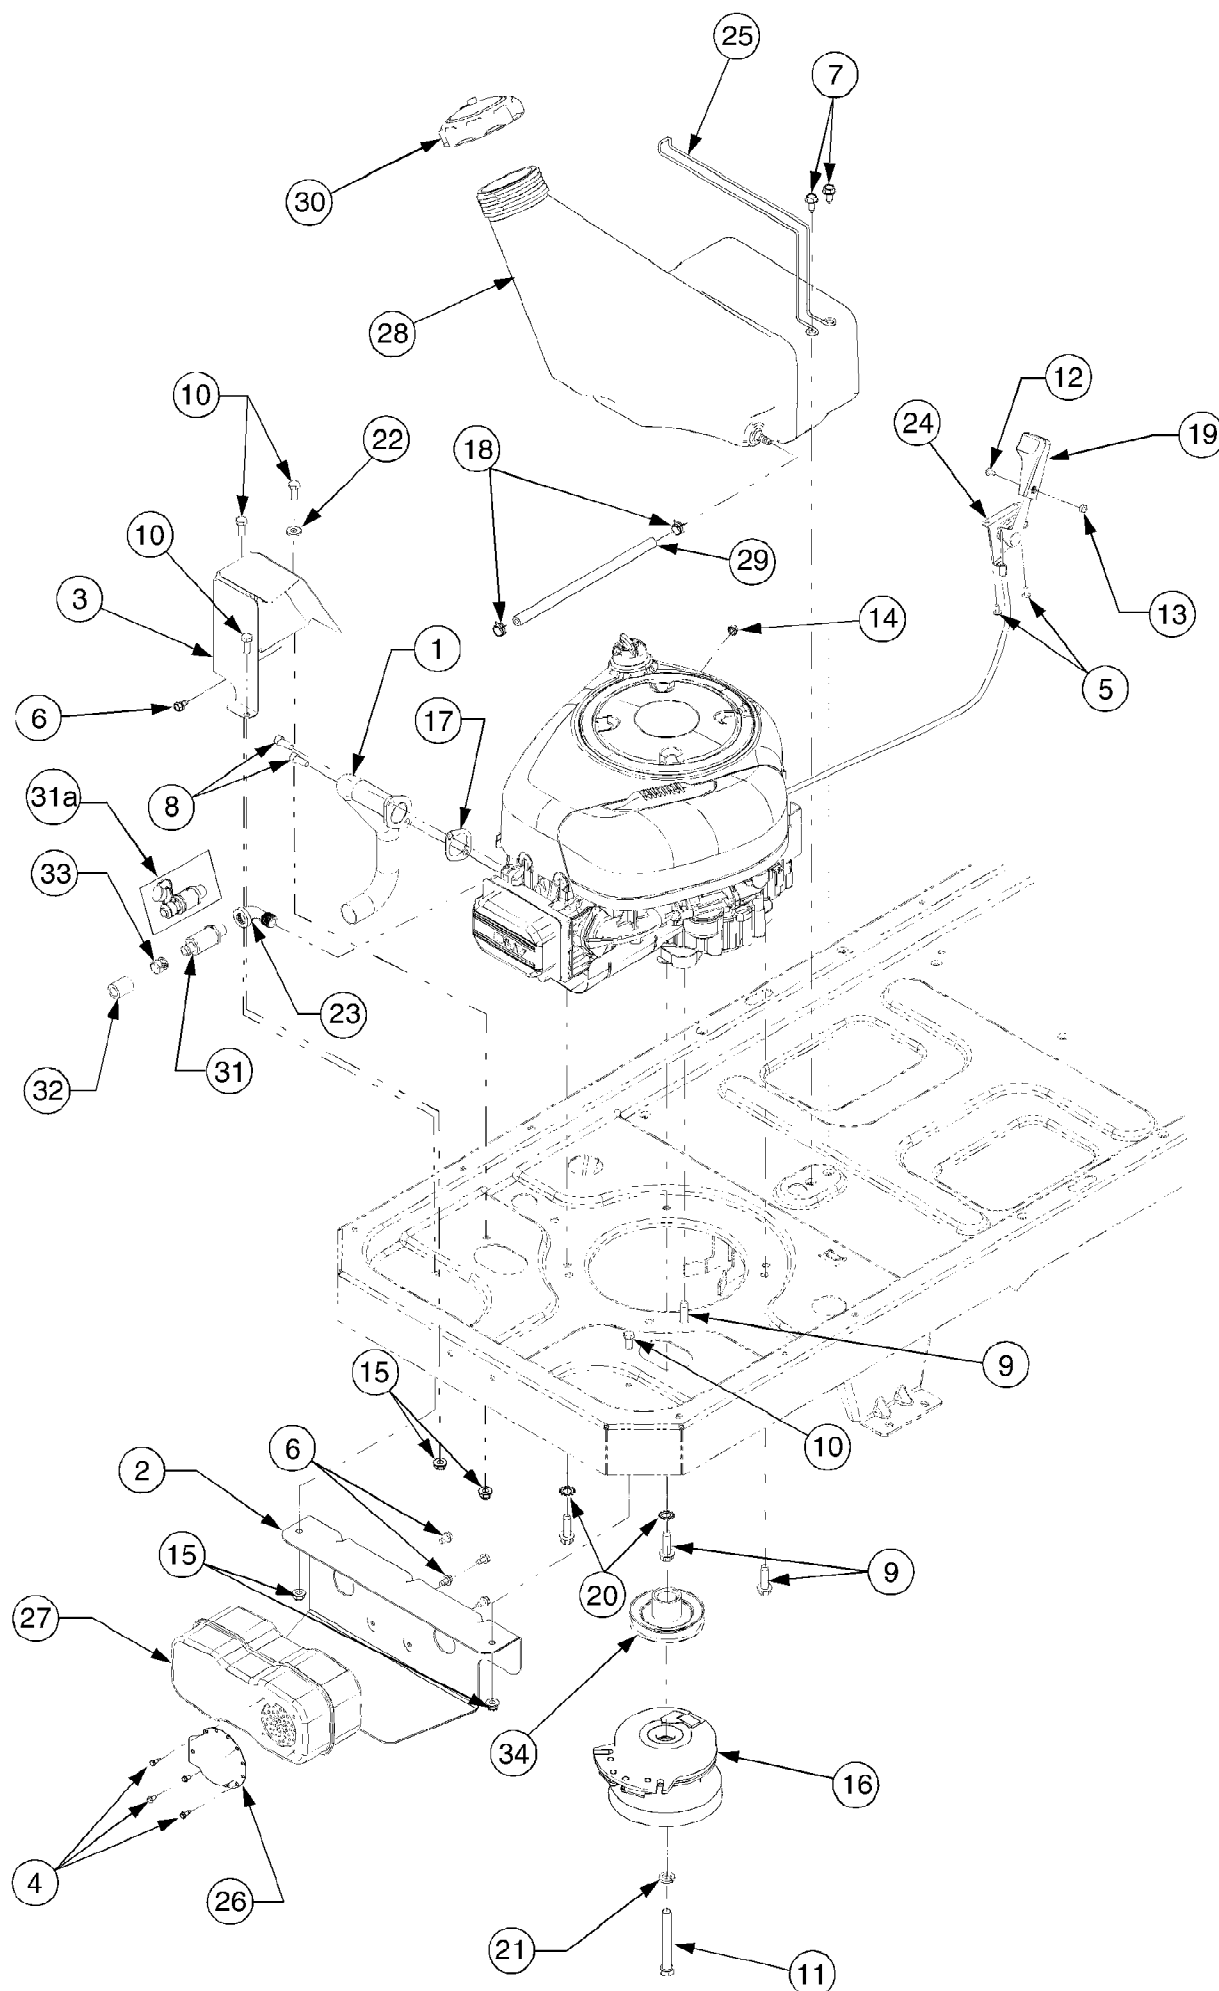

ZT-4200 (2007)


Page 6 of 20

Engine Connections Model ZT-4200

Ref #	Part Number	Qty	S/P/F	Description
1	603-04176A	1	/P	Tube, Exhaust
2	703-05441A	1	/P	Bracket, Muffler Mounting
3	703-05870	1		Shield, Muffler Tube Heat
4	710-0227	3	/P	Screw, Hex Wash. Hd. Tapp #8-18 x .5
5	710-04261	2		Screw, Hex Wash. Hd. Tapp #12-16 x .5
6	710-0599	4	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
7	710-0726	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-12 x .75
8	710-1314A	2	/P	Screw, Socket Hd. 5/16-18 x .75
9	710-1315	4	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x 1.25
10	710-3008	4	/P	Screw, Hex Cap, 5/16-18 x .75 GR5
11	710-3157A	1	/P	Screw, Hx Cap Lk., 7/16-20 x 3.25 GR5
12	710-3217	1	/P	Screw, Truss Hd. Mach. #8-32 x .375
13	712-0142	1	/P	Nut, Hex, #8-32
14	712-0271	1	/P	Nut, Hex Sems, 1/4-20
15	712-04063	4	/P	Nut, Hx Insert Flange Lck, 5/16-18 GrF
16	717-04376	1	S	Clutch Assembly, Electric PTO
17	721-0208	1	S	Gasket, Exhaust (B&S- 272293)
18	726-0205	2	/P	Clamp, Hose
19	731-04914	1	/P	Knob, Throttle Control
20	736-0148	2		Washer, Ext. Tooth Lock, 3/8
21	736-0171	1	S	Washer, Lock, 7/16
22	736-3008	1	S	Washer, Flat, .344 x .75 x .12
23	737-0125	1		Fitting, Elbow
24	746-04161	1	S	Cable, Throttle, 39.0 Lg
25	747-04228A	1		Wire, Tank Mounting
26	751-0564B	1	/P	Deflector, Muffler
27	751-0617B	1	S	Muffler
28	751-10057C	1	S	Tank, Fuel, 3.0 Gal.
29	751-10349	1		Hose, Fuel Line 6.5in
30	751-3124B	1	S	Cap, Fuel
31	751-3140	1	S	Valve, Oil Drain - Before Mfg. Code C097
31a	751-10517	1	S	Valve, Oil Drain - Mfg. Code C097 and After
32	751-3141-14	1	/P	Hose, Oil Drain Extension
33	751-3142	1		Cap, Oil Drain Valve - Before Mfg. Code C097
34	756-0978B	1	/P	Pulley, Drive

ZT-4200 (2007)
Frame

Page 7 of 20

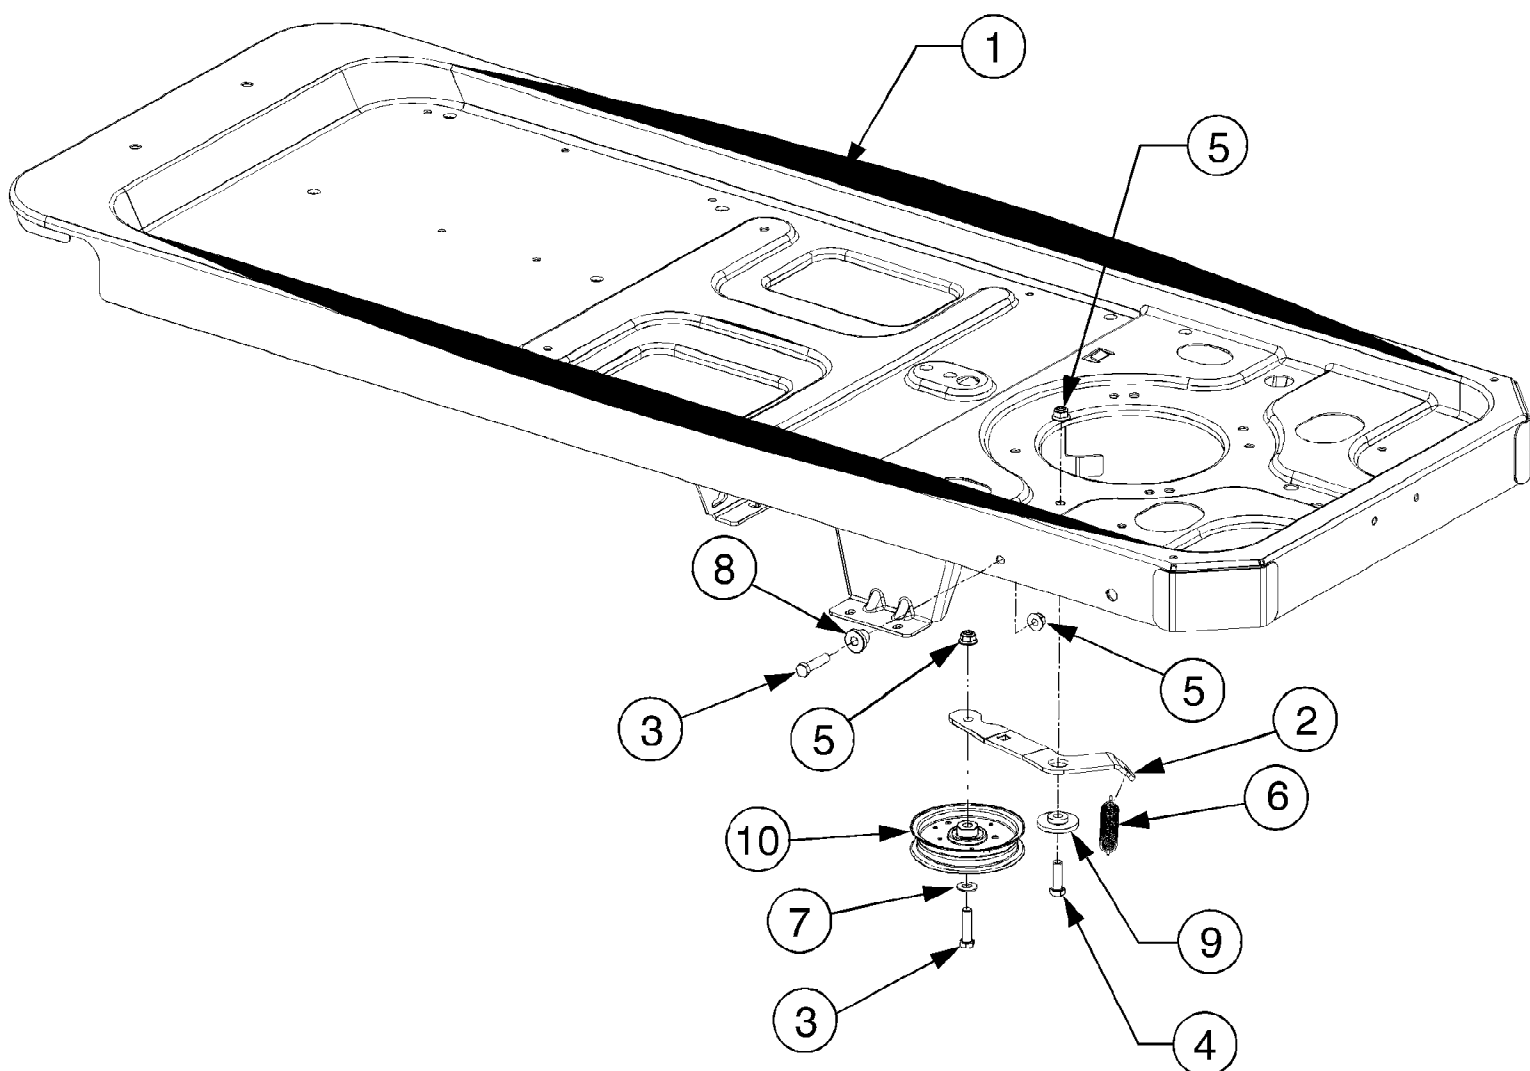


ZT-4200 (2007)
Frame

Page 8 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	603-04303C	1	/P	Frame Assembly
1	777I22489	2		Graphic, Release Lever not shown
1	777D10797	1		Graphic, White Outdoor not shown
2	703-05829	1	/P	Idler Arm, Drive
3	710-0520	3	/P	Screw, Hex Cap, 3/8-16 x 1.5 GR5
4	710-3005	1	/P	Screw, Hex Cap, 3/8-16 x 1.25 GR5
5	712-04065	4	/P	Nut, Hx Insert Flnge Lck, 3/-16 GrF
6	732-0626	1		Spring, Extension, .75 x 5.06
7	736-0300	1	S	Washer, Flat, .408 x .875 x .059
8	738-04058	2		Spacer, Shoulder, .39 x 1.0 x .7
9	738-04162A	1	/P	Spacer, Shoulder, .884 x .19
10	756-04129	1	S	Pulley, Idler, 4.25 Dia.

ZT-4200 (2007)
Front Axle & Wheels Model ZT-4200

Page 9 of 20

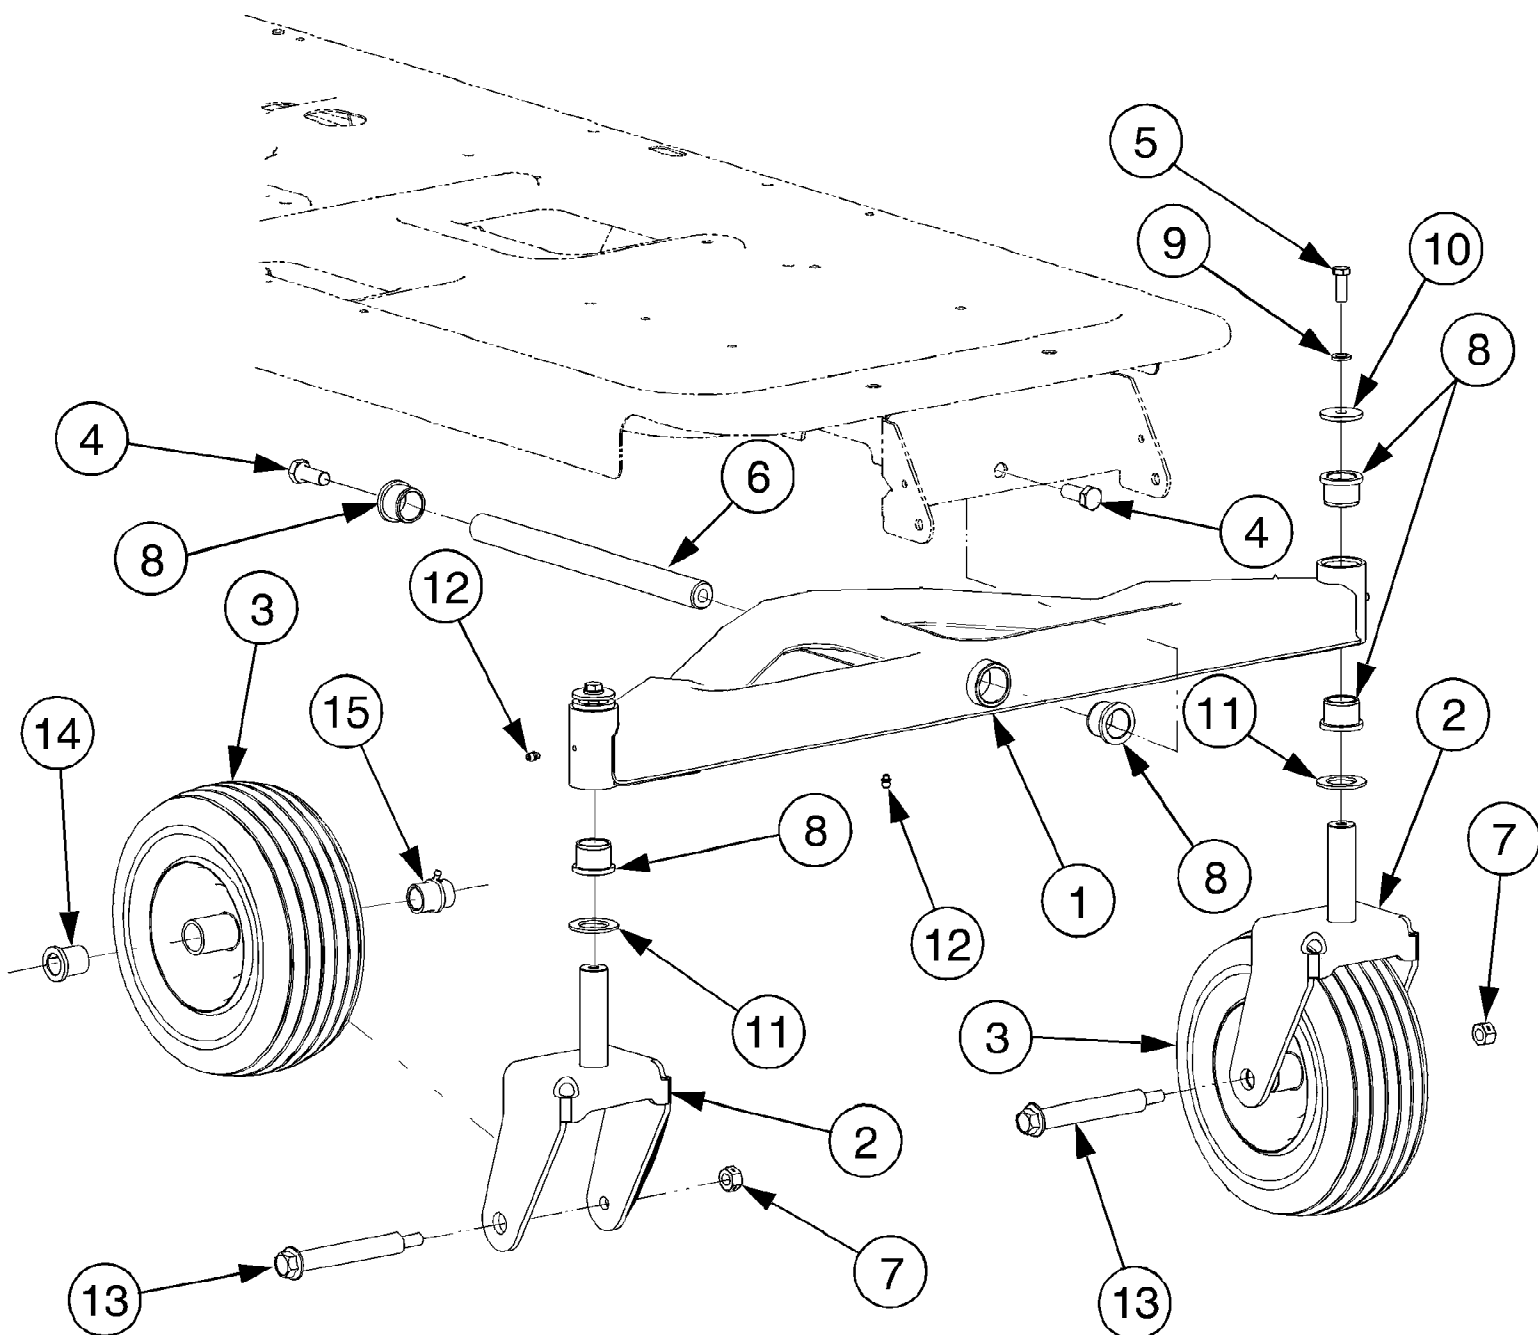

ZT-4200 (2007)


Page 10 of 20

Front Axle & Wheels Model ZT-4200

Ref #	Part Number	Qty	S/P/F	Description
1	603-04148C	1		Axle, Front Pivot
2	603-04308	2		Bracket, Castor Wheel
3	634-04237A	2	S	Wheel Assembly, 11.0 x 4.0 x 5.0
4	710-04186	2	/P	Screw, Hex Lock, 1/2-13 x 1.25 GR5
5	710-0514	2	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
6	711-04228	1	S	Shaft, Axle
7	712-3022	2	/P	Nut, Hex Lock, 1/2-13 GRB
8	731-05500	6		Bearing, Flange, 1.0 x 1.246
9	736-0169	2	S	Washer, Lock, 3/8
10	736-0227	2	S	Washer, Flat, .39 x 1.5 x .134
11	736-0250	2	/P	Washer, Flat, 1.0 x 1.75 x .107
12	737-3000	3	S	Fitting, Lube, 3/16 Drive
13	738-04182A	2	/P	Screw, Shoulder, .75 x 4.75:7/16-14
14	741-0516B	2	/P	Bearing, Flange, .76 x 1.0 x 1.2
15	741-0990B	2	/P	Bearing, Flange, .76 ID w/Lube Ftg.

ZT-4200 (2007)
Mower Deck Model ZT-4200

Page 11 of 20

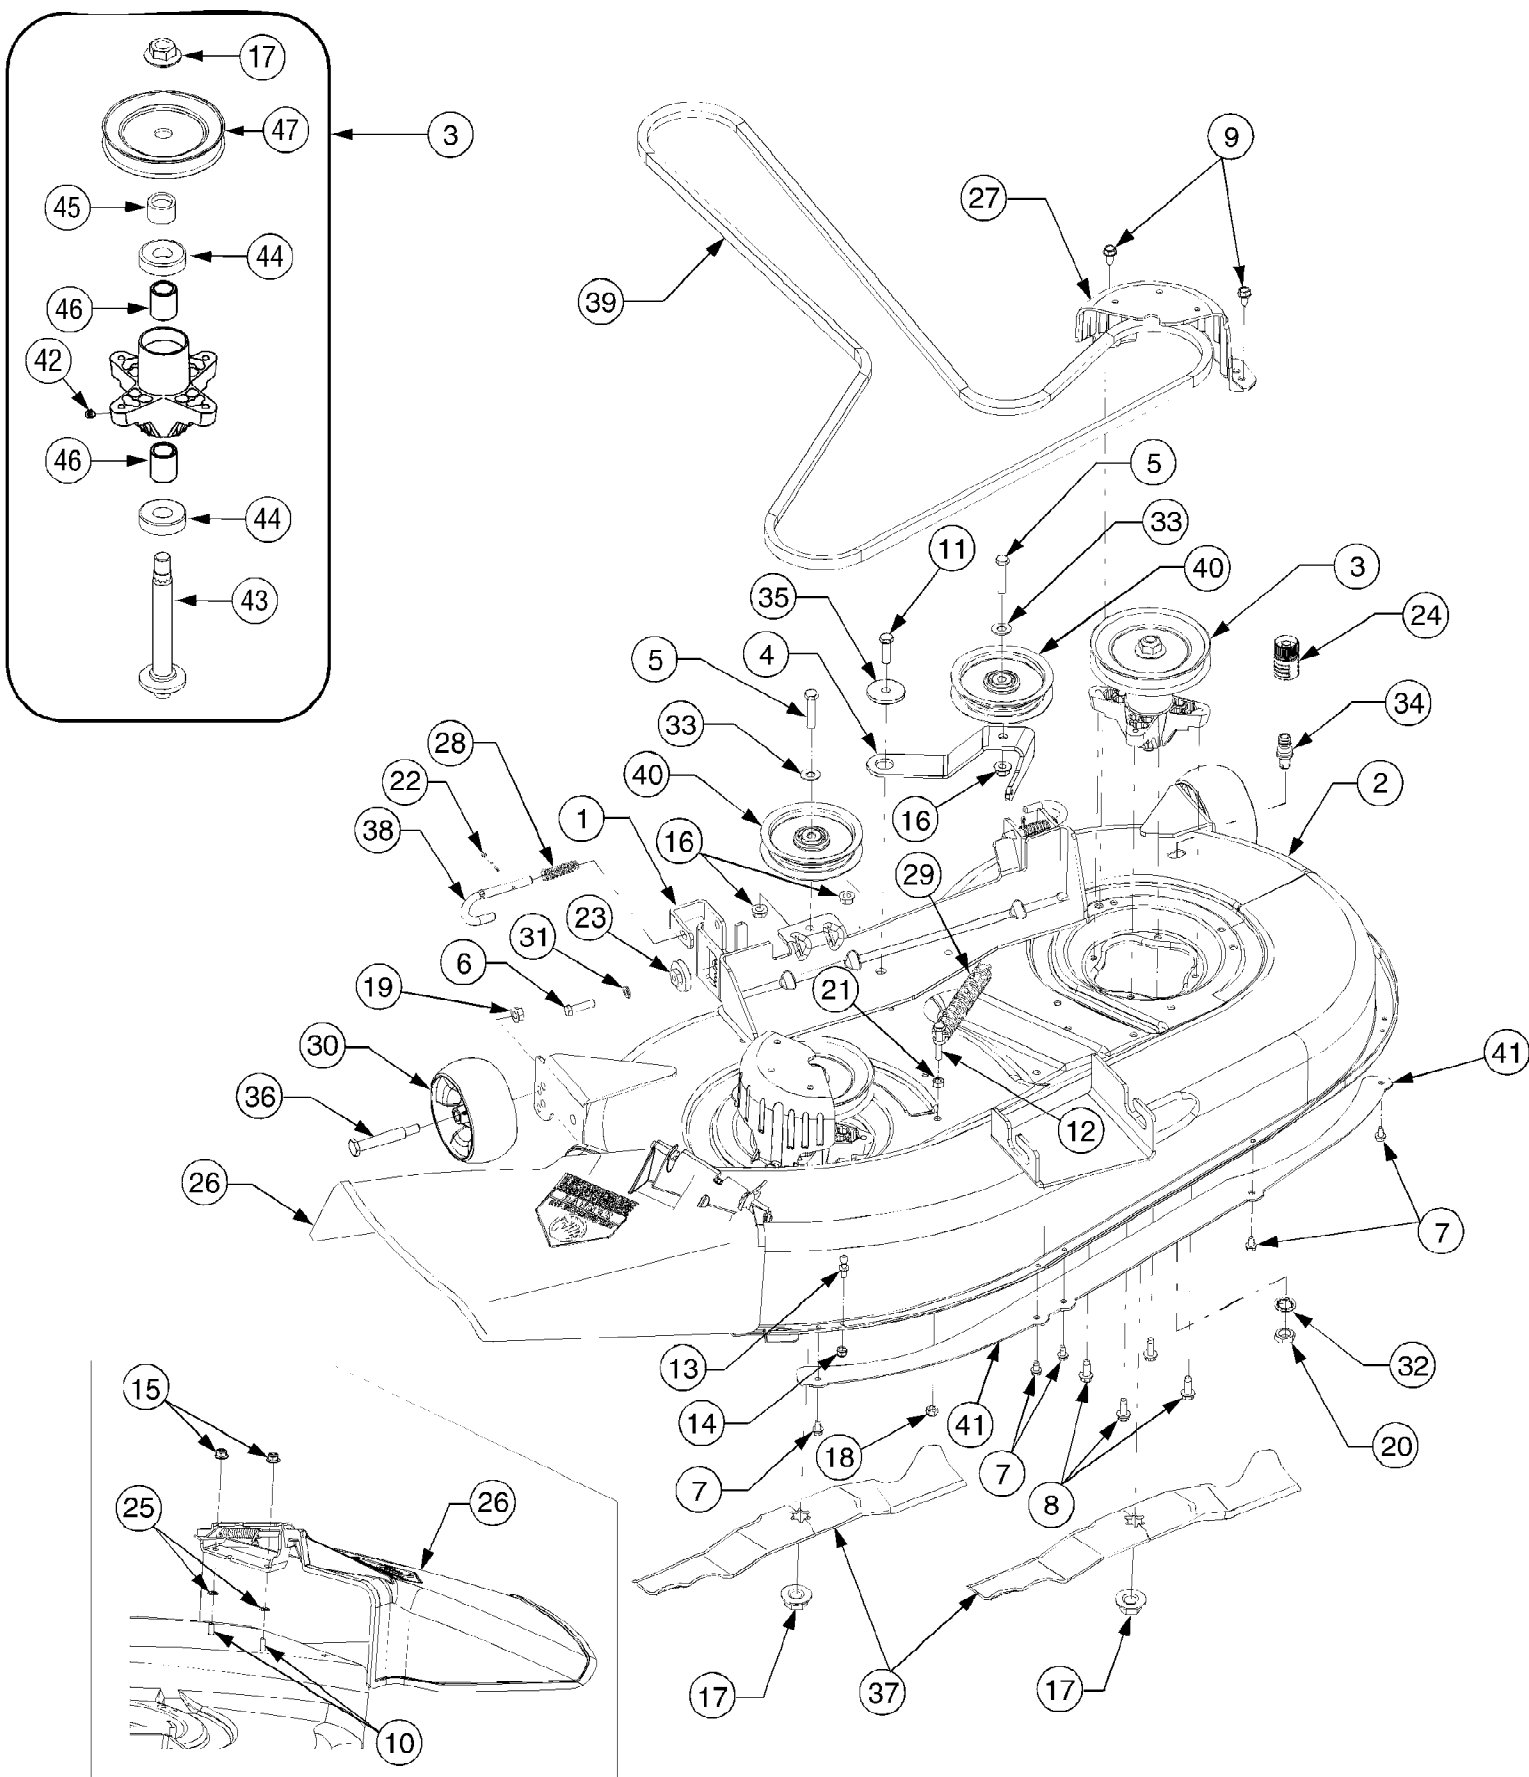


ZT-4200 (2007)

Page 12 of 20

Mower Deck Model ZT-4200

Ref #	Part Number	Qty	S/P/F	Description
1	603-04156	1		Bracket, Deck Lift
2	603-04335C	1		Housing, Deck
2	777S32599	1		Graphic, Danger not shown
2	777S30503	1	/P	Graphic, Danger not shown
2	777I22281	1	S	Graphic, Instruction not shown
2	777D09788	1		Graphic, Deck Wash not shown
2	777D10798	1		Graphic, 42" Wide Cut not shown
3	618-0659	1	S	Spindle Assembly
4	703-05824A	1	S	Arm, Idler
5	710-0347	2	/P	Screw, Hex Cap, 3/8-16 x 1.75 GR5
6	710-0528	1	/P	Screw, Hex Cap, 5/16-18 x 1.25 GR5
7	710-0599	5	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
8	710-1260A	8	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .875
9	710-0726	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-12 x .75
10	710-0751	2	/P	Screw, Hex Cap, 1/4-20 x .62 GR5 ..
11	710-3005	1	/P	Screw, Hex Cap, 3/8-16 x 1.25 GR5
12	710-3180	1	/P	Screw, Hex Cap, 5/16-18 x 1.75 GR5
13	711-04069	1	S	Pin, Grass Catcher, 1/4-20
14	712-0324	1	/P	Nut, Hex Insert Lock, 1/4-20 GR8
15	712-04064	2	/P	Nut, Hx Insert Flange Lck, 1/4-20 GR5
16	712-04065	3	/P	Nut, Hx Insert Flange Lck, 3/8-16 GrF
17	712-0417A	4	/P	Nut, Hex Flange, 5/8-18
18	712-0429	1	S	Nut, Hex Insert Lock, 5/16-18 GR5 ..
19	712-0431	2	S	Nut, Hex Flange Lock, 3/8-16 GrF
20	712-0641	1	S	Nut, Hex, M16-1.5
21	712-3010	1	S	Nut, Hex, 5/16-18 GR5
22	714-0470	2	S	Pin, Cotter, 1/8 x 1.25
23	717-04074	1	S	Gear, Deck Adjustment
24	721-04041	1	S	Adapter, Water Nozzle
25	726-0233	2	/P	Nut, Push, .25 x .5
26	731-1032B	1	S	Chute Assembly, Discharge
26	777S30284	1	S	Graphic, Danger not shown
27	731-2231B	2	/P	Cover, Belt
28	732-0306	2	S	Spring, Compression
29	732-0459	1	S	Spring, Extension, .94 Dia. x 6.74
30	734-04155	2		Wheel, Deck Ball, 5.0
31	736-0119	1	S	Washer, Lock, 5/16
32	736-0225	1	/P	Washer, Internal Tooth Lock, 5/8
33	736-3072	2	/P	Washer, Flat, .38 x .93 x .11 HT
34	737-04003C	1	S	Nozzle, Deck Water
35	738-04162A	1	/P	Spacer, Shoulder, .884 x .19
36	738-3056	2	S	Screw, Shoulder, .5 x 2.5:3/8-16
37	942-0616A	2	/P	Blade, 3 in 1, 21.23
38	747-1116	2	/P	Rod, Deck Hanger
39	754-04137	1	S	Belt, V, Type A Sec x 114.1
40	756-04129	2	S	Pulley, Idler, 4.25 Dia.
41	783-1146A	1	S	Skirt, Deck
42	737-3000	2	S	Fitting, Lube
43	738-01010A	1		Shaft, Spindle, 5.75
44	741-0919	4	S	Bearing, Ball
45	748-0433	1		Spacer, .820 x 1.15 x .73
46	750-1000	4		Spacer, .8 x 1.10 x 1.322
47	756-1227	5		Spacer, .8 x 1.10 x 1.3 Dia

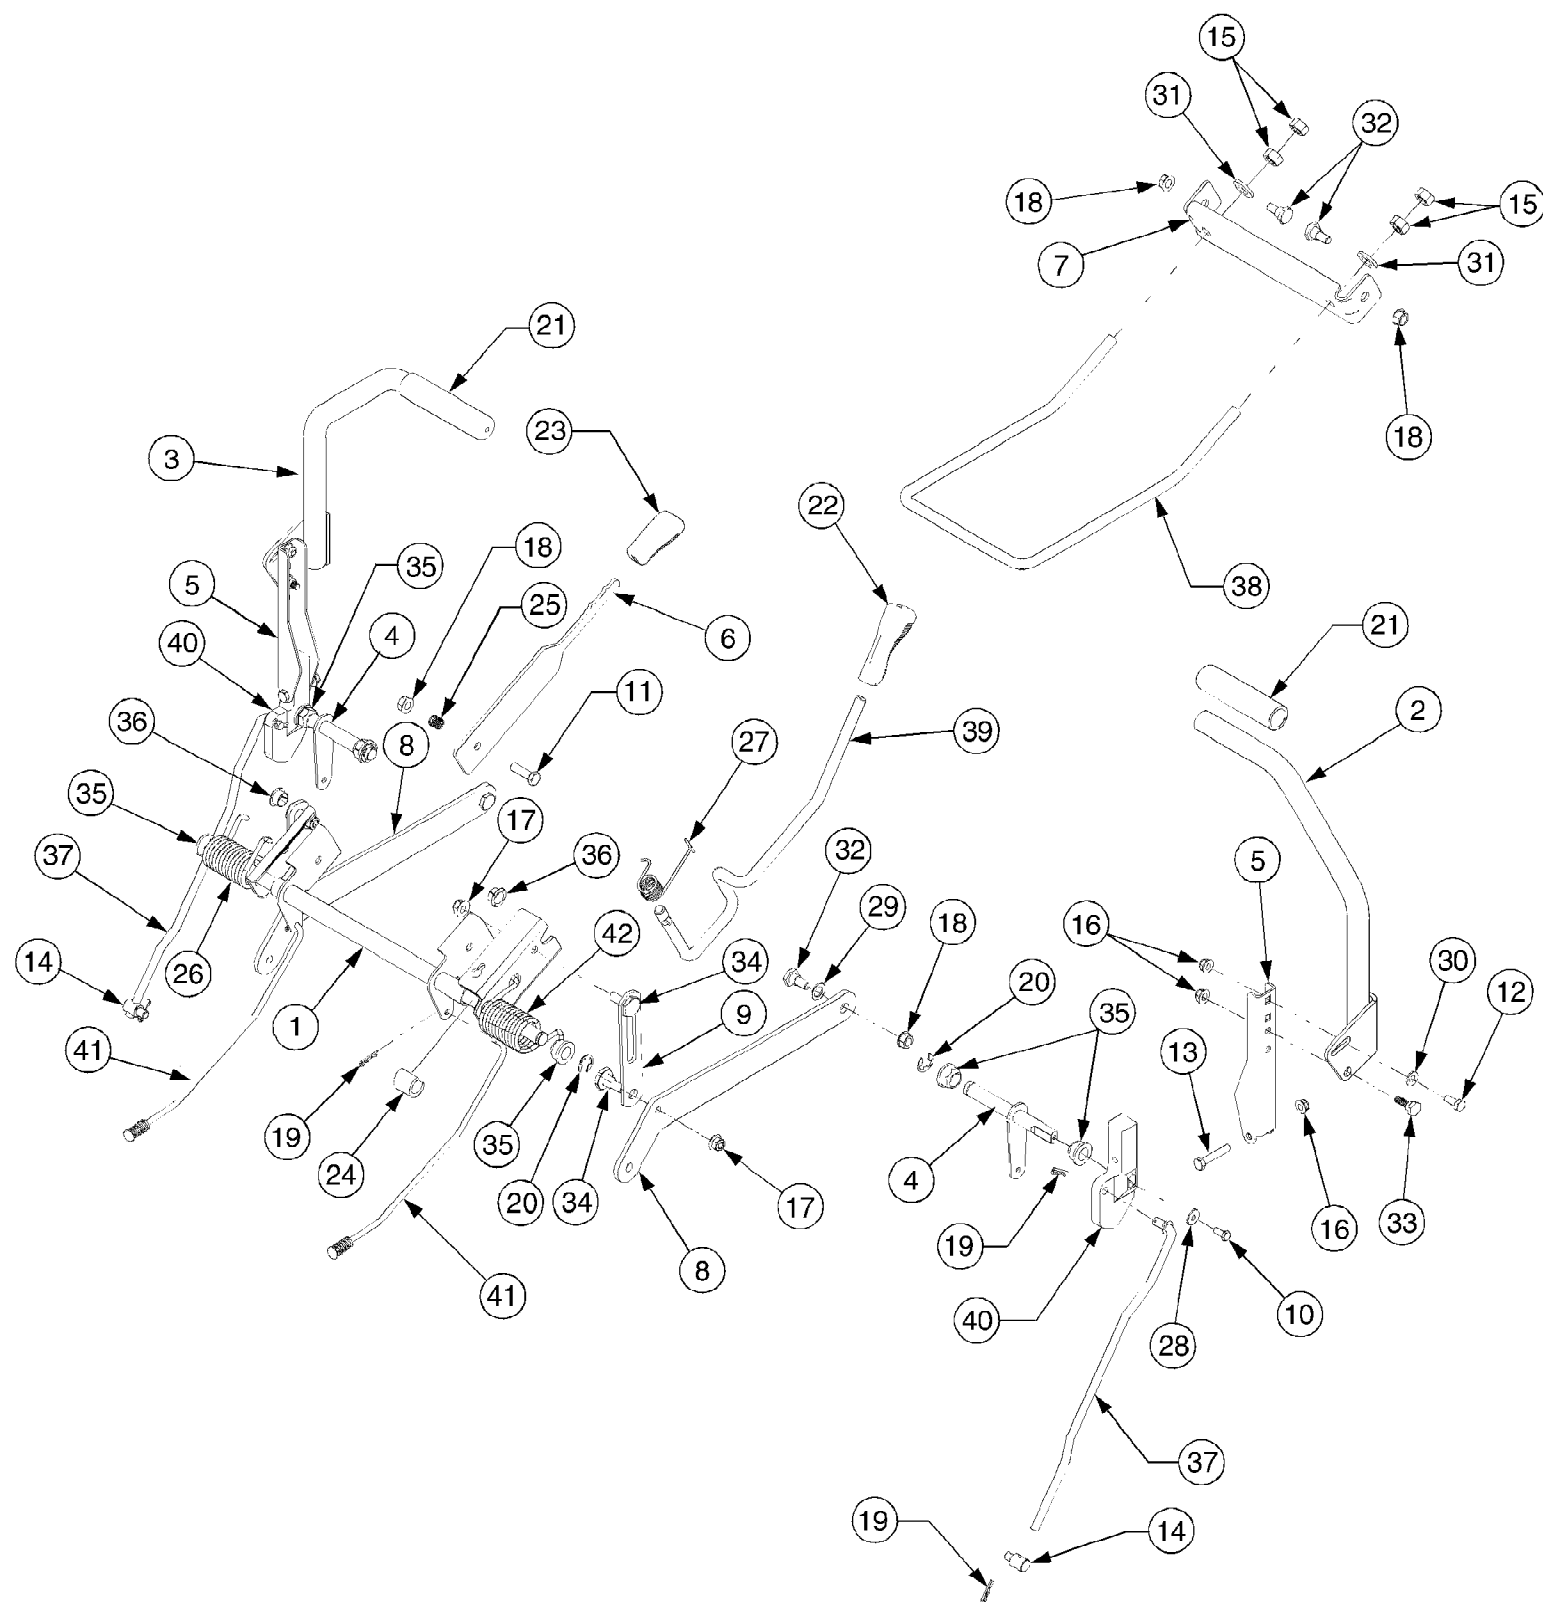


ZT-4200 (2007)
Operator's Controls

Page 14 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	603-04160B	1	S	Shaft Assembly, Deck Lift
2	603-04322	1		Lever, Lapbar, RH
3	603-04324	1		Lever, Lapbar, LH
4	647-04099	2	S	Shaft, Control
5	703-05387A	2	S	Bracket, Lapbar Pivot
6	703-05396	1	S	Handle, Brake
7	703-05414A	1		Bracket, Front Deck Hanger
8	703-05793A	2		Arm, Deck Lift
9	703-05907	2		Plate, Lift Link
10	710-0433	2	/P	Screw, Hex Lock, 1/4-20 x .62 GR5
11	710-3005	1	/P	Screw, Hex Cap, 3/8-16 x 1.25 GR5 ...
12	710-3008	2	/P	Screw, Hex Cap, 5/16-18 x .75 GR5 ...
13	710-3180	2	/P	Screw, Hex Cap, 5/16-18 x 1.75 GR5
14	711-0832	2	S	Ferrule, 3/8-24 x .375
15	712-0206	4	S	Nut, Hex, 1/2-13 GR5
16	712-04063	6	/P	Nut, Hx Flange Insert Lck, 5/16-18 GrF
17	712-04065	4	/P	Nut, Hx Flange Insert Lck, 3/8-16GrF
18	712-0431	5	S	Nut, Hex Flange Lock, 3/8-16 GRF
19	714-0104	6	S	Pin, Internal Cotter
20	716-0106	4	/P	E-Ring , .625 Dia. Shaft
21	720-0274	2	/P	Grip, Hand
22	720-0311	1		Grip, Handle
23	731-04735	1		Grip, Handle
24	731-05732	1		Spacer, .62 x 1.0
25	732-0334	1	S	Spring, Compression
26	732-04420	1		Spring, Torsion LH - Model ZT 5000 ONLY
27	732-04422	1	S	Spring, Torsion
28	736-0270	2	/P	Washer, Bell, .265 x .75 x .062
29	736-0272	2	S	Washer, Flat, .51 x 1.0 x .06
30	736-0275	2	S	Washer, Flat, .344 x .688 x .065
31	736-3019	2		Washer, Flat, .531 x 1.062 x .134 HT ..
32	738-0143	4	/P	Screw, Shoulder, .498 x .340:3/8-16
33	738-0296	2	S	Screw, Shoulder, .437 x .268:5/16-18
34	738-0507B	4	S	Screw, Shoulder, .5 x .434:3/8-16
35	741-0225	6	S	Bearing, Hex Flange
36	741-3074	2		Bearing, Flange, .626 x .938 x .344
37	747-04225A	2	/P	Rod, Lapbar Control
38	747-04401A	1		Rod, Deck Front Hanger
39	747-04637	1		Rod, Deck Lift Handle
40	748-04052	2		Hub, Control
41	947-04065	2	/P	Rod, Brake
42	732-04421	1		Spring, Torsion RH - Model ZT 5000 ONLY

ZT-4200 (2007)
Operator's Platform


Page 15 of 20

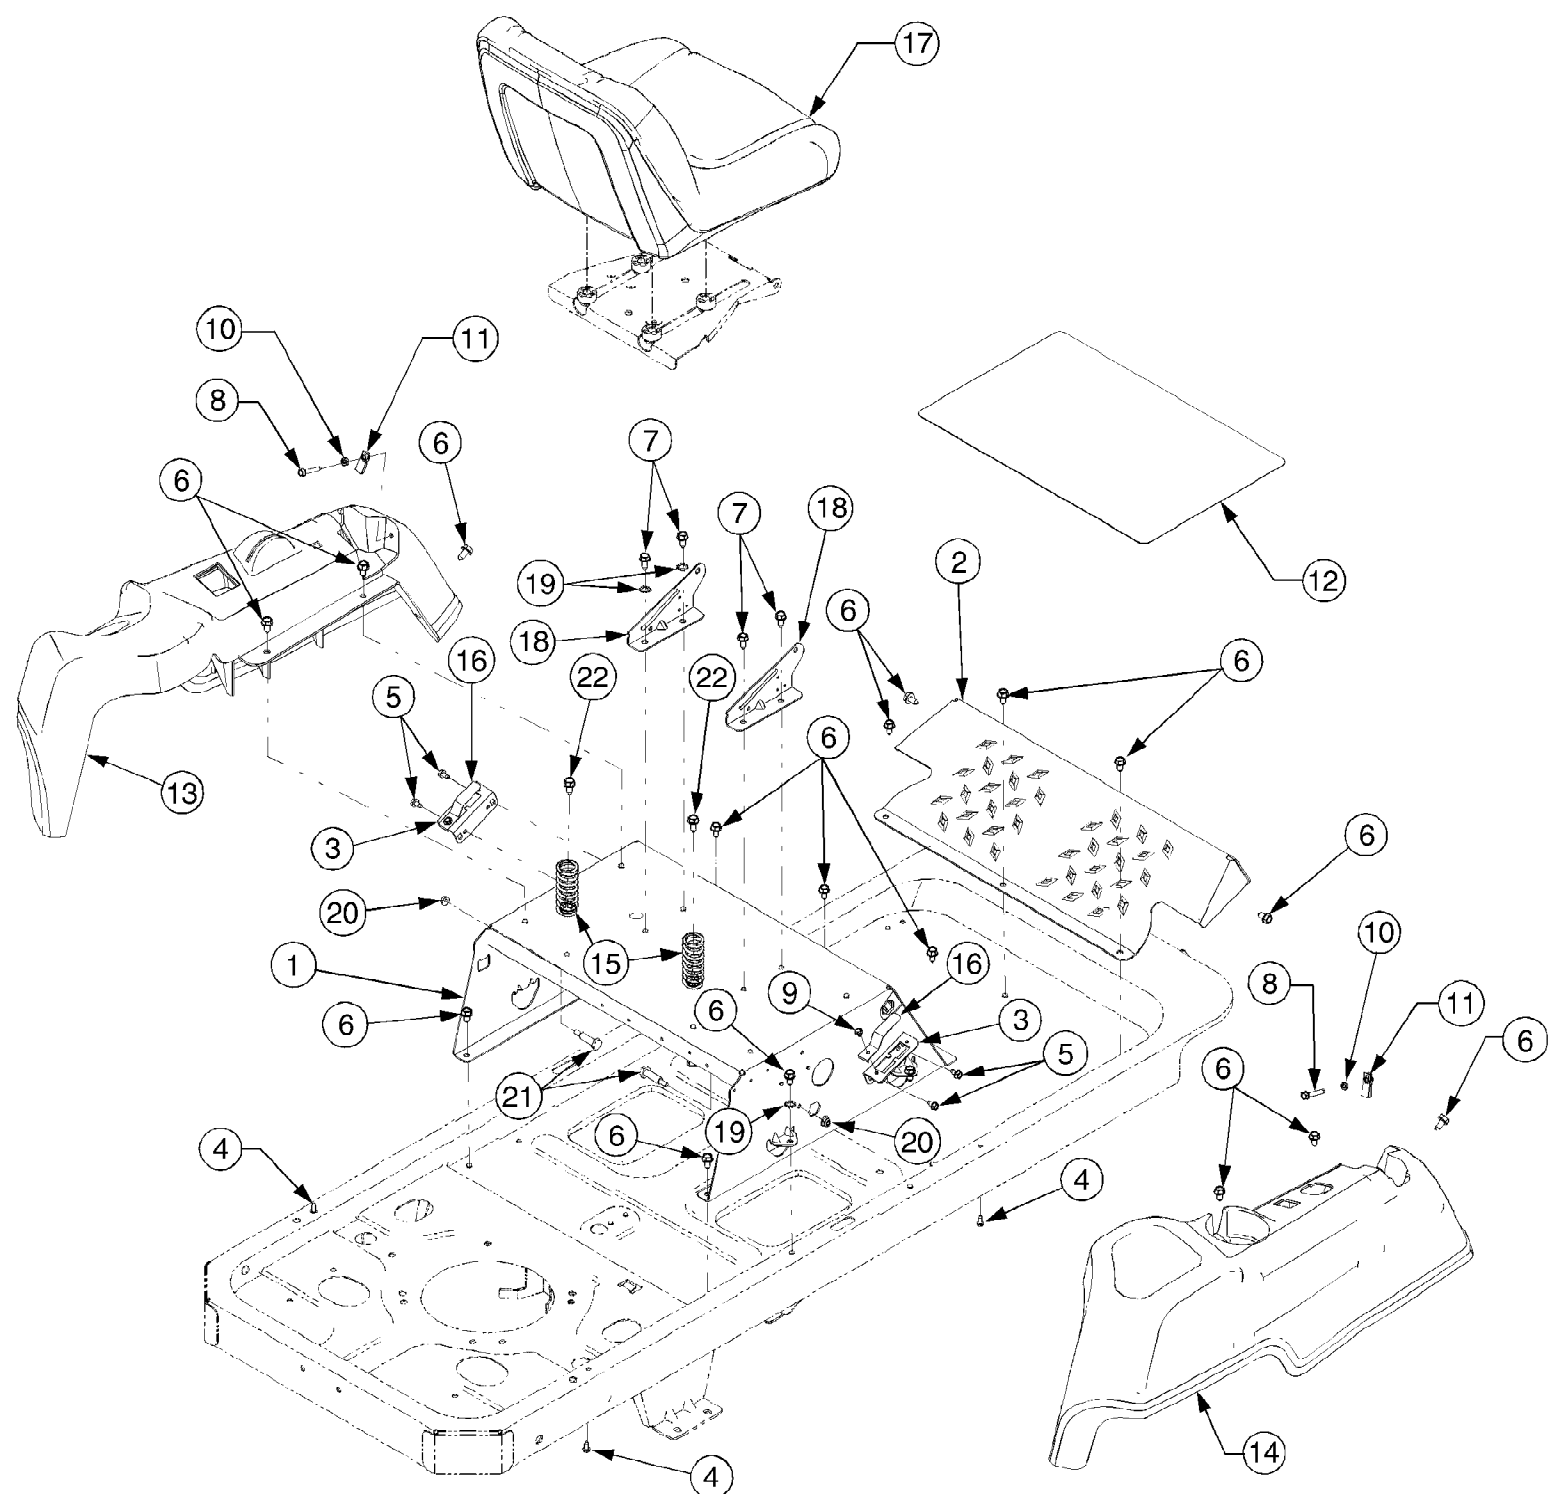

ZT-4200 (2007)
Operator's Platform

Page 16 of 20


Ref #	Part Number	Qty	S/P/F	Description
1	603-04326B	1		Frame, Seat Box
1	777I22769	1		Graphic, Park Brake not shown
1	777S32354	1	S	Graphic, Warning not shown
1	777I22770	1		Graphic, Deck Height not shown
2	703-05373B	1		Bracket, Foot Rest
2	777D10796	1		Graphic, White not shown
3	703-05467	2		Bracket, Switch Mounting
4	710-04261	4		Screw, Hex Wash. Hd Tapp #12-16 x .50
5	710-0599	4	/P	Screw, Hex Wash. Hd. Tapp. 1/4-20 x .5
6	710-0604A	20	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .625
7	710-0726	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-12 x .75
8	710-0778	2	/P	Screw, Hex Wash. Hd. Tapp. 1/4-20 x 1.5
9	710-1268	2	/P	Screw, Hex Wash. Hd Tapp #10-16 x .375
10	712-0298	2	S	Nut, Hex Jam, 1/4-20 GR2
11	712-04092	2		Nut, U Type Speed, 1/4-20
12	723-04020	1		Pad, Foot
13	731-04662C	1	S	Console, LH
13	777I22752	1		Graphic, Instruction - ZT 4200 not shown
13	777I22751	1		Graphic, Instruction - ZT 5000 not shown
13	777D10793	1		Graphic, White Outdoor ZT 4200 not shown
13	777D10795	1		Graphic, White Outdoor ZT 5000 not shown
13	777I22305	1		Graphic, Throttle Control ZT 4200 not shown
13	777I22309	1		Graphic, Throttle Control ZT5000 not shown
14	731-04663B	1	S	Console, RH
14	777I22754	1		Graphic, Instruction not shown
14	777D10792	1		Graphic, White Outdoor ZT 4200 not shown
14	777D10794	1		Graphic, White Outdoor ZT 5000 not shown
15	732-04035	2		Spring, Compression, 1.28 x 3.125
16	732-04200	2	/P	Spring, Switch Actuator
17	757-04041	1		Seat
18	783-1489C	2		Bracket, Seat Pivot
19	736-0148	3		Washer, External Tooth, 3/8
20	712-04064	2	/P	Nut, Hex Insert Lock, 1/4-20 - Model ZT 5000 ONLY
21	738-0572	2	S	Screw, Shoulder, .374 x 1.16:1/4-20 -Model ZT 5000 ONLY
22	710-1260A	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .75

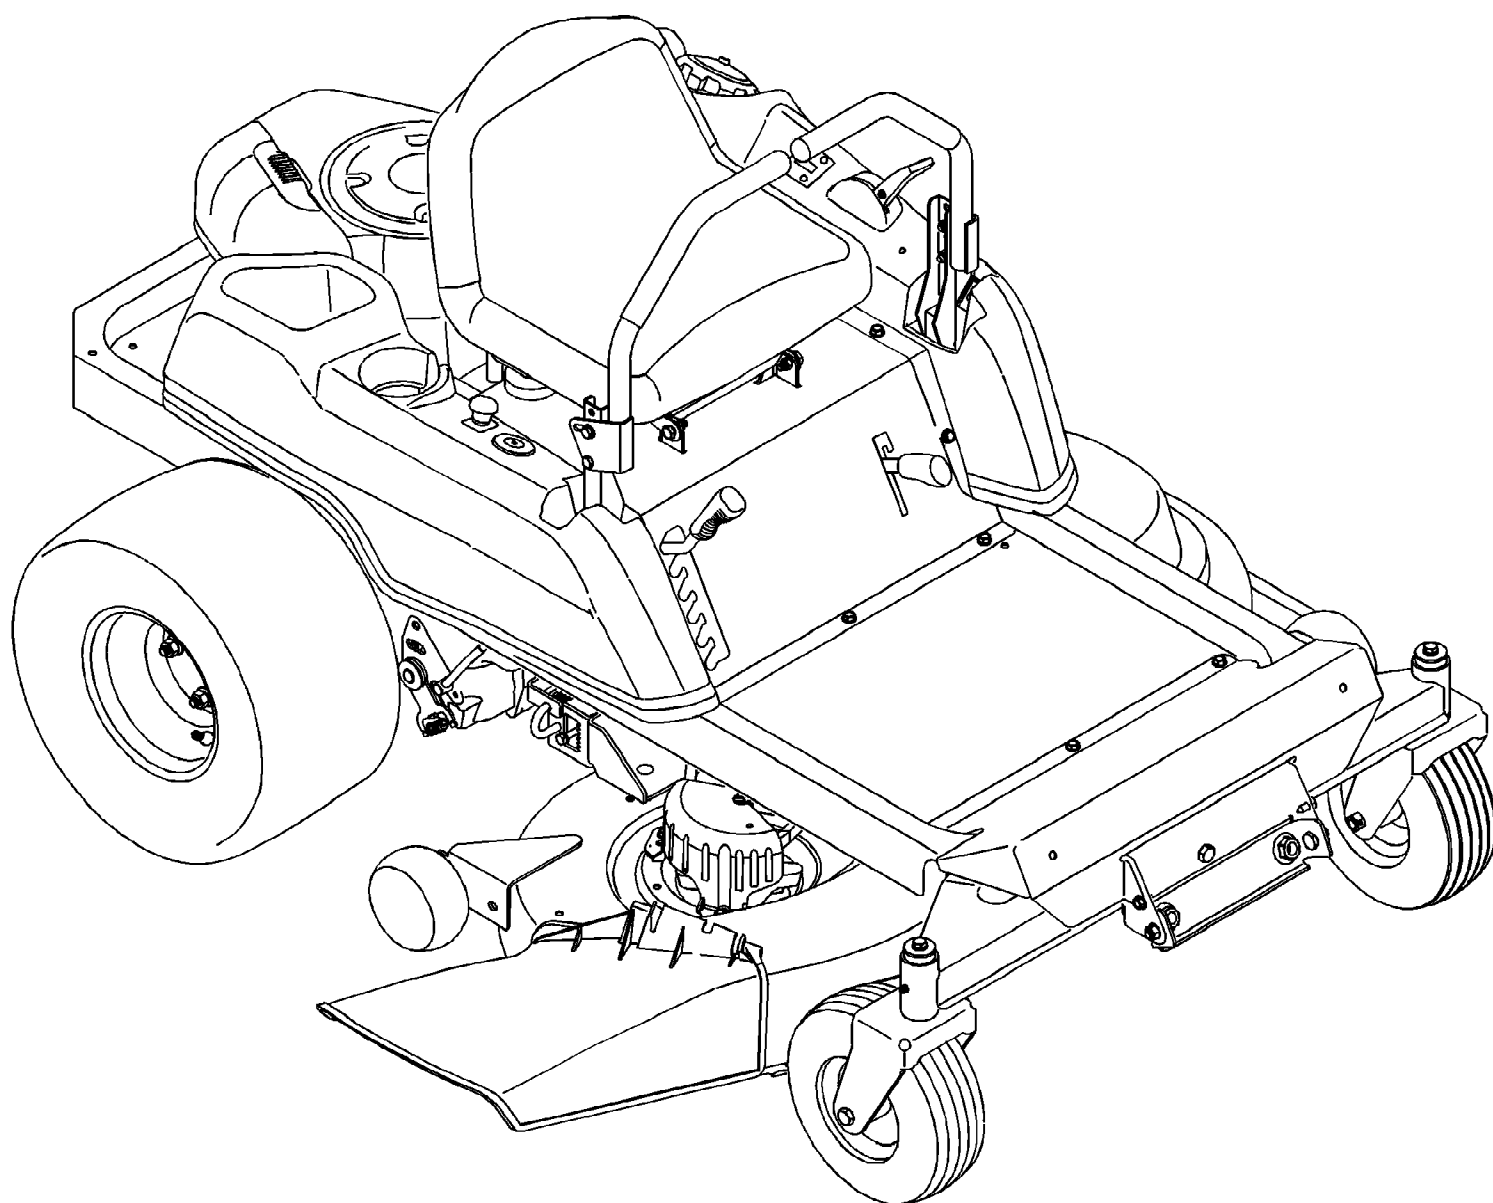

ZT-4200 (2007)
Quick Reference ZT-4200

Page 18 of 20

Ref #	Part Number	Qty	S/P/F	Description
	759-3336	1	/P	Spark Plug
	N/A	1		Oil Filter
	BS-697015	1	/P	Pre Filter
	BS-698083	1	S	Air Filter
	BS-691035	1	/P	Fuel Filter
	751-3124B	1	S	Fuel Cap
	725-1426A	1	S	Solenoid
	618-0659	1	S	Deck Spindles
	942-0616A	1	/P	Blades
	712-0417A	1	/P	Blade Nut
	734-04155	1		Deck Wheels
	N/A	1		Ball Joints
	N/A	1		Wheel Bushings
	925-1745	1	S	Ignition Keys
	754-04137	1	S	Deck Spindle Belt
	754-04043	1	S	Transmission Belt
	590-302-000	1		Double Bagger (2007) (Attachment)
	190-116-000	1		Mulch Kit (2007) (Attachment)

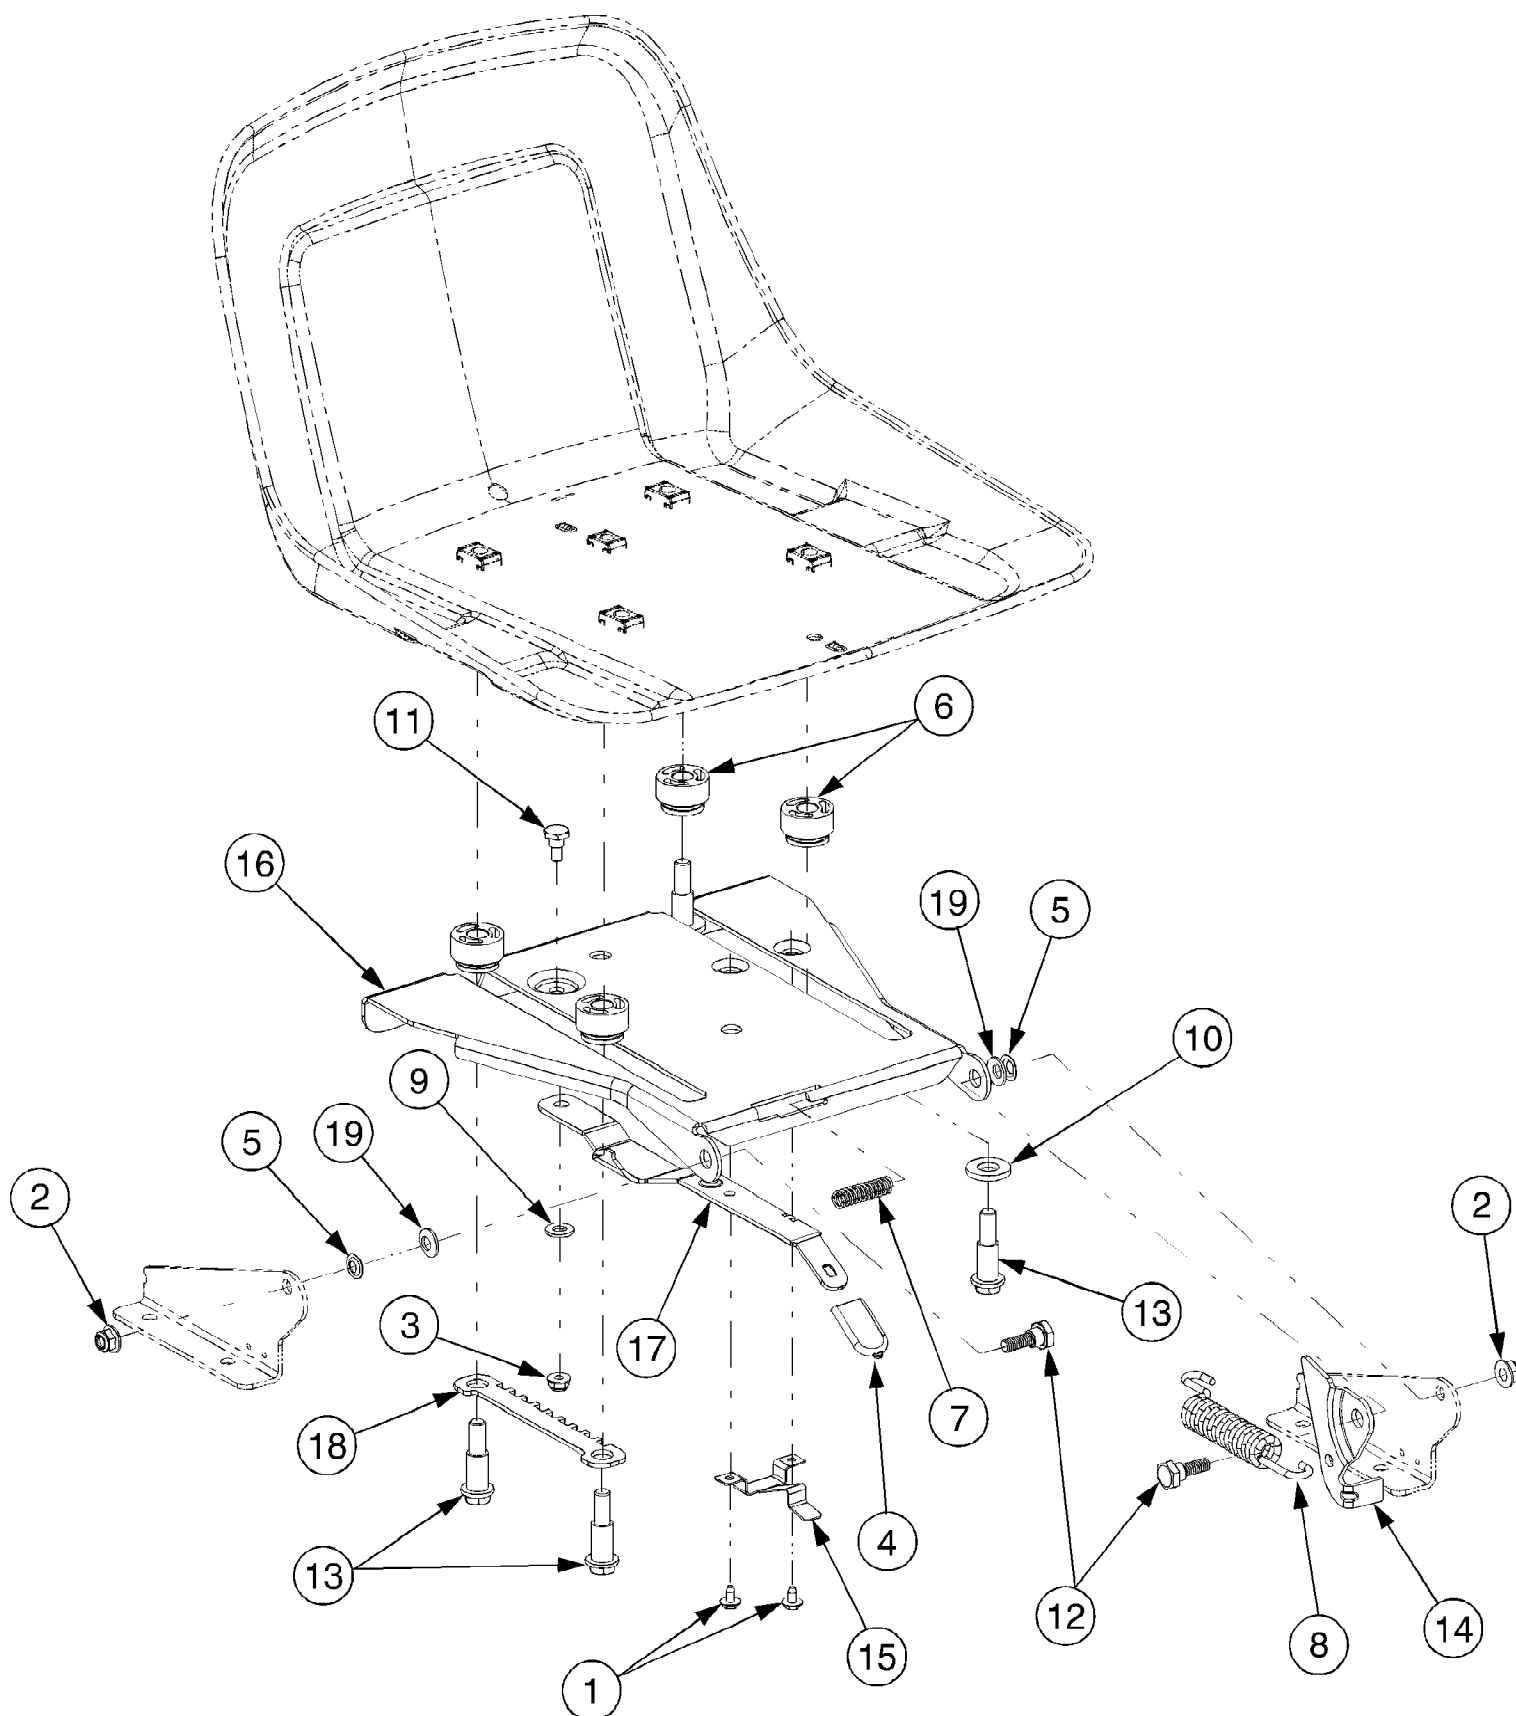

ZT-4200 (2007)
Seat Adjustment

Page 20 of 20

Ref #	Part Number	Qty	S/P/F	Description
1	710-1268	2	/P	Screw, Hx. Wash. Hd. Tapp #10-16 x .375
2	712-04063	2	/P	Nut, Hx Insert Flange Lck, 5/16-18 GrF
3	712-04064	1	/P	Nut, Hx Insert Flnge Lck, 1/4-20 GrF
4	720-0309A	1	/P	Grip, Seat Adjustment
5	726-0201	2		Nut, Speed, .3125
6	731-04074	4		Spacer, Seat Adjustment
7	732-0499	1		Spring, Compression, .41 x 1.5
8	732-1184	1	/P	Spring, Extension, .84 Dia. x 4.6
9	736-0204	1	/P	Washer, Flat, .344 x .62 x .033
10	736-3019	2		Washer, Flat, .531 x 1.062 x .134 HT
11	738-0137A	1	S	Screw, Shoulder, .34 x .285:1/4-20
12	738-0296	2	S	Screw, Shoulder, .437 x .268:5/16-18
13	738-0966A	4	/P	Screw, Shoulder, .5 x .925:3/8-16 ...
14	783-0209D	1	/P	Bracket, Seat Lift
15	783-0611	1		Stop, Seat Adjustment
16	783-0738D	1	/P	Bracket, Seat Pivot
17	783-0739A	1	S	Lever, Seat Adjustment
18	783-0753	1		Index Bracket, Seat Adjustment
19	736-0242	2	/P	Washer, Belleville, .34 x .872 x .06