For Parts Call 606-678-9623 or 606-561-4983

TORO

Count on it.

Part's Catalog

# LX420 & LX460 Lawn Tractors

Model No. 13AX60RG744
Model No. 13AX60RH744

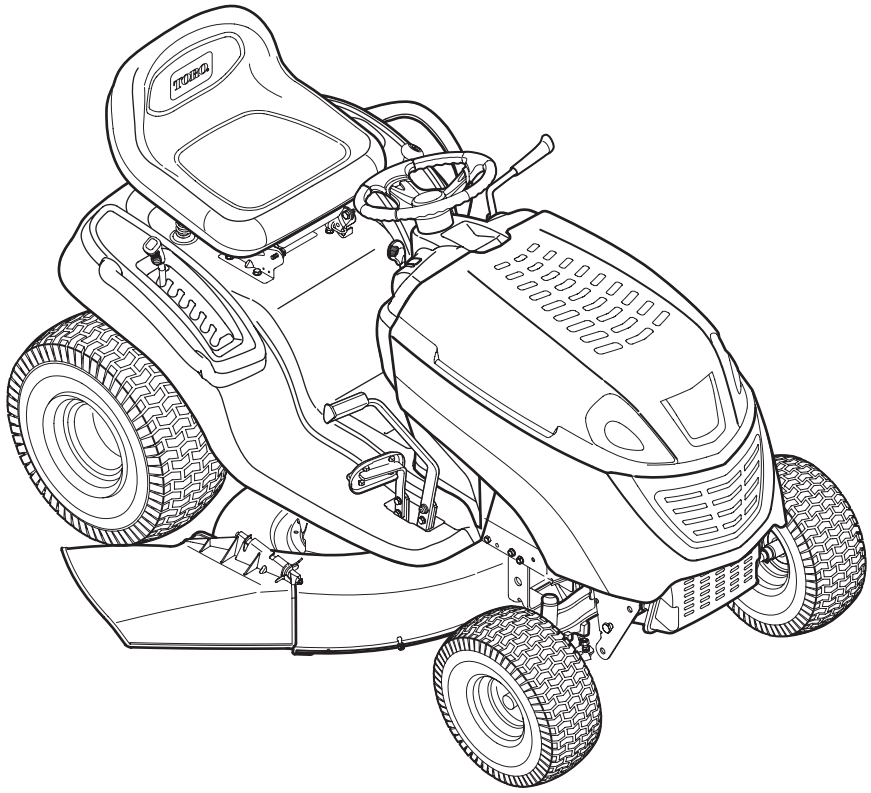

Original Instructions (EN)
769-02255 (01/31/06)

www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Models X60RG & X60RH

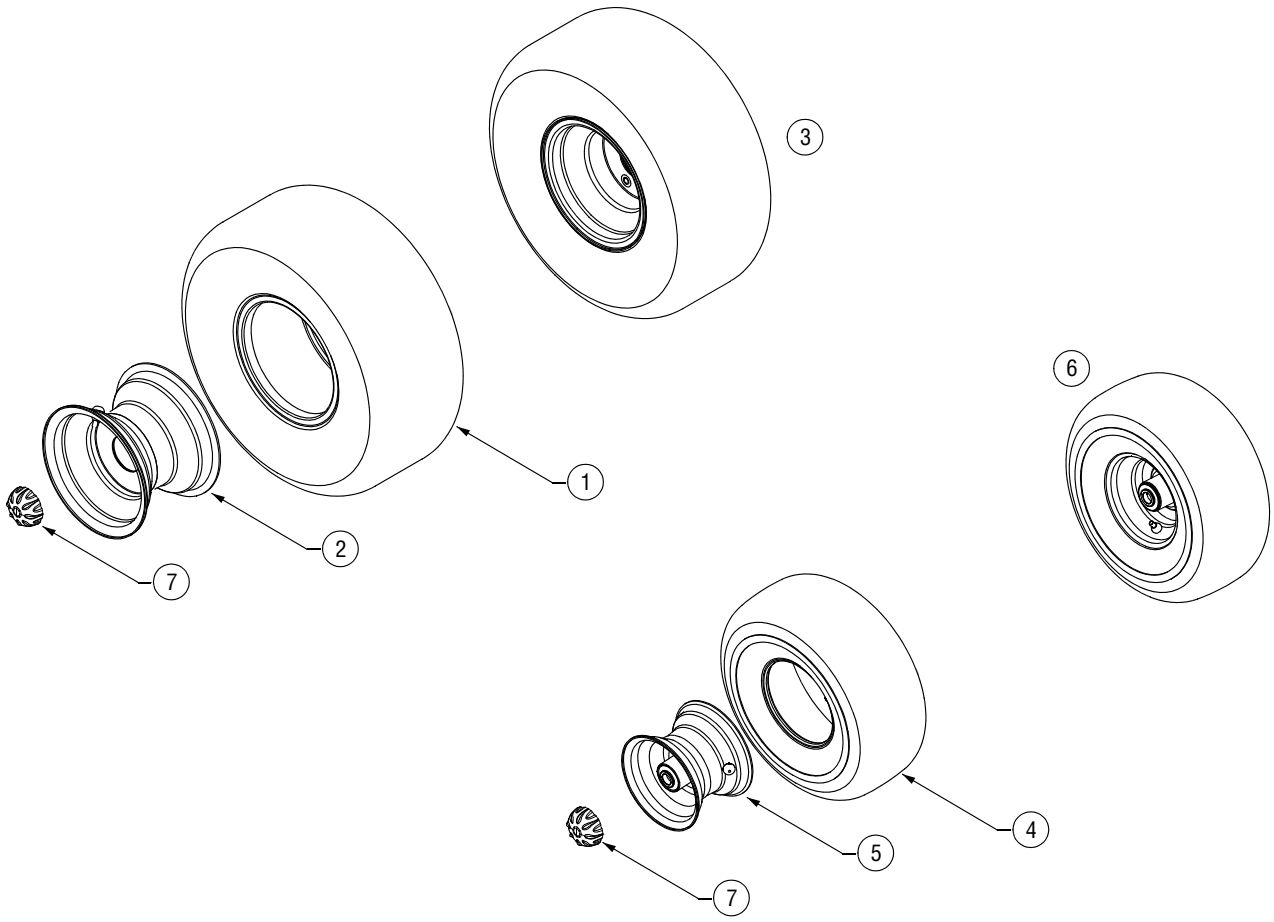


| REF. NO. | PART NUMBER | DESCRIPTION |
|---|---|---|
| 1 | 734-1730-0901 | Turf Tire, 20 x 8.0 x 8 |
| 2 | 934-0070-4009 | Rim, 8.0 x 7.0 |
| 3 | 634-0104-0991 | Wheel Assembly, 20 x 8.0 x 8 |
| 4 | 734-1731-0901 | Tire, 15.0 x 6.0 x 6.0 |
| 5 | 934-04081-4009 | Rim Assembly, 6.0 x 4.5 (Includes Bearings and Valve) |
| 6 | 634-04086-0991 | Wheel Assembly, 15.0 x 6.0 x 6.0 |
| 7 | 731-2290A | Hub Cap |
| — | 934-0255 | Valve, Tubeless |



www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Models X60RG & X60RH

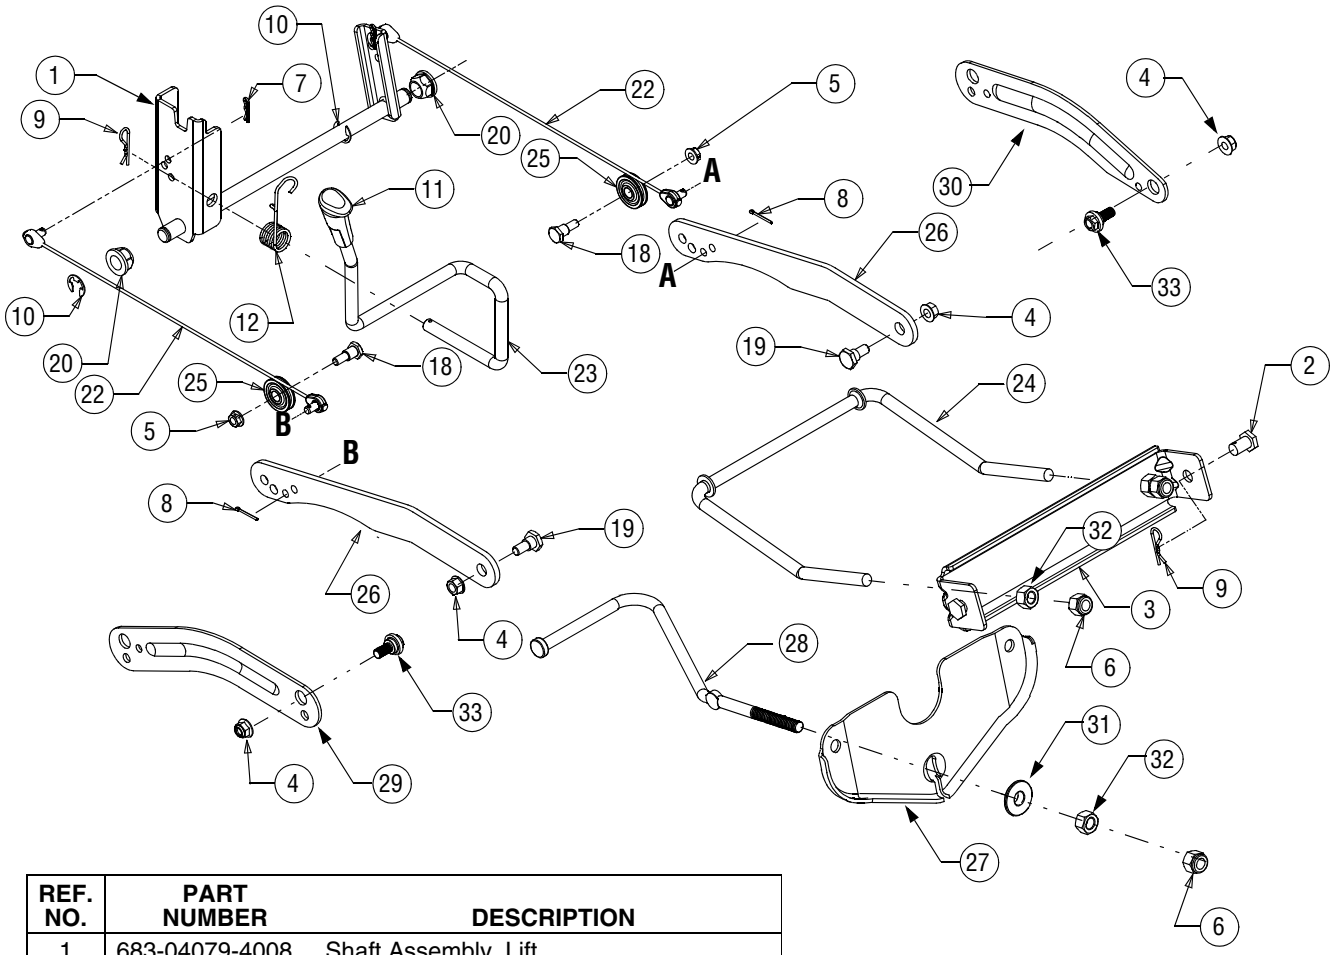


| REF. NO. | PART NUMBER | DESCRIPTION |
|---|---|---|
| 1 | 683-04079-4008 | Shaft Assembly, Lift |
| 2 | 911-0332 | Pin, Clevis, .50 Dia x .78 Lg |
| 3 | 783-0720A-4008 | Bracket, Deck (Model X60RH) |
| 4 | 712-04065 | Nut, Nylon Lock, 3/8-16 |
| 5 | 712-04063 | Nut, Nylon Lock, 5/16-18, Gr5 |
| 6 | 712-3083 | Nut, Hex Lock, 1/2-13, Gr8, Nylon |
| 7 | 914-0104 | Pin, Cotter, .072 Dia. x 1.13 Lg |
| 8 | 914-0111 | Pin, Cotter, 3/32, 1.0 |
| 9 | 914-04023 | Pin, Click, .092 x 1.64 Lg |
| 10 | 716-0106A | E-ring, .625 Dia. Shaft |
| 11 | 720-0311 | Grip, Handle |
| 12 | 732-0874 | Spring, Torsion |
| 18 | 738-0138A | Screw, Hex Cap, 5/16-18x.620 Gr2 |
| 19 | 938-0143 | Shoulder Screw, 3/8-16 |
| 20 | 941-0225 | Bearing, Hex Flange |
| 22 | 746-0968 | Cable, Lift, 16.16 Lg |
| 23 | 747-04155 | Handle, Lift |
| 24 | 747-1130B | Rod, Deck .5" Dia. (Model X60RH) |
| 25 | 756-1154 | Pulley, Roller |
| 26 | 783-04963-0637 | Arm, Lift (Model X60RH) |
| 27 | 783-04568-0637 | Hanger Bracket, Deck (Model X60RG) |
| 28 | 747-04269A | Rod, Deck, .448" Dia. (Model X60RG) |
| 29 | 783-04494-0637 | RH Arm, Lift (Model X60RG) |
| 30 | 783-04711-0637 | LH Arm, Lift (Model X60RG) |
| 31 | 748-04069 | Pivot Cup |
| 32 | 912-0206 | Nut, Hex, 1/2-13 |
| 33 | 738-04130 | Shoulder Screw, 3/8-16 |



www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

## Models X60RG & X60RH

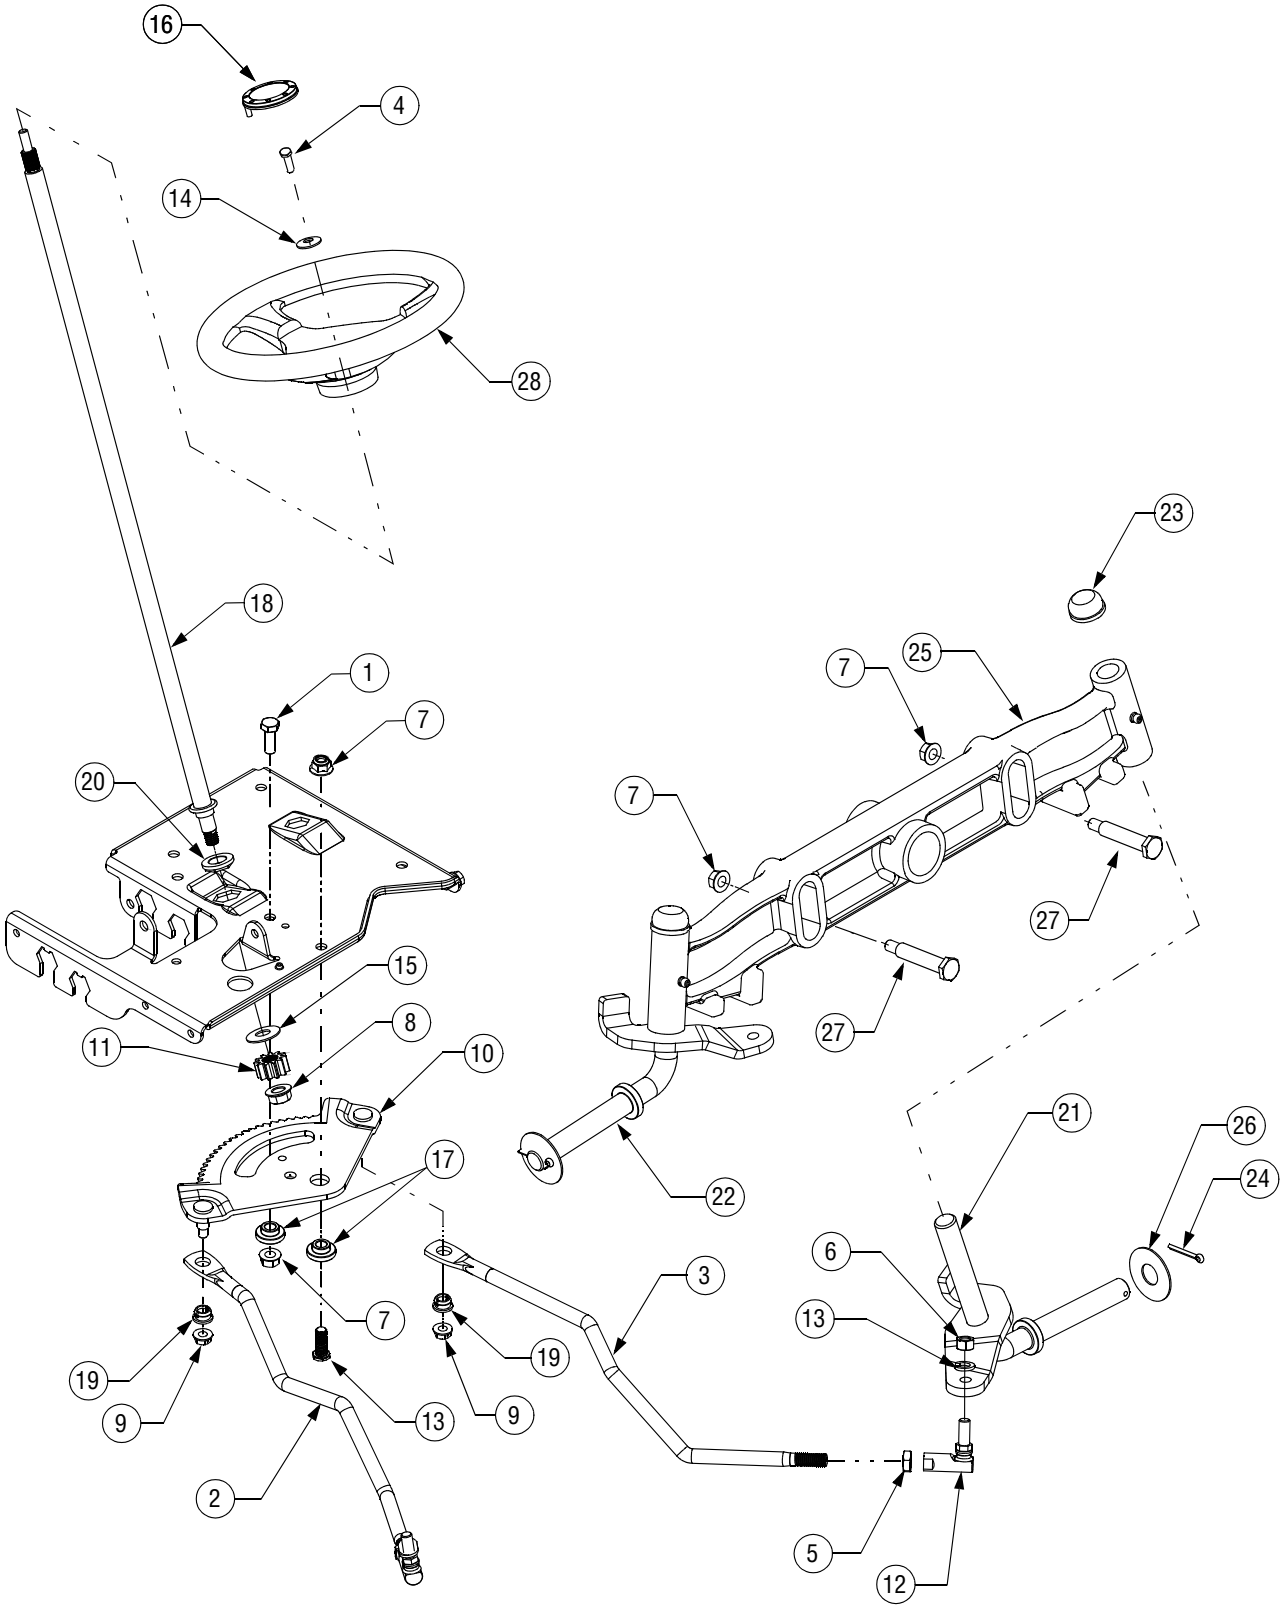




www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Models X60RG & X60RH

| REF. NO. | PART NUMBER | DESCRIPTION |
|---|---|---|
| 1 | 710-0514 | Hex Cap Screw, 3/8-16, 1.00, Gr5, Std |
| 2 | 711-1408 | Link, Drag, RH |
| 3 | 711-1409A | Link, Drag, LH |
| 4 | 910-0643 | Screw, 5/16-18 x 1.00 |
| 5 | 912-0240 | Nut, Jam, 7/16-20, Gr2 |
| 6 | 912-0214 | Nut, Hex, 3/8-24, Gr5 |
| 7 | 712-04065 | Nut, Nylon Lock, 3/8-16 |
| 8 | 712-0459 | Nut, Flange Lock, 7/16-20 |
| 9 | 912-3004A | Nut, Flange Lock, 5/16-18 |
| 10 | 717-1550E | Gear, Steering, 11/90 Ratio |
| 11 | 717-1554 | Gear, Pinion, Steering |
| 12 | 923-0448A | Ball Joint, 7/16-20 |
| 13 | 710-04095 | Hex Cap Screw, 3/8-16, 1.00 |
| 14 | 936-3004 | Washer, Flat, .406 x .875 x .105 |
| 15 | 936-3084 | Washer, Flat, .510 x 1.120 x .060 |
| 16 | 731-05542 | Cover, Steering Wheel |
| 17 | 738-04154 | Spacer, Shoulder, 1.00 x .38 x .38 |
| 18 | 738-04075 | Shaft, Steering, .625 OD x 25.00 Lg |
| 19 | 941-0475 | Bushing, Plastic, .380 ID |
| 20 | 941-0656A | Bearing, Hex Flange, 5/8 |
| 21 | 638-04003P | Axle Ass'y, LH .750 Dia (Model X60RH) |
| | 938-04005 | Axle Ass'y, LH .750 Dia (Model X60RG) |
| 22 | 938-04004 | Axle Ass'y, RH .750 Dia (Model X60RH) |
| | 938-04006 | Axle Ass'y, RH .750 Dia (Model X60RG) |
| 23 | 726-0341 | Push Cap, .75 |
| 24 | 714-04039 | Pin, Cot, 5/32, 1.25 |
| 25 | 919-04105 | Axle, Pivot, Cast .750 Dia |
| 26 | 736-0866 | Washer, Flat, .755 x 1.92 x.060 |
| 27 | 738-1011A | Screw, Shoulder, .500 x 2.230, 3/8-16 |
| 28 | 631-04008A | Wheel, Steering, Three Spoke |



www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

## Models X60RG & X60RH

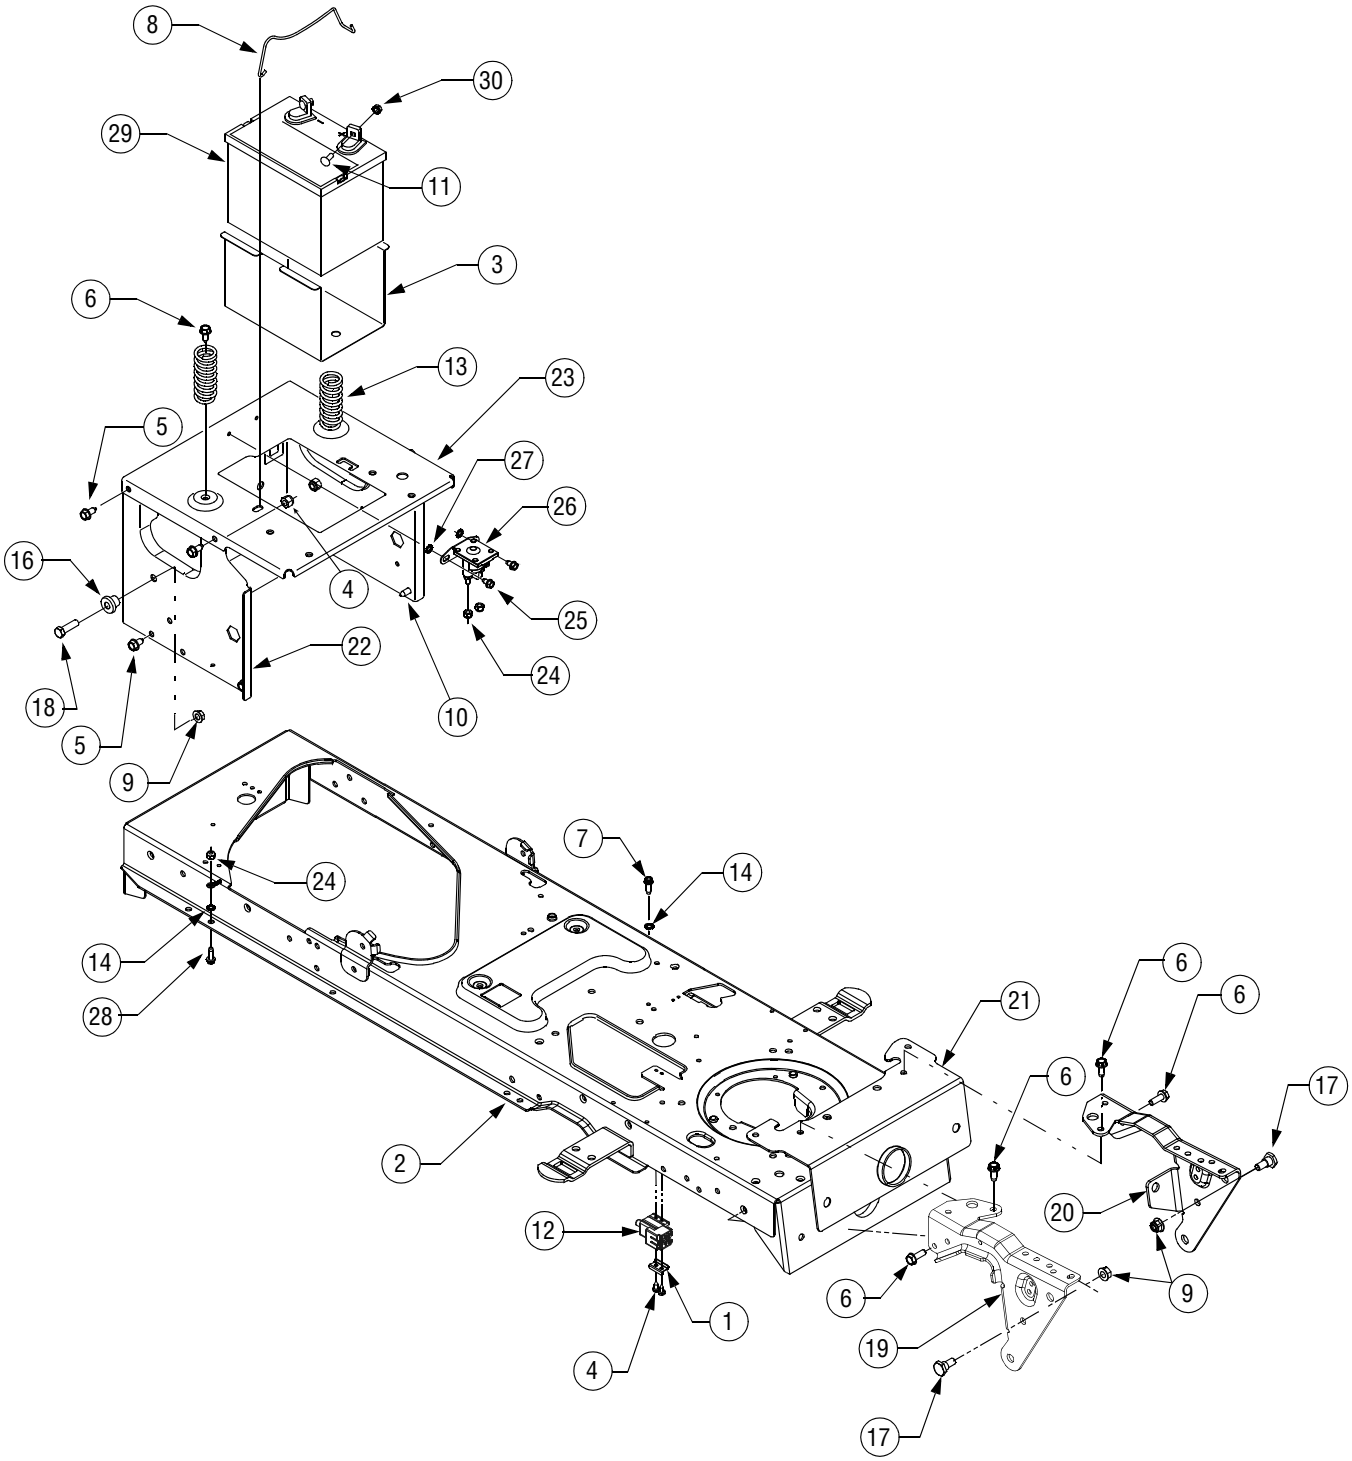




www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Models X60RG & X60RH

| REF. NO. | PART NUMBER | DESCRIPTION |
|---|---|---|
| 1 | 17962 | Plate, Switch |
| 2 | 683-04173-0637 | Frame Assembly, Lower |
| 3 | 783-0349-0637 | Tray, Battery |
| 4 | 910-0224 | Screw, Hex Washer, 10-16 x .5 |
| 5 | 910-0726 | Screw, Self-tapping, 5/16-18, 0.75 |
| 6 | 910-1260A | Screw, Self-tapping, 5/16-12, 0.75 |
| 7 | 910-1652 | Screw, Hex Washer, 1/4-20 x 0.625 |
| 8 | 747-04121A | Hold-down Rod, Battery |
| 9 | 712-04065 | Nut, Nylon Lock, 3/8-16 |
| 10 | 710-0607 | Screw, Hex Wash. Tapp, 5/16-18 x .5 |
| 11 | 710-0703 | Screw, Carriage, 1/4-20, .75, |
| 12 | 925-04039 | Switch, Interlock |
| 13 | 732-04035 | Spring, Compression, 1.28 OD x 3.125 |
| 14 | 936-0222 | Washer, Lock, Ext 1/4 |
| 16 | 738-04058 | Shoulder Spacer |
| 17 | 738-0143 | Shoulder Screw, 3/8-16 |
| 18 | 910-3005 | Hex Screw 3/8-16 x 1.25 |
| 19 | 783-0726E-0637 | Bracket, Pivot, Support RH |
| 20 | 783-0727D-0637 | Bracket, Pivot, Support LH |
| 21 | 783-0728-0637 | Bracket, Pivot, Bar |
| 22 | 783-04811-0637 | Frame, Upper |
| 23 | 783-04329A-0637 | Bracket, Frame, Seat |
| 24 | 712-04064 | Nut, Nylon Lock, 1/4-20 |
| 25 | 910-0599 | Screw, Self-tapping, 1/4-20, 0.500 |
| 26 | 925-1426A | Solenoid, 12V, 100 Amp |
| 27 | 936-0222 | Washer, External Lock, 1/4 |
| 28 | 910-0642 | Screw, Hex. 1/4-20 x .75 |
| 29 | 925-1707D | Battery, 190 CCA |
| 30 | 712-0324 | Nut, Sems, 1/4-20 |



www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

## Models X60RG & X60RH

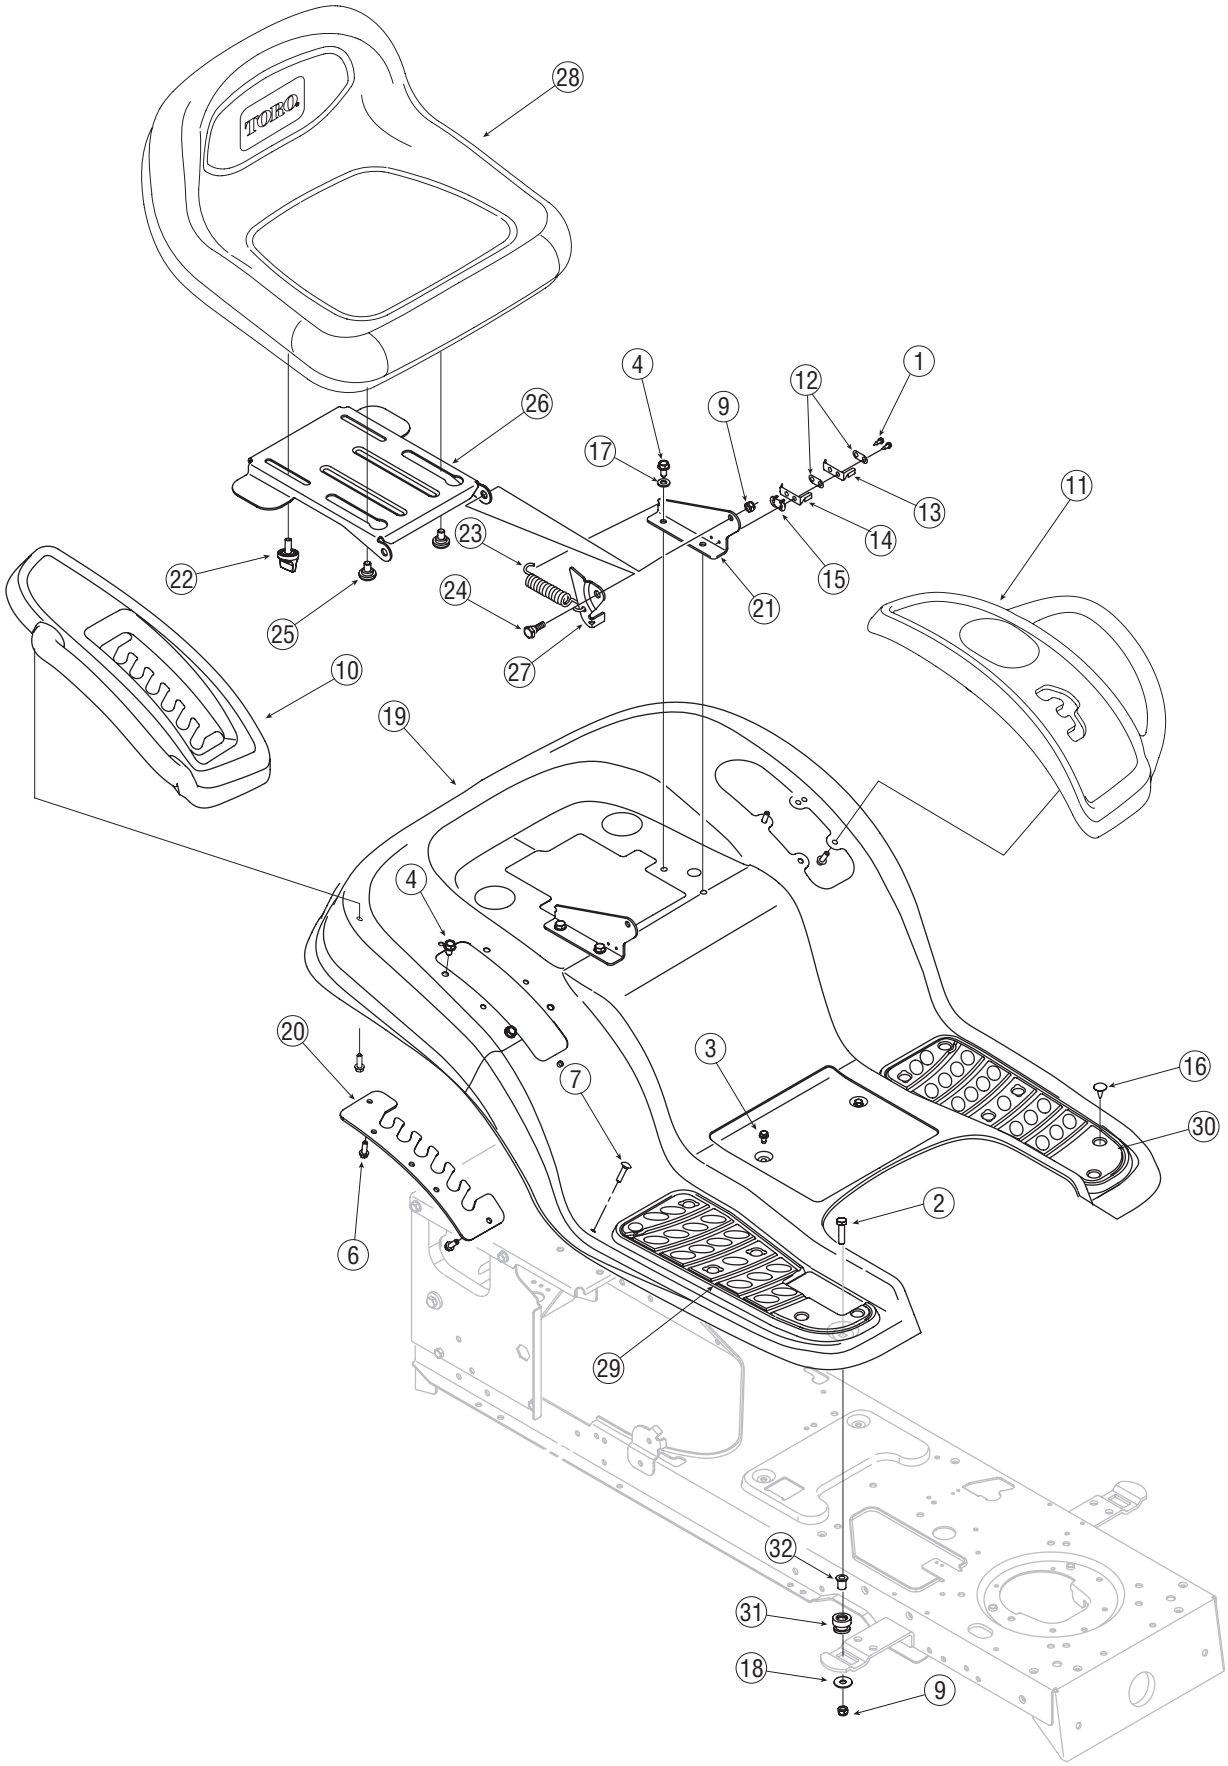




www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Models X60RG & X60RH

| REF. NO. | PART NUMBER | DESCRIPTION |
|---|---|---|
| 1 | 910-0227 | Screw, #8-18, 0.500 |
| 2 | 910-0528 | Screw, 5/16-18, 1.25 |
| 3 | 910-0599 | Screw, 1/4-20, 0.500 |
| 4 | 710-0604A | Screw, 5/16-18, 0.625 |
| 5 | 710-0788 | Screw, 1/4-20, 1.000 |
| 6 | 710-0895 | Screw, 1/4-15, 0.750 |
| 7 | 910-0932 | Screw, Carriage, 1/4-20, 1.00, Gr1 |
| 8 | 912-0271 | Nut, Sems, 1/4-20 |
| 9 | 712-04063 | Nut, Flange Lock, 5/16-18, GrF, Nylon |
| 10 | 731-05498A | Cover, Lift Lever |
| 11 | 731-05515A | Cover, w/ Cup Holder |
| 12 | 726-0279 | Plate, Insulator |
| 13 | 925-1303 | Spring Switch, Outer |
| 14 | 725-1439 | Spring Switch, Inner |
| 15 | 726-0278 | Plate, Insulator Boss |
| 16 | 926-3046 | Clip, Ratchet, .250 Dia |
| 17 | 736-0607 | Washer, Lock, 5/16 Ext. Tooth |
| 18 | 936-3078 | Washer, Flat, .344 x 1.0 x .063 |
| 19 | 783-04477A-4008 | Fender |
| 20 | 783-0677B-4008 | Lift Bracket, Adjustment |
| 21 | 783-1489A-0637 | Seat Bracket |
| 22 | 720-04061 | Knob, 3/8-16, .875 |
| 23 | 732-1184 | Spring, Extension, .80 Dia x 4.6 Lg. |
| 24 | 938-0296 | Shoulder Screw .437 x .286 Lg |
| 25 | 738-04012A | Shoulder Screw, .625 x .145, 3/8-16 |
| 26 | 783-04081A-0637 | Pivot Bracket, Seat |
| 27 | 783-0209D | Bracket, Seat Lift |
| 28 | 757-04044 | Seat, *Toro* Medium Back |
| 29 | 735-0656 | RH Foot Pad |
| 30 | 735-0657 | LH Foot Pad |
| 31 | 735-0690 | Grommet |
| 32 | 750-3310 | Spacer, Flange, .3125 x .4375 x .625 |



www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

## Models X60RG & X60RH

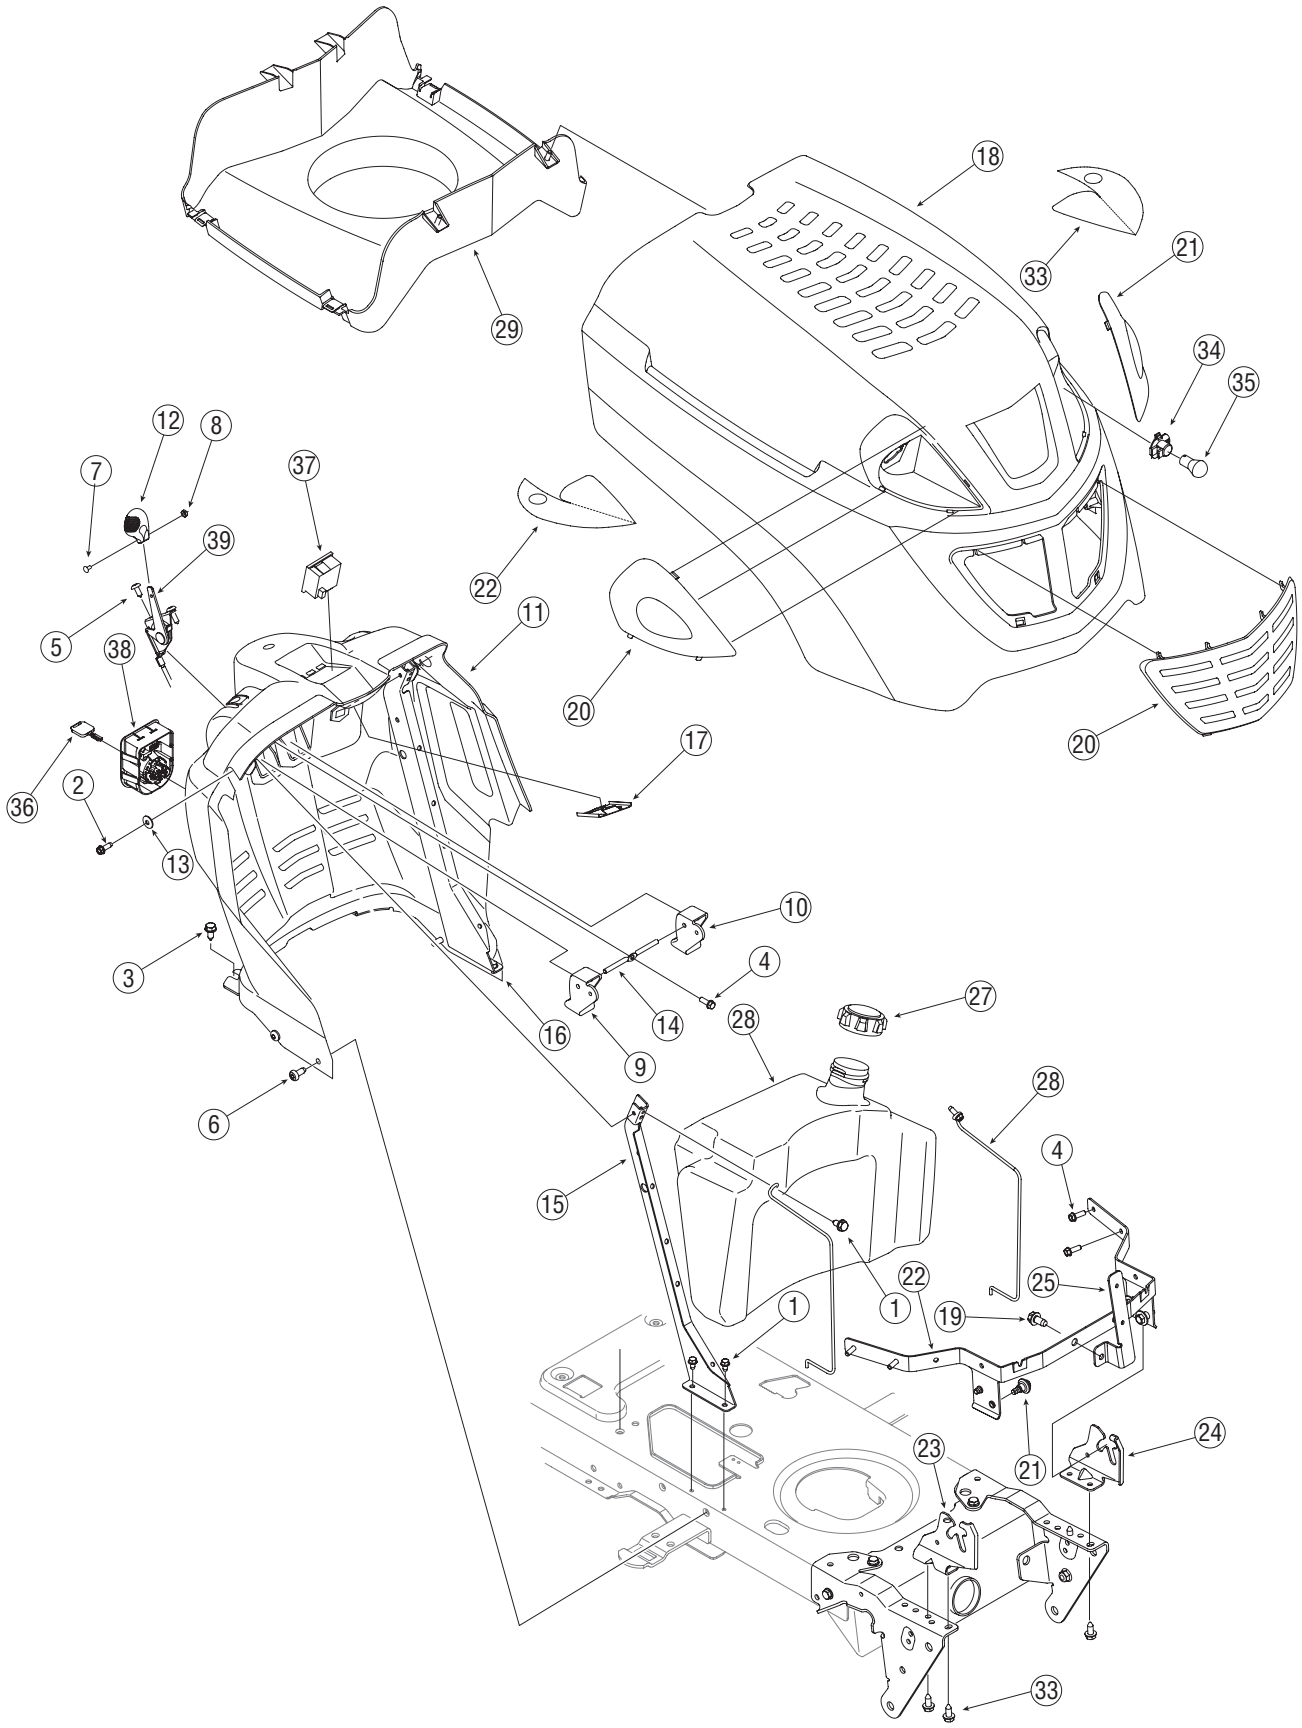




www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Models X60RG & X60RH

| REF. NO. | PART NUMBER | DESCRIPTION |
|---|---|---|
| 1 | 910-0599 | Screw, 1/4-20, 0.500 |
| 2 | 910-0642 | Screw, 1/4-20, 0.750 |
| 3 | 910-0726 | Screw, 5/16-12, 0.750 |
| 4 | 710-0895 | Screw, 1/4-15, 0.750 |
| 5 | 710-1017 | Screw, 1/4-14, 0.625 |
| 6 | 710-1611B | Screw, 5/16-18, 0.750 |
| 7 | 710-3217 | Screw, #8-32, 0.375 |
| 8 | 712-0142 | Nut, Hex, #8-32 |
| 9 | 931-04215 | Lever, Cruise |
| 10 | 931-04217 | Lever, Parking Brake |
| 11 | 731-05491 | Dash Panel |
| 12 | 731-1857 | Knob |
| 13 | 936-0270 | Washer, Bell, .265 x .75 x .062 |
| 14 | 747-1196 | Rod, Lever |
| 15 | 783-04285D-0637 | Support, Dash, RH |
| 16 | 783-04323D-0637 | Support, Dash, LH |
| 17 | 783-0462 | Bracket, PTO |
| 18 | 931-05461 | Hood |
| 19 | 910-0623 | Screw, 3/8-16, 0.750 |
| 20 | 731-05478 | Grill |
| 21 | 738-04091 | Screw, Shoulder, .43 x .29, 5/16-18 |
| 22 | 783-04606A-4008 | Pivot Bracket |
| 23 | 783-04840-4008 | Pivot Bracket, Hood RH |
| 24 | 783-04841-4008 | Pivot Bracket, Hood LH |
| 25 | 783-05119-4008 | Support Bracket, Hood |
| 26 | 747-04161 | Tank Support Rod |
| 27 | 751-0603 | Fuel Cap |
| 28 | 751-10283 | Fuel Tank, 3 Gal. |
| 29 | 731-05507 | Hood Plenum |
| 30 | 931-05469 | Lens, RH |
| 31 | 931-05471 | Lens, LH |
| 32 | 777X42200 | Reflector, RH |
| 33 | 777X42201 | Reflector, LH |
| 34 | 925-1649 | Lamp Socket, 1/4 Turn |
| 35 | 925-0963 | Miniature Lamp, 12V |
| 36 | 925-1745 | Key, Ignition |
| 37 | 925-04036B | Meter, Systems Indicator |
| 38 | 725-04340 | Module, Ignition Switch |
| 39 | 746-1084 | Throttle/Choke Control |
| — | 929-04083 | Headlight Harness |
| — | 725-04339 | Wiring Harness |



www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Models X60RG & X60RH

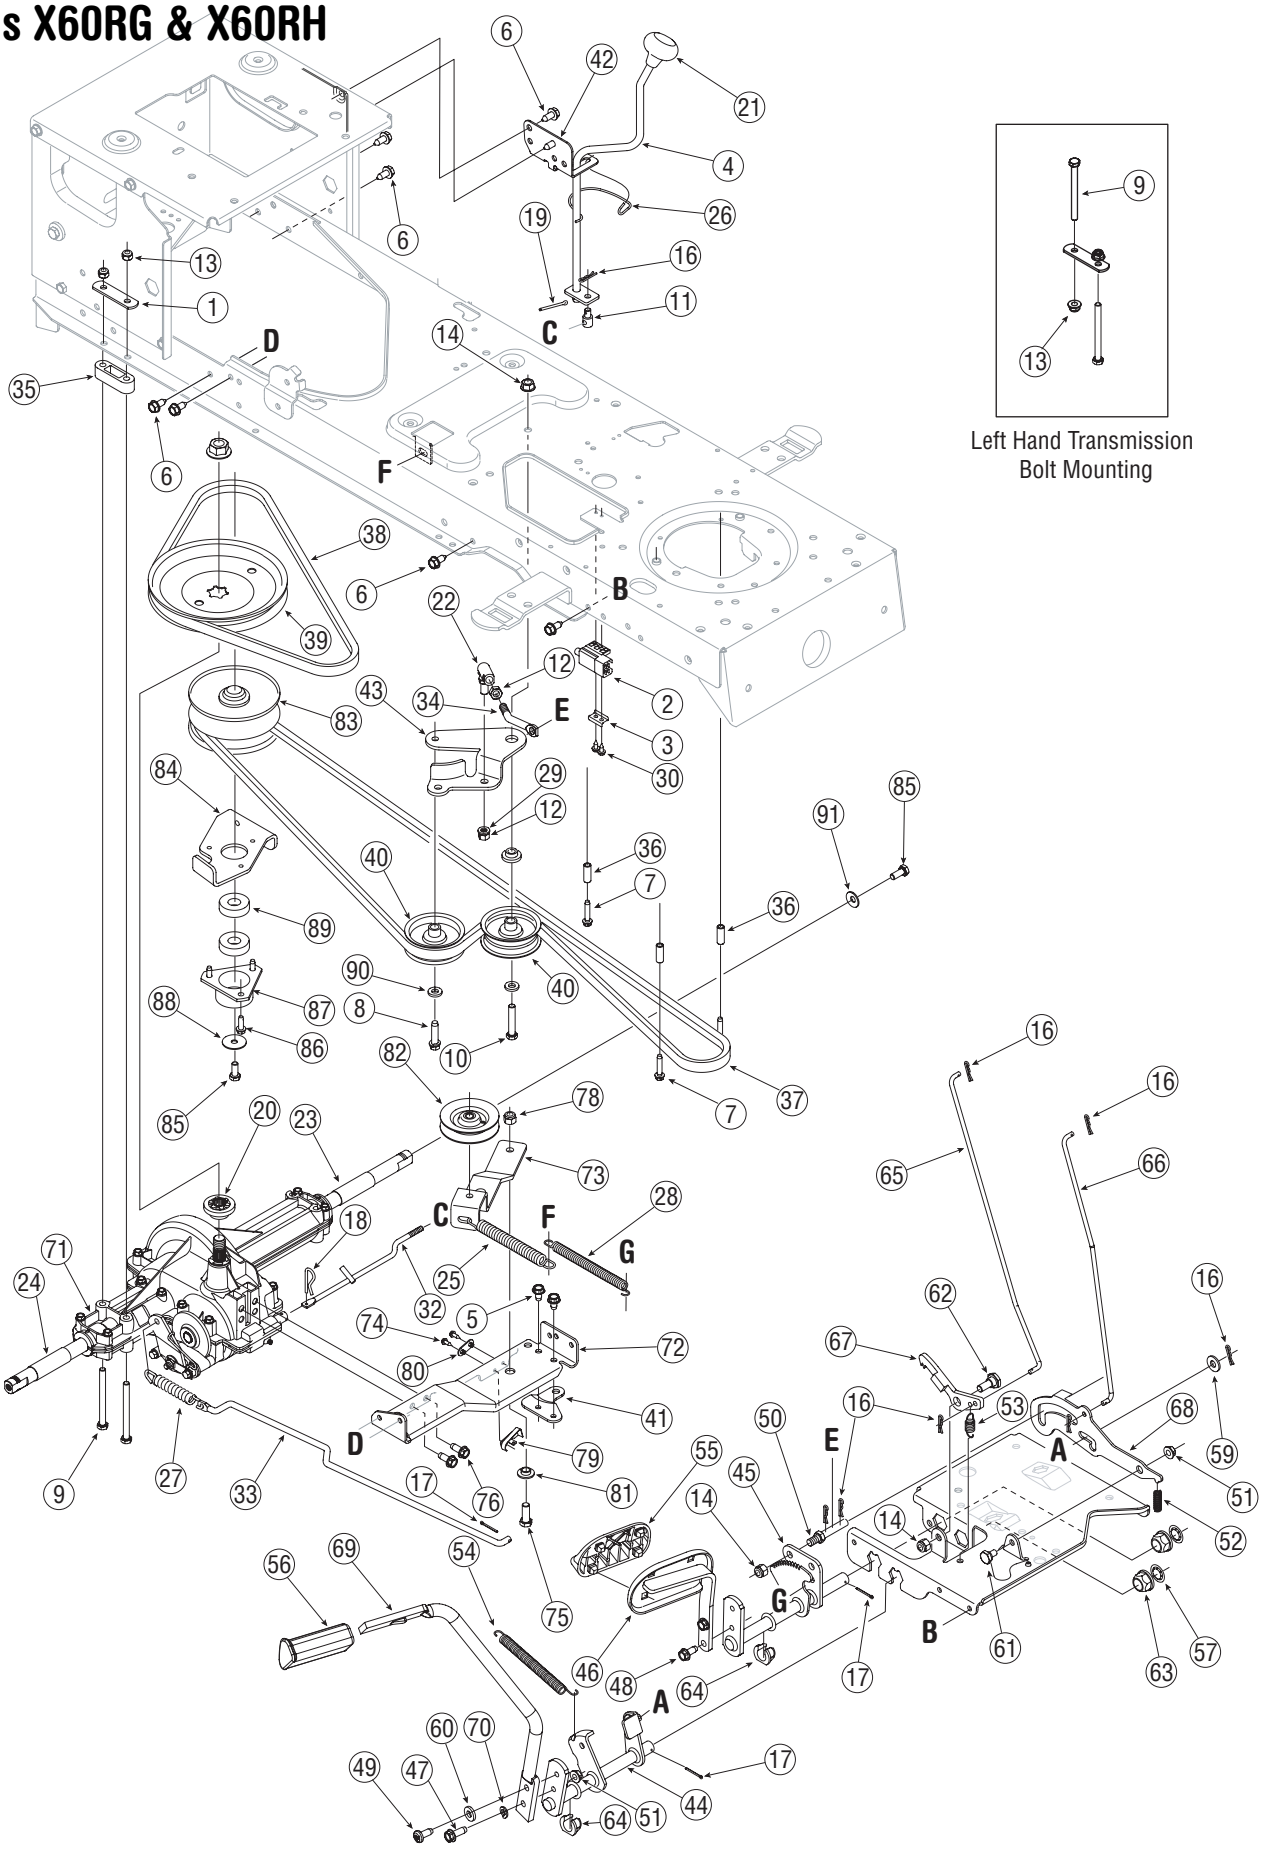




www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Models X60RG & X60RH

| REF. NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 17840-0637 | Mounting Bracket, Transaxle |
| 2 | 925-04039 | Switch, Interlock |
| 3 | 17962 | Plate, Switch |
| 4 | 647-04020 | Lever Assembly, Shift |
| 5 | 710-0607 | Screw, 5/16-18, 0.500 |
| 6 | 910-0726 | Screw, 5/16-12, 0.750 |
| 7 | 710-0809 | Screw, 1/4-20, 1.250 |
| 8 | 710-1007 | Screw, Sems, 3/8-16, 1.500 |
| 9 | 710-1266 | Screw, 5/16-18, 3.50, Gr5 |
| 10 | 910-3144 | Screw, 3/8-16, 2.00, Gr5 |
| 11 | 711-0736 | Adjustment Ferrule 1/4-20 x 1. |
| 12 | 912-0241 | Nut, Hex, 3/8-24, Gr5 |
| 13 | 712-04063 | Nut, Flange Lock, 5/16-18, GrF, Nylon |
| 14 | 712-04065 | Nut, Flange Lock, 3/8-16, GrF, Nylon |
| 15 | 912-0700 | Nut, Flange, 9/16-18, Gr2 |
| 16 | 914-0104 | Pin, Cotter, .072 Dia. x 1.13 |
| 17 | 914-0111 | Pin, Cotter, 3/32, 1.0 |
| 18 | 914-0209 | Cotter Pin, Internal, .125 Dia. |
| 19 | 914-0470 | Pin, Cotter, 1/8 x 1.25 |
| 20 | 918-0758A | Pulley Hub, 5/8 Spline |
| 21 | 720-04028 | Knob, Shift |
| 22 | 923-3018 | Ball Joint |
| 23 | 731-04602 | Sleeve, .758 x .821 x 3.31 |
| 24 | 731-04604 | Sleeve, .758 x .821 x 2.4375 |
| 25 | 932-04370 | Spring, Extension, .62 Dia x 6.12 |
| 26 | 732-0525 | Spring Clip, Shifter |
| 27 | 732-0716C | Spring, Extension, .59 OD x 4.00 |
| 28 | 732-0963 | Spring, Extension, .50 Dia x 6.37 |
| 29 | 936-0169 | Washer, Lock, 3/8 |
| 30 | 710-0224 | Screw, #10-16, .50 |
| 31 | 738-0372B | Spacer, Shoulder, 1.00 x .38 x .38 |
| 32 | 747-04146B | Rod, Shift |
| 33 | 747-04164 | Rod, Brake |
| 34 | 747-1127 | Idler Rod, Adjustable, 3/8 |
| 35 | 948-0334 | Spacer, .68 |
| 36 | 750-0566A | Spacer, .260 x .372 x 1.030 |
| 37 | 954-0467 | Belt, V-Type |
| 38 | 954-0468 | Belt, V-Type |
| 39 | 956-04002 | Pulley, V-Type, 7.25 Dia. |
| 40 | 756-0981B | Idler Pulley, Flat 2.75 OD |
| 41 | 783-04224 | Bracket, Shift |
| 42 | 783-04360 | Bracket, Shift, F-N-R |
| 43 | 783-04442-0637 | Idler Bracket, Center Double |
| 44 | 647-0031B-0637 | Control Assembly, Brake |
| 45 | 647-0032A-0637 | Control Assembly, Speed |
| 46 | 683-0266 | Pedal Assembly |
| 47 | 910-0650 | Screw, 5/16-18, 0.875 |
| 48 | 910-1260A | Screw,5/16-18, 0.750 |
| 49 | 710-1611B | Screw, 5/16-18, 0.750 |
| 50 | 711-04159B | Pin, 3/8-16 x 2.68 |
| 51 | 912-3004A | Nut, Flange Lock, 5/16-18, Gr5 |
| 52 | 732-0335 | Spring, Compression, .405 x 1.17 |
| 53 | 732-0955 | Spring, Extension, .50 OD x 1.41 |
| 54 | 732-0963 | Spring, Extension, .50 OD x 6.37 |
| 55 | 735-0662 | Pad |
| 56 | 735-3049 | Pad, Brake |
| 57 | 936-0187 | Washer, Flat, .64 x 1.24 x .06 |
| 58 | 736-0262 | Washer, Flat, .385 x .870 x .092 |
| 59 | 936-0300 | Washer, Flat, .406 x .875 x .059 |
| 60 | 936-3008 | Washer, Flat, .344 x .750 x .120 |
| 61 | 938-0155 | Screw, Shoulder .437 Dia x .162 |
| 62 | 938-0380 | Screw, Shoulder, .50 x .27 Lg, 3/8-16 |
| 63 | 941-0225 | Bearing, Hex Flange |
| 64 | 741-3065B | Split Bearing, Hex Flange |
| 65 | 747-04093 | Rod, Brake Lock |
| 66 | 747-04096 | Rod, Cruise Control |
| 67 | 748-04039B | Latch, Cruise Control |
| 68 | 683-04186 | Bracket, Lockout |
| 69 | 747-04521-0637 | Ped, Brake |
| 70 | 936-0119 | Washer, Lock, 5/16 |
| 71 | 918-04034 | Transmission, Single Speed |
| 72 | 683-04055A | Bracket Assembly, Torque |
| 73 | 683-04130 | Bracket, Idler |
| 74 | 710-0227 | Screw, #8-18 x .50 |
| 75 | 710-0514 | Screw, 3/8-16, 1.00 |
| 76 | 710-0604A | Screw, 5/16-18, .625 |
| 77 | 710-3290 | Screw, 3/8-16, 1.12 |
| 78 | 712-0130 | Nut, Lock, 3/8-16, Nylon |
| 79 | 725-1644 | Switch Spring, Short |
| 80 | 926-0320 | Plate, Insulator |
| 81 | 750-04294 | Spacer, Shoulder |
| 82 | 756-04209 | Pulley, V-Type, 3.06 |
| 83 | 956-04015 | Pulley Assembly, Variable Speed |
| 84 | 683-04129 | Bracket, Pulley |
| 85 | 710-0627 | Screw, 5/16-24, .750 |
| 86 | 710-0642 | Screw, 1/4-20, .750 |
| 87 | 718-04012 | Cup, Bearing |
| 88 | 736-0362 | Washer, Flat |
| 89 | 941-0600 | Ball Bearing |
| 90 | 736-3010 | Washer, Flat, .407 x .812 x 135 |
| 91 | 936-0242 | Washer, Bell, .340 x .872 x .060 |



www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

## Models X60RG & X60RH

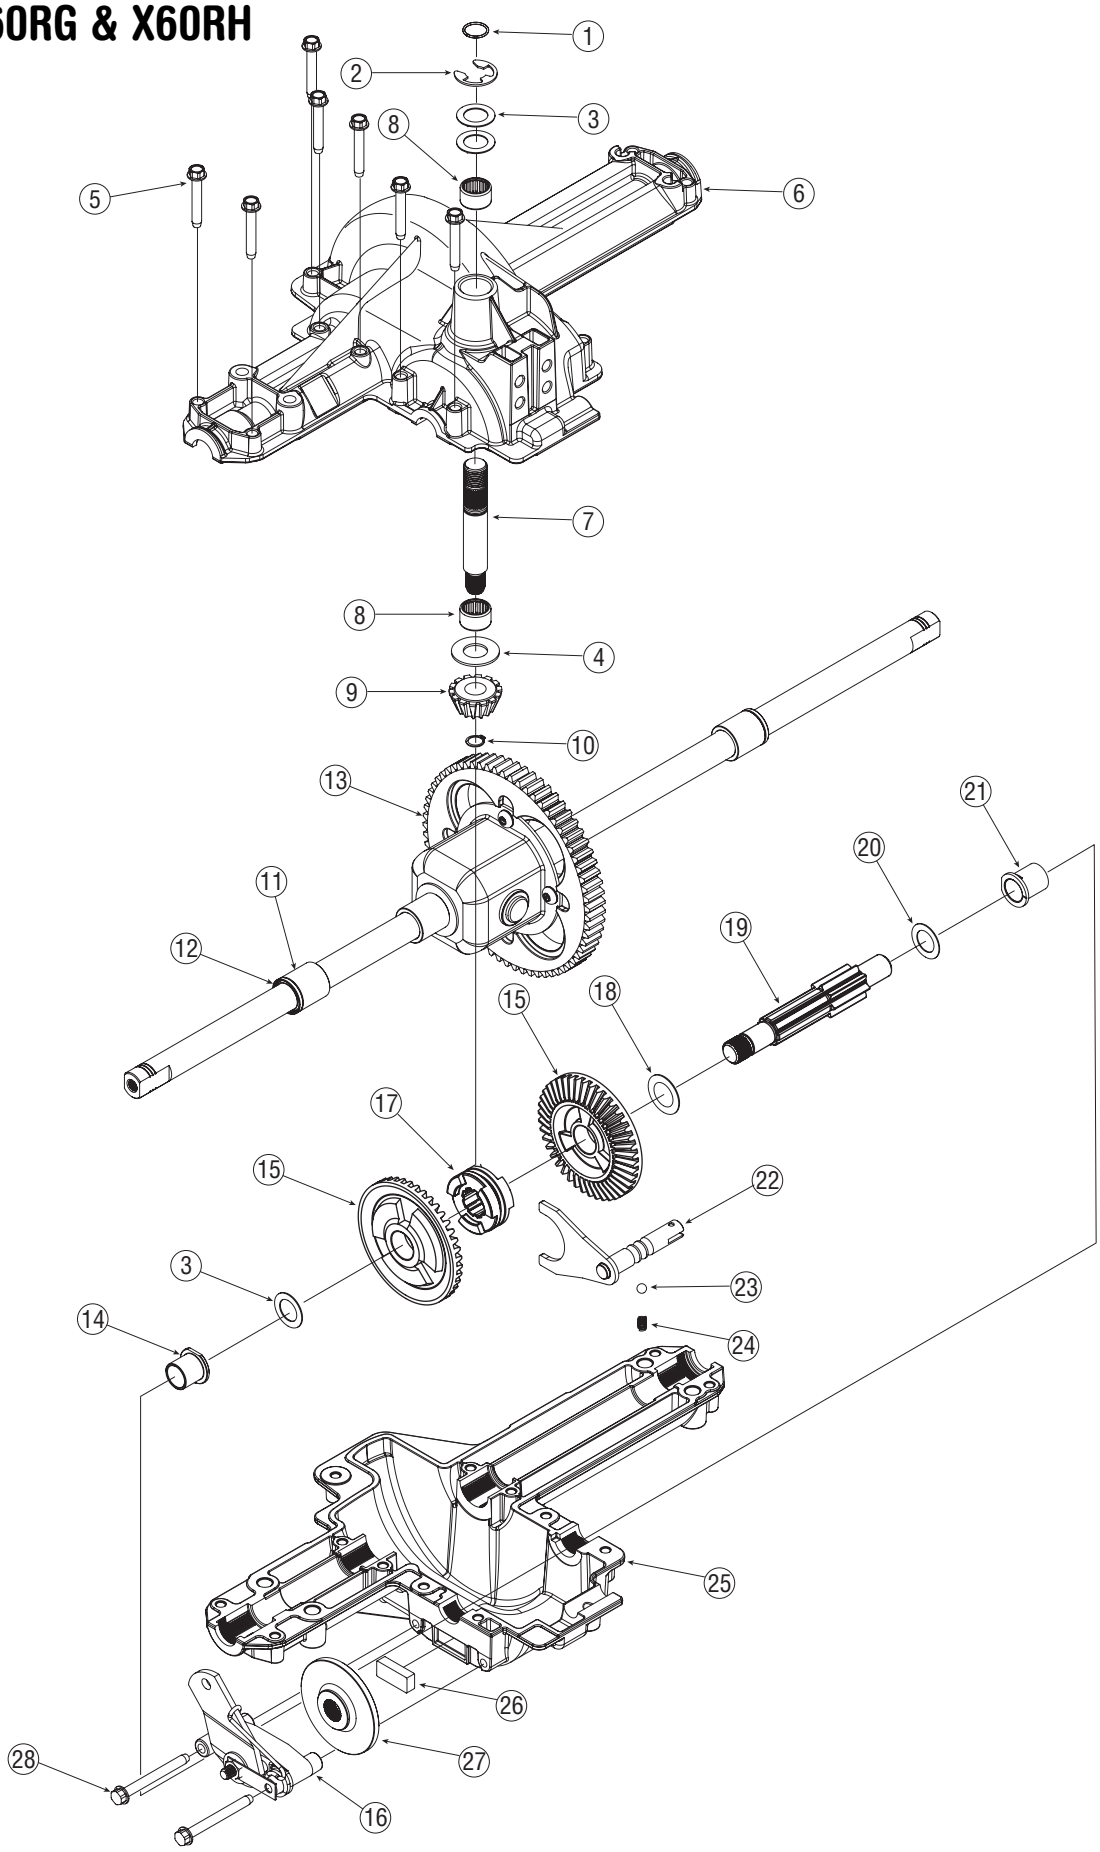




www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Models X60RG & X60RH

| REF. NO. | PART NUMBER | DESCRIPTION |
|---|---|---|
| 1 | 732-0614 | Ring, Wire |
| 2 | 716-0231 | Ring, E Type, .750 |
| 3 | 936-0336 | Flat Washer, 5/8 x 1.0 x .030* |
| | 936-0337 | Flat Washer, 5/8 x 1.0 x .040* |
| | 936-0349 | Flat Washer, 5/8 x 1.0 x .020* |
| 4 | 936-0335 | Washer, Thrust .635 x 1.26 x .06 |
| 5 | 910-1325 | Self-tapping Screw, 1/4-20 x 1.625 |
| 6 | 918-04168 | Upper Housing |
| 7 | 711-1109 | Input Shaft |
| 8 | 941-0335 | Needle Bearing, .625 x .813 x .495 |
| 9 | 717-1464 | 14-tooth Bevel Pinion |
| 10 | 716-0108 | Retaining Ring, .437 |
| 11 | 941-0340 | Sleeve Bearing, .75 x .1.0 x 1.0 |
| 12 | 921-0338 | Seal, .75 x 1.0 x .125 |
| 13 | 918-04096 | Differential Assembly |
| 14 | 941-0336 | Flange Bearing, 5/8 x 3/4 x 3/4 |
| 15 | 917-04056 | 42-tooth Bevel Gear |
| 16 | 961-0001 | Brake Assembly |
| 17 | 918-04045 | Clutch Collar |
| 18 | 936-0519 | Flat Washer, .70 x 1.125 x .031 |
| 19 | 711-04134 | Drive Shaft |
| 20 | 936-0495 | Thrust Washer, 1.0 x .632 x .0 |
| 21 | 941-0337 | Flange Bearing, 5/8 x 3/4 x 15/16 |
| 22 | 911-0011 | Detent Shaft Assembly |
| 23 | 741-0862 | Detent Ball |
| 24 | 932-0863 | Compression Spring |
| 25 | 919-04018 | Lower Housing |
| 26 | 917-0678 | Brake Puck |
| 27 | 761-0202 | Brake Disc |
| 28 | 910-1206 | Self-tapping Screw, 1/4-20 x 2.375 |
| — | 737-0148 | Grease |

*Use applicable flat washer in this application allowing .0150/.0020 in. end-play

NOTE: If rebuilding the upper housing, include two ounces (2 oz.) of a good quality grease in the input shaft cavity.



www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

## Models X60RG & X60RH

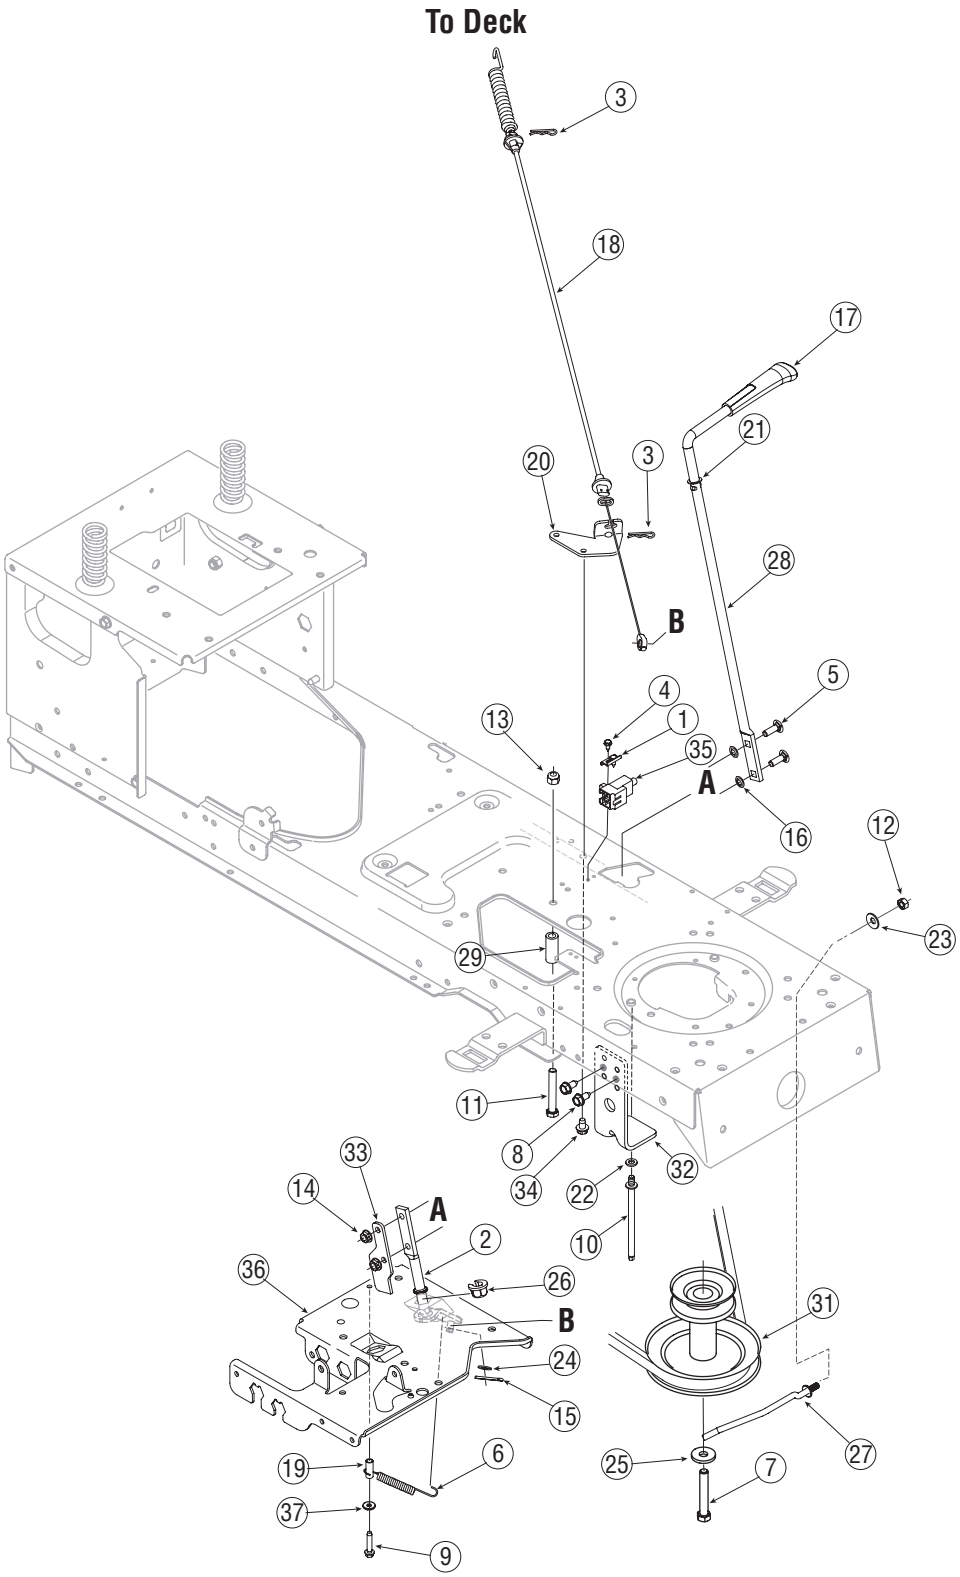




www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Models X60RG & X60RH

| REF. NO. | PART NUMBER | DESCRIPTION |
|---|---|---|
| 1 | 17962 | Plate, Switch |
| 2 | 947-04036 | Lever Assembly, Engagement |
| 3 | 714-0145 | Click Pin |
| 4 | 910-0224 | Screw, #10-16, 0.500 |
| 5 | 910-0276 | Screw, Carriage, 5/16-18, 1.00 |
| 6 | 732-04248 | Extension Spring, .38 OD x 3.9 Lg |
| 7 | 710-3157A | Screw, 7/16-20, 3.25 Gr5 (Model X60RG) |
| | 710-04377 | Screw, 7/16-20, 2.75, Gr5 (Model X60RH) |
| 8 | 910-0726 | Screw, 5/16-12, 0.750 |
| 9 | 910-0778 | Screw, 1/4-20 x 1.50 |
| 10 | 711-1044A | Pin, Belt Guard, 5/16 x 4.75 (Model X60RG) |
| 11 | 910-3011 | Screw, 3/8-16 x 2.25 |
| 12 | 712-04063 | Nut, Flange Lock, 5/16-18, GrF |
| 13 | 712-04065 | Nut, Flange Lock, 3/8-16, GrF |
| 14 | 912-3004A | Nut, Flange Lock, 5/16-18, Gr5 |
| 15 | 914-0470 | Pin, Cotter, 1/8 x 1.25 |
| 16 | 726-0201 | Nut, Speed, .3125 ID |
| 17 | 731-2111A | Knob, PTO |
| 18 | 746-04092 | Deck Engagement Cable |
| 19 | 750-0566A | Spacer, .260 x .372 x 1.030 Lg. |
| 20 | 783-04590A-0637 | Cable Bracket |
| 21 | 936-0108 | Washer, Flat, .510 x .750 x .033 |
| 22 | 936-0119 | Washer, Lock, 5/16 |
| 23 | 936-0242 | Washer, Bell, .340 x .872 x .060 |
| 24 | 936-0275 | Washer, Flat, .344 x .688 x .065 |
| 25 | 936-0322 | Washer, Flat, .450 x1.250 x.164 |
| 26 | 941-0708 | Bearing, Flange, Hex Split .500 ID |
| 27 | 747-1286A | Keeper Rod, Belt (Model X60RG) |
| 28 | 747-04470 | Engagement Handle, Deck |
| 29 | 748-0415B | Spacer, .385 ID x .635 OD x 1.54 |
| 30 | 910-1260A | Screw, 5/16-18 x .750 |
| 31 | 956-04207 | Pulley, Engine, 3.39 x 6.12 Dia. (Model X60RG) |
| | 956-04196 | Pulley, Engine, 3.39 x 6.12 Dia. (Model X60RH) |
| 32 | 783-04467-0637 | Stop Bracket, Deck-Up (Model X60RH) |
| 33 | 783-0744A-0637 | Stop Bracket, Engagement |
| 34 | 710-0607 | Screw, 5/16-18, 0.500 |
| 35 | 725-04039 | Switch, Interlock |
| 36 | 783-04612-0637 | Support Bracket, Steering |
| 37 | 736-0173 | Washer, Flat, .28 x .74 x .063 |



www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

## Model X60RG

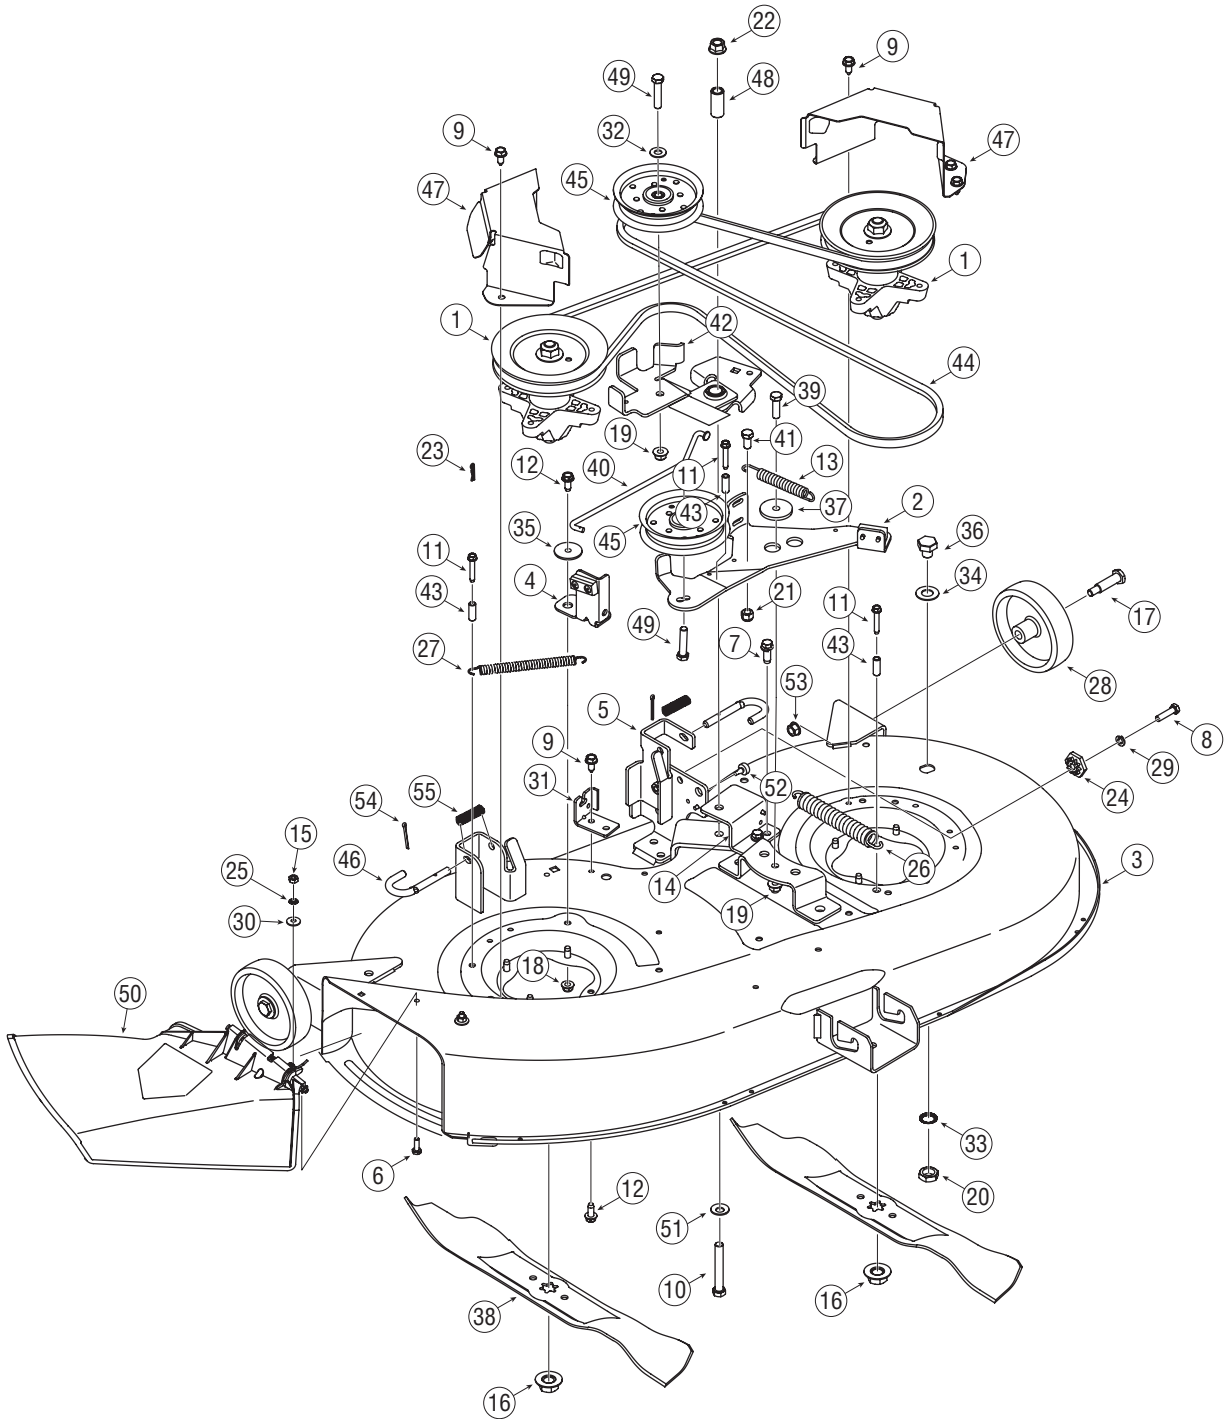




www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Model X60RG

| REF. NO. | PART NUMBER | DESCRIPTION |
|---|---|---|
| 1 | 918-0624 | Spindle Assembly, Pul, 6.23” Dia |
| 2 | 683-04138A-4008 | Brake Assembly, Deck |
| 3 | 983-04261-4008 | Deck Shell, 42” |
| 4 | 983-04167 | Brake Assembly, Deck |
| 5 | 683-0254B-4008 | Hanger Bracket Assembly, LH |
| 6 | 910-3015 | Screw, 1/4-20, .75, Gr5 |
| 7 | 910-0654A | Screw, 3/8-16, 1.00 |
| 8 | 910-0528 | Screw, 5/16-18, 1.250 |
| 9 | 910-0726 | Screw, 5/16-12, 0.750 |
| 10 | 910-0510 | Screw, 7/16-20, 3.00, Gr5 |
| 11 | 910-0778 | Screw, 1/4-20, 1.500 |
| 12 | 910-1260A | Screw, 5/16-18, .75 |
| 13 | 932-0470A | Extension Spring, .53 OD x 4.75 |
| 14 | 783-05045-4008 | Pivot Support Bracket |
| 15 | 712-3006 | Nut, Hex, 1/4-20, Gr5 |
| 16 | 912-0417A | Nut, Flange, 5/8-18 |
| 17 | 938-0373 | Screw, Shldr, .498 x 1.53, 3/8-16 |
| 18 | 712-04063 | Nut, Flange Lock, 5/16-18, GrF |
| 19 | 712-04065 | Nut, Flange Lock, 3/8-16, GrF |
| 20 | 912-0641 | Nut, Hex, M16-1.5 |
| 21 | 912-3061 | Hex Lock Nut, 3/8-24 |
| 22 | 712-0459 | Flange Lock Nut, 7/16-20 |
| 23 | 914-0104 | Pin, Cot, .072 Dia. x 1.13 Lg |
| 24 | 917-04074 | Gear, Deck Adjustment |
| 25 | 926-0233 | Nut, Push, .25 ID x .50 OD |
| 26 | 732-0459B | Spring, Exten. , .94 Dia. x 6.74 |
| 27 | 732-04287 | Spring, Exten. , .50 Dia. x 6.375 |
| 28 | 734-0973 | Wheel, Deck 5.0 x 1.38 |

| REF. NO. | PART NUMBER | DESCRIPTION |
|---|---|---|
| 29 | 936-0119 | Washer, Lock, 5/16 |
| 30 | 936-0270 | Washer, Bell, .265 x.75 x .062 |
| 31 | 783-04740-4008 | Deck Engagement Cable Bracket |
| 32 | 936-0300 | Washer, Flat, .406 x .875 x .059 |
| 33 | 936-0760 | Washer, Lock |
| 34 | 936-0187 | Washer, Flat, .64 x 1.24 x .06 |
| 35 | 738-04166 | Spacer, Shoulder, .500 x .1475 |
| 36 | 738-04146 | Plug |
| 37 | 738-04162A | Spacer, Shoulder, .8840 x .190 |
| 38 | 942-0616A | Blade, 21.23”, Star 3-in-1 |
| 39 | 910-3005 | Screw, 3/8-16 x 1.25 |
| 40 | 747-04501 | Control Rod, Brake |
| 41 | 710-0216 | Screw, 3/8-16 x .75 |
| 42 | 683-04252-4008 | Deck Idler Assembly |
| 43 | 750-0566A | Spacer, .260 x .372 x 1.030 |
| 44 | 954-04045 | Belt, V-Type |
| 45 | 756-04129 | Idler Pulley, 4.25” Dia. |
| 46 | 747-1116 | Deck Release Rod |
| 47 | 783-04327A-4008 | Cover, Belt, 6.00 Dia. |
| 48 | 750-04637 | Spacr, .455 ID x .680 OD |
| 49 | 710-0347 | Screw, 3/8-16 x 1.75 |
| 50 | 931-1032B | Chute Assembly, Discharge |
| 51 | 736-0407 | Bell Washer, .45 x 1.00 x .062 |
| 52 | 735-0271 | Bumper |
| 53 | 912-0431 | Flange Lock Nut, 3/8-16 |
| 54 | 914-0470 | Cotter Pin |
| 55 | 932-0306A | Compession Spring, .531x 1.75 |



www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Model X60RH

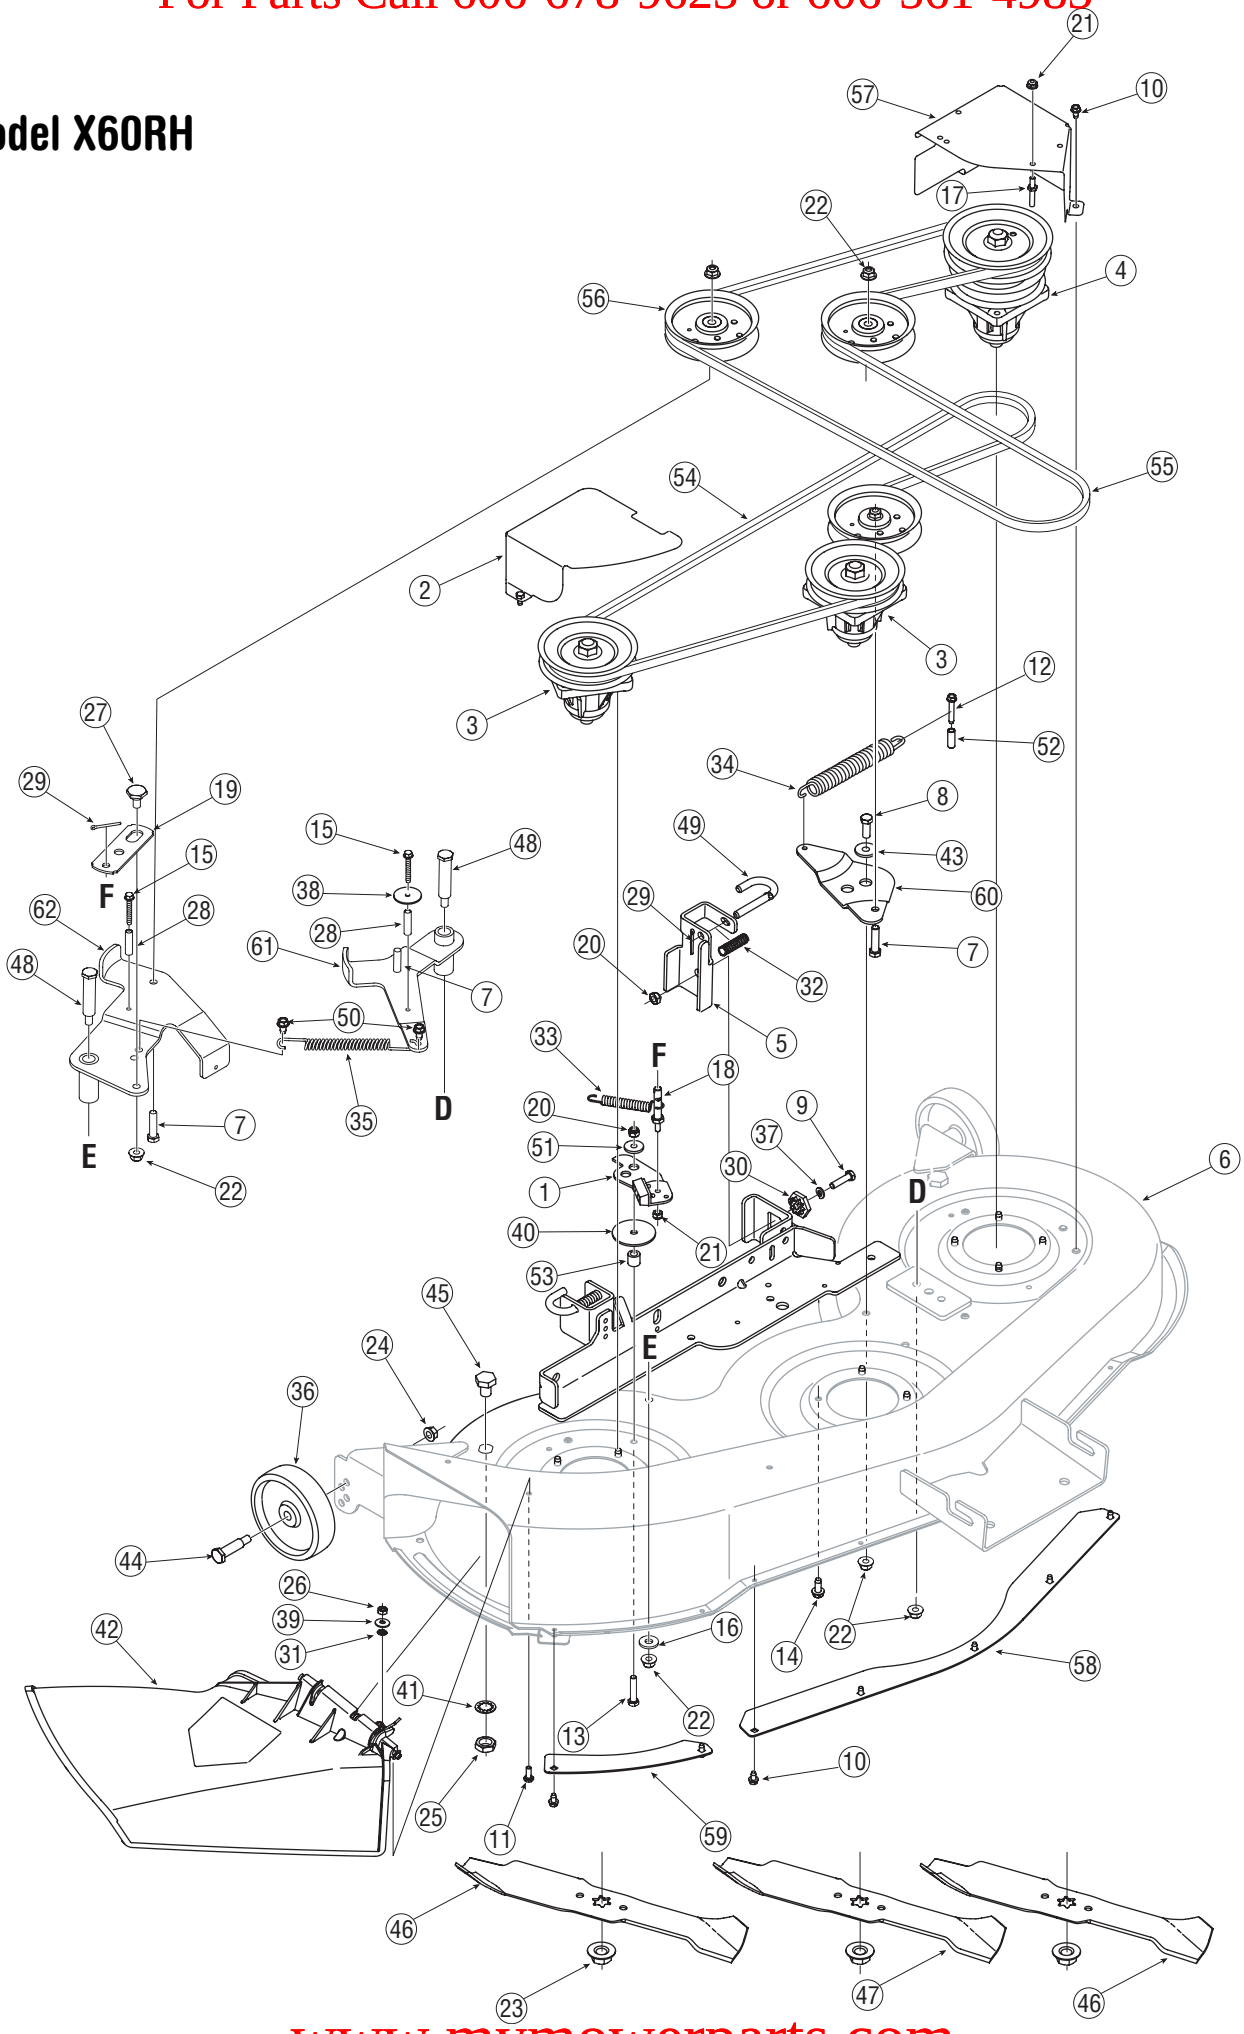


www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

# Model X60RH

| REF. NO. | PART NUMBER | DESCRIPTION |
|---|---|---|
| 1 | 97116 | Brake Assembly, Deck |
| 2 | 17258E-4008 | RH Belt Cover, Deck 46” |
| 3 | 918-0430A | Spindle Assembly, 5.00 Dia. |
| 4 | 918-04134B | Spindle Ass’y, Double Pulley |
| 5 | 683-0254B-4008 | Hanger Bracket Assembly |
| 6 | 983-04254-4008 | Deck Weldment |
| 7 | 710-0520 | Screw, 3/8-16, 1.50, Gr5 |
| 8 | 710-0514 | Screw, 3/8-16, 1.00, Gr5 |
| 9 | 910-0528 | Screw, 5/16-18, 1.25, Gr5 |
| 10 | 910-0599 | Screw, 1/4-20, 0.500 |
| 11 | 910-3015 | Screw, 1/4-20, .75, Gr5 |
| 12 | 910-0778 | Screw, 1/4-20, 1.500 |
| 13 | 710-0805 | Screw, 5/16-18, 1.50, Gr5 |
| 14 | 910-1260A | Screw, Ld, 5/16-18, 0.750 |
| 15 | 910-1026 | Screw, 1/4-20 x 1.75 |
| 16 | 936-0247 | Washer, Flat, .406 x 1.25 x .157 |
| 17 | 911-0993 | Belt Guard Pin 1/4 Dia x 1.43 |
| 18 | 711-1554 | Pin, 1/4-20, 3/8 x 2.0 |
| 19 | 783-04991-4008 | Brake Bracket |
| 20 | 712-04063 | Nut, Flange Lock, 5/16-18, GrF |
| 21 | 712-04064 | Nut, Flange Lock, 1/4-20, GrF |
| 22 | 712-04065 | Nut, Flange Lock, 3/8-16, GrF |
| 23 | 912-0417A | Nut, Flange, 5/8-18 |
| 24 | 912-0431 | Nut, Flange Lock, 3/8-16, GrF |
| 25 | 912-0641 | Nut, Hex, M16-1.5 |
| 26 | 712-3006 | Nut, Hex, 1/4-20, Gr5 |
| 27 | 738-0322 | Shoulder, Screw, .625 Dia. x .217 |
| 28 | 750-04456 | Spacer, .260 x .372 x 1.420 Lg. |
| 29 | 914-0470 | Pin, Cot, 1/8 x 1.25 |
| 30 | 917-04074 | Adjustment Gear, Deck |
| 31 | 926-0233 | Nut, Push, .25 ID x .50 OD |
| 32 | 932-0306A | Spring, Compress, .531 OD x 1.75 |
| 33 | 932-0429A | Spring, Extension, .50 Dia x 3.97 |
| 34 | 932-0594A | Spring, Extension, .91 Dia x 7.33 |
| 35 | 732-0944 | Spring, Extension, .75 OD x 6.75 |
| 36 | 734-0973 | Wheel, Deck 5.0 x 1.38 |
| 37 | 936-0119 | Washer, Lock, 5/16 |
| 38 | 936-0211 | Washer, Flat, .285 x 1.25 x .06 |
| 39 | 936-0270 | Washer, Bell, .265 x.75 x .062 |
| 40 | 936-0418A | Washer, Flat, .34 x 2.25 x.10 |
| 41 | 736-0225 | Washer, Lock, 5/8 |
| 42 | 931-1032B | Chute Assembly |
| 43 | 938-0347 | Spacer, Shoulder, .625 ID x .169 |
| 44 | 938-0373 | Spacer, Shoulder, .498 x 1.53 |
| 45 | 738-04146 | Plug |
| 46 | 942-0611A | Blade, 16.28”, Star 3-in-One |
| 47 | 942-0612A | Blade, 14.88”, Star 3-in-One |
| 48 | 738-04216 | Shld. Screw, .625 x 2.515 x .875 |
| 49 | 747-1116 | Rod, Deck Release |
| 50 | 910-0623 | Screw, 3/8-16 x .750 |
| 51 | 748-0234 | Shoulder Spacer |
| 52 | 750-0566A | Spacer, .260 x .372 x 1.030 |
| 53 | 750-1320 | Spacer, .375 x .63 x .595 |
| 54 | 954-0349 | Belt, V-Type, Poly, A x 79.10 Lg. |
| 55 | 754-04122 | Belt, V-Type, A x 90.24 |
| 56 | 756-04129 | Pulley, Idler, 4.25” Dia. |
| 57 | 783-1348C-4008 | Belt Cover, LH |
| 58 | 783-0141-4008 | Deck Skirt, Center |
| 59 | 783-0142-4008 | Deck Skirt, RH |
| 60 | 783-04641-4008 | Bracket, Idler |
| 61 | 683-04250-4008 | Idler Bracket Assembly - LH |
| 62 | 683-04251-4008 | Idler Bracket Assembly - RH |



www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

## Models X60RG & X60RH

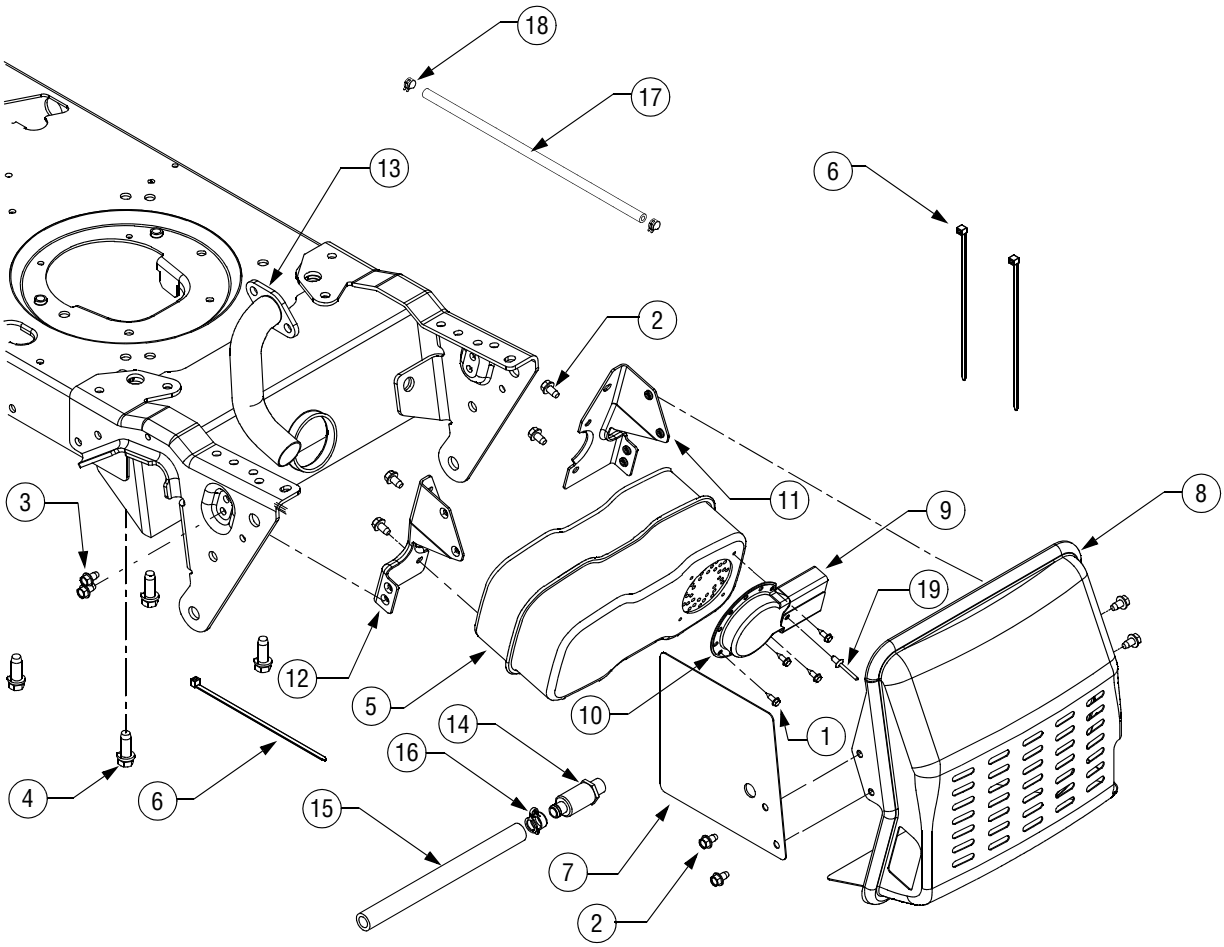


| REF. NO. | PART NUMBER | DESCRIPTION |
|---|---|---|
| 1 | 910-0227 | Screw, #8-18, 0.500 |
| 2 | 910-0599 | Screw, Hex, 1/4-20, 0.500 |
| 3 | 910-0642 | Screw, Hex, 1/4-20, 0.750 |
| 4 | 910-0654A | Screw, Hex, 3/8-16 x 1.00 |
| 5 | 751-0617B | Muffler, Single Inlet |
| 6 | 725-0157 | Cable, Tie, 3/16 x .05 x 7.4 |
| 7 | 783-05106-0637 | Shield, Heat |
| 8 | 683-04256-0637 | Shield, Muffler |
| 9 | 751-10353 | Extension, Deflector |
| 10 | 751-0564A | Deflector, Muffler |
| 11 | 783-04573-0637 | Muffler Bracket, LH |
| 12 | 783-04574-0637 | Muffler Bracket, RH |
| 13 | 751-10017 | Pipe, Exhaust |
| 14 | 951-3140 | Drain, Oil |
| 15 | 751-3141-14 | Extension Hose, Oil Drain |
| 16 | 951-3142 | Cap, Oil Drain |
| 17 | 751-10349-16 | Fuel Hose, Low Permeation |
| 18 | 726-0205 | Clamp |
| 19 | 728-04000 | Rivet, Pop, .188 x .325 |



www.mymowerparts.com

For Parts Call 606-678-9623 or 606-561-4983

www.mymowerparts.com