



ZT-42 (2005)
Console

Page 1 of 24

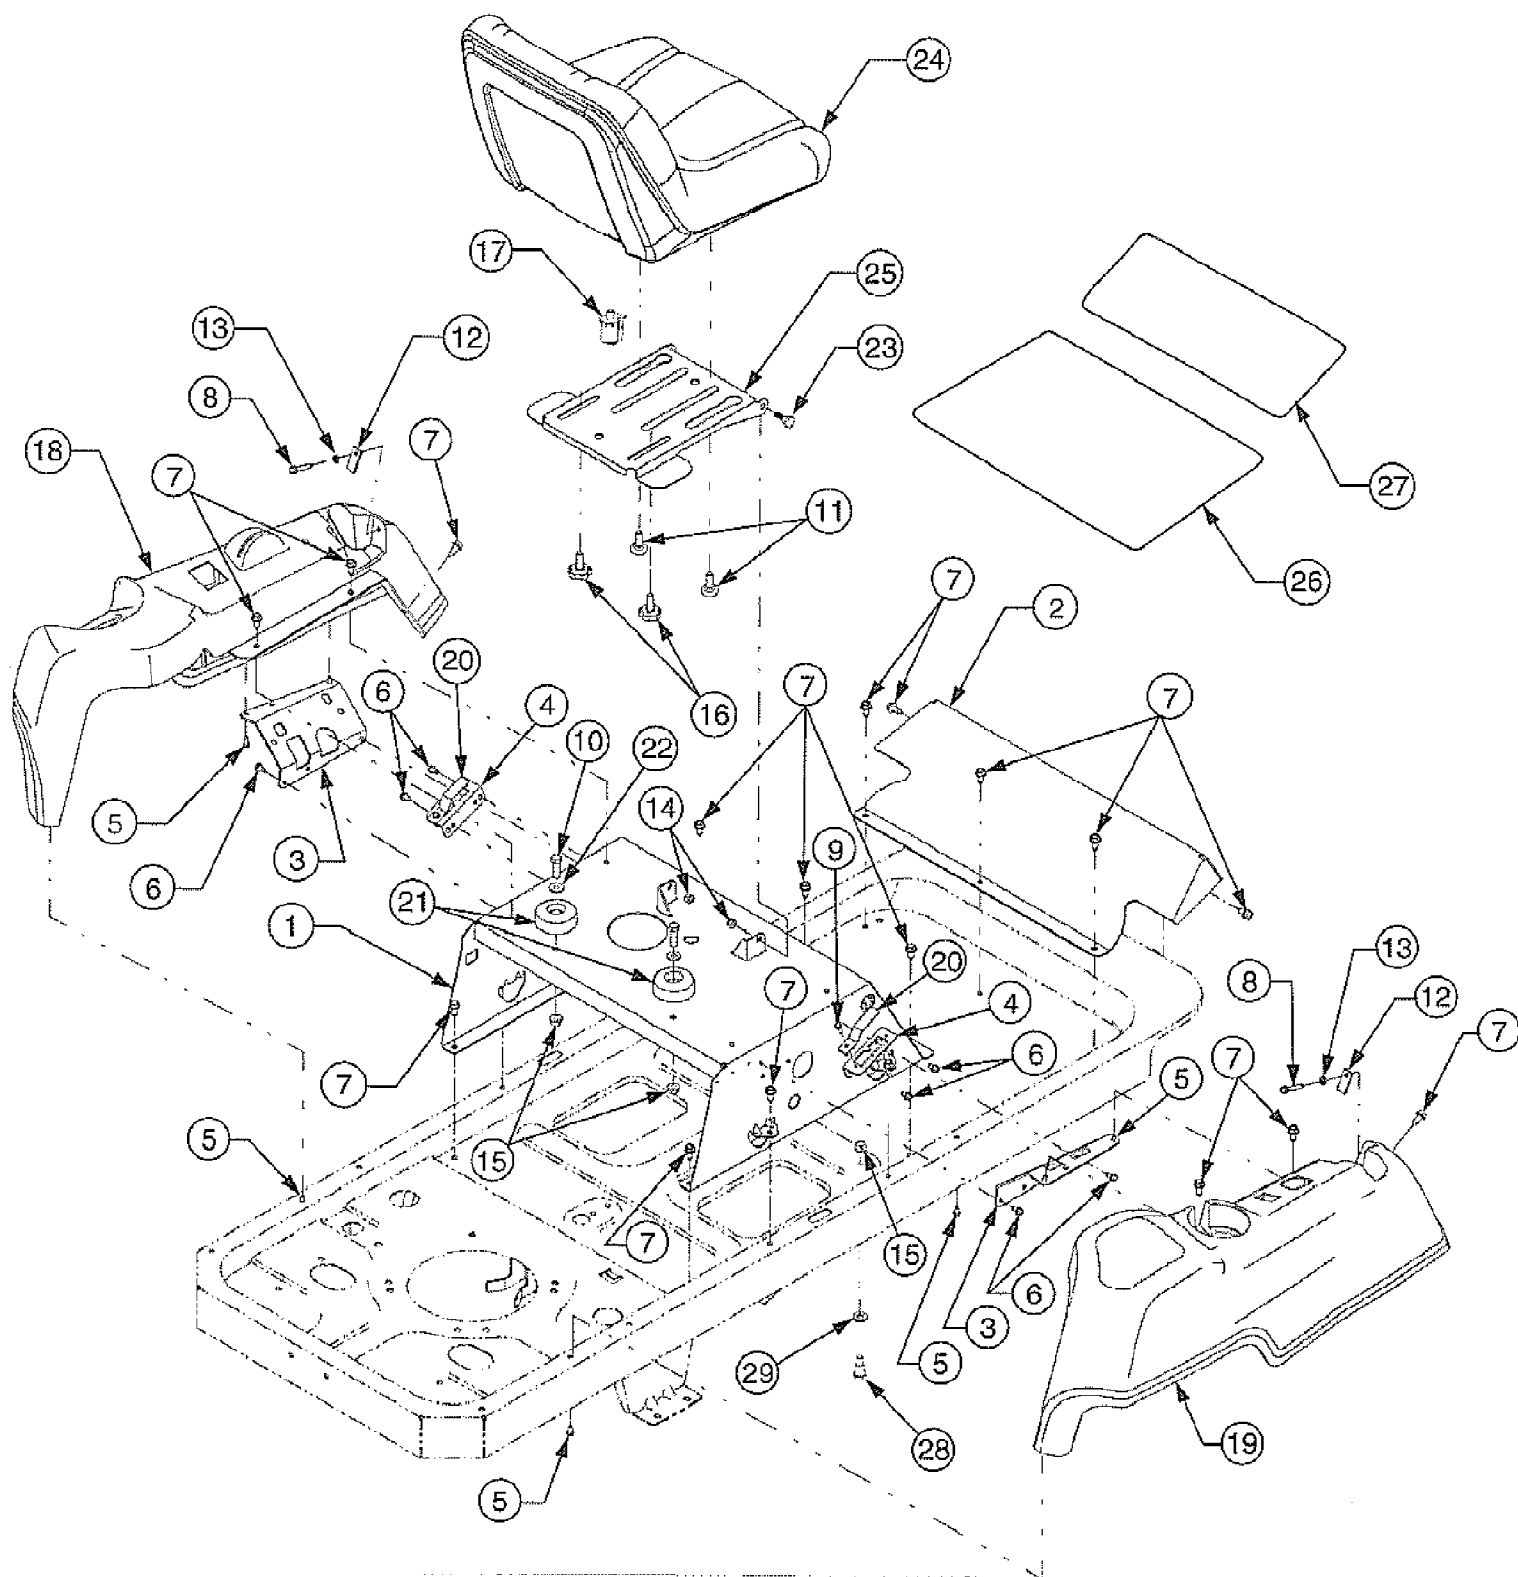


**MFG. CODE B075
& BEFORE**

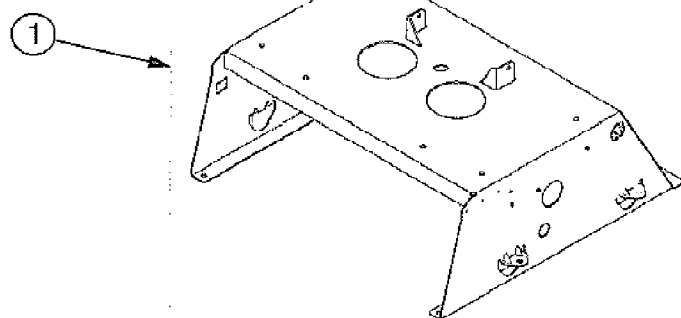

ZT-42 (2005)
Console

Page 2 of 24

Ref #	Part Number	Qty	S/P/F	Description
1	603-04286B	1		Frame, Seat Box (Two expansion cup holes) Mfg.code B075 & before
1	603-04304	1		Frame, Seat Box (One expansion cup holes) Mfg.code B075 & before
	777I22306	1		Graphic, Park Brake, White
	777S32354	1	S	Graphic, Warning
	777I22465	1		Graphic, Oil Reservoir
	777I22307	1		Graphic, Deck Height, White
2	703-05373	1		Bracket, Foot Rest
	777D08312	1		Graphic, White
3	703-05460A	2	/P	Bracket, Console Mounting
4	703-05467	2		Bracket, Switch Mounting
5	710-04261	8		Screw, Hex Wash. Hd Tapp #12-16 x .50
6	710-0599	8	/P	Screw, Hex Wash. Hd. Tapp. 1/4-20 x .5
7	710-0604A	20	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .625
8	710-0778	2	/P	Screw, Hex Wash. Hd. Tapp. 1/4-20 x 1.5
9	710-1268	2	/P	Screw, Hex Wash. Hd Tapp #10-16 x .375
10	710-3005	2	/P	Screw, Hex Cap, 3/8-16 x 1.25 GR5
11	738-04012A	2	/P	Screw, Shoulder, .625 x .175:3/8-16
12	712-04092	2		Nut, U Type Speed, 1/4-20
13	712-0298	2	S	Nut, Hex Jam, 1/4-20 GR2
14	712-0429	2	S	Nut, Hex Insert Lock, 5/16-18 GR5 ...
15	712-0431	4	S	Nut, Hex Flange Lock, 3/8-16 GRF
16	720-04009A	2	/P	Knob, 3/8-16:.625
17	725-3166	1	S	Switch, Seat, Snap Mount, N.C.
18	731-04662A	1	S	Console, LH
	777I22304	1		Graphic, Instruction, White
	777D08311	1		Graphic, White
	777I22305	1		Graphic, Throttle Control, White
19	731-04663	1		Console, RH
	777I22303	1		Graphic, Instruction, White
	777D08310	1		Graphic, White
20	732-04200	2	/P	Spring, Switch Actuator
21	735-04041	2		Pad, Seat
22	736-0267	2	S	Washer, Flat HT, .395 x .87 x .06
23	738-0296	2	S	Screw, Shoulder, .437 x .268: 5/16-18
24	757-04023	1	S	Seat
	777D01782	1	/P	Graphic, USA
25	783-04628	1		Bracket, Seat Pivot
26	723-04020	1		Pad, Abrasive Foot Plate
27	723-04021	1		Pad, Abrasive Toe Plate
28	738-0430	2		Screw, Shoulder, .50 x .685:3/8-16 Mfg code L164 & after
29	736-0300	2	S	Washer, Flat, .406 x .875 x .059

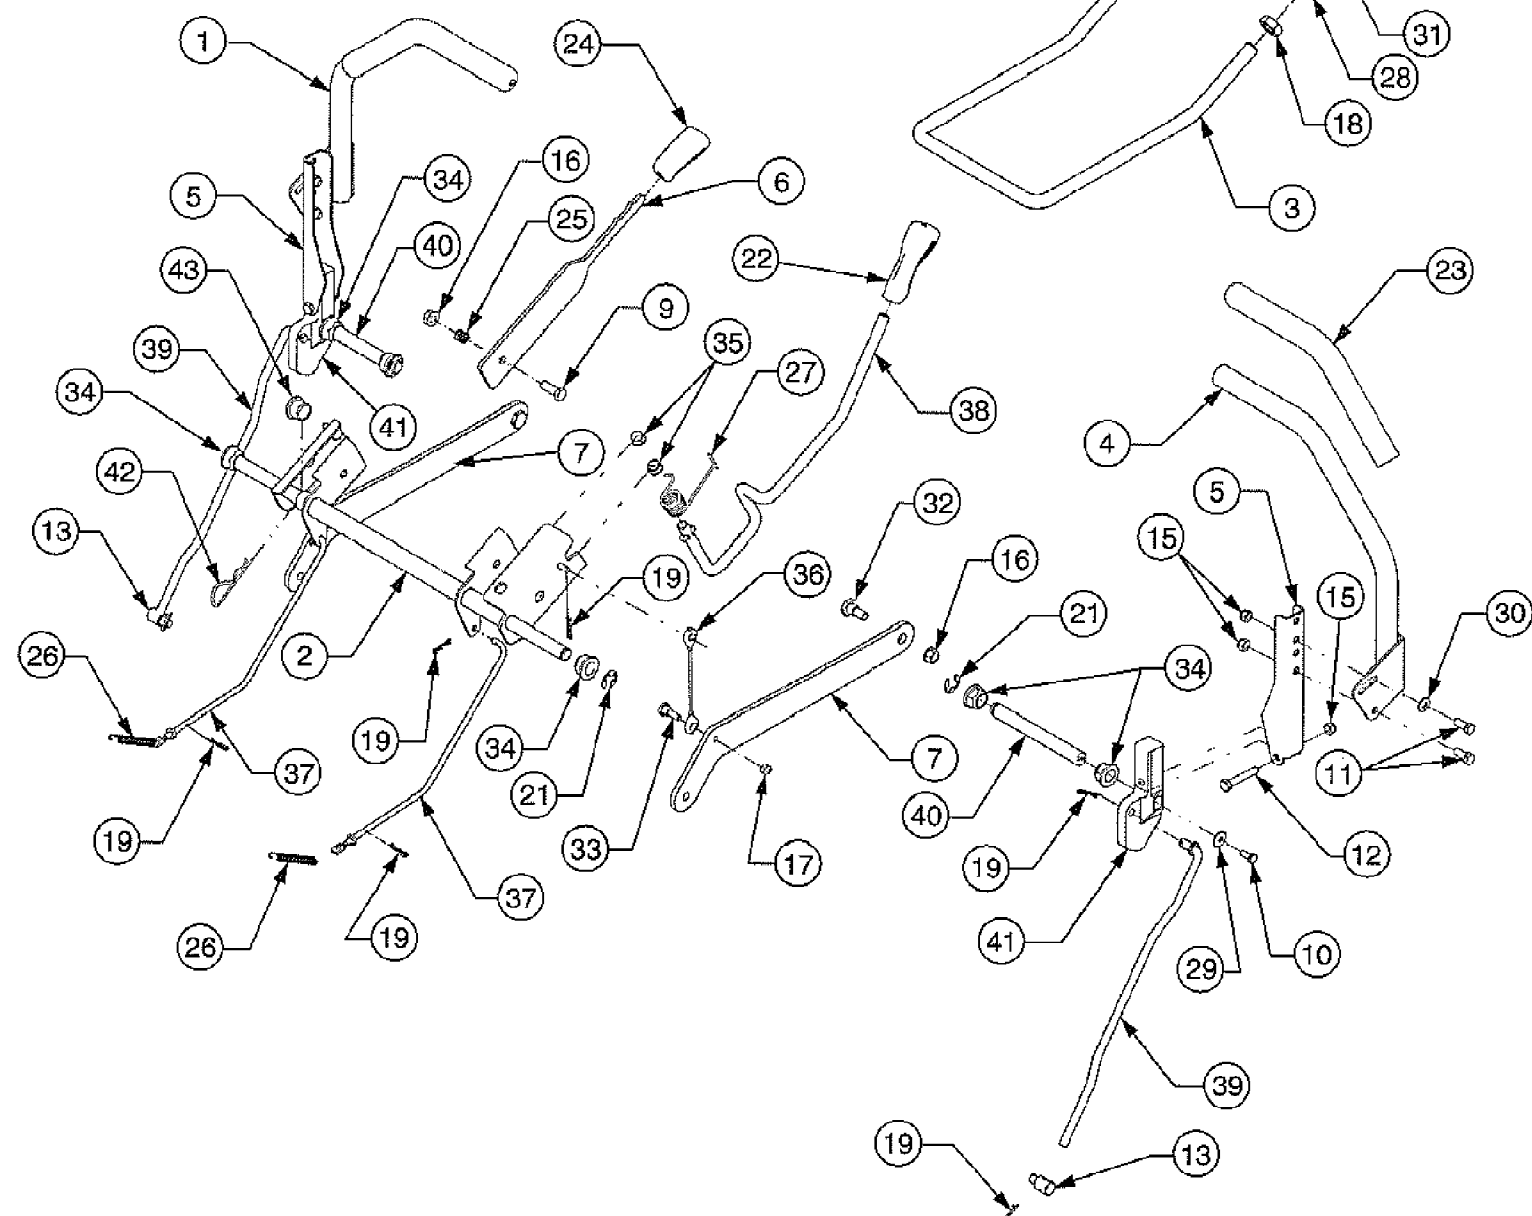

ZT-42 (2005)
Controls

Page 4 of 24

Ref #	Part Number	Qty	S/P/F	Description
1	603-04150	1	S	Lever, Lapbar, LH
2	603-04160	1	S	Shaft Assembly, Deck Lift also furnish (2) 759-04085
2A	603-04160	1	S	Shaft Assembly, Deck Lift also furnish (4) 759-04085
3	747-04223A	1	/P	Rod, Deck Front Hanger
4	603-04181A	1		Lever, Lapbar, RH
5	703-05387	2	S	Bracket, Lapbar Pivot
6	703-05396	1	S	Handle, Brake
7	703-05401	1	S	Arm, Deck Lift, with 1/4" hole
7	703-05793	2	/P	Arm, Deck Lift, with 5/16" hole
8	703-05414	1		Bracket, Front Deck Hanger
9	710-0514	1	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
10	710-0433	2	/P	Screw, Hex Lock, 1/4-20 x .62 GR5
11	710-3008	4	/P	Screw, Hex Cap, 5/16-18 x .75 GR5
12	710-3180	2	/P	Screw, Hex Cap, 5/16-18 x 1.75 GR5
13	711-0832	2	S	Ferrule, 3/8-24 x .375
14	712-0417A	2	/P	Nut, Hex Flange, 5/8-18
15	712-0429	6	S	Nut, Hex Insert Lock, 5/16-18 GR5
16	712-0431	5	S	Nut, Hex Flange Lock, 3/8-16 GRF
17	712-0380	1		Nut, Hex Flange Lock, 1/4-28 GR2, use with ref 7
17	712-04063	2	/P	Nut, Hex Flange Insert Lock, 5/16-18 GrF, use with ref 7
18	712-3056	2	/P	Nut, Hex Jam, 5/8-18 GR5
19	714-0104	10	S	Pin, Internal Cotter
21	716-0106	4	/P	E-Ring , .625 Dia. Shaft
22	720-0311	1		Grip, Handle
23	731-04719	2	S	Grip, Lapbar
24	731-04735	1		Grip, Handle
25	732-0334	1	S	Spring, Compression
26	732-0611	2	S	Spring, Extension
27	732-0874	1	/P	Spring, Torsion
28	736-0158	2	S	Washer, Lock, 5/8
29	736-0270	2	/P	Washer, Bell, .265 x .75 x .062
30	736-0275	2	S	Washer, Flat, .344 x .688 x .065
31	736-0366	2	/P	Washer, Flat, .64 x 1.12 x .125
32	738-0143	4	/P	Screw, Shoulder, .498 x .340:3/8-16
33	738-04100	1		Screw, Shoulder, 1/4-28 x .375, use with ref 7
33	710-0805	2	/P	Screw, Hex Cap, 5/16-18 x 1.5 GR5, use with ref 7
34	741-0225	6	S	Bearing, Hex Flange
35	741-0715	2	S	Bearing, Flange Snap, .50 ID
36	746-0970	2		Cable, Deck Lift, 5.05 Long, also furnish (4) 759-04085
37	747-04218	2		Rod, Brake
38	747-04224	1		Rod, Deck Lift Handle
39	747-04225	2	S	Rod, Lapbar Control
40	747-04226	2	S	Shaft, Control
41	748-04052			


ZT-42 (2005)
Controls

Page 5 of 24

Ref #	Part Number	Qty	S/P/F	Description
42	714-3020	1	/P	Pin, Internal Cotter
43	741-3074	2		Bearing, Flange, .626 x .938 x .344
44	710-0520	2	/P	Screw, Hex Cap, 3/8-16 x 1.5 GR5, use with ref 2A
45	712-04065	2	/P	Nut, Hex Flange Insert Lock, 3/8-16 GrF, use with ref 2A
46	712-3008	2	S	Nut, Hex Jam, 3/8-16 GR5, use with ref 2A
47	712-3007	2	/P	Nut, Hex Jam, 5/16-18 GR5, use with ref 7
	759-04085	1		Deck Cable Hardware Kit, not shown

ZT-42 (2005) Deck Assembly

Page 6 of 24

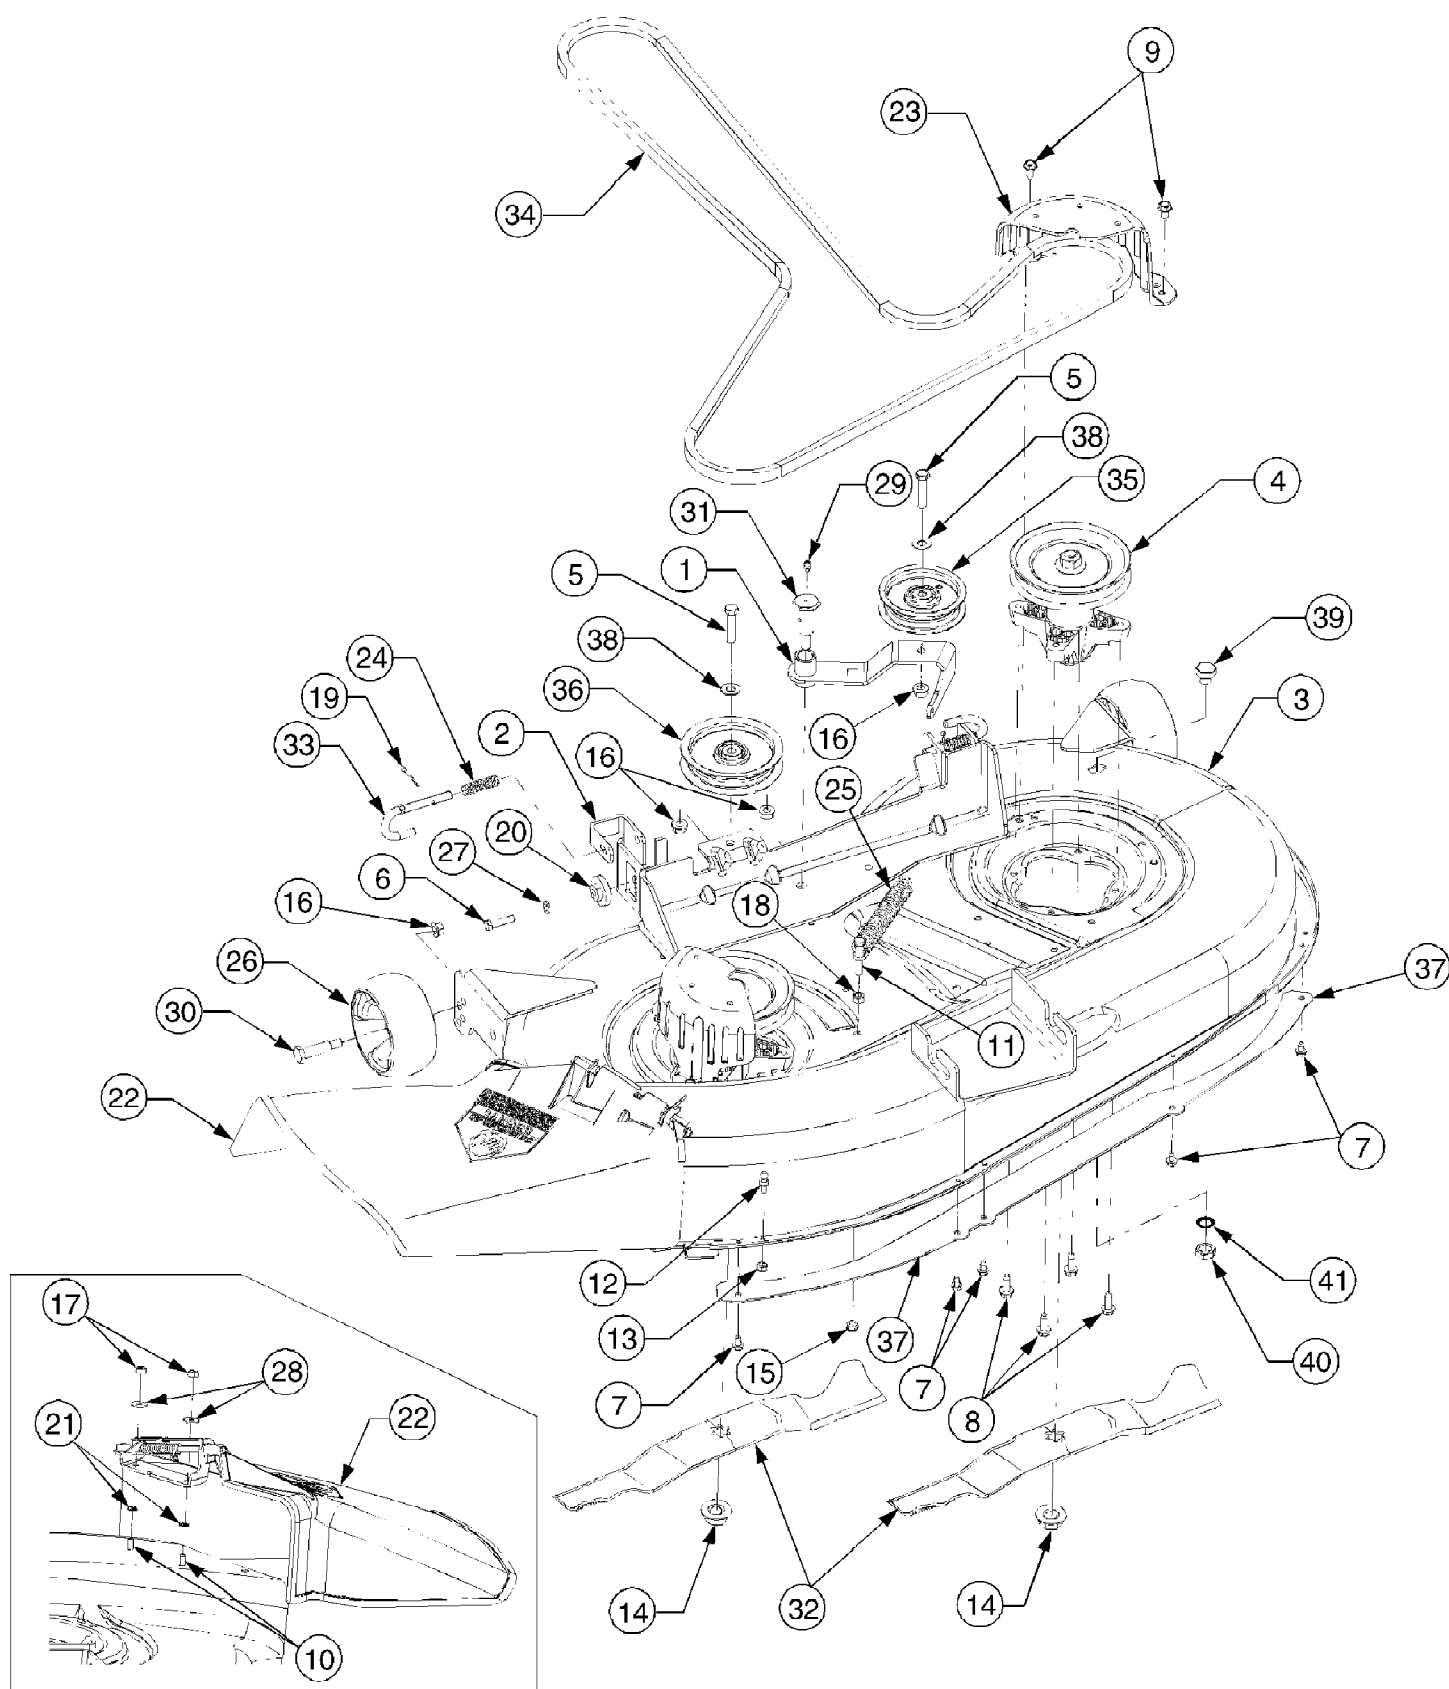

ZT-42 (2005)
Deck Assembly



Page 7 of 24

Ref #	Part Number	Qty	S/P/F	Description
1	603-04155	1		Arm, Idler
2	603-04156	1		Bracket, Deck Lift
3	603-04157	1		Housing, Deck
	777S32599	1		Graphic, Danger
	777S30503	1	/P	Graphic, Danger
	777I22281	1	S	Graphic, Instruction
	777D07777	1		Graphic, 42 inch cut, White
4	618-0427	1	S	Spindle Assembly
	756-1188	1		Pulley
5	710-0347	2	/P	Screw, Hex Cap, 3/8-16 x 1.75 GR5
6	710-0528	1	/P	Screw, Hex Cap, 5/16-18 x 1.25 GR5
7	710-0599	5	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
8	710-0650	8	/P	Screw, Hex Wash. Hd. Tapp 5/16-18 x .875
9	710-0726	4	/P	Screw, Hex Wash. Hd. Tapp 5/16-12 x 75
10	710-0751	2	/P	Screw, Hex Cap, 1/4-20 x .62 GR5
11	710-3180	1	/P	Screw, Hex Cap, 5/16-18 x 1.75 GR5
12	711-04069	1	S	Pin, Grass Catcher, 1/4-20
13	712-0324	1	/P	Nut, Hex Insert Lock, 1/4-20 GR8
14	712-0417A	2	/P	Nut, Hex Flange, 5/8-18
15	712-0429	1	S	Nut, Hex Insert Lock, 5/16-18 GR5
16	712-0431	5	S	Nut, Hex Flange, 3/8-16 GRF
17	712-3006	2	/P	Nut, Hex, 1/4-20 GR5
18	712-3010	1	S	Nut, Hex, 5/16-18 GR5
19	714-0470	2	S	Pin, Cotter, 1/8 x 1.25
20	717-1553B	1	S	Gear, Deck Adjustment
21	726-0233	2	/P	Nut, Push, .25 x .5
22	731-1032B	1	S	Chute Assembly, Discharge
	777S30284	1	S	Graphic, Danger
23	731-2231B	2	/P	Cover, Belt
24	732-0306	2	S	Spring, Compression
25	732-0459	1	S	Spring, Extension, .94 Dia. x 6.74
26	734-04039	2	S	Wheel, Deck Ball, 5.0
27	736-0119	1	S	Washer, Lock, 5/16
28	736-0270	2	/P	Washer, Bell, .265 x .75 x .062
29	737-3000	1	S	Fitting, Lube, 3/16 Drive
30	738-0373	2	S	Screw, Shoulder, .498 x 1.53:3/8-16
31	738-3005A	1	S	Screw, Shoulder, .68 x 1.59
32	942-04087	2	/P/F	Blade, Hi-Lift, 21.23
32	942-0616A	2	/P/F	Blade, 3 in 1, 21.23
33	747-1116	2	/P	Rod, Deck Hanger
34	754-04045	1	S	Belt, V, Type A Sec x 109
35	756-0627B	1	S	Pulley, Idler, 3.5 Dia.
36	756-1229	1		Pulley, Idler, 4.06 Dia
37	783-1146A	1	S	Skirt, Deck
38	736-3072	2	/P	Washer, Flat, .38 x .93 x .11 HT
39	737-04003B	1	S	Nozzle, Deck Water
40	712-0641	1	S	Nut, Hex, M16-1.5
41	736-0760	1	S	Washer, Lock,

ZT-42 (2005)
Drive

Page 8 of 24

Mfg. Code A195 & Before

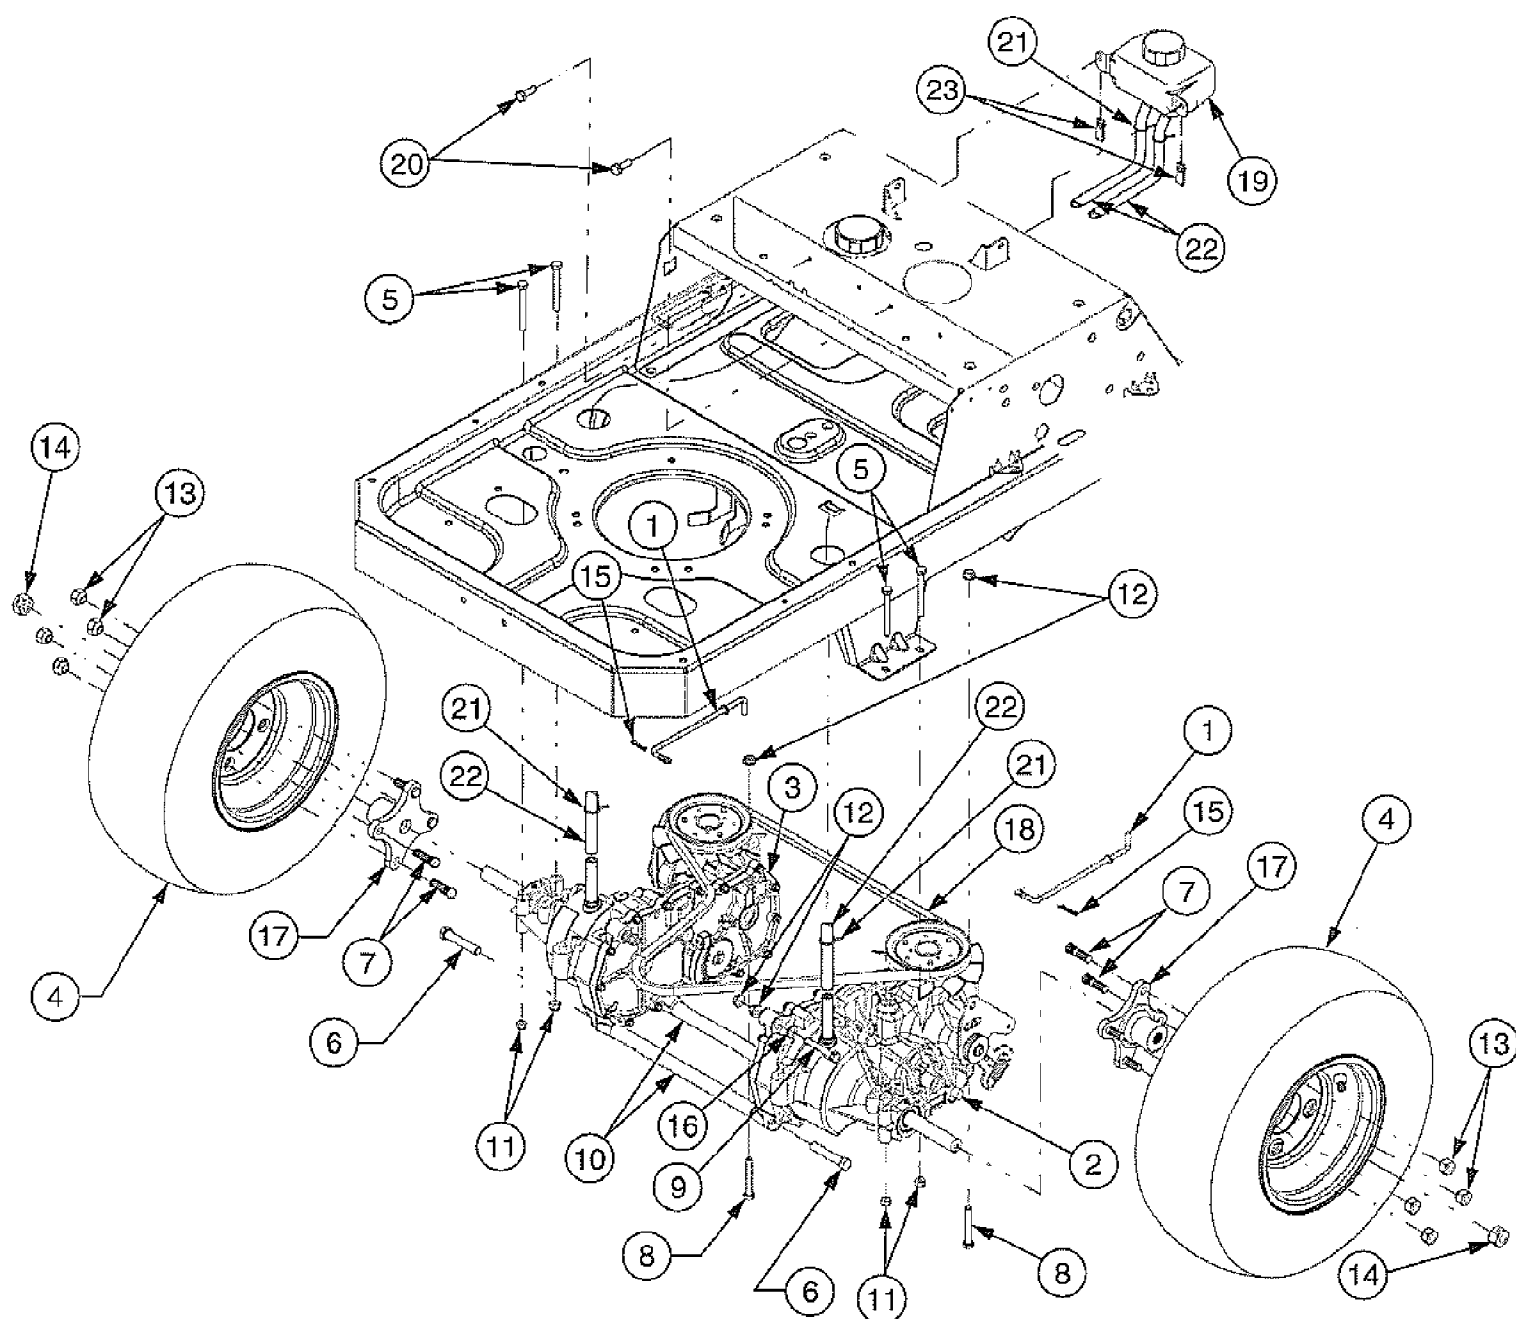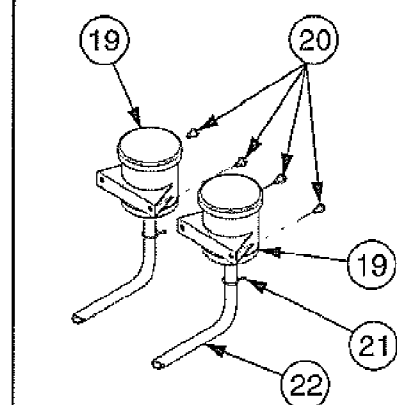

ZT-42 (2005)
Drive

Page 9 of 24

Ref #	Part Number	Qty	S/P/F	Description
1	747-04217A	2	S	Rod, Bypass
2	759-04143	1		Transmission Assembly, RH, Service Kit replaces 618-04163A NLA
	732-04448	1	/P	Neutral Return Spring Included in service kit, not shown, must have the same color neutral return spring on RH & LH transmission
	618-04432A	1	S	Transmission, RH Double D axle
3	759-04142	1		Transmission Assembly, LH, Service Kit replaces 618-04164A NLA
	732-04448	1	/P	Neutral Return Spring Included in service kit, not shown, must have the same color neutral return spring on RH & LH transmission
	618-04431A	1	S	Transmission, LH Double D axle
4	634-04170	2	S	Wheel Assembly, 18 x 6.5 x 8, Gray
	734-0294	2	/P	Tire, 18 x 6.5 x 8
	734-0255	2	S	Valve Assembly
5	710-0176	4	/P	Screw, Hex Cap, 5/16-18 x 2.75 GR5
6	710-04308	4		Screw, Hex Lock, 7/16-14 x 2.25 GR5
7	710-0852	8	/P	Stud, Rib Neck, 7/16-14 x 1.6
8	710-0395	2	/P	Screw, Hex Cap, 5/16-18 x 2.25 GR5
9	710-3103	2	/P	Screw, Hex Cap, 5/16-18 x 2.0 GR5
10	711-04232	2		Brace, Transmission
11	712-0429	4	S	Nut, Hex Insert Lock, 5/16-18 GR5
12	712-3004A	6	/P	Nut, Hex Flange Lock, 5/16-18 GR5
13	712-3050	8	/P	Nut, Lug, 7/16-14
14	712-04088	2	/P	Nut, Hex Lock, 9/16-18 GRC
15	714-0104	2	S	Pin, Internal Cotter
16	736-0275	2	S	Washer, Flat, .344 x .688 x .065
17	748-04054	2	S	Hub, Wheel 42 Spline
17	618-04494	2	S	Hub, Wheel 42 Double D Included in service kit, not shown
18	754-04043	1	S	V-Belt, Type A Sec x 57.7
19	931-04170	2	/P	Reservoir, Expansion, Mfg code A195 & Before (2 single tanks)
19	631-04168	1	S	Reservoir, Expansion, Mfg code A205 & After (1 single tank design)
20	710-0599	4	/P	Screw, Hx Wash, Hd. Tapp, 1/4-20 x.5, Mfg code A195 & Before
20	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5, Mfg code A205 & After
21	726-04045	4		Clamp, Hose
22	751-10190	1		Hose, Hydraulic, 54 inches
23	712-04092	2		Nut, U-Type Speed, 1/4-20, Mfg code A205 & After
	710-3119	1	/P	SCREW:3/8"-16 x .750:GR5:LOCK Included in service kit, not shown


ZT-42 (2005)
Drive

Page 10 of 24

Ref #	Part Number	Qty	S/P/F	Description
	726-04059	1		CLAMP:HOSE: .750 Included in service kit, not shown
	736-0227	1	S	WASHER:FLAT: .390 x 1.50 x .134 Included in service kit, not shown
	751-10474	1		HOSE:BREATHER Included in service kit, not shown
	737-3120	1	/P	Drive System Fluid Not shown

ZT-42 (2005)
Electrical


Page 11 of 24

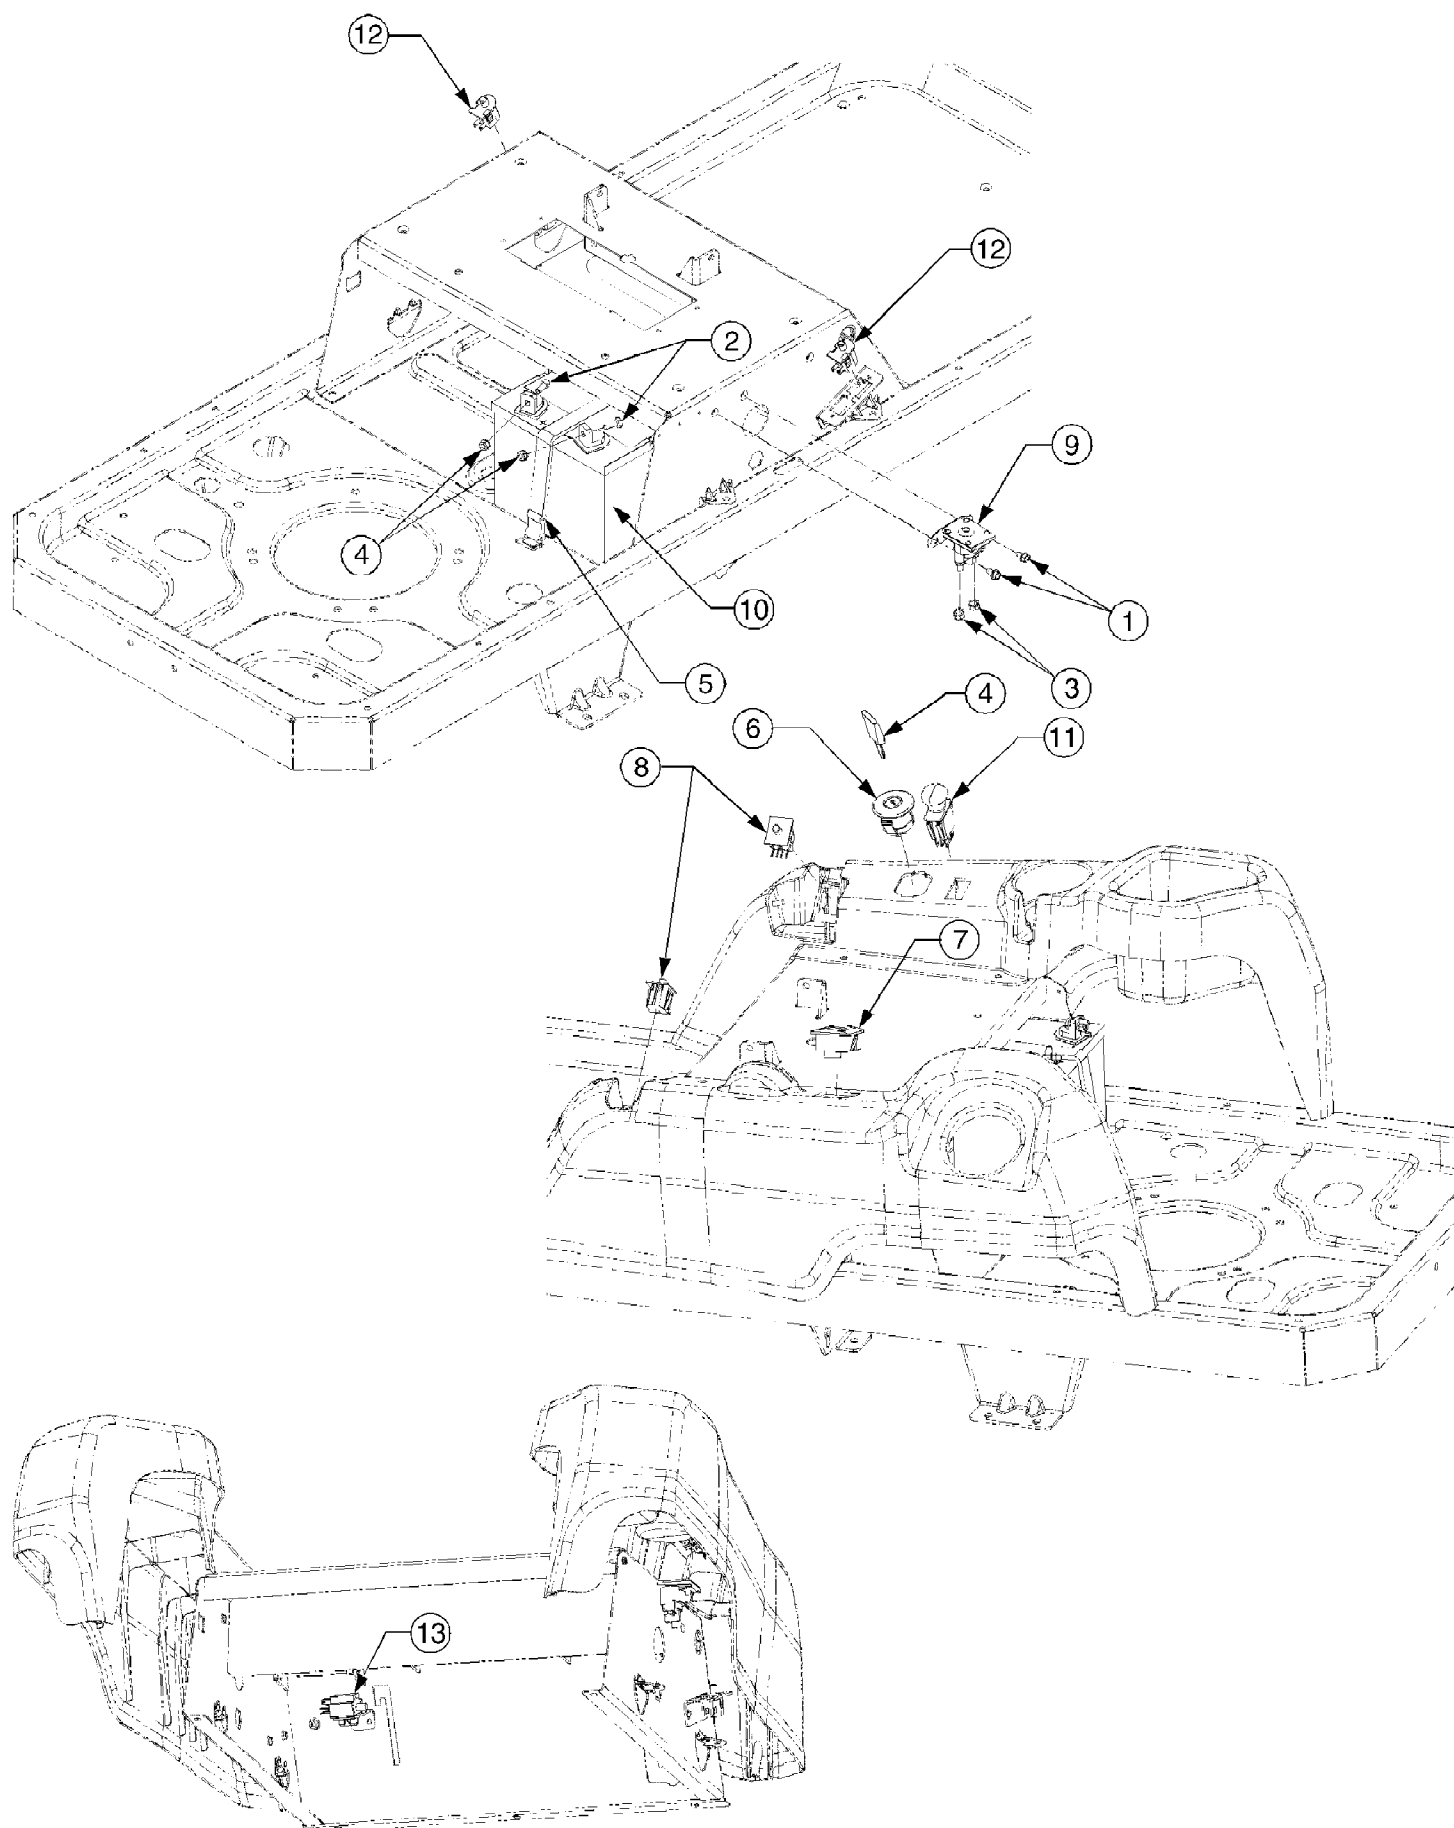

ZT-42 (2005)
Electrical

Page 12 of 24


Ref #	Part Number	Qty	S/P/F	Description
1	710-0599	2	/P	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5
2	710-3015	2	/P	Screw, Hex Cap, 1/4-20 x .75 GR5
3	712-0271	4	/P	Nut, Hex Sems, 1/4-20
4	925-1745	1	S	Key
5	723-0467	1		Strap, Battery
	732-0696	2		Hook, Wire Rectangular
6	725-04228	1	S	Switch, Ignition
7	725-04036A	1	S	Meter, Hour
8	725-04165	2	S	Switch, Dbl. Pole - Neutral
9	725-1426	1	S	Solenoid
10	725-1707D	1	S	Battery, 245 CCA
11	725-04174	1	S	Switch, PTO
12	725-3166	2	S	Switch, Snap Mount (N.C.) - Reverse
13	725-04232	1		Switch, 3-Pole, (NC-NO-NO) - Brake
	725-04244	1		Harness Assembly, Wire NOT SHOWN
	725-04245	2		Jumper Harness, Neutral NOT SHOWN
	725-04187	1		Cable Wire, Red - Starter NOT SHOWN
	725-04188	1		Cable Wire, Black - to Ground NOT SHOWN
	625-04023	1	S	Cable Wire, Red - Solenoid NOT SHOWN

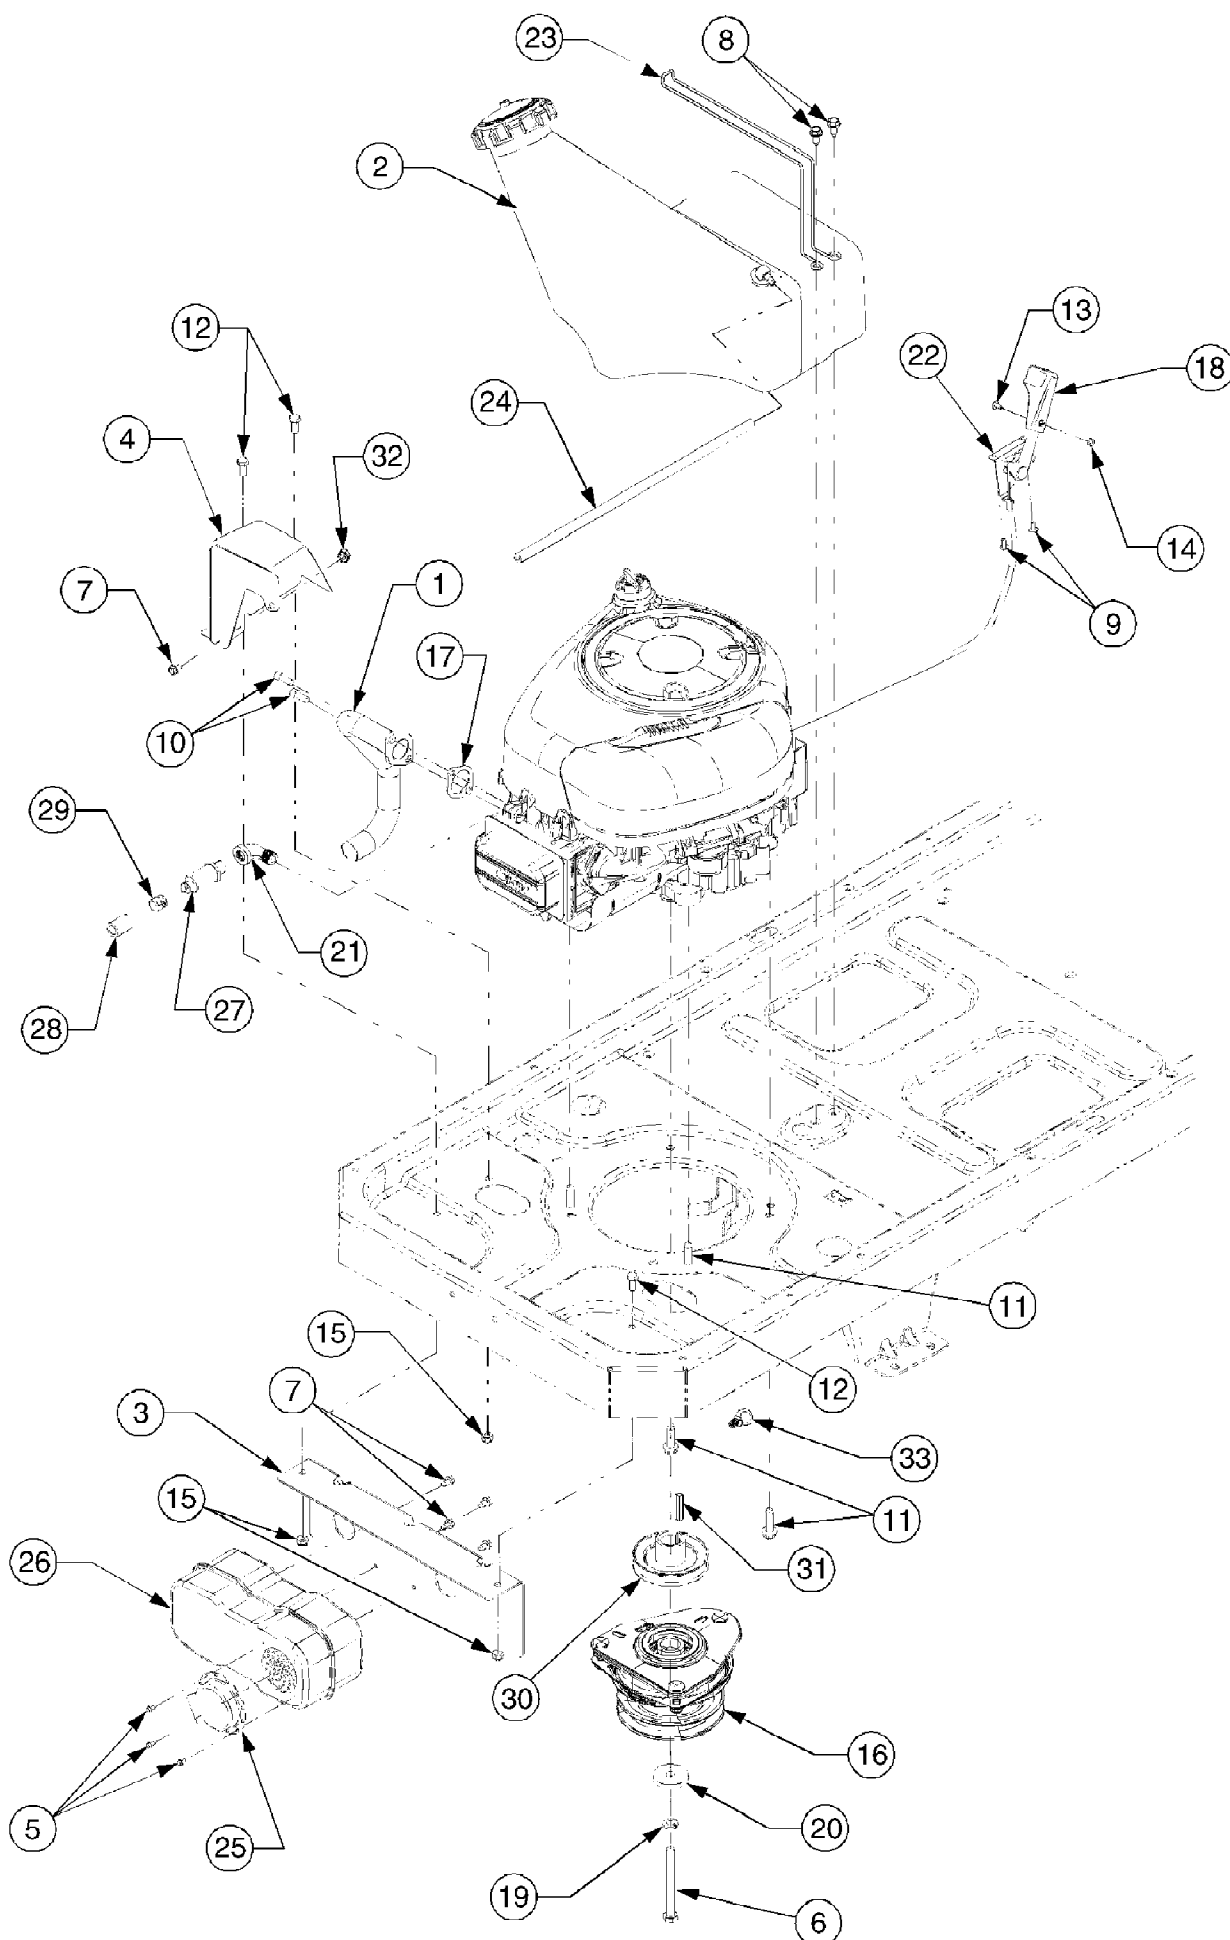

ZT-42 (2005)
Engine Accessories

Page 14 of 24

Ref #	Part Number	Qty	S/P/F	Description
1	603-04176	1	S	Tube, Exhaust
2	651-04058	1	S	Tank, Fuel, 3.0 Gal. Not shown
2	751-3124B	1	S	Cap, Fuel
3	703-05441	1	S	Bracket, Muffler Mounting
4	703-05497	1		Shield, Muffler Tube Heat
5	710-0227	3	/P	Screw, Hex Wash. Hd. Tapp #8-18 x .5
6	710-04248	1	/P	Screw, Hex Cap, 7/16-20 x 4.0 GR5
7	710-0599	5	/P	Screw, Hex Wash. Hd. Tapp 1/4-20 x .5
8	710-0726	2	/P	Screw, Hex Wash. Hd. Tapp 5/16-12 x .75
9	710-04261	2		Screw, Hex Wash. Hd. Tapp #12-16 x .5
10	710-1314A	2	/P	Screw, Socket Hd. 5/16-18 x .75
11	710-1315	4	/P	Screw, Hex Wash. Hd. Tapp 3/8-16 x 1.25
12	710-3008	3	/P	Screw, Hex Cap, 5/16-18 x .75 GR5
13	710-3217	1	/P	Screw, Truss Hd. Mach. #8-32 x .375
14	712-0142	1	/P	Nut, Hex, #8-32
15	712-0429	3	S	Nut, Hex Insert Lock, 5/16-18 GR5
16	717-04127	1	S/F	Clutch Assembly, Electric PTO, (GT1-JD08)
16	717-04183	1	S/F	Clutch Assembly, Electric PTO, (GT1A-MT-09)
17	721-0208	1	S	Gasket, Exhaust (272293)
18	731-04914	1	/P	Knob, Throttle Control
19	736-0171	1	S	Washer, Lock, 7/16
20	736-04131	1	/P	Washer, Flat, .438 x 1.75 x .25
21	737-0125	1		Fitting, Elbow
22	746-04161	1	S	Cable, Throttle, 39.0 Lg
23	747-04228	1		Wire, Tank Mounting
24	751-0535-12	1	S	Hose, Fuel Line Cut to approx. 9 inches
24	726-0205	2	/P	Clamp, Hose Not shown
25	751-0564A	1	S	Deflector, Muffler
26	751-0617A	1	S	Muffler
27	751-3140	1	S	Valve, Oil Drain
28	751-3141	1	S	Hose, Oil Drain Extension
29	751-3142	1		Cap, Oil Drain Valve
30	756-04102A	1	/P	Pulley, Drive, 3.25 Dia.
31	714-04037	1		Key, Square, 1/4 x 2.25, use with PTO Clutch 717-04127
31	714-0118	1	/P	Key, Square, 1/4 x 1.5, use with PTO Clutch 717-04183
32	712-0271	1	/P	Nut, Hex Sems, 1/4-20
33	726-3055	1		Clip, Cable Retainer
	703-05845	1	S/F	Anti-rotation Bracket, units with Mfg Code B095G - E135G Not shown, use with 717-04183

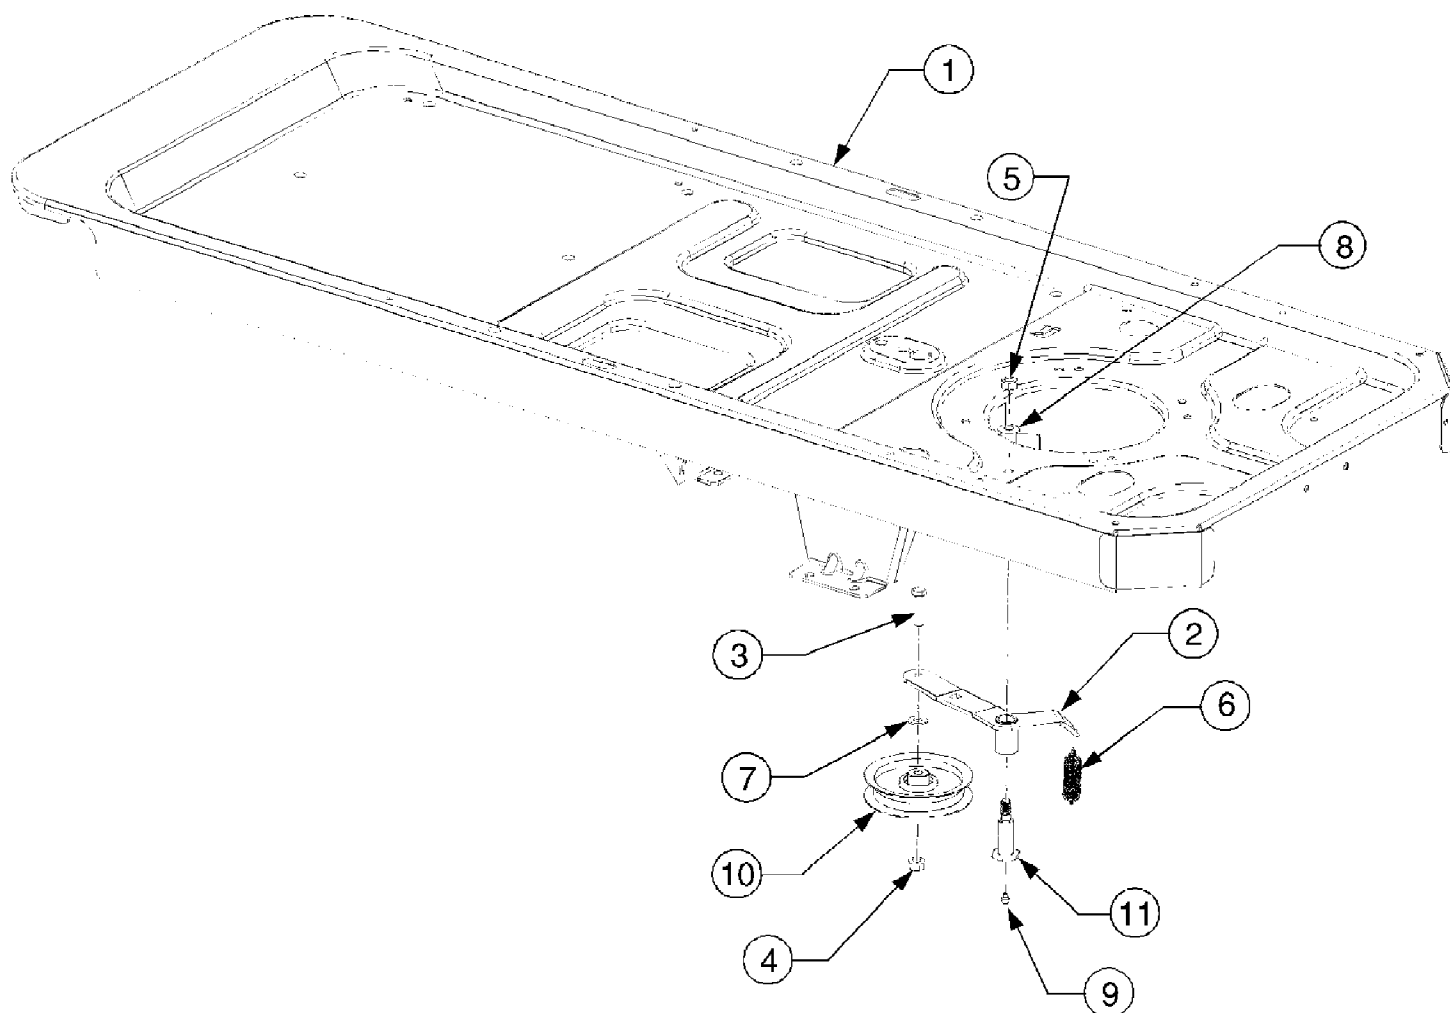

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part.

For instance, if a part, numbered 700-xxxx, is painted red metallic, the part number to order would be 700-xxxx-0650.

Red Metallic:	0650
Oyster Grey:	0662
Powder Black:	0637


ZT-42 (2005)
Frame

Page 16 of 24

Ref #	Part Number	Qty	S/P/F	Description
1	603-04303	1	S	Frame Assembly
	777D03399	1		Graphic, White
2	603-04147A	1	S	Idler Arm, Drive
3	710-0520	1	/P	Screw, Hex Cap, 3/8-16 x 1.5 GR5
4	712-0431	1	S	Nut, Hex Flange Lock, 3/-16 GRF
5	712-0290	1	/P	Nut, Hex Lock, 7/16-14 GRA
6	732-0626	1		Spring, Extension, .75 x 5.06
7	736-0300	1	S	Washer, Flat, .406 x .875 x .059
8	736-0322	1	/P	Washer, Flat, .45 x 1.25 x .164 HT
9	737-3000	1	S	Fitting, Lube, 3/16 Drive
10	738-3005A	1	S	Screw, Shoulder, .68 x 1.59
11	756-1229	1		Pulley, Idler, 4.08 Dia.

ZT-42 (2005)
LH Transmission

Page 17 of 24

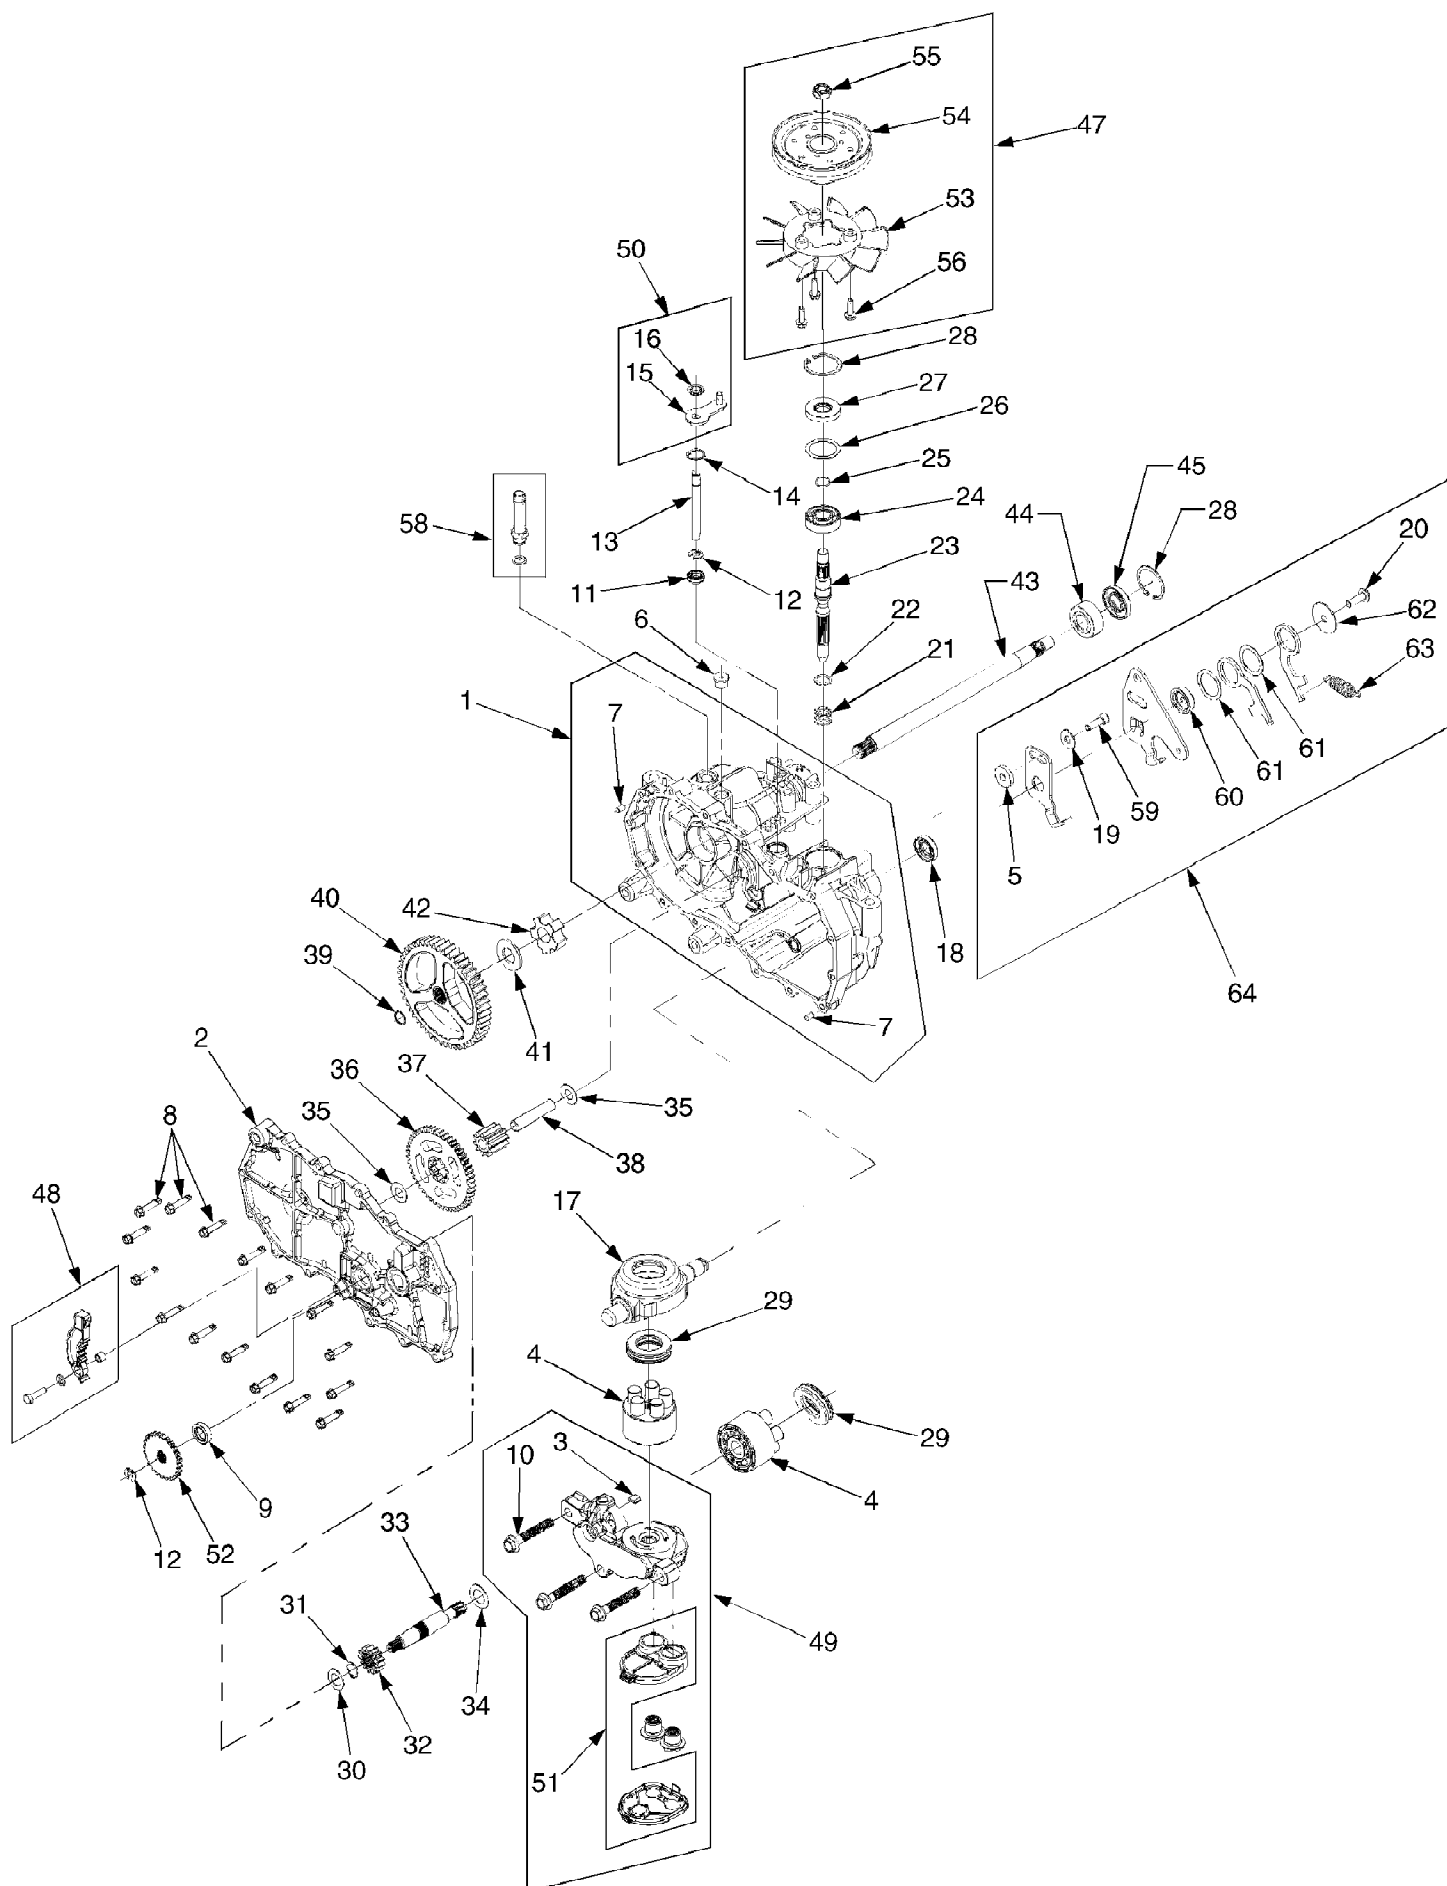

ZT-42 (2005)
LH Transmission

Page 18 of 24

Ref #	Part Number	Qty	S/P/F	Description
1	HG-70862L	1	/P	Housing Assembly, Main RH
2	HG-70863L	1	/P	Side Assembly, RH
3	HG-51448	1		Plate, Bypass
4	HG-70331	2	/P	Block Assembly
5	HG-51949	1		Spacer, .32 x 1.005
6	HG-9005110-5600	1	/P	Plug, SAE #6
7	HG-9004800-2506	2		Pin, Stainless
8	HG-51190	16	/P	Screw, Hex Self Tapping, 1/4-20 x 1.25
9	HG-44761	1	S	Seal, Lip, .625 x 1.0 x .25
10	HG-50016	3		Bolt, Hex Flange, 3/8-24 x 2.5
11	HG-51626	1		Seal, Lip, .375 x .75 x .25
12	HG-51628	2	/P	Ring, Retaining, .375 Ext.
13	HG-51625	1		Rod, Bypass
14	HG-51627	1		Ring, Retaining, .75 Int.
15	HG-51910	1		Arm, Bypass
16	HG-51630	1	/P	Ring, Retaining, .375 Push
17	HG-51048	1	/P	Swashplate, Trunnion
18	HG-51140	1	/P	Seal, Lip, 18 x 32 x 7
19	HG-44130	1	S	Washer, Flat, 11/32 x 7/8 x 1/16
20	HG-51812	1	/P	Screw, 5/16-24 x 1.0
21	HG-2003014	1	/P	Spring, Compression
22	HG-2003017	1	/P	Washer, .591 x .787 x .04
23	HG-51062	1	/P	Shaft, Input
24	HG-50315	1		Bearing, Ball, 17mm x 40 x 12
25	HG-2000022	1	/P	Ring, Wire Retaining, .561
26	HG-50951	1	/P	Spacer
27	HG-51161	1	/P	Seal, Lip, 17 x 40 x 7
28	HG-50329	2	/P	Ring, Retaining
29	HG-50551	2	S	Bearing, Thrust, 30 x 52 x 13
30	HG-44371	1	/P	Washer, Flat, 5/8 x 1.0 x .05
31	HG-44145	1		Ring, Retaining
32	HG-51130	1		Gear, Pinion, 13T
33	HG-51632	1		Shaft, Motor
34	HG-51069	1		Washer, .71 x 1.16 x .04
35	HG-50132	2	/P	Washer, HT, .5 x 1.0 x .032
36	HG-51129	1		Gear, 10T/48T
37	HG-51043	1	/P	Gear, Jackshaft, 10T
38	HG-51083	1		Pin, Jackshaft
39	HG-44871	1	/P	Ring, Spiral Retaining
40	HG-51633	1	S	Gear, Bull, 52T
41	HG-44875	1	/P	Washer, 3/4 x 1.5 x .13
42	HG-51088	1	/P	Bearing, Sleeve
43	HG-51954	1	S	Axle
44	HG-51089	1	/P	Bushing, .752 x 1.571 x .625
45	HG-51066	1	/P	Seal, Lip, .75 x 1.577 x .25
47	HG-70591	1		Kit, Fan-Pulley
48	HG-70865	1	/P	Kit, Brake Arm
49	HG-70864L	1	/P	Kit, Center Section-Filter RH
50	HG-71006	1		Kit, Bypass Arm
51	HG-70911	1	S	Kit, Filter
52	HG-51635	1	/P	Disc, Brake Cog
53	HG-51365	1		Fan, 6" 10 Blade
54	HG-50302	1	/P	Kit, 415


ZT-42 (2005)
LH Transmission

Page 19 of 24

Ref #	Part Number	Qty	S/P/F	Description
55	HG-51244	1	S	Nut, Hex Insert Lock, 1/2-20
56	HG-50752	3	/P	Screw, Hex Wash. Hd. Tapp 1/4-20
58	HG-52200	1	/P	Fitting/O-ring Assembly
59	HG-51616	1	S	Screw, Patch, 5/16-24 x 1.0
60	HG-51947	1		Bushing, Pilot, 1.125
61	HG-51948	2		Washer, Plastic
62	HG-51950	1		Washer, 1.5 x .34 x .062
63	HG-51399	1	S	Spring, Extension
64	HG-71094	1		Kit, Return Assembly RH
	HG-70853	1	/P	Kit, Seal

ZT-42 (2005)
RH Transmission

Page 20 of 24

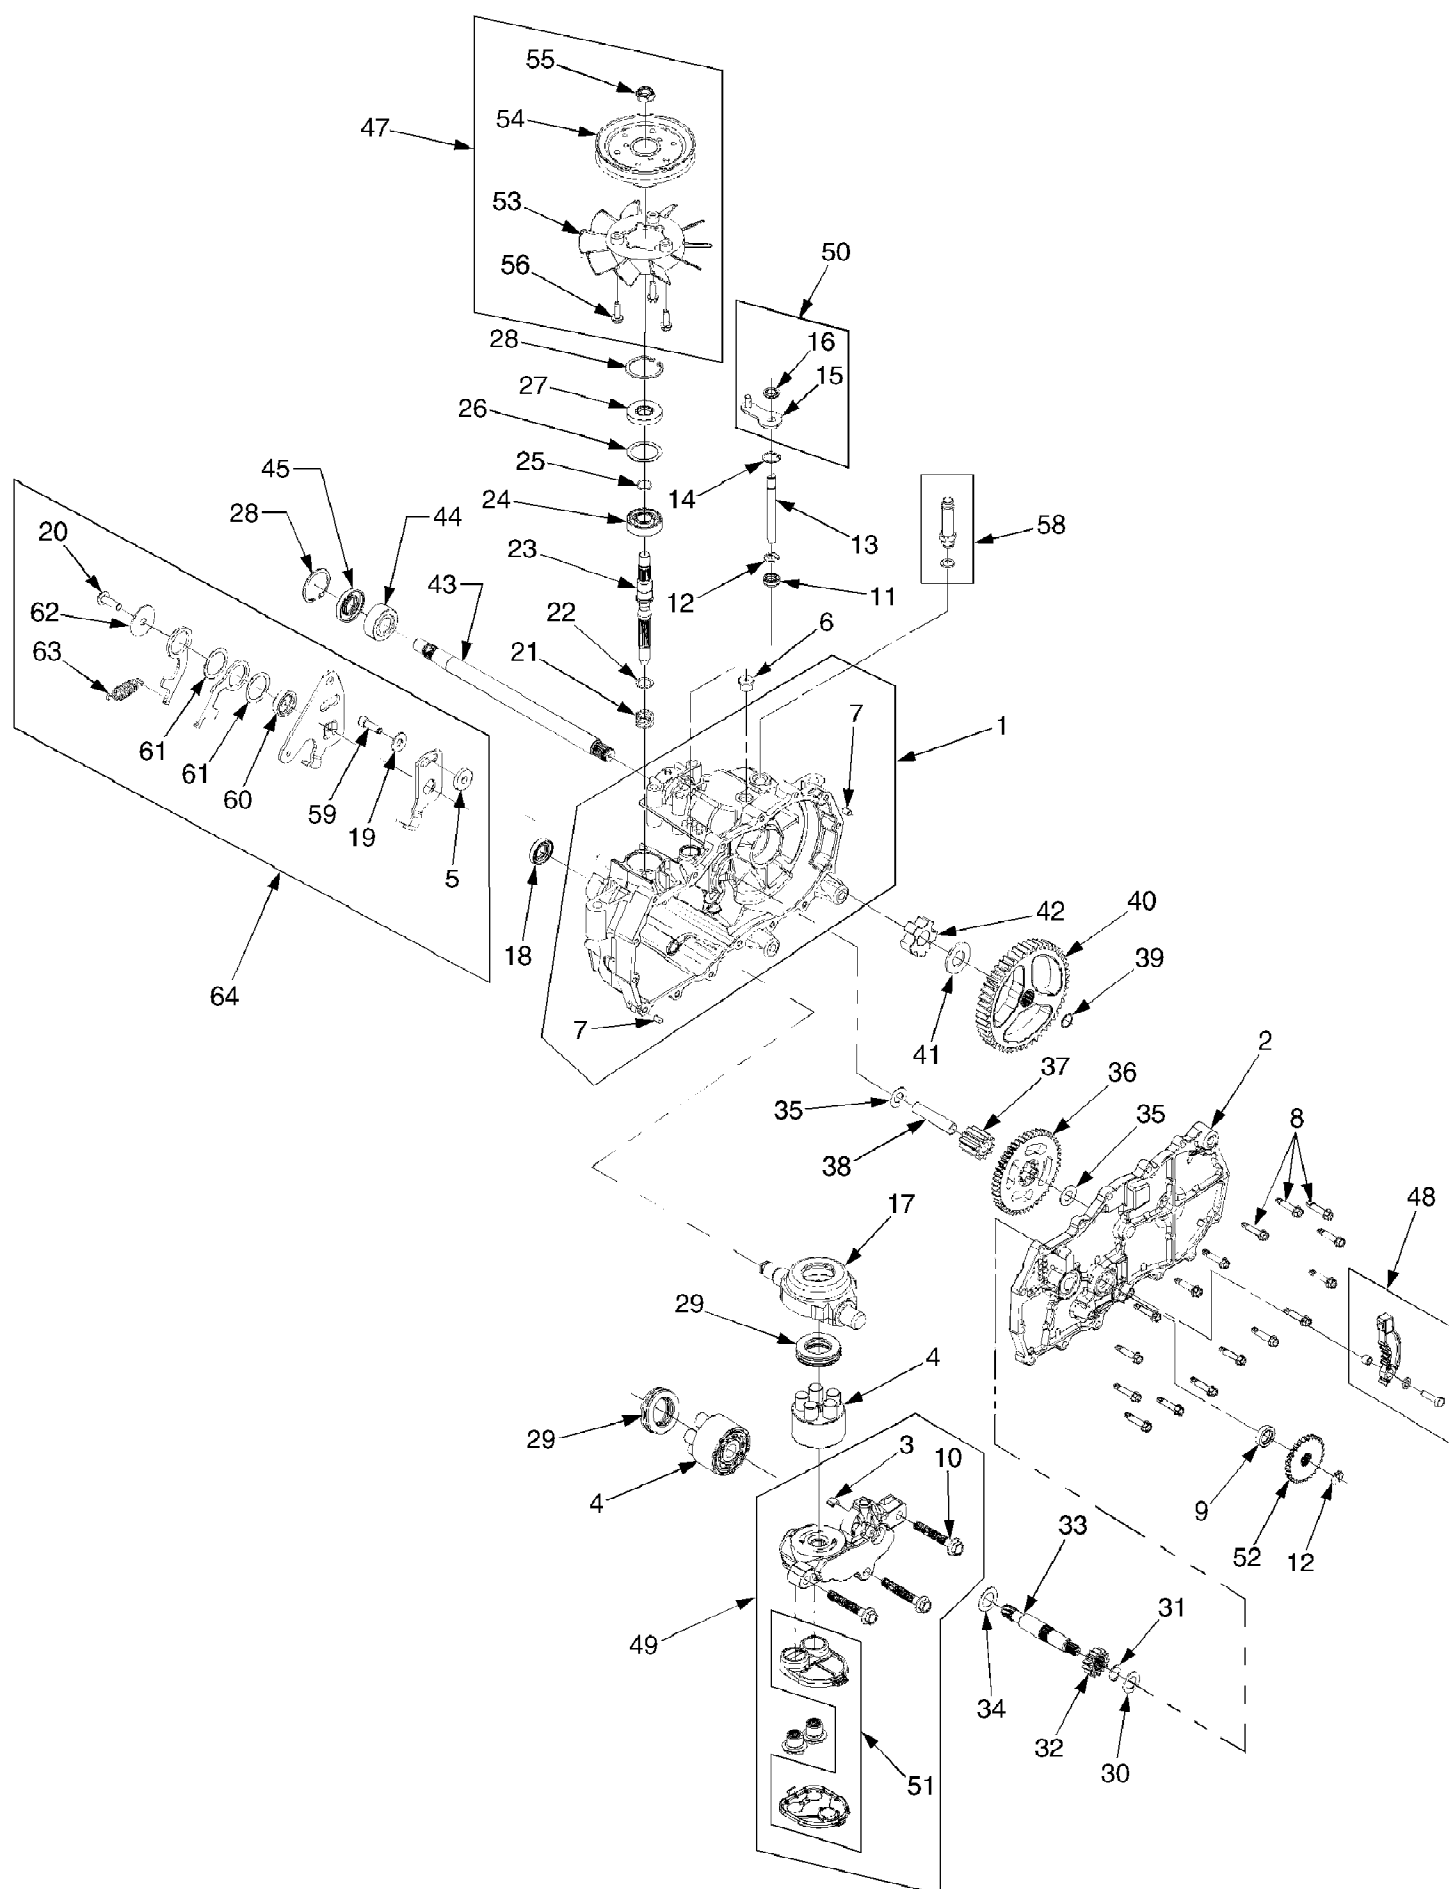

ZT-42 (2005)
RH Transmission

Page 21 of 24

Ref #	Part Number	Qty	S/P/F	Description
1	HG-70862R	1	/P	Housing Assembly, Main RH
2	HG-70863R	1	/P	Side Assembly, RH
3	HG-51448	1		Plate, Bypass
4	HG-70331	2	/P	Block Assembly
5	HG-51949	1		Spacer, .32 x 1.005
6	HG-9005110-5600	1	/P	Plug, SAE #6
7	HG-9004800-2506	2		Pin, Stainless
8	HG-51190	16	/P	Screw, Hex Self Tapping, 1/4-20 x 1.25
9	HG-44761	1	S	Seal, Lip, .625 x 1.0 x .25
10	HG-50016	3		Bolt, Hex Flange, 3/8-24 x 2.5
11	HG-51626	1		Seal, Lip, .375 x .75 x .25
12	HG-51628	2	/P	Ring, Retaining, .375 Ext.
13	HG-51625	1		Rod, Bypass
14	HG-51627	1		Ring, Retaining, .75 Int.
15	HG-51910	1		Arm, Bypass
16	HG-51630	1	/P	Ring, Retaining, .375 Push
17	HG-51048	1	/P	Swashplate, Trunnion
18	HG-51140	1	/P	Seal, Lip, 18 x 32 x 7
19	HG-44130	1	S	Washer, Flat, 11/32 x 7/8 x 1/16
20	HG-51812	1	/P	Screw, 5/16-24 x 1.0
21	HG-2003014	1	/P	Spring, Compression
22	HG-2003017	1	/P	Washer, .591 x .787 x .04
23	HG-51062	1	/P	Shaft, Input
24	HG-50315	1		Bearing, Ball, 17mm x 40 x 12
25	HG-2000022	1	/P	Ring, Wire Retaining, .561
26	HG-50951	1	/P	Spacer
27	HG-51161	1	/P	Seal, Lip, 17 x 40 x 7
28	HG-50329	2	/P	Ring, Retaining
29	HG-50551	2	S	Bearing, Thrust, 30 x 52 x 13
30	HG-44371	1	/P	Washer, Flat, 5/8 x 1.0 x .05
31	HG-44145	1		Ring, Retaining
32	HG-51130	1		Gear, Pinion, 13T
33	HG-51632	1		Shaft, Motor
34	HG-51069	1		Washer, .71 x 1.16 x .04
35	HG-50132	2	/P	Washer, HT, .5 x 1.0 x .032
36	HG-51129	1		Gear, 10T/48T
37	HG-51043	1	/P	Gear, Jackshaft, 10T
38	HG-51083	1		Pin, Jackshaft
39	HG-44871	1	/P	Ring, Spiral Retaining
40	HG-51633	1	S	Gear, Bull, 52T
41	HG-44875	1	/P	Washer, 3/4 x 1.5 x .13
42	HG-51088	1	/P	Bearing, Sleeve
43	HG-51954	1	S	Axle
44	HG-51089	1	/P	Bushing, .752 x 1.571 x .625
45	HG-51066	1	/P	Seal, Lip, .75 x 1.577 x .25
47	N/A	1		Kit, Fan-Pulley
48	HG-70865	1	/P	Kit, Brake Arm
49	HG-70864R	1	/P	Kit, Center Section-Filter RH
50	N/A	1		Kit, Bypass Arm
51	HG-70911	1	S	Kit, Filter
52	HG-51635	1	/P	Disc, Brake Cog
53	HG-51365	1		Fan, 6" 10 Blade
54	HG-50302			


ZT-42 (2005)
RH Transmission

Page 22 of 24

Ref #	Part Number	Qty	S/P/F	Description
55	HG-51244	1	S	Nut, Hex Insert Lock, 1/2-20
56	HG-50752	3	/P	Screw, Hex Wash. Hd. Tapp 1/4-20
58	HG-52200	1	/P	Fitting/O-ring Assembly
59	HG-51616	1	S	Screw, Patch, 5/16-24 x 1.0
60	HG-51947	1		Bushing, Pilot, 1.125
61	HG-51948	2		Washer, Plastic
62	HG-51950	1		Washer, 1.5 x .34 x .062
63	HG-51399	1	S	Spring, Extension
64	HG-71095	1		Kit, Return Assembly RH
	HG-70853	1	/P	Kit, Seal

ZT-42 (2005)
Wheels

Page 23 of 24

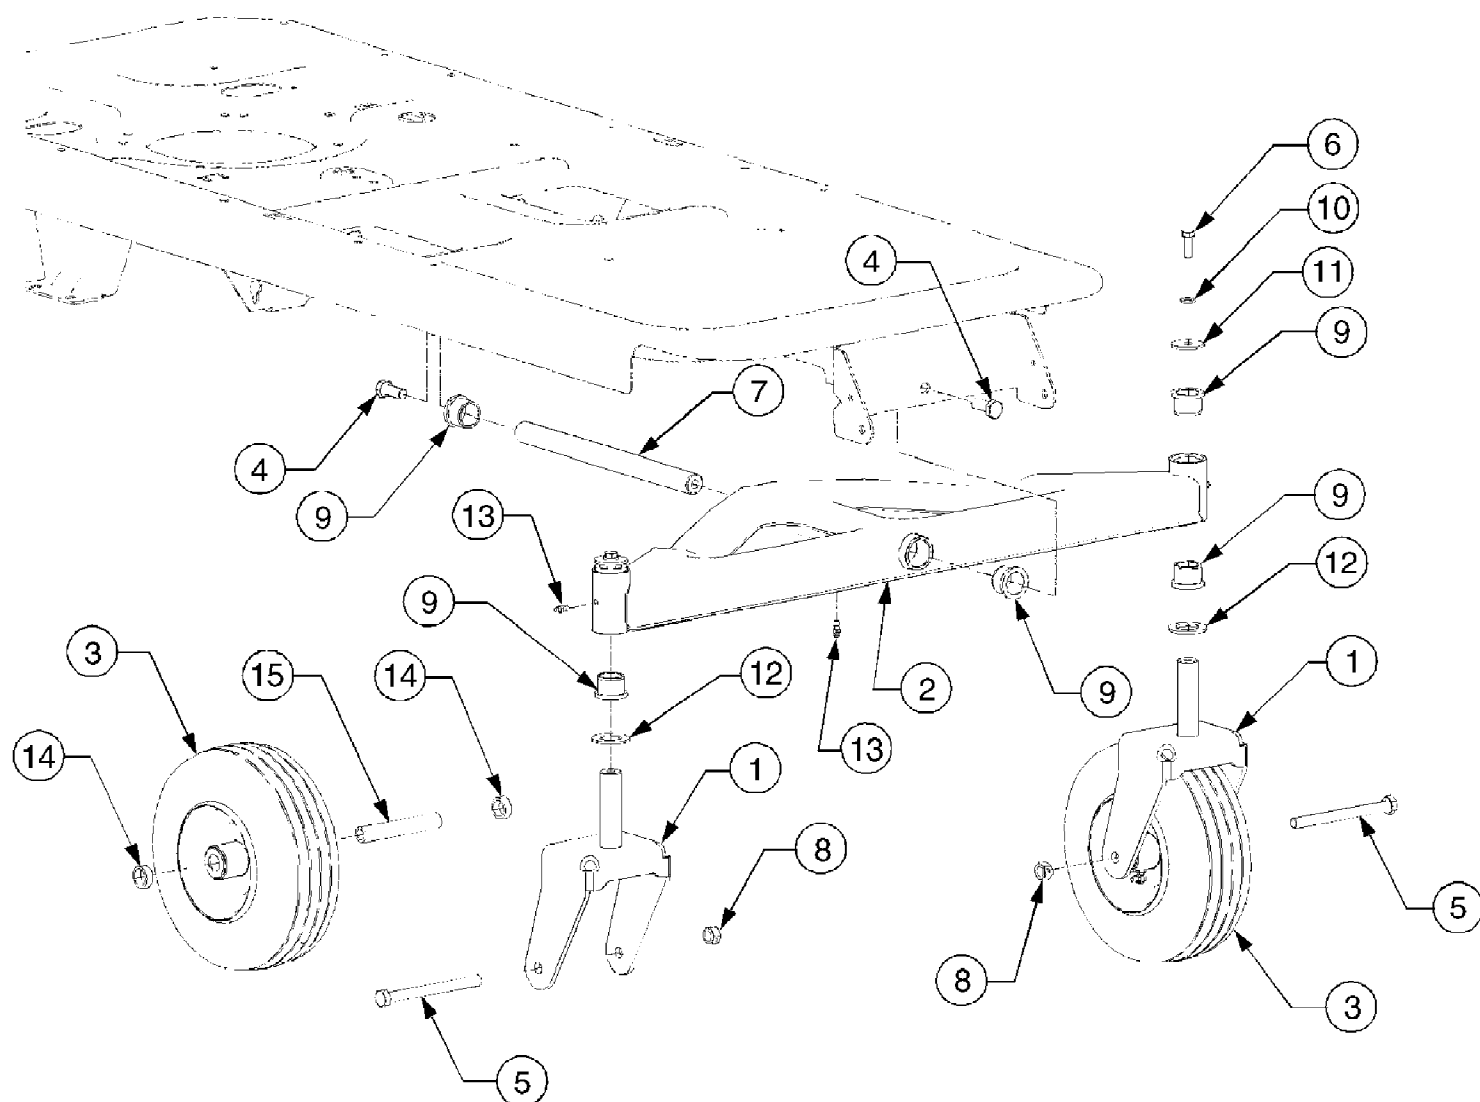

ZT-42 (2005)
Wheels

Page 24 of 24

Ref #	Part Number	Qty	S/P/F	Description
1	603-0363A	2		Bracket, Castor Wheel
2	603-04148	1		Axle, Front Pivot
3	634-3164	2		Wheel Assembly, 11.0 x 4.0 x 5.0
4	710-04186	2	/P	Screw, Hex Lock, 1/2-13 x 1.25 GR5
5	710-0506	2	/P	Screw, Hex Cap, 1/2-20 x 5.5 GR5
6	710-0514	2	/P	Screw, Hex Cap, 3/8-16 x 1.0 GR5
7	711-04228	1	S	Shaft, Axle
8	712-0239	2	S	Nut, Hex Lock, 1/2-20 GRA
9	731-0374	6	S	Bearing, Flange, 1.0 x 1.254
10	736-0169	2	S	Washer, Lock, 3/8
11	736-0227	2	S	Washer, Flat, .39 x 1.5 x .134
12	736-0250	2	/P	Washer, Flat, 1.0 x 1.75 x .107
13	737-3000	3	S	Fitting, Lube, 3/16 Drive
14	750-0456	4	S	Spacer, .79 x .347
15	750-3197A	2	/P	Spacer, Wheel