


For Kawasaki Discount Parts Call 606-678-9623 or 606-561-4983



Kawasaki

FH770D KAI

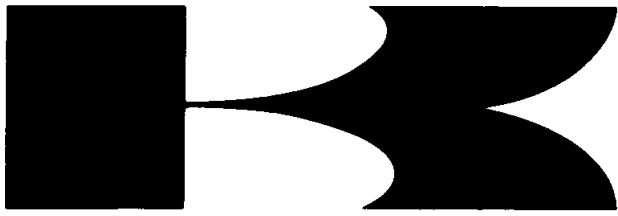

4-stroke air-cooled v-twin gasoline engine

Service Manual

www.mymowerparts.com

For Kawasaki Discount Parts Call 606-678-9623 or 606-561-4983

www.mymowerparts.com

Quick Reference Guide


General Information	1
Periodic Maintenance	2
Fuel System	3
Cooling System	4
Engine Top End	5
Lubrication System	6
Camshaft/Crankshaft	7
Electrical System	8
Troubleshooting	9

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.

For Kawasaki Discount Parts Call 606-678-9623 or 606-561-4983

www.mymowerparts.com

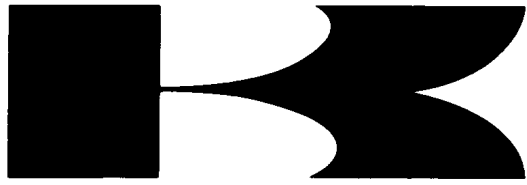

Kawasaki

FH770D KAI

4-stroke air-cooled v-twin gasoline engine Service Manual

All rights reserved. No parts of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Quality Division/Consumer Products and Machinery Company/Kawasaki Heavy Industries, Ltd., Japan.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

The right is reserved to make changes at any time without prior notice and without incurring an obligation to make such changes to products manufactured previously.

All information contained in this publication is based on the latest product information available at the time of publication. Illustrations and photographs in this publication are intended for reference use only and may not depict actual model component parts.

LIST OF ABBREVIATIONS

A	ampere(s)	lb	pound(s)
ABDC	after bottom dead center	m	meter(s)
AC	alternating current	min	minute(s)
ATDC	after top dead center	N	newton(s)
BBDC	before bottom dead center	Pa	pascal(s)
BDC	bottom dead center	PS	horsepower
BTDC	before top dead center	psi	pound(s) per square inch
°C	degree(s) Celsius	r	revolution
DC	direct current	rpm	revolution(s) per minute
F	farad(s)	TDC	top dead center
°F	degree(s) Fahrenheit	TIR	total indicator reading
ft	foot, feet	V	volt(s)
g	gram(s)	W	watt(s)
h	hour(s)	Ω	ohm(s)
L	liter(s)		

Read OWNER'S MANUAL before operating.

EMISSION CONTROL INFORMATION

To protect the environment in which we all live, Kawasaki has incorporated crankcase emission (1) and exhaust emission (2) control systems (EM) in compliance with applicable regulations of the United States Environmental Protection Agency and California Air Resources Board.

1. Crankcase Emission Control System

A sealed-type crankcase emission control system is used to eliminate blow-by gasses. The blow-by gasses are led to a breather chamber through the crankcase and from there to the air cleaner.

Oil is separated from the gasses while passing through the inside of the breather chamber from the crankcase, and then returned to the bottom of crankcase.

2. Exhaust Emission Control System

The exhaust emission control system applied to this engine consists of a carburetor and an ignition system having optimum ignition timing characteristics.

The carburetor has been calibrated to provide lean air/fuel mixture characteristics and optimum fuel economy with a suitable air cleaner and exhaust system.

TAMPERING WITH EMISSION CONTROL SYSTEM PROHIBITED

Federal law and California State law prohibits the following acts or the causing thereof: (1) the removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new engine for the purpose of emission control prior to its sale or delivery to the ultimate purchaser or while it is in use, or (2) the use of the engine after such device or element of design has been removed or rendered inoperative by any person.

Among those acts presumed to constitute tampering are the acts listed below:

Do not tamper with the original emission related part:

- Carburetor and internal parts
- Spark plugs
- Magneto or electronic ignition system
- Fuel filter element
- Air cleaner elements
- Crankcase
- Cylinder heads
- Breather chamber and internal parts
- Inlet pipe and tube

Foreword

This manual is designed primarily for use by trained mechanics in a properly equipped shop. However, it contains enough detail and basic information to make it useful to the owner who desires to perform his own basic maintenance and repair work. A basic knowledge of mechanics, the proper use of tools, and workshop procedures must be understood in order to carry out maintenance and repair satisfactorily. Whenever the owner has insufficient experience or doubts as to his ability to do the work, all adjustments, maintenance, and repair should be carried out only by qualified mechanics.

In order to perform the work efficiently and to avoid costly mistakes, read the text, thoroughly familiarize yourself with the procedures before starting work, and then do the work carefully in a clean area. Whenever special tools or equipment are specified, do not use makeshift tools or equipment. Precision measurements can only be made if the proper instruments are used, and the use of substitute tools may adversely affect safe operation.

To get the longest life out of your engine:

- Follow the Periodic Maintenance Chart in the Service Manual.
- Be alert for problems and non-scheduled maintenance.
- Use proper tools and genuine Kawasaki engine parts. Genuine parts provided as spare parts are listed in the Parts Catalog.
- Follow the procedures in this manual carefully. Don't take shortcuts.
- Remember to keep complete records of maintenance and repair with dates and any new parts installed.

How to Use This Manual

In this manual, the product is divided into its major systems and these systems make up the manual's chapters. The Quick Reference Guide shows you all of the product's system and assists in locating their chapters. Each chapter in turn has its own comprehensive Table of Contents.

For example, if you want ignition coil information, use the Quick Reference Guide to locate

the Electrical System chapter. Then, use the Table of Contents on the first page of the chapter to find the Ignition coil section.

Whenever you see these WARNING and CAUTION symbols, heed their instructions! Always follow safe operating and maintenance practices.

▲ WARNING

This warning symbol identifies special instructions or procedures which, if not correctly followed, could result in personal injury, or loss of life.

CAUTION

This caution symbol identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of equipment.

This manual contains four more symbols (in addition to WARNING and CAUTION) which will help you distinguish different types of information.

NOTE

○ *This note symbol indicates points of particular interest for more efficient and convenient operation.*

- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a WARNING, CAUTION, or NOTE.
- ★ Indicates a conditional step or what action to take based on the results of the test or inspection in the procedural step or sub-step it follows.

In most chapters an exploded view illustration of the system components follows the Table of Contents. In these illustrations you will find the instructions indicating which parts require specified tightening torque, oil, grease or a locking agent during assembly.

General Information

1

Table of Contents

Before Servicing	1-2
Model Identification.....	1-5
General Specifications.....	1-6

1-2 GENERAL INFORMATION

Before Servicing

Before starting to service the engine, carefully read the applicable section to eliminate unnecessary work. Photographs, diagrams, notes, cautions, warnings, and detailed descriptions have been included wherever necessary. Nevertheless, even a detailed account has limitations, a certain amount of basic knowledge is required for successful work.

Especially note the following

(1) Dirt

Before removal and disassembly, clean the engine. Any dirt entering the engine, carburetor, or other parts, will work as an abrasive and shorten the life of engine. For the same reason, before installing a new part, clean off any dust or metal filings.

(2) Battery Ground

Remove the ground (–) lead from the battery before performing any disassembly operations on the equipment. This prevents:

- (a) the possibility of accidentally turning the engine over while partially disassembled.
- (b) sparks at electrical connections which will occur when they are disconnected.
- (c) damage to electrical parts.

(3) Tightening Sequence

Generally, when installing a part with several bolts, nuts, or screws, start them all in their holes and tighten them to a snug fit. Then tighten them evenly, in a staggered sequence. This is to avoid distortion of the part and/or causing gas or oil leakage. Conversely when loosening the bolts, nuts, or screws, first loosen all of them by about a quarter of a turn and then remove them. Where there is a tightening sequence indication in this Service Manual, the bolts, nuts, or screws must be tightened in the order and method indicated.

(4) Torque

When torque values are given in this Service Manual, use them. Either too little or too much torque may lead to serious damage. Use a good quality, reliable torque wrench.

(5) Force

Common sense should dictate how much force is necessary in assembly and disassembly. If a part seems especially difficult to remove or install, stop and examine what may be causing the problem. Whenever tapping is necessary, tap lightly using a wooden or plastic-faced mallet. Use an impact driver for screws (particularly for the removal of screws held by a locking agent) in order to avoid damaging the heads.

(6) Edges

Watch for sharp edges, especially during major engine disassembly and assembly. Protect your hands with gloves or a piece of thick cloth when lifting the engine or turning it over.

(7) High-Flash Point Solvent

A high-flash point solvent is recommended to reduce fire danger. A commercial solvent commonly available in North America is Standard solvent (generic name). Always follow manufacturer and container directions regarding the use of any solvent.

(8) Gasket, O-ring

Do not reuse a gasket or O-ring once it has been in service. The mating surfaces around the gasket should be free of foreign matter and perfectly smooth to avoid oil or compression leaks.

(9) Liquid Gasket, Non-Permanent Locking Agent

Follow manufacturer's directions for cleaning and preparing surfaces where these compounds will be used. Apply sparingly. Excessive amounts may block engine oil passages and cause serious damage. An example of a non-permanent locking agent commonly available in North America is Loctite Lock'n Seal (Blue).

(10) Press

A part installed using a press or driver, such as a journal, should first be coated with oil on its outer or inner circumference so that it will go into place smoothly.

(11) Ball Bearing

When installing a ball bearing, the bearing race which is affected by friction should be pushed by a suitable driver. This prevents severe stress on the balls and races, and prevents races and balls from being dented. Press a ball bearing until it stops at the stop in the hole or on the shaft.

(12) Oil Seal and Grease Seal

Replace any oil or grease seals that were removed with new ones, as removal generally damages seals.

Before Servicing

When pressing in a seal which has manufacturer's marks, press it in with the marks facing out. Seals should be pressed into place using a suitable driver, which contacts evenly with the side of seal, until the face of the seal is even with the end of the hole.

(13) Seal Guide

A seal guide is required for certain oil or grease seals during installation to avoid damage to the seal lips. Before a shaft passes through a seal, apply a little oil, preferably high temperature grease on the lips to reduce rubber to metal friction.

(14) Circlip, Retaining Ring

Replace any circlips and retaining rings that were removed with new ones, as removal weakens and deforms them. When installing circlips and retaining rings, take care to compress or expand them only enough to install them and no more.

(15) Cotter Pin

Replace any cotter pins that were removed with new ones, as removal deforms and breaks them.



(16) Lubrication

Engine wear is generally at its maximum while the engine is warming up and before all the rubbing surfaces have an adequate lubricative film. During assembly, oil or grease (whichever is more suitable) should be applied to any rubbing surface which has lost its lubricative film. Old grease and dirty oil should be cleaned off. Deteriorated grease has lost its lubricative quality and may contain abrasive foreign particles.

Don't use just any oil or grease. Some oils and greases in particular should be used only in certain applications and may be harmful if used in an application for which they are not intended. This manual makes reference to molybdenum disulfide grease (MoS2) in the assembly of certain engine parts. Always check manufacturer recommendations before using such special lubricants.

(17) Electrical Wires

All the electrical wires are either single-color or two-color and, with only a few exceptions, must be connected to wires of the same color. On any of the two-color wires there is a greater amount of one color and a lesser amount of a second color, so a two-color wire is identified by first the primary color and then the secondary color. For example, a yellow wire with thin red stripes is referred to as a "yellow/red" wire; it would be a "red/yellow" wire if the colors were reversed to make red the main color.

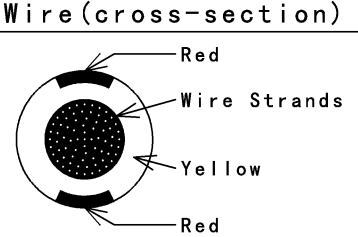Wire (cross-section)	Color Indicated on the Wire	Color Indicated on the Wiring Diagram
	Yellow/Red	

6B020801W1 C

(18) Replacement Parts

When there is a replacement instruction, replace these parts with new ones every time they are removed. There replacement parts will be damaged or lose their original function once removed.

(19) Inspection

When parts have been disassembled, visually inspect these parts for the following conditions or other damage. If there is any doubt as to the condition of them, replace them with new ones.

- | | | | |
|--------------|---------------|-----------|------|
| Abrasion | Crack | Hardening | Warp |
| Bent | Dent | Scratch | Wear |
| Color change | Deterioration | Seizure | |

1-4 GENERAL INFORMATION

Before Servicing

(20) Specifications



Specification terms are defined as follows:

"Standards" show dimensions or performances which brand-new parts or systems have.

"Service Limits" indicate the usable limits. If the measurement shows excessive wear or deteriorated performance, replace the damaged parts.

Model Identification

FH770D KAI

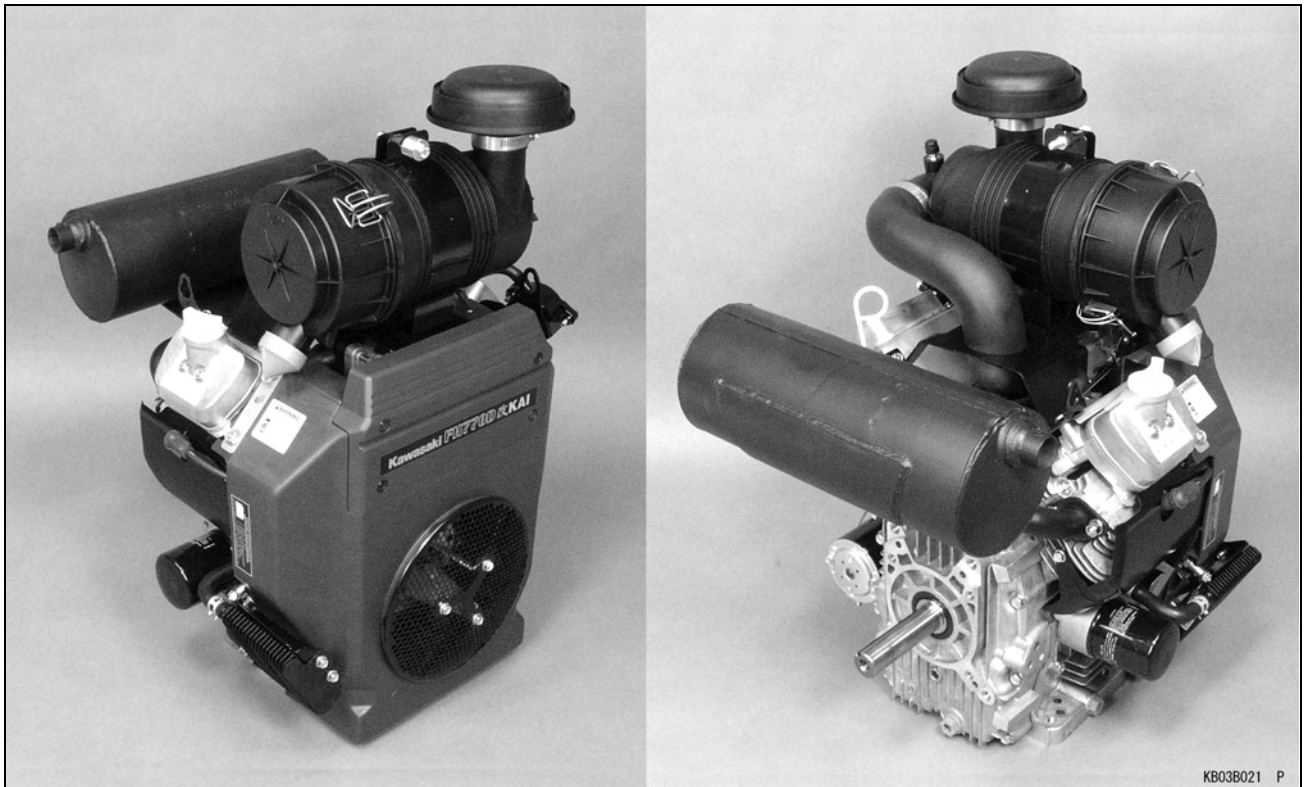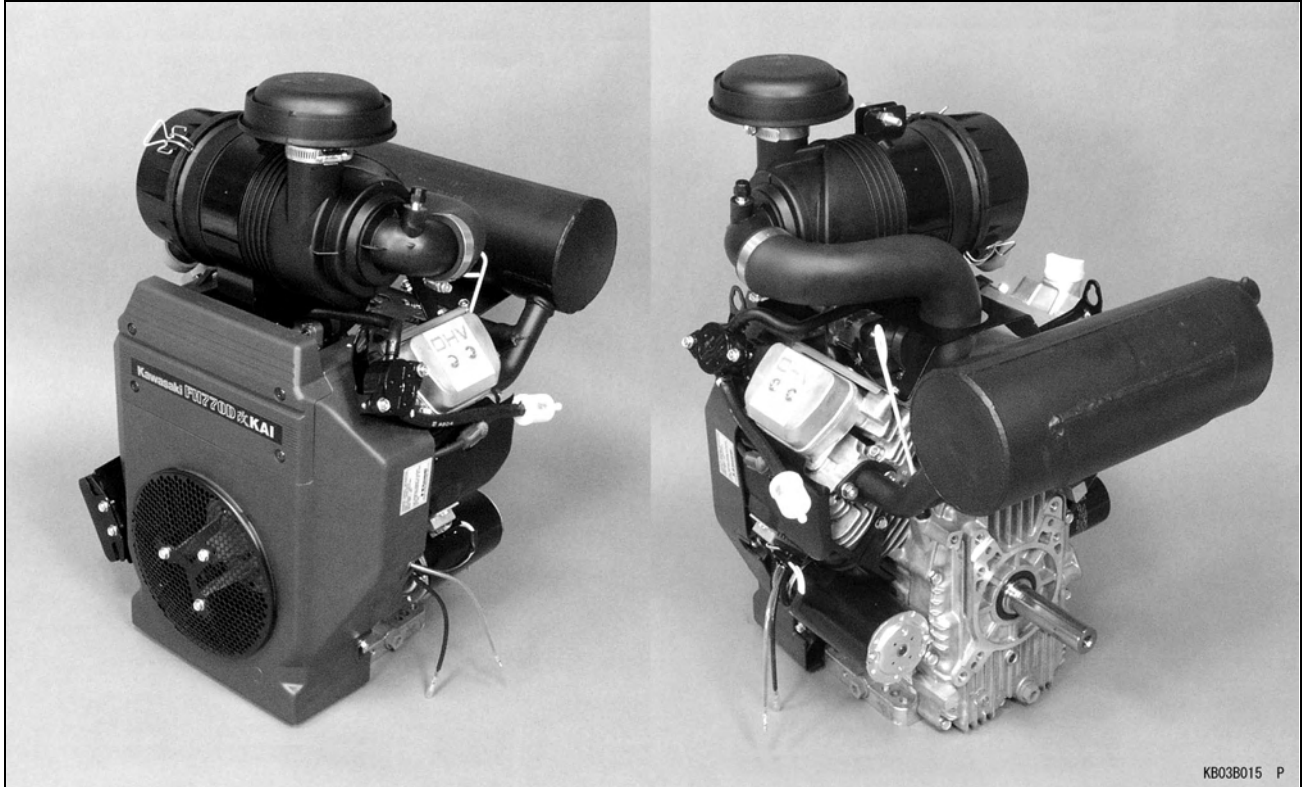

Cylinder Number Designation

No.1 Cylinder is on the electric starter side.

No.2 Cylinder is on the oil fileter side.

1-6 GENERAL INFORMATION

General Specifications

Items	FH770D KAI
Type of Engine	Forced air-cooled, horizontal shaft, OHV, 4-stroke gasoline engine
Cylinder Layout	90° V-Twin
Bore × Stroke	80 mm × 76 mm (3.15 in. × 2.99 in.)
Piston Displacement	764 mL (46.62 cu. in.)
Direction of Rotation	Counterclockwise facing the PTO shaft
Compression Release	Automatic compression release
Low Idle Speed (Carburetor idle rpm)	1 450 r/min (rpm)
Low Idle Speed (Governor idle rpm)	1 550 r/min (rpm)
High Idle Speed	3 600 r/min (rpm)
Ignition System	Transistorized-flywheel magneto
RFI	Per Canada and U.S.A. requirements
Starting System	Electric starter
Charging System	12 V - 13 amps with regulator
Spark Plug	NGK BPR4ES
Carburetor	Float type, fixed main jet, two barrel
Fuel Pump	Diaphragm type pulse pump
Air Cleaner	Dual stage element, dry type
Governor	Flyweight all speed governor
Lubrication System: Oil Filter Oil Pressuer Switch Oil Capacity	Pressure feed by positive displacement pump Cartridge type full flow filter ON-OFF switch 1.6 L (1.7 US·qt)...(when engine is completely dry)
Cooling System	Forced air cooling by fan
Dimensions (L × W × H): without Muffler	444 mm × 428 mm × 665 mm (17.5 in. × 16.9 in. × 26.2 in.)
Dry Weight: without Muffler	46.4 kg (102.3 lb)

Specifications are subject to change without notice.

Periodic Maintenance

Table of Contents

Periodic Maintenance Chart	2-2
Torque and Locking Agent.....	2-3
Specifications	2-5
Special Tools	2-6
Periodic Maintenance Procedures.....	2-7
Fuel System.....	2-7
Low Idle Speed Adjustment	2-7
High Idle Speed Adjustment	2-7
Fuel System Cleanliness Inspection	2-8
Element Cleaning and Inspection	2-9
Housing (Cap and Body) Inspection	2-9
Engine Top End	2-9
Cylinder Head Cleaning and Inspection.....	2-9
Valve Clearance Inspection	2-10
Valve Clearance Adjustment.....	2-11
Valve Seat Inspection	2-12
Valve Seat Repair	2-12
Lubrication System	2-15
Oil Level Inspection.....	2-15
Oil Change	2-16
Oil Filter Replacement	2-17
Oil Cooler Cleaning.....	2-18
Electrical System	2-18
Spark Plug Cleaning and Inspection.....	2-18

2-2 PERIODIC MAINTENANCE

Periodic Maintenance Chart

To ensure satisfactory operation over an extended period of time, any engine requires normal maintenance regular intervals. The Periodic Maintenance Chart below shows periodic inspection and maintenance items and suitable intervals. The bullet mark (●) designates that the corresponding item should be performed at that interval.

Some adjustments require the use of special tools or other equipment. An electronic tachometer will facilitate setting idle and running speeds.

OPERATION	INTERVAL								
	Daily	First 8 hr.	Every 25 hr.	Every 50 hr.	Every 100 hr.	Every 200 hr.	Every 250 hr.	Every 300 hr.	Every 500 hr.
Check or clean air inlet screen	●								
Check and add engine oil	●								
Check for fuel and oil leakage	●								
Check for loose or lost nut and screw	●								
Check battery electrolyte level	●								
Replace air cleaner primary element (Heavy duty air cleaner model) (1)							●		
Check air cleaner secondary element (Heavy duty air cleaner model) (1)							●		
Replace air cleaner secondary element (Heavy duty air cleaner model) (1)									●
Clean dust and dirt from cylinder and cylinder head fins (1)					●				
Tighten nut and screws					●				
Change engine oil		●			●				
Clean and re-gap spark plugs					●				
Check and clean oil cooler fins					●				
Change Oil filter						●			
◆ Check and adjust valve clearance								●	
◆ Clean and lap valve seating surface								●	
◆ Clean combustion chambers								●	

(1): Service more frequently under dusty conditions.

◆: These items must be performed with the proper tools. See your authorized Kawasaki Engine Dealer for service, unless you have the proper equipment and mechanical proficiency.

Torque and Locking Agent

The following tables lists the tightening torque for the major fasteners, and the parts requiring use of a non-permanent locking agent or silicone sealant etc.

Letters used in the "Remarks" column mean:

- L: Apply a non-permanent locking agent to the threads.
- O: Apply an oil to the threads, seated surface, or washer.
- R: Replacement parts
- S: Tighten the fasteners following the specified sequence.

Fastener	Torque			Remarks
	N·m	kgf·m	ft·lb	
Fuel System				
Air Cleaner Body Bracket Bolts	5.9	0.60	52 in·lb	
Air Cleaner Body Bracket Nuts	9.8	1.0	87 in·lb	
Carburetor Mounting Nuts	6.9	0.70	61 in·lb	
Carburetor Cover Screws	2.5	0.25	22 in·lb	
Chamber Screws	3.9	0.40	35 in·lb	
Choke Valve Screws	0.9	0.09	8 in·lb	
Control Panel Mounting Bolts	6.9	0.70	61 in·lb	
Drain Screw	2.0	0.20	18 in·lb	
Fuel Pump Bracket Bolts	5.9	0.60	52 in·lb	
Fuel Pump Mounting Bolts	5.9	0.60	52 in·lb	
Governor Arm Clamp Nut	7.8	0.80	69 in·lb	
Governor Shaft Plate Screws	2.0	0.20	18 in·lb	
Inlet Manifold Bolts	6.9	0.70	61 in·lb	
Solenoid Valve	12	1.2	106 in·lb	
Throttle Valve Screws	0.9	0.09	8 in·lb	
Cooling System				
Engine Shroud Bolts	5.9	0.60	52 in·lb	
Fan Housing Bolts (Upper)	6.9	0.70	61 in·lb	
Fan Housing Bolts (Lower)	5.9	0.60	52 in·lb	
Screen Bolts	5.9	0.60	52 in·lb	
Fan Bolts	16	1.6	12	
Fan Housing Cover Screws	2.0	0.20	18 in·lb	
Engine Top End				
Connecting Rod Big End Cap Bolts	9.8	1.0	87 in·lb	O
Rocker Arm Bolts	28	2.8	21	
Valve Clearance Lock Screws	6.9	0.70	61 in·lb	O
Cylinder Head Bolts	32	3.3	24	S
Rocker Cover Mounting Bolts	6.9	0.70	61 in·lb	
Spark Plugs	22	2.2	16	
Muffler Bracket Bolts	13	1.3	115 in·lb	
Muffler Flange Nuts	15	1.5	11	
Muffler Stay Mounting Bolts	15	1.5	11	
Lubrication System				
Oil Drain Plugs	6.9	0.70	61 in·lb	
Oil Filter	9.8	1.0	87 in·lb	O, R
Oil Filter Joint Pipe	44	4.5	32	

2-4 PERIODIC MAINTENANCE

Torque and Locking Agent

Fastener	Torque			Remarks
	N·m	kgf·m	ft·lb	
Oil Pump Cover Plate Mounting Bolts	6.9	0.70	61 in·lb	S L
Oil Pipe Mounting Bolts	6.9	0.70	61 in·lb	
Crankcase Cover Bolts	29	3.0	22	
Oil Passage Plugs	2.9	0.30	26 in·lb	
Oil Cooler Bracket Bolt	5.9	0.60	52 in·lb	
Oil Cooler Bracket Nuts	5.9	0.60	52 in·lb	
Oil Cooler Mounting Bolts	5.9	0.60	52 in·lb	
Camshaft/Transmission				
Crankcase Cover Bolts	32	3.3	24	S
Breather Chamber Cover Bolts	5.9	0.60	52 in·lb	
Breather Valve Mounting Screws	2.9	0.30	26 in·lb	
Connecting Rod Big End Cap Bolts	9.8	1.0	87 in·lb	O
Electrical System				
Spark Plugs	22	2.2	16	
Stator Coil Screws	2.9	0.30	26 in·lb	
Flywheel Bolt	56	5.7	41	
Regulator Screw	3.4	0.35	30 in·lb	
Starter Motor Mounting Bolts	15	1.5	11	
Ignition Coil Bolts	6.9	0.70	61 in·lb	

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Basic Torque for General Fasteners

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
4	2.0	0.20	17 in·lb
5	3.4	0.35	30 in·lb
6	5.9	0.60	52 in·lb
8	15	1.5	11

PERIODIC MAINTENANCE 2-5

Specifications


Item	Standard
Fuel System	
Idle Speed: (1)	
Low Idle Speed (Carburetor Idle rpm)	1 450 r/min (rpm)
Low Idle Speed (Governed Idle rpm)	1 550 r/min (rpm)
High Idle Speed	3 600 r/min (rpm)
Air Cleaner:	
Type	Heavy duty type
Pre-Cleaner	Primary element
Two-Stage Cleaner	Secondary element
Engine Top End	
Valve Clearance:	
Inlet, Exhaust	0.10 ~ 0.15 mm (0.0039 ~ 0.0059 in.)
Valve Seating Surface Angle:	
Inlet, Exhaust	45°
Valve Seating Surface Width:	
Inlet	0.8 ~ 1.4 mm (0.03 ~ 0.06 in.)
Exhaust	1.1 ~ 1.6 mm (0.04 ~ 0.06 in.)
Lubrication System	
Engine Oil:	
Type	SF, SG, SH, SJ or SL class
Viscosity	SAE 40, SAE 30, SAE 10W-30/SAE 10W-40, or SAE 5W-20
Capacity	1.4 L (1.5 US qt) (When filter is not removed)
	1.6 L (1.7 US qt) (When filter is removed)
Level	Between "H" and "L" marks on oil gauge.
Electrical System	
Spark Plug Gap	0.7 ~ 0.8 mm (0.028 ~ 0.031 in.)
Item	Service Limit
Engine Top End	
Cylinder Head Warp	0.03 mm (0.001 in.)

(1) Idle speeds may vary depending on each equipment. Refer to the equipment specification.


2-6 PERIODIC MAINTENANCE

Special Tools


Valve Seat Cutter, 45° - ϕ 35:
57001-1116

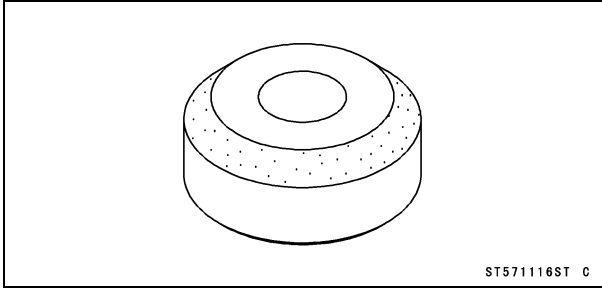


Valve Seat Cutter, 32° - ϕ 33:
57001-1199

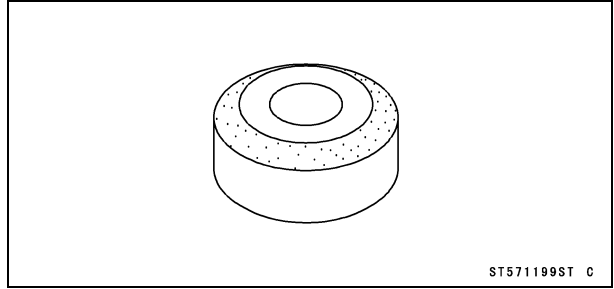


Valve Seat Cutter, 32° - ϕ 30:
57001-1120

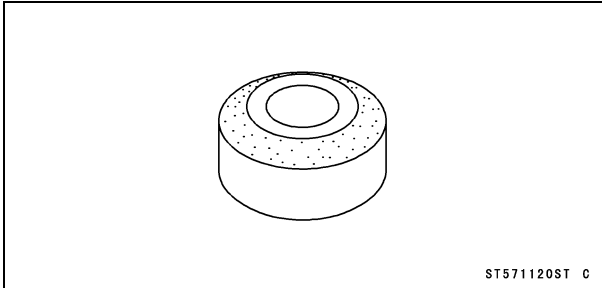


Oil Filter Wrench:
57001-1249

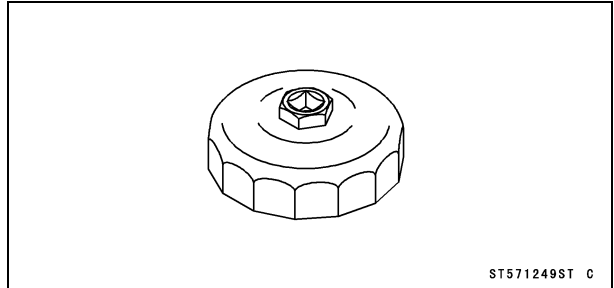


Valve Seat Cutter Holder Bar:
57001-1128

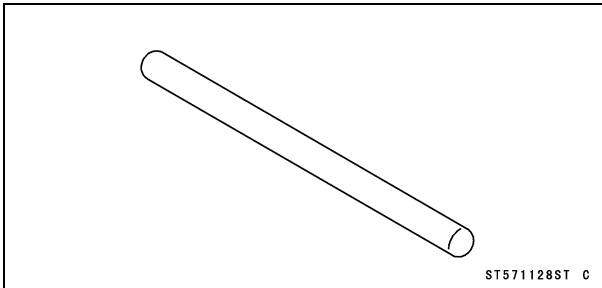

Valve Seat Cutter Holder, ϕ 6:
57001-1360

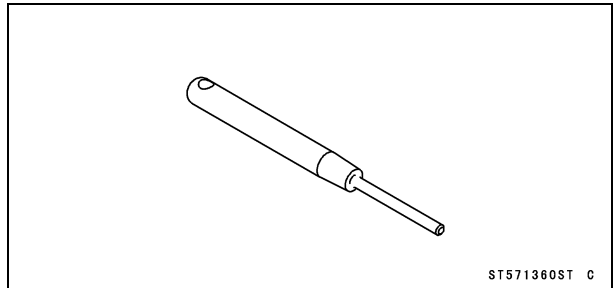

Valve Seat Cutter, 45° - ϕ 30:
57001-1187

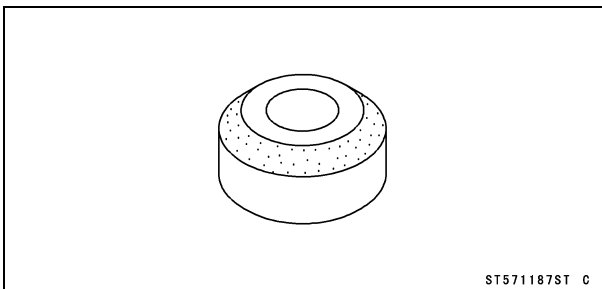

Periodic Maintenance Procedures

Fuel System

NOTE

○High and low idle speeds may vary depending on the equipment on which the engine is used. Refer to the equipment specification.

Low Idle Speed Adjustment

- Disconnect all possible external loads from the engine.
- Start the engine and warm it up thoroughly.

⚠ WARNING

Always keep your hands clear of the moving parts.

- Remove the fan housing cover (see Cleaner Body Removal in the Fuel System chapter).
- Move the throttle lever on dash to the idle position, and hold the throttle lever on the carburetor in closed position (turn the governor arm clockwise all the way) and adjust the low idle speed screw [A] until the engine idles at specified speed.

Idle Speed (Carburetor idle rpm)

Standard: 1 450 rpm

- Release the throttle lever and adjust the low idle speed set screw [A] on the control plate to obtain the specified governed low idle speed.

Low Idle Speed (Governed idle rpm)

Standard: 1 550 rpm

- Install the fan housing cover.
- Torque - Fan Housing Cover Screws: 2.0 N·m (0.20 kgf·m, 18 in·lb)**

High Idle Speed Adjustment



NOTE

○High idle speed adjustment should be made after the idle speed adjustment is performed.

CAUTION

Do not adjust high idle speed with the air cleaner removed.

- Start and warm up the engine thoroughly.

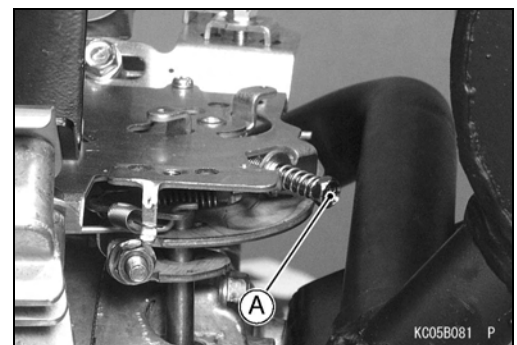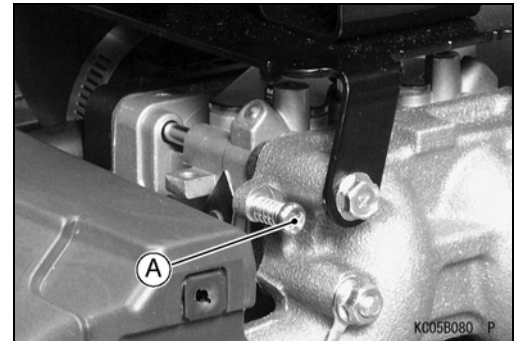

2-8 PERIODIC MAINTENANCE

Periodic Maintenance Procedures

⚠ WARNING

Always keep your hands clear of the moving parts.

- Move the throttle lever at a dash to the high idle position and match the lever hole position with the panel hole by inserting $\phi 6$ mm ($\phi 0.2$ in.), pin or bolt [A].
- Loosen the control panel mounting bolts [B] enough to move the control panel assembly.
- Carefully move the control panel assembly right side [C] up or down to obtain the specified high idle speed.


High Idle Speed

Standard: 3 600 rpm

- Tighten:
Torque - Control Panel Mounting Bolts: 6.9 N·m (0.70 kgf·m, 61 in·lb)
- Remove the $\phi 6$ mm ($\phi 0.02$ in.), pin or bolt.
- Check the idle speed, and readjust the idle speed if necessary.

CAUTION

Be sure to make the idle and high idle speeds respectively correspond to those of the equipment.

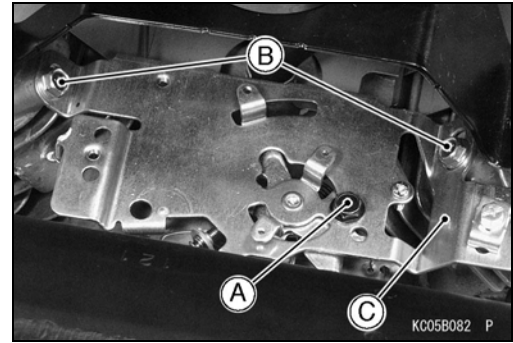


Fuel System Cleanliness Inspection

⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Remove the carburetor (see Carburetor Removal in the Fuel System chapter).
- Connect a plastic tube to the carburetor drain hole [A] and place a suitable container under the plastic tube other end.
- Turn out the drain screw [B] a few turns to drain the carburetor and check to see if water or dirt has accumulated in the carburetor.
- Tighten the drain screw.
Torque - Drain Screw: 2.0 N·m (0.20 kgf·m, 18 in·lb)
- If any water or dirt is found, clean the carburetor (see Carburetor Cleaning in the Fuel System chapter), and fuel tank, and check the fuel filter.

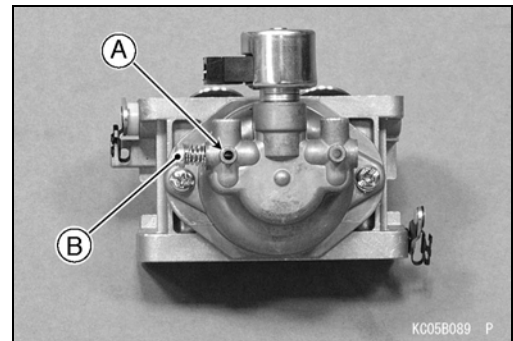

Periodic Maintenance Procedures

Element Cleaning and Inspection

This air cleaner elements are not recommended to be cleaned, and each air cleaner element should be replaced with the new one at the maintenance time as shown in the maintenance chart.



NOTE

○ Operating in dusty condition may require more frequent maintenance than above.

- Remove the elements (see Elements Removal in the Fuel System chapter).
- Replace the primary element [A] every 250 hrs.
- Replace the secondary element [A] with the new one if dirty when primary element is checked.
- Replace the secondary element every 500 hrs.

CAUTION

Do not wash air cleaner elements. Do not oil air cleaner elements. Do not use pressurized air to clean air cleaner elements.

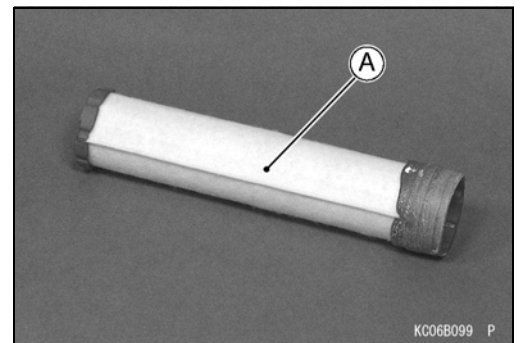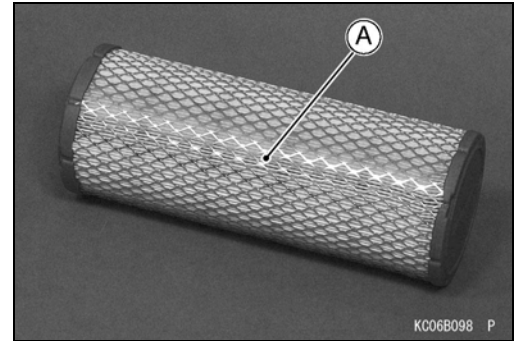

Housing (Cap and Body) Inspection

- Clean the housing with detergent and water and dry thoroughly.
- Check the housing for deformation or other damage.
- The housing must seal well and permit only filtered air to reach the carburetor.
- ★ If the housing is damaged, it must be replaced.
- Check that no foreign material is obstructing the air passage.


Engine Top End

Cylinder Head Cleaning and Inspection

- Remove the valves (see Valve Mechanism Removal/Installation in the Engine Top End chapter).
- Scrape the carbon deposits from the head and exhaust port with a suitable tool [A].
- To avoid gouging, use scrapers that are made of a material that will not cause damage.
- Clean the head in a bath of high-flash point solvent and dry it with compressed air.

WARNING

Clean the cylinder head in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Do not use gasoline or a low-flash point solvent to clean the cylinder head. A fire or explosion could result.

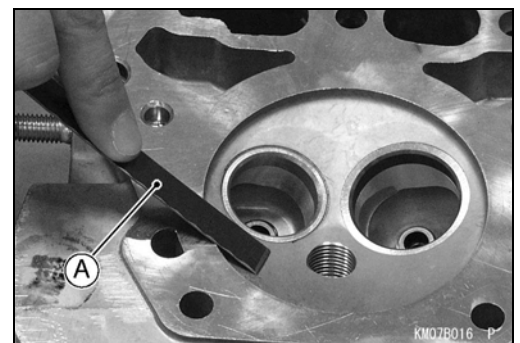


2-10 PERIODIC MAINTENANCE

Periodic Maintenance Procedures

- Lay a straightedge [A] across the mating surface of the head at several different points, and measure warp by inserting a thickness gauge [B] between the straightedge and head.
- ★ If warp exceeds the service limit, repair the mating surface. Replace the cylinder head if the mating surface is badly damaged.

Cylinder Head Warp

Service Limit: 0.03 mm (0.001 in.)

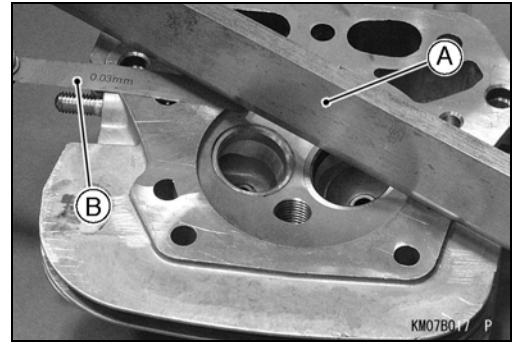

- Check the cylinder head for cracks or other damage.
- Cracks not visible to the eye may be detected by coating the suspected area with mixture of 25% kerosene and 75% light engine oil.
- Wipe the area dry and immediately apply a coating of zinc oxide dissolved in wood alcohol. If a crack is present, the coating will become discolored at the defective area.
- If a crack is present in the cylinder head, replace it.
- Inspect the mating surfaces for burrs and nicks.

Valve Clearance Inspection


NOTE

○ Valve clearance must be checked when the engine is cold (at room temperature).

- Remove the rocker cover (see Cylinder Head Assembly Removal in the Engine Top End chapter).
- Place the piston at top dead center (TDC) of the compression stroke turning the crankshaft clockwise facing the flywheel.


No.1 Cylinder:

- The left projection [A] on the flywheel is faced with the right leg [B] on the #1 ignition coil [C] as shown.
- Check the intake and exhaust valves are closed completely, if not turn the flywheel one turn (360°) clockwise and face the left projection with the right leg again.

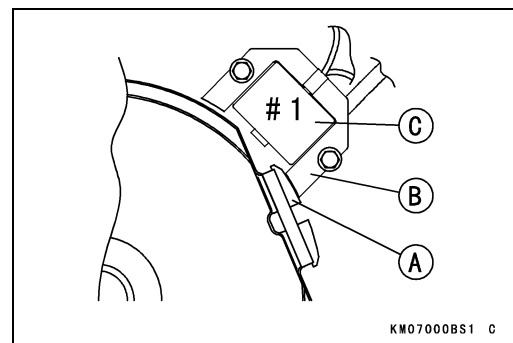

No.2 Cylinder:

- The left projection [A] on the flywheel is faced with the right leg [B] on the #2 ignition coil [C] as shown. Follow No.1 Cylinder alignment.

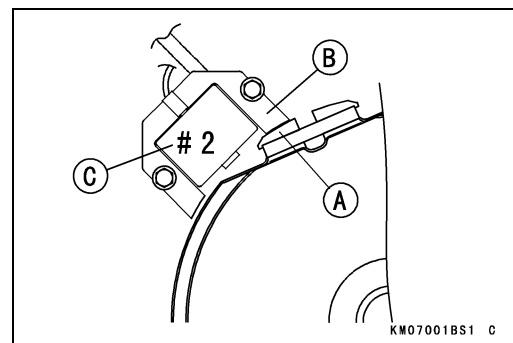


Periodic Maintenance Procedures

- Then check the valve clearance.
- Using a thickness gauge [A], measure the valve clearance between the rocker arm [B] and the valve stem end.
- ★ If the valve clearance is incorrect, adjust it.

Valve Clearance (when cold)


Standard:

Inlet, Exhaust 0.10 ~ 0.15 mm (0.0039 ~ 0.0059 in.)

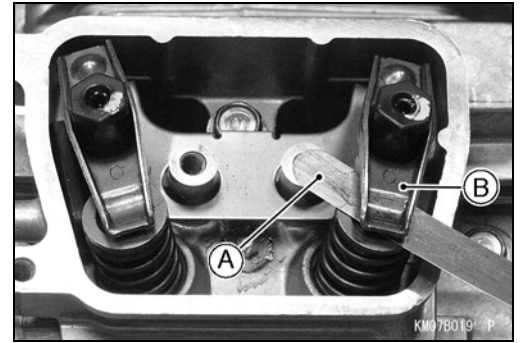

Valve Clearance Adjustment

- Since valve repairs change the valve clearance, adjust the valve clearance to the specification.
- Assemble the cylinder head and install the cylinder head assembly on the block (see Cylinder Head Assembly Installation in the Engine Top End chapter).
- Turn the crankshaft proper direction until the piston is at TDC of the compression stroke (described above).
- Loosen the lock screws [A] and valve clearance adjusting nuts [B].
- Insert a 0.10 mm (0.004 in.) thickness gauge [C] between the rocker arm and valve stem, and tighten the adjusting nut until the thickness gauge begins to bind between the rocker arm and valve stem end. Use a sweeping motion with the thickness gauge while making this adjustment.

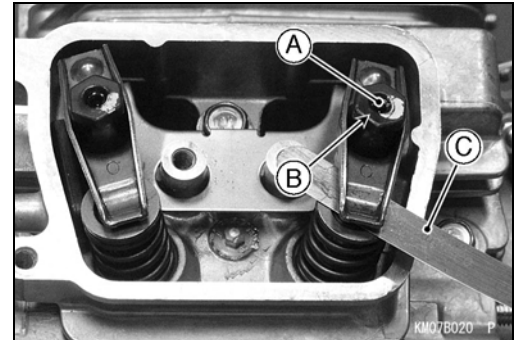

Valve Clearance (when cold)

Standard:

Inlet, Exhaust 0.10 ~ 0.15 mm (0.0039 ~ 0.0059 in.)

- Holding the adjusting nut with a spanner, tighten the lock screw to the specified torque.

Torque - Valve Clearance Lock Screws: 6.9 N·m (0.70 kgf·m, 61 in·lb)

- Do not overtighten.
- Remeasure any clearance that was adjusted. Readjust if necessary.

2-12 PERIODIC MAINTENANCE

Periodic Maintenance Procedures

Valve Seat Inspection

- Remove the valve (see Valve Mechanism Removal/Installation in the Engine Top End chapter).
- Inspect the valve seats for damage.
- ★ If the seats are warped or distorted beyond reconditioning, replace the cylinder head.
- Pitted or worn valve seats can be refaced. Lap the valves to the seats after refacing.
- Coat the valve seat with machinist's dye.
- Push the valve into the guide.
- Rotate the valve against the seat with a lapper.
- Pull the valve out, and check the seating pattern on the valve head. It must be the correct width [A] and even all the way around.

NOTE

○ The valve stem and guide must be in good condition or this check will not be valid.

Good [A]

Too Wide [B]

Too Narrow [C]

Uneven [D]

- ★ If the valve seating pattern is not correct, repair the seat.

Valve Seating Surface Width

Standard:

Inlet 0.8 ~ 1.4 mm (0.03 ~ 0.06 in.)

Exhaust 1.1 ~ 1.6 mm (0.04 ~ 0.06 in.)

Valve Seat Repair

- Follow the manufacture's instructions for use of valve seat cutters.

Special Tools - Valve Seat Cutter Holder, ϕ 6: 57001-1360

Valve Seat Cutter Holder Bar: 57001-1128

Inlet Valve

Valve Seat Cutter, 45° - ϕ 35: 57001-1116



Valve Seat Cutter, 32° - ϕ 33: 57001-1199

Exhaust Valve

Valve Seat Cutter, 45° - ϕ 30: 57001-1187

Valve Seat Cutter, 32° - ϕ 30: 57001-1120

- ★ If the manufacture's instructions are not available, use the following procedure.

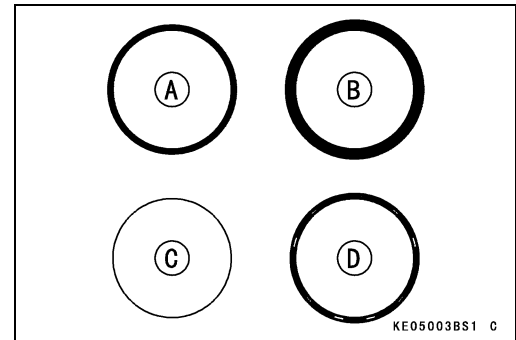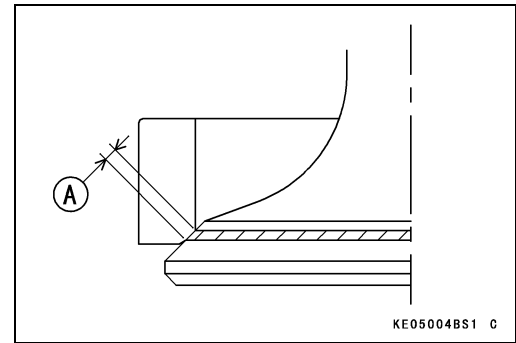

Periodic Maintenance Procedures

Seat Cutter Operating Cares

1. This valve seat cutter is designed only for valve seat repair. Therefore the cutter must not be used for other purposes.
2. Do not drop or hit the valve seat cutter, or the diamond particles may fall off.
3. Do not fail to apply engine oil to the valve seat cutter before grinding the seat surface. Also wash off ground particles sticking to the cutter with washing oil.

NOTE


○Do not use a wire brush to remove the metal particles from the cutter. It will take off the diamond particles.

4. Setting the valve seat cutter holder [A] in position, operate the cutter [B] with one hand [C]. Do not apply too much force to the diamond portion.

NOTE

○Prior to grinding, apply oil to the cutter, and during the operation wash off any ground particles sticking to the cutter with washing oil.


5. After use wash the cutter with washing oil and apply a thin layer of engine oil before storing.

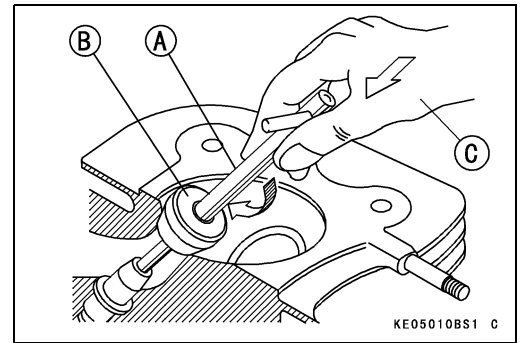

Marks Stamped on the Cutter


The marks stamped on the back of the cutter represent the following.

1	Cutter number, selected from 1 to 12
30°	Cutter angle [A]
37.5φ	Outer diameter of cutter [B]
KS8B	Manufactured lot number

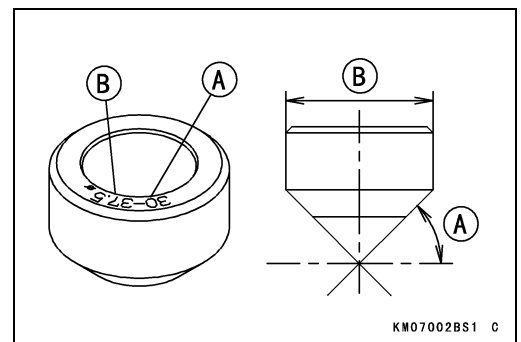

Operating Procedures

- Clean the seat area carefully.
- Recondition the valve seats with the valve seat cutters (45°, 30°) and lap the valves.
- Check the seats for good contact all the way around with machinist's dye.
- Measure the seat width [A]. If it is more than the STD width, the seating surface should be refaced.
- If the valve seating pattern is not correct, repair the seat.

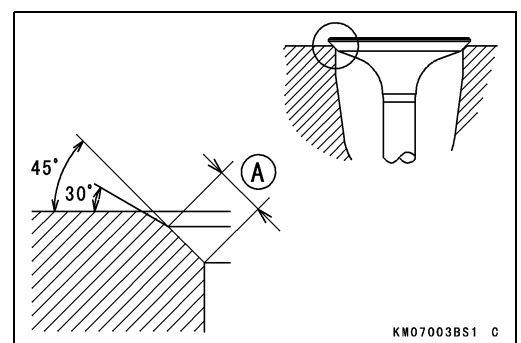


2-14 PERIODIC MAINTENANCE

Periodic Maintenance Procedures

- Coat the seat with machinist's dye.
- Fit a 45° cutter [A] to the holder and slide it into the valve guide.
- Resurface the valve seat with a 45° cutter, removing only enough material to produce a smooth and concentric seat.

CAUTION

Do not grind the seat too much. Overgrinding will reduce valve clearance by sinking the valve into the head. If the valve sinks too far into the head, it will be impossible to adjust the clearance, and the cylinder head must be replaced. Do not turn the cutter counterclockwise or drop it against the seat, or it will be dulled.

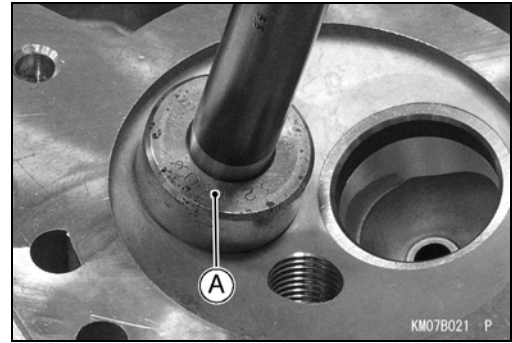

- Use a 30° seat cutter to narrow the seat width to the STD width.
- Turn the seat cutter one turn at a time while pressing down very lightly. Check the seat width after each turn.


CAUTION

The 30° cutter removes material very quickly. Check the seat width frequently to prevent over grinding.

NOTE

○ *Keep the seat width as closely as possible to the STD width.*

- Make a light pass with the 45° cutter to remove any possible burrs at the edge of the seat.
- After resurfacing the seat, inspect for even valve seating.
- Apply a machinist's dye to the valve face, insert the valve, and snap it closed against the seat several times. The valve surface should show good contact all the way around. Be sure the valve seat is centered on the valve face. The position of the valve in the seat is evident after lapping the valve.
- ★ If the seat does not make proper contact, lap the valve into seat with a lapper.
- Coat the face of valve sparingly with a fine lapping compound.
- Use the lapper [A], to grip top of the valve [B]. Rotate the valve in a circular motion to lap the valve to the seat.
- Lift the valve slightly from the seat every 8 to 10 strokes, continue lapping operation until a uniform ring appears around entire surface of the valve face.

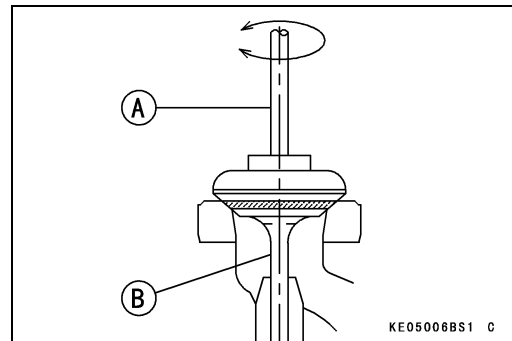


Periodic Maintenance Procedures

- When lapping is completed, wash all parts in solvent to remove lapping compound. Dry the parts thoroughly.
- Note the position of the lapping mark on the valve face. The lapping mark should appear on or near the center of the valve face.
- When the engine is assembled, be sure to adjust the valve clearances (see Valve Clearance Adjustment).


Lubrication System

Oil Level Inspection

- Place the engine on a level surface and check the oil level.
- Clean area around oil gauge [A] before removing it.
- Remove the oil gauge and wipe it with a clean cloth.
- Insert the oil gauge into gauge hole [B] and let its plug firmly fit into the gauge hole, then check the oil level.

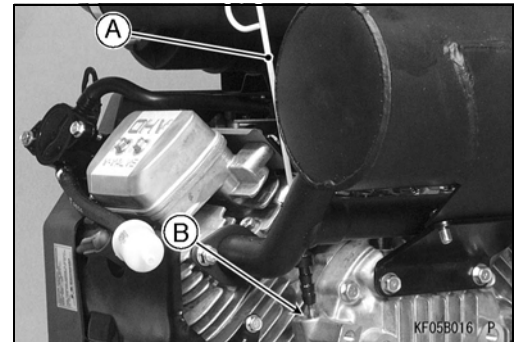

- The oil level should be marks between “H” [A] and “L” [B] marks on the oil gauge.
- ★ If the oil level is near or below the “L” mark, remove the oil filler cap [C] and add enough engine oil to bring oil level to the “H” mark (see Oil Change).

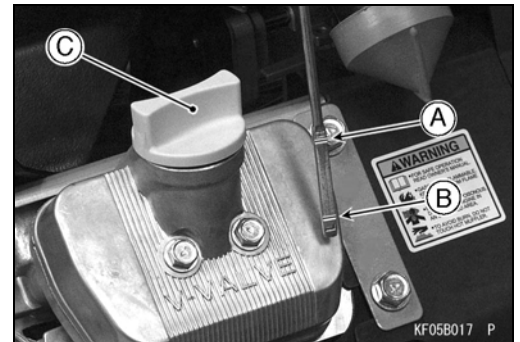

CAUTION


Do not fill above the “H” mark. Excess oil will cause a smoking condition.

- Use the same type and make of oil that is already in the engine.

NOTE

○ If the engine oil type and make are unknown, use any brand of the specified oil to top up the level in preference to running the engine with the oil level low. Then at your earliest convenience, change the oil completely.


- ★ If the oil level is too high, remove the excess oil by loosening the drain plug [A].

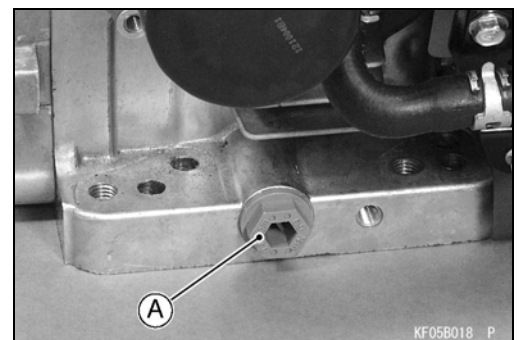

2-16 PERIODIC MAINTENANCE


Periodic Maintenance Procedures

- Apply engine oil to the grommet [A] of the oil level gage [B] before installation.

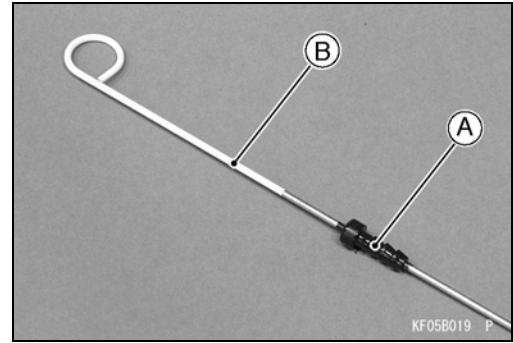

Oil Change


- Change the oil after first 8 hours of operation. Thereafter change oil every 100 hours.
- Start and warm up the engine so the oil will drain easily. Stop the engine.
- Place the engine on a level surface.
- Place a suitable container under the engine.
- Remove the drain plug [A] and drain the oil.
- The oil filter can be drained by removing the filter (see Oil Filter Replacement).

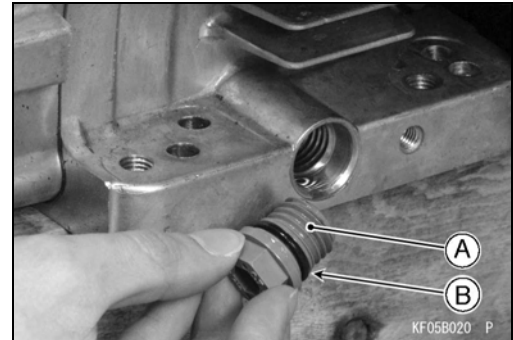

⚠ WARNING

Be careful of hot oil when drained. It may be hot enough to burn you severely.

- Replace the O-ring [B] with a new one.
- Apply engine oil to the new O-ring.
- Tighten:
Torque - Oil Drain Plugs: 6.9 N·m (0.70 kgf·m, 61 in·lb)
- Remove the oil filler cap [A].

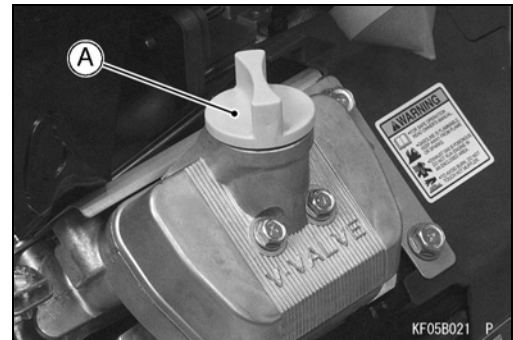


Periodic Maintenance Procedures

- Pour in the specified type and amount of oil.

Engine Oil


- Type:** API Service Classification: SF, SG, SH, SJ or SL Class
- Viscosity:** SAE40, SAE30, SAE10W-30/SAE10W-40, or SAE5W-20
- Capacity:** 1.4 L (1.5 US-qt)
(When oil filter is not removed)
1.6 L (1.7 US-qt)
(When oil filter is removed)
- Level:** Between "H" and "L" marks on oil gauge

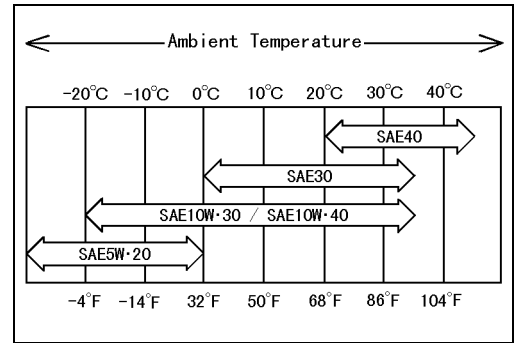

NOTE

○Some increase in oil consumption may be expected when a multi grade engine oil 10W-30/10W-40, 5W-20 is used. Check the oil level frequently.

- Replace the O-ring [A] of the filler cap [B] with a new one.
- Apply engine oil to the O-ring before installation.

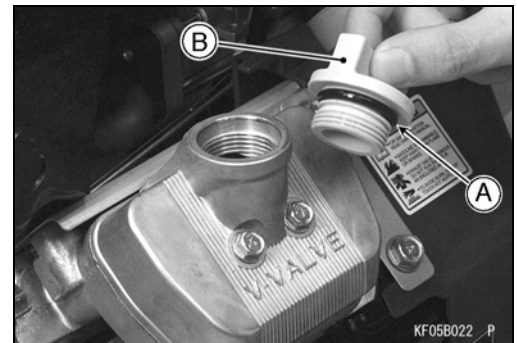


Oil Filter Replacement


- Drain the engine oil (see Oil Change).
- Remove the oil filter [A] with the oil filter wrench [B] or strap wrench.

Special Tool - Oil Filter Wrench: 57001-1249

○When unscrewing the oil filter, place a suitable container beneath the oil drip tray to receive oil from the oil filter and oil passages in the engine.

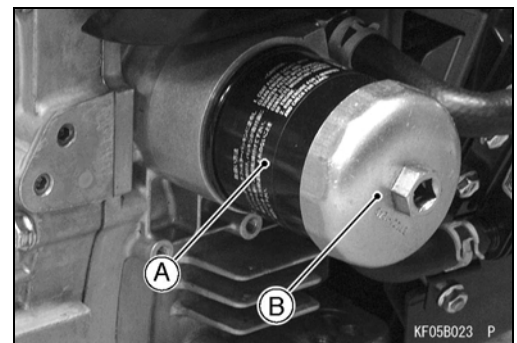

- Replace the oil filter [A] with a new one.
- Apply light film of engine oil to the seal [B].
- Install the oil filter.
- Turn the filter until the seal contacts mounting surface [C] of the engine. Then turn the filter BY HAND (S) 3/4 turn more.
- Run the engine at slow idle speed 2 minutes.
- While running the engine, check for oil leaks around it.
- Stop the engine and check the oil level (see Oil Level Inspection).

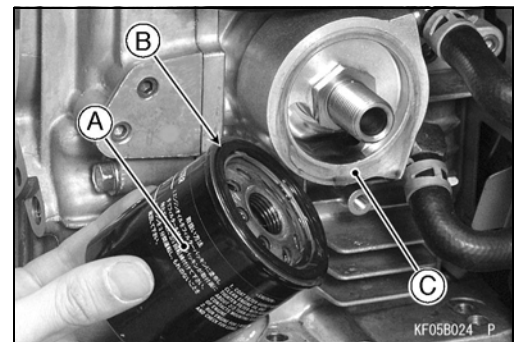


2-18 PERIODIC MAINTENANCE

Periodic Maintenance Procedures

Oil Cooler Cleaning

- Clean dirt off the outside fins [A] with brush or with compressed air.

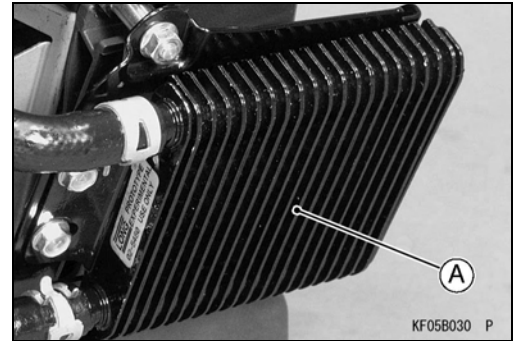

Electrical System

Spark Plug Cleaning and Inspection


- Carefully pull the plug cap from the spark plug, and remove the spark plug.
- ★ If the plug is oily or has carbon built up on it, clean the plug using a high-flash point solvent and a wire brush or other suitable tool.
- ★ If the spark plug electrodes are corroded or damaged, or if the insulator is cracked replace the plug. Use the standard spark plug or its equivalent.

Insulator [A]
Center Electrode [B]
Plug Gap [C]
Side Electrode [D]

- Measure the gap with a wire-type thickness gauge.
- ★ If the gap is incorrect, carefully bend the side electrode with a suitable tool to obtain the correct gap.

Spark Plug Gap

Standard: 0.7 ~ 0.8 mm (0.028 ~ 0.031 in.)

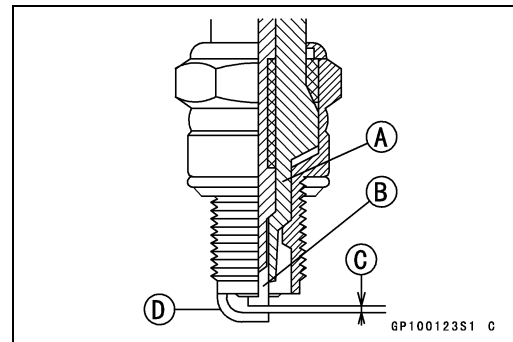


Fuel System

Table of Contents

Exploded View	3-2
Specifications	3-6
Governor Link Mechanism.....	3-7
Control Panel Assembly Removal	3-7
Control Panel Assembly Installation	3-7
Governor Arm Removal	3-7
Governor Arm Installation	3-8
Governor Assembly Removal	3-8
Governor Assembly Installation	3-9
Governor Assembly Inspection	3-9
Governor Shaft Removal	3-9
Governor Shaft Installation	3-10
Carburetor	3-11
Fuel and Air Flow	3-11
Fuel Shut Off Solenoid Valve	3-13
Low Idle Speed Adjustment	3-13
High Idle Speed Adjustment	3-13
High Altitude Operation.....	3-13
Main Jet Replacement	3-14
Fuel System Cleanliness Inspection	3-15
Carburetor Removal.....	3-15
Carburetor Installation.....	3-17
Carburetor Disassembly/Assembly	3-18
Carburetor Cleaning.....	3-19
Carburetor Inspection	3-20
Fuel Shut-Off Solenoid Valve Test	3-21
Inlet Manifold	3-22
Inlet Manifold Removal	3-22
Inlet Manifold Installation	3-22
Inlet Manifold Inspection	3-22
Fuel Pump, Fuel Filter	3-23
Fuel Pump Inspection	3-23
Fuel Filter Inspection.....	3-23
Air Cleaner.....	3-24
Element Removal.....	3-24
Element Installation.....	3-24
Element Cleaning and Inspection	3-24
Cleaner Body Removal.....	3-24
Cleaner Body Installation	3-25
Housing (Cap and Body) Inspection	3-26

3-2 FUEL SYSTEM

Exploded View

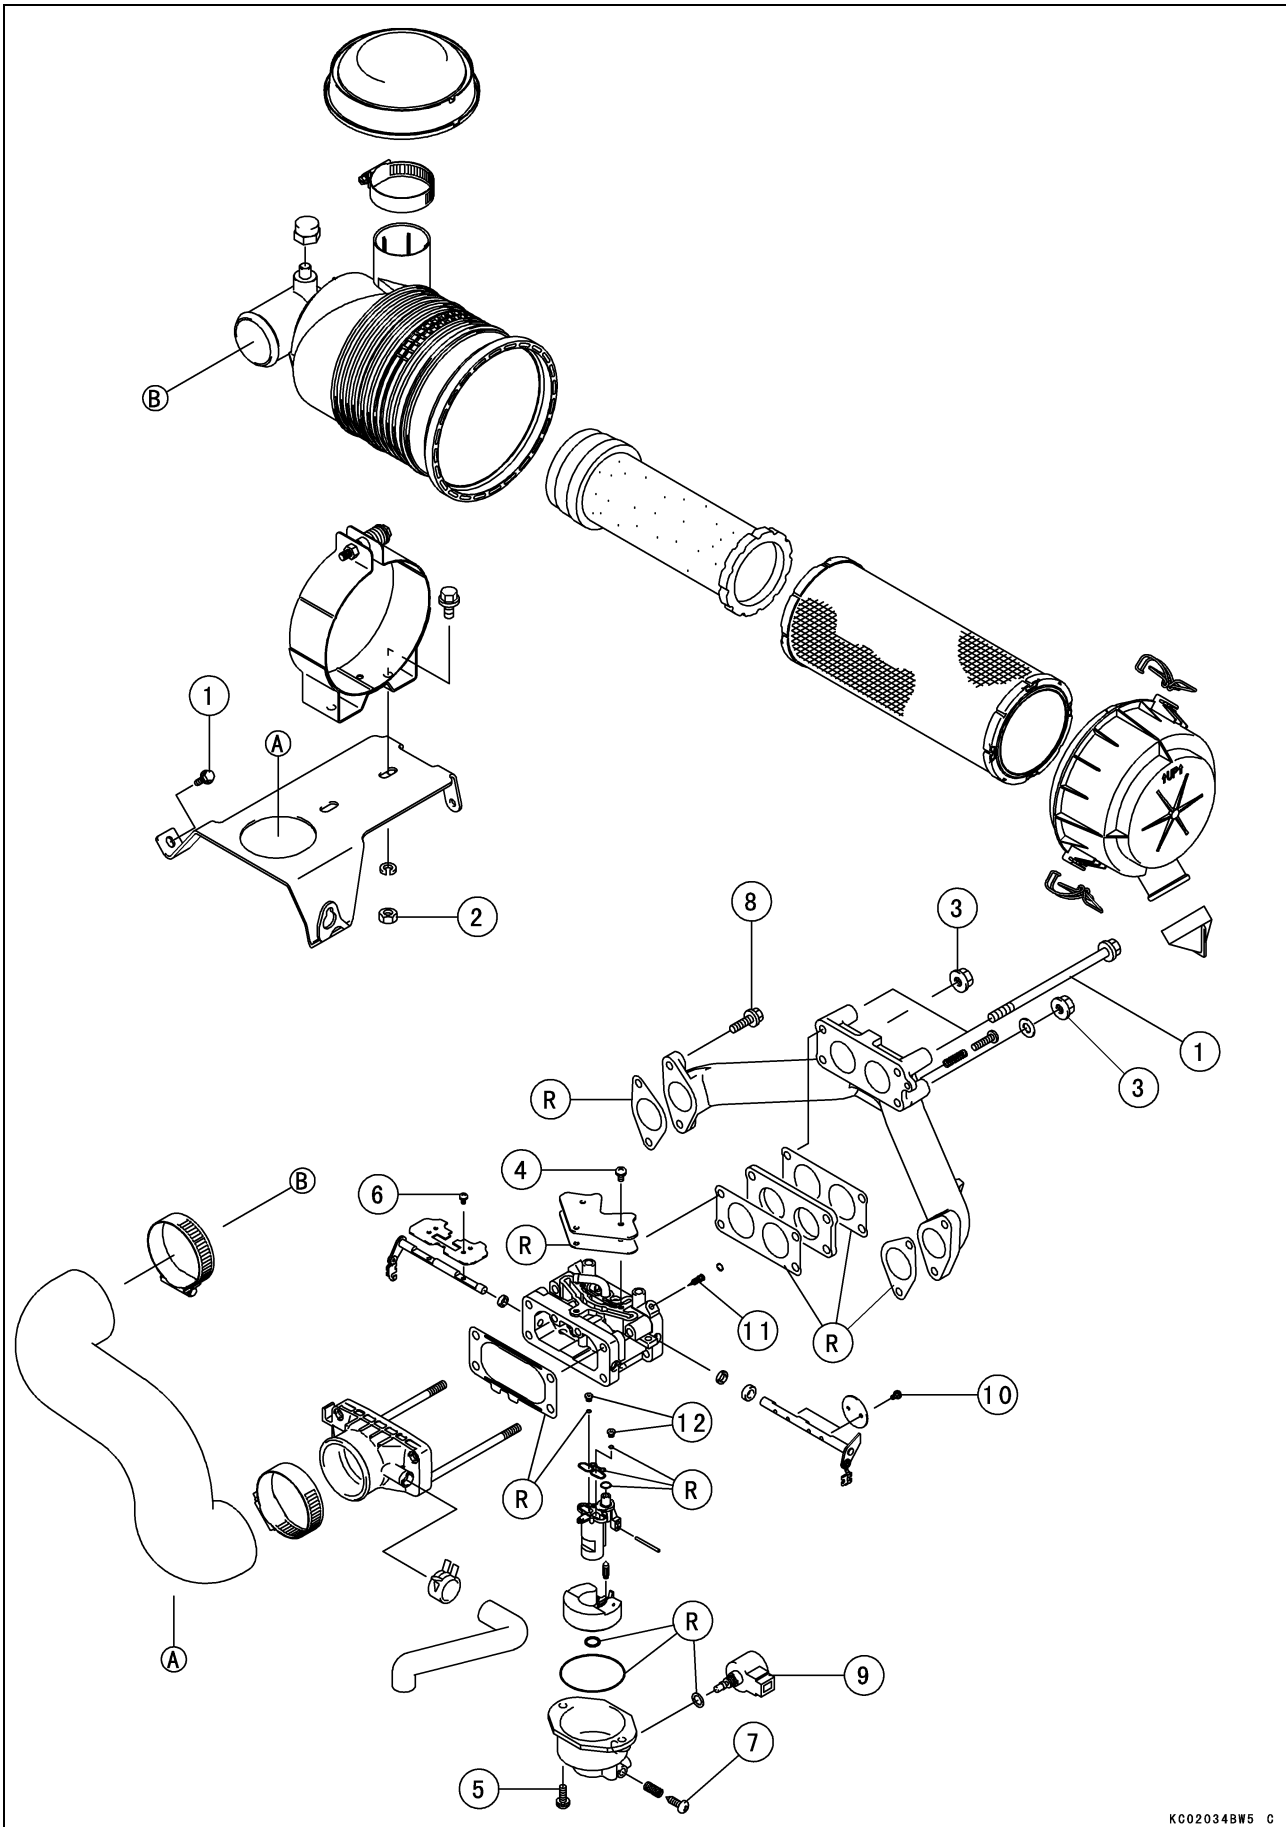

Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Air Cleaner Body Bracket Bolts	5.9	0.60	52 in·lb	
2	Air Cleaner Body Bracket Nuts	9.8	1.0	87 in·lb	
3	Carburetor Mounting Nuts	6.9	0.70	61 in·lb	
4	Carburetor Cover Screws	2.5	0.25	22 in·lb	
5	Chamber Screws	3.9	0.40	35 in·lb	
6	Choke Valve Screws	0.9	0.09	8 in·lb	
7	Drain Screw	2.0	0.20	97 in·lb	
8	Inlet Manifold Bolts	6.9	0.70	61 in·lb	
9	Solenoid Valve	12	1.2	106 in·lb	
10	Throttle Valve Screws	0.9	0.09	8 in·lb	

11. Pilot Screw


12. Main Jet

O: Apply engine oil.

R: Replacement Parts

3-4 FUEL SYSTEM

Exploded View

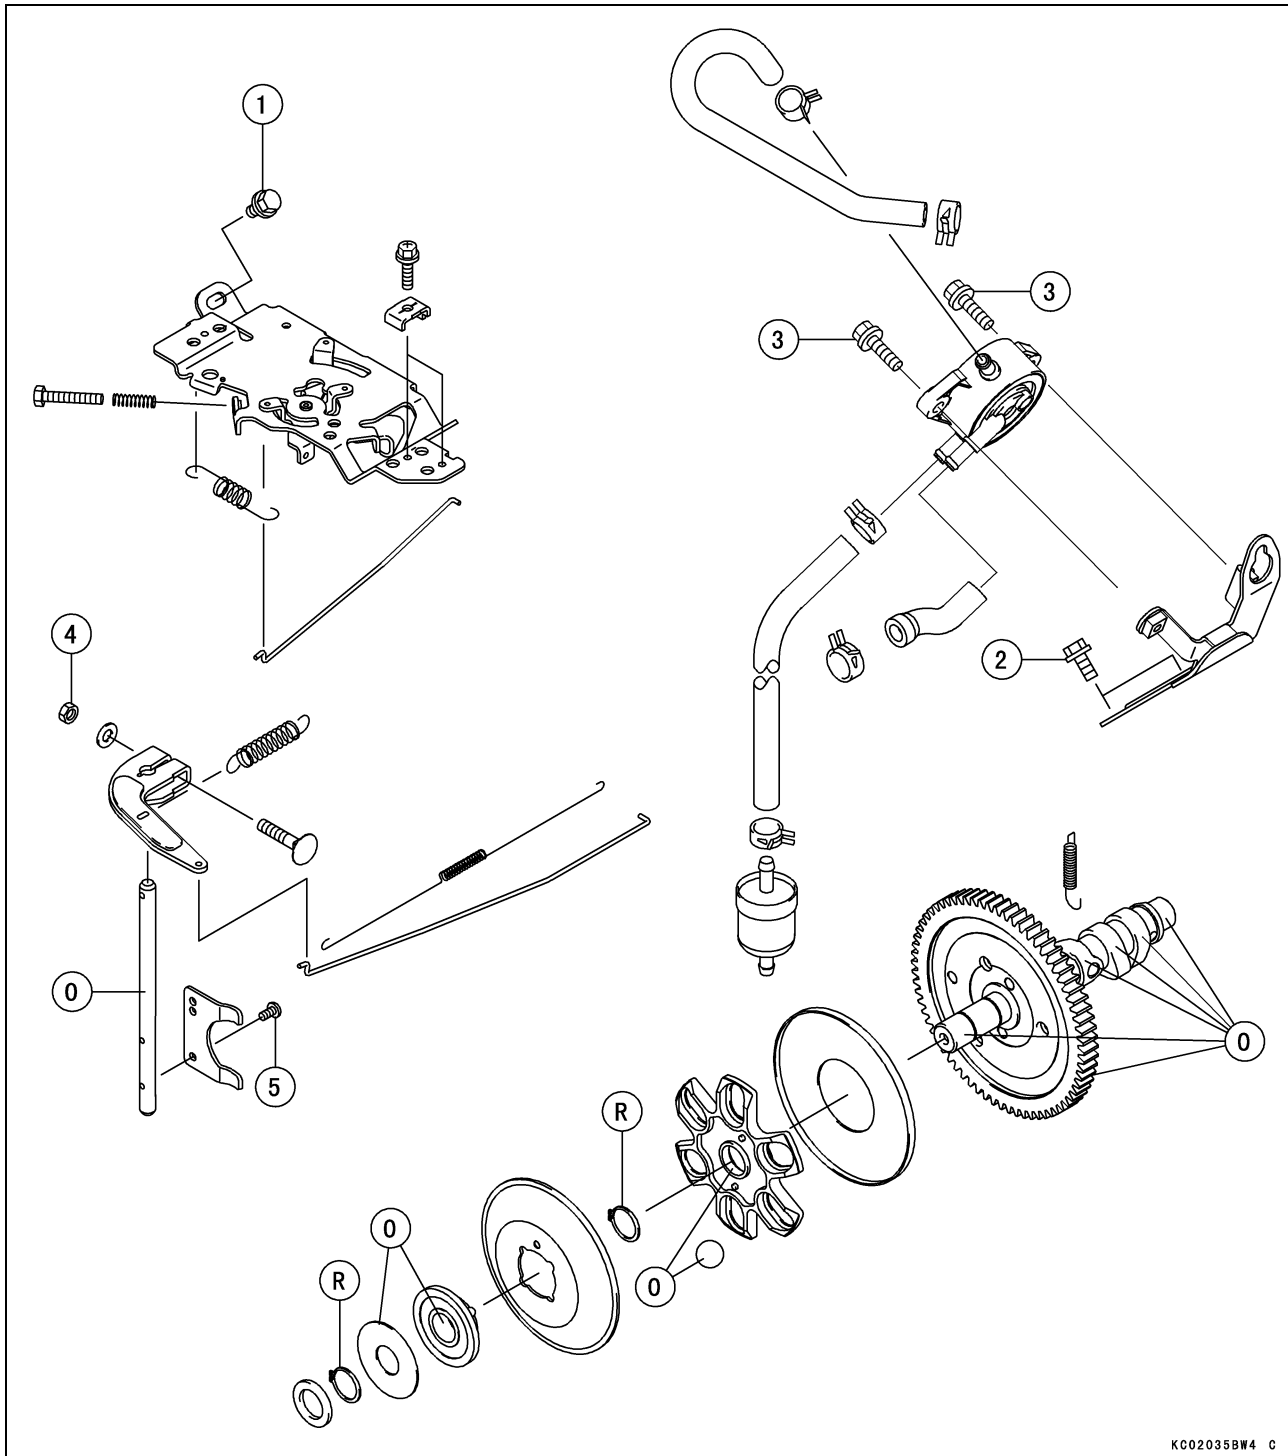

Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Control Panel Mounting Bolts	6.9	0.70	61 in·lb	
2	Fuel Pump Bracket Bolts	5.9	0.60	52 in·lb	
3	Fuel Pump Mounting Bolts	5.9	0.60	52 in·lb	
4	Governor Arm Clamp Nut	7.8	0.80	69 in·lb	
5	Governor Shaft Plate Screws	2.0	0.20	18 in·lb	

O: Apply engine oil.

R: Replacement Parts

3-6 FUEL SYSTEM

Specifications


Item	Standard
Carburetors Specifications	
Make/Type	Nikki 621266-751
Throttle Bore Diameter	26 mm (1.02 in.)
Venture Diameter	21 mm (0.83 in.)
Main Jet (Mj)	L: #122, R: #124
Pilot Jet (Pj)	#42 (L and R)
Pilot Screw Turns Out (Ps) (Idle Mixture Screw Turns Out)	2
Float Level	Float parallel to carburetor body
Idle Speed: (1)	
Low Idle Speed (Carburetor Idle rpm)	1 450 r/min (rpm)
Low Idle Speed (Governed Idle rpm)	1 550 r/min (rpm)
High Idle Speed	3 600 r/min (rpm)
Air Cleaner	
Type	Heavy duty air cleaner type
Pre-Cleaner	Primary element
Second-Stage Cleaner	Secondary element
Fuel	
Fuel Requirement	Unleaded regular grade gasoline
Fuel Pump	
Type	Pulse-diaphragm pump
Governor	
Type	Flyweight all speed governor

(1) Idle speeds may vary depending on each equipment. Refer to the equipment specification.


Governor Link Mechanism

Control Panel Assembly Removal

- Remove:
 - Air Cleaner (see Cleaner Body Removal)
 - Control Panel Mounting Bolts [A]

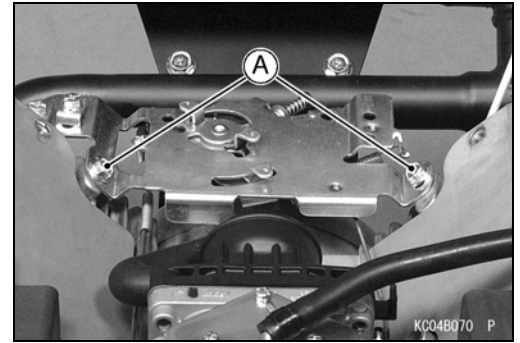


- Remove the control panel assembly [A] while unhooking the governor spring [B] end loop at the panel bracket.
- Clear the choke link rod end [C] from the choke lever [D].

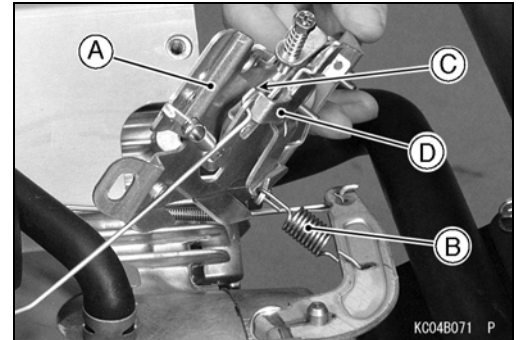


Control Panel Assembly Installation

- Before installing the control panel assembly, check to see that the choke lever [A] and engine speed control lever [B] move smoothly in all directions.
- ★ If any part is worn or damaged, replace the control panel assembly.

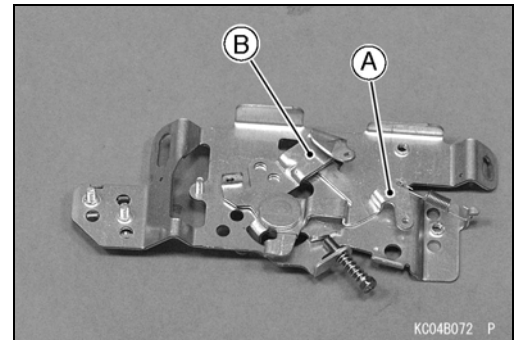


- Install the governor spring [A] and choke link rod [B] to the control panel assembly [C] as shown.
- After installation, adjust the low idle speeds and high idle speeds to the specifications (see Low/High Idle Speed adjustment in the Periodic Maintenance chapter).

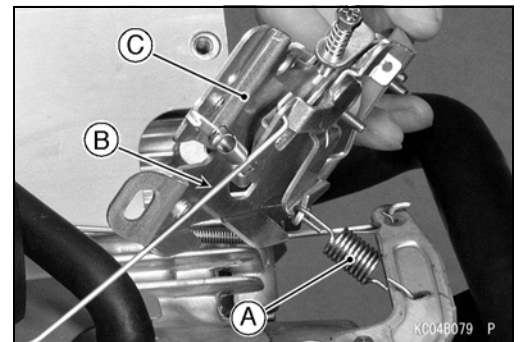

Governor Arm Removal

- Remove the control panel assembly (see Control Panel Assembly Removal).
- Loosen the clamp nut [A] and take off the governor arm [B].
- Unhooking the throttle link rod spring end loop [C] and clear the throttle link rod end [D].

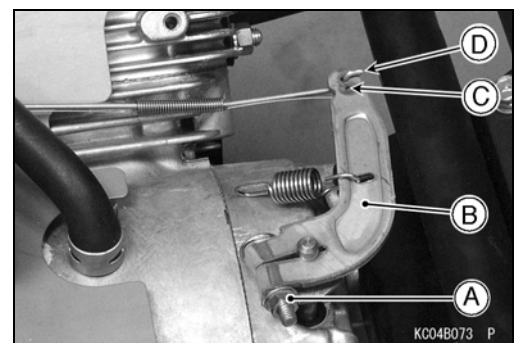


3-8 FUEL SYSTEM

Governor Link Mechanism

Governor Arm Installation


- Insert the jig pin ($\phi 2$ mm, $\phi 0.08$ in.) through the jig pin hole [A] of governor shaft [B].

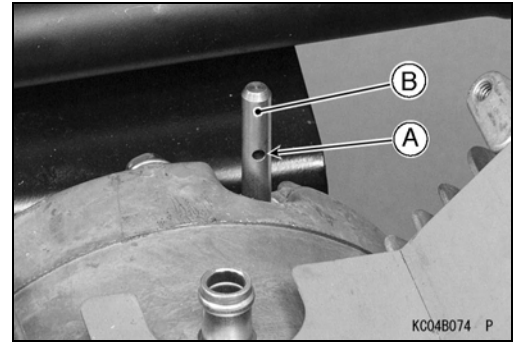

- Install the governor arm [A] onto the governor shaft [B] temporarily.
- Be sure the link spring [C] around the throttle link rod [D] is in place and that it pulls the governor arm and throttle lever [E] each other.
- Loosen the clamp nut [F] on the governor arm enough to move the governor shaft.
- Turn the top end of the governor arm counterclockwise to fully open the carburetor [G] throttle valve and hold it there.
- Using the jig pin [H], turn the governor shaft counterclockwise, fully turn the shaft to end of its travel.
- Tighten the clamp nut.


Torque - Governor Arm Clamp Nut: 7.8 N·m (0.80 kgf·m, 69 in·lb)

- Be sure the governor shaft extend from the governor arm is approximately 6.6 mm (0.26 in.) [I] as shown.
- Remove the jig pin.
- Install the control panel assembly (see Control Panel Assembly Installation).

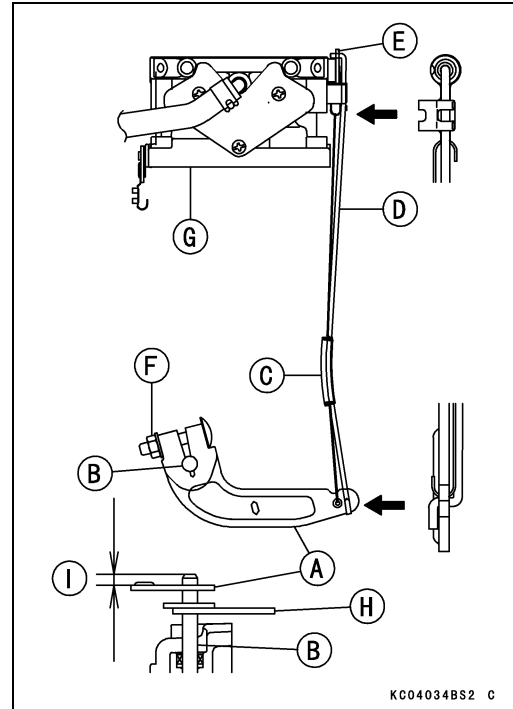

Governor Assembly Removal


- Remove:
 - Camshaft (see Camshaft, Tappet Removal in the Camshaft/Crankshaft chapter)
 - Washer [A]
 - Snap Ring [B]
 - Washer [C]
 - Sleeve [D]
 - Governor Plate [E]
 - Snap Ring [F]
 - Steel balls [G]
 - Ball Guide [H]
 - Ball Plate [I]

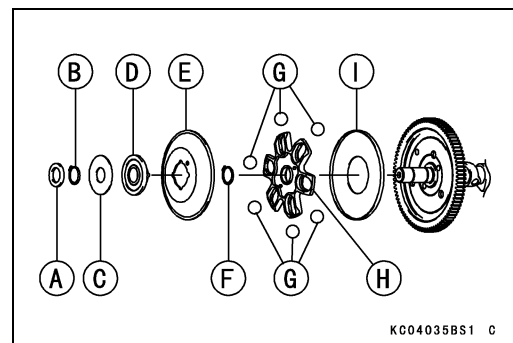

Governor Link Mechanism

Governor Assembly Installation

- Fit the snap rings [A] into the grooves securely.
- Spin the governor plate [B] by hand and check that the steel balls and governor plate operate freely.
- Install the camshaft (see Camshaft, Tappet Installation in the Camshaft/Crankshaft chapter).

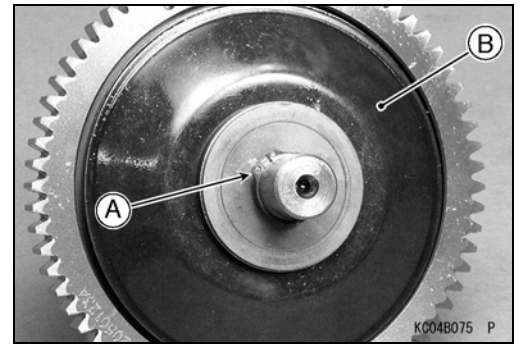

Governor Assembly Inspection


- Visually check all governor parts for wear and damage.
- ★ If any parts are worn or damaged, replace them.

Governor Shaft Removal


- Remove the crankcase cover (see Crankcase Cover Removal in the Camshaft/Crankcase chapter).
- Unscrew the governor shaft plate screws [A], and pull out the governor shaft [B] outside.

NOTE


○ It is not necessary to remove the governor shaft unless it is being replaced.

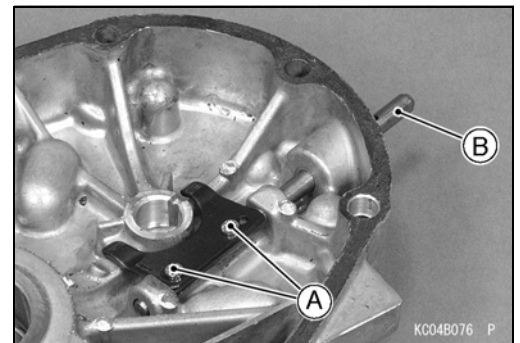

- Replace the oil seal [A] only if the lip shows signs of leakage or it has been damaged.

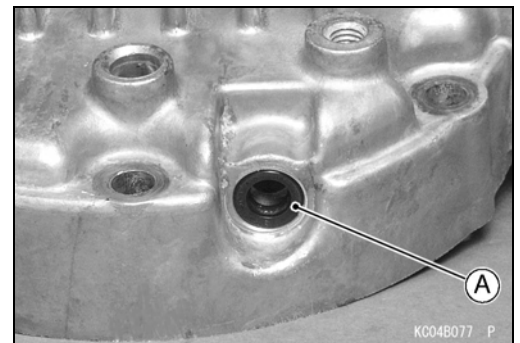

- When replacing the oil seal [A] of the governor shaft, note the following.
 - Install the oil seal into the crankcase cover [B] after the governor shaft is inserted in the cover, and so that the marks [C] face out.
 - The depth [D] is 0 ~ 2 mm (0 ~ 0.08 in.).

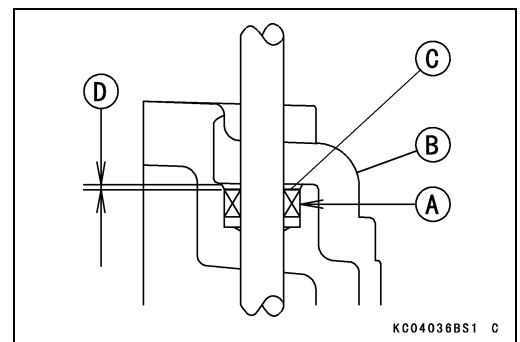

3-10 FUEL SYSTEM


Governor Link Mechanism

Governor Shaft Installation

- Apply engine oil to the governor shaft [A].
- Insert the governor shaft into the crankcase.
- Install the governor shaft plate [B] to the shaft as shown.
Torque - Governor Shaft Plate Screws: 2.0 N·m (0.20 kgf·m, 17 in·lb)
- Check that the governor shaft moves freely in its operating range.

NOTE


- *If the oil seal is removed, oil seal is put on after shaft is installed.*

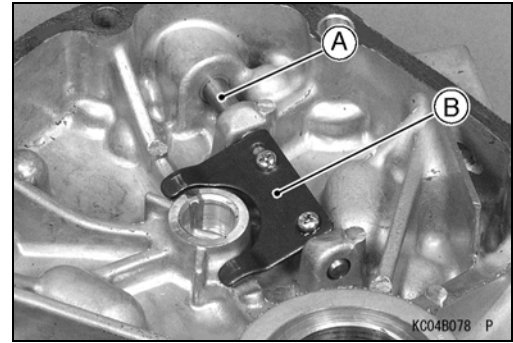

Carburetor

Fuel and Air Flow

The main system of the carburetor consists of the main jet [A], valve seat [B] main nozzle [C], and the main air passage [D] (main air orifice [E]). The main system meters fuel to the engine during moderate to heavy load conditions. Fuel flows through the main jet and into the main nozzle, where it is joined by air from the main air passage (main air orifice). The resulting mixture flows out the end of the main nozzle into the carburetor bore, where it is atomized by the high speed air flow, and carried into the engine.

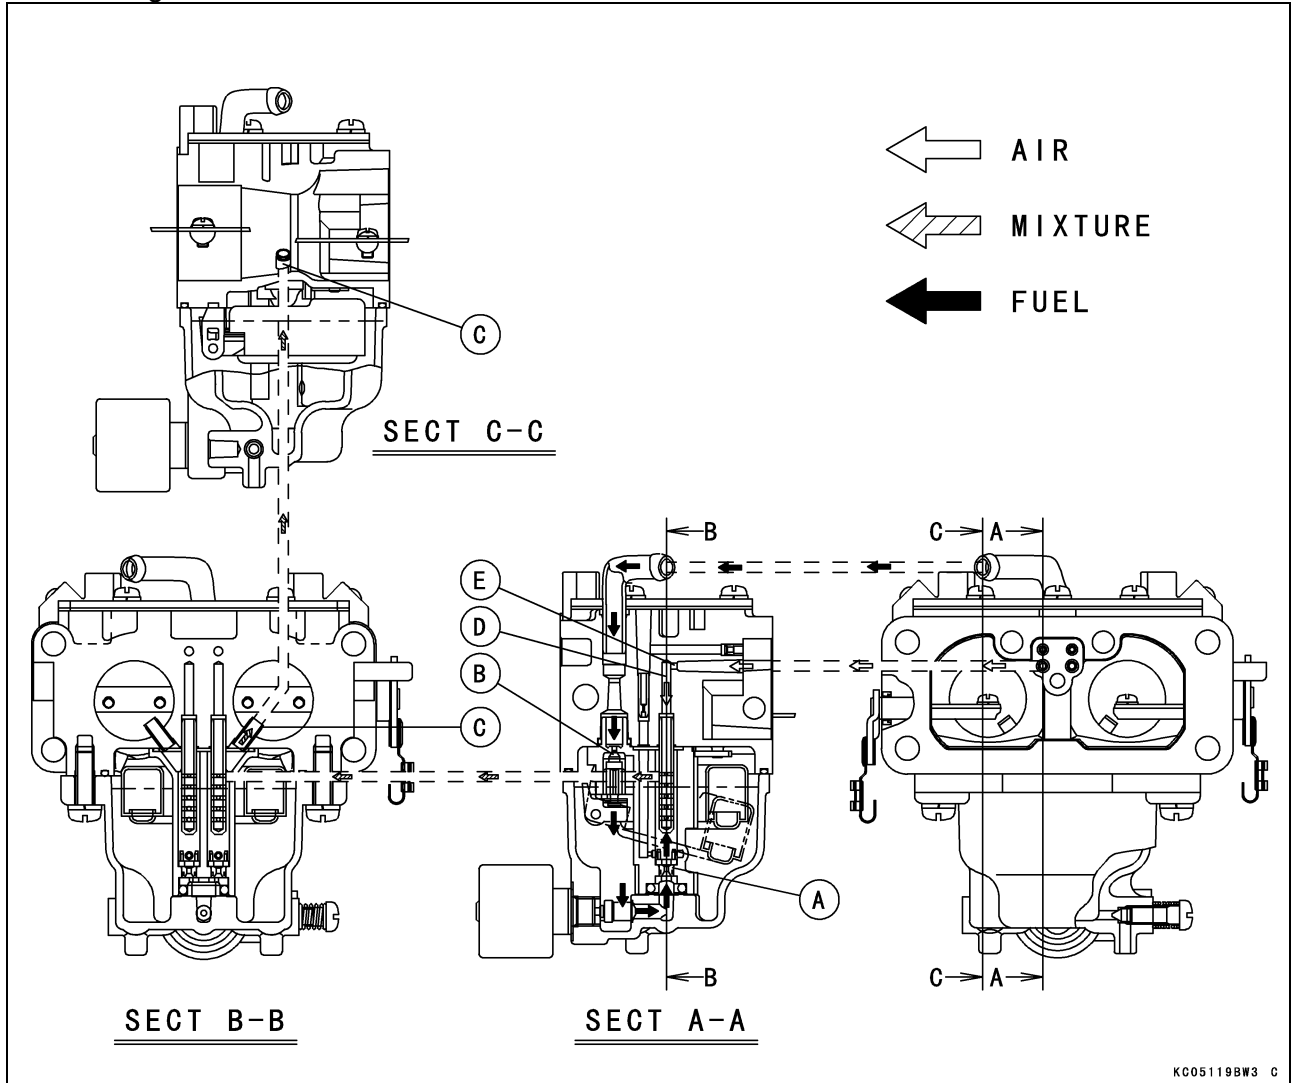


3-12 FUEL SYSTEM

Carburetor

The pilot system includes the pilot jet [F], pilot screw [G] (Idle mixture screw), pilot air jet [H], pilot outlet [I], and the bypass holes [J]. The pilot system meters the fuel/air mixture while the engine is idling and running under a light load. Under these conditions there is very little air flow through the carburetor bore; so little that it is not enough to draw fuel through the main system of the carburetor and atomize it. Instead, the fuel is drawn through the pilot system, since the nearly closed throttle valve [K] causes high speed air flow past the pilot outlet and bypass holes (even at low engine speed).

Fuel flow in the pilot system is metered by the pilot jet. Air for better atomization is admitted via the pilot air jet in the mouth of the carburetor. The fuel/air mixture passes into the bore of the carburetor side stream of the throttle valve through the bypass holes and pilot outlet. While the throttle valve is almost closed, it covers the small bypass holes opening into the bore from the pilot system. As the throttle valve begins to open, it uncovers the bypass holes, allowing more fuel/air mixture to flow. The extra flow is needed because the engine starts to run faster as the throttle is opened. The pilot screw controls the amount of fuel/air mixture allowed through the pilot outlet, but does not meter the bypass holes. A moderate amount of air comes in around the throttle valve at an idle, so adjusting the pilot screw changes the fuel/air ratio. Turning the pilot screw (Idle mixture screw) out (Counterclockwise) enriches the mixture; turning it in (clockwise) leans the mixture.

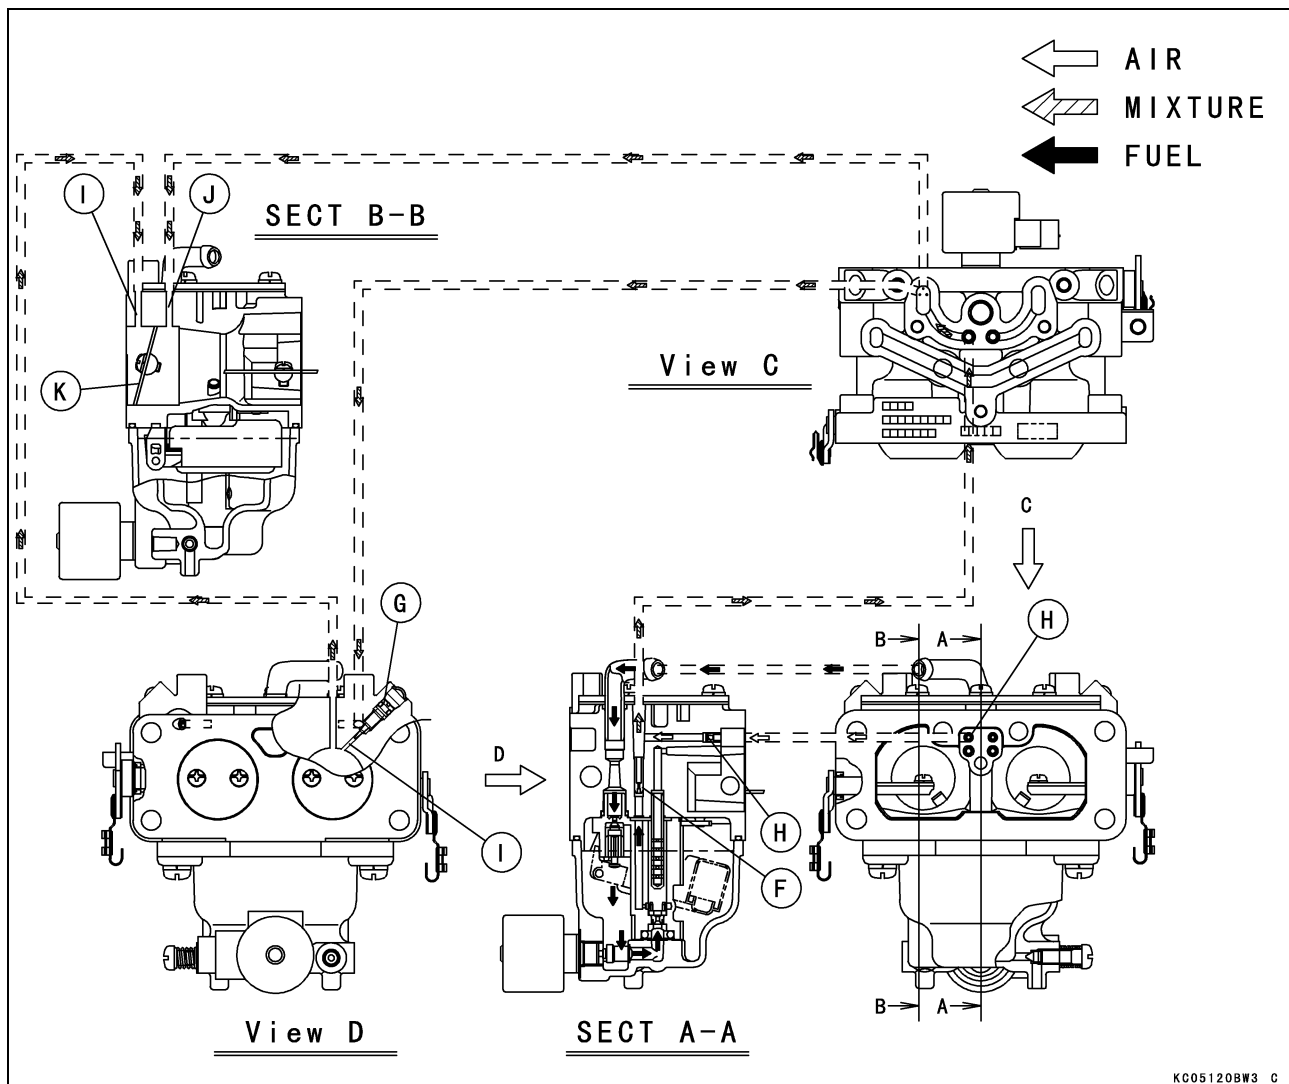


Carburetor

Fuel Shut Off Solenoid Valve

To avoid after firing when stopping the engine, a solenoid actuated fuel shut off solenoid valve [A] is installed in the carburetor bowl. The valve shuts off the fuel supply to the main jet [B] simultaneously when the switch key turned to the "OFF" position.

The valve opens automatically when the switch key is turned to the "Run" position.

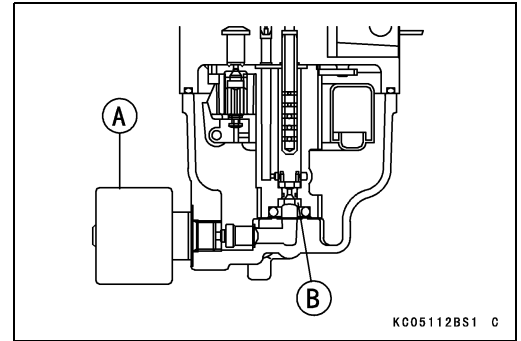

Low Idle Speed Adjustment

- Refer to the low Idle Speed Adjustment in the Periodic Maintenance chapter.

High Idle Speed Adjustment

- Refer to the High Idle Speed Adjustment in the Periodic Maintenance chapter.

High Altitude Operation

At high altitude, the standard carburetor air-fuel mixture will be excessively rich. Performance will decrease, and fuel consumption will increase. High altitude performance can be improved by installing a smaller diameter main-jet in the carburetor and correct idle speed.

NOTE

- *The main jet high altitude kits are available if the equipment is to be used in the high altitudes. The main jet numbers are stamped on ends of the main jets.*

High Altitude Main Jet



Altitude	Main Jet No.	
	L:	R:
0 ~ 1 000 m (0 ~ 3 000 ft)	L: #122	R: #124
1 000 ~ 2 000 m (3 000 ~ 6 000 ft)	L:	R:
2 000 m (6 000 ft) and higher	L:	R:

3-14 FUEL SYSTEM


Carburetor

Main Jet Replacement


- Place the engine (equipment) on a level surface.
- Close the fuel shut off valve in the equipment.
- Remove the carburetor (see Carburetor Removal).
- Drain the fuel in the carburetor completely by unscrewing the drain screw at the bottom of the float chamber (see Fuel System Cleanliness Inspection in the Periodic Maintenance chapter).
- Unscrew the chamber screws [A] and take off the float chamber [B].
- Remove the float assembly [A] from the float chamber.

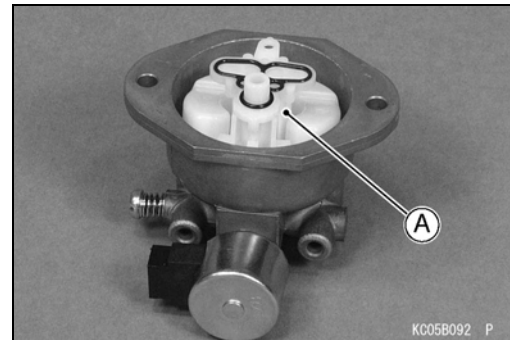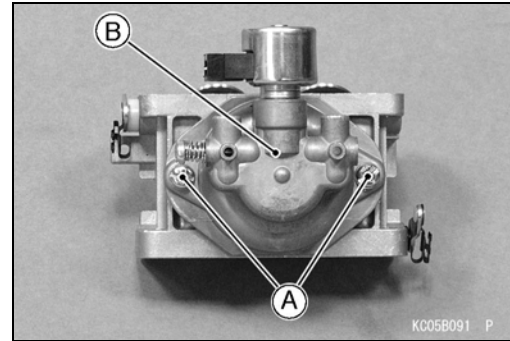

- Remove:
 - Pin [A]
 - Float [B]
 - Float Valve [C]
 - Spacer [D]
 - O-ring [E]

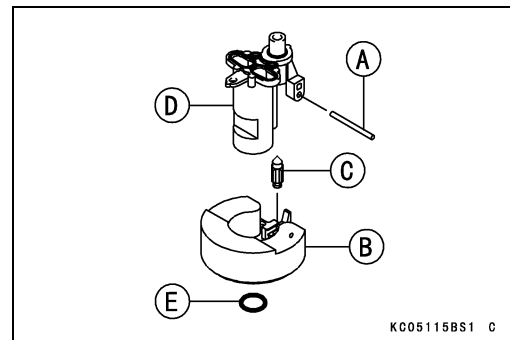


- Use the rod to push the main jet "L" [A] and "R" [B] out from the bottom side of the spacer [C].

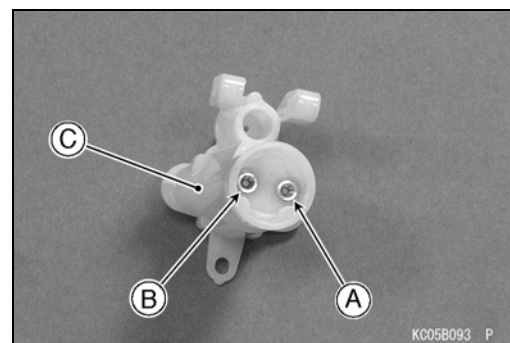

Carburetor

- Replace the main jet [A] with a new one for altitude expected (see High Altitude Operation).
- Install the new O-ring [B] to the main jet.
- Using the rod [C], press the main jet until they are bottomed to the spacer [D].
- The depth [E] is about 30.8 mm (1.21 in.).
- Assemble the carburetor (see Carburetor Disassembly/Assembly).

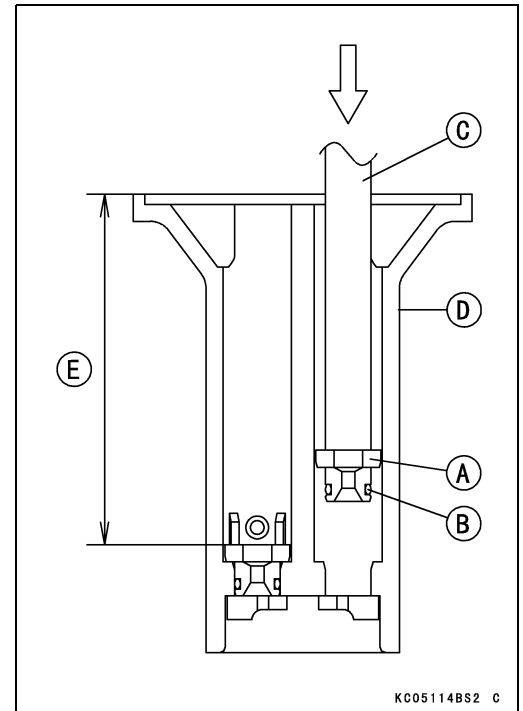

Fuel System Cleanliness Inspection


- Refer to the Fuel System Cleanliness Inspection in the Periodic Maintenance.

Carburetor Removal

⚠ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.


- Remove the air cleaner (see Cleaner Body Removal).
- Turn the fuel shut off valve to the OFF position.
- Disconnect the fuel tube [A] and breather tube [B].
- Remove:
 - Carburetor Mounting Nuts [C]
 - Earth Terminal [D]

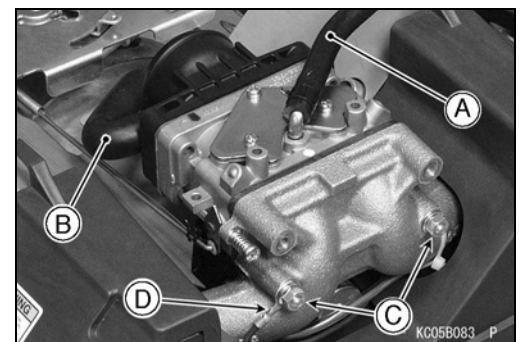


3-16 FUEL SYSTEM

Carburetor


- Unhook the throttle link spring [A] at the throttle shaft lever [B] clip end with a long nose plier.
- Unhook the throttle link rod [C] from the throttle shaft lever.

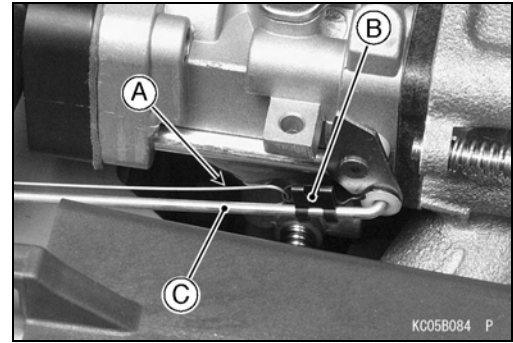


- Unhook the choke link rod [A] from the choke shaft lever [B].

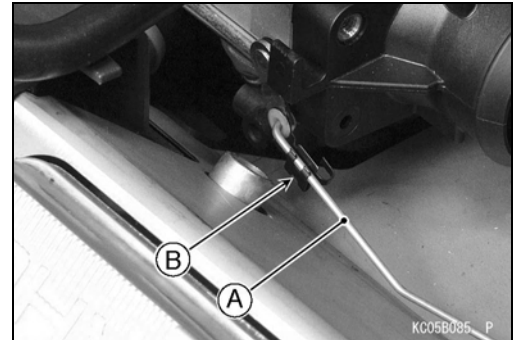

- Insert the bolts ($\phi 6$ mm, L = 105 mm, $\phi 0.2$ in. L = 4.13 in.) [A] into the air cleaner body bracket bolt holes.
- Remove the inlet pipe [B].

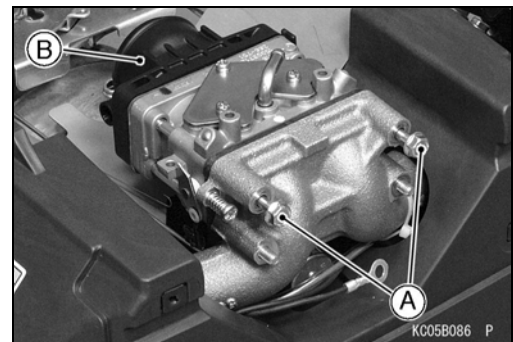


- Take off the carburetor [A] and insulator [B] to the upward while pulling out the bolts.
- Disconnect the solenoid valve connector [C].

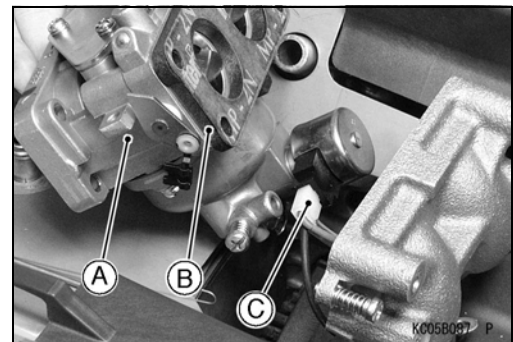

Carburetor

Carburetor Installation

- Clean the mating surface of the carburetor and inlet manifold.
- Replace the gaskets [A] with new ones.
- Connect the solenoid valve connector.
- Install the insulator [B], carburetor [C], inlet pipe [D] and new gaskets sequence as shown.
- Silicone bead [E] side of the inlet pipe gasket face the inlet pipe.
- Install the earth terminal [F] and washer [G].
- Tighten:
 - Torque - Carburetor Mounting Nuts [H]: 6.9 N·m (0.70 kgf·m, 61in·lb)**

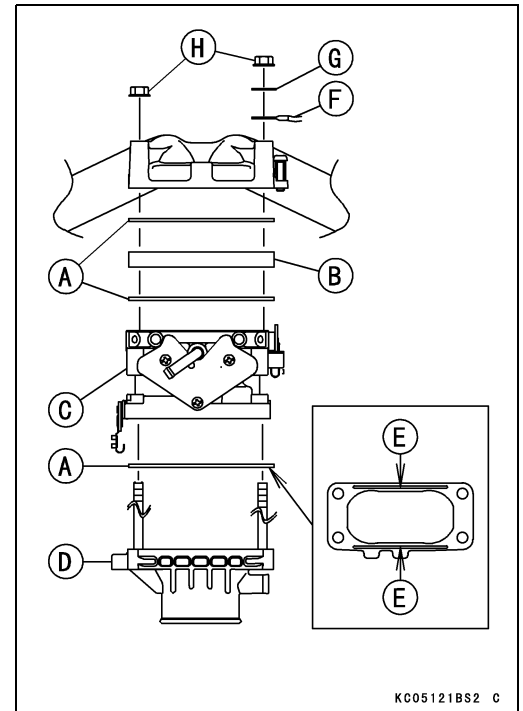


- Install the throttle link rod [A] and spring [B] to the throttle shift lever [C].
- Install the choke link rod [D] to the choke shift lever [E].

NOTE

○ Take care not to bend the throttle and choke link rods during installation.

- Install the fuel tube [F] and breather tube [G].
- Install the air cleaner (see Cleaner Body Installation).
- After installation, adjust the idle speed (see Low/High Idle Speed Adjustment in the Periodic Maintenance chapter).

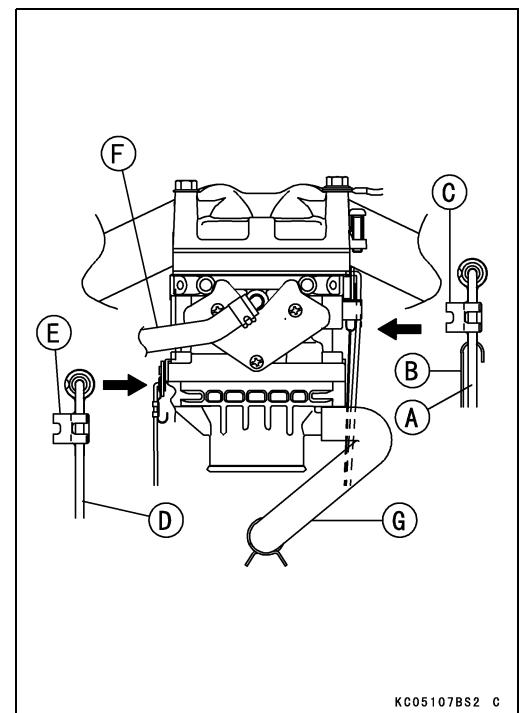


3-18 FUEL SYSTEM

Carburetor


Carburetor Disassembly/Assembly

- Refer to the illustration shown for disassembly and assembly.
- There are several passage plugs (Ball plugs) in the carburetor body. Do not remove.
- Before disassembly, mark the outside of choke valve and throttle valves for assembling them.

- | | |
|---------------------|--------------------|
| 1. Pilot Screw Plug | 16. Main Jet (R) |
| 2. Pilot Screw | 17. O-rings |
| 3. Screws | 18. Gasket |
| 4. Cover Plate | 19. O-ring |
| 5. Gasket | 20. Spacer |
| 6. Screws | 21. Pin |
| 7. Choke Valve | 22. Float Valve |
| 8. Choke Shaft | 23. Float |
| 9. Seal | 24. O-ring |
| 10. Screws | 25. Gasket |
| 11. Throttle Valve | 26. Screws |
| 12. Throttle Shaft | 27. Gasket |
| 13. Collar | 28. Solenoid Valve |
| 14. Seal | 29. Spring |
| 15. Main Jet (L) | 30. Drain Screw |

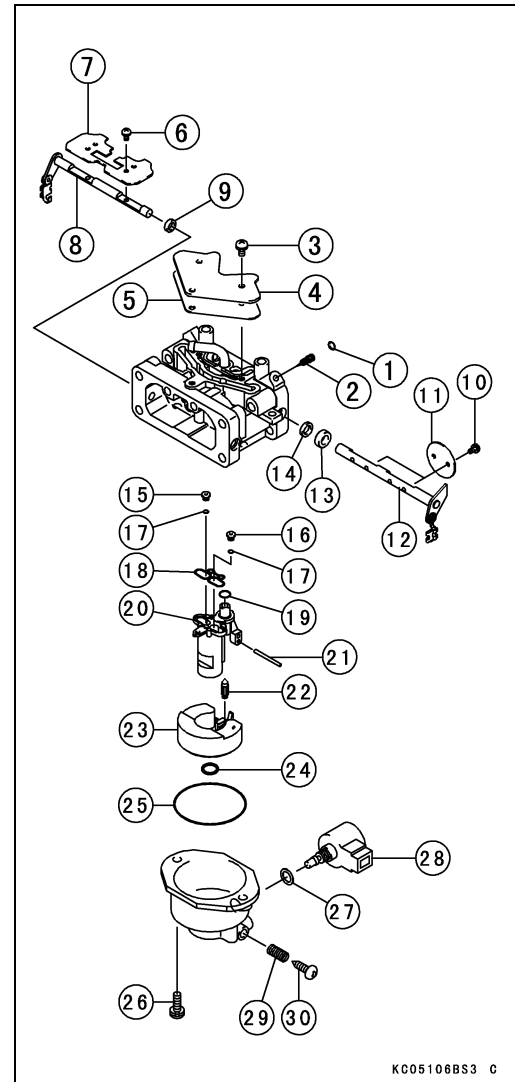

- Replace the pilot screw [A] in accordance with the following procedure if necessary.
- Remove the pilot screw plug [B] (material: Stainless steel) as follows: Punch a hole in the plug and pry it out with an awl or other suitable tool.
- Turn in the pilot screw and count the number of turns until it seats fully but not tightly, and then remove the screw. This is to set the screw to its original position when assembling.
- Turn in the new pilot screw fully but not tightly, and then back it out the same number of turns counted during disassembly.
- Install a new pilot screw plug in the pilot screw hole by pressing with the rod [C], and apply a small amount of a bonding agent [D] to the circumference of the plug to fix the plug.

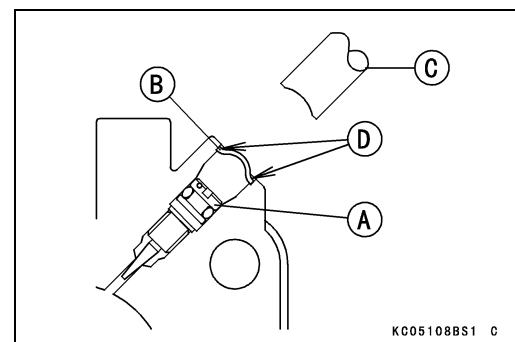

Carburetor

- When assemble the carburetor, note the following
- Apply engine oil (SAE30 equivalent) to the seals of the choke and throttle shaft.
- Install the choke valve and throttle valve on the shaft as the out side mark of them facing out side, and apply a small amount of a bonding agent to the valve screw threads.

CAUTION

Do not apply too much bonding agent to the valve screws itself or they may be fixed.

- Fit the stopper of the carburetor body into the hole in the spacer.
- Assemble the carburetor parts with recommended tightening torque (see Exploded View).

Carburetor Cleaning

WARNING

Clean the carburetor in a well-ventilated area, and take care that there is no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents to clean the carburetors.

CAUTION

Do not use compressed air on an assembled carburetor, or the floats may be crushed by the pressure. Remove as many rubber or plastic parts from the carburetor as possible before cleaning the carburetor with a cleaning solution. This will prevent damage to or deterioration of the parts.

The carburetor body has plastic parts that cannot be removed. Do not use a strong carburetor cleaning solution which could attack these parts; instead, use a mild high flash-point cleaning solution safe for plastic parts.

Do not use wire or any other hard instrument to clean carburetor parts, especially jets, as they may be damaged.

- Disassemble the carburetor (see Carburetor Disassembly/Assembly).
- Immerse all the metal parts in a carburetor cleaning solution.
- Rinse the parts in water and dry them with compressed air.
- Do not use rags or paper to dry parts. Lint may plug the holes or passages.
- Blow air through the holes and fuel passages with the compressed air. All holes must be open.
- Assemble the carburetor (see Carburetor Disassembly/Assembly).

3-20 FUEL SYSTEM

Carburetor

Carburetor Inspection

⚠ WARNING



Gasoline is extremely flammable and can be explosive under certain. Turn the ignition switch OFF. Do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Inspect the carburetor body for damage. Flange sealing surfaces should be smooth and free of burns and nicks.
 - ★ Replace the gasket if necessary.
 - Turn the throttle and choke shafts to check that the throttle and choke butterfly valves move smoothly.
 - ★ If the valves do not move smoothly, replace the carburetor body and/or throttle shaft and choke shaft assembly.
 - Check that the gasket on the carburetor body.
 - ★ If the gasket is not in good condition, replace it.
 - Check the other parts of the carburetor for wear or damage.
 - ★ Replace the part if necessary.
- Clean and check the float level as follows.

CAUTION


Do not push down on the float during float level checking.

- With the float assembly [A] installed onto the carburetor body [B], hold the carburetor upside down at eye level. Gently support the float with a finger and bring it down slowly so that the float arm tab [C] just touches the float valve [D]. The float lower surface [E] should be parallel with the carburetor body mating surfaces [F].
 - ★ If the float position is not correct, replace it.
- Inspect the float valve for excessive wear or damage. The tip should be smooth, without any grooves, scratches, or tears. The rod at the other end of the needle should move smoothly when push in and released.
- A: Good
B: Not Good
- ★ If either the needle or the seat is worn or damaged, replace the float assembly and carburetor body as a set.

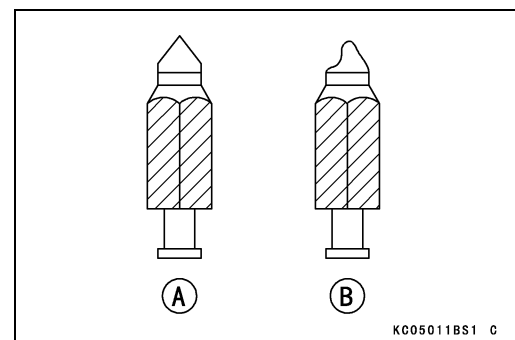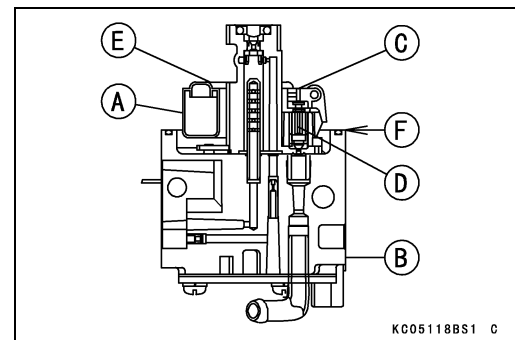

Carburetor

- Inspect the tapered portion [A] of the pilot screw [B] for wear or damage.
- ★ If the pilot screw is worn or damaged on the taper portion, replace it.

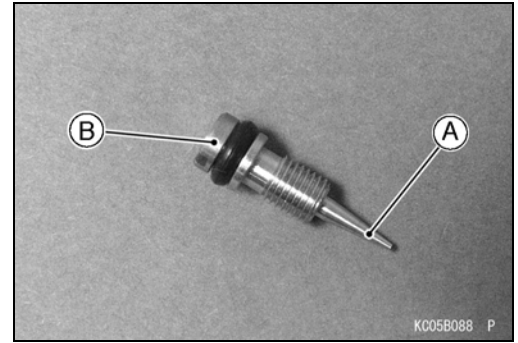

Fuel Shut-Off Solenoid Valve Test


- Remove the solenoid valve [A] (see Carburetor Disassembly/Assembly)
- Connect a DC 12 V source to the solenoid valve as shown.
- ★ If the actuate solenoid plunger (Needle Valve) does not pop in when the Test Voltage is applied, replace it.

NOTE

○ If may be necessary to push the plunger slightly for the plunger to withdraw.

- Install a new gasket and solenoid valve.

Torque - Solenoid Valve: 12 N·m (1.2 kgf·m, 106 in·lb)

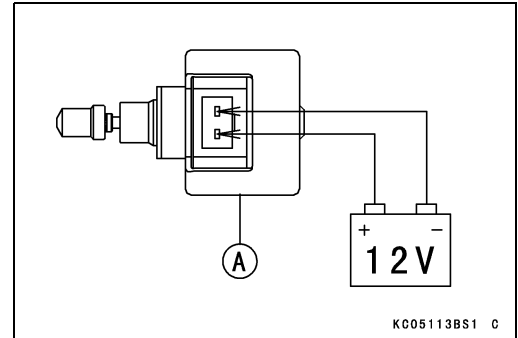


3-22 FUEL SYSTEM

Inlet Manifold


Inlet Manifold Removal

- Remove:
 - Fan Housing (see Flywheel Removal in the Electrical System chapter)
 - Carburetor (see Carburetor Removal)
- Cut off the bands [A] holding the wire lead and/or harness for the inlet manifold [B].
- Remove:
 - Inlet Manifold Mounting Bolts [C]
 - Inlet Manifold

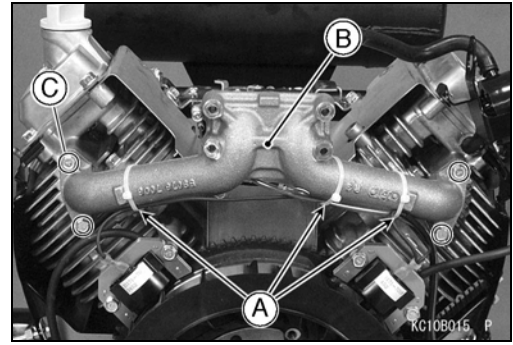


Inlet Manifold Installation

- Replace the inlet manifold gaskets [A] with new ones.
- Clean the mating surfaces of the cylinders and Inlet manifolds [B] and fit a new gaskets direction as shown.
 - 12 mm (0.47 in.) [C]
- Tighten:
 - Torque - Inlet Manifold Mounting Bolts: 6.9 N·m (0.70 kgf·m, 61 in·lb)**

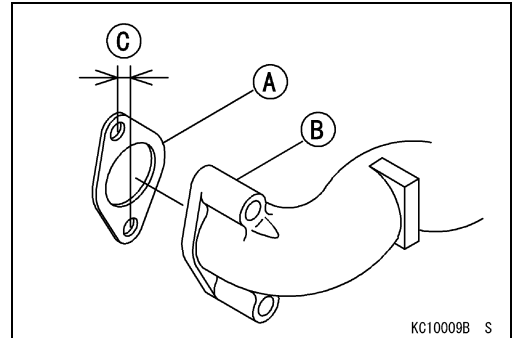

- Fix the wire lead [A] and the harness [B] to the inlet manifold [C] with bands [D].
- Position the wire lead and/or harness on top of the manifold as shown.
- Cut excess the band off.
- Install the removed parts (see appropriate chapters).

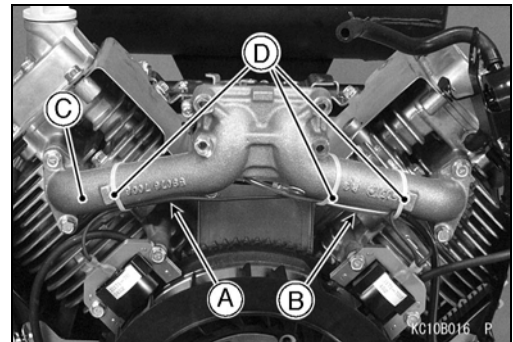

Inlet Manifold Inspection


- Inspect the intake manifold for cracks or porous casting.
- Cracks not visible to the eye may be detected by using a metal crack detection system. (Visual color check: commonly found at automotive parts store.)
- ★ If a crack is present in the intake manifold, replace it.
- Inspect the gasket surfaces for burns and nicks.

Fuel Pump, Fuel Filter

The fuel pump cannot be disassembled, if any damage for the pump is noticed replace it with a new one.

Fuel Pump Inspection

- Check the vent holes [A] and filter [B] for plugging or clogging.
- ★ If vent hole and filter are plugged or clogged, remove the foreign matter from them.

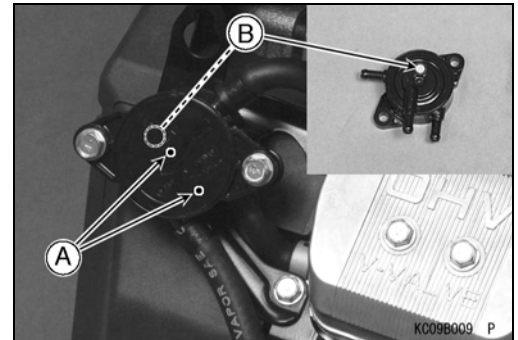


Fuel Flow Test

⚠ WARNING


Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Disconnect the fuel pump outlet nozzle from the tube.
- Connect a suitable hose [A] to the outlet nozzle.
- Run the lower end of the hose into a container [B].
- Start the engine, Check the fuel flow.
- ★ If fuel flow is none or little, replace the fuel pump.
- ★ Check for clogged or damaged tubes and fuel filter. Replace the faulty parts.

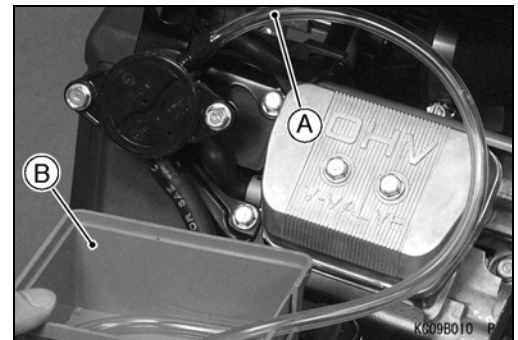

Fuel Filter Inspection

- Visually inspect the fuel filter [A].
- ★ If the filter is clear with no signs of dirt or other contamination, it is OK and need not be replaced.
- ★ If the filter is dark or looks dirty, replace with a new one. Also check the rest of the fuel system for contamination.

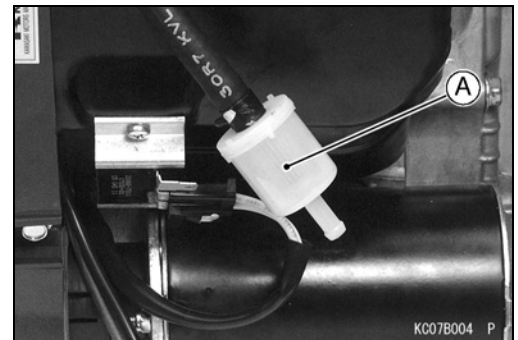


3-24 FUEL SYSTEM


Air Cleaner

Element Removal

- Unhook the two clips [A] and remove the cap [B] from the air cleaner body.

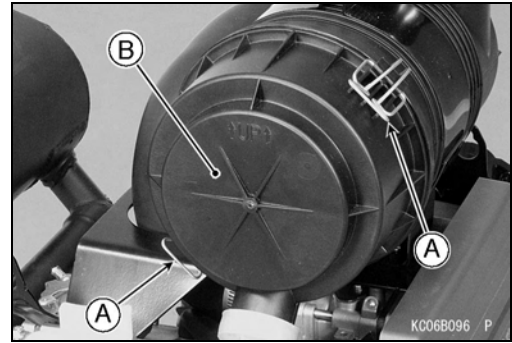


- Remove:
 - Primary Element [A]
 - Secondary Element [B]

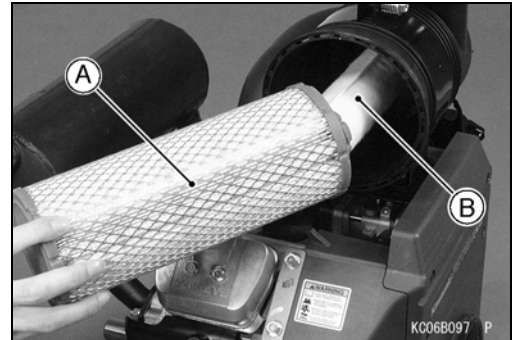

Element Installation

- Slide the secondary element and primary element into place in the air cleaner body.
- Install the cap [A] direction as shown.
 - Mark [B]
 - Upside [C]
- Fasten the two clips [D].

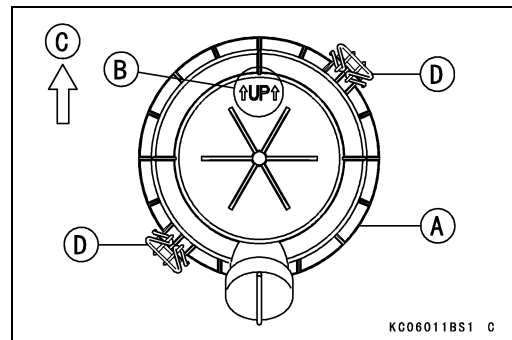


Element Cleaning and Inspection

- Refer to the Element Cleaning and Inspection in the Periodic Maintenance chapter.


Cleaner Body Removal

- Remove the elements (see Element Removal).
- Loosen the clamps [A], and remove the inlet hose [B].

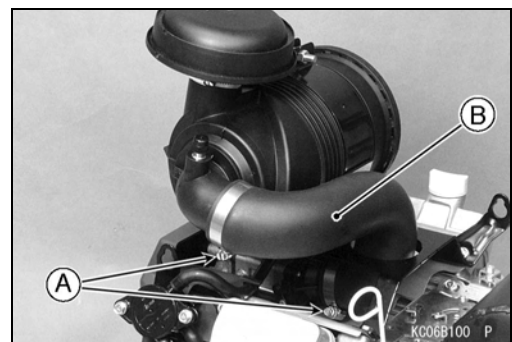

Air Cleaner


- Remove the bolt [A].
- Take out the air cleaner body [B] from the left side.

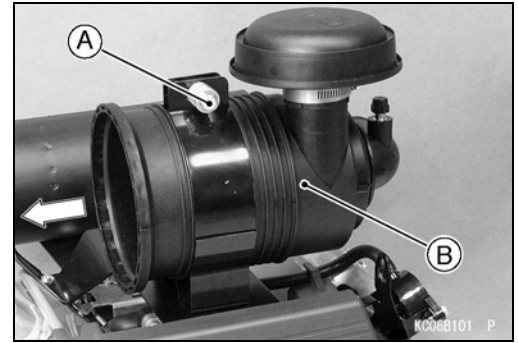

- Remove:
Screws [A]
Fan Housing Cover [B]




- Remove:
Air Cleaner Body Bracket Bolts [A]
Air Cleaner Body Bracket [B]

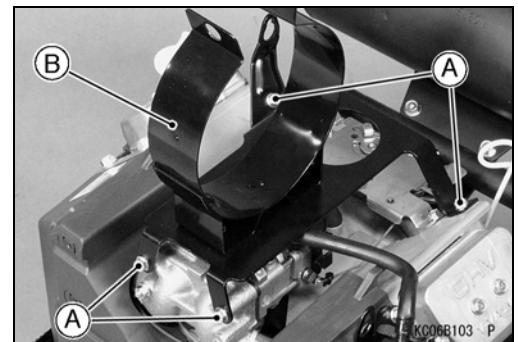

Cleaner Body Installation


- Install the air cleaner body bracket and fan housing cover.
Torque - Air Cleaner Body Bracket Bolts: 5.9 N·m (0.60 kgf·m, 52 in·lb)
Fan Housing Cover Screws: 2.0 N·m (0.20 kgf·m, 18 in·lb)
- Set the air cleaner body [A] onto the bracket so that the air inlet duct [B] is facing upward.
- Install the inlet hose [C], and position the clamps [D] pinch heads as shown.
45° [E]

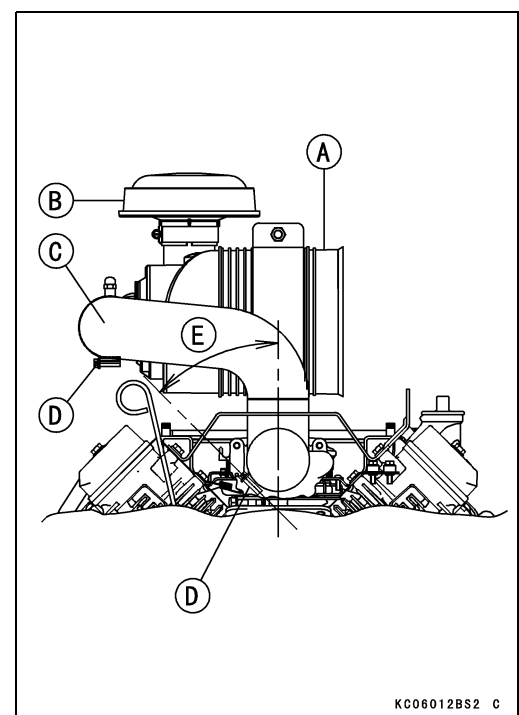

3-26 FUEL SYSTEM

Air Cleaner

- Install the air cleaner body clamp bolt [A] as shown and tighten it.
 - Collar [B]
 - Spring [C]
 - Nut [D]
- Install the elements (see Element Installation).

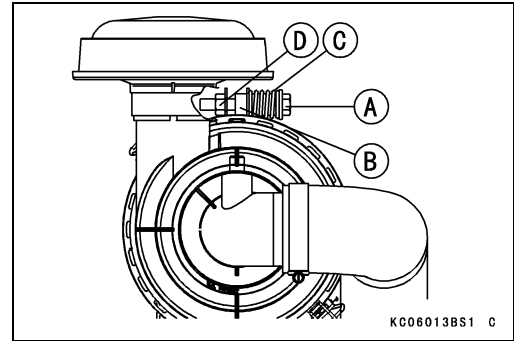

Housing (Cap and Body) Inspection

- Refer to the Housing (Cap and Body) Inspection in the Periodic Maintenance chapter.


Cooling System

Table of Contents

Exploded View	4-2
Cooling Fan	4-4
Cooling Fan Removal	4-4
Cooling Fan Installation	4-4
Cooling Fan Inspection	4-4
Screen Clearance Adjustment	4-4

4-2 COOLING SYSTEM

Exploded View

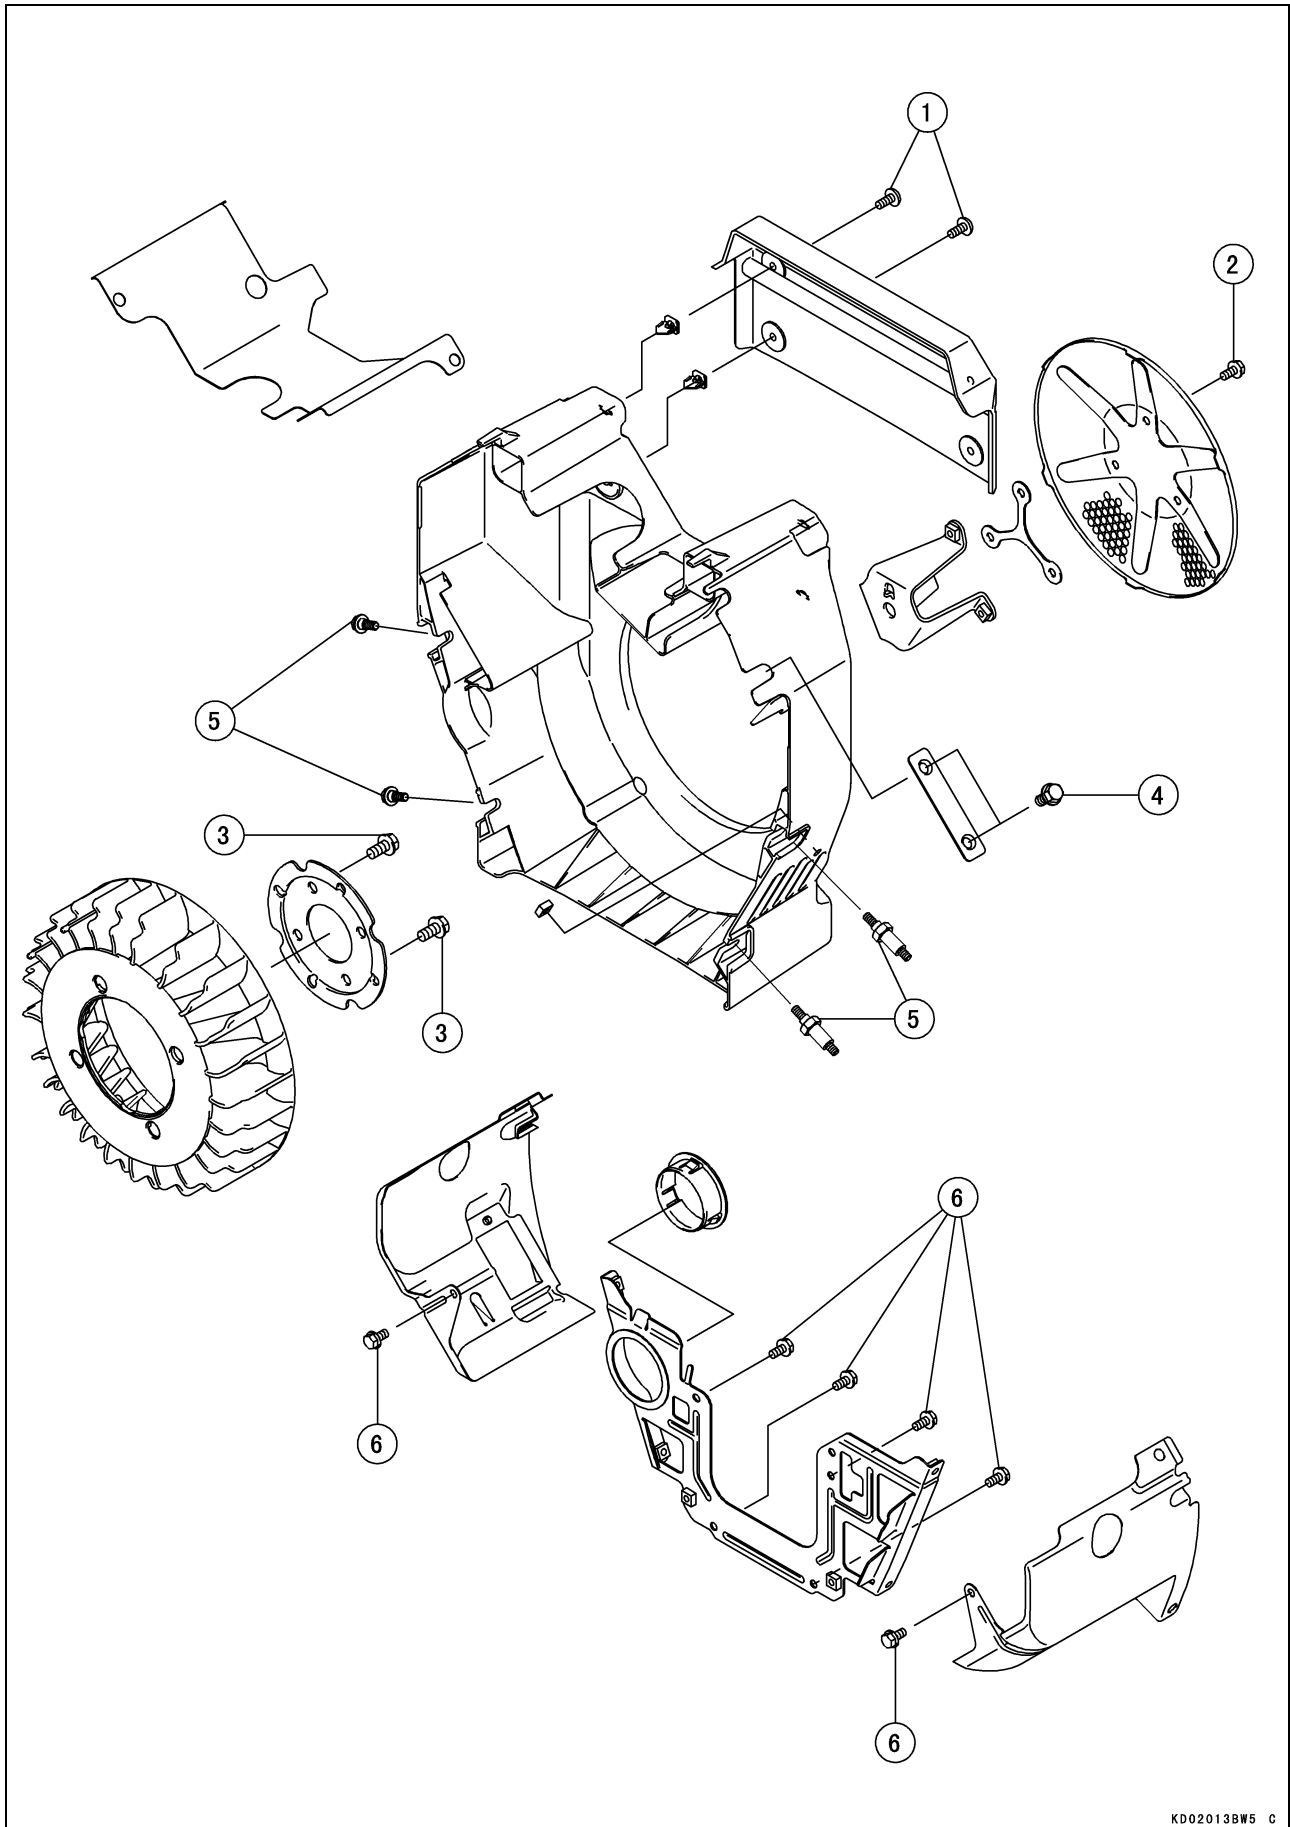

KD02013BW5 C

Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Fan Housing Cover Screws	2.0	0.20	18 in·lb	
2	Screen Bolts	5.9	0.60	52 in·lb	
3	Fan Bolts	16	1.6	12	
4	Fan Housing Bolts (Upper)	6.9	0.70	61 in·lb	
5	Fan Housing Bolts (Lower)	5.9	0.60	52 in·lb	
6	Engine Shroud Bolts	5.9	0.60	52 in·lb	

4-4 COOLING SYSTEM

Cooling Fan

Cooling Fan Removal


- Refer to the Flywheel Removal in the Electrical System chapter.

Cooling Fan Installation

- Refer to the Flywheel Installation in the Electrical System chapter.

Cooling Fan Inspection

- Visually inspect the blades [A] in the cooling fan [B].
- ★ If there are any cracks, warps or damaged, replace the cooling fan.
- ★ If any mud or dust has stuck to the cooling fan, clean it.
- Cooling fan is cleaned by washing in detergent and water.

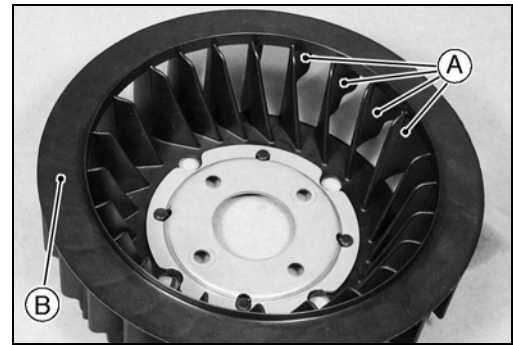

CAUTION


Do not clean the cooling fan in oil solvent. It may be damaged by oil solvent.

Screen Clearance Adjustment


- Check the clearance between the screen [A] and fan housing [B]. If the clearance is less than 1 mm, add the proper number of spacer [C] between the screen and bracket comp [D] to adjust the clearance [F] 1 ~ 3 mm.

E: Screws

F: Clearance 1 ~ 3 mm

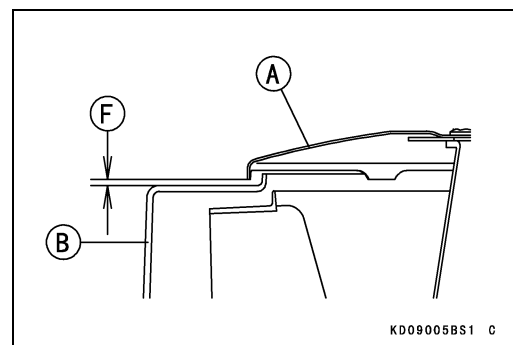

KD09005BS1 C

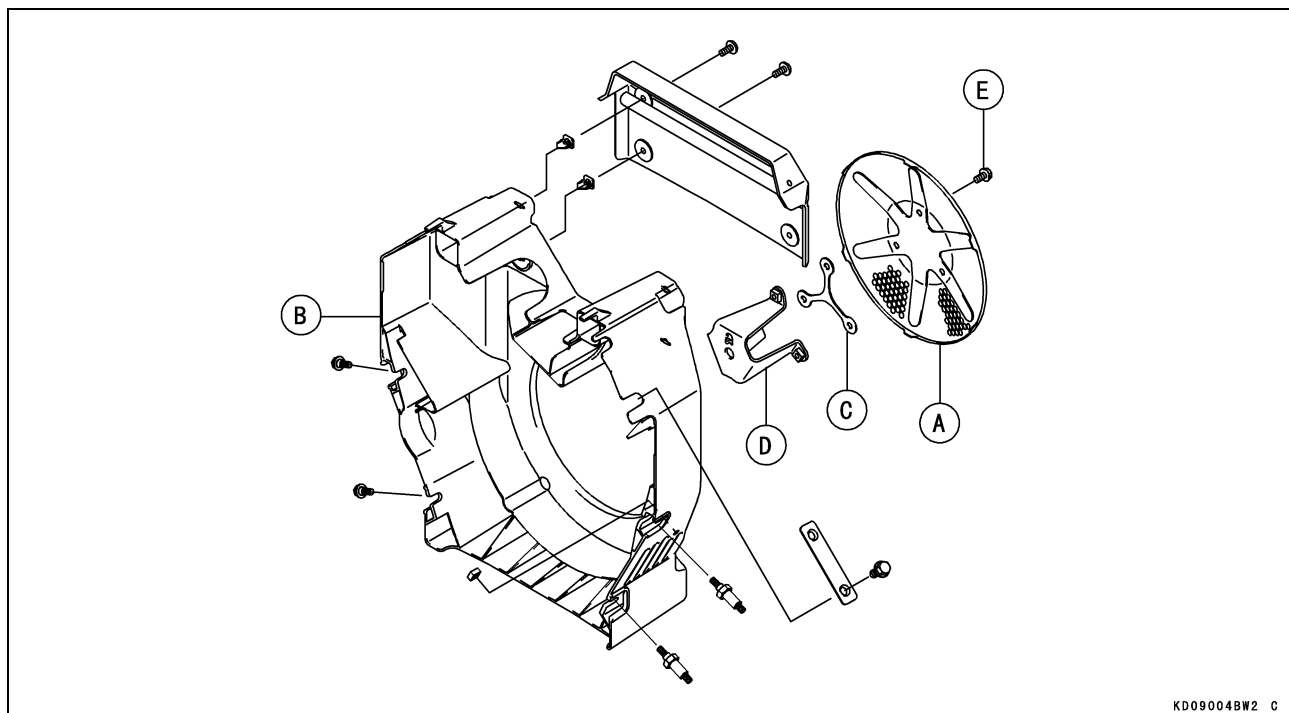

KD09004BW2 C


Engine Top End

Table of Contents

Exploded View	5-2
Specifications	5-8
Special Tools	5-10
Cylinder Head	5-11
Compression Measurement	5-11
Cylinder Head Assembly Removal	5-12
Cylinder Head Assembly Installation	5-13
Push Rod Removal	5-13
Push Rod Installation	5-14
Push Rod Inspection	5-14
Valve Mechanism Removal/Installation	5-14
Cylinder Head Cleaning and Inspection	5-15
Rocker Arm Inspection	5-15
Valves	5-16
Valve Clearance Inspection	5-16
Valve Clearance Adjustment	5-16
Valve Seat Inspection	5-16
Valve Seat Repair	5-16
Valve Head Thickness	5-16
Valve Stem Runout	5-16
Valve Stem Diameter	5-16
Valve Guide Inside Diameter	5-17
Valve Spring Inspection	5-17
Cylinder, Piston	5-18
Piston Removal	5-18
Piston Installation	5-19
Piston/Cylinder Seizure	5-21
Piston Cleaning	5-21
Piston Ring and Ring Groove Wear	5-21
Piston Ring End Gap	5-22
Piston Pin, Piston Pin Hole, and Connecting Rod Wear	5-22
Piston Diameter	5-23
Cylinder Inside Diameter	5-23
Cylinder Boring and Honing	5-24
Muffler	5-26
Muffler Removal	5-26
Muffler Installation	5-26
Inspection	5-26

5-2 ENGINE TOP END

Exploded View

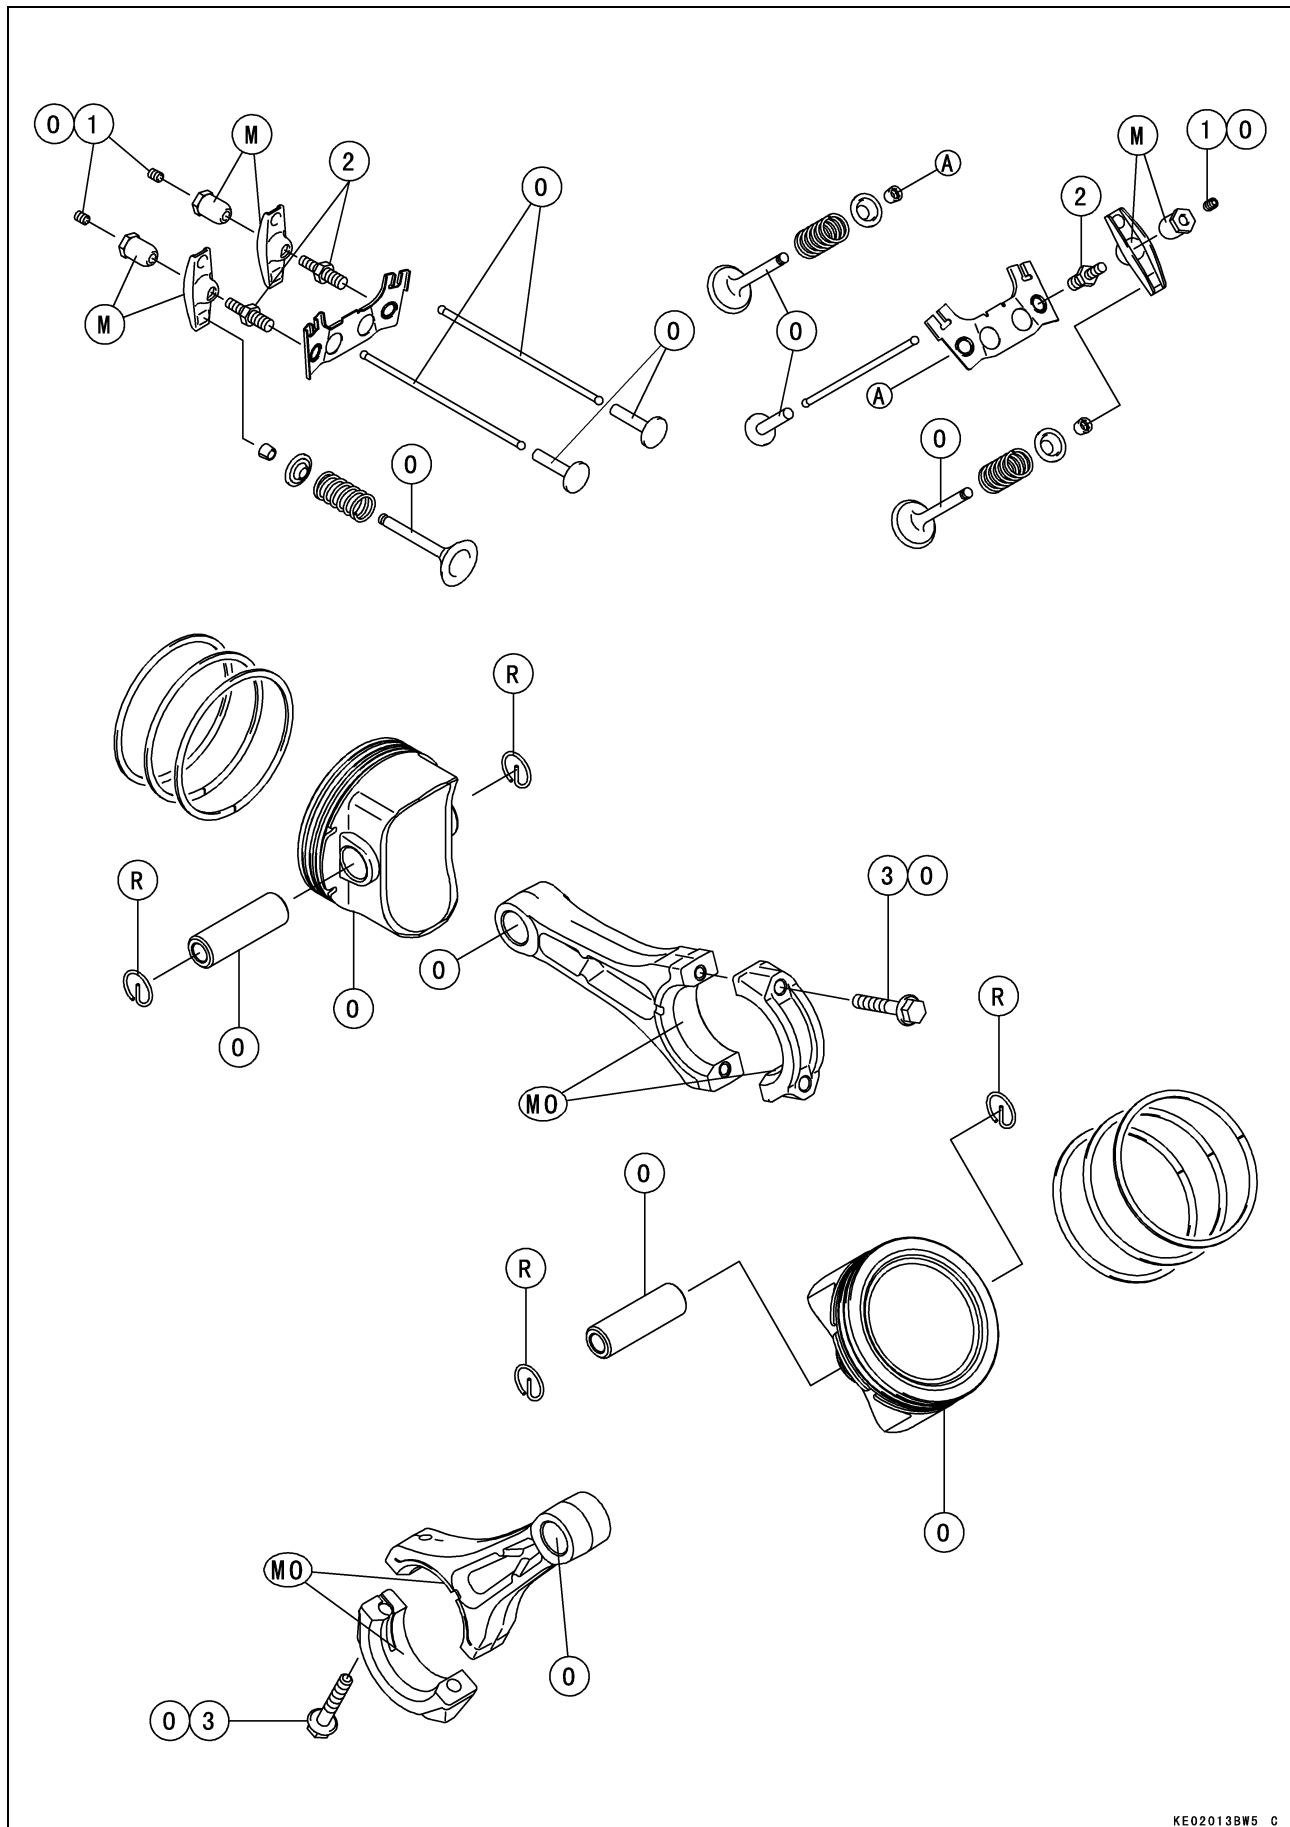

KE02013BW5 C

Exploded View

No.	Item	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Valve Clearance Lock Screws	6.9	0.70	61 in·lb	O
2	Rocker Arm Bolts	28	2.8	21	
3	Connecting Rod Big End Cap Bolts	9.8	1.0	87 in·lb	O

MO: Apply molybdenum disulfide oil solution.


(mixture of the engine oil and molybdenum disulfide grease in a weight ratio 10 : 1)

O: Apply engine oil.

R: Replacement Parts

5-4 ENGINE TOP END

Exploded View

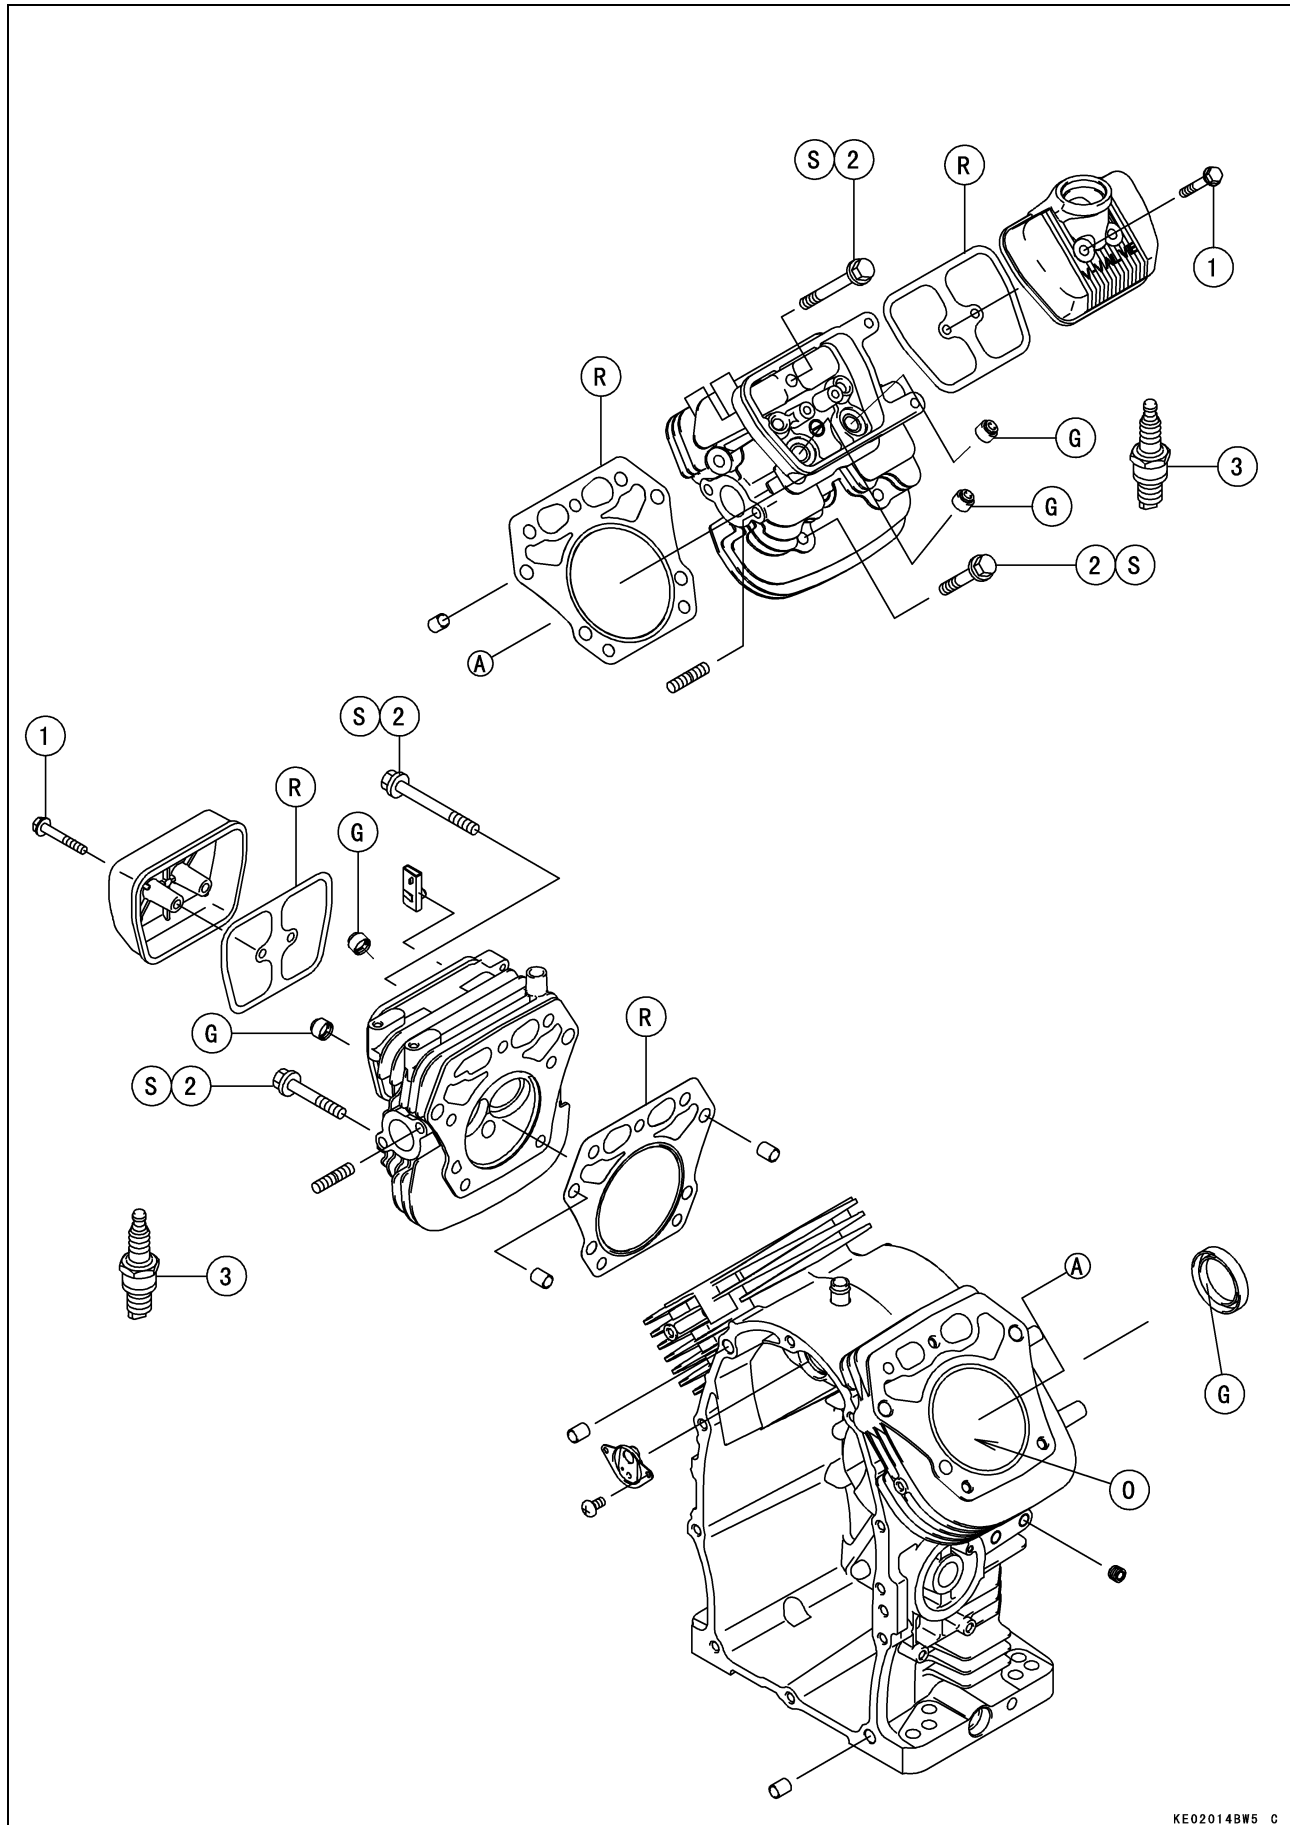

Exploded View

No.	Item	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Rocker Cover Mounting Bolts	6.9	0.70	61 in·lb	
2	Cylinder Head Bolts	32	3.3	24	S
3	Spark Plugs	22	2.2	16	

G: Apply grease.


O: Apply engine oil.

R: Replacement Parts

S: Follow the specific tightening sequence.

5-6 ENGINE TOP END

Exploded View

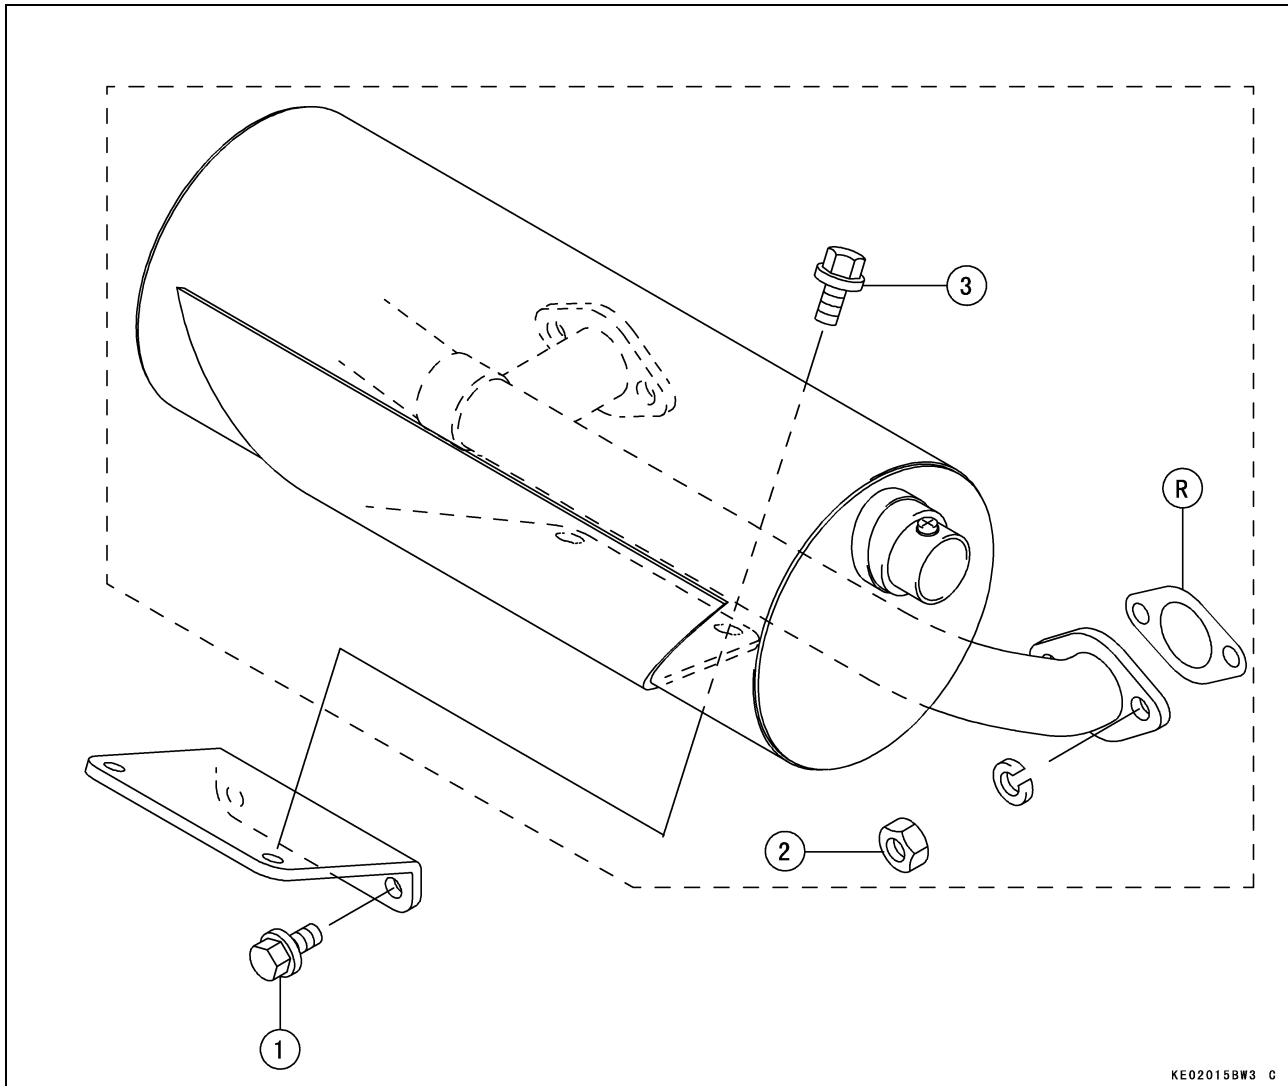

Exploded View

No.	Item	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Muffler Bracket Bolts	13	1.3	115 in·lb	
2	Muffler Flange Nuts	15	1.5	11	
3	Muffler Stay Mounting Bolts	15	1.5	11	

R: Replacement Parts

5-8 ENGINE TOP END

Specifications

Item	Service Limit
Cylinder Head	
Cylinder Compression (MIN)	[390 kPa (57 psi)] (MIN)
Cylinder Head Warp	0.03 mm (0.001 in.)
Valves	
Valve Head Thickness:	
Inlet, Exhaust	0.35 mm (0.014 in.)
Valve Stem Runout:	
Inlet, Exhaust	0.05 mm (0.002 in.)
Valve Stem Diameter:	
Inlet	5.95 mm (0.234 in.)
Exhaust	5.93 mm (0.233 in.)
Valve Guide Inside Diameter:	
Inlet, Exhaust	6.08 mm (0.239 in.)
Valve Spring Free Length:	
Inlet, Exhaust	31.2 in (1.23 in.)
Rocker Arm Push Rod Rounout:	
Inlet, Exhaust	TIR 0.5 mm (0.02 in.)
Cylinder, Piston	
Piston Diameter	79.75 mm (3.140 in.)
Piston Ring/Groove Clearance:	
Top, Second	0.17 mm (0.0067 in.)
Piston Ring Thickness:	
Top, Second	1.40 mm (0.055 in.)
Piston Ring End Gap:	
Top	0.7 mm (0.029 in.)
Second	0.8 mm (0.031 in.)
Oil	1.0 mm (0.039 in.)
Piston Pin Outside Diameter	15.96 mm (0.628 in.)
Piston Pin Hole Inside Diameter	16.08 mm (0.633 in.)
Connecting Rod Small End Inside Diameter	16.12 mm (0.634 in.)
Cylinder Inside Diameter:	
Standard Cylinder	80.10 mm (3.154 in.)
0.50 mm Oversize	80.60 mm (3.173 in.)
Cylinder Bore Out of Round	0.056 mm (0.0022 in.)


Specifications

Item	Standard
Valve Clearance	
Inlet, Exhaust	0.1 ~ 0.15 mm (0.004 ~ 0.006 in.)
Valve Seating Surface Angle	
Inlet, Exhaust	45°
Valve Seating Surface Width	
Inlet	0.8 ~ 1.4 mm (0.03 ~ 0.06 in.)
Exhaust	1.1 ~ 1.6 mm (0.04 ~ 0.06 in.)
Valves Guide Inside Diameter	
Inlet, Exhaust	6.000 ~ 6.012 mm (0.2362 ~ 0.2367 in.)
Cylinder Inside Diameter	
Standard Cylinder	79.98 ~ 80.00 mm (3.149 ~ 3.150 in.)
0.50 mm Over Size	80.48 ~ 80.50 mm (3.168 ~ 3.169 in.)


5-10 ENGINE TOP END

Special Tools


Piston Ring Pliers:
57001-115

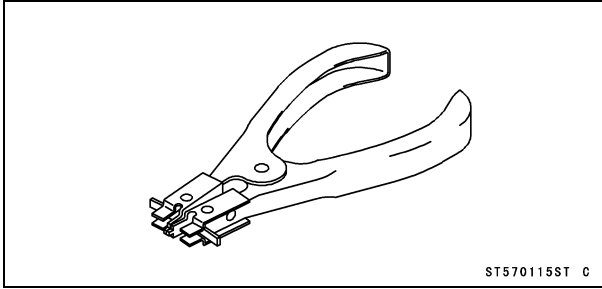


Piston Ring Compressor Belt, $\phi 67 \sim \phi 79$:
57001-1097

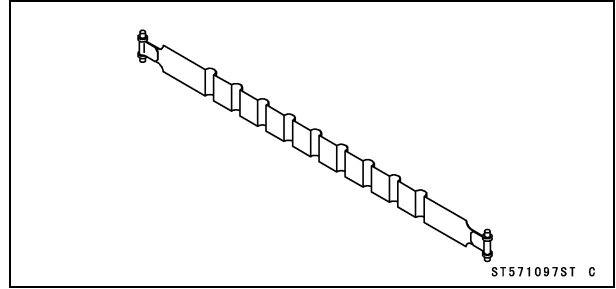


Compression Gauge, 20 kgf/cm²:
57001-221

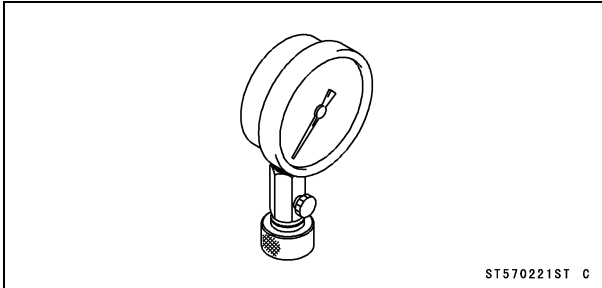

Compression Gauge Adapter, M14 × 1.25:
57001-1159

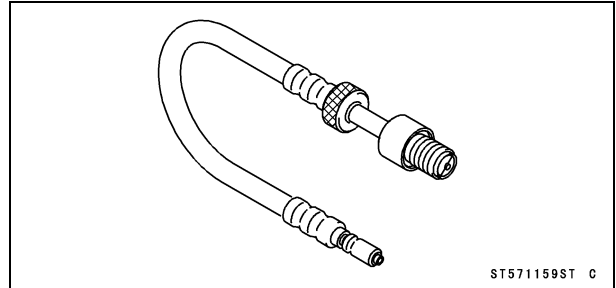

Piston Ring Compressor Grip:
57001-1095

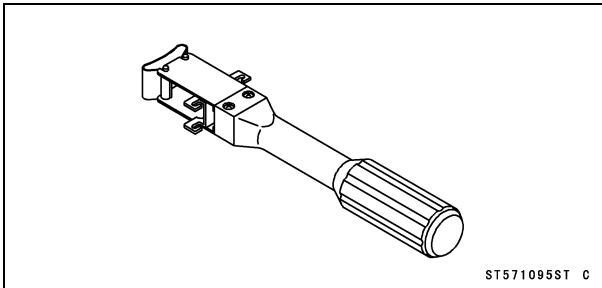

Cylinder Head

Compression Measurement

- Before measuring compression, do the following.
 - Be sure the battery is fully charged.
 - Thoroughly warm up the engine so that engine oil between the piston and cylinder wall will help seal compression as it does during normal running.
 - Stop the engine.
- Disconnect the spark plug caps of each cylinder and remove the spark plugs.
- Attach the compression gauge assembly firmly into one plug hole.

Special Tools - Compression Gauge, 20 kgf/cm²: 57001-221 [A]

Compression Gauge Adapter, M14 × 1.25: 57001-1159 [B]

- Ground the spark plugs to the engine.


⚠ WARNING

To avoid fire, do not ground the spark plugs in proximity to the plug holes. Keep the plugs as far away as possible from the plug holes.

- Using the starter motor, turn the engine over with the throttle fully open until the compression gauge stops rising; the compression is the highest reading obtainable.

Cylinder Compression (MIN) 390 kPa (57 psi)

- Repeat the measurement to the other cylinder.
- ★ If the compression is higher than the specified value, the piston rings, cylinder and valves are probably in good condition.
- ★ If the compression is too high, check the following.
 1. Carbon build-up on the piston crown and cylinder head - clean off any carbon on the piston crown and cylinder head.
 2. Cylinder head gasket - use only the proper gasket. The use of a gasket of incorrect thickness will change the compression.
 3. Valve guides and piston rings - rapid carbon accumulation in the combustion chamber may be caused by worn valve guides and/or worn piston oil rings. This may be indicated by white exhaust smoke.
- ★ If cylinder compression is lower than the (MIN), check the following:
 1. Gas leakage around the cylinder head - replace the damaged gasket and check the cylinder head warp.
 2. Condition of the valve seating.
 3. Valve clearance.
 4. Piston/cylinder wear, piston seizure.
 5. Piston ring, piston ring groove.


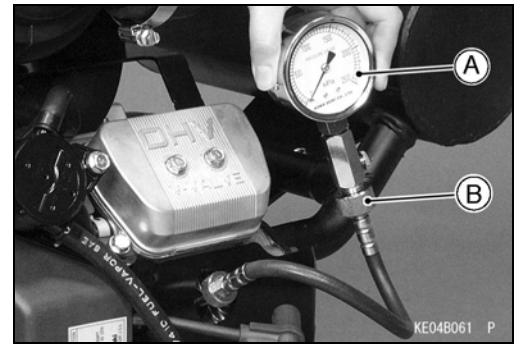


5-12 ENGINE TOP END


Cylinder Head

Cylinder Head Assembly Removal


- Remove:
 - Air Cleaner (see Cleaner Body Removal in the Fuel System chapter)
 - Fan Housing (see Flywheel, Stator Coil Removal in the Electrical System chapter)
 - Muffler (see Muffler Exhaust Pipe Removal)
 - Carburetor (see Carburetor Removal in the Fuel System chapter)
 - Control Panel (see Control Panel Assembly Removal in the Fuel System chapter)
 - Inlet Manifold (see Inlet Manifold Removal in the Fuel System chapter)
 - Spark Plugs
- Disconnect the regulator connector.
- Unscrew the bolts [A], and remove the engine shrouds [B].

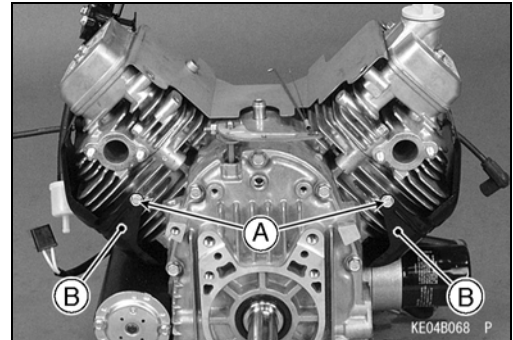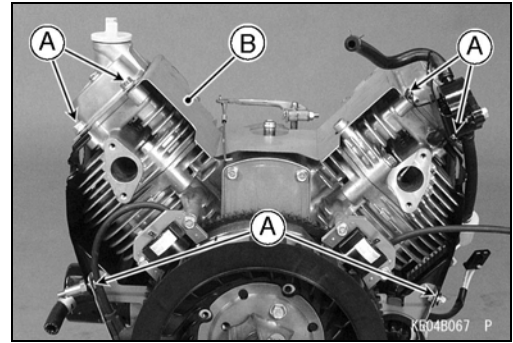

- Unscrew the rocker cover mounting bolts [A], and remove the cover [B] and gasket.

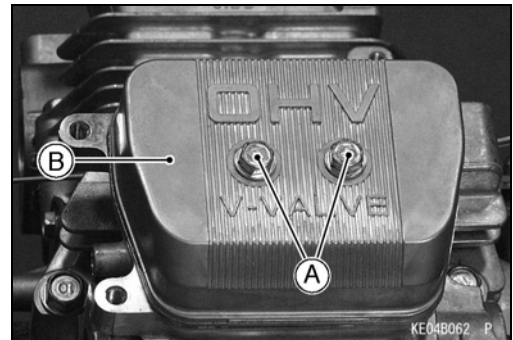

- When removing the #1, #2 cylinder head, set each cylinder at T.D.C [A] of power stroke in.

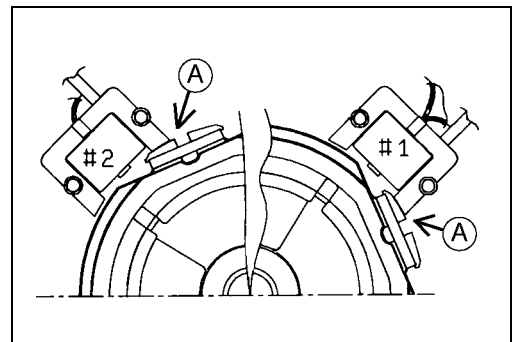

- Loosen the cylinder head bolts 1/4 turn in the sequence shown.


CAUTION

If the above procedure is not followed, the cylinder head may be warped during removal.

- Repeat the sequence until all bolts are removed and lift off the cylinder head assembly.

NOTE

○Mark the push-rods so they can be installed in their original position during assembly.

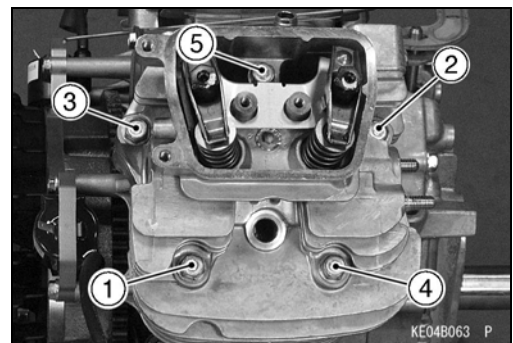

Cylinder Head

Cylinder Head Assembly Installation

- Clean the mating surfaces of the cylinder heads and cylinder.
- Install the push rods in their original positions on each cylinder (see Push Rod Installation).
- Install the knock pins.
- Set each cylinder at T.D.C [A] of power stroke in.
- Put a new gaskets and the cylinder head assemblies on each cylinder, then let the cylinder heads with push rods aligned under the rocker arms.
- Tighten the cylinder head bolts following the tightening sequence.

Torque - Cylinder Head Bolts: 32 N·m (3.3 kgf·m, 24 ft·lb)

CAUTION

A torque wrench must be used to assure proper torque. Improper tightening of the head bolts can result in warping of the cylinder head.

- Check and adjust the valve clearance (see Valve Clearance Inspection, Valve Clearance Adjustment in the Periodic Maintenance chapter).
- Install the gasket and rocker cover.

Torque - Rocker Cover Mounting Bolts: 6.9 N·m (0.70 kgf·m, 61 in·lb)




- Install the other removed parts.

Push Rod Removal

- Set each cylinder at T.D.C of power stroke.
- Remove the rocker covers (see Cylinder Head Assembly Removal).
- Loosen the valve clearance adjusting nuts [A].
- Move the rocker arms [B] to clear the push rod [C] upper ends.
- Pull out the push rods.

NOTE

○Mark the push rods so they can be installed in their original position during assembly.

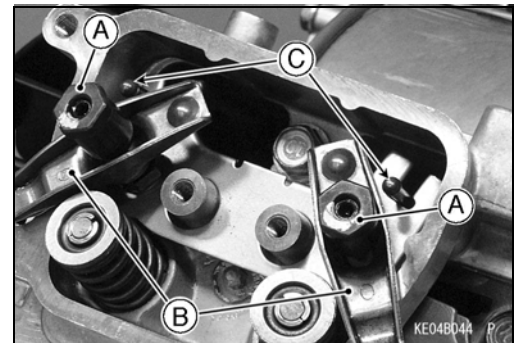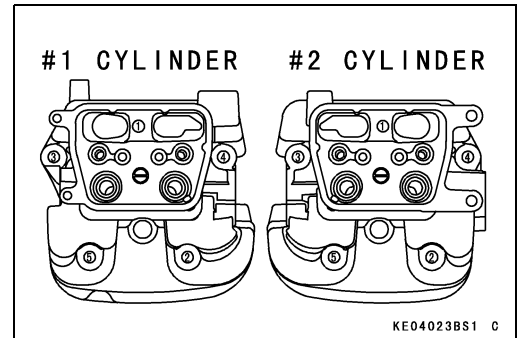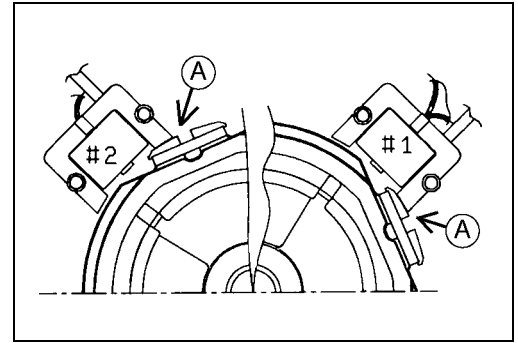


5-14 ENGINE TOP END

Cylinder Head


Push Rod Installation

- Set each cylinder at T.D.C of power stroke.
- Install the push rods [A] in their original positions on each cylinder.
- To Install the push rod in a correct position on the tappet [B], insert the push rod so end of the push rod is sliding down [C] along inside wall [D] of the crankcase and position the push rod end on to the tappet.
- Check that both inlet and exhaust push rods on each cylinder are at lowest position on the cam lobes [E], if not turn the flywheel clockwise one turn (360°) and reset each cylinder at T.D.C of power stroke in.
- Be sure the end of the push rods are correctly seated on the tappets.
- Tighten the valve clearance adjusting nuts (see Valve Clearance Adjustment in the Periodic Maintenance chapter).
- Check and adjust the valve clearance (see Valve Clearance Adjustment in the Periodic Maintenance chapter).

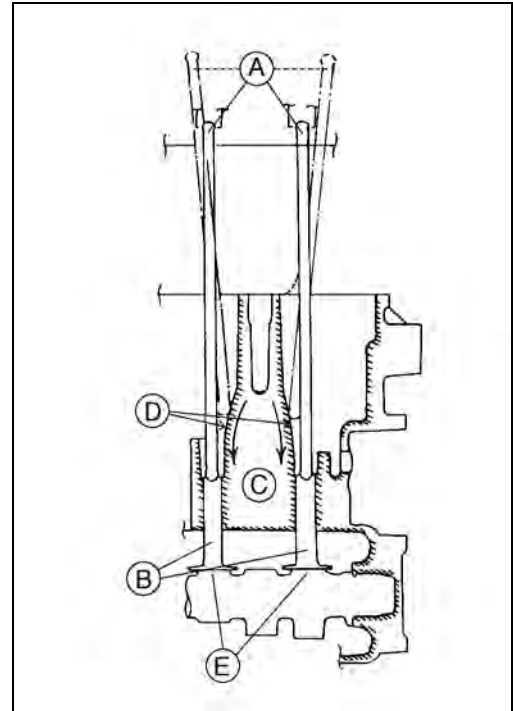

Push Rod Inspection

- Place the rocker arm push rod in V blocks that are as far apart as possible, and set a dial gauge [A] on the rod at a point halfway between the blocks. Turn the rod to measure the runout. The difference between the highest and lowest dial readings is the amount of runout.
- ★ If the runout exceeds the service limit, replace the rod.

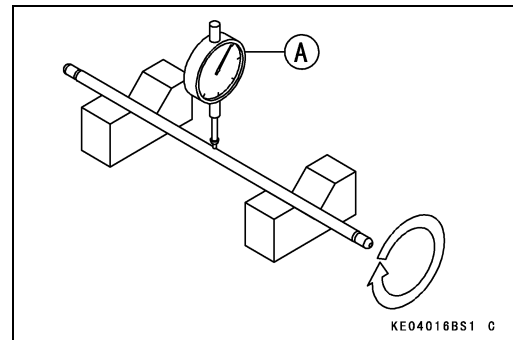

Rocker Arm Push Rod Runout

Service Limit:

Inlet, Exhaust TIR 0.5 mm (0.02 in.)


Valve Mechanism Removal/Installation

- Remove the cylinder head assembly (see Cylinder Head Assembly Removal).

NOTE


○ When removing the valve mechanism parts, note their position so that they may be reinstalled in their original position during assembly.

- Remove:
 - Valve Clearance Adjusting Nuts [A]
 - Rocker Arms [B]

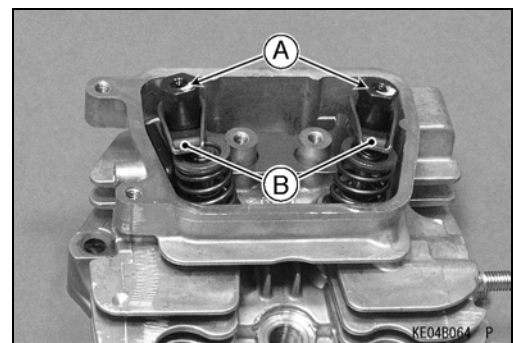

Cylinder Head


- Support the valve head in the combustion chamber with a suitable block.
- To remove the spring retainer [A], push down the spring retainer with thumbs or a suitable tool and remove the collets [B].
- Remove the spring [C] and valve [D] .

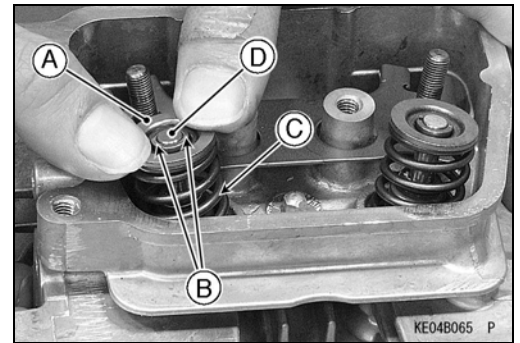

- Remove the stem seals [A].

NOTE

- It is not necessary to remove the stem seal unless it is being replaced.
- Valve guide [B] is not replaceable, do not remove it.

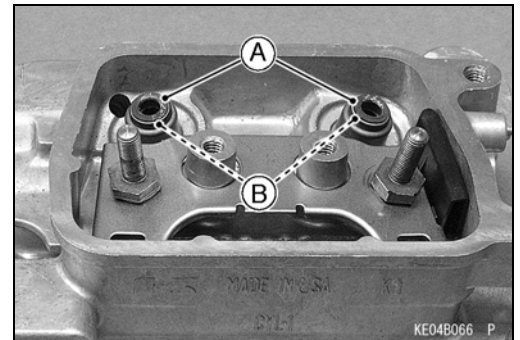

- Valve Installation.
 - Apply engine oil to the valve stem to avoid damaging the stem seal.
 - Check to see that the valve moves smoothly up and down in the guide.
 - Check to see that the valve seats properly in the valve seat. If it does not, repair the valve seat.
- Rocker Arm Installation
 - Apply engine oil to the spherical pivot seat area on the rocker arm.
 - Apply engine oil to the rocker arm where it touches the push rod and valve stem end.
 - Install the rocker arm on the stud bolt, and screw in the pivot and locknut on the stud bolt temporarily.

NOTE


- Correct installation must be performed when adjusting the valve clearance (see Valve Clearance Adjustment in the Periodic Maintenance chapter).

Cylinder Head Cleaning and Inspection

- Refer to the Cylinder Head Cleaning and Inspection in the Periodic Maintenance chapter.

Rocker Arm Inspection

- Clean and inspect the rocker arm where it touches the push rod and valve stem.
- ★ If the contact points [A] are worn or damaged, replace the rocker arm.

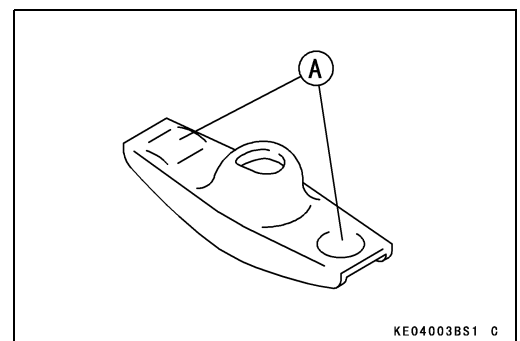

5-16 ENGINE TOP END

Valves

Valve Clearance Inspection

- Refer to the Valve Clearance Inspection in the Periodic Maintenance chapter.

Valve Clearance Adjustment

- Refer to the Valve Clearance Adjustment in the Periodic Maintenance chapter.

Valve Seat Inspection

- Refer to the Valve Seat Inspection in the Periodic Maintenance chapter.

Valve Seat Repair

- Refer to the Valve Seat Repair in the Periodic Maintenance chapter.


Valve Head Thickness

- Remove the valve (see Valve Mechanism Removal/Installation).
- Measure the thickness of the valve head.
- ★ If the valve head thickness (valve margin) [A] is less than the service limit, replace the valve.

Valve Head Thickness

Service Limit:

Inlet, Exhaust 0.35 mm (0.014 in.)

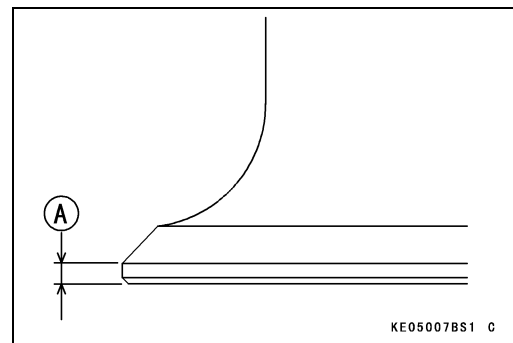


Valve Stem Runout

- Support the valve in V blocks at each end of the stem.
- Position a dial gauge perpendicular to the stem.
- Turn the valve and read the variation on the dial gauge.
- ★ If the stem runout is greater than service limit, replace the valve.

Valve Stem Runout

Service Limit:

Inlet, Exhaust TIR 0.05 mm (0.002 in.)

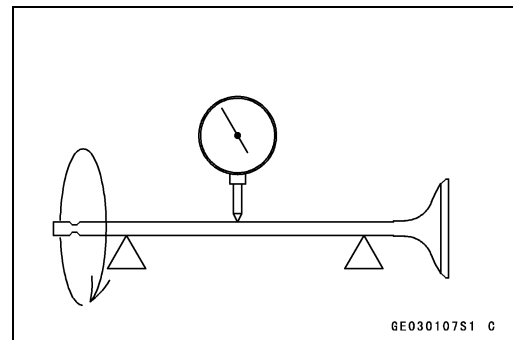

Valve Stem Diameter


- Measure the diameter of the valve stem [A] in two directions at right angles, at four different positions on the stem.
- ★ If any single measurement is less than the service limit, replace the valve.

Valve Stem Diameter

Service Limit:

Inlet 5.95 mm (0.234 in.)

Exhaust 5.93 mm (0.233 in.)

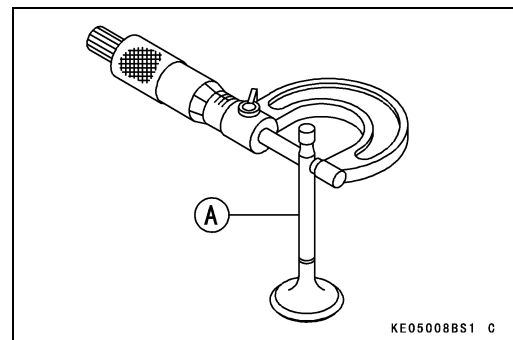

Valves

Valve Guide Inside Diameter

- Use a small bore gauge or a micrometer to measure the inside diameter [A] of the valve guide [B] at three places down the length of the guide.
- ★ If the measurement is more than the service limit, replace the cylinder head with a new one.

Valve Guide Inside Diameter

Service Limit:

Inlet, Exhaust 6.08 mm (0.239 in.)



Valve Spring Inspection

- Inspect the valve spring for pitting, cracks, rusting, and burns. Replace the spring if necessary.
- Measure the free length [A] of the spring.
- ★ If the measurement is less than the service limit, replace the spring.

Valve Spring Free Length

Service Limit:

Inlet, Exhaust 31.2 mm (1.23 in.)

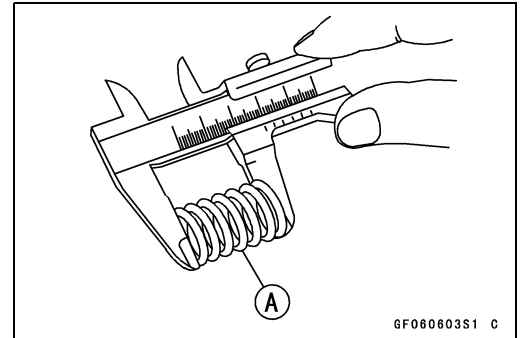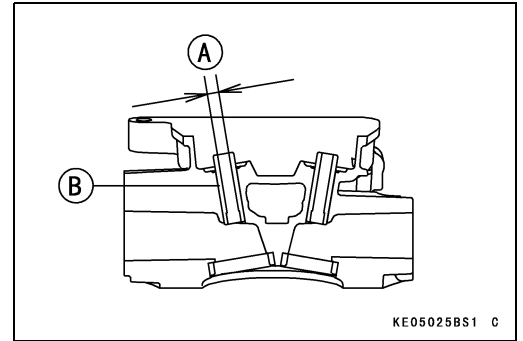

5-18 ENGINE TOP END

Cylinder, Piston

Piston Removal

- Split the crankcase (see Crankcase Cover Removal in the Camshaft/Crankshaft chapter).
- Remove the camshaft (see Camshaft, Tappet Removal in the Camshaft/Crankshaft chapter).
- Turn the crankshaft to expose the connecting rod cap bolts [A].
- Remove the bolts and take off the connecting rod caps [B].

NOTE

○ Note the position of the connecting rod caps for re-installing the caps.





- Push the connecting rod end into the cylinder, and pull the piston and connecting rod out of the cylinder.

CAUTION

Note a location of the arrow match mark [A] on the piston head in relation to K Mark [B] on the connecting rod.


No.1 cyl. K mark on the connecting rod is face to face with No.2 cyl. K Mark on the connecting rod.
Keep parts together as a set.

- Remove one of the piston pin snap rings [A] with needle nose pliers [B].
- Remove the piston by pushing the piston pin [A] out the side from which the snap ring was removed.

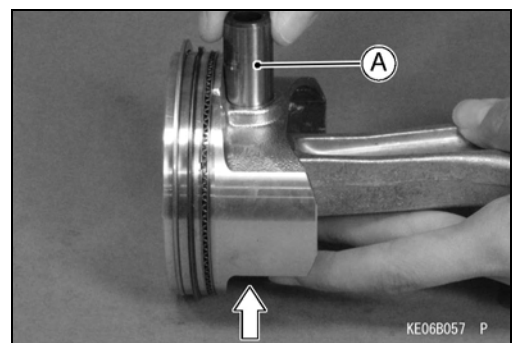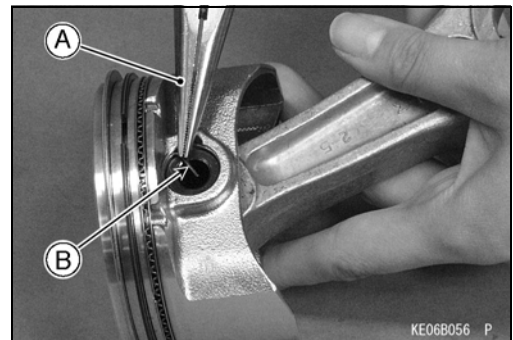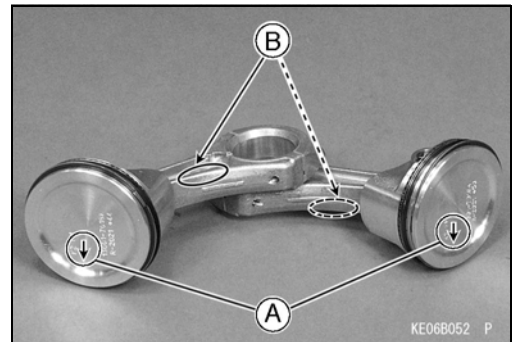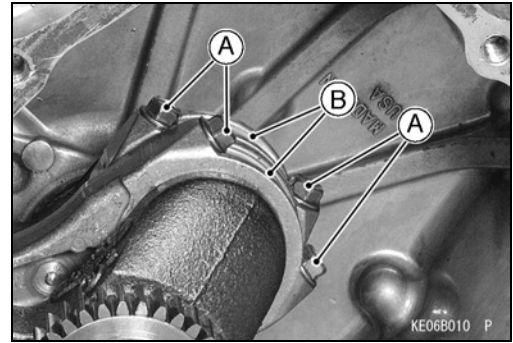


Cylinder, Piston

- Remove the top and second rings with piston ring pliers.
Special Tool - Piston Ring Pliers: 57001-115
- ★ If the special tool is not available, carefully spread the ring opening with your thumbs and then push up on the opposite side of the ring [A] to remove it.
- Remove the 3-piece oil ring with your thumbs in the same manner.

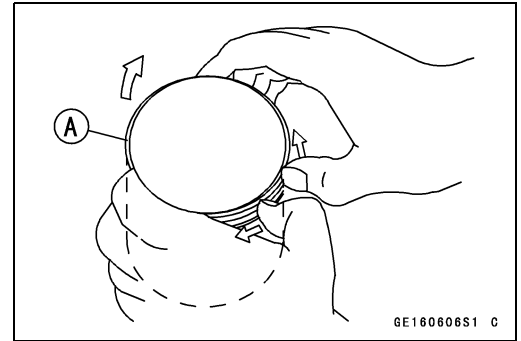


Piston Installation


- Install the expander [A] in the piston oil ring groove so that the expander ends [B] touch together, never overlap.
- Install the upper and lower steel rails. There is no UP or Down to the rails. They can be installed either way.

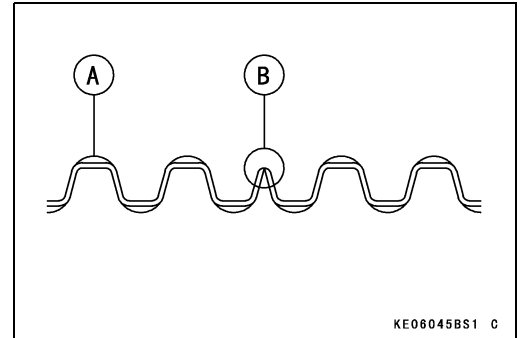


- Do not mix up the top and second rings.
- Install the second ring so that the notched edge [A] faces down.
- Install the top ring.
- The rings should turn freely in the grooves.
 Piston Head [B]
 Top Ring [C]
 Second Ring [D]

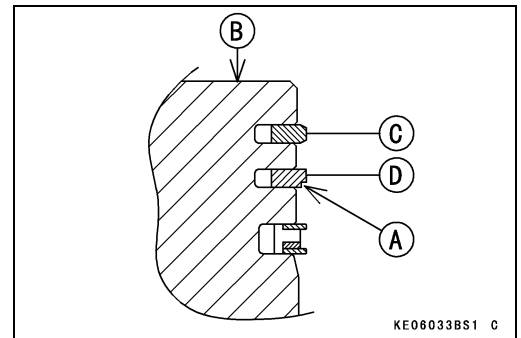

- Align the piston and rings with the piston ring end gap as shown.
 Arrow Match Marks [A]
 Top Ring End Gap, Upper Steel Rail End Gap [B]
 30° ~ 45° [C]
 Second Ring End Gap, Lower Steel Rail End Gap [D]

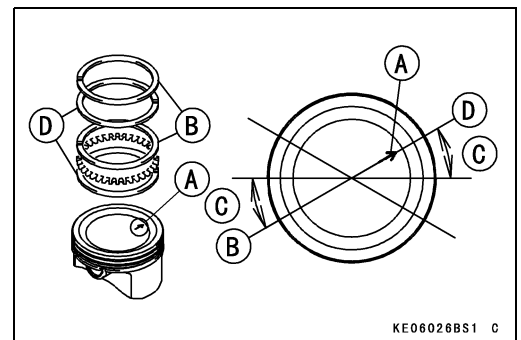

- Apply engine oil to the piston pins.
- Assemble the pistons onto the connecting rods as follow:
 - No.1 cyl. Piston, align the arrow match mark on the piston head with opposite the raised letters (K Mark) on the connecting rod.
 - No.2 cyl. piston, align the arrow match mark on the piston head with K Mark on the connecting rod.
- No.1 Cyl. Piston [A]
- No.2 Cyl. Piston [B]
- Arrow Match Marks [C]
- K Mark [D].
- Opposite K Mark [E]

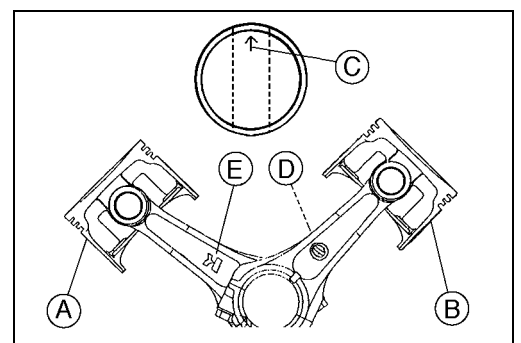

5-20 ENGINE TOP END

Cylinder, Piston

- When installing a piston pin snap ring, compress it only enough to install it and no more.
- Fit a new piston pin snap ring into the side of the piston so that the ring opening [A] does not coincide with the notch [B] in the edge of the piston pin hole.




CAUTION

Do not reuse the snap rings, as removal weakens and deforms them. They could fall out and score the cylinder wall.

- Apply engine oil to the piston skirt and the cylinder bore.
- Using the piston ring compressor grip [A] and the belt [B], lightly tap the top of the piston with a plastic mallet [C] to insert the piston and connecting rod into the cylinder.

**Special Tools - Piston Ring Compressor Grip: 57001-1095
Piston Ring Compressor Belt, $\phi 67 \sim \phi 79$:
57001-1097**

- Insert the piston and connecting rod so that the arrow match mark [A] on the top of the piston is facing the fly-wheel side [B].

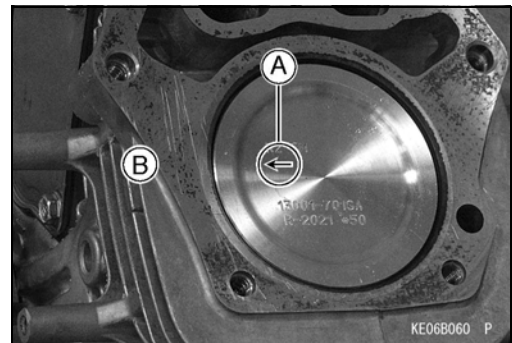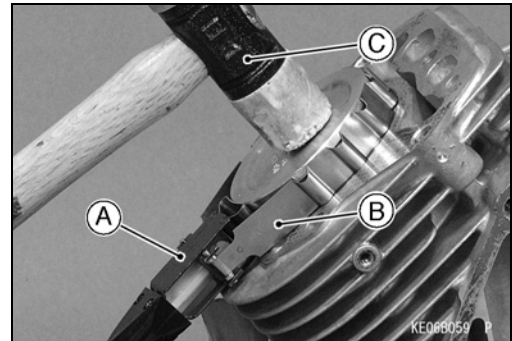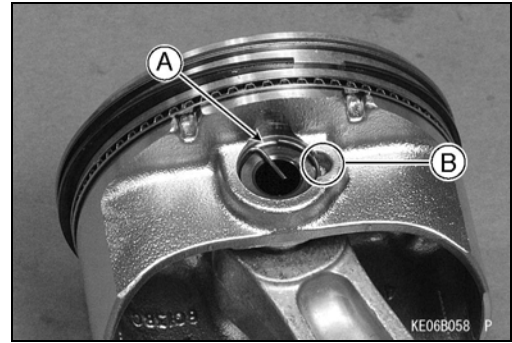


CAUTION

The connecting rod and the connecting rod big end cap are machined at the factory in the assembled state, so they must be replaced together as a set.

- Apply molybdenum disulfide oil solution to the inner surfaces [A] of the connecting rod big ends [B] and caps [C].
- The molybdenum disulfide oil solution is a mixture of engine oil and molybdenum disulfide grease with a weight ratio (10 : 1).
- Install the connecting rod big end caps on their original position on each connecting rod big ends.
- Apply a small amount of engine oil to the thread [D] and seating surface [E] of the cap bolts.
- Tighten the cap bolts.

Torque - Connecting Rod Big End Cap Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)

- Install:
Camshaft (see Camshaft, Tappet installation in the Camshaft/Crankshaft chapter)
Crankcase Cover (see Crankcase Cover Installation in the Camshaft/Crankshaft chapter)

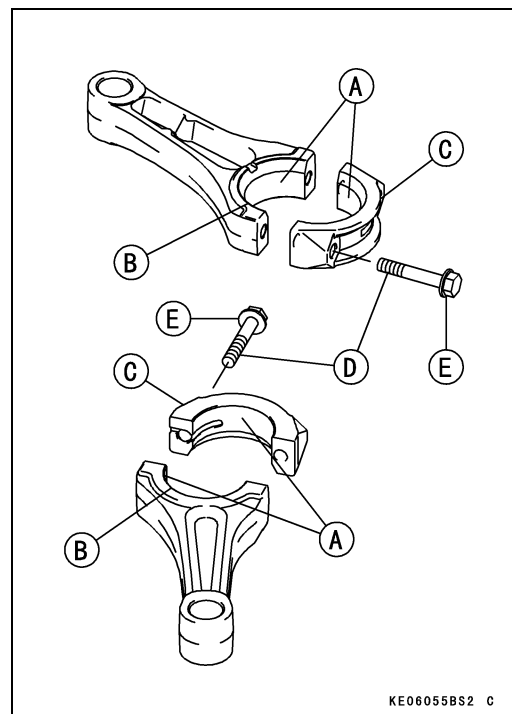

Cylinder, Piston

Piston/Cylinder Seizure

- In case of seizure, remove the piston (see Piston Removal).
- Visually inspect the cylinder and piston damage.
- ★ If there is only light damage, smooth the position with #400 emery cloth. Remove the small aluminum deposits from the cylinder with #400 emery cloth or light honing.
- ★ If the damage is severe, the both cylinders must be bored oversize and oversized pistons installed.

Piston Cleaning

- Remove the piston and piston rings (see Piston Removal).




CAUTION

Never clean the piston head with the engine assembled. Carbon particles will fall between the piston and cylinder, and damage the crankshaft bearings.

- Scrape the carbon off [A] the piston head.
- Use the scraping tools carefully. Do not gouge the piston head. To avoid gouging, use scrapers that are made of a material that will not cause damage.
- Clean the piston ring grooves [A] with a broken piston ring or other suitable tools.

CAUTION

Be careful not to widen the ring grooves. Damaged ring grooves will require piston replacement.

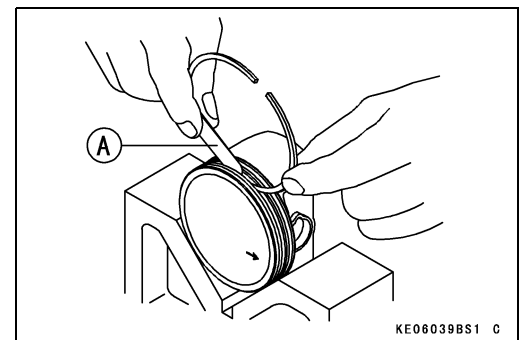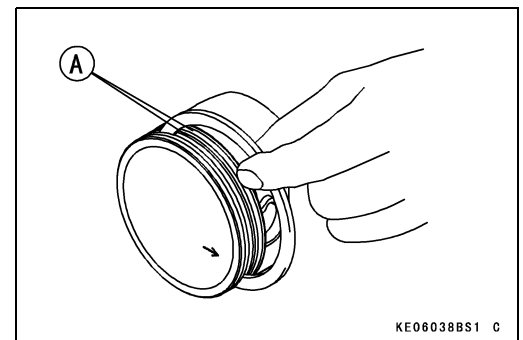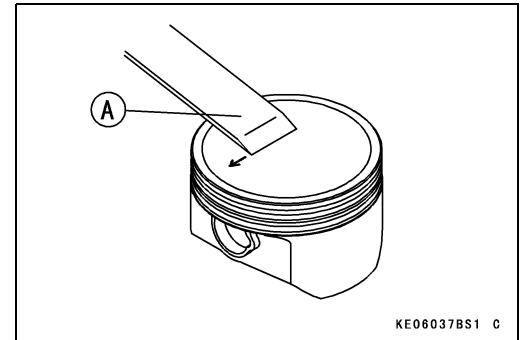

Piston Ring and Ring Groove Wear

- Clean the piston (see Piston Cleaning).
- Visually inspect the piston rings and ring grooves.
- ★ If the piston rings are worn unevenly or damaged, replace them.
- ★ If the ring grooves are worn unevenly or damaged, replace both the piston and piston rings.
- Check the ring grooves for wear by inserting a new ring in the proper groove at several points around the piston.
- Measure the clearance between the top and second rings and their grooves using a thickness gauge [A].
- ★ If the piston ring/groove clearance is greater than the specified value, replace the piston.

Piston Ring/Groove Clearance

Service Limit:

Top, Second 0.17 mm (0.0067 in.)

NOTE

- The oil ring is a three piece assembled ring. Difficult to measure the ring groove clearance and thickness, visually inspect only.

5-22 ENGINE TOP END

Cylinder, Piston

- Measure the piston ring thickness [A].
- Use a micrometer to measure at several points around the rings.
- ★ If any of the measurement are less than the service limit, replace the entire set of rings.

Piston Ring Thickness

Service Limit:

Top	1.39 mm (0.054 in.)
Second	1.40 mm (0.055 in.)

NOTE

- When using new rings in a used piston, check for uneven groove wear. The rings should fit perfectly parallel to the groove sides. If not, replace the piston.

Piston Ring End Gap

- Remove the piston rings.
- Push each ring (one at a time) in the cylinder bore to a point close to the bottom of the cylinder bore.
- Use the piston to push it in to be sure it is square.
- Measure the gap [A] between the ends of the ring [B] with a thickness gauge.
- ★ If the end gap of any ring is greater than the service limit, replace the entire set of rings.

Piston Ring End Gap

Service Limit:

Top	0.7 mm (0.029 in.)
Second	0.8 mm (0.031 in.)
Oil	1.0 mm (0.039 in.)

Piston Pin, Piston Pin Hole, and Connecting Rod Wear

- Remove the piston pin.
- Measure the outside diameter of the piston pin with a micrometer at several points.
- ★ If the outside diameter is less than service limit, replace the piston pin.





Piston Pin Outside Diameter

Service Limit: 15.96 mm (0.628 in.)

- Measure the inside diameter [A] of the piston pin hole at several points on both side. Use a dial bore gauge.
- ★ If the inside diameter is more than the service limit, replace the piston.

Piston Pin Hole Inside Diameter


Service Limit: 16.08 mm (0.633 in.)

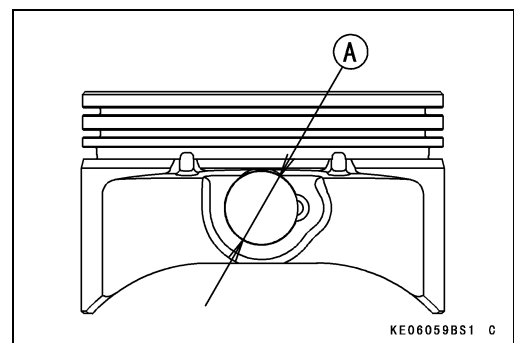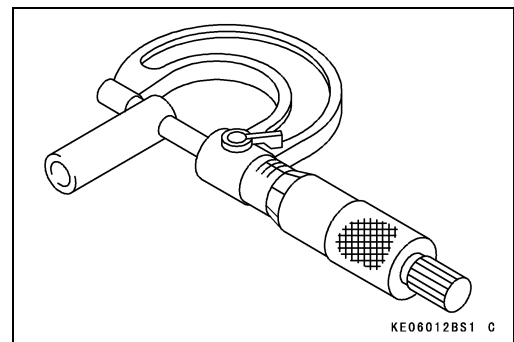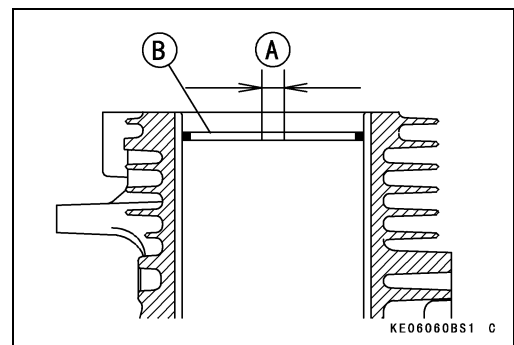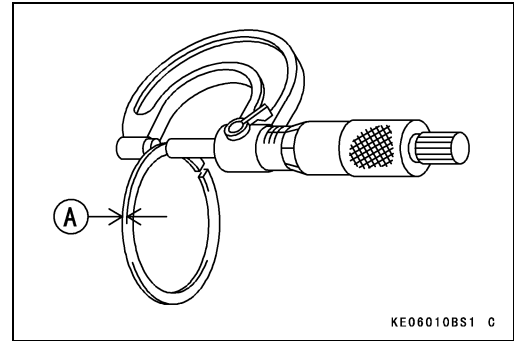

Cylinder, Piston

- Measure the inside diameter [A] of the small end of the connecting rod at several points. Use a dial bore gauge.
- ★ If the inside diameter is more than the service limit, replace the connecting rod.


Connecting Rod Small End Inside Diameter
Service Limit: 16.12 mm (0.634 in.)

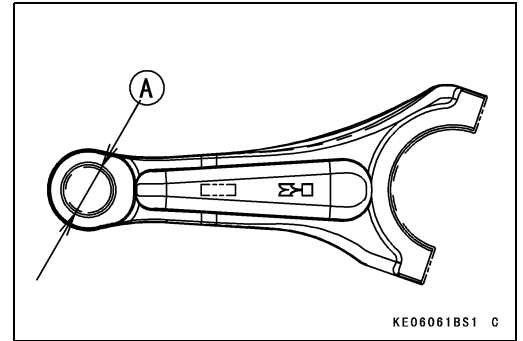

Piston Diameter

- Measure the outside diameter [A] of the piston 12.5 mm (0.9 in.) up [B] from the bottom of the piston at a right angle to the direction of the piston pin hole.
- ★ If the measurement is less than the service limit, replace the piston.


Piston Diameter
Service Limit: 79.75 mm (3.140 in.)

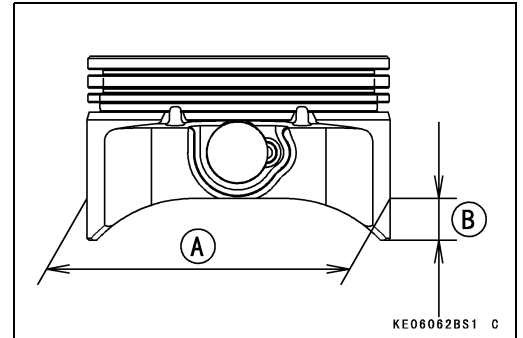

Cylinder Inside Diameter

- Clean and measure the cylinder inside diameter.
- Use a dial bore gauge to measure front-to-back and side-to-side at the points shown figure.
- ★ If any of the cylinder bore measurements is greater than the service limit, the cylinder must be bored to the next oversize and then honed (see Cylinder Boring and Honing).

10 mm (0.4 in.) [A]
 55 mm (2.2 in.) [B]

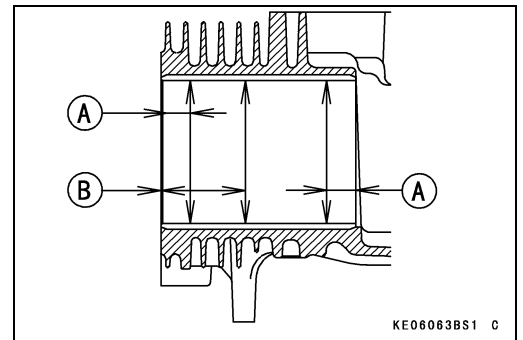

Cylinder Inside Diameter

Standard:

Standard Cylinder 79.98 mm ~ 80.00 mm (3.149 ~ 3.150 in.)
0.50 mm Oversize 80.48 ~ 80.50 mm (3.168 ~ 3.169 in.)

Service Limit:

Standard Cylinder 80.10 mm (3.154 in.)
0.50 mm Oversize 80.60 mm (3.173 in.)

Cylinder Bore Out-of-Round

Standard: 0.01 mm (0.0004 in.)
Service Limit: 0.056 mm (0.0022 in.)

5-24 ENGINE TOP END

Cylinder, Piston

Cylinder Boring and Honing

Always resize to exactly 0.5 mm (0.02 in.) over the standard bore size.

If this is done accurately, the stock oversize rings and piston will fit perfectly and proper clearance will be maintained.

Resizing the cylinder bore can be done by reliable repair shop or by using a drill press and honing tool.

Use the stone recommended by the hone manufactures to produce correct cylinder wall finish.

Machine-bore first, the bore diameters should be shown in the table.

Fine Boring Bore Diameter

Oversize	Bore Diameter
0.50 mm	75.65 ~ 75.68 mm (2.978 ~ 2.979 in.)

Final Bore Diameter

Oversize	Bore Diameter
0.50 mm	80.48 ~ 80.50 mm (3.168 ~ 3.169 in.)

- Change to a honing stone for finishing, the final bore diameter should be as shown in the table.
Be sure the correct stone is used and the stone is not worn.
- Clean the cylinder at the top and bottom of the cylinder to remove burns and pieces of the base and head gasket.
- Anchor the cylinder (block) on the drill press table before honing.
- Align the center of the cylinder bore to the press center. Set the press to operate from 200 to 250 rpm.
- Connect the drive shaft to the hone and set the stop on the drill press so the hone can only extend 20 to 25 mm (3/4 ~ 1.0 in.) above the top or below the bottom of the cylinder liner.
- Rotate the adjusting nut (knob) on the hone until the stones contact snugly against the cylinder wall at the narrowest point. "Do not Force".
- Turn the stone by hand. If you cannot turn it, the stone is too tight. Loosen the hone until it can be turned by hand.
- Be sure that the cylinder and hone are centered and aligned with the drive shaft and drill spindle.
- Pour honing oil inside of the cylinder during the honing operation. Start the drill press. Move the hone up and down in the cylinder approximately 20 cycles-per-minute.
- Check the diameter of the cylinder bore regularly during honing, using an inside micrometer.

Cylinder, Piston

CAUTION

Stop the drill press before measuring and remove the hone from the cylinder.

NOTE

○The finish should not be smooth, but have a 40 to 60 degree crosshatch pattern.

- Hone the cylinder until it is about 0.007 to 0.009 mm (0.0003 to 0.0004 in.) large to allow for shrinkage when the cylinder cools.


NOTE

○Do not use gasoline, kerosene, or commercial solvent to clean the cylinder bore. These fluids only wash all the oil from the cylinder wall. They do not remove the metal particles produced during honing.

- Using soap warm water and clean rags, clean the cylinder wall. A clean white rag should not show soil from the cylinder wall.
- Dry the cylinder and coat with engine oil.

CAUTION

The cylinder must be thoroughly cleaned after honing to eliminate all grit.

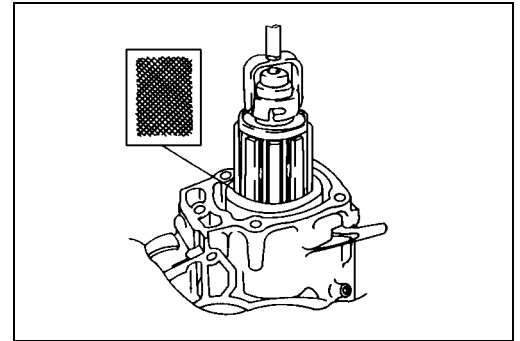


5-26 ENGINE TOP END

Muffler

Muffler Removal

- Remove the bolts [B] on the muffler bracket.
- Unscrew the flange nuts [A], and remove the muffler. Use a penetrating oil if necessary to break threads loose.
- Do not use unnecessary force when removing the muffler assembly, or they could become damaged or distorted.
- Remove the gaskets.

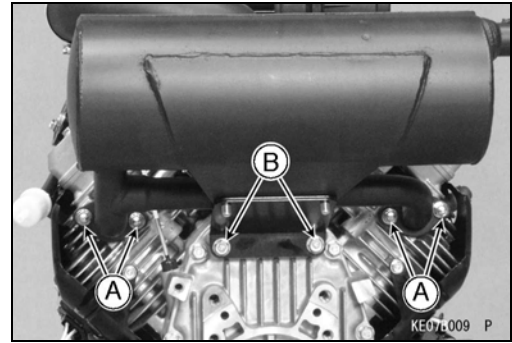

Muffler Installation

- Clean the muffler flanges to the exhaust port gasket surfaces and install the new gaskets each time the muffler installed.
- Install the gaskets.
- Install the muffler.
- To prevent mis-threading, finger tight the flange nuts first.
- Tighten the nuts and bolts.

Torque - Muffler Flange Nuts: 15 N·m (1.5 kgf·m, 11 ft·lb)

Muffler Bracket Bolts: 13 N·m (1.3 kgf·m, 115 in·lb)

- After installation, thoroughly warm up the engine, wait until the engine cools down and retighten the bolts and nuts.

Inspection

- Inspect the muffler for dents, cracks, rust, and holes.
- ★ If the muffler is damaged, it should be replaced for best performance and least noise.
- Check the muffler for distortion and/or loose internal components. Loss of power could develop if the muffler loose the internal components restricting the exhaust flow.
- Check for breaks in the seams and check weld at the junction of the exhaust pipes and muffler.
- Tap the muffler with a plastic hammer to decarbonize.


Lubrication System

Table of Contents

Exploded View.....	6-2
Engine Oil Flow Chart.....	6-4
Specifications	6-5
Special Tools and Sealant	6-6
Engine Oil, Oil Filter and Oil Cooler.....	6-7
Oil Level Inspection.....	6-7
Oil Change	6-7
Oil Filter Replacement	6-7
Oil Cooler Removal.....	6-7
Oil Cooler Installation.....	6-8
Oil Cooler Cleaning.....	6-8
Pressurized Lubrication System.....	6-9
Oil Pressure Measurement	6-9
Oil Pump, Relief Valve.....	6-10
Oil Pump, Relief Valve Removal	6-10
Oil Pump , Relief Valve Installation	6-10
Oil Pump, Relief Valve Inspection.....	6-11
Oil Screen.....	6-14
Oil Screen Removal	6-14
Oil Screen Installation	6-14
Cleaning and Inspection	6-14

6-2 LUBRICATION SYSTEM

Exploded View

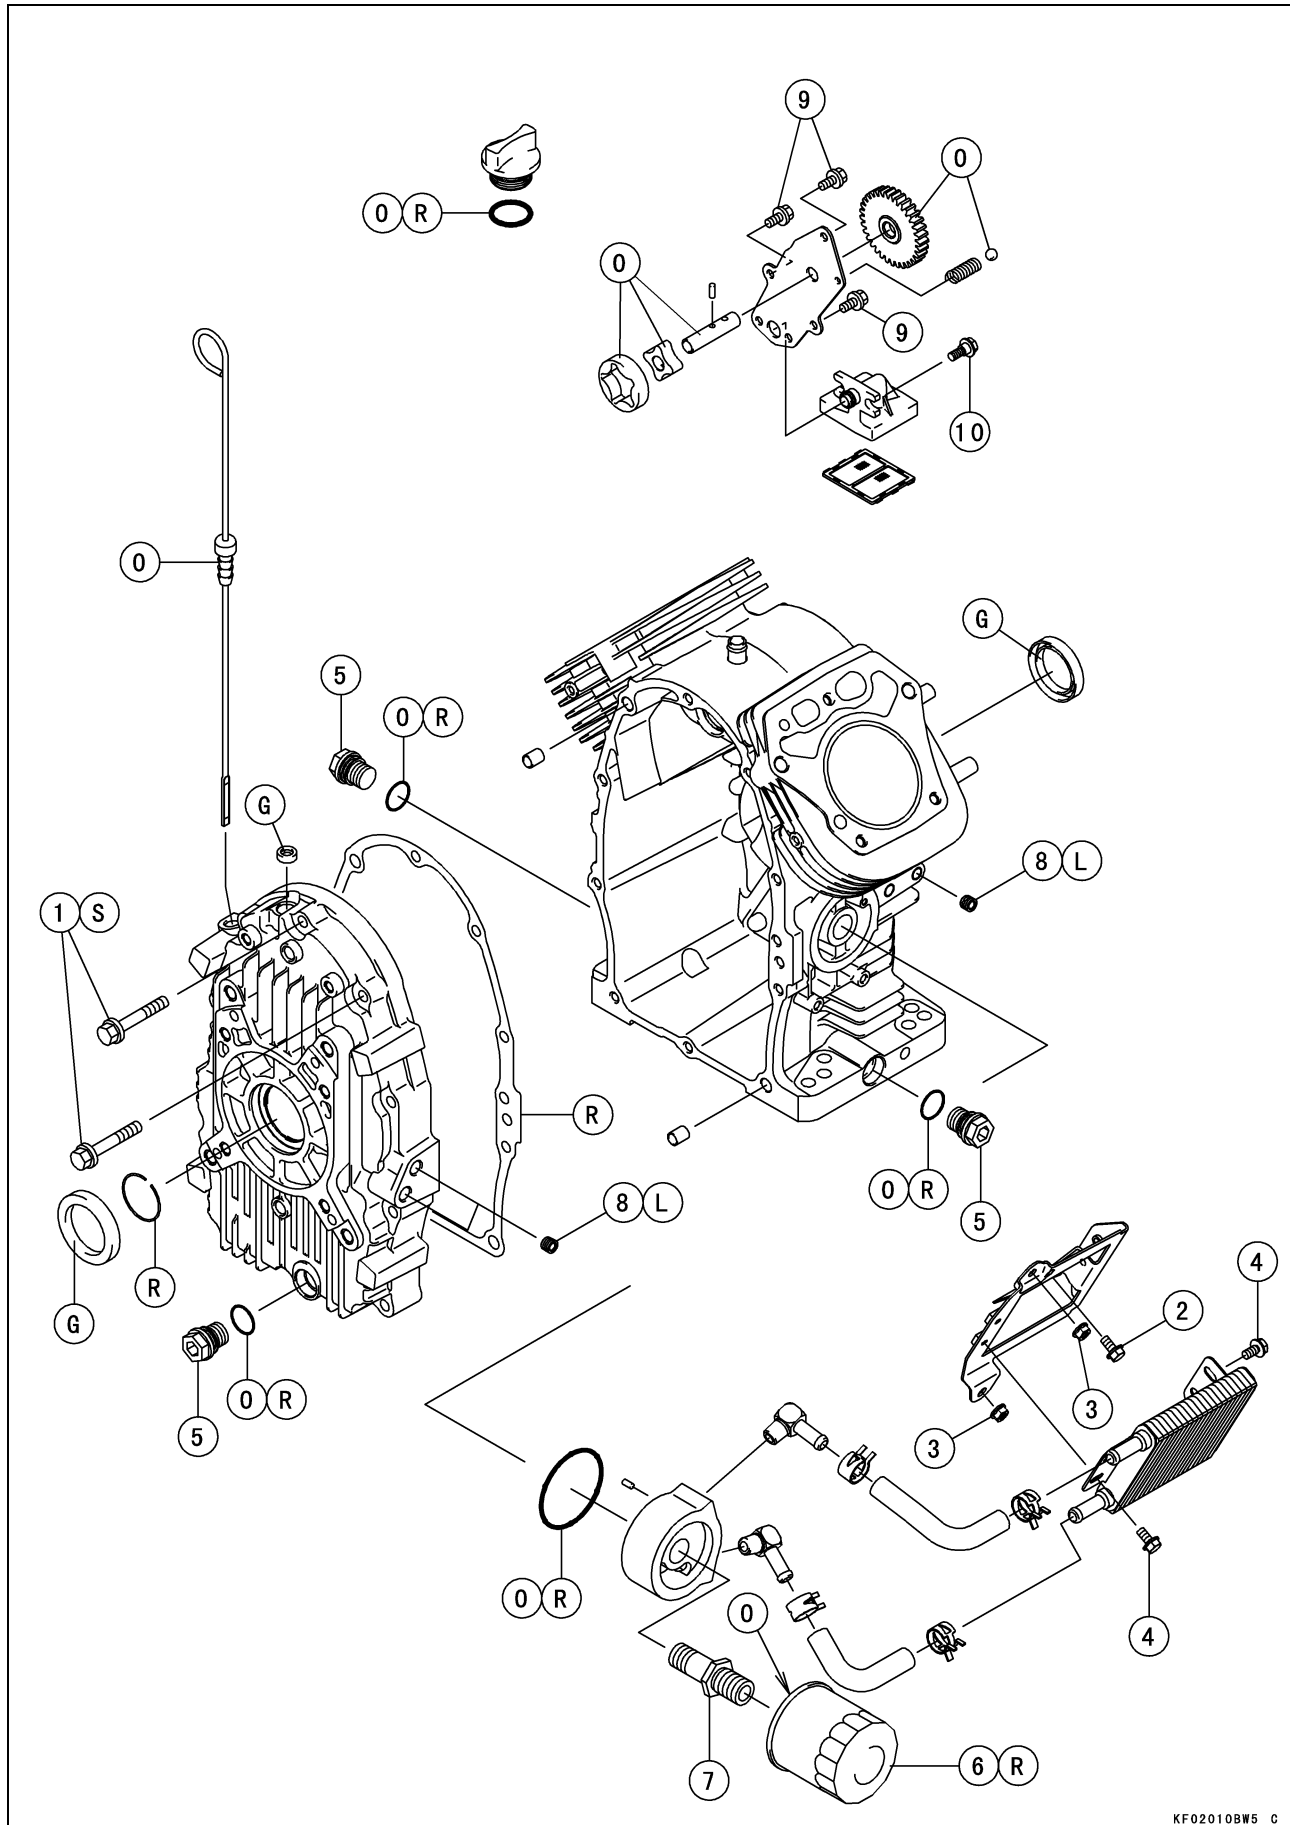

KF02010BW5 C

Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Crankcase Cover Bolts	32	3.3	24	S
2	Oil Cooler Bracket Bolt	5.9	0.60	52 in·lb	
3	Oil Cooler Bracket Nuts	5.9	0.60	52 in·lb	
4	Oil Cooler Mounting Bolts	5.9	0.60	52 in·lb	
5	Oil Drain Plugs	6.9	0.70	61 in·lb	
6	Oil Filter	9.8	1.0	87 in·lb	O, R
7	Oil Filter Joint Pipe	44	4.5	32	
8	Oil Passage Plugs	2.9	0.30	26 in·lb	L
9	Oil Pump Cover Plate Mounting Bolts	6.9	0.70	61 in·lb	
10	Oil Pipe Mounting Bolts	6.9	0.70	61 in·lb	

G: Apply grease.

L: Apply a non-permanent locking agent.


O: Apply engine oil.

R: Replacement Parts

S: Follow the specific tightening sequence.

6-4 LUBRICATION SYSTEM

Engine Oil Flow Chart

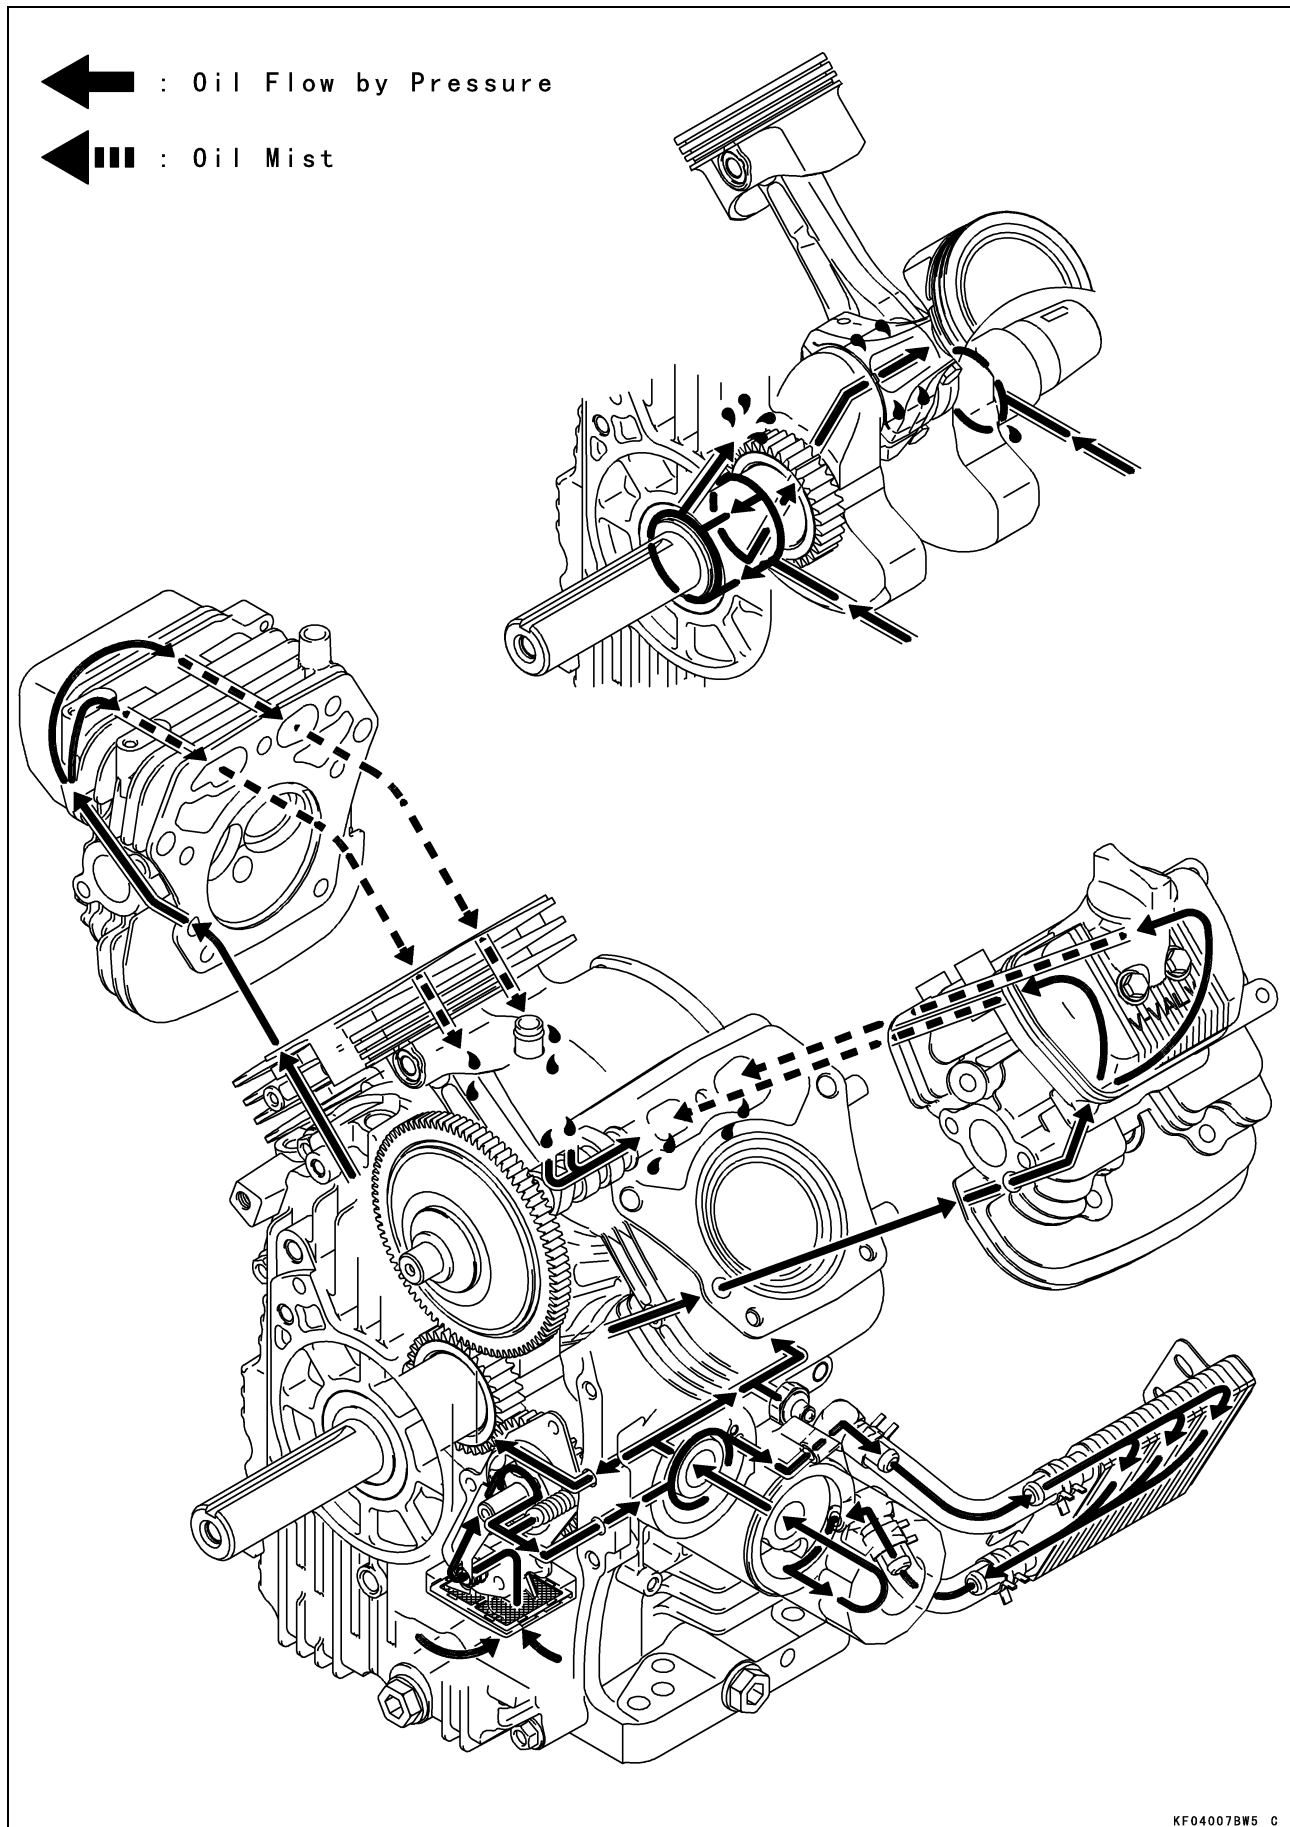

LUBRICATION SYSTEM 6-5**Specifications**


Item	Standard
Engine Oil	
Grade	API Service Classification: SF, SG, SH, or SJ class
Viscosity	SAE40, SAE30, SAE10W-30/SAE10W-40, or SAE5W-20
Capacity	1.4 L (1.5 US qt) [When oil filter is not removed] 1.6 L (1.7 US qt) [When oil filter is removed]
Level	Between "H" and "L" marks on oil gauge
Oil Pressure	241 ~ 310 kPa (35 ~ 45 psi): Engine oil temperature 120°C 414 ~ 690 kPa (60 ~ 100 psi): Engine oil temperature 50 to 60°C
Oil Filter By-pass Valve Opening Pressure	78.5 ~ 117.5 kPa (11.4 ~ 17.1 psi)

Item	Service Limit
Oil Pump	
Inner and Outer Rotor Clearance	0.21 mm (0.008 in.)
Outer Rotor Outside Diameter	40.470 mm (1.5933 in.)
Outer Rotor Thickness	9.940 mm (0.3913 in.)
Pump Housing Inside Diameter	40.801 mm (1.6063 in.)
Pump Housing Depth	10.230 mm (0.4028 in.)
Pump Shaft Outside Diameter	10.923 mm (0.4300 in.)
Pump Shaft Bearing Inside Diameter	11.078 mm (0.4361 in.)
Relief Valve Spring Free Length	19.90 mm (0.783 in.)


6-6 LUBRICATION SYSTEM

Special Tools and Sealant

Oil Pressure Gauge, 5 kgf/cm²:
57001-125

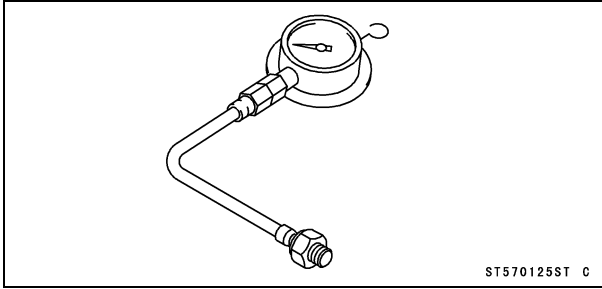

Oil Pressure Gauge Adapter, PT 1/8:
57001-1033

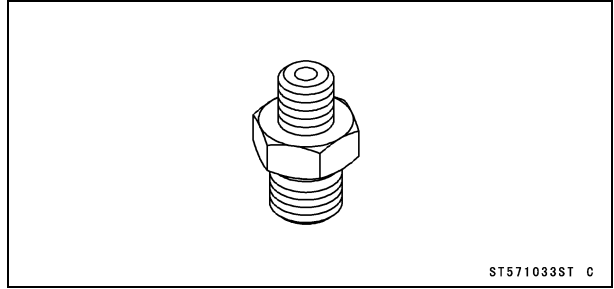

Engine Oil, Oil Filter and Oil Cooler

CAUTION

Engine operation with insufficient, deteriorated, or contaminated engine oil will cause accelerated wear and may result in engine seizure and accident. Before starting the engine for the first time, add oil: The engine is shipped dry. Preoil the engine to force all air from the internal oil passages and the oil filter.

- Fill fresh engine oil to the specified level (see Oil Change in the Periodic Maintenance chapter).
- Run the engine at slow speed 2 minutes.
- Stop the engine and check the oil level (see Oil Level Inspection in the Periodic Maintenance chapter).

Oil Level Inspection

- Refer to the Oil Level Inspection in the Periodic Maintenance chapter.

Oil Change

- Refer to the Oil Change in the Periodic Maintenance chapter.



Oil Filter Replacement

- Refer to the Oil Filter Replacement in the Periodic Maintenance chapter.

Oil Cooler Removal

- Drain the engine oil (see Oil Change in the Periodic Maintenance chapter).
- Remove the oil hose clamps [A], and take off the oil hoses [B] from the oil cooler [C].
- Remove the oil cooler mounting bolts [D] and oil cooler.


- Remove:
Nuts [A]
Bolt [B]
Oil Cooler Bracket [C]

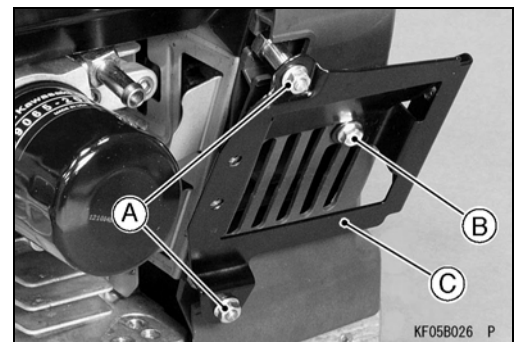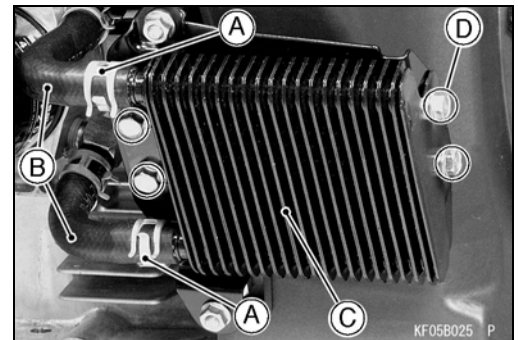

6-8 LUBRICATION SYSTEM



Engine Oil, Oil Filter and Oil Cooler

- Remove:
 - Oil Filter (see Oil Filter Replacement in the Periodic Maintenance chapter).
 - Clamps [A]
 - Oil Hoses [B]
 - Oil Filter Joint Pipe [C]
 - Oil Cooler Adapter [D]

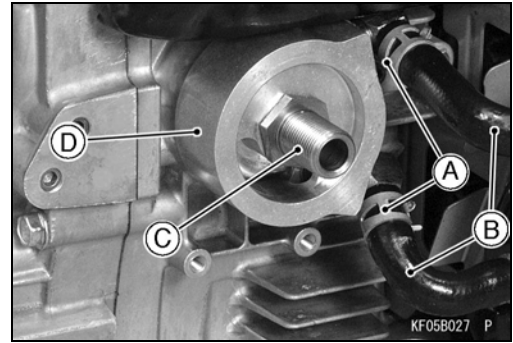

Oil Cooler Installation

- Install the oil cooler bracket and oil cooler.
 - Torque - Oil Cooler Bracket Bolt and Nuts: 5.9 N·m (0.60 kgf·m, 52 in·lb)**
 - Oil Cooler Mounting Bolts: 5.9 N·m (0.60 kgf·m, 52 in·lb)**
- Replace the O-ring [A] with a new one.
- Apply engine oil to the new O-ring.
- Install the pin [B] to the crankcase
- Fit the pin of the crankcase into the hole [C] in the oil cooler adapter [D].
- Install the oil filter joint pipe [A] direction as shown.
 - Torque - Oil Filter Joint Pipe: 44 N·m (4.5 kgf·m, 32 ft·lb)**
- Install:
 - Oil Hoses
 - Oil Filter (see Oil Filter Replacement in the Periodic Maintenance chapter)
- Pour in the specified type and amount of oil (see Oil Change in the Periodic Maintenance chapter).

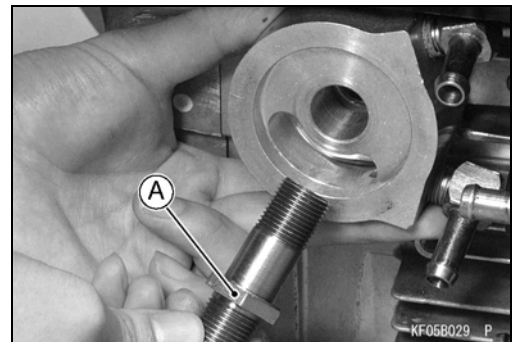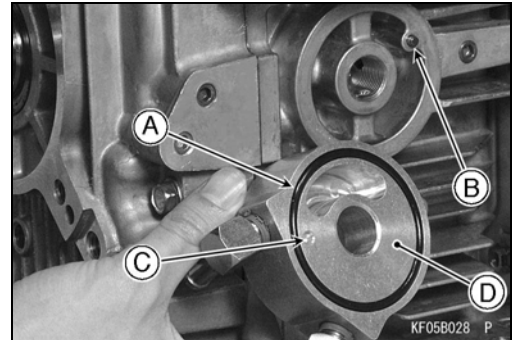

Oil Cooler Cleaning


- Refer to the Oil Cooler Cleaning in the Periodic Maintenance chapter.

Pressurized Lubrication System

The engine lubrication circuit is a pressurized system consisting of a positive displacement pump which picks up oil through a filter screen from the crankcase. The oil is pumped to a replaceable oil filter cartridge, through the engine's oil passages to lubricate internal components, and return to the crankcase. A pressure relief valve is used between the oil pump and oil filter to relieve excessive oil pressure by returning excess oil to the crankcase (see Oil Flow Chart).

Oil Pressure Measurement

- Remove the oil passage plug [A] from the crankcase cover [B].

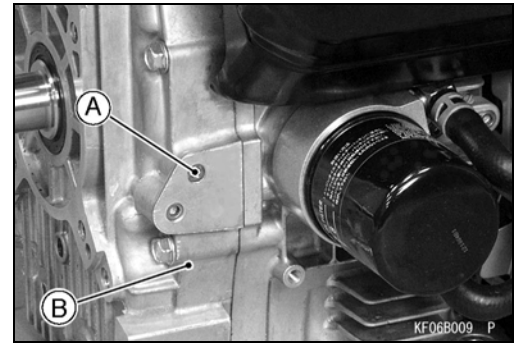

- Install the oil pressure gauge adapter [A] and oil pressure gauge [B].

Special Tools - Oil Pressure Gauge, 5 kgf/cm²: 57001-125
Oil Pressure Gauge Adapter, PT 1/8: 57001-1033

- Run the engine and allow warm up completely.
- Run the engine at fast idle speed and read the oil pressure gauge.

Oil Pressure

414 ~ 690 kPa (4.22 ~ 7.03 kgf/cm², 60 ~ 100 psi)


Measurement Condition

Engine Oil: 10W-30

Engine Oil: Temperature: 50 ~ 60°C

- ★ If the oil pressure is below the specification, inspect the oil pump and relief valve.
- ★ If the oil pump and relief valve are not at fault, inspect the rest of the lubrication system.
- Stop the engine.
- Remove the oil pressure gauge and adapter.
- Apply a non-permanent locking agent to the threads of the oil passage plug.
- Tighten:

Torque - Oil Passage Plugs: 2.9 N·m (0.30 kgf·m, 26 in·lb)

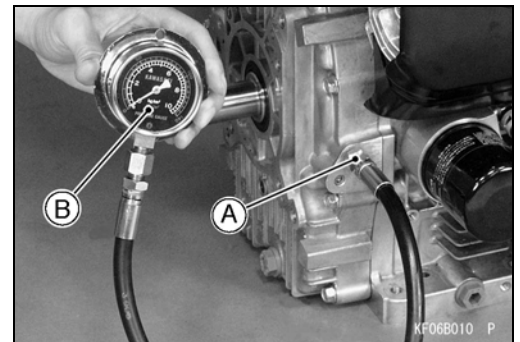


6-10 LUBRICATION SYSTEM


Oil Pump, Relief Valve

Oil Pump, Relief Valve Removal


- Remove:
 - Crankcase Cover (see Crankcase Removal in the Camshaft/Crankshaft chapter)
 - Bolts [A]
 - Oil Pipe [B] with screen
- Take out the pump cover plate [C] , pump gear [D] and pump shaft [E] as a set.

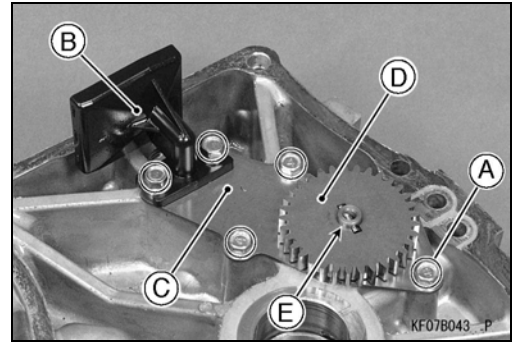

- Remove the pins [A], oil pump cover plate [B] and oil pump gear [C] from the pump shaft [D].

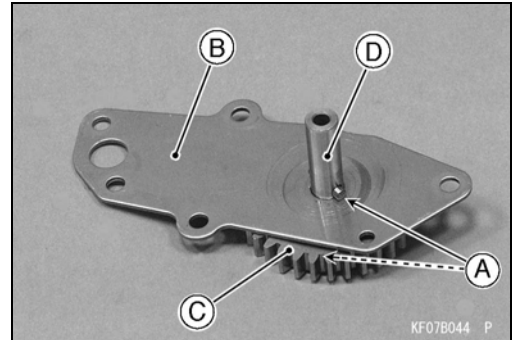


- Remove:
 - Inner Rotor [A]
 - Outer Rotor [B]
 - Spring [C]
 - Relief Valve Ball [D]

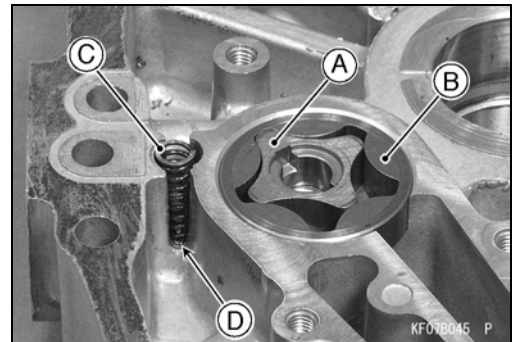

Oil Pump , Relief Valve Installation

- Assemble the following as shown.
 - Pins [A]
 - Oil Pump Gear [B]
 - Oil Pump Cover Plate [C]
 - Pump Shaft [D]

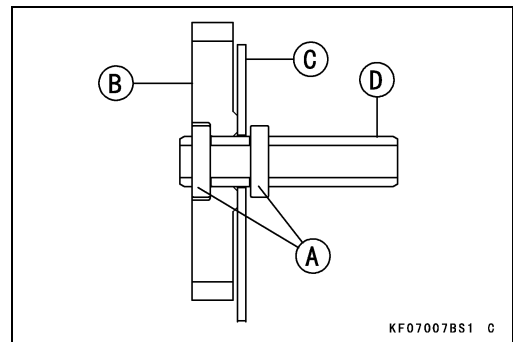

Oil Pump, Relief Valve

- Fill the rotor housing with engine oil for initial lubrication.
- Install the outer [A] and Inner rotor [B].
- Install the relief valve ball and spring in position.
- Fit the pin [C] of the pump parts assembly [D] into the slots [E] in the inner rotor.

NOTE

○When installing the pump parts assembly align the $\phi 6$ mm ($\phi 0.2$ in.) hole [F] on the cover plate with center of the relief valve [G].

- Tighten:
 - Torque - Oil Pump Cover Plate Mounting Bolts: 6.9 N·m (0.70 kgf·m, 61 in·lb)**
- Install:
 - Oil Screen (see Oil Screen Installation in this chapter)
 - Crankcase Cover (see Crankcase Cover Installation in the Camshaft/Crankshaft chapter)

Oil Pump, Relief Valve Inspection

- Remove the oil pump (see Oil Pump, Relief Valve Removal in this chapter).
- Visually inspect the pump gear, outer and inner rotor, and cover plate.
- ★ If there is any damage or uneven wear, replace them.
- Check the clearance [A] between the inner and outer rotor with a feeler gauge. Measure the clearance between the high point of the inner rotor and the high point of the outer rotor.
- ★ If the measurement exceed the service limit, replace the rotors as a set.

Inner and Outer Rotor Clearance

Service Limit: 0.21 mm (0.008 in.)

- Measure the outside diameter [A] of the outer rotor with a micrometer at several points.
- ★ If the rotor diameter is less than the service limit, replace both the inner and outer rotor.




Outer Rotor Outside Diameter

Service Limit: 40.470 mm (1.5933 in.)

- Measure the thickness [B] of the outer rotor with a micrometer at several points
- ★ If the rotor thickness is less than the service limit, replace both the inner and outer rotor.

Outer Rotor Thickness

Service Limit: 9.940 mm (0.3913 in.)

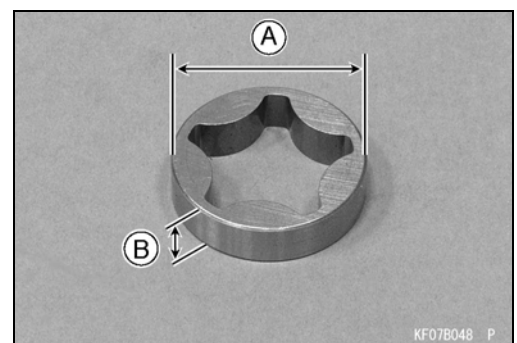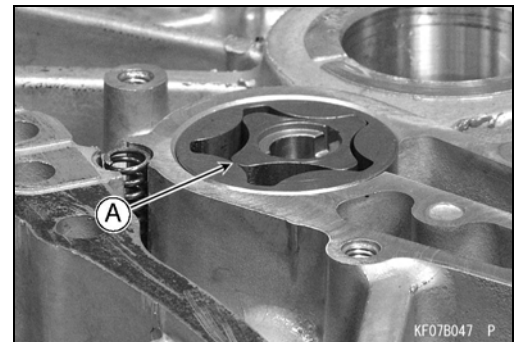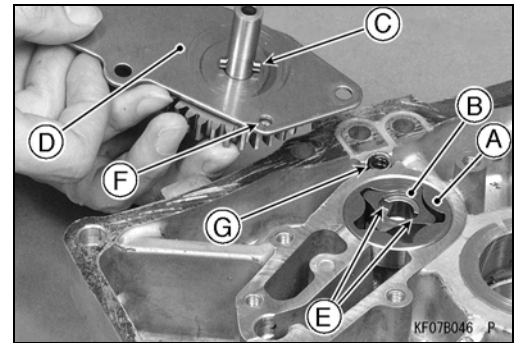

6-12 LUBRICATION SYSTEM

Oil Pump, Relief Valve

- Measure the inside diameter [A] of the pump housing with a inside micrometer at several points.
- ★ If the inside diameter is more than the service limit, replace the crankcase cover.

Pump Housing Inside Diameter

Service Limit: 40.801 mm (1.6063 in.)

- Measure the depth [B] of the pump housing with a depth micrometer at several points.
- ★ If any of measurement is more than the service limit, replace the crankcase cover.

Pump Housing Depth

Service Limit: 10.230 mm (0.4028 in.)

- Measure the outside [A] diameter of the pump shaft with a micrometer at several points.
- ★ If the diameter is less than the service limit, replace the pump shaft.

Pump Shaft Outside Diameter




Service Limit: 10.923 mm (0.4300 in.)

- Measure the inside diameter [A] of the pump shaft bearing in the crankcase cover with a inside micrometer at several points.
- ★ If the inside diameter is more than the service limit replace the crankcase cover.

Pump Shaft Bearing Inside Diameter

Service Limit: 11.078 mm (0.4361 in.)

- Visually inspect the relief valve spring, steel ball and valve seat in the crankcase cover.
- ★ If any rough spots are found during above inspection, wash the valve clean with a high flash-point solvent and blow out any foreign particles that may be in the valve with compressed air.

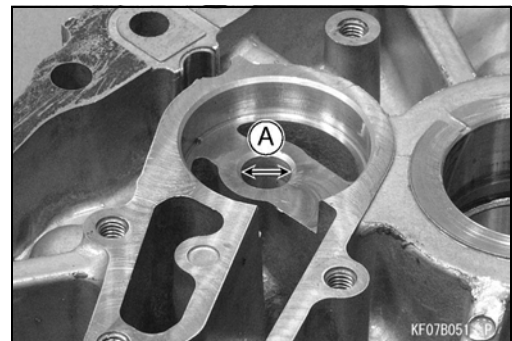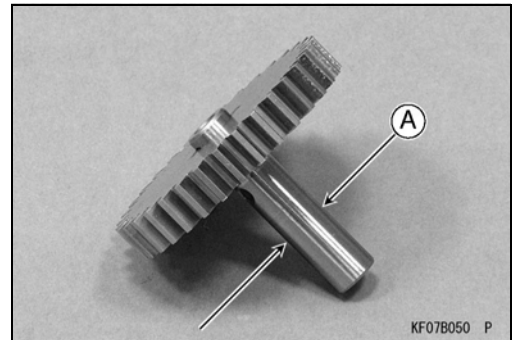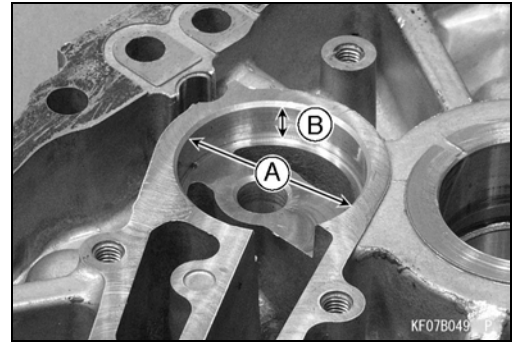

WARNING


Clean the parts in a well ventilated area, and take care that there is no spark or flame anywhere near the working areas. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents.

Oil Pump, Relief Valve

- ★ If cleaning does not solve the problem, replace the relief valve parts.
- ★ If necessary, put the ball in position and lightly tap the ball with a suitable tool to form a perfect seat.
- Measure free length [A] of the spring with a vernier caliper.
- ★ If the free length of the spring is less than the service limit, replace the spring.

Relief Valve Spring Free Length

Service Limit: 19.90 mm (0.783 in.)

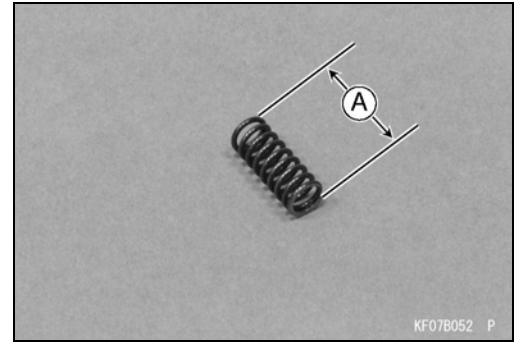


6-14 LUBRICATION SYSTEM

Oil Screen

Oil Screen Removal


- Remove:
 - Crankcase Cover (see Crankcase Cover Removal in the Camshaft/Crankcase chapter).
 - Bolts [A]
 - Oil Pipe [B]
- Push [C] the oil screen with thumbs and remove it.

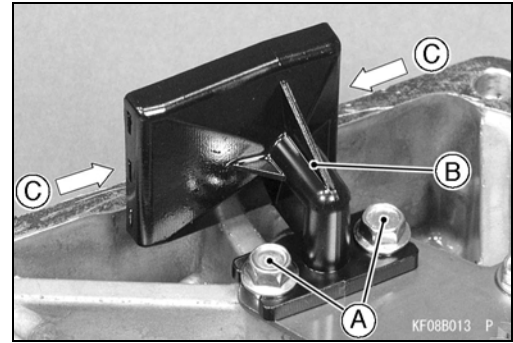

Oil Screen Installation

- Clean the oil screen thoroughly whenever it is removed for any reason.
- Insert the oil screen [A] into slots [B] in the pipe [C], and install the pipe on the crankcase cover with the mounting bolts.

Torque - Oil Pipe Mounting Bolts: 6.9 N·m (0.70 kgf·m, 61 in·lb)

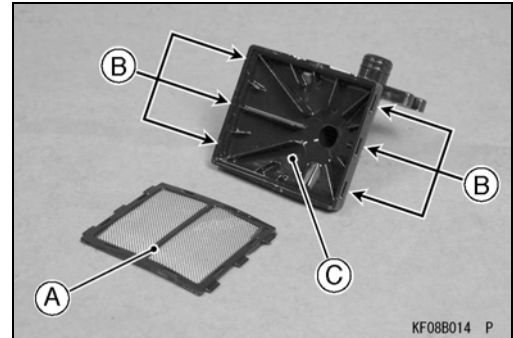

Cleaning and Inspection

- Clean the oil screen with high flash-point solvent and remove any particles stuck to it.

⚠ WARNING

Clean the screen in a well-ventilated area, and take care that there is no spark or flame anywhere near the working area. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents.

NOTE

- *While cleaning the screen, check for any metal particles that might indicate internal engine damage.*
- Check the screen carefully for any damage: holes and broken wire.
- ★ If the screen is damaged, replace it.


Camshaft/Crankshaft

Table of Contents

Exploded View	7-2
Specifications	7-4
Crankcase	7-5
Crankcase Cover Removal	7-5
Crankcase Cover Installation	7-5
Inspection	7-6
Cleaning	7-7
Breather	7-8
Breather Valve Removal	7-9
Breather Valve Installation	7-9
Breather Valve Inspection	7-10
Camshaft, Tappet	7-11
Camshaft, Tappet Removal	7-11
Camshaft, Tappet Installation	7-11
Camshaft Disassembly	7-12
Camshaft Assembly	7-12
Camshaft Inspection	7-12
Camshaft Bearing/Journal Wear	7-12
Crankshaft, Connecting Rod	7-14
Connecting Rod Removal	7-14
Connecting Rod Installation	7-14
Crankshaft Removal	7-14
Crankshaft Installation	7-14
Cleaning/Inspection	7-14
Connecting Rod Bend/Twist	7-15
Connecting Rod Big End/Crankpin Width Wear	7-15
Connecting Rod Big End Bearing/Crankpin Wear	7-16
Crankshaft Runout	7-16
Crankshaft Main Journal/Wear	7-16

7-2 CAMSHAFT/CRANKSHAFT

Exploded View

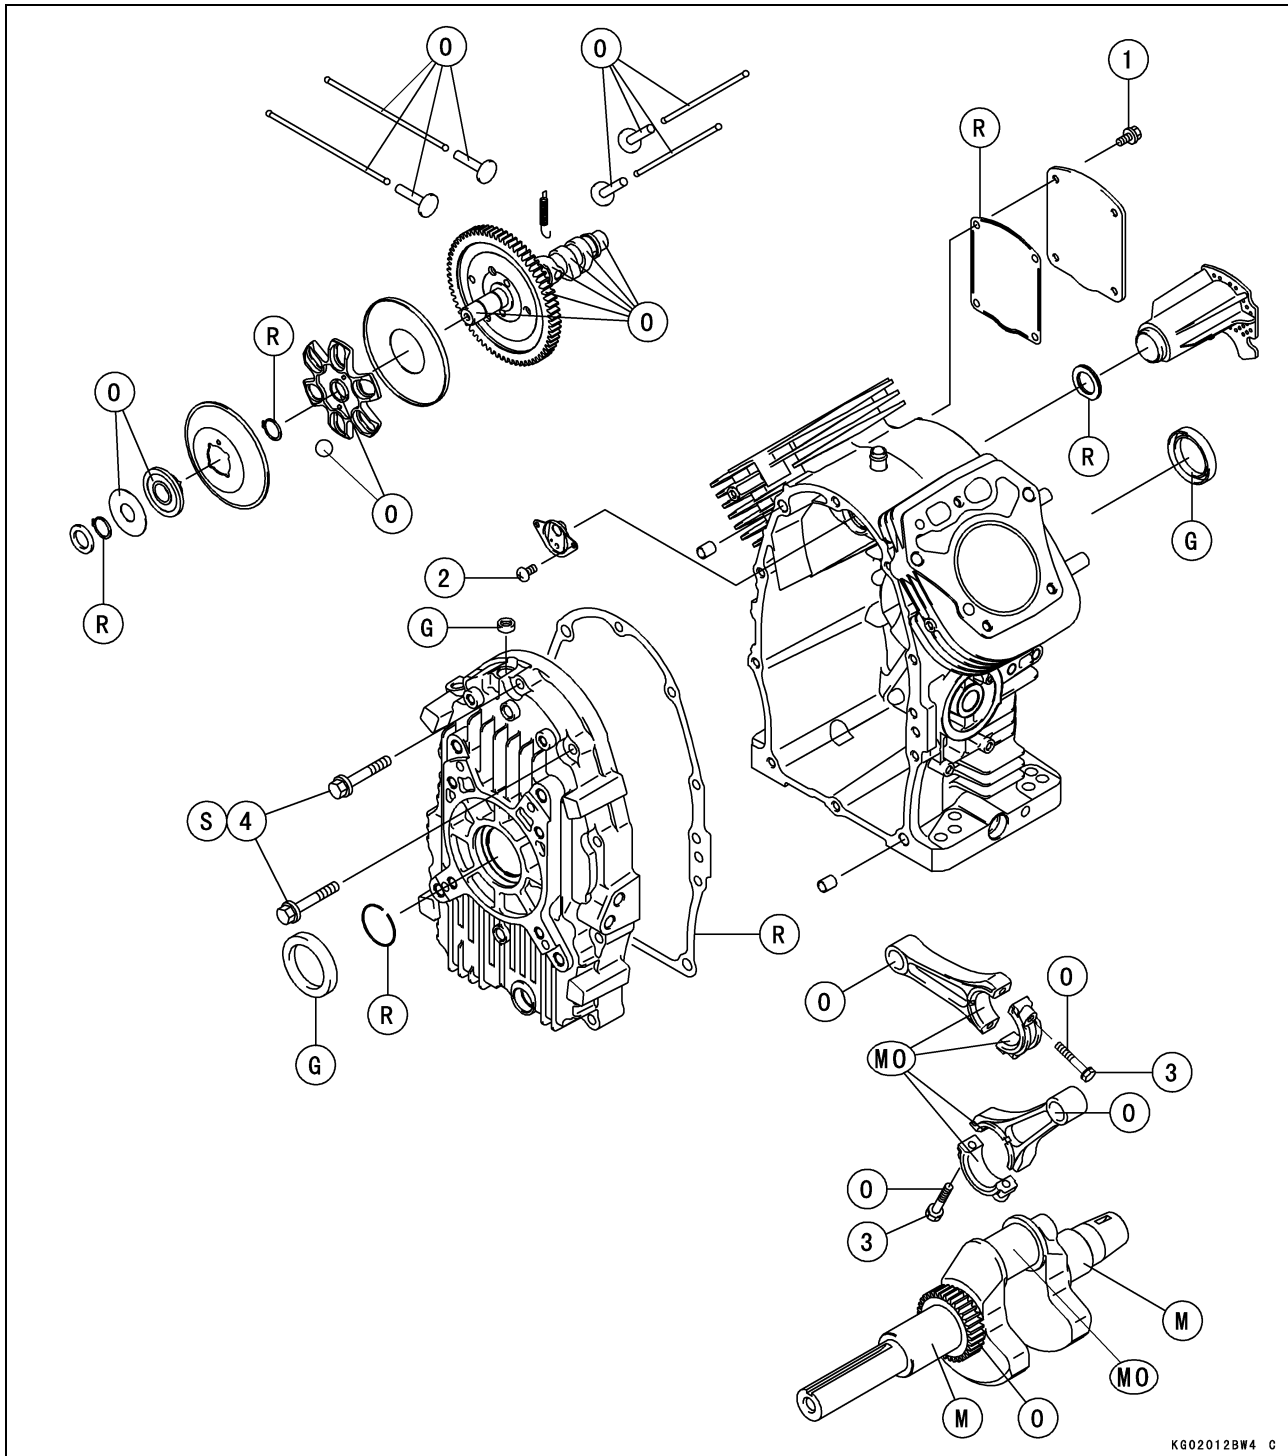

KG02012BW4 C

CAMSHAFT/CRANKSHAFT 7-3

Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Breather Chamber Cover Bolts	5.9	0.60	52 in·lb	
2	Breather Valve Mounting Screws	2.9	0.30	26 in·lb	
3	Connecting Rod Big End Bolts	9.8	1.0	87 in·lb	O
4	Crankcase Cover Bolts	32	3.3	24	S

G: Apply grease.

M: Apply molybdenum disulfide grease.

MO: Apply molybdenum disulfide oil solution.

(mixture of the engine oil and molybdenum disulfide grease in a weight ratio 10 : 1)

O: Apply engine oil.

R: Replacement Parts

S: Follow the specific tightening sequence.

7-4 CAMSHAFT/CRANKSHAFT


Specifications

Item	Service Limit
Camshaft, Tappet Cam Lobe Height: Inlet, Exhaust Camshaft Journal Diameter: PTO Side Flywheel Side Camshaft Bearing Inside Diameter: Crankcase Crankcase Cover	 29.90 mm (1.177 in.) 15.985 mm (0.6293 in.) 15.985 mm (0.6293 in.) 16.136 mm (0.6352 in.) 16.136 mm (0.6352 in.)
Crankshaft, Connecting Rod Connecting Rod Bend Connecting Rod Twist Connecting Rod Big End Width Crankpin Width Connecting Rod Big End Inside Diameter Crankpin Outside Diameter Crankshaft Runout Crankshaft Journal Diameter: PTO Side Flywheel Side	 TIR 0.15/100 mm (0.006/3.94 in.) TIR 0.15/100 mm (0.006/3.94 in.) 20.95 mm (0.825 in.) 42.5 mm (1.673 in.) 40.04 mm (1.576 in.) 39.94 mm (1.572 in.) TIR 0.05 mm (0.002 in.) 39.90 mm (1.571 in.) 39.90 mm (1.571 in.)
Crankcase PTO Shaft Bearing Inside Diameter: Crankcase Cover Crankshaft Journal Bearing Inside Diameter: Crankcase	 39.99 mm (1.571 in.) 39.85 mm (1.569 in.)

Crankcase

Crankcase Cover Removal

- Set the engine on a clean surface while parts are being removed.
- Drain the engine oil (see Oil Change in the Lubrication System chapter).
- Remove:
 - Muffler (see Muffler Removal in the Engine Top End chapter)
 - Control Panel (see Control Panel Removal in the Fuel System chapter)
 - Governor Arm (see Governor Arm removal in the Fuel System chapter)
- Unscrew the mounting bolts in the order shown [1 ~ 10] and remove the crankcase cover [A] from the crankcase.
- There are two knock pins on the crankcase mating surface. A wooden or plastic mallet may be used to gently tap loose the crankcase cover.

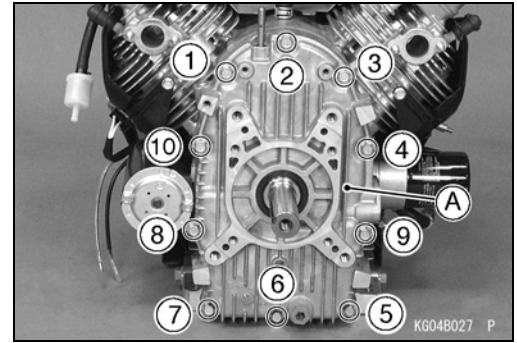

CAUTION

Do not remove the oil seal unless it is necessary. If removed, replace it with a new one.

- Remove the oil seal with a screw driver.


Crankcase Cover Installation

- Before fitting the cover onto the crankcase, note the following.
 - Chip off the old gasket from the mating surfaces of the crankcase and cover.
 - Using compressed air, blow out the oil passage in the crankcase cover.
 - With a high flash-point solvent, clean off the mating surfaces of the crankcase and cover, and wipe dry.

WARNING

Clean the crankcase and cover in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Do not use gasoline or a low flash-point solvent to clean parts. A fire or explosion could result.


- Be sure to replace any oil seal removed with a new one.
- When replacing the oil seal of the crankcase cover and crankcase, note the following.
 - Install the oil seal so that the marks [A] face out.
 - Pack some amount of a high temperature grease [B] into the space between the seal lip [C] and dust lip [D].
 - Press in the new oil seal using a press or suitable tools until it is flush with flange surface [E].
 - Take care not to damage the seal lips.

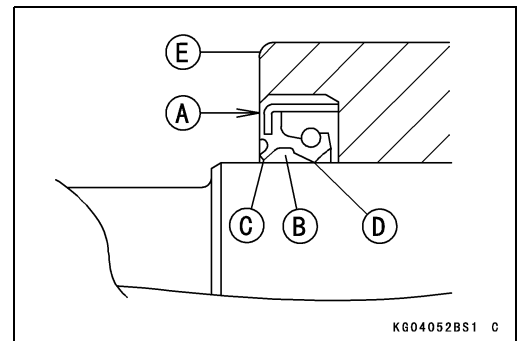


7-6 CAMSHAFT/CRANKSHAFT

Crankcase

- When replacing the oil seal [A] of the governor shaft, note the following.
- Install the oil seal into the crankcase cover [B] after the governor shaft is inserted in the cover, and so that the marks [C] face out.
- The depth [D] is 0 ~ 2 mm (0 ~ 0.08 in.).

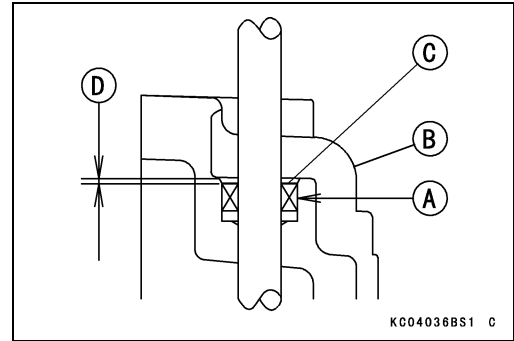


- Apply molybdenum disulfide grease to the PTO shaft bearing.
- Check to see that the crankcase dowel pins [A] are in place on the crankcase.
- Replace the crankcase gasket [B] with a new one.
- Install the new gasket on the crankcase.

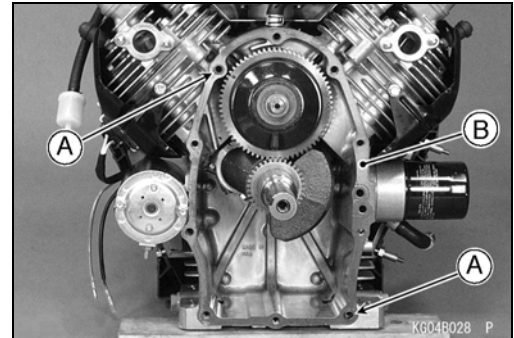

- Install the crankcase cover and tighten the crankcase cover bolts following the tightening sequence shown.

Torque - Crankcase Cover Bolts: 32 N·m (3.3 kgf·m, 24 ft·lb)

- Do not turn one screw down completely before the others, as it may cause the crankcase cover to warp.

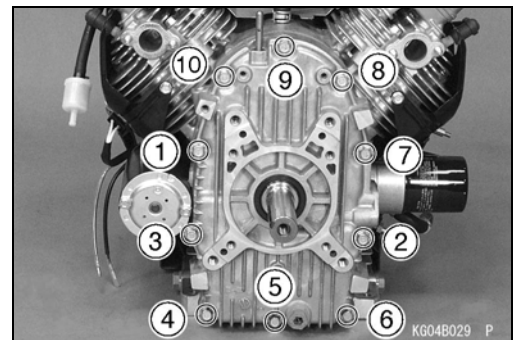


Inspection

- Measure the inside diameter [A] of the PTO shaft bearing on the crankcase cover at several points.
- This bearing is not replaceable.
- ★ Replace the crankcase cover if the inside diameter is more than the service limit.

PTO Shaft Bearing Inside Diameter


Service Limit: 39.99 mm (1.571 in.)

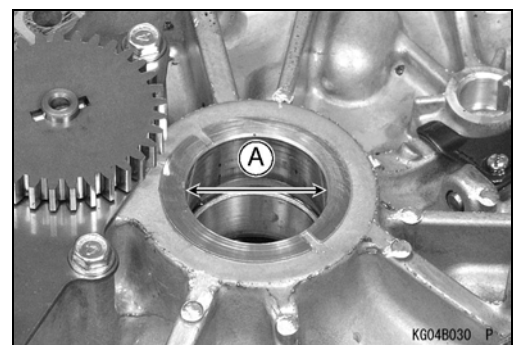

- Measure the inside diameter [A] of the crankshaft journal bearing on the crankcase at several points.
- This bearing is not replaceable.
- ★ Replace the crankcase if the inside diameter is more than the service limit.

Crankshaft Journal Bearing Inside Diameter

Service Limit: 39.85 mm (1.569 in.)

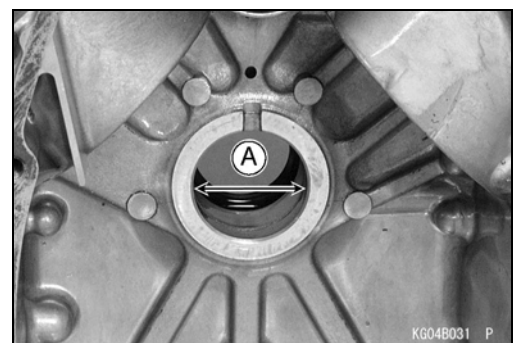

Crankcase

Cleaning

- Remove:
 - Camshaft and Tappets (see Camshaft, Tappet Removal)
 - Crankshaft (see Crankshaft Removal)
- Clean up the crankcase and cover with a high flash-point solvent, and blow out any foreign particles that may be in the pockets inside of the crankcase with compressed air.

⚠ WARNING


Clean the crankcase and cover in a well-ventilated area, and take care that there is no spark or flame anywhere near the working area. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents.

7-8 CAMSHAFT/CRANKSHAFT

Breather

The function of the breather is to create a vacuum in the crankcase which prevents oil from being forced out of the engine through the piston rings, oil seals or gaskets. A sealed-type crankcase emission control system is used to eliminate blow-by gases. The blow-by gases are led to the breather chamber through the crankcase and the camshaft. Then, it is drawn into the inlet pipe through the cylinder head and the hose and mixed with the clean air flow, and subsequently coming into the combustion chamber through the carburetor and the inlet manifold.


Oil is primarily separated from the gases while passing through the inside of the rocker chamber from the crankcase, and secondly separated from the gases in the breather chamber, and then returned back to the crankcase cover.

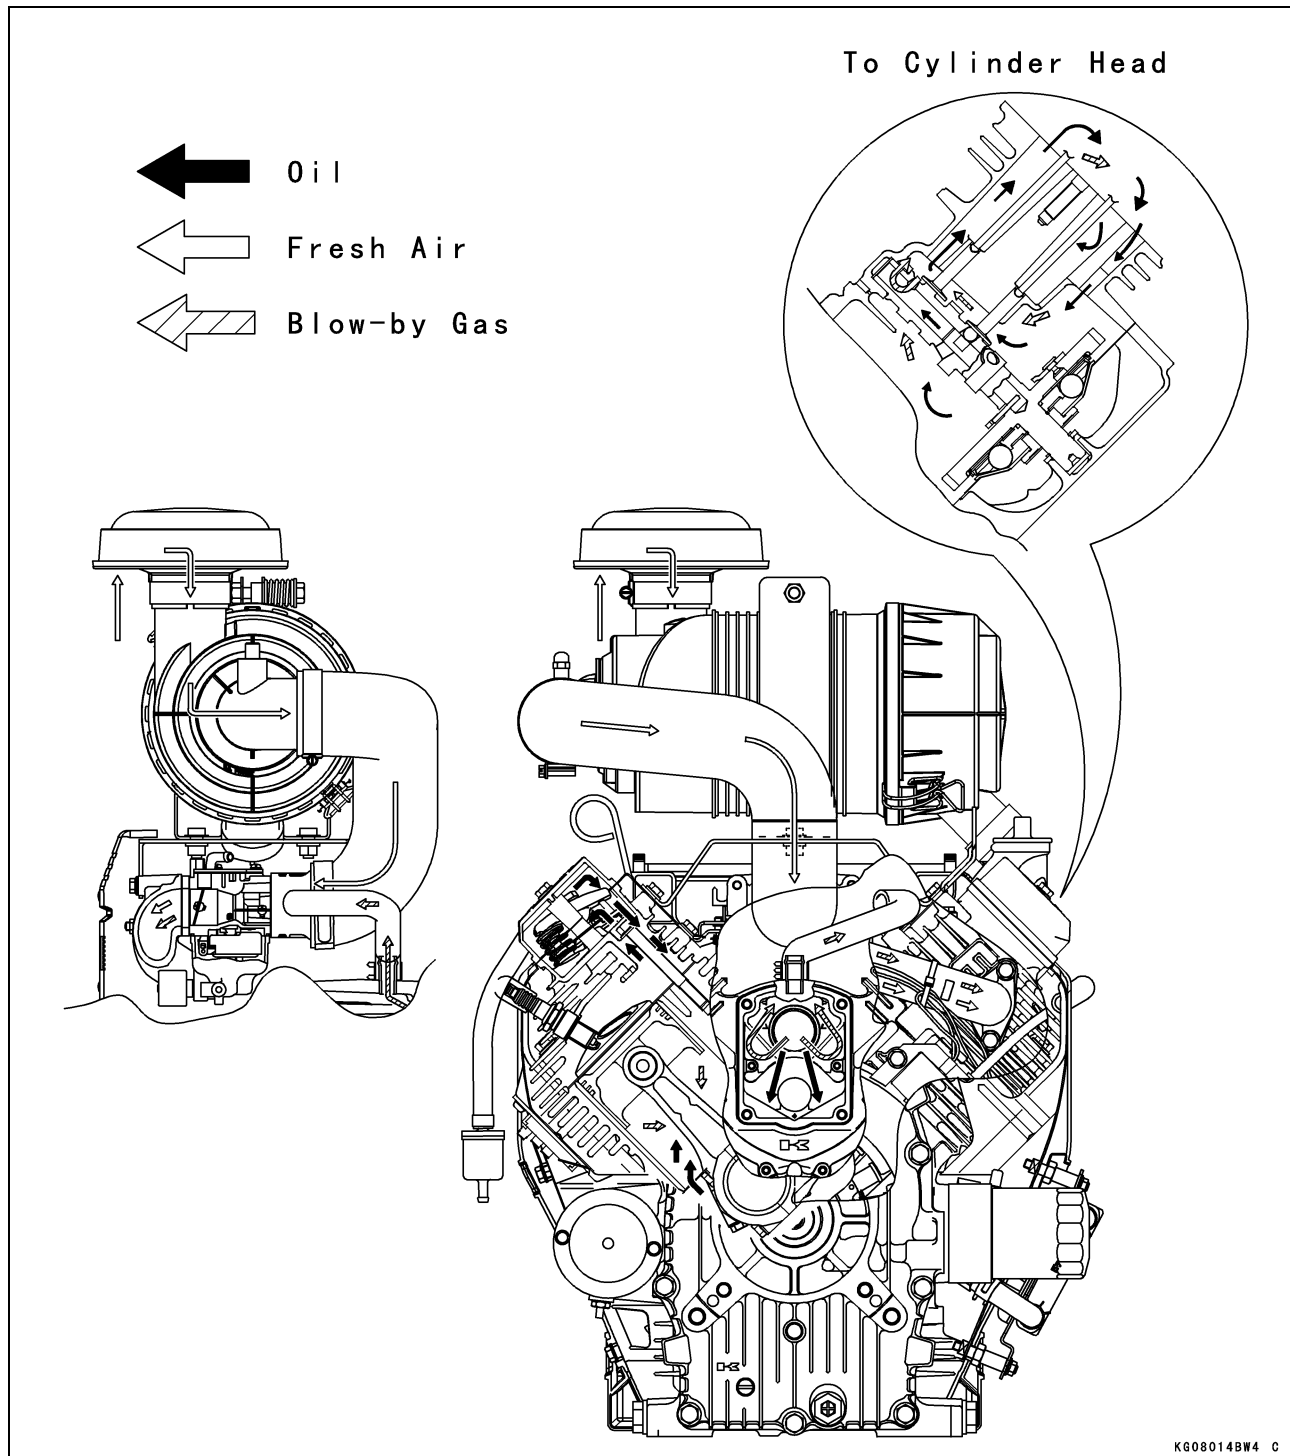


Breather

Breather Valve Removal


- Remove:
 - Inlet Manifold (see Inlet Manifold Removal in the Fuel System chapter)
 - Flywheel (see Flywheel, Starter Coil Removal in the Electrical System chapter)
 - Bolts [A]
 - Breather Chamber Cover [B]

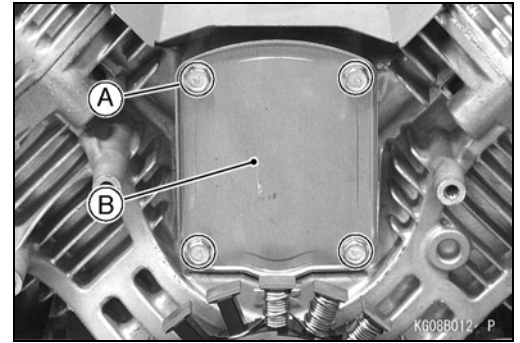

- Remove the breather pipe [A].

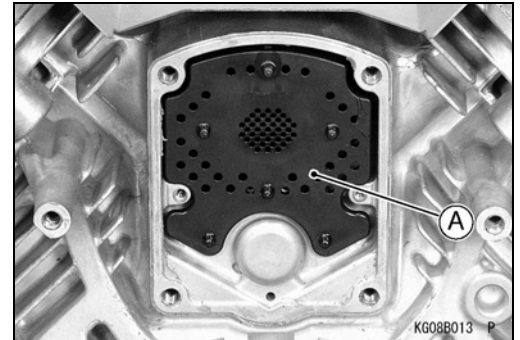


- Remove:
 - Camshaft (see Camshaft, Tappet Removal)
 - Screws [A]
 - Breather Valve [B]

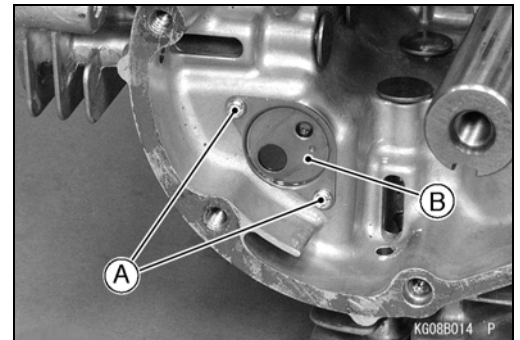

Breather Valve Installation


- Install the breather valve.
 - Torque - Breather Valve Mounting Screws: 2.9 N·m (0.30 kgf·m, 26 in·lb)**
- Replace the O-ring of the breather pipe with a new one.
- Apply engine oil to the new O-ring before installation.
- Be sure the drain hole [A] on the breather chamber does not accumulate with slugs.

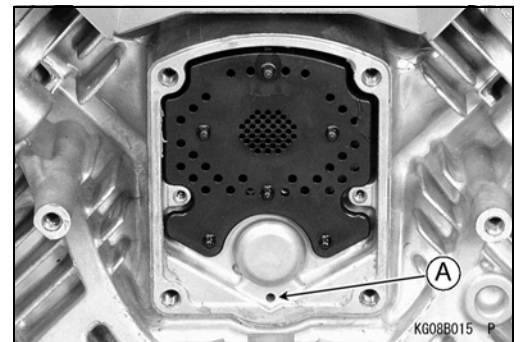

- Replace the breather chamber cover gasket [A] with a new one.
- Install a new gasket so the silicone bead side [B] faces the crankcase.
- Install the breather chamber cover.

- **Torque - Breather Chamber Cover Bolts: 5.9 N·m (0.60 kgf·m, 52 in·lb)**

- Install the removed parts (see appropriate chapters).

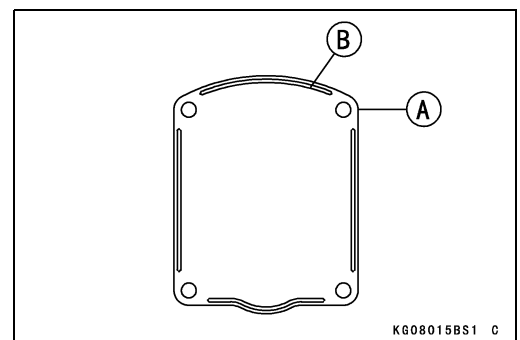


7-10 CAMSHAFT/CRANKSHAFT

Breather

Breather Valve Inspection


- Visually inspect the reed valve [A] for breakage, hair cracks or distortion, replace it if necessary.
- Visually inspect the back plate [B] for damage or rough contact surface, replace it if necessary.
- Inspect the valve seating surface [C]. The surface should be free of nicks or burrs.

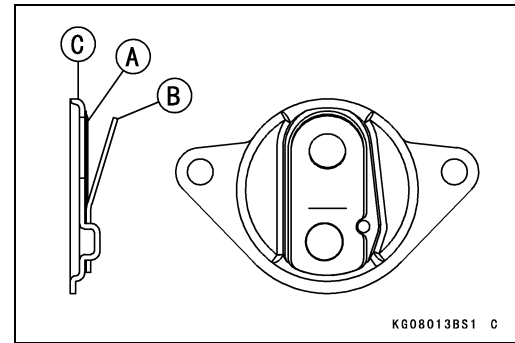


Camshaft, Tappet

Camshaft, Tappet Removal

- Set the engine on a clean surface while parts are being removed.
- Drain the engine oil (see Oil Change in the Periodic Maintenance chapter).
- Remove:
 - Muffler (see Muffler Removal in the Engine Top End chapter)
 - Control Panel Assembly (see Control Panel Assembly Removal in the Fuel System chapter)
 - Carburetor (see Carburetor Removal in the Fuel System chapter)
 - Inlet Manifold (see Inlet Manifold Removal in the Fuel System chapter)
 - Crankcase Cover (see Crankcase Cover Removal)
 - Rocker Covers (see Cylinder Assembly Removal in the Engine Top End chapter)
 - Push Rod (see Push Rod Removal in the Engine Top End chapter)
- Turn the crankcase up side down so that the tappets will fall away from the cam lobes.
- Pull the camshaft [A] out of the crankcase.

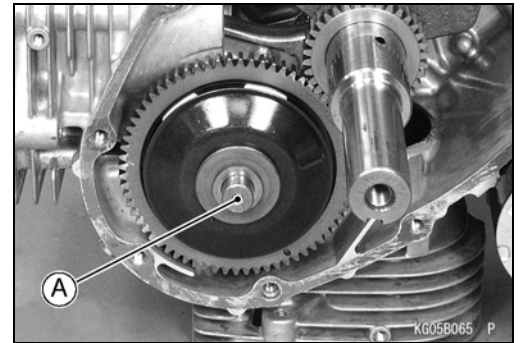


- Remove the tappets [A] and mark them so they can be installed in their original positions during assembly.

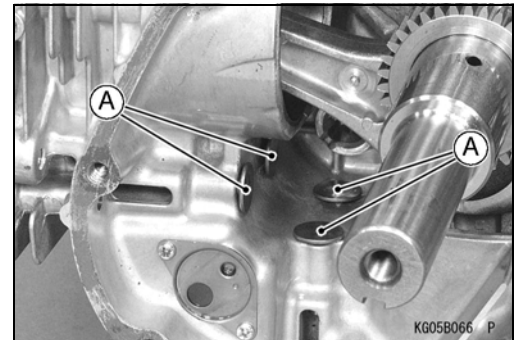

Camshaft, Tappet Installation


- Apply engine oil to the following.
 - Tappet Journal
 - Camshaft Journal
 - Cam Lobe Surface
 - Camshaft Gear
- Align the punch mark [A] on the crankshaft gear with punch mark [B] on the camshaft gear.

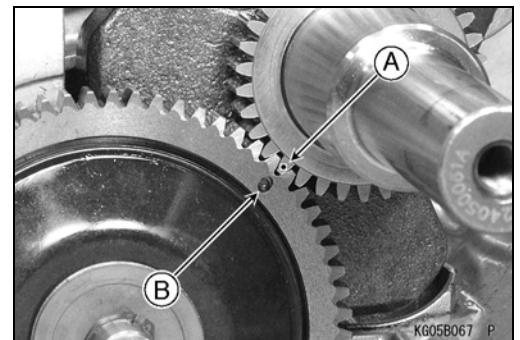

7-12 CAMSHAFT/CRANKSHAFT


Camshaft, Tappet

- Install the washer [A] on the camshaft [B].
- Install the removed parts (see appropriate chapters).

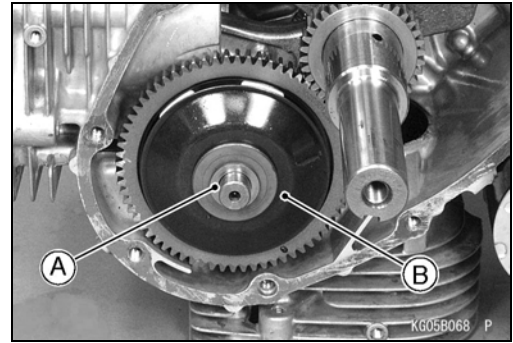


Camshaft Disassembly

- Remove:
 - Governor Assembly (see Governor Assembly Removal in the Fuel System chapter).
 - Spring [A]
- Do not remove the ACR (Automatic Compression Release) weight [B].

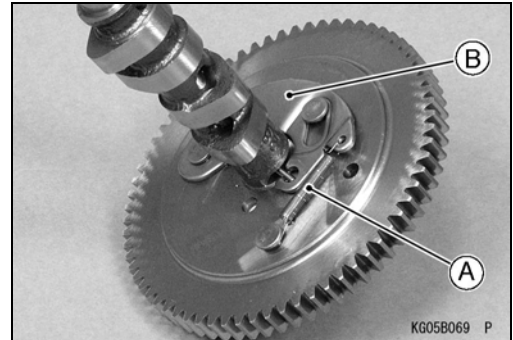


Camshaft Assembly

- Install the governor assembly (see Governor Assembly Installation in the Fuel System chapter).
- After assembling the camshaft, check the following items.
 - The governor plate [A] must move freely.
 - While shaking the camshaft, ACR weight [B] swings smoothly.

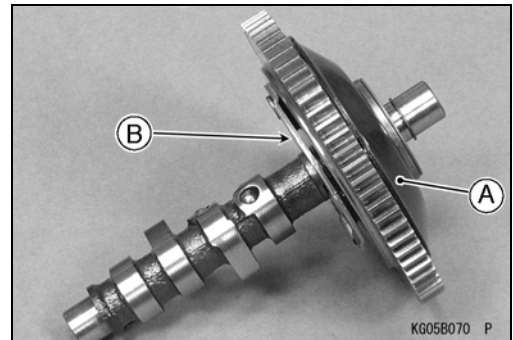

Camshaft Inspection

- Check the camshaft gear [A] for pitting, fatigue cracks, burrs or an evidence of improper tooth contact.
- ★ Replace the shaft if necessary.
- Check the top of the cam lobes [B] for wear, burrs or uneven contact.
- ★ Replace the shaft if necessary.

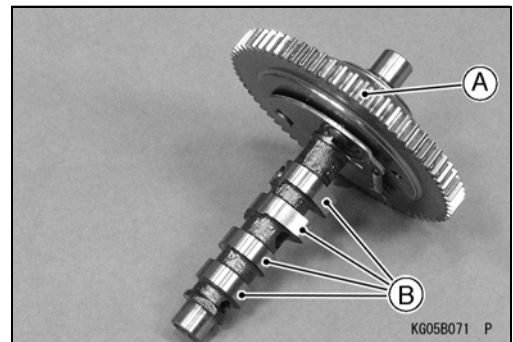

Camshaft Bearing/Journal Wear

- Measure the height of each cam lobe.
- ★ If the cam height is less than the service limit for either lobe, replace the camshaft.

Cam Lobe Height

Service Limit:

Inlet, Exhaust 29.90 mm (1.177 in.)




Camshaft, Tappet

- Measure both camshaft journals at several points around the journal circumference.
- ★ If the journal diameter is less than the service limit, replace the camshaft.


PTO Side Camshaft Journal Diameter
Service Limit: 15.985 mm (0.6293 in.)

Flywheel Side Camshaft Journal Diameter
Service Limit: 15.985 mm (0.6293 in.)

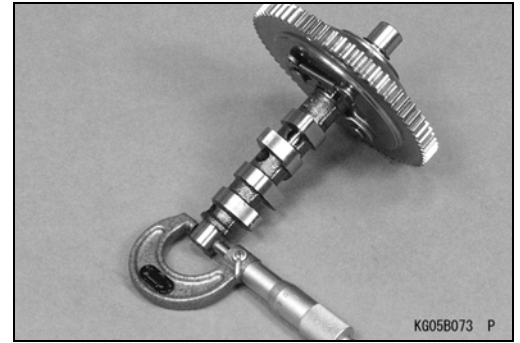


- Measure the inside diameter [A] of the camshaft bearing on the crankcase at several points.
- This bearing is not replaceable.
- ★ Replace the crankcase if the inside diameter is more than the service limit.

Crankcase Side Camshaft Bearing Inside Diameter
Service Limit: 16.136 mm (0.6352 in.)

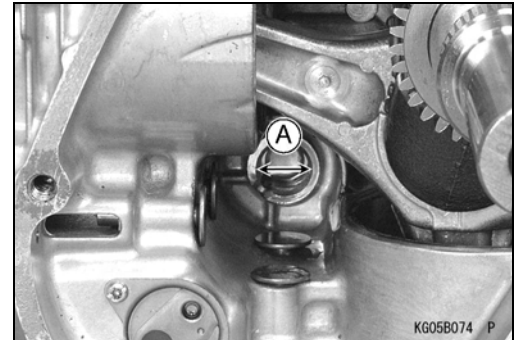

- Measure the inside diameter [A] of the camshaft bearing on the crankcase cover at several points.
- This bearing is not replaceable.
- ★ Replace the crankcase cover if the inside diameter is more than the service limit.

Crankcase Cover Side Camshaft Bearing Inside Diameter
Service Limit: 16.136 mm (0.6352 in.)

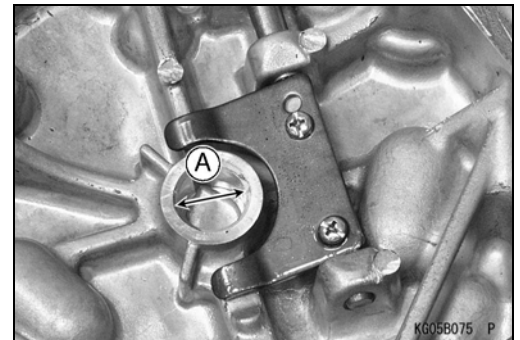

7-14 CAMSHAFT/CRANKSHAFT

Crankshaft, Connecting Rod

Connecting Rod Removal


- Refer to the Piston Removal in the Engine Top End chapter.

Connecting Rod Installation

- Refer to the Piston Installation in the Engine Top End chapter.

Crankshaft Removal

- Set the engine on a clean surface while parts are being removed.
- Drain the engine oil (see Oil Change in the Periodic Maintenance chapter).
- Remove:
 - Flywheel (see Flywheel, Stator Coil Removal in the Electrical System chapter)
 - Camshaft (see Camshaft, Tappet Removal)
 - Connecting Rod and Piston (see Piston Removal in the Engine Top End chapter)
- Pull the crankshaft [A] out of the crankcase.
- Tap gently with a wooden or plastic mallet if necessary to loosen the crankshaft.

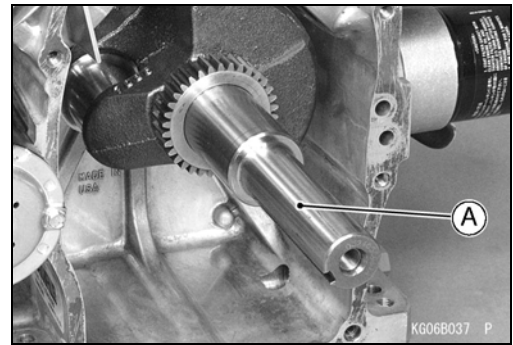

Crankshaft Installation

- Clean up the crankshaft and crankcase thoroughly, especially at the bearing contact surfaces.
- Pack some amount of high temperature grease into the oil seal on the crankcase (see Crankcase Cover Installation).
- Apply molybdenum disulfide grease to the crankshaft journal and crankcase bearing.
- Apply molybdenum disulfide oil solution to the outer surface of the crankpin.
- The molybdenum disulfide oil solution is a mixture of engine oil and molybdenum disulfide grease with a weight ratio (10 : 1).
- Carefully insert the crankshaft flywheel end into the main bearing and oil seal in the crankcase.
- Take care not to damage the seal lips.
- Install the removed parts (see appropriate chapters).


Cleaning/Inspection

- After removing, clean the crankshaft and connecting rods with a high flash-point solvent and dry them with compressed air.
- Inspect the teeth of the crankshaft gear for pitting, fatigue cracks, burrs and evidence of improper tooth contact.
- ★ Replace the shaft if necessary.
- Inspect the crankshaft and connecting rods especially at the bearing surfaces for wear, scratches, evidence of improper contact or other damages.
- ★ Replace them if necessary.

Crankshaft, Connecting Rod

Connecting Rod Bend/Twist


- Measure connecting rod bend.
- Select an arbor of the same diameter as the connecting rod big end, and insert the arbor through the connecting rod big end.
- Select an arbor of the same diameter as the piston pin and at least 100 mm (3.94 in.) long, and insert the arbor through the connecting rod small end.
- On a surface plate, set the big-end arbor on V blocks [A].
- With the connecting rod held vertically, use a height gauge [B] to measure the difference in the height of the small end arbor above the surface plate over a 100 mm (3.94 in.) length to determine the amount of connecting rod bend.
- ★ If connecting rod bend exceeds the service limit, the connecting rod must be replaced.

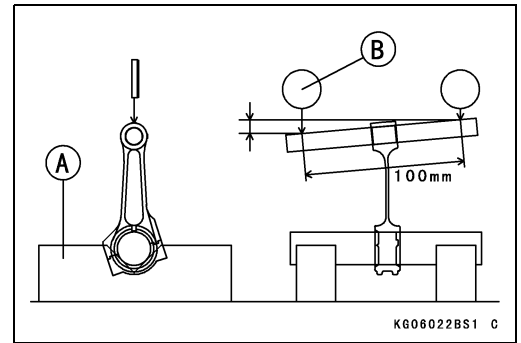

Connecting Rod Bend

Service Limit: TIR 0.15/100 mm (0.006/3.94 in.)

- Measure connection rod twist.
- With the big-end arbor still on the V blocks, hold the connection rod horizontally and measure the amount that the small end arbor varies from being parallel with the surface plate over a 100 mm length of the arbor to determine the amount of connecting rod twist.
- ★ If connection rod twist exceeds the service limit, the connecting rod must be replaced.

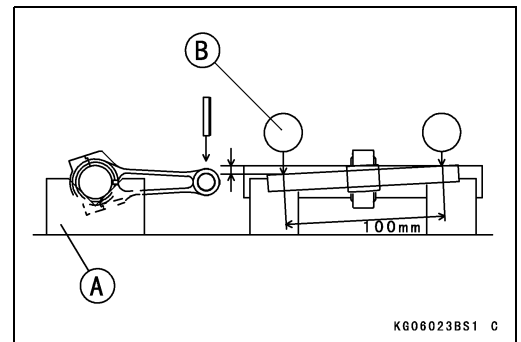

Connecting Rod Twist


Service Limit: TIR 0.15/100 mm (0.006/3.94 in.)

Connecting Rod Big End/Crankpin Width Wear

- Measure the connecting rod big end width [A] with a micrometer or dial caliper.
- ★ If the measurement is less than the service limit, replace the connecting rod.

Connecting Rod Big End Width


Service Limit: 20.95 mm (0.825 in.)

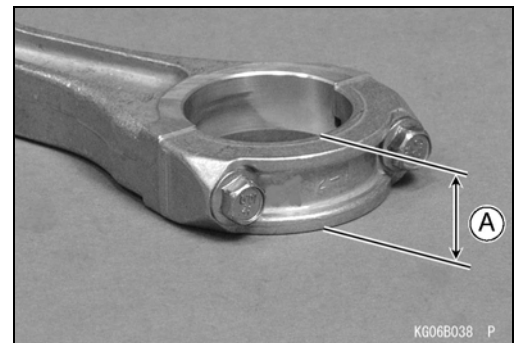

- Measure the crankpin width [A] with a dial caliper.
- ★ If the crankpin width is more than the service limit, replace the crankshaft.

Crankpin Width

Service Limit: 42.5 mm (1.673 in.)

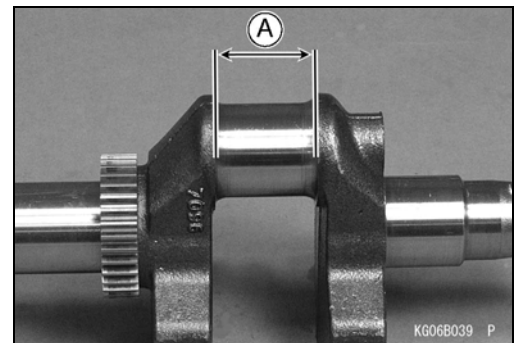


7-16 CAMSHAFT/CRANKSHAFT

Crankshaft, Connecting Rod

Connecting Rod Big End Bearing/Crankpin Wear


- Apply a light film of engine oil on the thread of the cap bolts.
- Install the cap bolts and tighten the bolts to the specified torque (see Piston Installation in Engine Top End chapter).
- Measure the inside diameter [A] of big end at several points with a telescoping gauge or inside micrometer.
- ★ If the inside diameter is more than the service limit, replace the connecting rod with a new one.

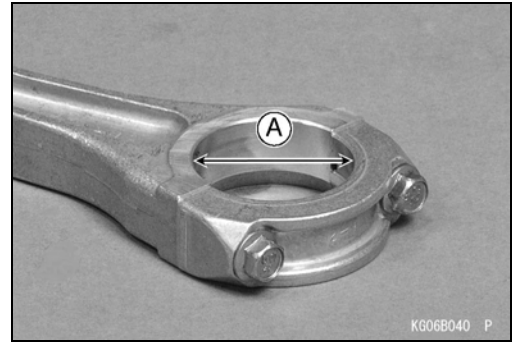

Connecting Rod Big End Inside Diameter

Service Limit: 40.04 mm (1.576 in.)

- Measure the crankpin outside diameter [A].
- Use a micrometer to measure several points around the crankpin circumference.
- ★ If the crankpin diameter is less than the service limit, replace the crankshaft with a new one.

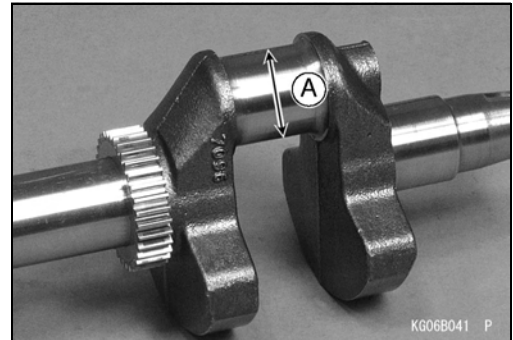


Crankpin Outside Diameter

Service Limit: 39.94 mm (1.572 in.)

Crankshaft Runout

- Measure the crankshaft runout.
- Set the crankshaft in a flywheel alignment jig [A] or on V blocks gauge.
- Set a dial gauge [B] against both bearing journals.
- Turn the crankshaft slowly to measure the runout. The difference between the highest and lowest dial gauge readings (TIR) is the amount of runout.
- ★ If the measurement exceeds the service limit, replace the crankshaft.

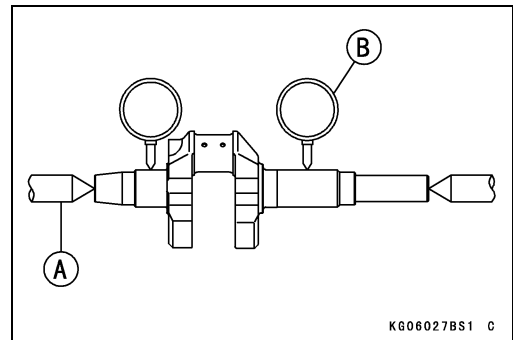

Crankshaft Runout

Service Limit: TIR 0.05 mm (0.002 in.)

Crankshaft Main Journal/Wear


- Measure both main journals at several points around the journal circumference.
- ★ If the journal diameter is less than the service limit, replace the crankshaft with a new one.

PTO Side Crankshaft Journal Diameter [A]

Service Limit: 39.90 mm (1.571 in.)

Flywheel Side Crankshaft Journal Diameter [B]

Service Limit: 39.90 mm (1.571 in.)

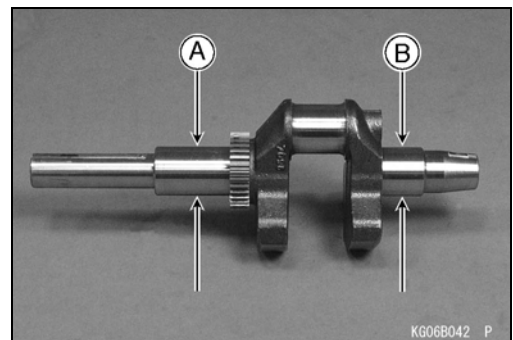


Electrical System

Table of Contents

Exploded View	8-2
Specifications	8-4
Wiring Diagram	8-5
Precautions	8-6
Charging	8-7
Flywheel, Stator Coil Removal	8-7
Flywheel, Stator Coil Installation	8-8
Charging System Operational Inspection	8-10
Stator Coil Resistance	8-10
Unregulated Stator Output	8-11
Regulator Removal	8-11
Regulator Installation	8-11
Regulator Resistance	8-11
Ignition System	8-12
Ignition Coil Removal	8-13
Ignition Coil Installation	8-13
Ignition Coil Inspection	8-13
Spark Plug Cleaning and Gap Inspection	8-14
Starter System	8-15
Starter Motor Removal	8-15
Starter Motor Installation	8-15
Starter Motor Disassembly	8-15
Starter Motor Assembly	8-16
Starter Motor Brush Inspection	8-16
Brush Spring Inspection	8-16
Armature Inspection	8-16
Yoke Assembly Inspection	8-18
Pinion Clutch Inspection	8-18

8-2 ELECTRICAL SYSTEM

Exploded View

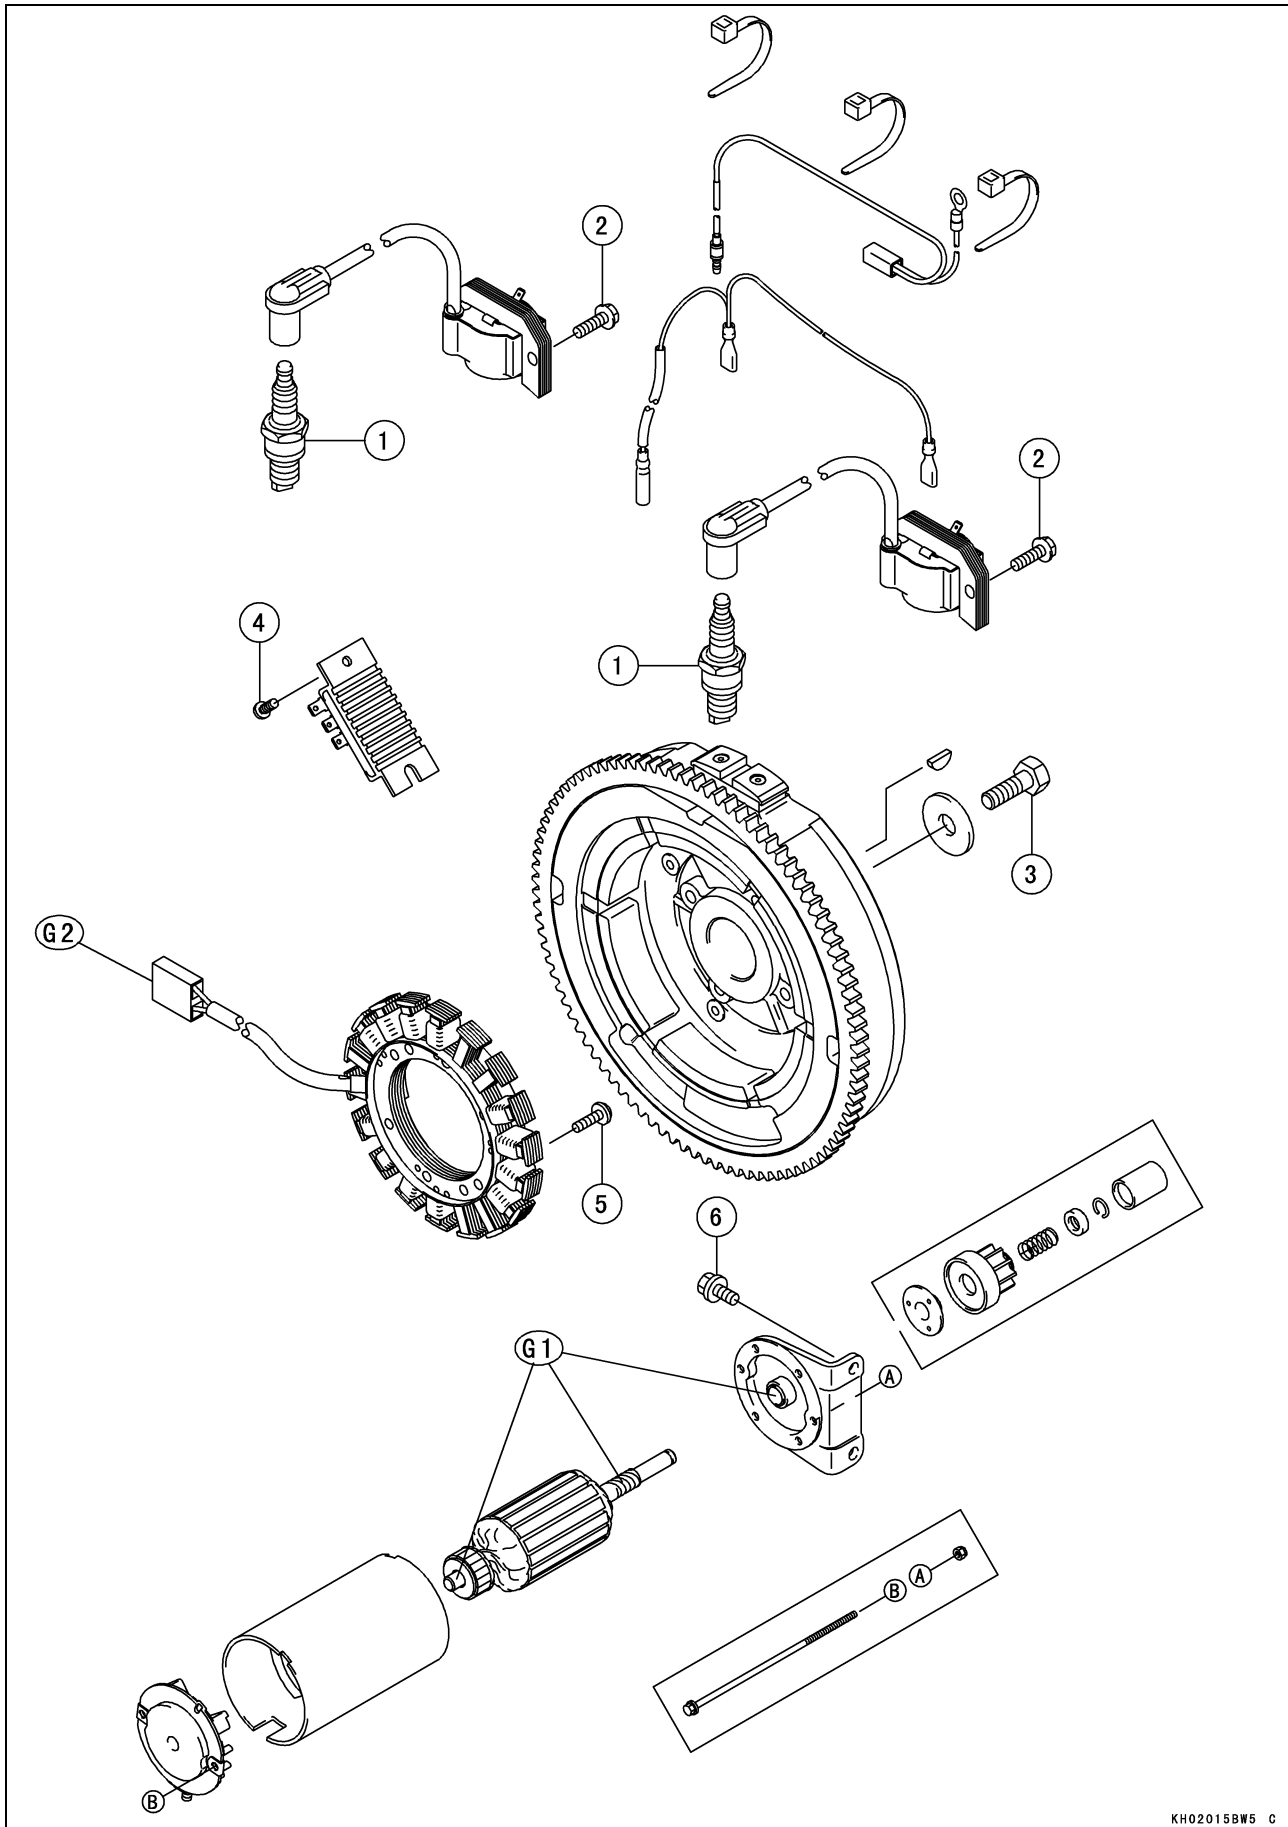

KH02015BW5 C

Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Spark Plugs	22	2.2	16	
2	Ignition Coil Bolts	6.9	0.70	61 in·lb	
3	Flywheel Bolt	56	5.7	41	
4	Regulator Screw	3.4	0.35	30 in·lb	
5	Stator Coil Screws	2.9	0.30	26 in·lb	
6	Starter Motor Mounting Bolts	15	1.5	11	

G1: Apply grease.


G2: Apply grease [Three Bond: TB2585G or Grease No. Rykon premium grease EP#2 general purpose (Green)].

8-4 ELECTRICAL SYSTEM

Specifications

Item	Standard	Service Limit
Charging System		
Regulated Output Voltage	DC 14.1 V	DC 15 V
Alternator Stator Coil Resistance	0.01~0.1 Ω	---
Unregulated Stator Output	AC 28.4 V/3 000 rpm	AC 26 V/3 000 rpm
Regulator Resistance	In the text	
Ignition System		
Ignition Coil:		
Coil Air Gap	0.2 ~ 0.4 mm (0.008 ~ 0.016 in.)	---
Primary Winding Resistance	In the text	---
Secondary Winding Resistance	In the text	---
Spark Plug:		
Type	NGK BPR4ES	---
Plug Gap	0.7 ~ 0.8 mm (0.028 ~ 0.031 in.)	---
Electric Starter System		
Starter Motor:		
Carbon Brush Length (with Spring Boss)	12.7 mm (0.500 in.)	6.4 mm (0.250 in.)
Commutator Groove Depth (Approx)	2.0 mm (0.078 in.)	0.9 mm (0.035 in.)
Commutator Outside Diameter	31.7 mm (1.250 in.)	31.1 mm (1.225 in.)
Commutator Runout	---	TIR 0.4 mm (0.016 in.)

Wiring Diagram

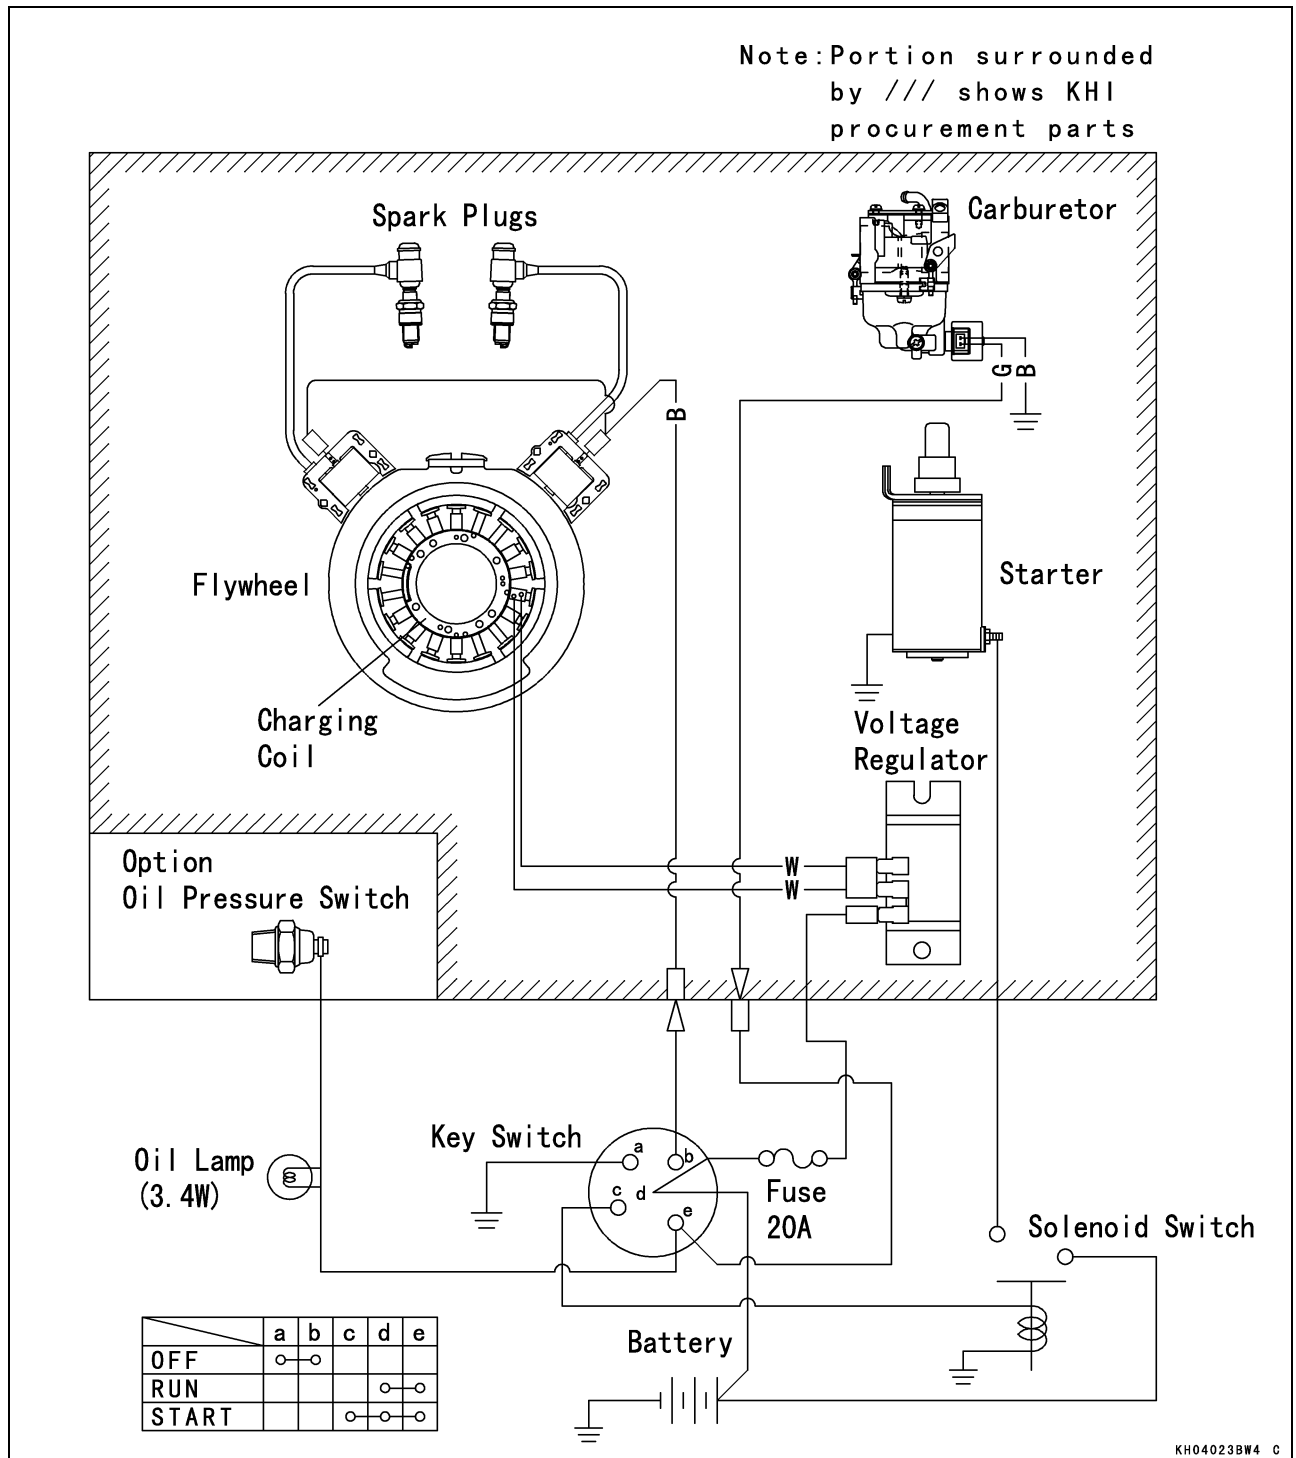


8-6 ELECTRICAL SYSTEM

Precautions


There are a number of important precautions that are musts when servicing electrical systems. Learn and observe all the rules below.

- Do not reverse the battery lead connections. This will burn out the diodes in the electrical parts.
- Always check battery condition before condemning other parts of an electrical system. A fully charged battery is a must for conducting accurate electrical system tests.
- The electrical parts should never be struck sharply, as with a hammer, or allowed to fall on a hard surface. Such a shock to the parts can damage them.
- To prevent damage to electrical parts, do not disconnect the battery leads or any other electrical connections when the engine switch is on, or while the engine is running.
- Because of the large amount of current, never keep the engine switch turned to the start position when the starter motor will not turn over, or the current may burn out the starter motor windings.
- Take care not to short the leads that are directly connected to the battery positive (+) terminal to the chassis ground.
- Troubles may involve one or in some cases all items. Never replace a defective part without determining what CAUSED the failure. If the failure was brought on by some other item or items, they too must be repaired or replaced, or the replacement part will soon fail again.
- Make sure all connectors in the circuit are clean and tight, and examine wires for signs of burning, fraying, etc. Poor wires and bad connections will affect electrical system operation.
- Measure coil and winding resistance when the part is cold (at room temperature).
- Electrical Connectors:

Female Connectors [A]

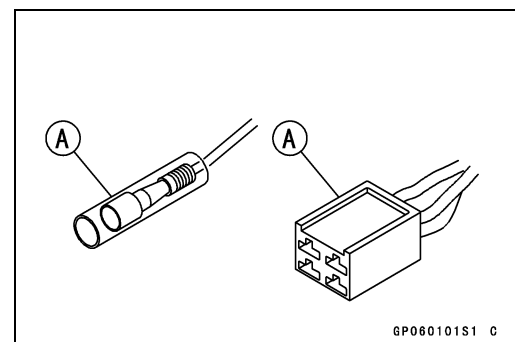


Male Connectors [B]

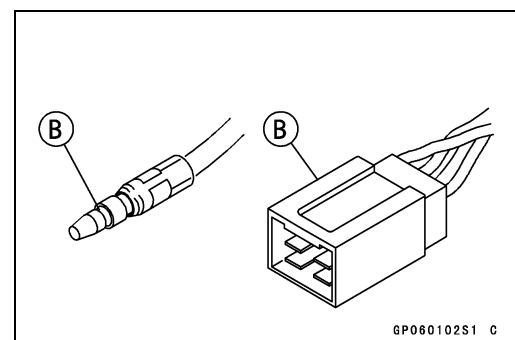


Charging

Flywheel, Stator Coil Removal


- Remove:
 - Oil Cooler (see Oil Cooler Removal in the Lubrication System chapter)
 - Bolts [A], Screen [B], and Spacer [C]

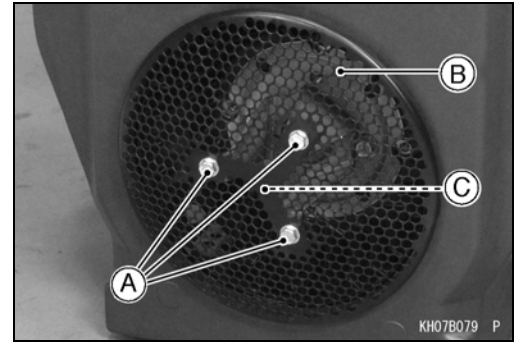


- Loosen the fan housing bolts [A] and fuel pump bracket bolts [B] and remove the fan housing [C].

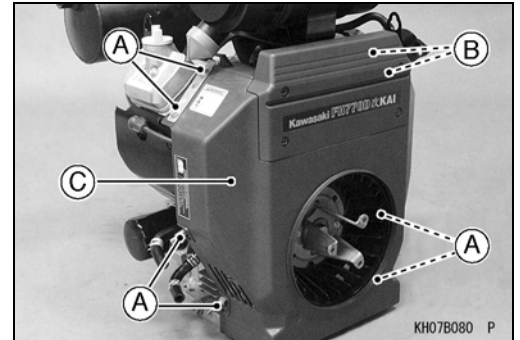


- Remove:
 - Connectors [A]
 - Bolts [B]
 - Ignition Coils [C] (see Ignition Coil Removal)

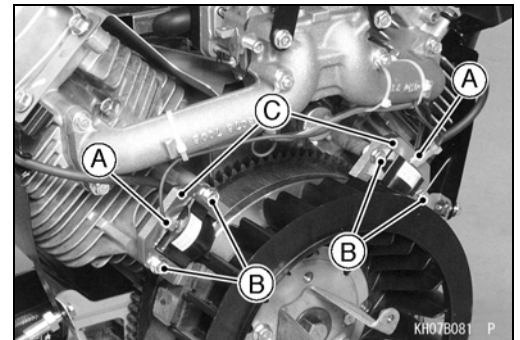

- Hold the flywheel with a suitable tool [C], remove the flywheel bolt [B], washer, and bracket [A].

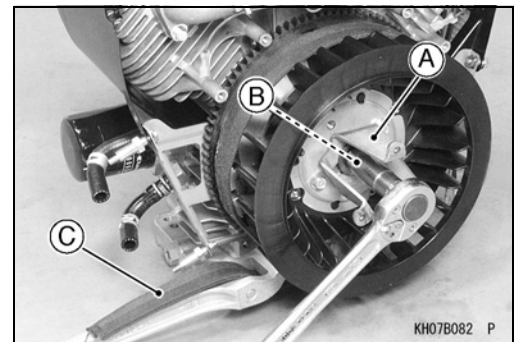

- Hold the flywheel with a suitable tool, remove the bolts [A], plate [B], and fan [C].

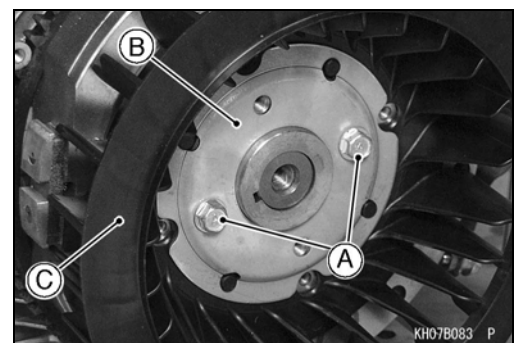


8-8 ELECTRICAL SYSTEM

Charging


- Using a suitable flywheel puller [A], remove the flywheel [B].

CAUTION


Always use flywheel puller.

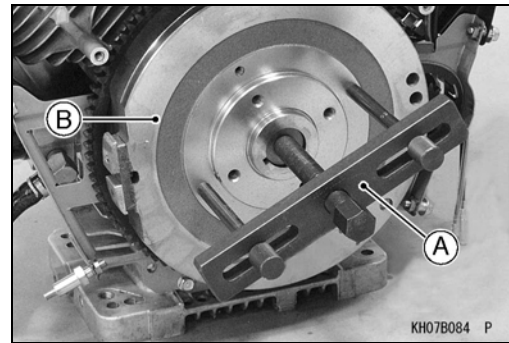

- Remove:
Woodruff Key [A]
Screws [B]

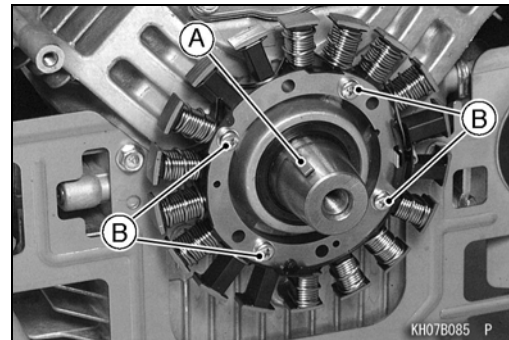


- Disconnect the stator coil connector.
- To remove the stator coil [A] harness, remove the bolts [B] and lower engine shroud [C].

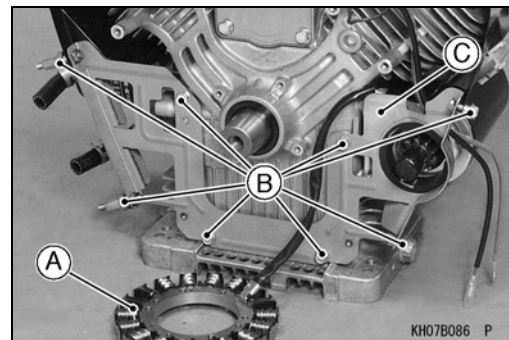


Flywheel, Stator Coil Installation

- Install the stator coil and tighten the screws.
Torque - Stator Coil Screws: 2.9 N·m (0.30 kgf·m, 26 in·lb)
- Using a cleaning fluid, clean off any oil or dirt on the following portions and dry them with a clean cloth.
Crankshaft Tapered Portion [A]
Flywheel Tapered Portion [B]
- Fit the woodruff key [C] securely in the slot in the crankshaft before installing the flywheel.
- Apply grease to the tapered portion of flywheel and crankshaft.
- Install the flywheel onto the crankshaft taper so that the woodruff key fits in the key way in the hub of the flywheel.

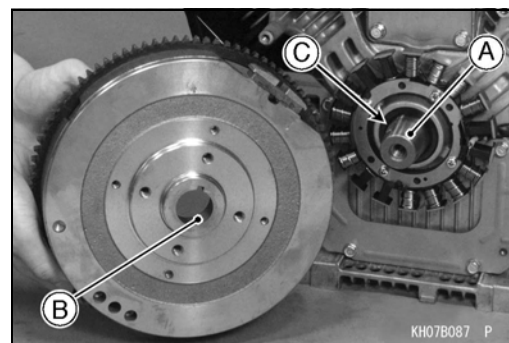


Charging

- Install the fan [A] so that two positioning bosses [B] fit around flywheel ignition magnet [C].
- Install the plate [D] so that the bosses [E] of the fan fit in the holes of the plate with bolts [F].

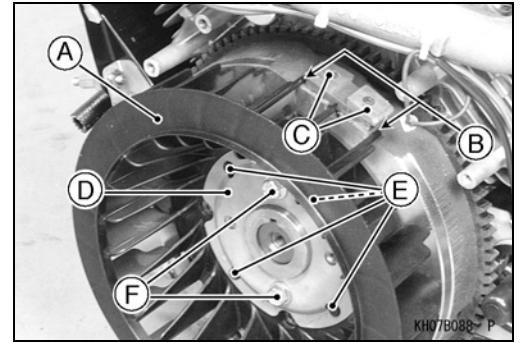


- Install the bracket [A] so that the notch [B] inserts into the slot [C] in the flywheel.

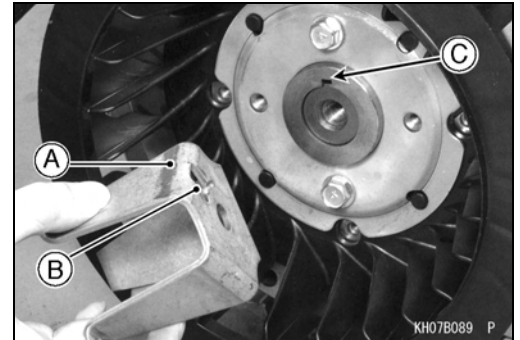


- Fit the conical washer [A] onto the flywheel bolt [B], and tighten the flywheel bolt.

CAUTION
Make sure the direction of conical washer [A] for flywheel bolt [B]. Direction is as illustration.

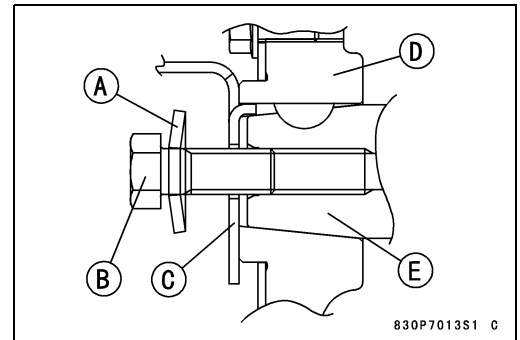


Torque - Flywheel Bolt: 56 N·m (5.7 kgf·m, 41 ft·lb)

- Bracket [C]
- Flywheel [D]
- Crankshaft [E]

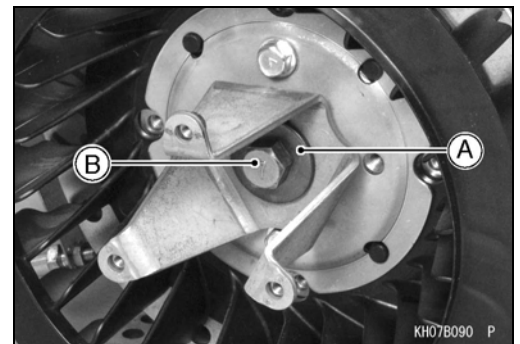

- Install the fan housing [A] and tighten the bolts [B] [C] [D].

Torque - Fan Housing Bolts (M8) [B] : 6.9 N·m (0.70 kgf·m, 61 in·lb)
Fan Housing Bolts (M6) [C] : 5.9 N·m (0.60 kgf·m, 52 in·lb)
Fuel Pump Bracket Bolts (M6) [D] : 5.9 N·m (0.60 kgf·m, 52 in·lb)

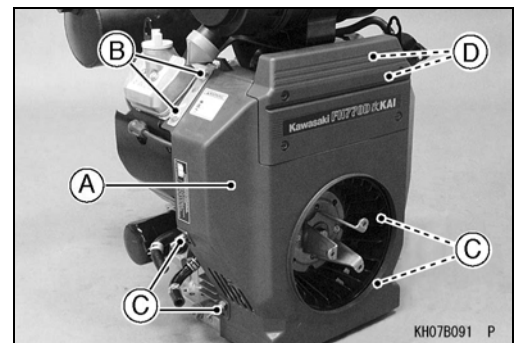


8-10 ELECTRICAL SYSTEM

Charging

- Install the screen [B] and spacer [C], and tighten the screen bolts [A].

Torque - Screen Bolts: 5.9 N·m (0.60 kgf·m, 52 in·lb)

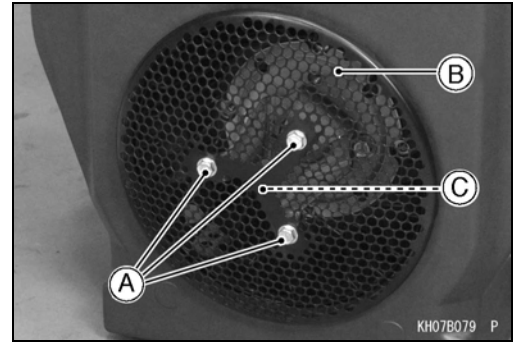

Charging System Operational Inspection

- Check battery condition.

NOTE

○ Always check battery condition before condemning other parts of the charging system. The battery must be fully charged in order to conduct accurate charging system tests.

- Warm up the engine to bring the components up to their normal operating temperatures.
 - Measure regulated output voltage at various engine speeds.
- Connect a voltmeter across the battery terminals.
- ★ The readings should show nearly battery voltage when the engine speed is low, and as the engine speed rises, the readings should also rise. But they must stay within the specified range.
 - ★ If the output voltage is much higher than the specification, the regulator is defective, or the regulator leads are loose or open.
 - ★ If the output voltage does not rise as the engine speed increase, the regulator is defective or the alternator output is insufficient for the loads.

Regulated Output Voltage

Battery Voltage ~ DC 15 V

Stator Coil Resistance


- Disconnect the connector [A].
 - Measure the stator coil resistance.
- Connect an ohmmeter between stator pins [B].

Stator Coil Resistance

Standard:

0.01 ~ 0.1 Ω

- ★ If the meter does not read as specified, replace the stator coil.
- ★ If the coil has normal resistance, but the voltage inspection showed the alternator to be defective; the flywheel magnets have probably weakened, and the flywheel must be replaced.
- Check for continuity between each stator pin and ground. There should be no continuity (infinite ohm).
- ★ If the stator coil fails any of these tests, replace the coil with a new one.

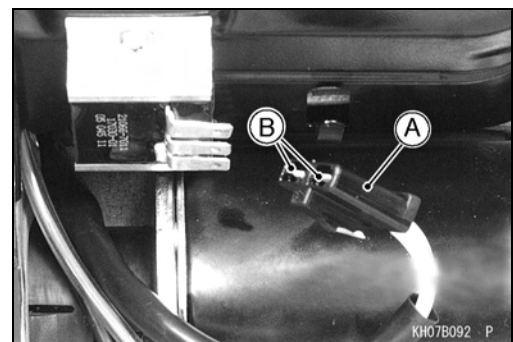


Charging

Unregulated Stator Output


- Disconnect the connector [A].
- Connect AC voltmeter to the stator pins [B].
- Start the engine. Run the engine at the 3 000 rpm speed.
- Voltage reading should be minimum AC 26 V/3 000 rpm.
- ★ If the AC voltage reading is less than the specification, replace the stator.

Unregulated Stator Output (MIN)
AC 26 V/3 000 rpm

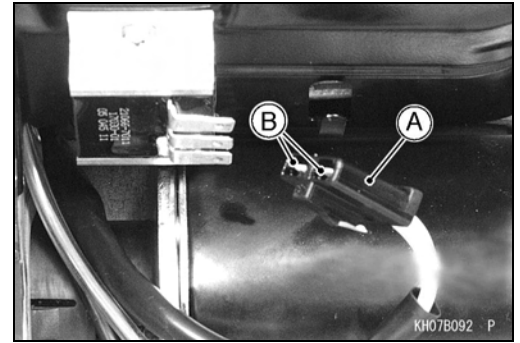

Regulator Removal

- Remove:
 - Stator Coil Lead Connector [A]
 - Regulator Screw [B]
 - Regulator [C]

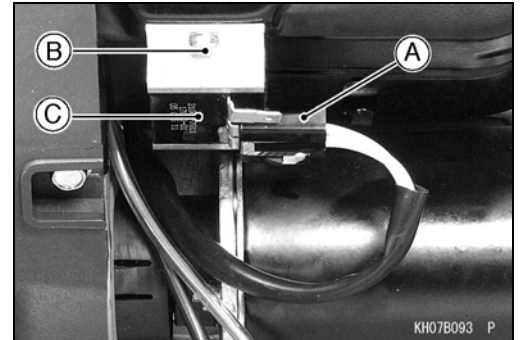

Regulator Installation


- Install the regulator and tighten the screws.
- Torque - Regulator Screw: 3.4 N·m (0.35 kgf·m, 30 in·lb)**

Regulator Resistance

- Set the KAWASAKI Hand Tester selector switch to the R × 100 Ω position.
- Connect the test leads to the points shown on the chart and read the resistance.

(without Charging Monitor Type ...3 Blades)

	+	A	B	C	D
-					
A	-	∞	∞	∞	
B	∞	-	0	500 Ω ~∞	
C	∞	0	-	500 Ω ~∞	
D	7.8 kΩ ~∞	800 Ω ~∞	800 Ω ~∞	-	

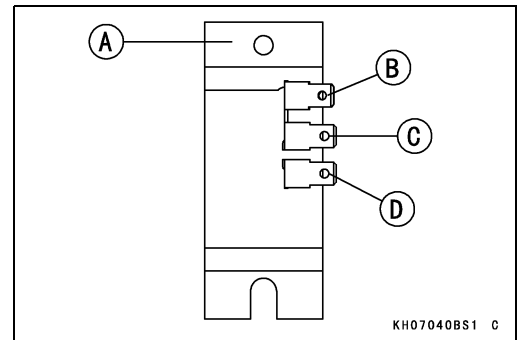

NOTE

○Resistance value may vary with individual meters.


8-12 ELECTRICAL SYSTEM

Ignition System

The ignition system is the voltage-interruption method which interrupts the primary current conducted by turning the flywheel and generates the high secondary voltage, and therefore this system is basically the same as the traditional system of mechanical contact parts.

As compared with the traditional mechanical parts and condenser, a transistor in the igniter serves as an interrupter of the current. This system is called TIC (Transistor Ignition Control).

Electrical Circuit

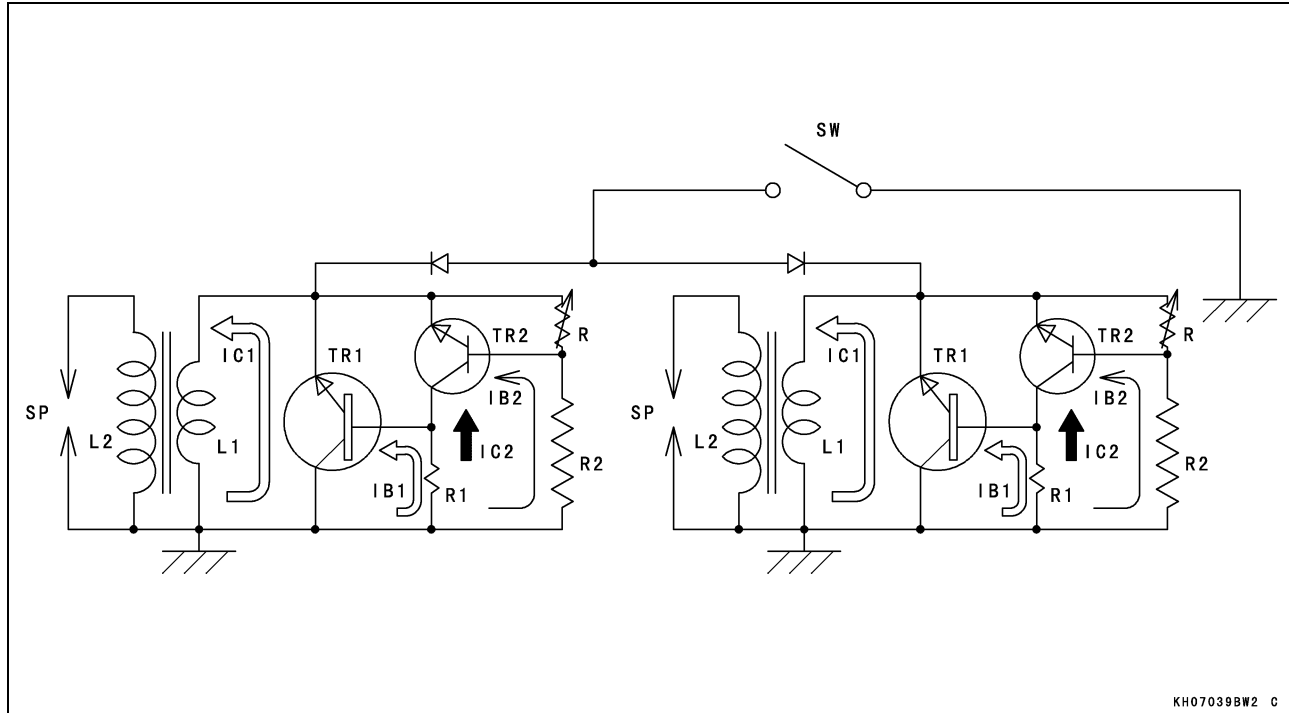

KH07039BW2 C

L1: Ignition Coil (Primary)

L2: Ignition Coil (Secondary)

R1: Resistance to regulate the base current of TR1

R2: Resistance to regulate the base current of TR2

SP: Spark Plug

SW: Stop Switch

TR1: Power Transistor

TR2: Drive Transistor

Ignition Theory of Operation

1. The revolution of the flywheel generates a voltage in the L1, causing a base current IB1 to flow from TR1. Then, current IC1 that is amplified by TR1 flows to form the primary circuit.
2. The flywheel revolves further and the voltage that is generated in the L1 increases. When the flywheel reaches the position of the ignition timing, the generated voltage overcomes the resistance R2, causing a base current IB2 to flow to transistor TR2. At that instant, the current changes into collector current IC2, which is amplified by transistor TR2.
3. In the meantime, because the internal resistance of TR2 is considerably lower than TR1, IB1 that was flowing through TR1 until then will turn into IC2, thus changing its direction to flow via TR2.
4. In this manner, base current IB1 of TR1 will not momentarily flow, thus causing large current IC1 that was flowing in the L1 until then to stop suddenly.
5. Due to the sudden change in the current in the primary circuit, a high voltage is generated in secondary side L2, causing spark plug to spark.


Handling and Maintenance Care

1. Do not bring the Igniter near fire.
2. Ignition timing is fixed and no necessary for adjusting.
3. In case of spark test, pull the recoil starter grip with all your strength to obtain a required speed of the flywheel for sparking.

Ignition System

Ignition Coil Removal

- Remove:
 - Fan Housing (see Flywheel, Stator Coil Removal)
 - Spark Plug Cap [A]
 - Stop Switch Lead Connector [B]
 - Bolts [C]
 - Ignition Coil [D]

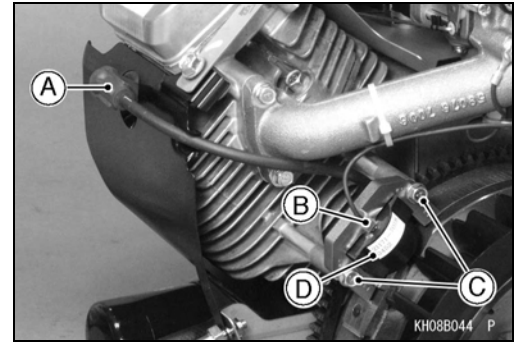

Ignition Coil Installation

- Install ignition coil on crankcase so that the stop switch lead connector [B] face the screen, and tighten bolt (1) first, then bolt (2). While tightening bolts, adjust the ignition coil air gap [A] between the three legs of ignition coil and the two pole-plates to the specified value.

Ignition Coil Air Gap



Standard: 0.2 ~ 0.4 mm (0.008 ~ 0.016 in.)

Torque - Ignition Coil Bolts: 6.9 N·m (0.70 kgf·m, 61 in·lb)

NOTE

○ Above procedure must be used to insure proper coil air gap is not too large.

Thickness Gauge [A]
Bolts [B]

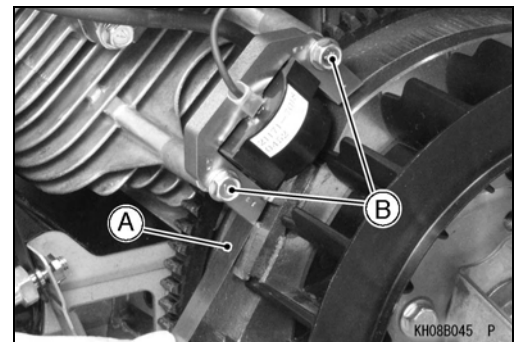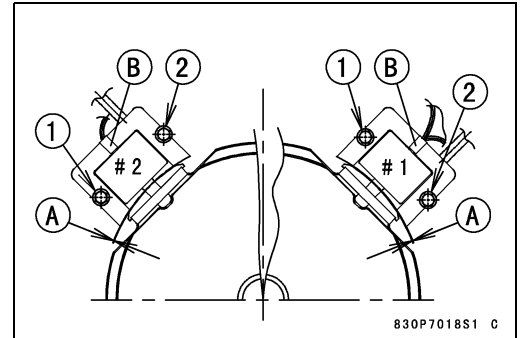

Ignition Coil Inspection


- Remove the ignition coils (see Ignition Coil Removal).
- Measure the winding resistance as follows:
 - Set the hand tester to the R × 1 Ω range to measure the resistance between the terminals “A” and “B”, and to the R × 1 kΩ range to measure between other two terminals.

Special Tool - Hand Tester: 57001-1394

○ Make the measurements shown in the table.

Ignition Coil Primary Winding Resistance

	+			
		A	B	C
-				
A		-	-	11 ~ 21 kΩ
B		14 ~ 24 Ω	-	19 ~ 29 kΩ
C		11 ~ 21 kΩ	-	-

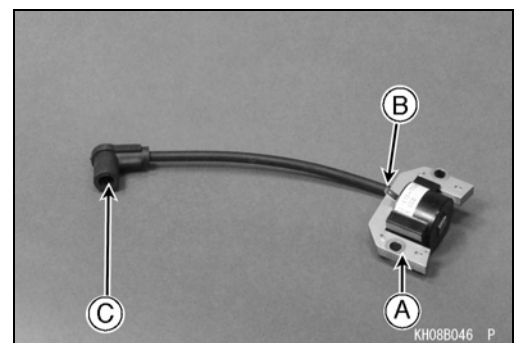

CAUTION

**Use only Tester 57001-1394 for this test. A tester other than the Kawasaki Hand Tester may show different readings.
If a megger or a meter with a large-capacity battery is used, the ignition coil will be damaged.**

★ If the tester does not read as specified, replace the coil.

8-14 ELECTRICAL SYSTEM

Ignition System


Spark Plug Cleaning and Gap Inspection

- Refer to the Spark Plug Cleaning and Gap Inspection in the Periodic Maintenance chapter.

Starter System

Starter Motor Removal

- Remove the mounting bolts [A] and pull the starter motor [B] from the engine.

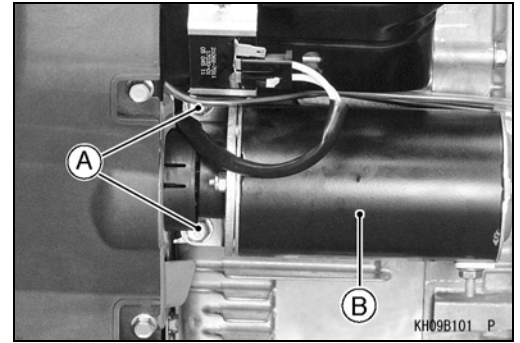


Starter Motor Installation

- Clean the starter motor and engine mounting flanges to ensure good electrical contact and tighten the mounting bolts.


Torque - Starter Motor Mounting Bolts: 15 N·m (1.5 kgf·m, 11 ft·lb)

Starter Motor Disassembly


- Remove:
 - Through Bolts and Nuts [A]
 - Brush Plate [B]
 - York [C]
 - Cap [D]

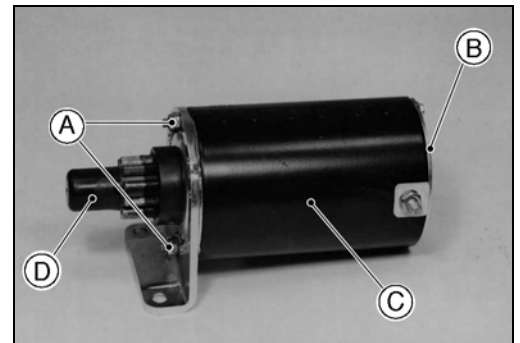

- While the collar [A] is pushing, remove the snap ring [B].

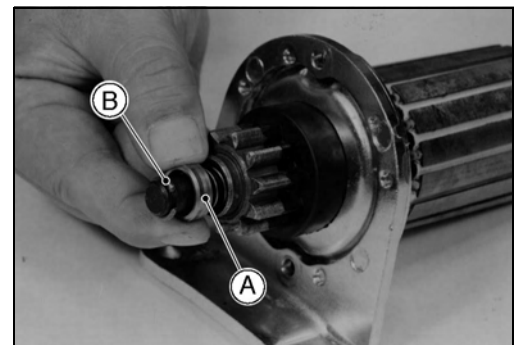

- Remove:
 - Spring [A]
 - Pinion Assembly [B]
 - Washer [C]
 - Bracket [D]
 - Armature [E]

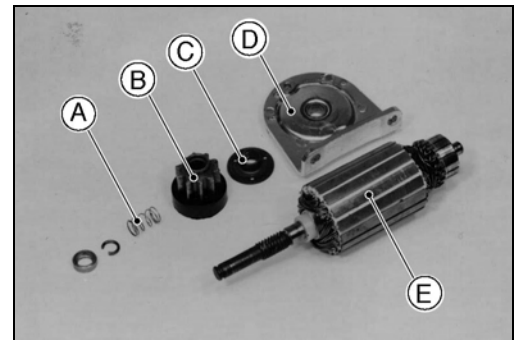


Starter System

- Measure the depth of the grooves between the commutator segments.
- ★ If the grooves are shallower than the specified limit, replace the armature with a new one.
- ★ If the grooves are only dirty, clean them carefully.

Commutator Groove Depth (Approx)

Standard: 2.0 mm (0.078 in.)
Service Limit: 0.9 mm (0.035 in.)


Bad [A]
 Segment [B]
 Good [C]
 0.9 mm (0.035 in.) limit [D]
 Mica [E]

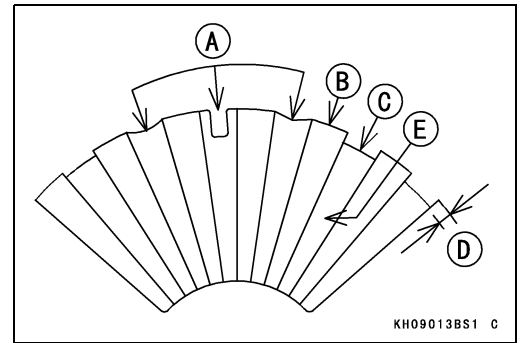

- Measure the commutator [B] outside diameter [A] at several points.
- ★ If the diameter is less than the service limit, replace the armature with a new one.

Commutator Outside Diameter


Standard: 31.7 mm (1.250 in.)
Service Limit: 31.1 mm (1.225 in.)

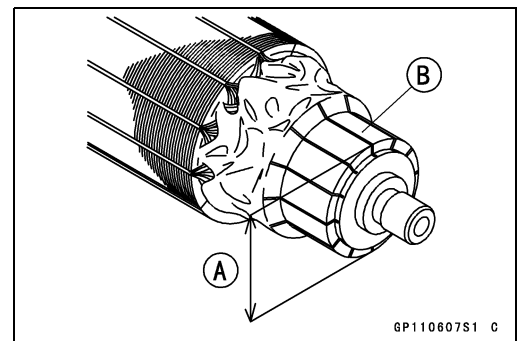

- Support the armature in an alignment jig at each end of the shaft as shown. Position a dial indicator perpendicular to the commutator.
- Rotate the armature slowly and read the commutator runout.
- ★ If runout is more than the service limit, turn down the commutator or replace the armature with a new one.

Commutator Runout

Service Limit: TIR 0.4 mm (0.016 in.)

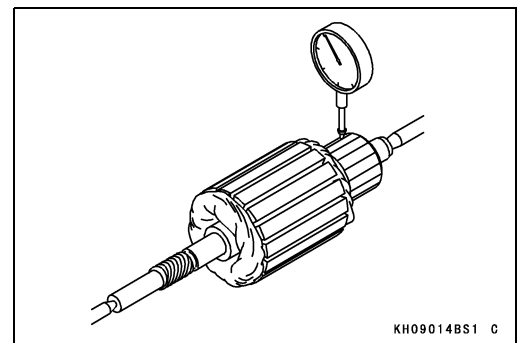

- Measure the armature winding resistance.
- Set the hand tester to the R × 1 Ω range and measure the resistance between each segment [A] and all the others.
- ★ If the resistance is too high or even infinite, the armature winding has an open circuit. Replace the starter motor.


Armature Winding Resistance

Close to 0 Ω

- Set the hand tester to the R × 1 kΩ range and measure the resistance between the commutator and the armature shaft [B].
- ★ If the resistance is less than infinite, the armature is shorted. Replace the starter motor.

Commutator to Shaft Resistance


(∞)

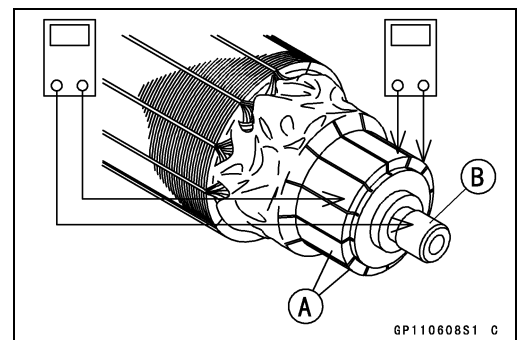

8-18 ELECTRICAL SYSTEM

Starter System

- Test the armature winding for shorts.
- Place the armature on a growler [A].
- Hold a thin metal strip (e.g., hack saw blade) on top of the armature.
- Turn on the growler and rotate the armature one complete turn.
- ★ If the metal strip vibrates, the windings are internally shorted to each other and the starter motor must be replaced.

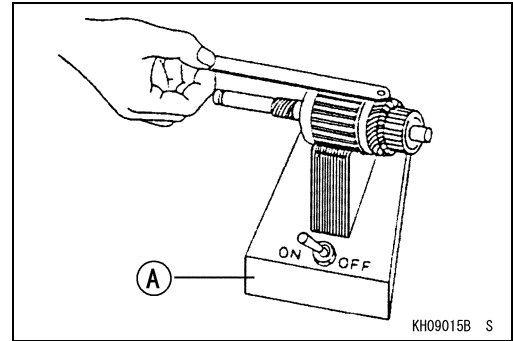


Yoke Assembly Inspection

- Set the hand tester to the $R \times 1 \text{ k}\Omega$ range and measure the resistance between the positive brush (es) [A] and brush plate [B].
- ★ If the resistance is less than infinite, the positive brush is shorted to ground. Replace the brush plate assembly.

Positive Brush to Ground Resistance


(∞)

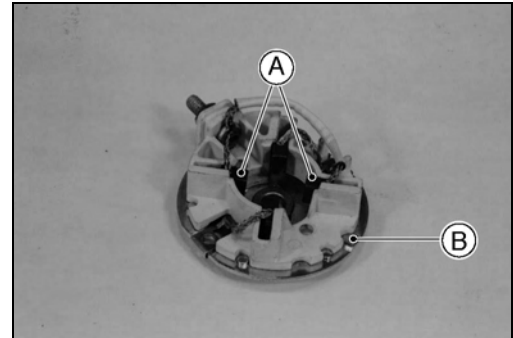

- Set the hand tester to the $R \times 1 \Omega$ range and measure the resistance between the negative brush (es) [A] and brush plate [B].
- ★ If the meter does not read close to 0Ω , the brush plate is faulty. Replace the brush plate assembly.


Negative Brush to Ground Resistance

Close to 0Ω

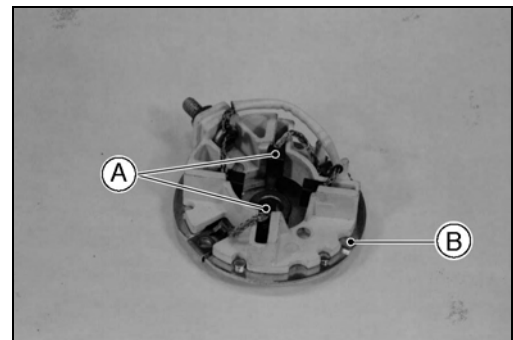

Pinion Clutch Inspection

- Turn the pinion gear by hand. The pinion gear should turn clockwise freely.
- ★ If the pinion clutch does not operate as it should, or if it makes noise, replace the pinion clutch.

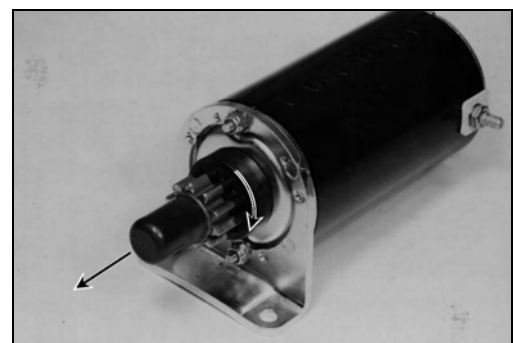

Troubleshooting

Table of Contents

Engine Troubleshooting Guide	9-2
Starter Motor Troubleshooting Guide	9-6


9-2 TROUBLESHOOTING

Engine Troubleshooting Guide

If the engine malfunctions, check if the way the engine is used is correct. If engine malfunctions even if engine is used correctly, systematically carry out troubleshooting starting with simple points.


This chart describes typical troubleshooting procedures.

Do not unnecessarily disassemble carburetor, magneto or engine unless it has been found to be the cause of malfunctioning.

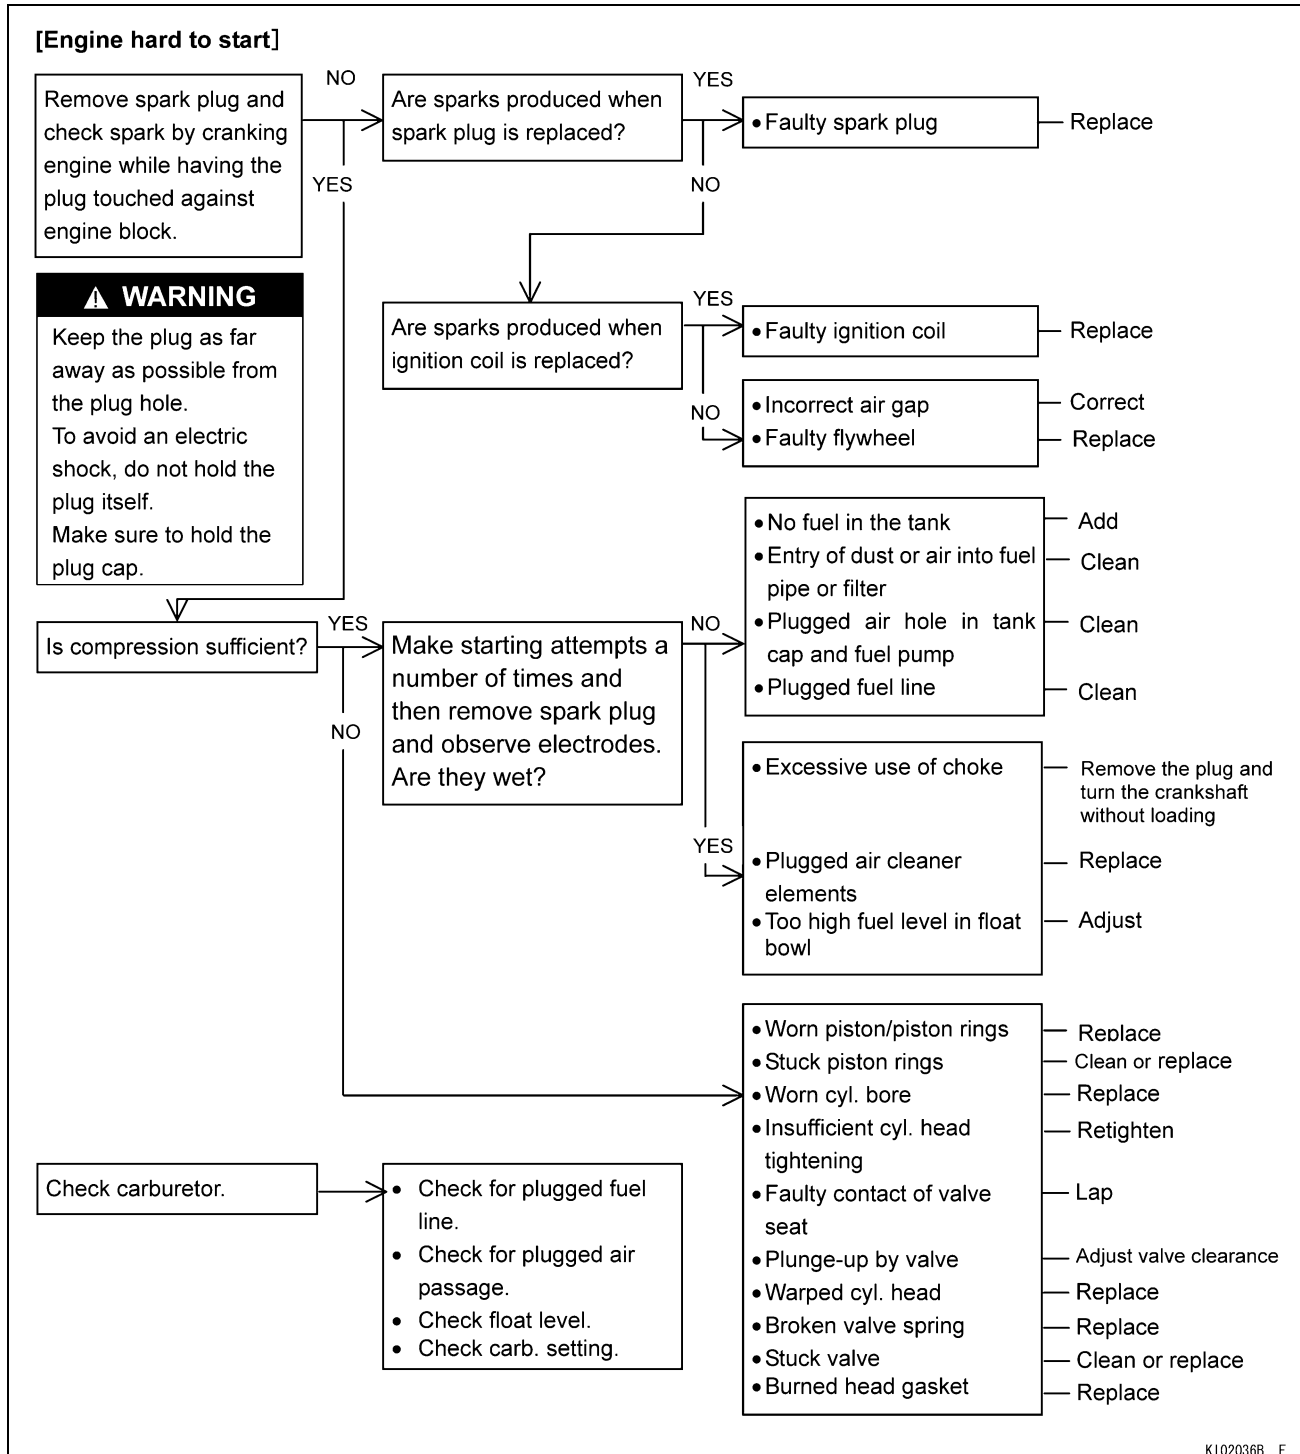


K102036B F

Engine Troubleshooting Guide

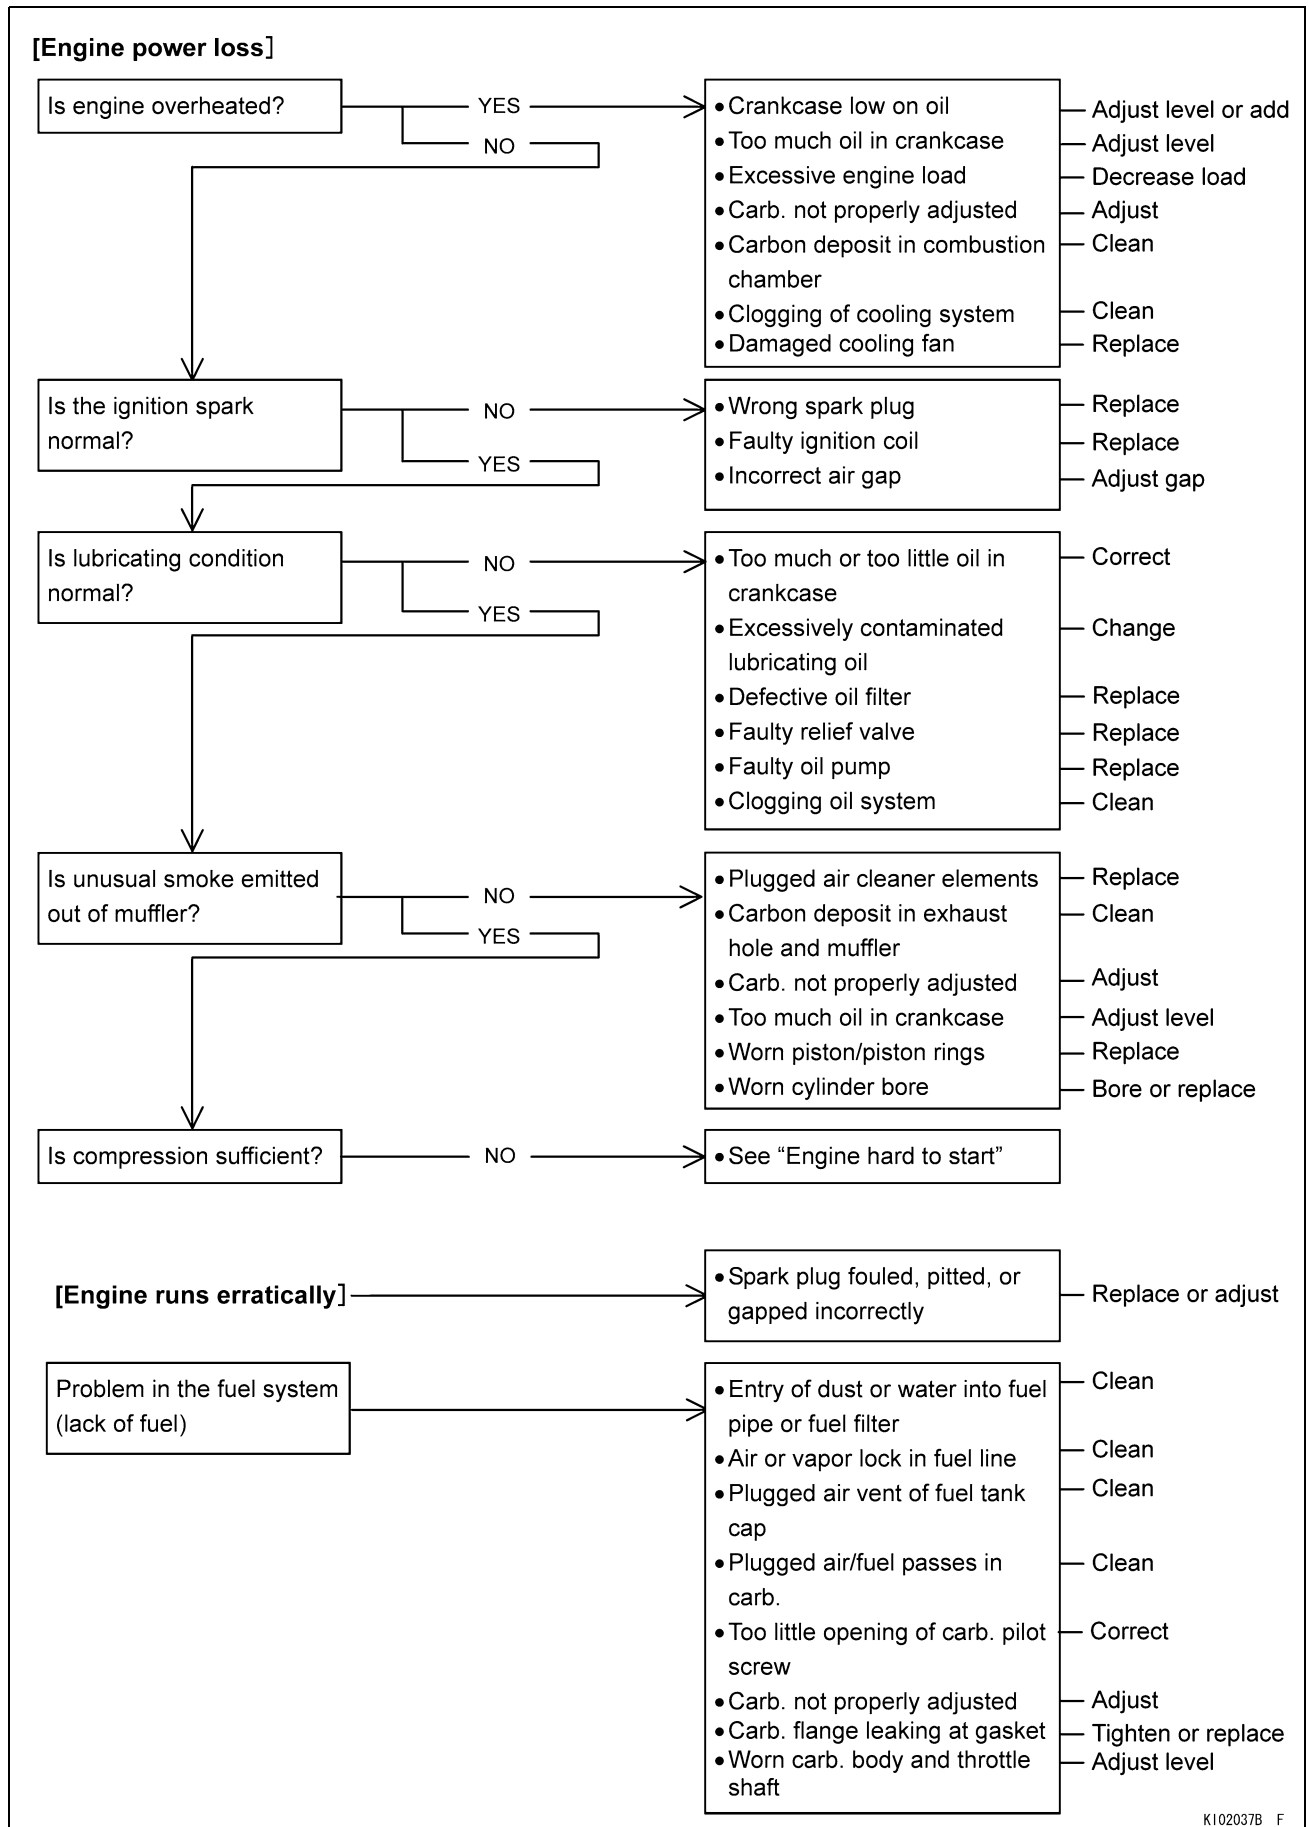


9-4 TROUBLESHOOTING

Engine Troubleshooting Guide

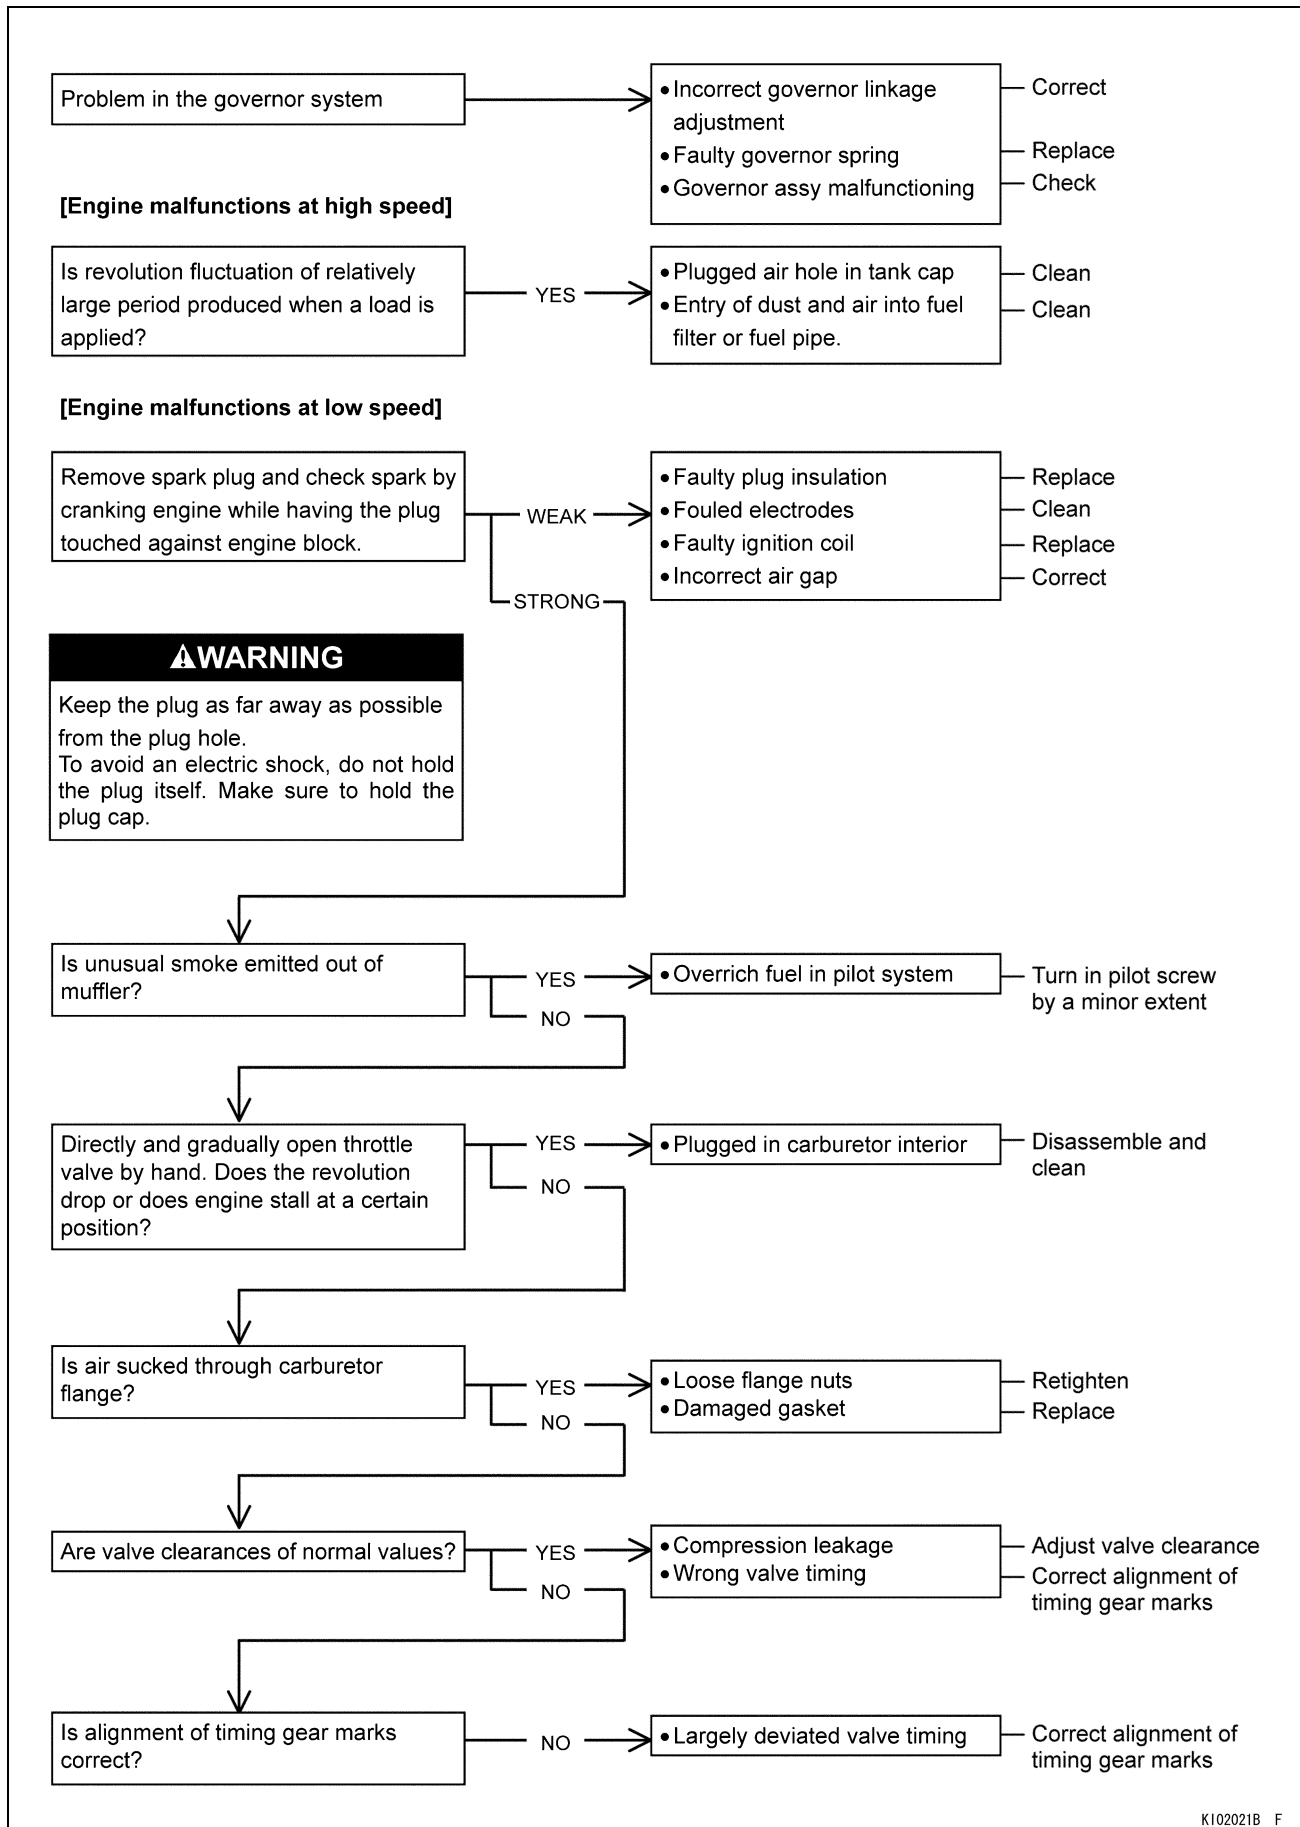

K102021B F

Engine Troubleshooting Guide

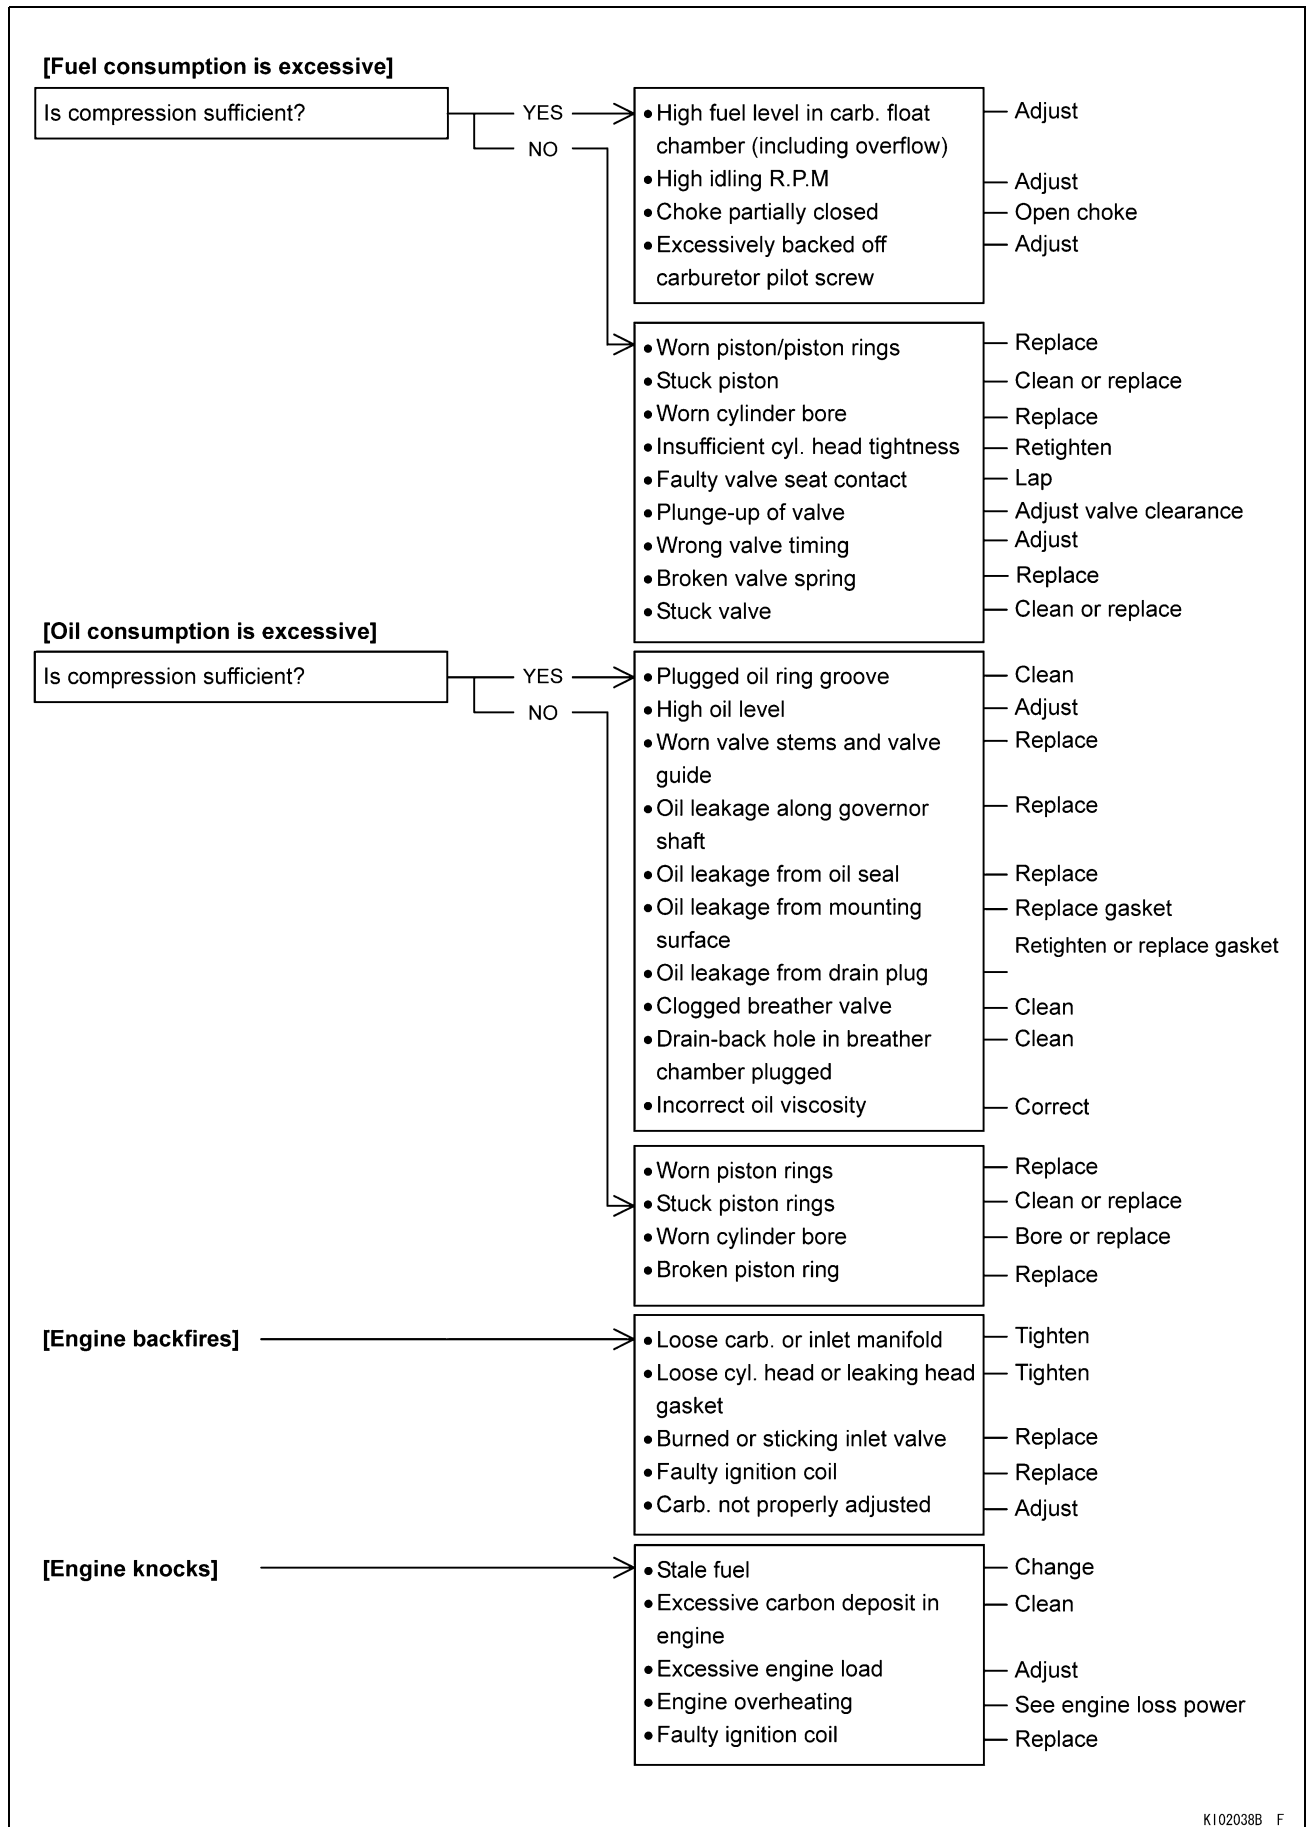

9-6 TROUBLESHOOTING

Starter Motor Troubleshooting Guide


1. Disconnect spark plug caps from the spark plugs.
2. Turn engine switch to "START" position and check condition.

⚠ WARNING

Engine may be cranked in this test. Do not touch any rotating parts of engine and equipment during test.

CAUTION

If starter does not stop by engine switch "OFF", disconnect negative (-) lead from battery as soon as possible.

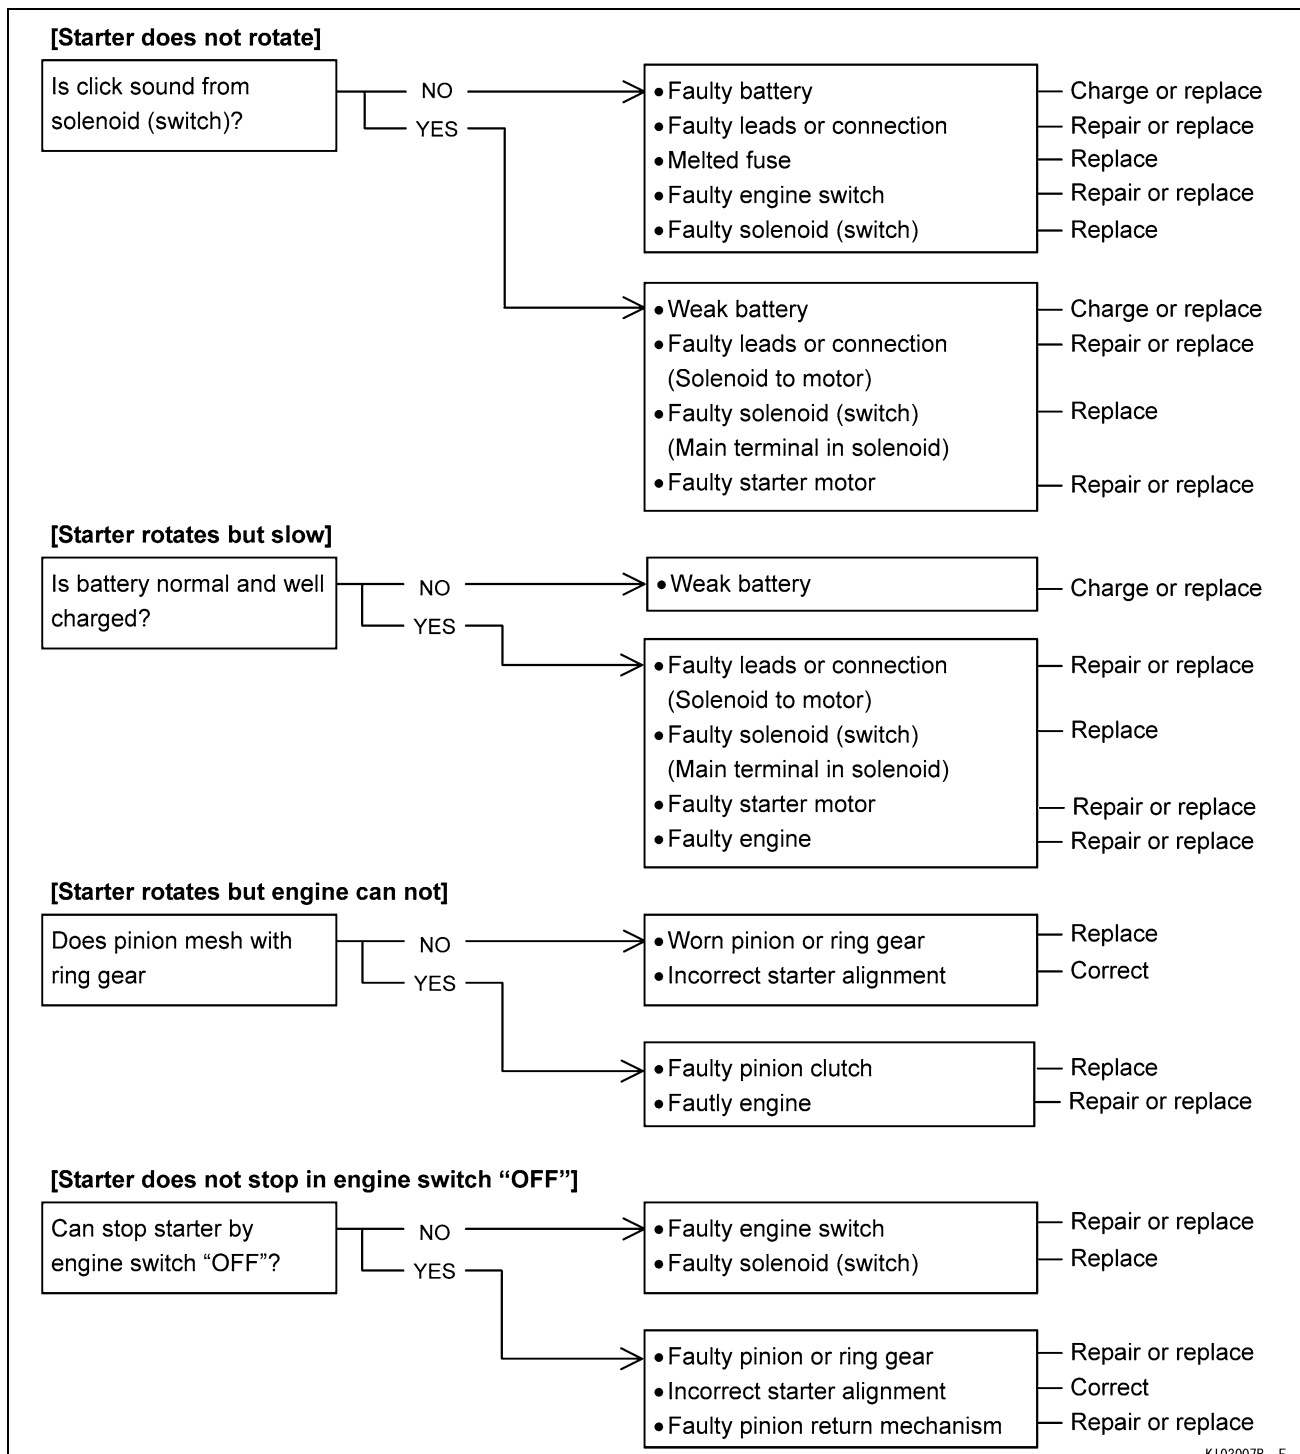

For Kawasaki Discount Parts Call 606-678-9623 or 606-561-4983



KAWASAKI HEAVY INDUSTRIES, LTD.
Consumer Products & Machinery Company

Part No.99924-2068-01

Printed in Japan

www.mymowerparts.com